

Corrections

Please correct the supplied Operating Instructions as follows:

To unlock the DVD-VCR

(page 60 for SLV-D550P/D350P, page 47 for SLV-D251P)

Incorrect

To stop timer recording while the DVD-VCR is locked, press ■. The recording stops and the DVD-VCR is unlocked.

Note

- The DVD-VCR will be unlocked when:
 - You stop timer recording by pressing ■.

Correct

To stop timer recording while the DVD-VCR is locked, press ■ on the remote. The recording stops and the DVD-VCR is unlocked.

Note

- The DVD-VCR will be unlocked when:
 - You stop timer recording by pressing ■ on the remote.