





iJoy-2400

## REPLACING THE MAIN POWER PANEL

To ensure that Human Touch® products are repaired in a manner that is fully consistent with the practices used during the manufacturing process, Human Touch requires that all product repairs are performed using only factory-new parts and in accordance with these product repair instructions.

SERVICE LEVEL: 2

**Tools Required:** Phillips-head screwdriver, utility blade, flat-head screwdriver.

SAVE ALL REMOVED PARTS FOR USE DURING REASSEMBLY

## REMOVING THE MAIN POWER PANEL


- 1. Power off the chair then unplug it.
- 2. Using a utility blade, peel the label off the main power panel, located on the left-hand side of the chair (Fig.1). Note: Be sure to record the serial number that is printed on the power panel label before discarding it.

  The serial number is required for warranty service.
- 3. Using a Phillips-head screwdriver, remove the two screws that secure the power panel to the chair (Fig.1).
- 4. Using a flat-head screwdriver, pry the panel out of the chair enough to expose the connectors, then disconnect the connectors (Fig.2).
- 5. Remove the power panel from the chair (Fig.3).



Power panel



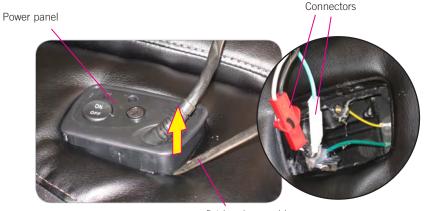

flat-head screwdriver

(Fig.2)



(Fig.3)

## INSTALLING THE NEW POWER PANEL

- 1. Connect the new power panel connectors to the corresponding connectors on the side of the chair (Fig.4).
- 2. Insert the power panel into the opening in the side of the chair, then press firmly until the power panel face plate is flush with the chair upholstery (Fig.5).
- 3. Using a Phillips-head screwdriver, replace the two screws to secure the power panel to the chair (Fig.6).
- 4. Carefully apply the new power panel label to the power panel, smoothing it with your fingers.

