

# NETGEAR®

---

## NETGEAR Roku Player (NTV250) Installation Guide



## **Technical Support**

Thank you for selecting NETGEAR products.

Locate the serial number on the label of your product and use it to register your product at <http://www.NETGEAR.com/register>. Registration is required before you can use the telephone support service. Registration at the NETGEAR website is strongly recommended.

Go to <http://support.netgear.com> for product updates and Web support.

For complete DoC please visit the NETGEAR EU Declarations of Conformity website at: [http://kb.netgear.com/app/answers/detail/a\\_id/11621/](http://kb.netgear.com/app/answers/detail/a_id/11621/)

## **Trademarks**

NETGEAR, the NETGEAR logo, ProSafe, Smart Wizard, and Auto Uplink are trademarks or registered trademarks of NETGEAR, Inc. Microsoft, Windows, Windows NT, and Vista are registered trademarks of Microsoft Corporation. Other brand and product names are registered trademarks or trademarks of their respective holders.

## **Statement of Conditions**

In the interest of improving internal design, operational function, and/or reliability, NETGEAR reserves the right to make changes to the products described in this document without notice. NETGEAR does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

# Package Contents



NETGEAR Roku Player




2 AAA batteries



Remote control




Power adapter

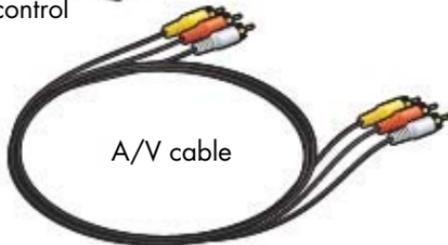

A/V cable

# Your Player at a Glance

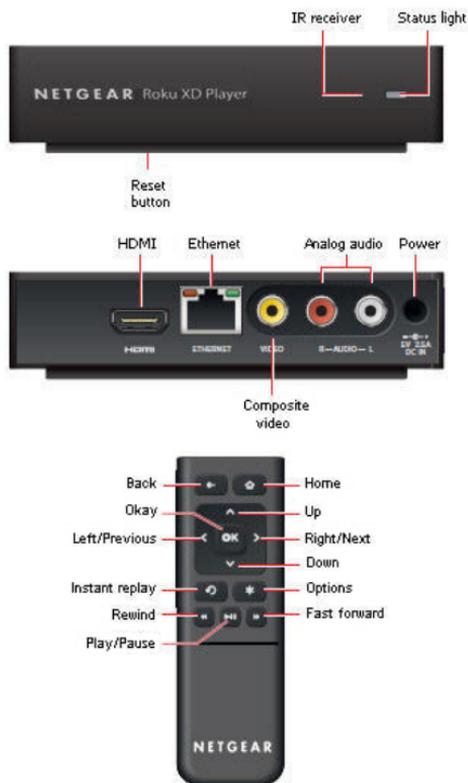

## 1: Connect to the TV

Choose the setup that matches the ports on your TV. For best picture quality, use an HDMI connection (if available). Make sure your TV is on and set to display the correct video input.

### HDMI (preferred)

Connect an HDMI cable (sold separately) to the **HDMI** port on your player and to the **HDMI IN** port on your TV.



**NOTE:** HDMI supports 5.1 surround sound (if available). You don't need a separate audio cable.

## AV

Connect the yellow connectors on the A/V cable (included) to the **VIDEO** port on your player and the **VIDEO IN** (Composite) port on your TV. Connect the red and white connectors to the **R-AUDIO-L** ports on your player and the **L/R AUDIO IN** ports on your TV.



## 2: Power Up

### Insert the batteries in the remote

Slide the bottom half of the remote downward to open the remote. Insert two AAA batteries (included) in your remote.



Connect the power adapter to your player.



### 3: Get Your Home Network Ready

To use your player, you must connect it to your home network with either a wireless or a wired connection. We recommend using a router or wireless access point for your network, in addition to your broadband modem. After you get your network ready, Guided Setup helps you connect your player to your network.

**IMPORTANT:** Don't place anything on top of your Roku player. Placing objects on top of your player may interfere with the wireless signal or cause the player to overheat.

**If you're using a Wired connection,** use an Ethernet cable (sold separately) to connect your player to your router.



**If you're using a Wireless connection**, place your player within range of your wireless network and avoid enclosing your player in a cabinet. If you use a password, have it ready.



Router

**Tip:** If you don't receive a strong signal during Guided Setup, try rotating your player or moving it closer to your router.

## 4: Complete Guided Setup

### On your TV:

- Use the remote to follow the onscreen instructions. Your player may download software updates or restart during setup.
- When Guided Setup prompts you to enter your Roku linking code, use your computer to go to **roku.com/link**. Enter the code that appears on your TV screen and then create a Roku account, if you do not already have one.
- Once you complete setup, select a channel icon (such as Netflix or Amazon Video On Demand) to view, or visit the Roku Channel Store to add more channels (such as the Pandora Internet radio channel).
- Some Roku partners may require you to activate your Roku player to access their content. Just follow the onscreen instructions when you launch a channel for the first time.



**Tip:** Point your remote directly at your player.

## 5: Basic Remote Functions

To do this	Press this
Move left or right	 or 
Move up or down	 or 
Scroll left one page at a time	
Scroll right one page at a time	
Select an option from a menu	
Return to previous screen	 or  (from top of screen)
Return to Roku home screen	
Start or pause playback	
Exit playback	 or 
Fast forward	
Rewind	
No function	
Replay last 7 seconds of video	

**NOTE:** The  button on the remote control is reserved for future use.

# Technical Support

Thank you for selecting NETGEAR products.

After installing your device, locate the serial number on the label of your product and use it to register your product at <http://www.NETGEAR.com/register>. Registration is required before you can use our telephone support service. Registration via our website is strongly recommended.

Go to <http://kbserver.netgear.com> for product updates and Web support.

GPL may be included in this product; to view the GPL license agreement go to <ftp://downloads.netgear.com/files/GPLnotice.pdf>.

For complete DoC, please visit the NETGEAR EU Declarations of Conformity web site at: [http://kb.netgear.com/app/answers/detail/a\\_id/11621](http://kb.netgear.com/app/answers/detail/a_id/11621)



**NETGEAR**, Inc.  
350 East Plumeria Drive  
San Jose, CA 95134 USA



201-12874-01

**August 2010**