



## **User Guide** (Ver. 1.3)

Model: DVR4HD

# **4 Channel HDcctv Digital Video Recorder**




### **About This User Guide**

Prior to installation, carefully read the user guide.

Be sure to keep it handy for future reference.

# Safety Precautions

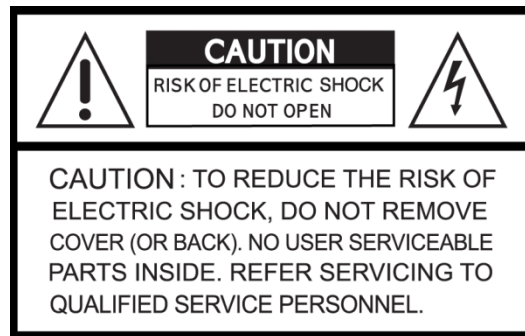

## Explanation of Graphical Symbols



This symbol indicates the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



This symbol indicates the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

### **WARNING**

To reduce a risk of fire or electric shock, do not expose this product to rain or moisture.

### **CAUTION**

Changes or modifications not expressly approved by the manufacturer may void the user’s authority to operate this equipment.

### **CAUTION**

Risk of explosion if battery is replaced by an incorrect type.

Replace only with the same or equivalent type recommended by the manufacturer.

Discard used batteries according to the manufacturer’s instructions.

## These Precautions Must Be Followed For Safety Reasons.



### **Warning**

- Do not use if the unit emits smoke, strange sounds are heard, or odor is emitted.
- Make sure the power cable is not damaged.
- Make sure there is no dust accumulation on the power plug or the outlet.
- Disassembly prohibited.
- Do not place any foreign objects inside the unit.
- Do not place a container holding liquids on the unit.
- Do not allow the unit to get wet.
- Do not use during thunder/thunder storms.
- Do not place on uneven surface.
- Do not expose to shock or vibration.
- Do not use this unit in areas where it is exposed to the possibility of explosion.



### **Caution**

- Do not pull on the power cable when removing the power plug from the outlet.
- Do not touch the power plug with wet hands.
- Do not sit on.
- Make sure the cables are connected properly.
- Do not place heavy objects on connected units.
- Never move this unit while the power is turned on.
- Remove the power plug from the outlet when the unit is going to remain unused for long periods of time.
- Do not block the cooling fans or air ducts.
- Do not expose to extreme temperatures or humidity changes.
- The Socket Outlet shall be installed near the equipment and shall be easily accessible

## Warning

Installation and servicing should be performed only by qualified and experienced personnel.









Turn off the power of the DVR when connecting cameras, audio or sensor cables.

The manufacturer is not responsible for any damage caused by improper use of the product or failure to follow instructions for the product.

The manufacturer is not responsible for any problems caused by or resulting from the user physically opening the DVR for examination or attempting to fix the unit. The manufacturer may not be held liable for any issues with the unit if the warranty seal is removed.

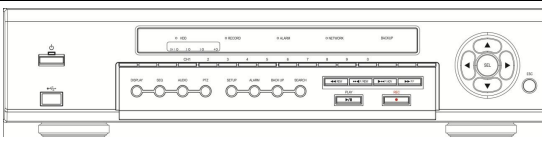
## Product Components

 The package contains the main unit and its components as specified below. When you purchase the unit, Please check to ensure the components specified below are included.

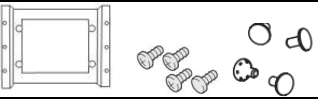DVR Set	
Client Software CD	
Remote Control and Battery (Option)	
Mouse	
User Guide	
HDD Data Cable	
HDD Mounting Brackets & Screws	
HDD Fixing Screws	

Items	Quantity
HDD Data Cable	4 EA
HDD Mounting Bracket	4 EA
HDD Mounting Bracket Screw	4 EA
HDD/DVD±RW Fixing Screw	16 EA

## Basic Function of the MOUSE

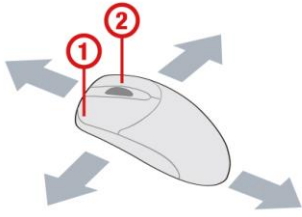


① : Left button: SELECT function

② : Right button: Go to Sub Menu

① : Double click: Change Full Screen or Split Screen

## Mounting the Hard Disk


1. Unfasten the cover of the unit.

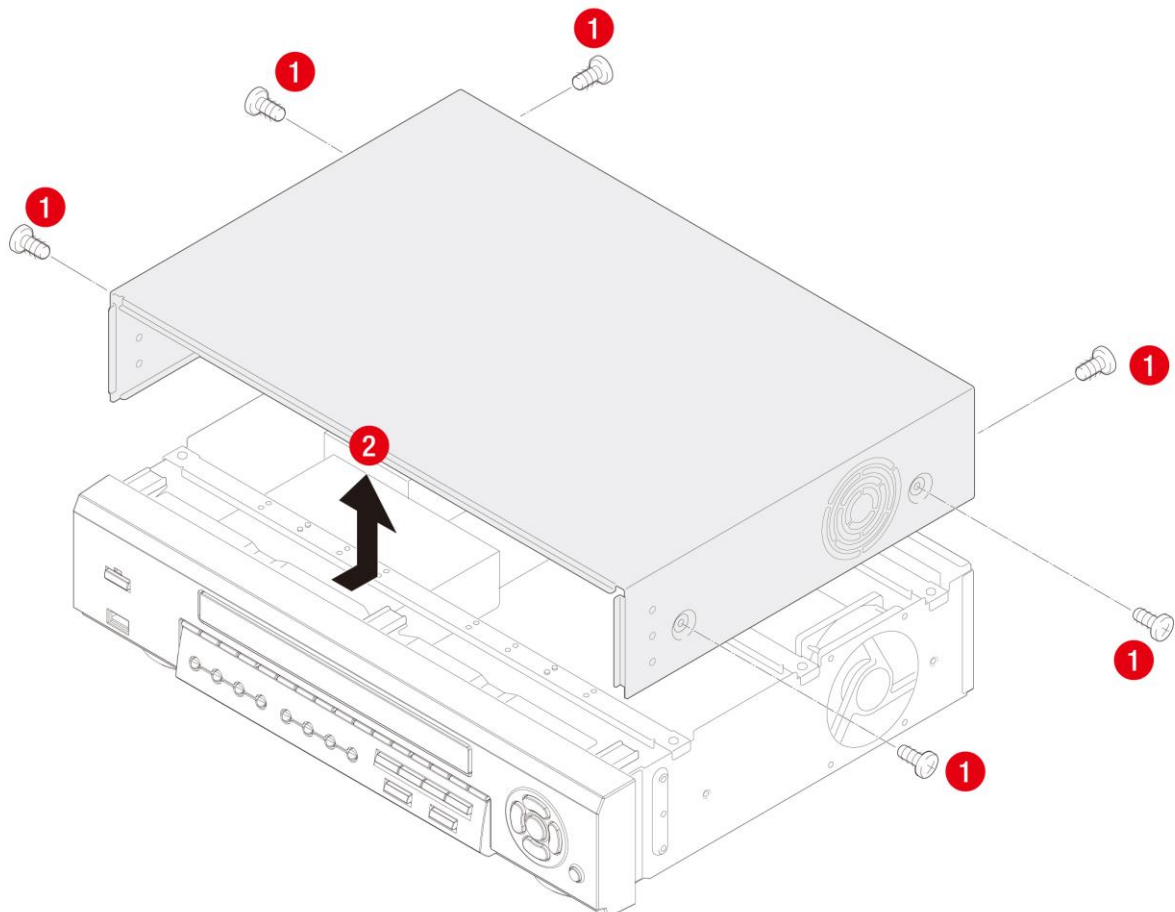



2. Fix the supplied HDD mounting bracket to the hard disk using the supplied mounting bracket screws.



3. Insert the HDD bracket to the hole and fix the screw.

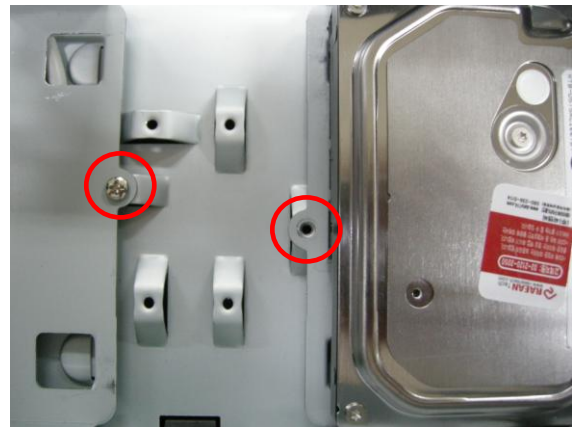

4. Connect the supplied SATA cable and power cable to the hard disk.

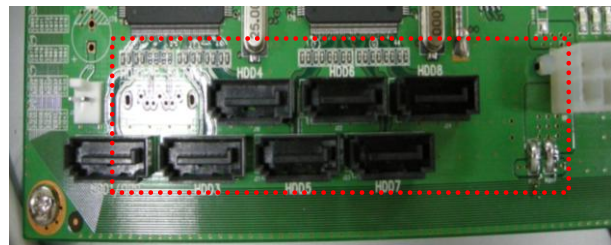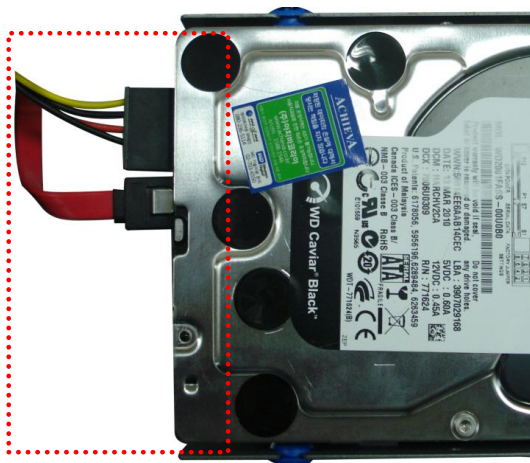

**NOTE)** HDD should be connected in the following order; HDD1/ODD, HDD3, HDD4, HDD5, HDD6, HDD7, HDD8. The DVR may malfunction if not connected in the following order.

## Specification

ITEM			Specification
Video	Input	Channel Input Level	4 Channel HDcctv 720p
		Video Loss Check	YES
	Output	Main Monitor Output	HDMI
		Sub Monitor Output	VGA
		Spot	1 Channel Spot
Audio	Input		4 RCA
	Output		1 RCA
	Audio Codec		G.726 (ADPCM)
Alarm	Sensor Input		4CH, NC/NO Selectable
	Alarm Out		1CH out by Sensor, Motion and Video Loss
Serial	PTZ		RS-485
	Controller		RS-485
Network	Ethernet		10/100/1000 Base TX Ethernet (RJ45 1 EA)
Operation	QUADPLEX		Live or Playback / Record / Backup / Network
Live	Digital Zoom		Selected Area Maximize
	Channel Sequence		3 ~ 60 seconds Auto
Recording	Compression		H.264
	Resolution		1280x720 / 640x360 selectable per channel
	Recoding Quality Grade		4 Levels
	Recording Mode		Continuous, Schedule, Motion, Sensor, Manual
	Motion Detection		Setup by Grid
	Pre Recording		Min. 15 seconds and Max. 20 minutes
	Post Recording		10 ~ 30 seconds
Playback	Digital Zoom		Zoom-in of specific area
	Speed	FF	x1/4, x1/2, x2, x4, x16 and x32
		FR	x2, x4, x16 and x32
	Search Mode		Timeline, Event, Archive, Log, Specific Time
Backup	File Format		JPEG / Proprietary Format
	Media		USB / External HDD / Network
	Built-in Viewer		Yes
Network	Dual Streaming for Live		H.264 CIF 120fps
	Playback		H.264 HD 30fps
	Streaming		RTP/RTSP/RTCP
	Protocols		HTTP, DDNS, NTP, SMTP
Storage	HDD	Interface	SATA, e-SATA
		Max. Capacity of HDD	2TB
		Max. Internal HDDs	4EA

	External Storage	1 e-SATA
	SMART	HDD Error Check and Reporting
User Interface	Menu Display	Graphic User Interface
	Input Method	Mouse, Remote Controller (Option) and Keypad
Network Access	PC Client	Live, Search / Playback, Backup, PTZF Camera Control
	Web Viewer	Live, Search / Playback, Backup, PTZF Camera Control
Features	DST (Daylight Saving Time)	Yes
	Internal Beep	By Alarm, Motion, Video Loss, HDD Error
	Multi Language	Yes
	Software Upgrade	By USB, Network Remote Upgrade (TBD)
	NTP (Network Time Protocol)	Yes
	Watermarking	Yes (TBD)
	3G Mobile Phone Viewer	iPhone, Android
	Remote Setup	Yes
General	Operation Condition	0~40C, Humidity 20~80%
	Power	AC 100~127V/200~240V, 5~60Hz, 280W
	Net Weight (Gross Weight)	6KGS (9.5KGS) / 13.2LBS (20.9LBS)
	Unit Dimension (W x D x H)	417mm x 432mm x 99mm / 16.4" x 17" x 3.9"

Specifications are subject to change without notice



# Table of Contents


1.	Name and Function .....	11
	1-1. Front Panel.....	11
2.	Connection .....	13
3.	Setting Up the DVR .....	14
	3-1. Setup – Main Screen .....	14
	3-2. Setup – Display Mode .....	17
	3-3. Setup – Recording Mode .....	17
	3-3-1. Recording Schedules .....	19
	3-4. Setup – Device Mode .....	20
	3-4-1. Alarm-Out.....	21
	3-4-2 PTZ Setup .....	21
	3-4-3. Motion Zone Setup .....	22
	3-5. Setup – Storage Mode.....	23
	3-6. Setup – System Mode .....	25
	3-7. Setup – Security Mode .....	27
	3-8. Setup – Network Mode .....	28
	3-8-1. Ports.....	29
	3-8-2. Network Types .....	29
	3-8-2-1.STATIC.....	29
	3-8-2-2. DHCP.....	30
	3-8-2-3. DDNS.....	30
	3-9. Setup - CONFIG Mode .....	31
	3-10. Setup –QUICK SETUP Mode .....	32
4.	Saving Setup .....	32
5.	Live, Search, and Playback .....	33
	5-1. Live Viewing Screen .....	33
	5-2. Search Screen.....	34
	5-2-1. Time-Line Search .....	35
	5-2-2. Event Search.....	36
	5-2-3. Go To First Time .....	37
	5-2-4. Go To Last Time .....	37
	5-2-5. Go To Specific Time.....	37
	5-2-6. Log Search.....	37
	5-2-7. Archive Search .....	37
	5-3. Play mode .....	38
6.	PTZ Control .....	39
7.	Back Up .....	41
	7-1. Still Image Backup onto USB Flash Drive .....	41
	7-2. Video Backup onto USB Flash Drive .....	41

7-3. Transferring Still Images or Video from the ARCHIVE List .....	42
7-4. Playback of Backup Video .....	42
8. Upgrading Firmware .....	44
9. Network Access Using the Single-Site Network Viewer.....	45
9-1. PC Requirements .....	45
9-2. Installing the Network Software .....	45
9-3. Live Monitoring Mode and Functions. ....	46
9-4. Bi-Directional Audio .....	49
9-5. Remote Search Mode and Functions .....	49
9-6. PC System Configuration .....	52
10. Network Access Using the Multi-Sites Network Viewer .....	55
10-1. Installing the Network Software .....	55
10-2. Live Window .....	56
10-2-1. Main user interface.....	56
10-2-2. Control buttons.....	56
10-3. Search and Playback Window .....	58
10-3-1. Main user interface.....	58
10-3-2. Main control panel .....	59
10-4. Setup.....	61
10-4-1. General .....	62
10-4-2. Event.....	63
10-4-3. Record .....	64
10-4-4. OSD .....	65
10-4-5. About.....	65
10-5. Remote Setup .....	66
10-5-1. Setting the Display .....	67
10-5-2. Record .....	68
10-5-3. Device .....	69
10-5-4. Storage.....	72
10-5-5. System.....	73
10-5-6. Security .....	77
10-5-7. Network.....	78
10-5-8. Network – Dual Stream .....	79
10-6. Operation .....	80
10-6-1. Addition, Delete, and modify of DVR sites .....	80
10-6-2. Connect and Disconnect .....	82
10-6-3. Still-image capture during Live .....	84
10-6-4. Recording video on local PC during Live .....	85
10-6-5. Local Playback and Remote Playback.....	86
10-6-6. AVI Backup during playback .....	89
11. Network Access Using the 3G App Viewer.....	91

# 1. Name and Function

## 1-1. Front Panel

The following information will help you to operate the front panel controls.

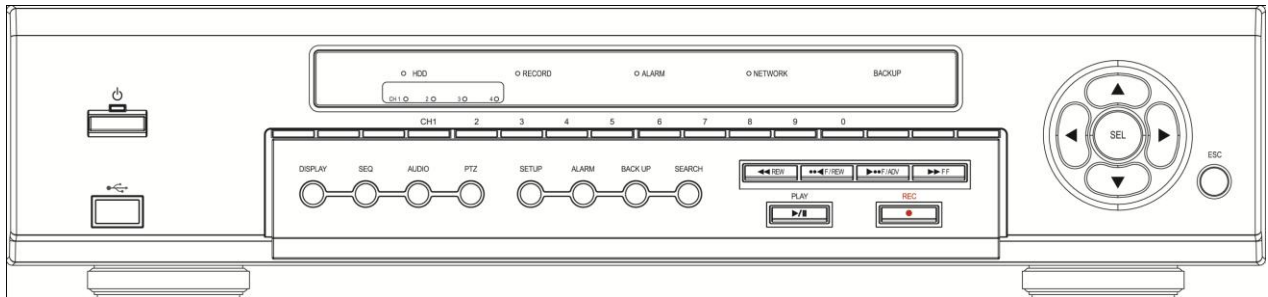










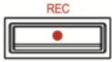
**Figure 1.1.1. Front panel**

**Table2.1.1. Indication lamps**

Name	Description
<b>POWER</b>	LED light is on when power is applied to the system. Green – Power On, Orange – Power Off
<b>HDD</b>	LED light is on when the system is recording video data.
<b>ALARM</b>	LED light is on when alarm sensor(s) is/are triggered or motion is detected.
<b>NETWORK</b>	LED light is on when client is connected to the system through the network.
<b>CH1, 2, 3, 4</b>	LED light is on when the channel is recorded.

**Table 2.1.2. Front panel buttons**

Name	Description
<b>DISPLAY</b>	Press to toggle the screen mode. (Full or Quad)
<b>SEQ</b>	Press to start auto sequencing of the screen in full screen mode. (Toggle)
<b>AUDIO</b>	Press to set the audio output mode. (Mute, 1CH to 4CH)
<b>PTZ</b>	Press to control PTZ operation
<b>SETUP</b>	Press to launch SETUP menu.
<b>ALARM</b>	Press to set the alarm output mode. (On or Off)
<b>BACKUP</b>	Press to start operations involving archiving in live or playback mode.
<b>SEARCH</b>	Press to go to the search menu. Event search /Time line search /Log /Archive search
<b>ESC</b>	Press for temporal storage of the changed value or to return to previous menu screen.
	Press to move up the menu items in setup mode and to select camera 1 in live mode. It is also used as the number 1 when entering password.

	Press to move right in the menu or to change the values in setup mode and to select. camera 2 in live mode. It is also used as the number 2 when entering password.
	Press to move down the menu items in setup mode and to select camera 3 in live mode. It is also used as the number 3 when entering password.
	Press to move left in the menu or to change the values in setup mode and to select camera 4 in live mode. It is also used as the number 4 when entering password.
	Press to select full screen or quad view in live display mode. It is also used to select desired menu item or to store the setup value in the menu.
<b>PLAY/PAUSE</b>	Press to play or to pause the footage in playback mode
	Press to rewind the footage at 1x, 2x, 4x, 8x, 16x and 32x speed in playback mode.
	Jump/Step backward. – In playback mode, the playback position moves 60 seconds backward.
	Jump/Step forward – In playback mode, the playback position moves 60 seconds forward.
	Press to fast forward the footage at 1x, 2x, 4x, 8x, 16x and 32x speeds in playback mode.
	Press to start MANUAL RECORDING
<b>USB port</b>	There is a USB port located on the left side of the front panel. This USB port is used to archive footage into a USB storage device or mouse control. (USB 2.0 connector)
<b>NUM KEY</b>	CH1, 2, 3, 4 Channel selection button.

## 2. Connection

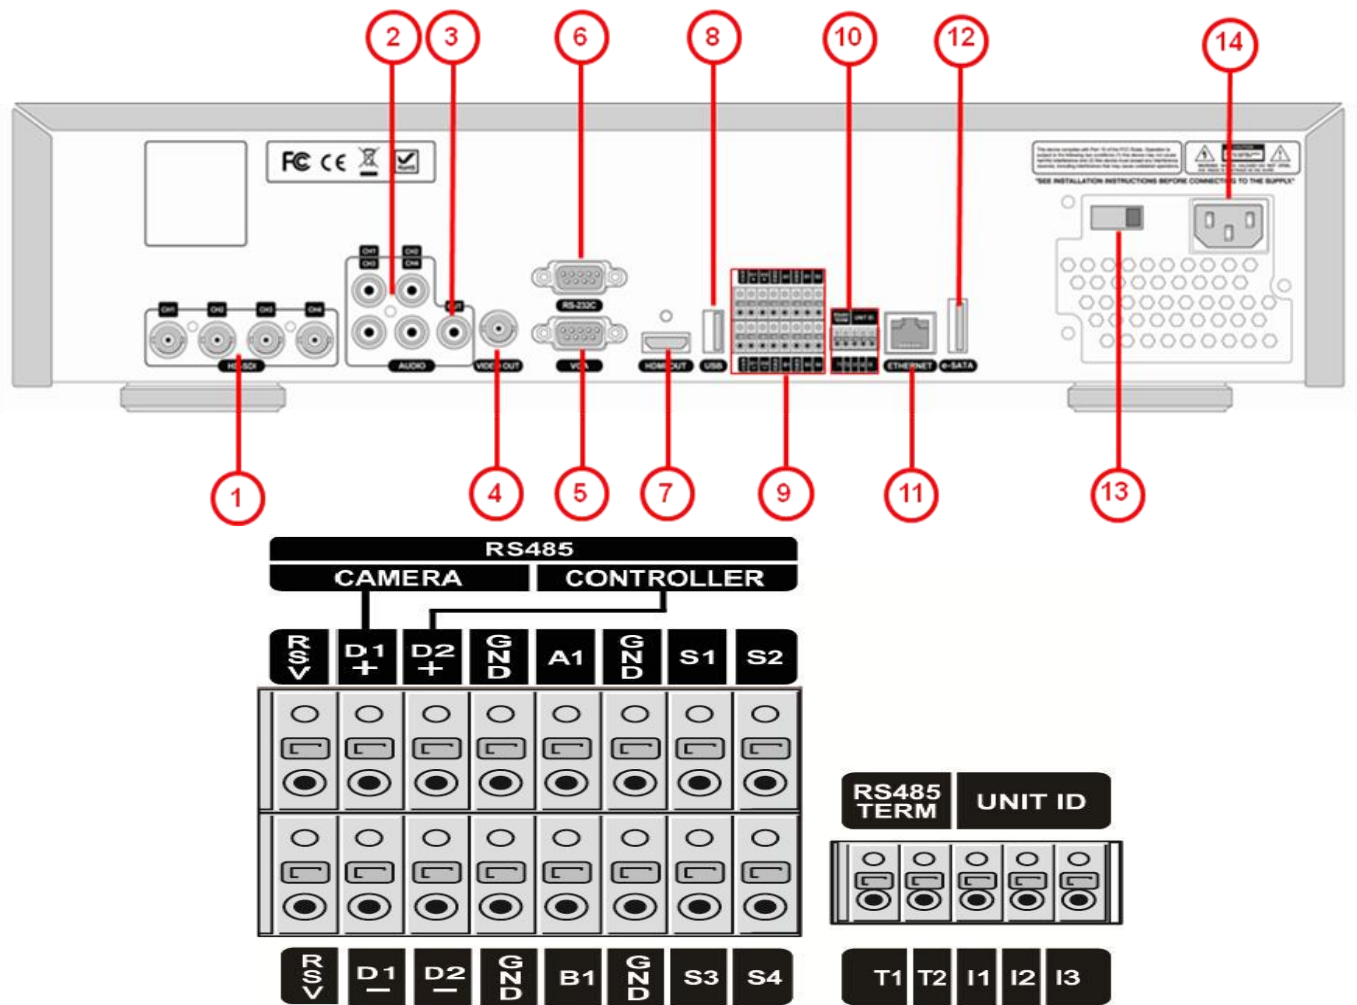


Figure 2.1.1. Rear Panel

Table 2.1.1. Rear Panel Connections

NO	Connection	Purpose
1	<b>VIDEO IN</b>	4 BNC connectors for video input. (HDcctv / HD-SDI)
2	<b>AUDIO IN</b>	4 connectors for audio input.
3	<b>AUDIO OUT</b>	1 connector for audio output.
4	<b>VIDEO OUT</b>	Spot output
5	<b>VGA</b>	Connector for VGA monitor.
6	<b>RS-232</b>	POS Interface
7	<b>HDMI OUT</b>	Main video output
8	<b>USB Port</b>	Connector for mouse or backup
9	<b>RSV</b>	Reserved PIN for additional feature
	<b>D1+</b>	1 <sup>st</sup> RS-485 port
	<b>D2+</b>	2nd RS-485 port
	<b>A1, B1</b>	Alarm output connector for alarm device
	<b>SENSOR IN</b>	4 connectors for sensor device connection. (S1 ~ S4)
10	<b>TERMINATE</b>	RS-485 termination switch for 1 <sup>st</sup> and 2 <sup>nd</sup>

	<b>UNIT ID</b>	Reserve PIN for additional feature
11	<b>ETHERNET</b>	RJ-45 connector for network function
12	<b>E-SATA</b>	To archive still-image or video into an external storage HDD. Raid nits to be available in the future.
13	<b>Input Voltage</b>	Select input voltage according to local electricity standard
14	<b>POWER SOCKET</b>	Connect for AC110V~250V

### 3. Setting Up the DVR


The following sections detail the initial setup of a DVR.

#### 3-1. Setup – Main Screen

To enter the setup menu, select MENU and SETUP on the screen using the mouse or press the SETUP



button on the front panel. Then select a user type. User can select one of user types (ADMIN, USER1, USER2, USER3) using the control button (◀ ▲ ▶ ▼) on the front panel and press SEL button. Input the password by front key panel, mouse or remote controller.

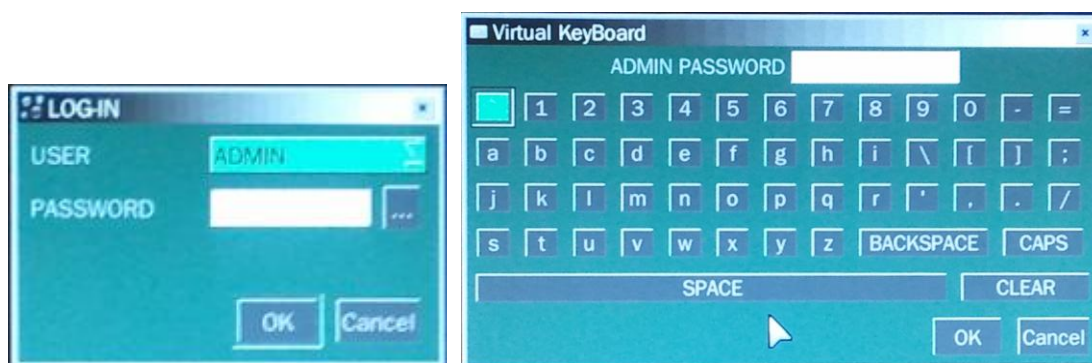

Use the Virtual Keyboard when you use front key and mouse. The factory default password is 1111. It is highly recommended to assign a new password to protect the system. User can assign a new password in SECURITY setup menu.

**Table 3.1.1. Setup Menu Tree**

- **DISPLAY**
  - OSD
  - OSD CONTRAST
  - SEQUENCE
  - SEQ-DWELL TIME
  - CHANNEL
    - NAME
- **RECORD**
  - CHANNEL
    - RESOLUTION
    - FRAME RATE
    - QUALITY
    - RECORDING
    - SENSOR RECORDING
    - PRE RECORD
    - POST EVENT RECORD
    - AUDIO
    - SCHEDULE
- **DEVICE**
  - ALARM OUT
  - PTZ
  - CHANNEL
    - MOTION ZONE
    - MOTION SENSITIVITY
  - KEY TONE
  - REMOTE CONTROL ID
  - SENSOR
    - TYPE
- **STORAGE**
  - OVERWRITE
  - DISK FORMAT
  - DISK INFO
  - RECORDING LIMIT
  - S.M.A.R.T.
- **SYSTEM**
  - DVR-ID
  - DESCRIPTION
  - LANGUAGE
  - DATE FORMAT

- SET DATE & TIME
  - NTP
  - SEND EMAIL
- SECURITY
  - USER AUTHENTICATION
  - USER PASSOWRD
- NETWORK
  - PORT
  - WEB PORT
  - NETWORK TYPE (DHCP, STATIC)
  - DNS
  - DDNS
  - CLIENT ACCESS
  - NETWORK STREAM
- CONFIG
  - SAVE SETUP TO A USB
  - LOAD SETUP FROM A USB
  - LOAD DEFAULT
  - LOAD FACTORY DEFAULT
- QUICK SETUP
  - INPUT DESIRED DAYS



### 3-2. Setup – Display Mode

Press the SETUP button and enter the password. The setup menu is displayed as picture below. Select DISPLAY icon and press SEL button to enter the setup menu item. Navigate through the menu items using the control button (◀ ▲ ▶ ▼) and change the value of the menu item using the control button (◀ ▲ ▶ ▼). To return to setup menu screen, press the ESC button.

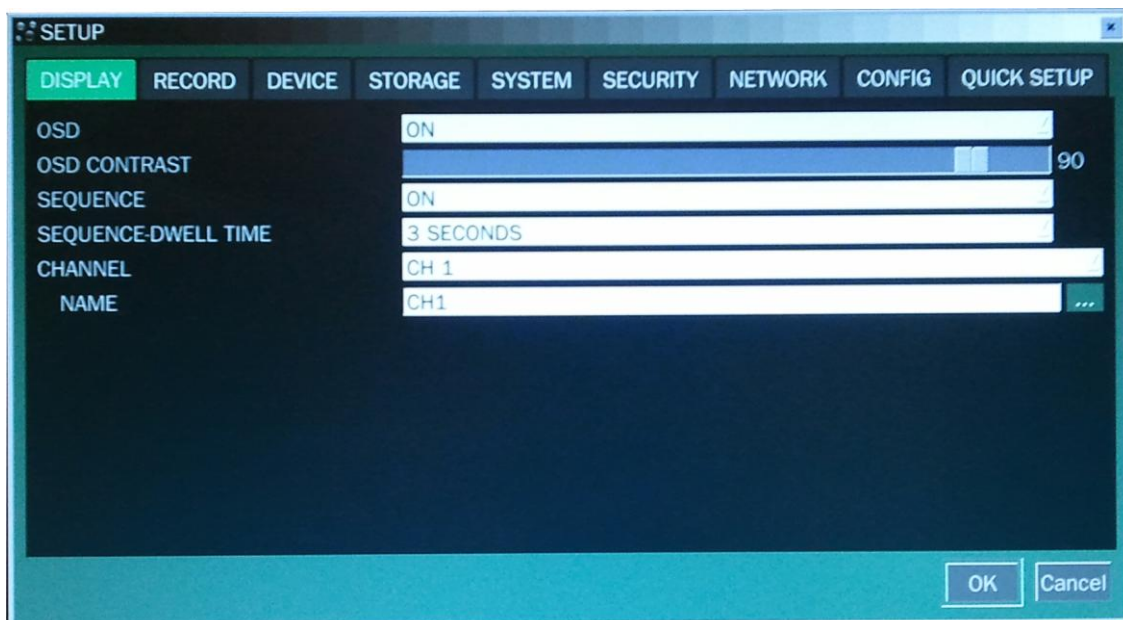


Figure 3.2.1. Display Mode Setup Screen

Table 3.2.1. Menu Items in DISPLAY Mode Setup

Item	Description
<b>OSD</b>	Enable/disable on-screen-display. Select ON: show it on the screen, Select OFF: Disappear on the screen.
<b>SEQUENCE</b>	Enable/disable sequential display of video in full screen mode.
<b>SEQ-DWELL TIME</b>	Set the dwell time of each, single channel display in sequential display mode (3~60seconds) Quad or 9 channels display in sequential display mode (1-60seconds)
<b>OSD CONTRAST</b>	Set the visibility level of the On Screen Display (OSD).(0-100)
<b>CHANNEL</b>	Select a channel for applying the following settings using the control button (◀ ▲ ▶ ▼). Press SEL button to change the channel.
<b>NAME</b>	Set the channel name. Press SEL button and set the channel name and select OK using the control button (◀ ▲ ▶ ▼).

### 3-3. Setup – Recording Mode

Press the SETUP button and enter the password. The setup menu is displayed as picture below. Select RECORD icon and press SEL button to enter the setup menu item. Navigate through the menu items using the control button (◀ ▲ ▶ ▼) and change the value of the menu item using the control button (◀ ▲ ▶ ▼). To return to setup menu screen, press the ESC button.

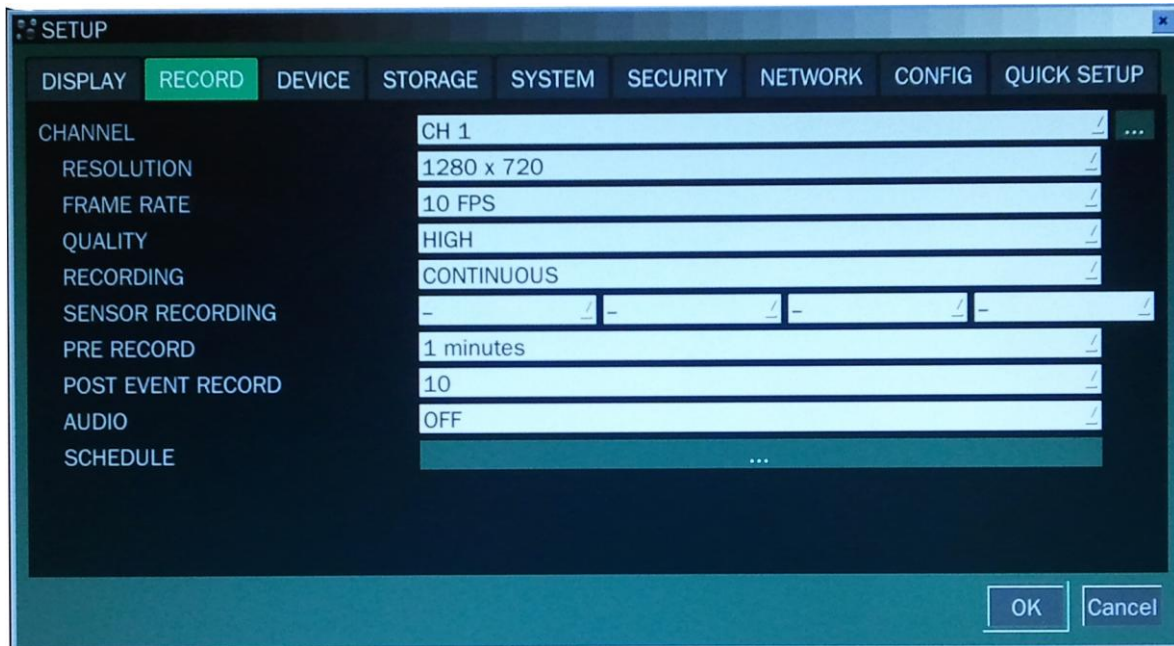


Figure 3.3.1. Recording Mode Setup Screen

Table 3.3.1. Menu Items in Recording Mode Setup

Menu item	Description
<b>CHANNEL</b>	<p>Select a channel for applying the following settings using the control button (◀ ▲ ▶ ▼). Press SEL button to change the setting value of all channels at once. Once you select an item, then press SEL to set value for all channels.</p> <p>Use virtual keyboard for all setting on one screen as you want as bellow picture.</p>
<b>FRAME RATE</b>	<p>Set the frame rate for the specified channel. The sum of the frame rate values from each channel cannot exceed the maximum frame rates for a specific recording resolution.</p> <p><b>Typical values of the maximum frame rate for video are 120/100 fps (NTSC/PAL)</b></p>
<b>QUALITY</b>	Select the recording quality for the specified channel. Options are: Economy, Standard, High and Super.


	ALL	1	2	3	4
RESOLUTION	1280 x 720	1280 x 720	1280 x 720	1280 x 720	1280 x 720
FRAME RATE	30	30	30	30	30
QUALITY	HIGH	HIGH	HIGH	HIGH	HIGH
RECORDING	CONTINUOUS	CONTINUOUS	CONTINUOUS	CONTINUOUS	CONTINUOUS
PRE RECORD	1 minutes	1 minutes	1 minutes	1 minutes	1 minutes
POST EVENT REC	10	10	10	10	10
AUDIO	OFF	OFF	OFF	OFF	OFF

<b>RECORDING</b>	Assign the recording mode for each channel. Options are: Continuous, By Motion, By Sensor, By Schedule or Disable.
<b>SENSOR RECORDING</b>	Enable setting up to 4 sensors for the specified channel using the control button (◀ ▲ ▶ ▼).
<b>PRE RECORD</b>	Enable/disable pre-event recording. Pre-event recording time is 15 seconds to 20 minutes(Selectable)
<b>POST EVENT RECORD</b>	Set the post event recording time duration for the specified channel. (10-30 seconds)
<b>AUDIO</b>	Enable/disable audio recording for the specified channel. ● Fixed-available on only from channel 1 to channel 4.
<b>SCHEDULE</b>	Set the recording schedule. Press SEL to go to schedule setup screen.
<b>RESOLUTION</b>	Set the resolution to 1280X720, 640X360

### 3-3-1. Recording Schedules

To setup a recording schedule, select SCHEDULE in the RECORD menu. Navigate through the items using the control button (◀ ▲ ▶ ▼).

Once the channel 1 is selected, SCHEDULE-CH1 screen is displayed. Select ALL or each day using the control button (◀ ▲ ▶ ▼) and set the recording mode using the SEL button repeatedly

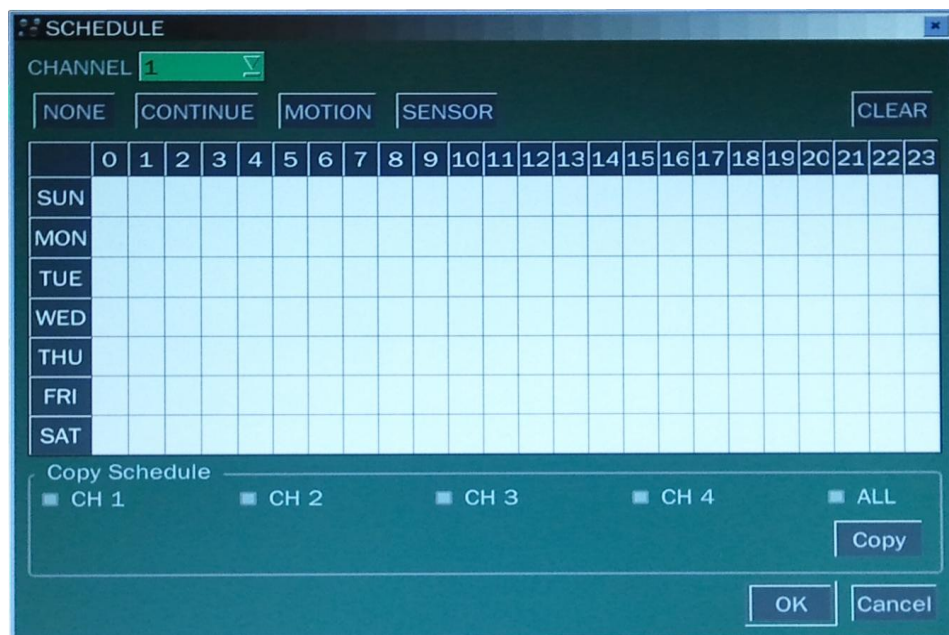

**Figure 3.3.2. Schedule Recording Setup Screen**

C: CONTINUOUS recording, When selected the color will change to Blue

M: MOTION recording, When selected the color will change to Yellow

S: SENSOR recording, When selected the color will change to Red

–: Does not record

[ALL]: Move the cursor to ALL and select a recording mode C,M or S using the SEL button to set the same

setting for every day.

**[SUN to SAT]:** Move the cursor to SUN to SAT and select a recording mode C,M or S using the SEL button to set the same setting for the whole day.

**[Vertical Bar “|”]:** Move the cursor to ALL and move the cursor to the specific time using the control button (◀ ▲ ▶ ▼). And select a recording mode C,M or S using the SEL button to set the same setting.

**[SEL]:** The recording mode can be selected by pressing repeatedly the SEL button.

**[COPY FROM] [COPY TO]:** Set the channel 1 schedule and select COPY TO using the control button (◀ ▲ ▶ ▼), select CH2 using the control button (◀ ▲ ▶ ▼) and press the SEL button. Then the CH1 schedule is copied to CH2.

To return to setup menu screen, press the ESC button.

### 3-4. Setup – Device Mode

Press the SETUP button and enter the password. The setup menu is displayed as picture below. Select DEVICE icon and press SEL button to enter the setup menu item. Navigate through the menu items using the control button (◀ ▲ ▶ ▼) and change the value of the menu item using the control button (◀ ▲ ▶ ▼). To return to setup menu screen, press the ESC button.

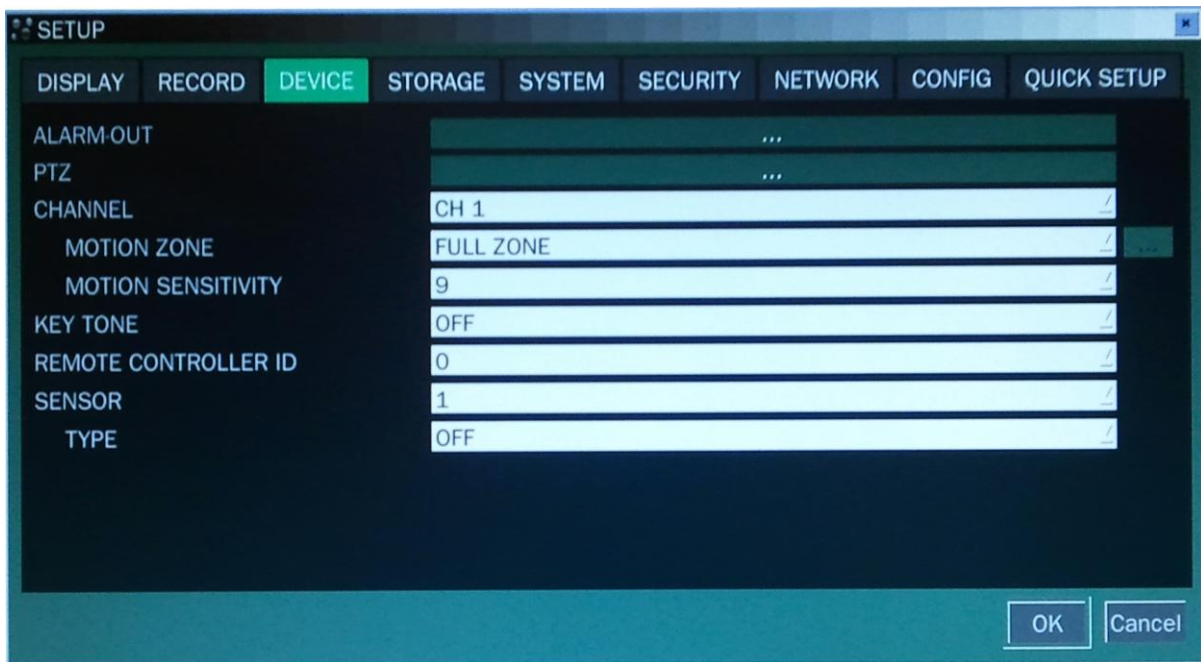


Figure 3.4.1. Device Mode Setup Screen

Table 3.4.1. Menu Items in Device Setup Screen

Item	Description
ALARM OUT	Set the sensor, motion, and video loss for each alarm.
PTZ	Set the PTZ camera speed, number, type and ID.
CHANNEL	Select specified channel for motion zone setup.
MOTION ZONE	Select either Full Zone or Partial Zone for motion sensing.
MOTION SENSITIVITY	Set the motion sensitivity for the specified channel.



	Control the motion sensitivity from 1 to 9.
<b>KEY TONE</b>	Enable/disable key tone.
<b>REMOTE CONTROL ID</b>	Select an ID of remote control. 1. Select ID. 2. Press the same number as ID set in DVR on a remote control. 3. Then icon will be displayed on Live screen of DVR that respond to the remote control. The options are from 00 to 99
<b>SENSOR</b>	Select sensor NO from 1 to 4,9,16.
<b>TYPE</b>	Set the type of sensor for the specified channel. Options are: OFF, N/O (normal open), and N/C (normal closed).

### 3-4-1. Alarm-Out

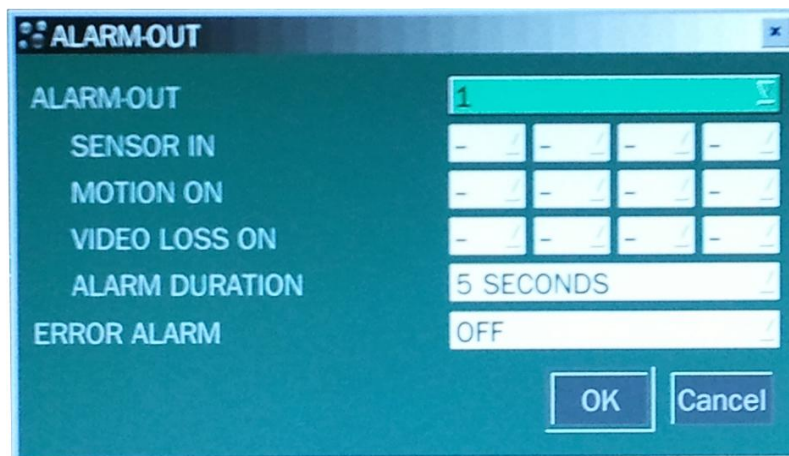


Figure 3.4.2. ALARM-OUT Setup Screen


Table 3.4.2. Menu Item in ALARM-OUT Setup Screen

Item	Description
<b>ALARM OUT</b>	Select an alarm out number. Available NO: 4CH(1)
<b>SENSOR IN</b>	Enable setting up to 4 cameras for each alarm.
<b>MOTION ON</b>	Enable setting up to 4 cameras for each alarm.
<b>VIDEO LOSS ON</b>	Enable setting up to 4 cameras for each alarm.
<b>ALARM DURATION</b>	Set the alarm dwell time from 5 to 60 seconds.
<b>ERROR ALARM</b>	Set the error type for the alarm activation. The options are OFF, ALL, HDD ERROR and VIDEO LOSS.


### 3-4-2 PTZ Setup

To control the PTZ functions of the camera, connect a controller to the RS-485 port.

- ① Connect the RS-485 cables of PTZ camera to the RS-485 port on the rear panel.

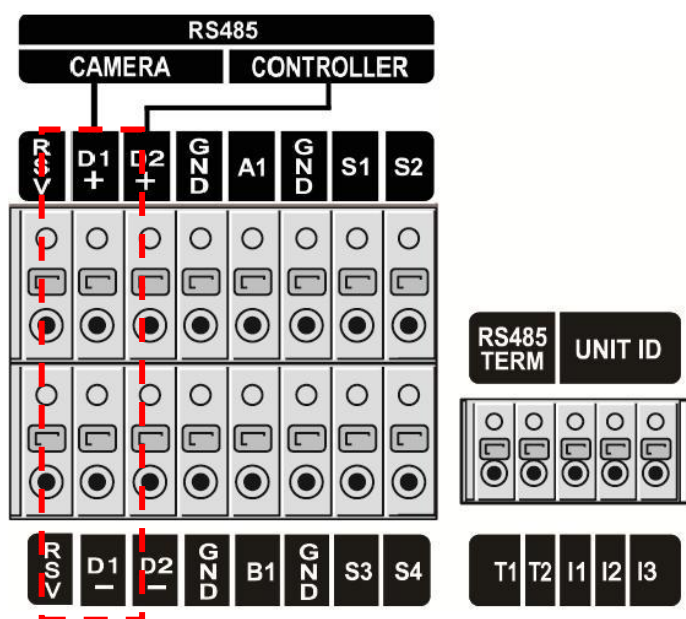

- ② Press SEL button or double click to enter the menu. Then PTZ menu screen is displayed.

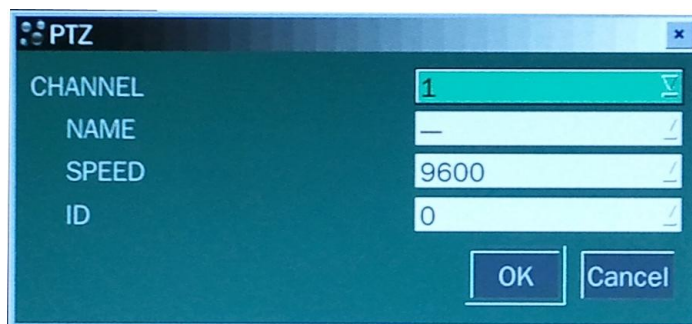

**Figure 3.4.3. PTZ Control Setup Screen**

**Note:** For speed dome cameras that support RS-485, connect them directly to the RS-485 port. If the camera is controlled with RS-232C, use a RS-485 to RS-232C signal converter.

On the PTZ control setup screen, you can select or set the protocol type of the camera that is the same as the one installed on the site. If the camera has a specific camera ID, select the camera ID using the control button (◀ ▲ ▶ ▼).

The following options are available on the PTZ setup screen.

**CHANNEL** (channel number that the PTZ is connected to)

**NAME** (protocol type)

**SPEED** (19200, 14400, 9600, 4800, 2400)

**ID** (0-63)

### 3-4-3. Motion Zone Setup

Select MOTION ZONE using the control button (◀ ▲ ▶ ▼) and select either PARTIAL ZONE or FULL ZONE using the control button (◀ ▲ ▶ ▼). And press the SEL button.

If FULL ZONE is selected, the motion setting screen is not displayed. Only set the level of sensitivity for MOTION SENSITIVITY.

**FULL ZONE:** The motion sensor is active on the whole screen.

**PARTIAL ZONE:** The motion sensor is active in the set detection frame.

Select the sensor detection position using the control button (◀ ▲ ▶ ▼) and press the SEL button. Then the color of the position which is selected will be changed. Press ESC button to return to the DEVICE setup menu.

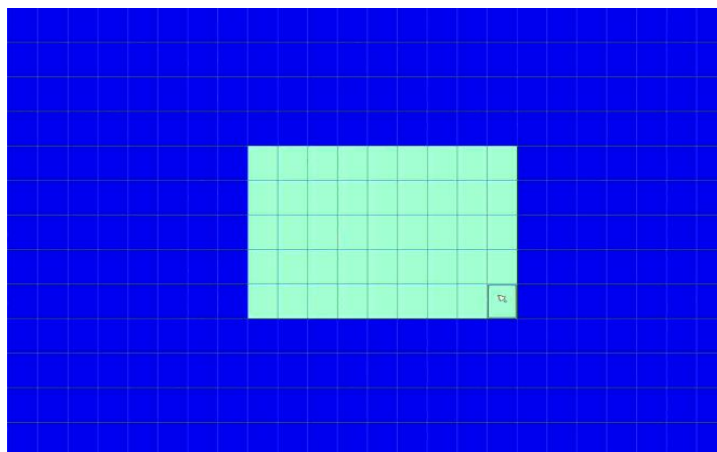


Figure 3.4.4. Motion Zone Selection Screen

### 3-5. Setup – Storage Mode

Press the SETUP button and enter the password. The setup menu is displayed as picture below. Select STORAGE icon and press SEL button to enter the setup menu item. Navigate through the menu items using the control button (◀ ▲ ▶ ▼) and change the value of the menu item using the control button (◀ ▲ ▶ ▼). To return to setup menu screen, press the ESC button.




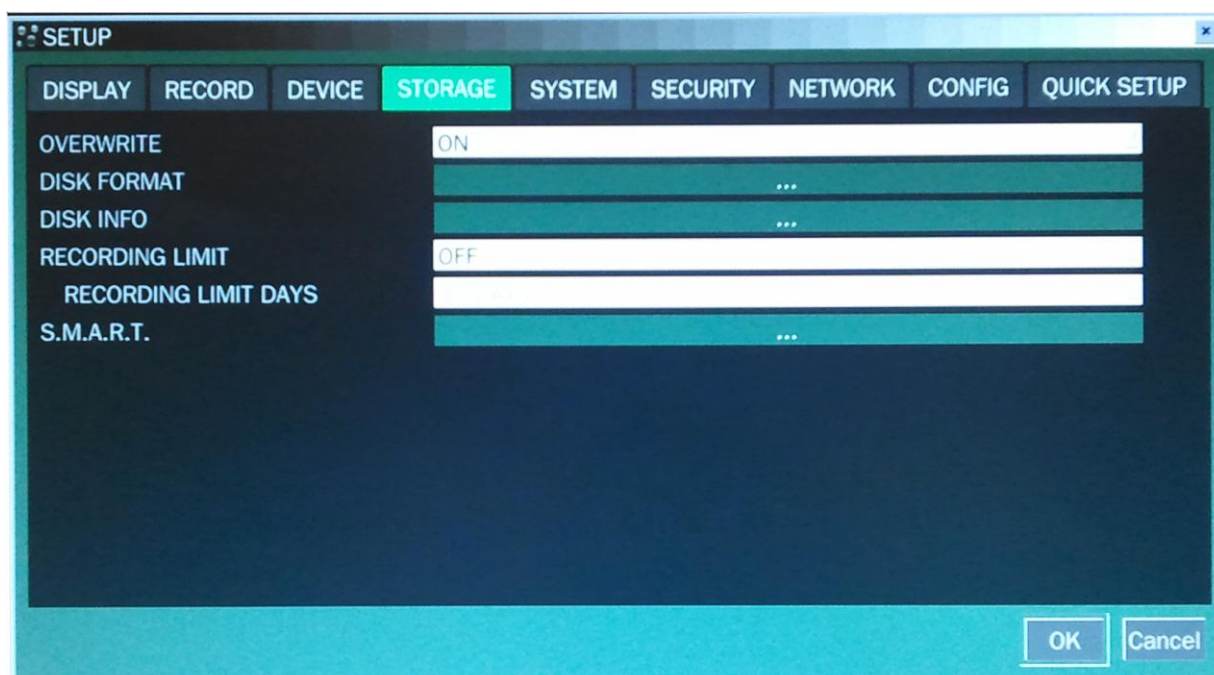


Figure 3.5.1. STORAGE Setup Screen

**Table 3.5.1. Menu Items in STORAGE Setup Screen**

Item	Description
<b>OVERWRITE</b>	When enabled, the DVR will continue recording and overwrite the oldest existing recorded data once the hard drive is full. When disabled, recording will stop once the hard drive is full
<b>DISK FORMAT</b>	In order to use HDD format 
<b>DISK INFO</b>	Hard drive information 
<b>RECORDING LIMIT</b>	Enable/disable recording limit
<b>RECORDING LIMIT DAYS</b>	Set the recording limit days (1- 90 days)
<b>S.M.A.R.T</b>	Enable/disable alert function for HDD temperature limit 

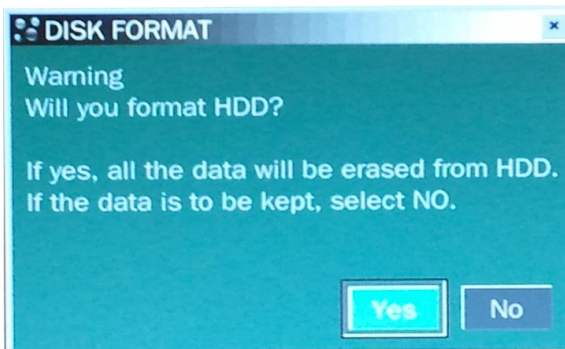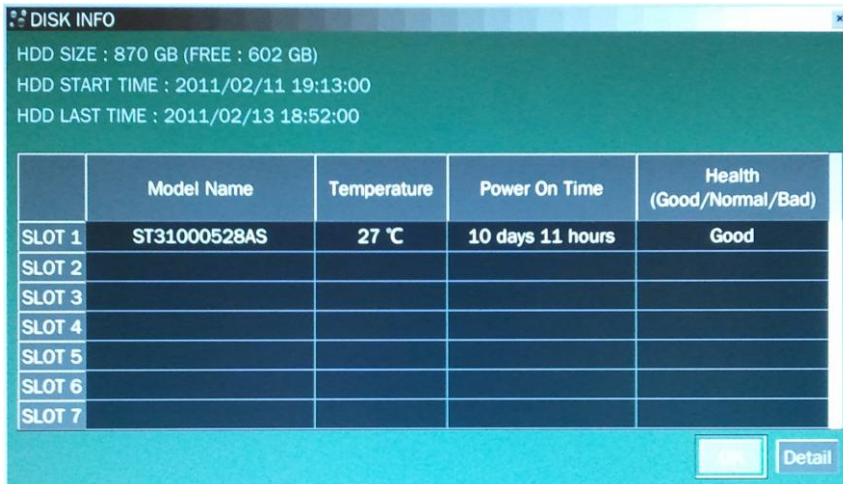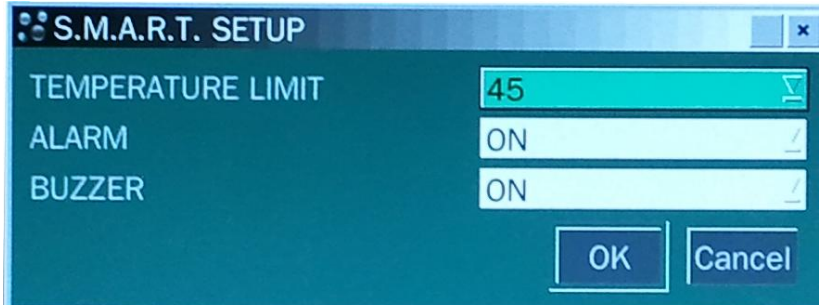

### 3-6. Setup – System Mode

Press the SETUP button and enter the password. The setup menu is displayed as picture below. Select SYSTEM icon and press SEL button to enter the menu item. Navigate through the menu items using the control button (◀ ▲ ▶ ▼) and change the value of the menu item using the control button (◀ ▲ ▶ ▼). To return to setup menu screen, press the ESC button.



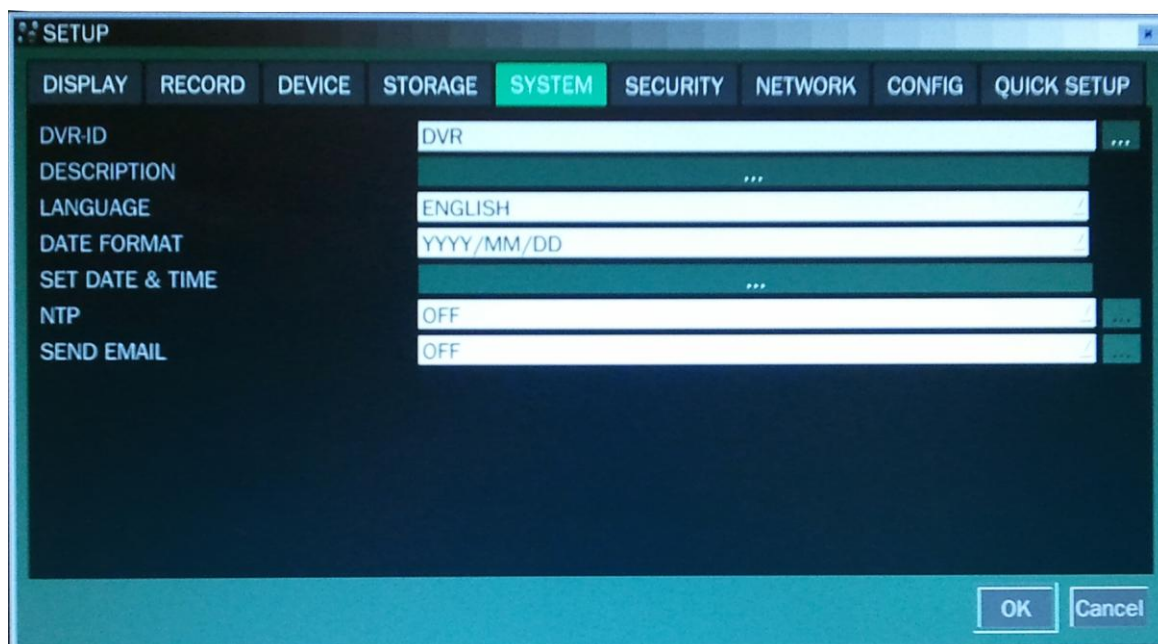


Figure 3.6.1. SYSTEM Setup Screen

Table 3.6.1. Menu Items in SYSTEM Setup Screen

Item	Description
<b>DVR ID</b>	Press the SEL button and select DVR ID using the control button (◀ ▲ ▶ ▼), and press SEL button. Press OK to apply the selected DVR ID. SPACE / Caps Lock(Select either Capital or Lower letter) BS(Back space: Erase previous character) / Clear(Erase all characters)
<b>DESCRIPTION</b>	Press SEL button to view system information. (Hardware version, Software version, Storage size, IP address and MAC address.)
	
<b>LANGUAGE</b>	Select the display language using the control button (◀ ▲ ▶ ▼). Once a language is selected, the display language changes.
<b>DATE FORMAT</b>	Select the date display format using the control button (◀ ▲ ▶ ▼). Options are: YYYY/MM/DD MM-DD-YYYY DD-MM-YYYY

**SET DATE&TIME** Move the cursor to the display date and time using the control button (◀ ▶ ▲ ▼) and press SEL button to set the present date and time. Press ESC button to return to SET DATE & TIME setup menu.

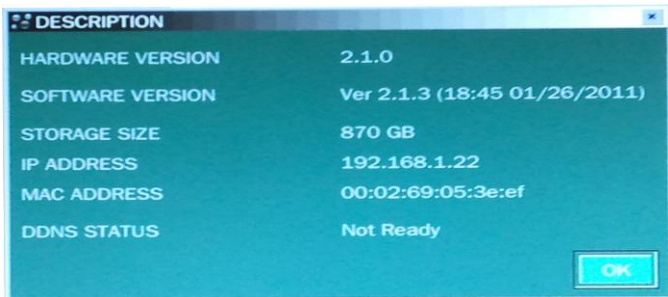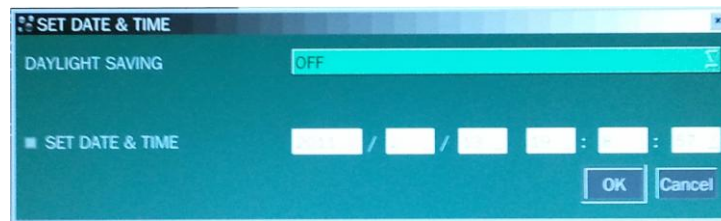

In order to set DAYLIGHT SAVING, select your DLS zone from USA, EU, or OTHER.



**CLIENT ACCESS** Enable/Disable remote access through network client software.

**BANDWIDTH SAVING** Enable/Disable only key frame transmission. "ON" mode is favorable for use of low network bandwidth. Mostly, set "OFF" for normal use.

**NTP** NTP is an abbreviation for Network Time Protocol, which is for synchronizing the clocks of computer systems over variable-latency data networks.


**SEND MAIL** **PRIMARY SNTP SERVER:** Input the address of the primary NTP time server.

**SECONDARY SNTP SERVER:** Input the address of the secondary NTP time server.

**TIME ZONE:** Greenwich Mean Time(GMT) is a term originally referring to mean solar time at the Royal Observatory, Greenwich in London. Because NTP synchronizes with Greenwich Mean Time(GMT) regardless of geography, users must set their own time difference. (Ex. KOREA GMT+09:00)

**CONNECTON MODE:** Select NTP time server connection mode.

**CONNECTION PERIOD:** 1~24

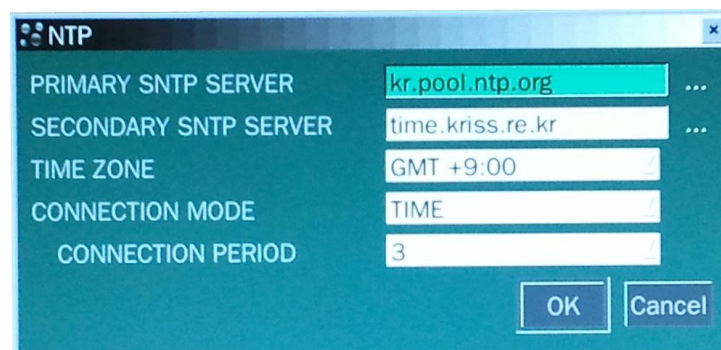

3-7. Setup – Security Mode

Press the SETUP button and enter the password. The setup menu is displayed as picture below. Select SECURITY icon and press SEL button to enter the setup menu item. Navigate through the menu items using the control button (◀ ▲ ▶ ▼) and change the value of the menu item using the control button (◀ ▲ ▶ ▼). To return to setup menu screen, press the ESC button


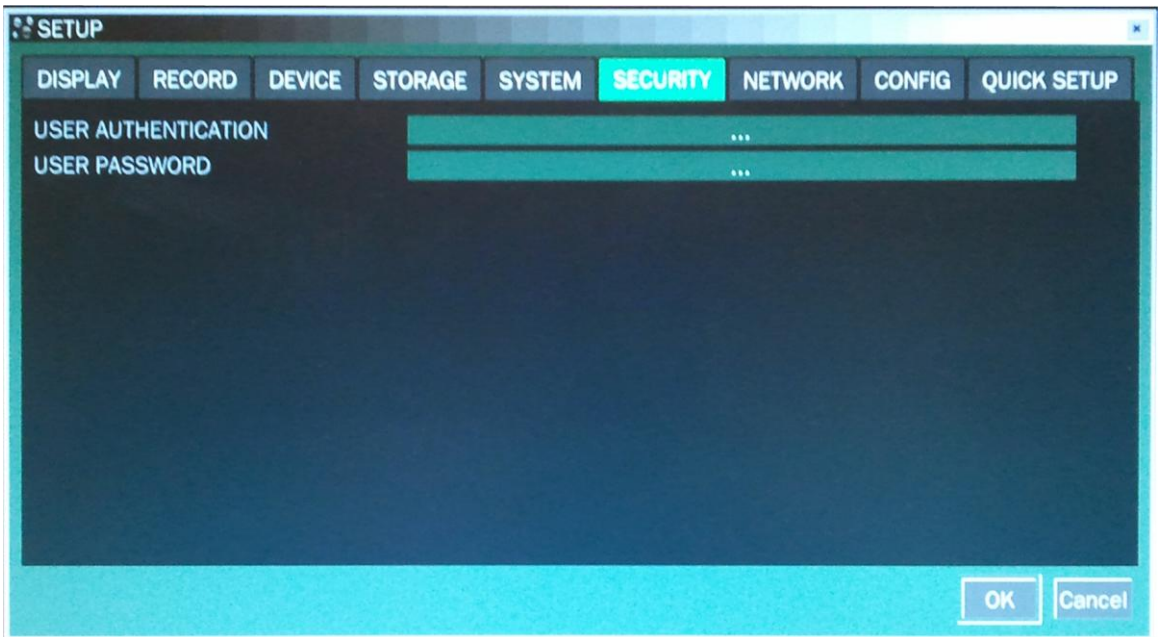


Figure 3.7.1. SECURITY Setup Screen

Table 3.7.1. Menu Items in SECURITY Setup Screen

Item	Description
USER AUTHENTICATION	<p><b>PASSWORD CHECK:</b></p> <p>Check either V or blank for the functions such as <b>Setup, Playback(PB), PTZ, Record OFF(R/OFF), and Network.</b></p> <p>V: Ask for a password when the given function is selected for all users.</p> <p>Blank: Does not ask for a password when the given function is selected for all users.</p>
USER PASSWORD	<p><b>ADMIN, NETWORK, USER1, USER2, USER3:</b></p> <p>Options are ADMIN, USER1, USER2 and USER3.</p> <p>Select USER PASSWORD using control button (◀ ▲ ▶ ▼) and press SEL button. Select user type using the control button (◀ ▲ ▶</p>

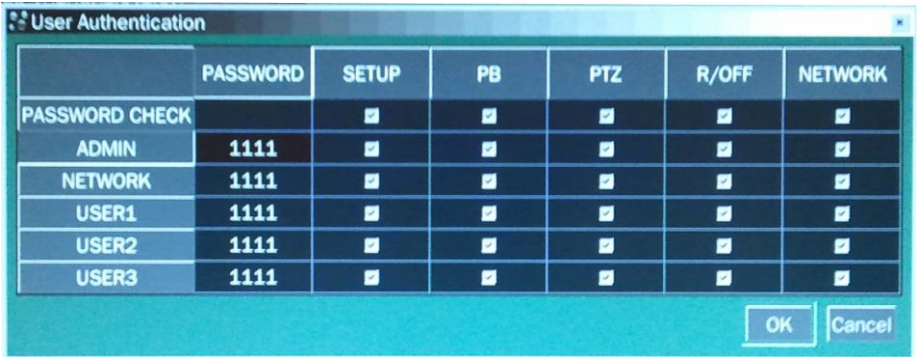

▼) and SEL button. Enter the current password and select OK. Enter the new password and select OK. Enter the same password again to confirm and select OK. Then the message “PASSWORD CHANGED” is displayed.

The factory default password is **1111**.

### 3-8. Setup – Network Mode

Press the SETUP button and enter the password. The setup menu is displayed as picture below. Select NETWORK icon and press SEL button to enter the setup menu item. Navigate through the menu items using the control button (◀ ▲ ▶ ▼) and change the value of the menu item using the control button (◀ ▲ ▶ ▼). To return to setup menu screen, press the ESC button



**Figure 3.8.1. NETWORK Setup Screen**

**Table 3.8.1. Menu Items in Network Setup Screen**

Item	Description
<b>PORT</b>	Port number (Default: 5445)
<b>WEB PORT</b>	Web Sever Port number
<b>NETWORK TYPE</b>	Select a type of network connection. Options are: DHCP and STATIC  Note. Other parts of the network setup screen change depending on what network type you select.
<b>DHCP</b>	DVR automatically get IP varying from time to time from network and does not therefore need to be set.



<b>STATIC</b>	Assigned to an Internet service provider ( <a href="#">ISP</a> ) to be its permanent address on the Internet.
<b>DDNS</b>	<p>Enable/disable using domain name address through DDNS server.  “ON” mode, DDNS server name appears for domain registration.  <b>DDNS SERVER NAME:</b> The DDNS sever name is bestddns.com.  <b>CAUTION:</b> Do not change this sever name. If this is changed, the DDNS service cannot be available.  <b>DDNS INTERVAL:</b> Set the connection interval (5-60minutes)</p>

### 3-8-1. Ports

When you connect one or more DVRs to a network through an IP sharing device, each device must have a unique TCP port number for access to each unit from outside the LAN. Also, the router must be configured for port forwarding so when each port is accessed on the IP sharing device, it will forward to the appropriate DVR.

**Note:** This port number is listed next to the Port menu option in the Network Setup screen. If you plan to access the DVR units only from within the same LAN, the TCP port does not have to be changed.

#### Network Access beyond Router

In order to access the DVR remotely beyond a router (firewall), the user must open TCP port for command level, live channels and storage channels. User need to open 2ports numbers.

If the DVR port number is set to 5445, open the TCP port 5445 and 5446 on the router.

If this port is not opened properly, user can not access DVR beyond a router.

If DVR supports remote setup function over the network, user need to open additional port 5455 which is the 10<sup>th</sup> number from the basic port number.

#### Web Viewer Network Access Beyond Router

In order to access beyond Router (Firewall), user must open 1 TCP port that is set on NETWORK > WEB PORT. If this port is not open properly, user can not access DVR using direct Web viewer.

(Example: When NETWORK > WEB PORT is set as 80, 80 TCP port of IP address of DVR must be open.)

### 3-8-2. Network Types

#### 3-8-2-1.STATIC

1. For the use of fixed IP.

See your network administrator if you do not have this information.

2. When DVR is installed in IP sharer that is connected with ADSL, a user can assign fixed IP to DVR from IP sharer itself using “DMZ” function out of such sharer.

Input IP set in DMZ on “IP” field and Gateway of ADSL modem on “Gateway” field. Similarly, for Subnet Mask, DNS address, input relevant values in IP sharer.

**Table 3.8.2. LAN**

Item	Description
<b>IP</b>	The fixed IP address of the DVR unit.
<b>SUBNET MASK</b>	The subnet mask for the LAN
<b>GATEWAY</b>	The IP address of the Gateway
<b>1<sup>st</sup> DNS</b>	The address for the DNS server
<b>2<sup>nd</sup> DNS</b>	The address for the DNS server

**3-8-2-2. DHCP**



An IP address is automatically assigned by the DHCP server, which automatically assigns IP address and other parameters to new devices.

When ADSL or other network being used adopts variable IP method, not fixed IP. This option is used as a way to automatically get IP address.

**3-8-2-3. DDNS**

User can use the function to connect to a network with a domain name. When it selects a Sever 1, user can select one type among three DDNS Servers which be supporting for free.

The DDNS interval can be set from 5 to 60 minutes. To connect to a network with a domain name, user also has to register a MAC address and create a unique domain name to [ddnscenter.com](http://ddnscenter.com).

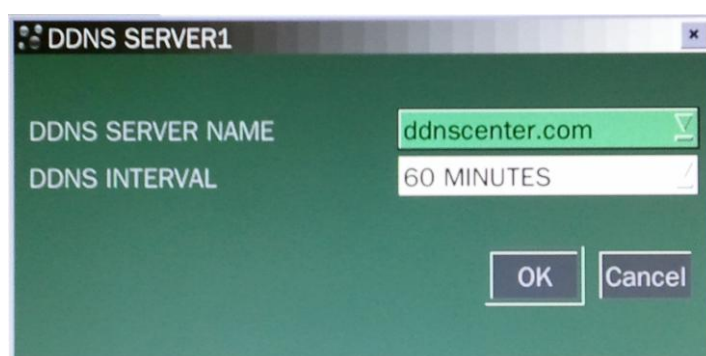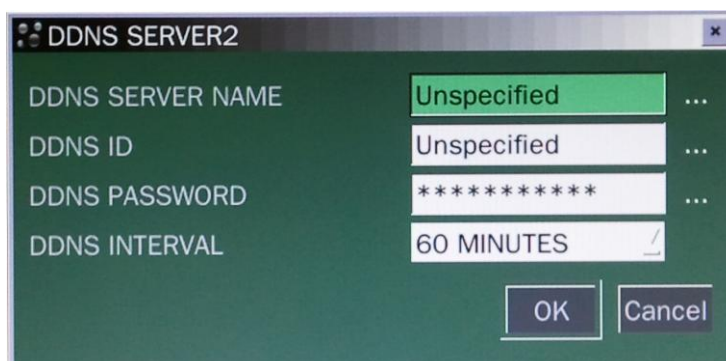**Figure 3.8.2. Network Setup Screen – DDNS Server 1****Figure 3.8.3. Network Setup Screen – DDNS Server 2**

If user wants to use other general-purpose DDNS Server, select a Sever 2. Then, user has to input the server name, ID and password using a virtual keyboard.

### 3-9. Setup - CONFIG Mode

Press the SETUP button and enter the password. The setup menu is displayed as picture below. Select CONFIG icon and press SEL button to enter the setup menu item. Navigate through the menu items using the control button (◀ ▲ ▶ ▼) and change the value of the menu item using the control button (◀ ▲ ▶ ▼). To return to setup menu screen, press the ESC button

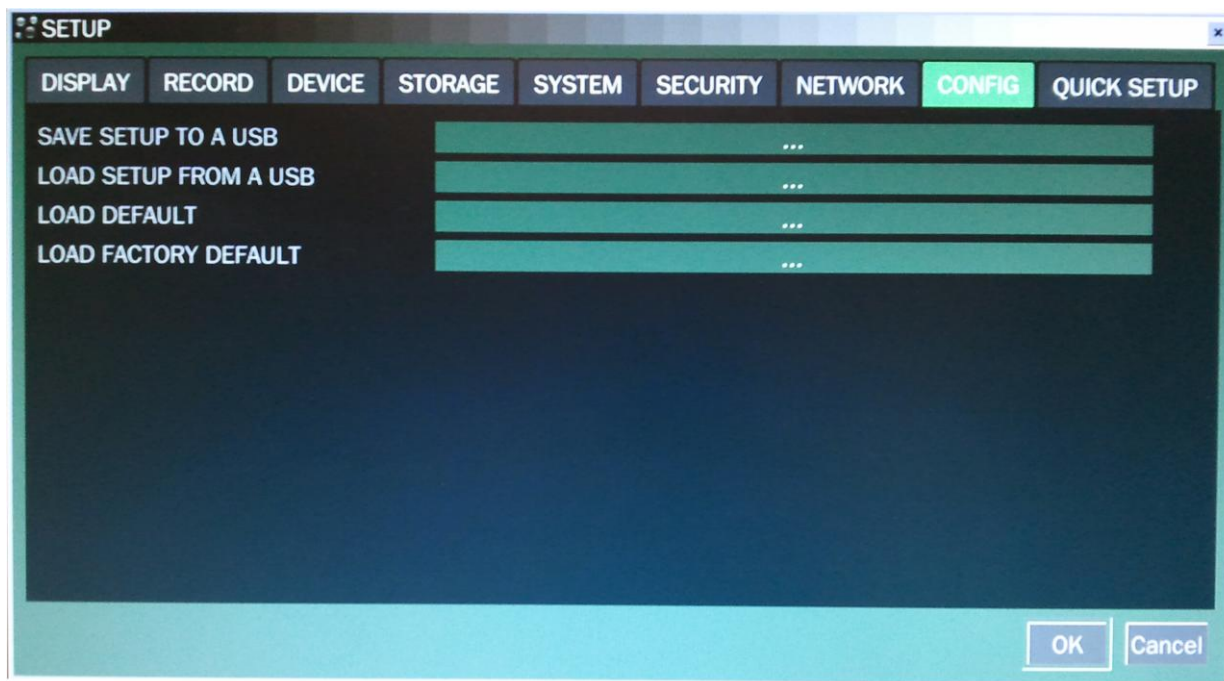


Figure 3.9.1. Config Setup Screen

Table 3.9.1. Config Setup

Item	Description
<b>SAVE SETUP TO A USB</b>	User can save the current configuration (Setting values) of DVR to the USB flash drive. Put the USB stick on the front panel and press SEL to start the saving process.
<b>LOAD SETUP FROM A USB</b>	User can upload the configuration of DVR to another DVR using the USB Flash drive. Put the USB stick on the front panel and press SEL to start the loading process.
<b>LOAD DEFAULT</b>	Select ON to reset the system to the default settings. (The follow settings such as <b>Language, DVR ID, Security User Authentication, Security User P/W, Date format, DLS settings, Network settings, HDD serial number, and HDD ERROR time</b> will not be included.)
<b>LOAD FACTORY DEFAULT</b>	Select ON to reset the system to the factory default settings.

### 3-10. Setup –QUICK SETUP Mode

User can easily recording setup. just select desired day/days to record, then DVR will automatically calculate recording setting value.

SETUP

DISPLAY RECORD DEVICE STORAGE SYSTEM SECURITY NETWORK CONFIG **QUICK SETUP**

☒ USE QUICK SETUP

INPUT DESIRED DAYS 10 ...

CUSTOMER SETTINGS

RESOLUTION 1280 x 720

FRAME RATE 10 FPS

QUALITY HIGH

RECORDING CONTINUOUS

DAYS TO RECORD 10 days (13 hours)

DUAL STREAM

DUAL RESOLUTION 320 x 180

DUAL FRAME RATE 30 FPS

DUAL QUALITY ECONOMY

OK Cancel

### 4. Saving Setup

To preserve the setup values that you have changed, select YES.



## 5. Live, Search, and Playback

### 5-1. Live Viewing Screen

In the Live screen, video inputs from the cameras are displayed as they are configured in the Display Setup screen. Various on-screen display (OSD) symbols, which indicate the status of the DVR, are described in Table 5.1.1.



Figure 5.1.1. Live Viewing Screen

Table 5.1.1. Status Indicator Icons in Live Screen

Icon	Description
	Displays the current date and time
<b>R/C: ALL</b>	Remote control ID display. If no remote ID is set the message “ALL” is displayed.
	Displays the amount of recording on the hard disk from 0-100%.

Table 5.1.2. Button Functions in Live Viewing Screen


Button	Description
	Select channel to be displayed in full screen mode.
	Switch between full screen and quad display mode.
<b>SEQ</b>	Press to start auto sequencing of the screen in full screen mode. (Toggle)
<b>RECORD</b>	Press to start and stop manual recording.

<b>SEARCH</b>	Press to go to the search menu. Event search /Time line search /Log /Archive search
<b>ARCH</b>	Press to capture a still image. The still image will be stored into hard drive. It can be transferred to the USB device.
<b>SETUP</b>	Press to launch SETUP menu.
<b>ESC</b>	Press for temporal storage of the changed value or to return to the previous menu screen.

## 5-2. Search Screen

To enter the search screen, select MENU and SEARCH on the screen using the mouse or press SEARCH button on the front panel in live mode.

When you press the SEARCH button, DVR asks for a password as in Figure 5-2-1.

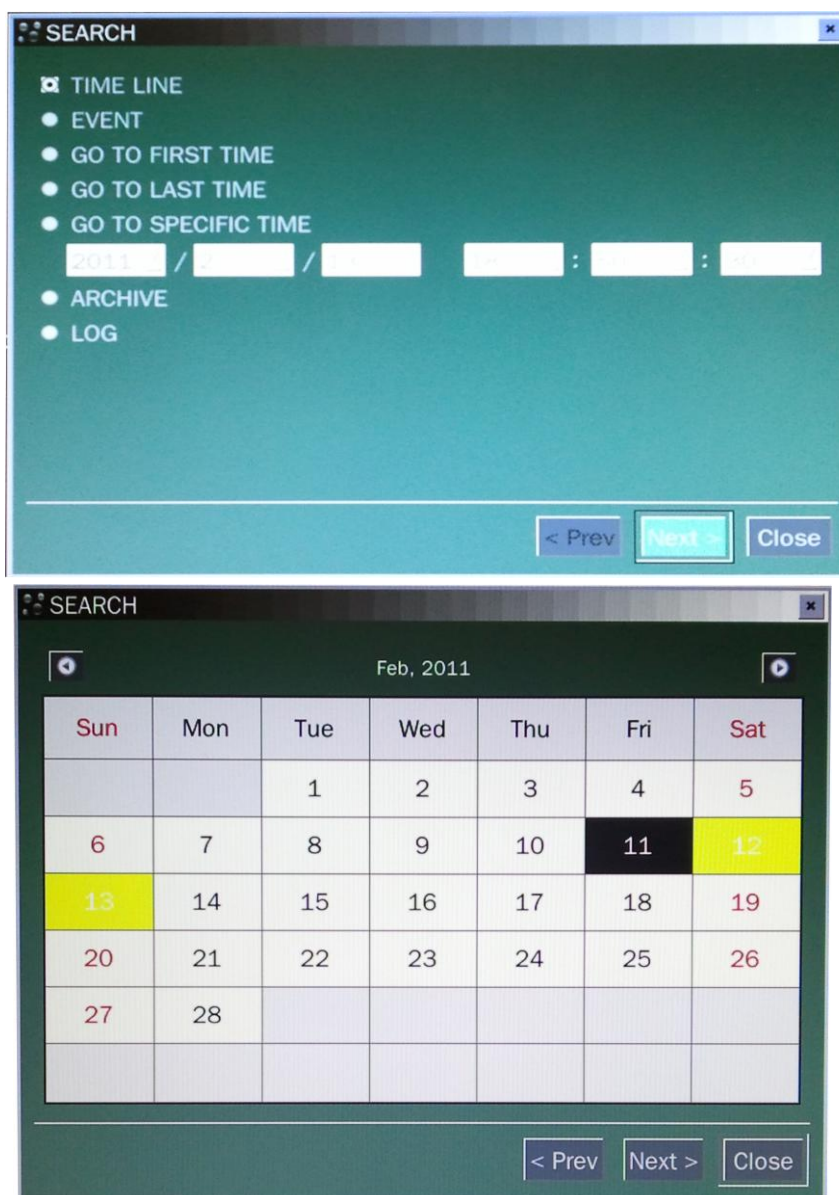


**Figure 5.2.1. Search Window**

Enter the password using the control button (◀ ▲ ▶ ▼).

There are 7 ways of search menu such as TIMELINE, EVENT, GO TO FIRST TIME, GO TO LAST TIME, GO TO SPECIFIC TIME, LOG, and ARCHIVE on the screen.

## How to Search Data On the Time-Line Using the Mouse or Front Key Button

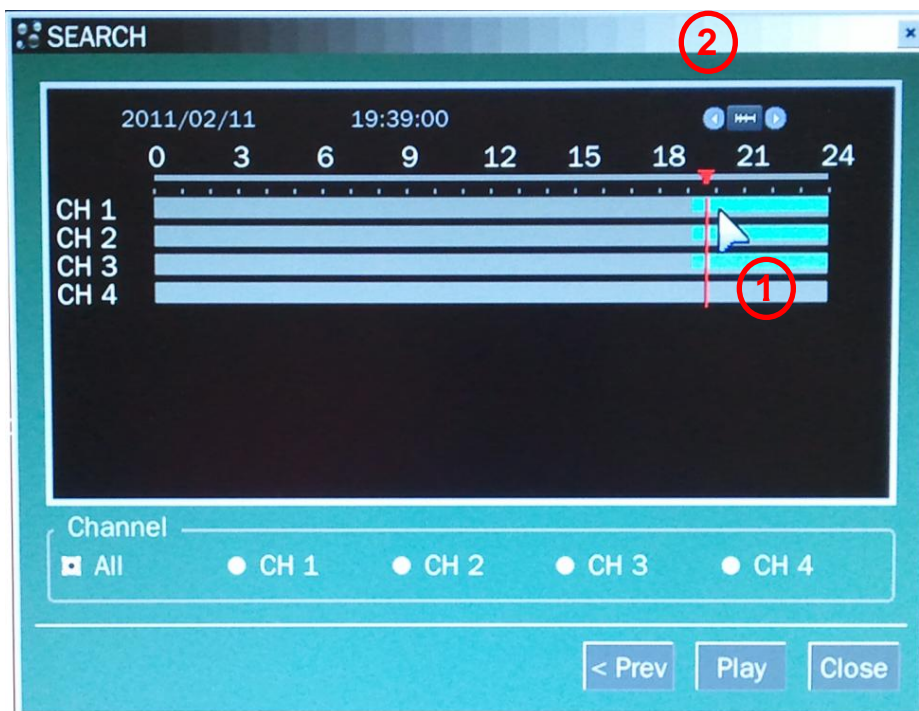

① 1 hour moving: 1-hour time bar(Mouse)/ F/REW and F/ADV button(Front key)

② 5 minute moving: ◀ 12:00:00 ▶ (Mouse)/ control button ◀ ▶ (Front key)

### 5-2-1. Time-Line Search

The TIME-LINE search window is used to find the stored video by using the time line bar.


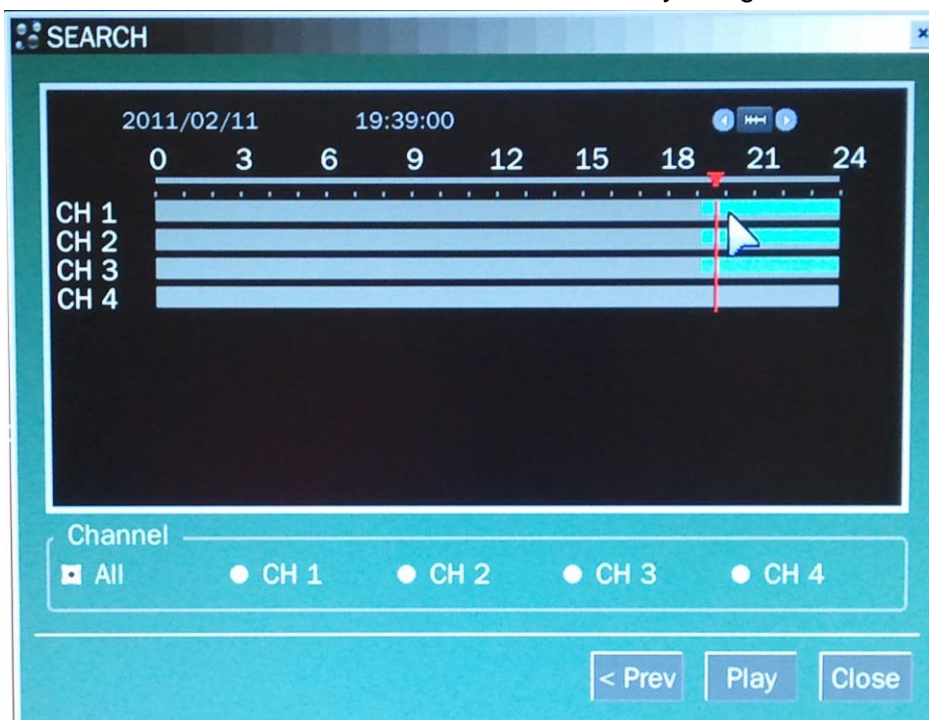


Figure 5.2.2. Time-Line Search

1. Select the date of the video to begin searching and navigate through the days using the control button (◀ ▲ ▶ ▼).
2. Once you have selected the date, press the SEL button to move to the time line search window.
3. Use the control button (◀ ▲ ▶ ▼) to select a time zone on the 24 hours time table.
4. Select All or a specific channel to search video clip on the time line bar using the control button (◀ ▲ ▶ ▼).
6. Once you select the channel, use the control button (◀ ▲ ▶ ▼) to move to the point you wish to start playing the video clip.
7. Once you have selected the time zone, press the SEL button to playback the recorded video.
8. Press the ESC to return to the SEARCH window.

### 5-2-2. Event Search

The Event Search window is used to find stored video. Three categories of search filters can be applied: DATE, CHANNEL and TYPE. Press SEL to select a value and move down to the next category and use the control button(◀ ▲ ▶ ▼) to move up to the categories you have previously entered. The ESC button will return the user to the previous screen.

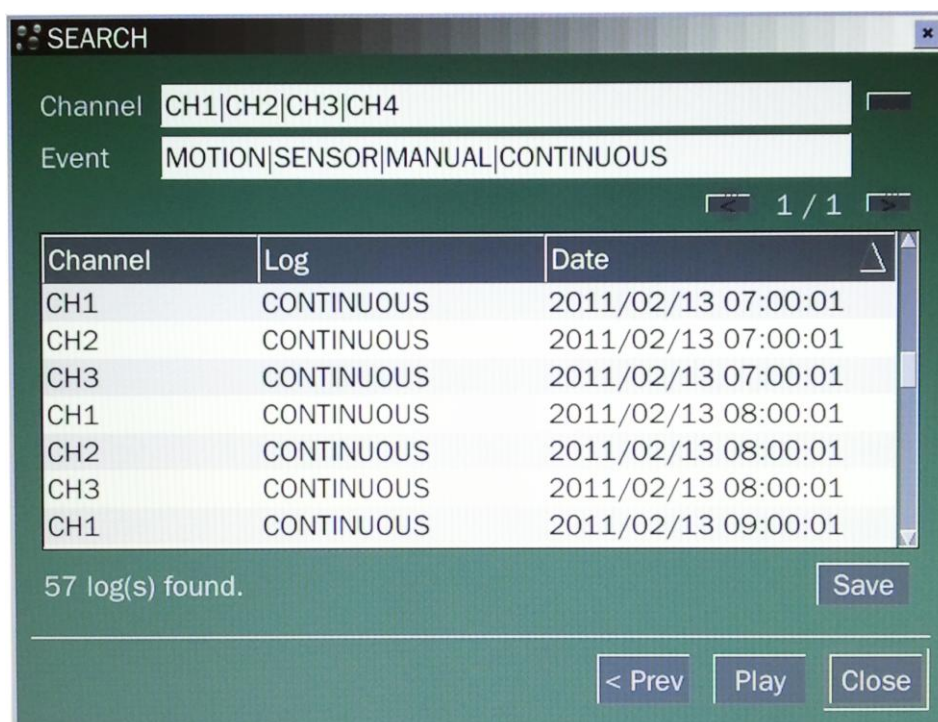

**Figure 5.2.3. Event Search Screen**

1. Select the date of the video to begin searching. Use the control button (◀ ▲ ▶ ▼) to navigate through the days.
2. Once you have selected the date, press SEL to move to the CHANNEL selector.
3. Use the control button (◀ ▲ ▶ ▼) to change the channel selection from ALL to any of the available channels.
4. Once you have selected the channel, press SEL to move to the TYPE selector.
5. Use the control button (◀ ▲ ▶ ▼) to change the type of recording to ALL, MOTION, SENSOR, MANUAL, or CONTINUOUS.

6. Once you have selected the type of recording to search for, press SEL to produce a list of instances that fit your search criteria.
7. Use the control button (◀ ▲ ▶ ▼) to scroll through the on-screen listings.
8. Use the control button (◀ ▲ ▶ ▼) to display a list of events that happened previous to or after the current selection.
9. Once the desired event has been selected, press SEL to start playing back the selected video.
10. Press the BACKUP button to launch the archiving function in playback mode.
11. Press the ESC to return to the SEARCH window.

### 5-2-3. Go To First Time

You can access the oldest recorded data on the DVR hard drive by selecting GO TO FIRST TIME on the SEARCH window. Press the ESC to return to the SEARCH window.

### 5-2-4. Go To Last Time

You can access the latest recorded data on the DVR hard drive by selecting GO TO LAST TME on the SEARCH window. Press the ESC to return to the SEARCH window.

### 5-2-5. Go To Specific Time

You can search for video data from a specific instance by setting the date and time in the GO TO search window. Use the control button (◀ ▲ ▶ ▼) to move through the date and time values in this menu. Use the control button (◀ ▲ ▶ ▼) to change the date and time value. Move the cursor to OK using the control button (◀ ▲ ▶ ▼) and press the SEL to playback the recorded video.

### 5-2-6. Log Search

You can access the LOG list search screen by selecting LOG on the SEARCH window.

Select a date using the control button (◀ ▲ ▶ ▼) and press SEL to open the LOG list from that date.

### 5-2-7. Archive Search

The ARCHIVE Search window is used to find previously stored video or images.

1. Select the date to begin searching and navigate through the days using the control button (◀ ▲ ▶ ▼).
2. Once you have selected the date, press SEL to open the list of stored data.
3. Use the control button (◀ ▲ ▶ ▼) to scroll through the on-screen listings.
4. Use the control button (◀ ▲ ▶ ▼) to display a list of stored events that happened previous to or after the current selection.
5. Once the desired event has been selected, press SEL to view the still image or the first frame of the selected video.
6. Press the BACKUP button to launch the archiving function in playback mode.
7. Press the ESC to return to the SEARCH window



### 5-3. Play mode

During playback of a recorded event, the mode changes from SEARCH to PLAY. While in PLAY mode, you may return to the SEARCH screen by pressing the ESC button.

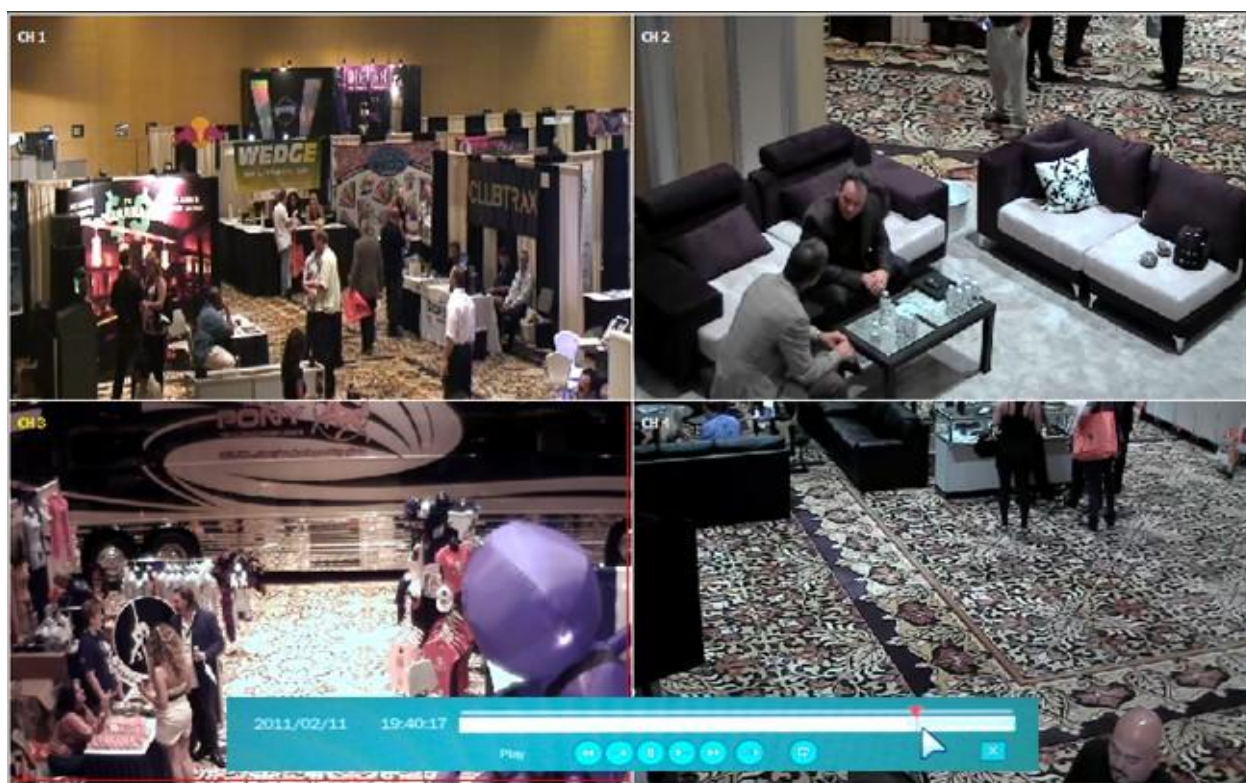
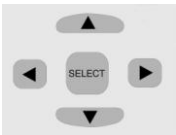


Figure 5.3.1. PLAY Mode Screen

Table 5.3.1. Button Functions in PLAY Mode

Button	Description
<b>ESC</b>	Return to the previous menu screen, search list, or exit menu
<b>◀◀ REW</b>	Press to rewind the footage at 1x, 2x, 4x, 8x, 16x and 32x speeds. Reverse playback speed is shown as REW 1x, 2x, 4x, 8x, 16x and 32x at the bottom right of the screen.
<b>◀◀ F/REW</b>	Jump/Step backward. – The playback position moves 60 seconds backward.
<b>PLAY/PAUSE</b>	Press to play or pause recorded video.
<b>F/ADV ▶▶</b>	Jump/Step forward –Playback position moves 60 seconds forward.
<b>FF ▶▶</b>	Press to fast forward the footage at 2x, 4x, 8x, 16x and 32x speeds. Playback speed is indicated as FF 2x, 4x, 8x, 16x and 32x at the bottom right of the screen.
	UP: 1CH, RIGHT: 2CH, DOWN: 3CH, and LEFT: 4CH to be highlighted UP: NO. 1, RIGHT: NO. 2, DOWN: NO. 3, and LEFT: NO. 4CH to input password
<b>ARCH</b>	Press the ARCH button to archive the video into HDD.

## 6. PTZ Control

To control the PTZ functions of the camera, select MENU and PTZ on the screen using the mouse or press the PTZ button on the front panel.



Figure 6.1.1. PTZ Control Screen


Table 6.1.1. Button Functions in PTZ Control

Item	Description
<b>PAN / TILT</b>	Select PAN/TILT using the control button (◀ ▲ ▶ ▼) and press SEL button. Adjust the tilt (UP/DOWN) / pan (LEFT/RIGHT) position using the control button (◀ ▲ ▶ ▼).
<b>ZOOM / FOCUS</b>	Select ZOOM/FOCUS using the control button (◀ ▲ ▶ ▼) and press SEL button. Adjust the zoom (UP/DOWN) / focus (LEFT/RIGHT) position using the control button (◀ ▲ ▶ ▼).
<b>INITIALIZE</b>	Initialize the PTZ settings of the selected camera.
<b>PRESET</b>	Select the PRESET and press the left key (◀) on the control button. Then, number input window will appear. Set the number (3 digits) using the number key and press the SEL to set the preset number for the current position. Press the right key (▶) on the control button and set the number (3 digits) to go to the preset number.
<b>TOUR</b>	Select the TOUR and press the right key (▶) on the control button. Then, number input window will appear. Set the number (1 digit) using the number key and press SEL to make the group number work. Press the left key (◀) on the control button to stop tour.

	User can set the preset number in the tour group of the OSD menu.
<b>OSD</b>	Select the OSD to enter the menu. Control keys are Right, Left, UP, Down, Select, Far (REW KEY), and Near (FF KEY). Press the ESC button to return to the main menu. Press the PTZ button to escape from the OSD menu.
<b>AUTOSCAN</b>	Press the right key (▶) on the control button to start auto scan Press the left key (◀) on the control button to stop auto scan.
<b>PTZ</b>	Press the PTZ button to escape from the OSD menu.
<b>ESC</b>	Press the ESC button to return to the main menu.
<b>NUMBER</b>	Available only on the TOUR and PRESET menu.

- **Preset/ Tour/ OSD/ Autoscan function are available on the specific model AP8777 and PMA-200.** (Select it in the NAME of PTZ setup menu)

**Table 6.1.2. Description of RS-485 Port**

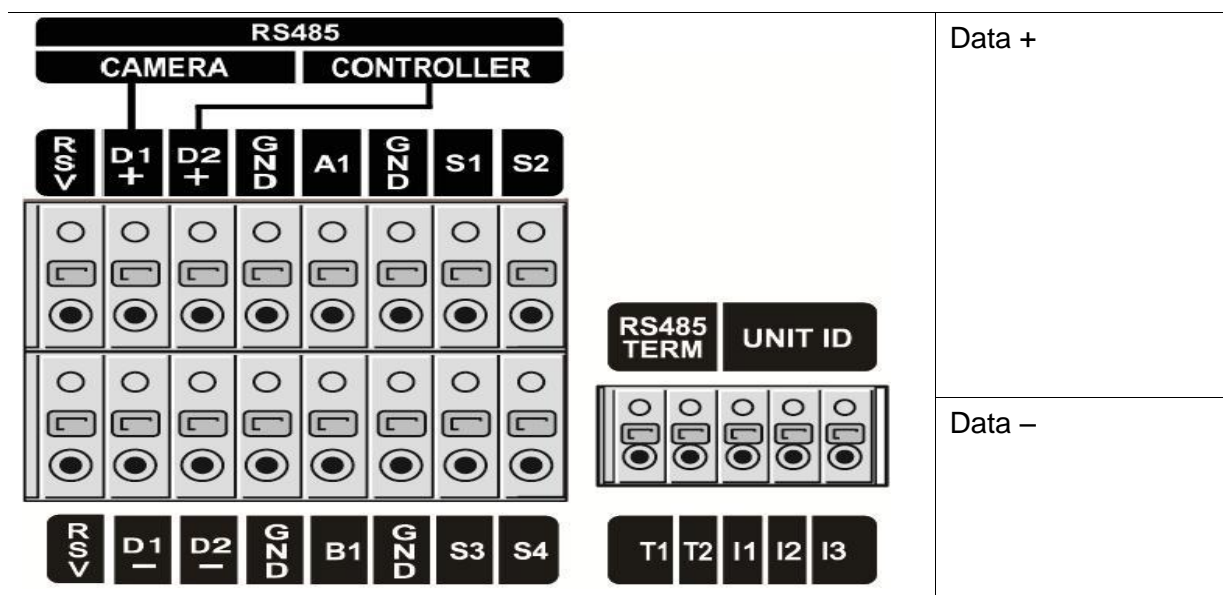




## 7. Back Up

### 7-1. Still Image Backup onto USB Flash Drive

Still images can be captured and archived onto the USB flash drive in live mode or while playing back recorded video.

In live mode, press the BACKUP button to launch the archive function or select MENU and BACK UP on the screen using the mouse.

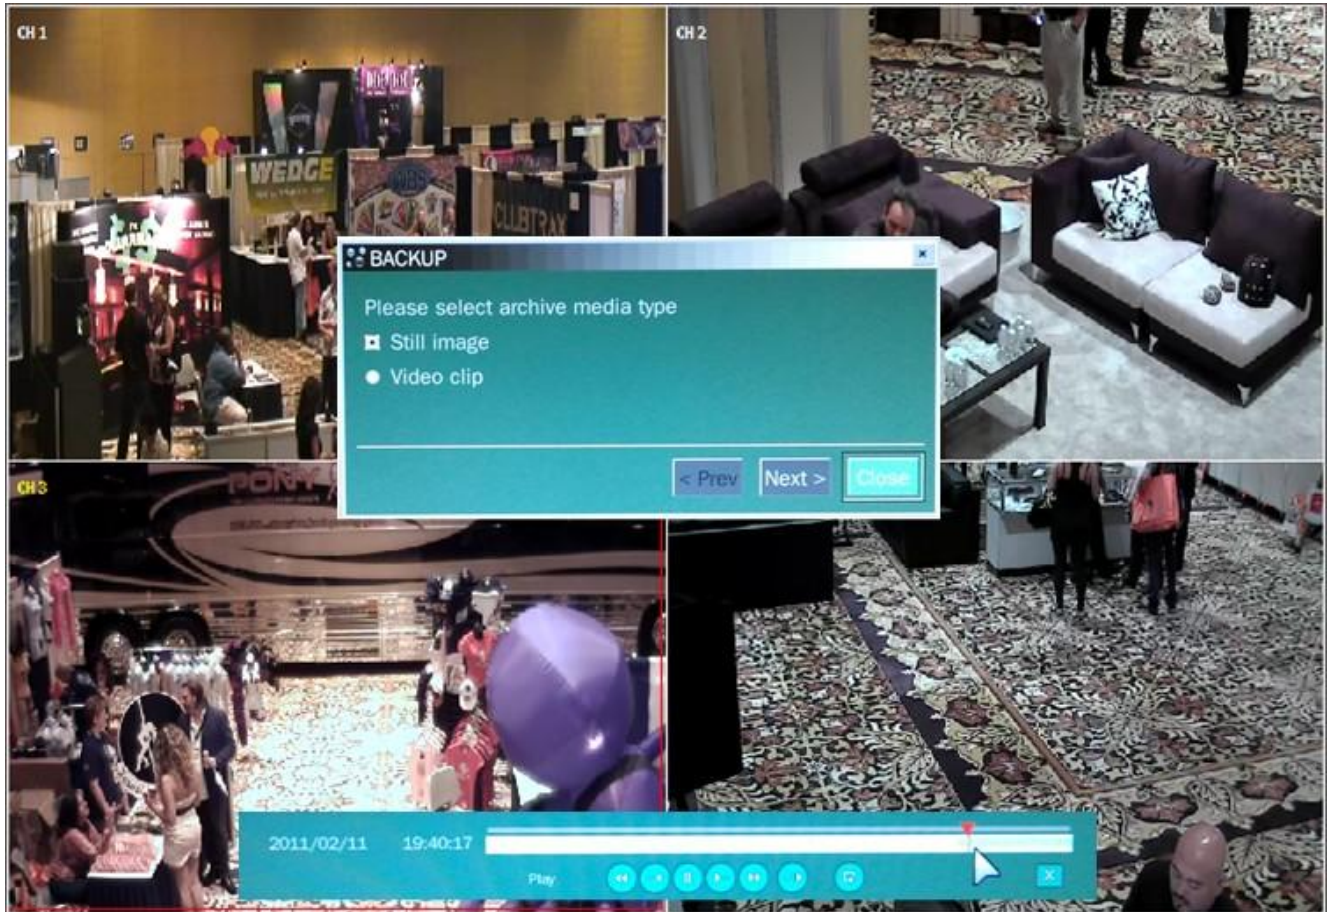

**Figure 7.1.1. Still Image Archiving and Backup Screen**


1. When you press BACKUP button, the archiving screen will display as Figure 7.1.1.
2. And the DVR will ask which media you will take for archiving.
3. Once you select the media, the system will start to archive the data to the selected media.

### 7-2. Video Backup onto USB Flash Drive

Video can be captured and archived onto the USB flash drive while playing back recorded video.

In playback mode, press the BACKUP button to launch the archiving function.

1. When you press BACKUP button, the DVR will ask whether to archive a Still Image or Video clip.
2. If the user selects VIDEO, the DVR will ask which media you will take for archiving.
3. If the user selects VIDEO, the DVR will ask for the setting of the archiving duration.
4. Once you select the media, the system will start to archive the data to the selected media.

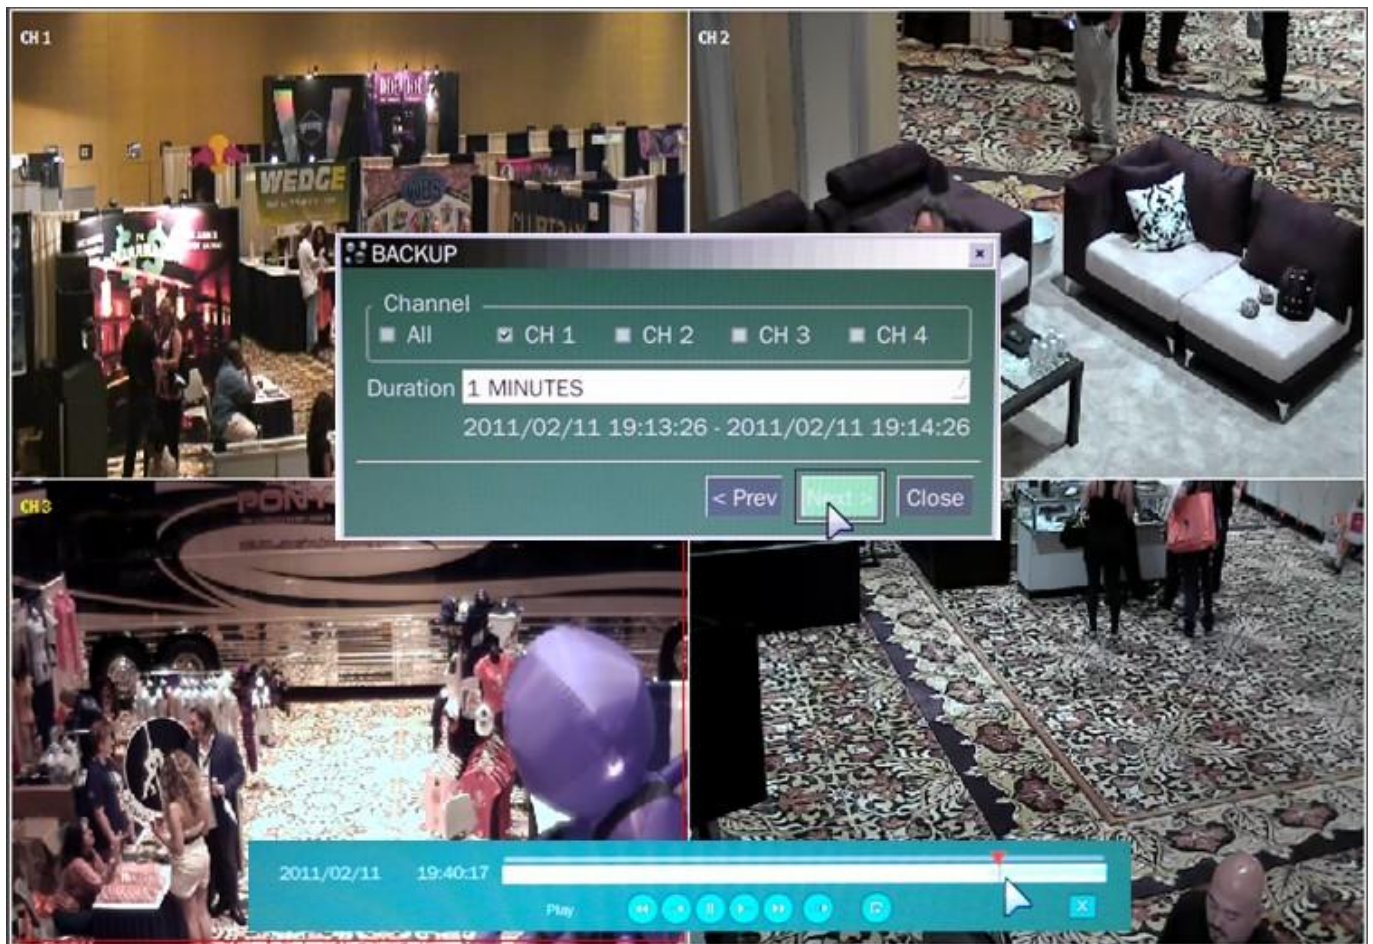

**Figure 7.2.1. Video Archiving and Backup Screen**

The DVR will convert the corresponding portion of the video into an AVI file.

### 7-3. Transferring Still Images or Video from the ARCHIVE List

The stored data onto hard drive will be found in the ARCHIVE list in SEARCH window.

User can back up still images or video into the storage device from the ARCHIVE list.

1. Select the date to begin searching and navigate through the days using the control button (◀ ▲ ▶ ▼).
2. Once you have selected the date, press SEL to open the list of stored data.
3. Use the control button (◀ ▲ ▶ ▼) to scroll through the on-screen listings.
4. Select a list of stored events that happened previous to or after the current selection.
5. Once the desired event has been selected, press SEL to view the still image or the first frame of the selected video.
6. Press the BACKUP button to launch the archiving function in playback mode.
7. Press the ESC to return to the SEARCH window.

### 7-4. Playback of Backup Video

- **HD PLAYER:** Backup video can be played back by the HD Player that the DVR copies on USB flash drive with video.



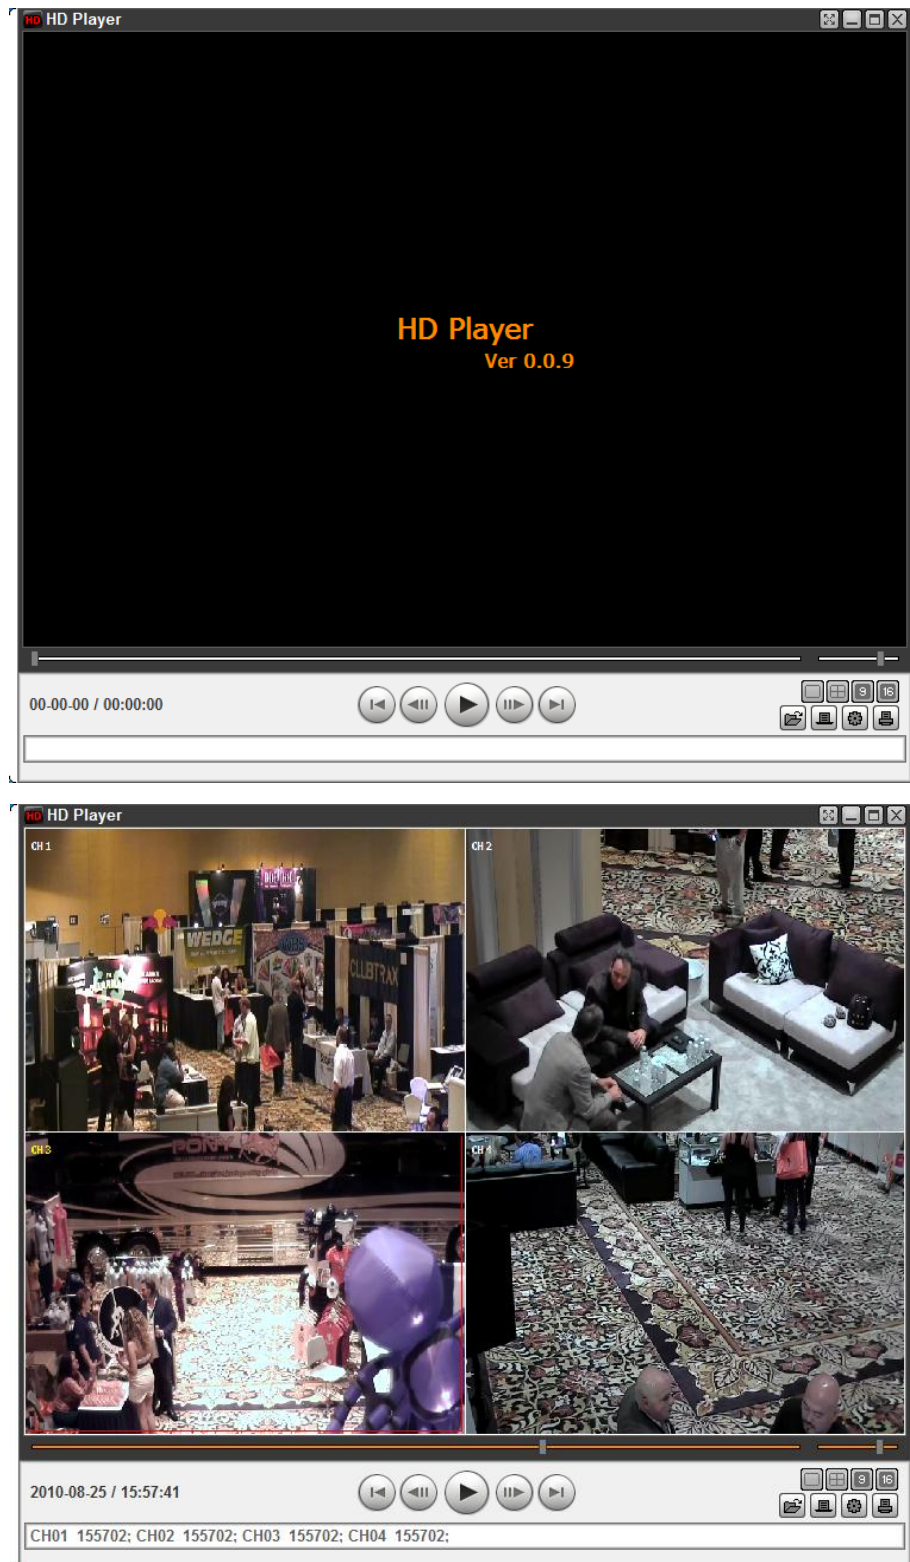


Figure 7.4.1. HD Player

## 8. Upgrading Firmware

In order to upgrade, the firmware upgrade file must first be downloaded and copied into the USB flash drive. Create a new folder in the USB flash drive and name it “upgrade”. Copy the firmware upgrade file into the “upgrade” folder.

---

### NOTICE

The folder on the USB flash drive must be named **“upgrade”**.

After the firmware upgrade file is copied into the USB flash drive, connect the USB flash drive to the USB port on the front panel and do the followings:

---

1. Extra the Firmware Files into the “upgrade” folder in the USB flash drive.
2. Power Off the DVR and insert the USB flash drive into the DVR.
3. Power On the DVR with the USB flash drive insert into the DVR.
4. DVR will prompt “Upgrading...” logo when the firmware is being upgraded.



5. Once the upgrade is completed, the DVR will reboot.



## 9. Network Access Using the Single-Site Network Viewer

The DVR provides a live remote monitoring feature. Remote monitoring requires installation of the network viewer on your PC.

### NOTICE


In a high bandwidth network, a maximum of four users can access one DVR simultaneously.  
In a low bandwidth network it is recommended that only one user access the DVR at a time.

### 9-1. PC Requirements


- CPU: Intel Pentium IV 1.4Ghz or higher
- Memory: 512MB (1G or higher is recommended.)
- VGA memory: 16MB (64MB or higher is recommended.)
- Resolution: 1024x768
- O/S: Windows 2000, XP Professional, XP home
- Direct X: DirectX 8.1 or higher

### 9-2. Installing the Network Software


1. Double-click “SpecoTech\_HDcctv\_Single\_Client(XXXX).exe” int the provided CD
2. Select a destination folder and click “Next”.

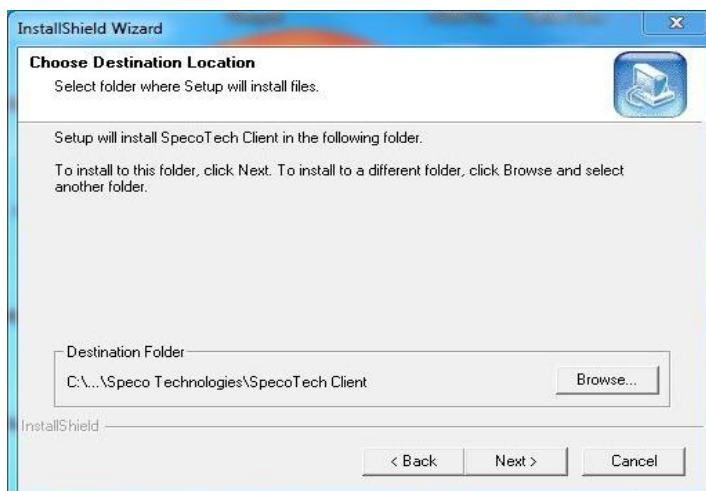

3. Select the program folder and click “Next”.

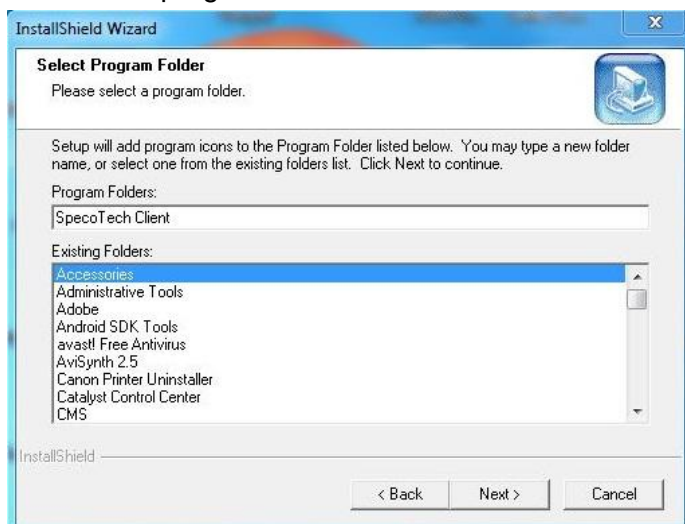

4. The setup status screen is displayed.

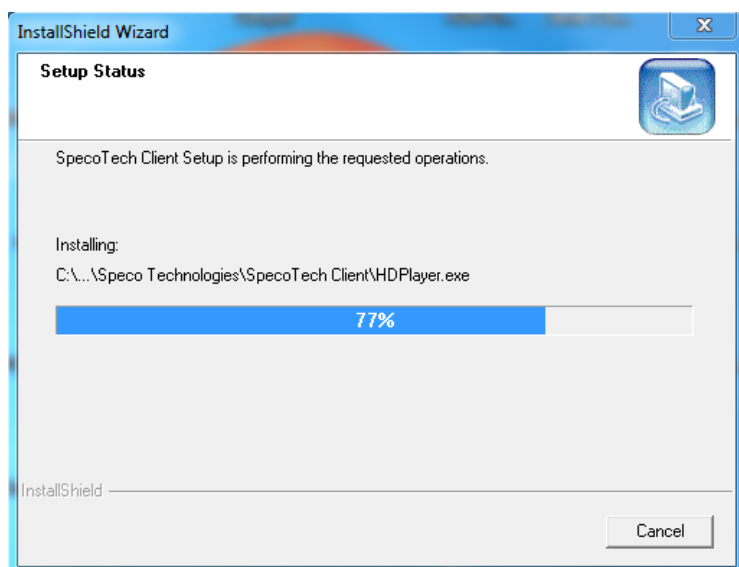

After the installation is completed, “**SpecoTech Client**” icon is displayed on the desktop.



### 9-3. Live Monitoring Mode and Functions.



Button	Function	Description
	<b>DATE &amp; TIME</b>	Displays the current date and time.
	<b>CONNECT/DISCONNECT</b>	Connect/disconnect network connection..
	<b>SEARCH</b>	Switches the live mode to search mode.
	<b>DISPLAY MODE</b>	Select a channel and screen display mode.
	<b>PAN/TILT/ZOOM/ FOCUS</b>	Control the PAN/TILT/ZOOM/FOCUS features on the remote camera.
	<b>CAPTURE</b>	Capture a still image from live screen.
	<b>PLAY/PAUSE</b>	Play/pause live video.
	<b>ALARM</b>	The ON/OFF button of the alarm output of the DVR. When an alarm of the DVR is output, this button becomes Red.
	<b>SETUP</b>	Display the setup screen of the network viewer.
	<b>HDD USAGE</b>	DVR HDD storage Indicator.
	<b>NETWORK BANDWIDTH</b>	Shows the transferred frames and network bandwidth.
	<b>AUDIO</b>	Adjust the volume. The audio can be turned on or off by clicking the audio icon.
	<b>LOG WINDOW</b>	


### Operations of the display mode of the main screen

- Single channel display - Click the one of channel button or double-click the channel screen.

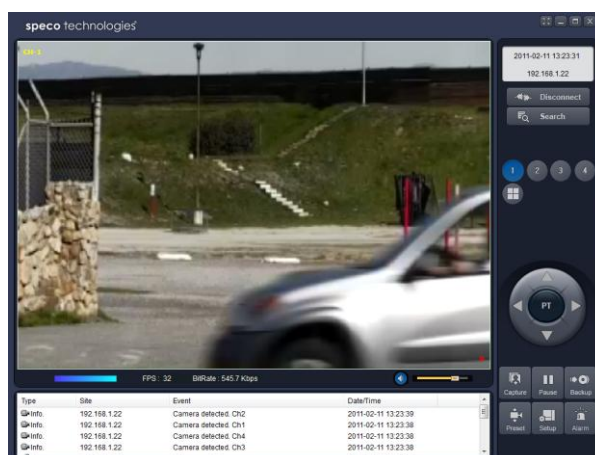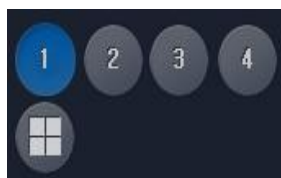




- QUAD/-screen display - Click the QUAD button to switch to quad-screen display

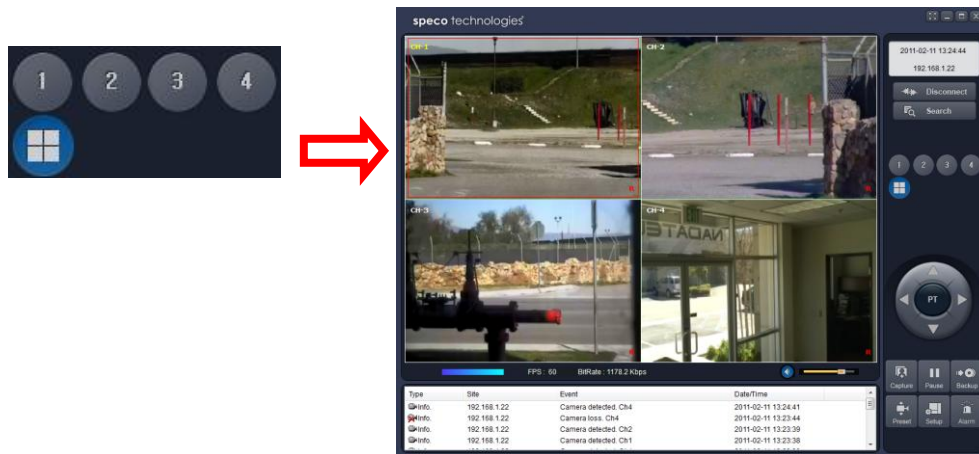


- Full screen display - Click the right button of the mouse and choose the Full Screen button to display only screen and hidden the operation panel.

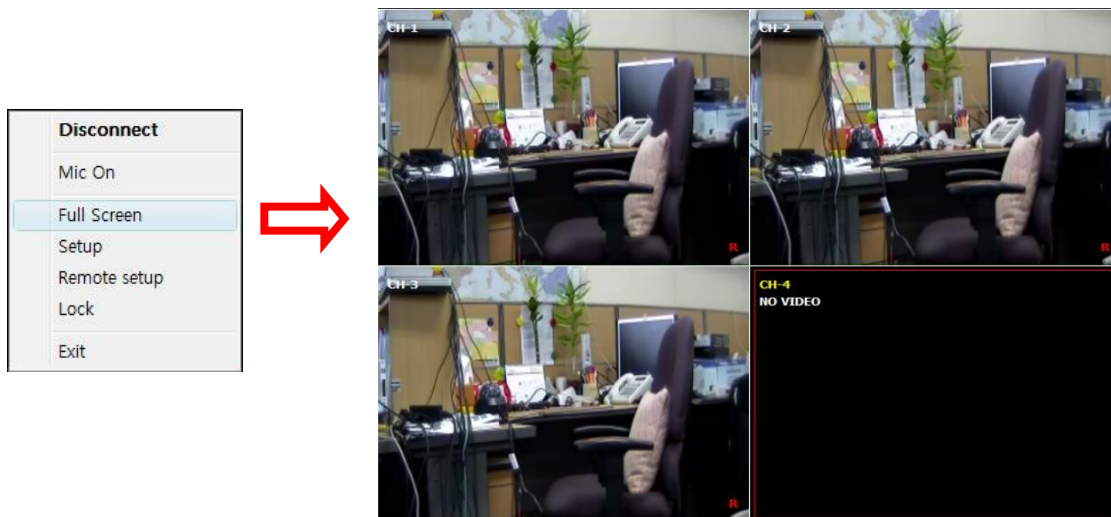

### Image Capture of Live Screen

Still-image of live screen can be captured and saved as BMP or JPEG file.

1. Click the channel to be captured. Then the channel screen is surrounded with a red line.
2. Click the CAPTURE button. Then the IMAGE CAPTURE dialog is displayed.

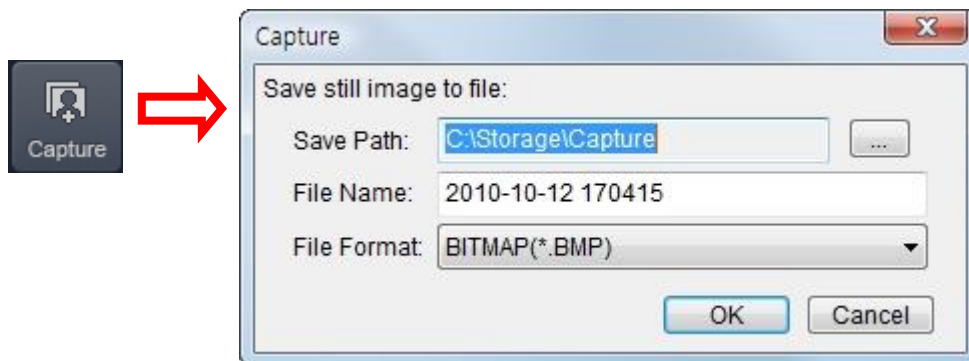

3. Set the conditions and click OK button. Then still-image is saved.






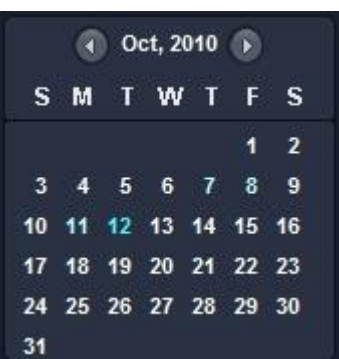
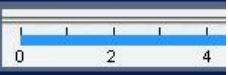




## 9-4. Bi-Directional Audio

The UMS Client allows for bi directional audio between the client and a dvr unit. On the PC, to use bi directional audio, you will need a sound card of handling a microphone and speakers. On the dvr side, you will need to connect a microphone to the audio in connection, and a pair of amplified speakers to the audio out connection.

## 9-5. Remote Search Mode and Functions



Button	Function	Description
	<b>DATE &amp; TIME</b>	Displays the recording time of the data selected on the time bar at the bottom of the main user interface.
	<b>DISCONNECT</b>	Disconnect network connection..
	<b>LIVE</b>	Switches the search mode to live mode.
	<b>CAPTURE</b>	Capture a still image from live screen.

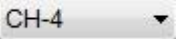	<b>MARK IN</b>	Set the start time for video backup.
	<b>MARK OUT</b>	Set the ending time for video backup.
	<b>BACKUP</b>	Backup the selected recorded video as AVI format.
	<b>SEARCH CALENDAR</b>	The calendar shows dates with recorded video in a light blue and the selected date in dark blue.
	<b>TIMELINE BAR</b>	The timeline shows recorded data in dark blue on the bar.
	<b>PLAYBACK BUTTON</b>	The playback buttons.
	<b>DISPLAY MODE</b>	Select a channel and screen display mode.
	<b>CHANNEL SELECT</b>	Show on the screen that you select
	<b>SPECIFIC TIME</b>	Select Specific Time with Hour or Minute

### Searching and Playing Video in the Remote DVR

Video recorded in the remote DVR or Video recorded on the PC can be searched and played back.

1. Connect the network to the remote DVR and press SEARCH button. Then the mode is changed from the live mode to the search mode.

 


- Searching the video recorded in the remote DVR: Connect the network to the DVR..
- Searching the video recorded in the PC: Do not connect the network to the DVR.


2. Select the date to search the video.



3. Drag the slid on the time scale and drop it between 0 to 24.




4. Press the PLAY button. Then the video recorded in the remote DVR is played back per each channel that you choose by HD image...

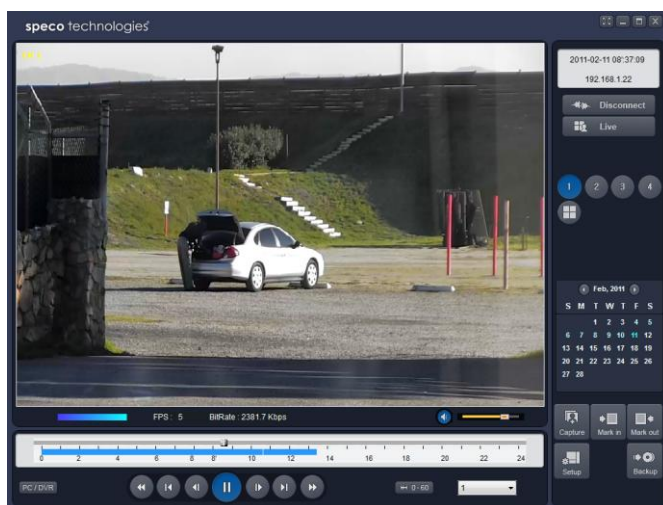

## Backup of Video in the Remote DVR

Video recorded in the remote DVR cab be backed up on the PC HDD as AVI format.

 
1. Connect the network to the remote DVR and play the video recorded in the remote DVR.
2. Drag the slid on the time scale and drop to the start time for video backup and press the MARK IN button.



3. Drag the slid on the time scale and drop to the end time for video backup and press the MARK OUT button. Then the marked time is displayed in dark green.




4. AVI Backup dialog is displayed. Click the OK button. Then the marked video is backed up.

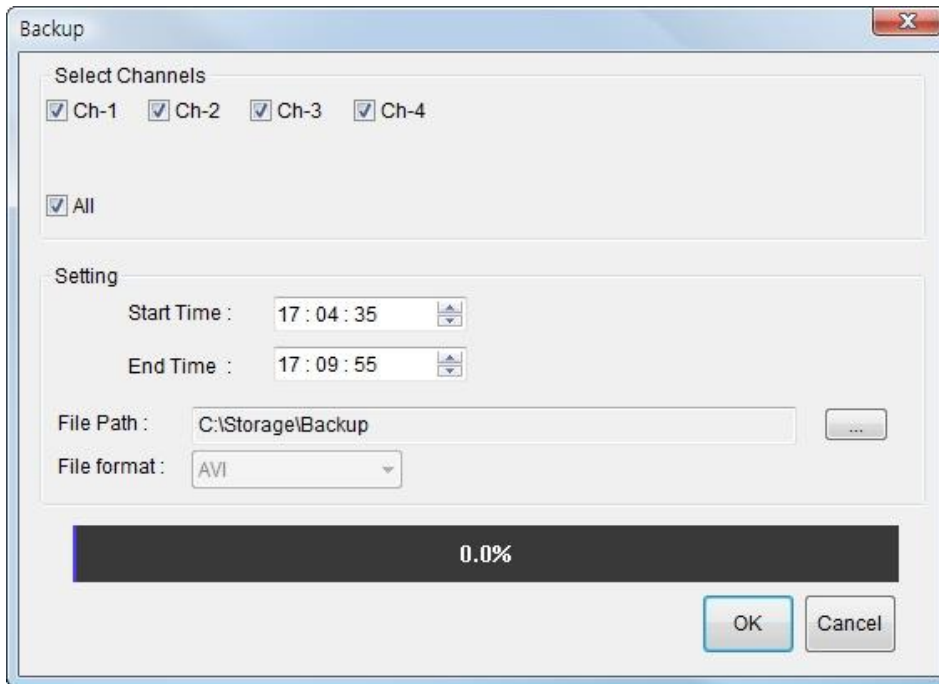

- Start time / Stop time: Backup time can be changed.
- File path: Shows the folder that the backup file is recorded.
- Channel: Shows backup channel..

## 9-6. PC System Configuration

Click the SETUP button. Then the Setup dialog is displayed.

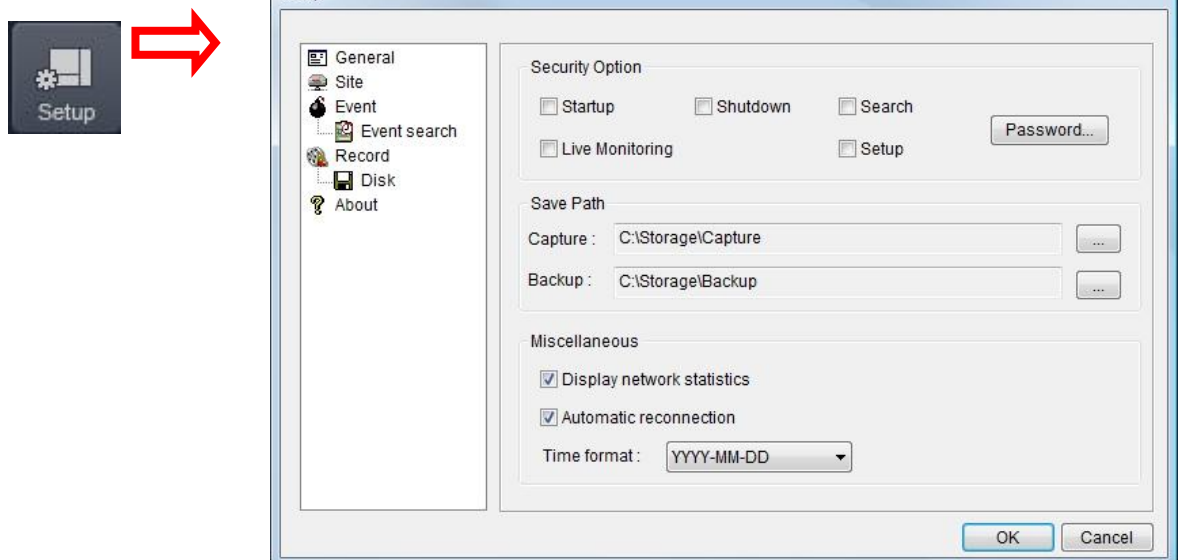

### Setting General


Set the Security Option, Save Path, and Miscellaneous.

- **Security Option:** Set a password for security options. When you access any of the selected functions, you will need to enter the password.
- **Save Path:** Specify the location to record for backup and still image capture.
- **Automatic reconnection:** If a user selects this function, the client S/W will automatically try to connect to the previously connected IP address if the network connection is lost.

- **Display network statistics:** If a user selects this function, the client S/W will display network status, Bit rate and Frame rate.
- **Time Format:** Change the mode the Client software displays the time.


## Setting Site

The remote DVRs can be added, modified, and removed.

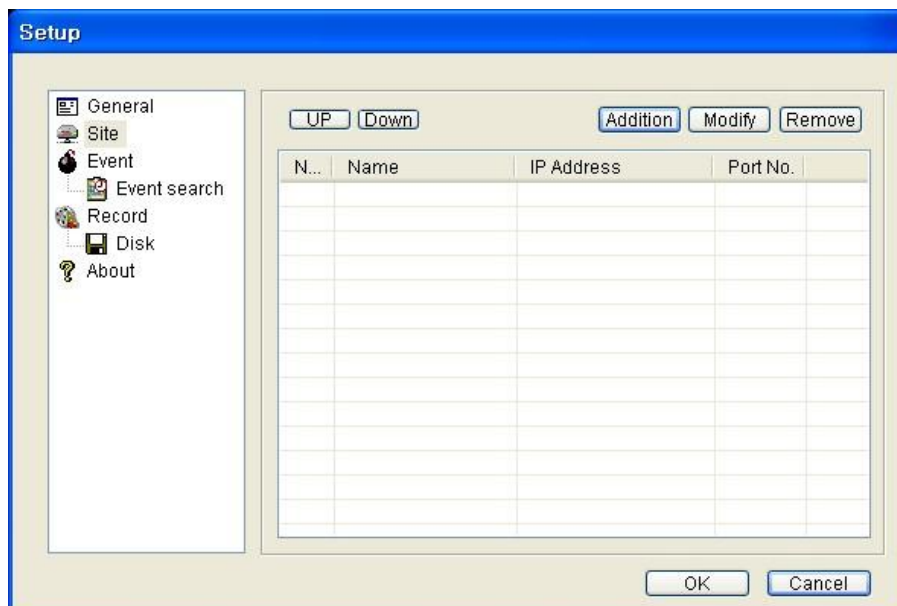


## Setting Event

Set the record path and the size of local disk space for the log files.

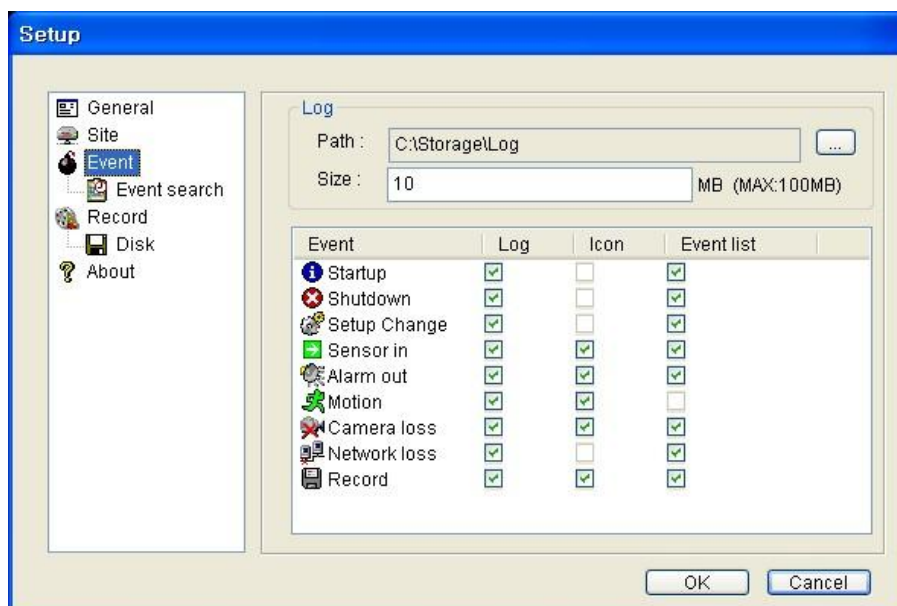


- **LOG** – Select to save event log into 'log file'.
- **ICON** – Select to display the event on live video.
- **EVENT LIST** – Select to show the event in the 'Event List' window of live mode.

Search and check the recorded log data.

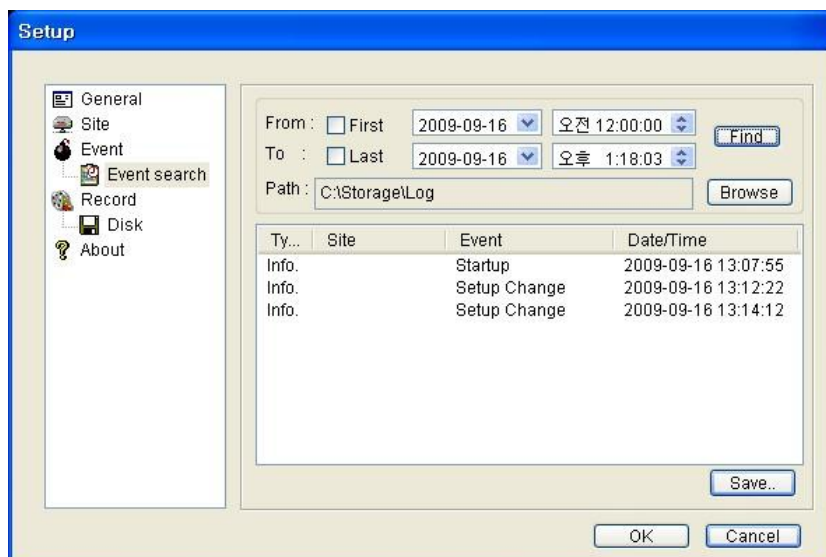


## Setting Record

Set the recording conditions and select channels to record.

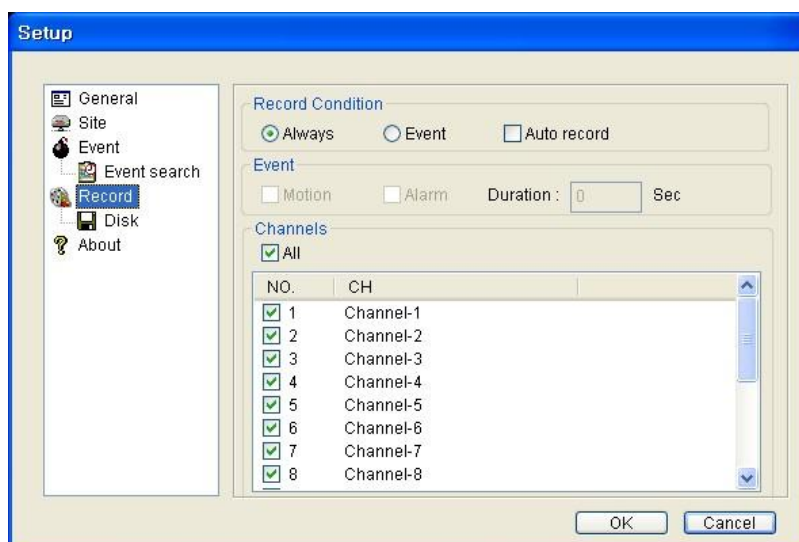

Select the local disk to use and the amount of disk space you want to allow the program to use for recording.

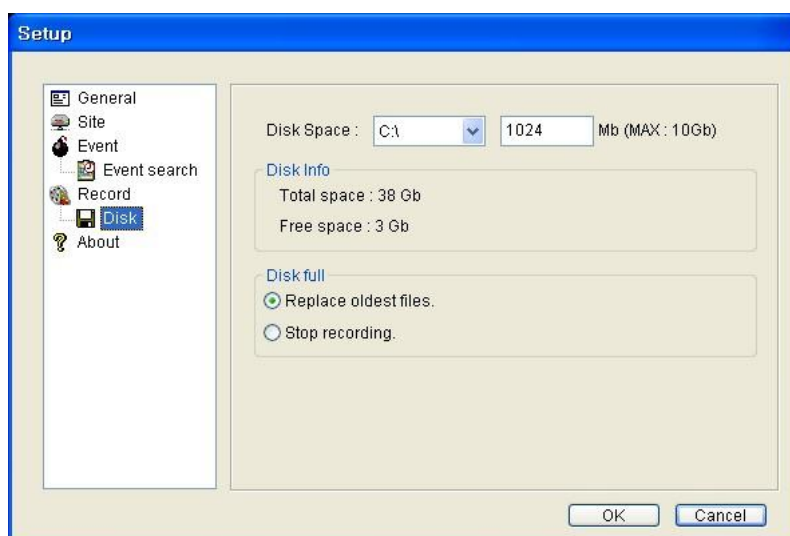




## 10. Network Access Using the Multi-Sites Network Viewer

### 10-1. Installing the Network Software


1. Insert the provided CD in the CD drive and double-click "SpecoTech\_HDcctv\_Multi\_Client (XXXX).exe"




2. Select a destination folder and click "Next".

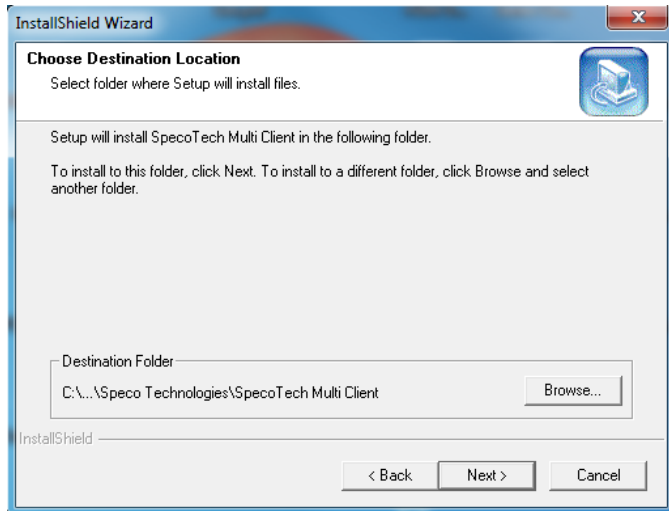

3. Select the program folder and click "Next".

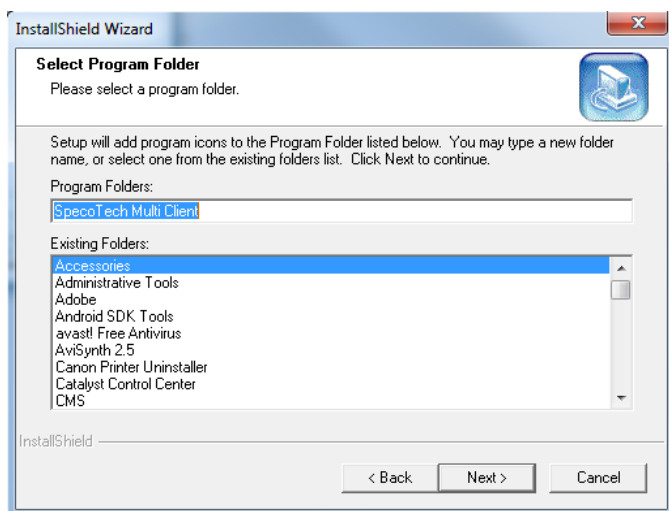

4. The setup status screen is displayed.

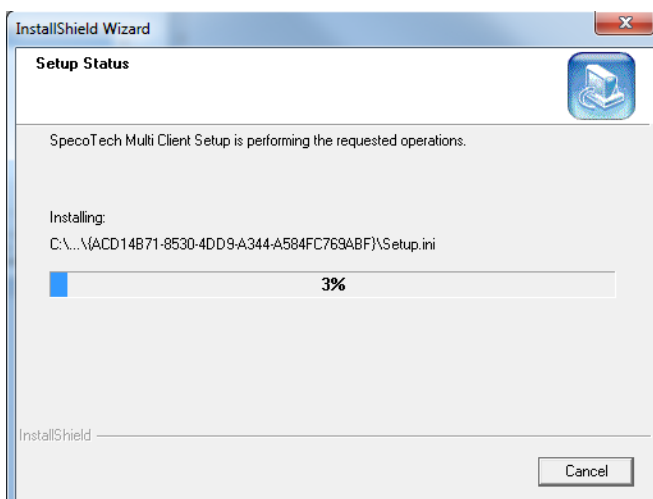

5. After the installation is completed, “SpecoTech Multi Client” icon displays on the desktop screen.





10-2. Live Window










 















When installation is completed, double click the “SpecoTech Multi Client” icon on your desktop to start the program.

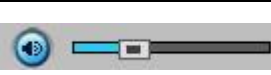

10-2-1. Main user interface

 

10-2-2. Control buttons

Button	Description
 LOCAL PLAYBACK	Click this icon to run a playback window to search and play videos that are recorded in local PC.
 REMOTE PLAYBACK	Click this icon to run a playback window to search and play videos that are recorded in remote DVR.

	<p> THUMBNAIL REFRESH: Click this icon to refresh and renew thumbnail image of every connected site.</p> <p> SITE ADDITION: Click this icon to open 'Site Addition' window.</p> <p> SITE DELETE: Click this icon to delete site from the index window, after disconnect a site.</p> <p> SITE MODIFY: Select the site from the index window and click this icon to open 'Site Modify' window.</p>
<p>SITE MANAGEMENT</p>	
 CONNECT	<p>Click this icon to connect the selected site/sites.</p>
 DISCONNECT	<p>Click this icon to disconnect the selected site/sites.</p>
 SETUP	<p>Click this icon to setup configuration of UMS MULTI CLIENT.</p>
 CAPTURE	<p>Click this icon to capture a still image</p>
 EVENT LIST	
 PAUSE	<p>Click this icon to play/pause live video.</p>
 ALARM ON	
 RECORD ON	<p>Enable or disable recording of live video to local disk which has set in setup menu.</p>
 AUDIO	<p>Use the volume control bar to set the audio level.</p>
 MIC	<p>Use the micro phone volume control bar to set the micro phone level.</p>
	<p>User can control PAN/TILT &amp; ZOON/FOCUS.</p> <p>   PAN left /right             TILT up/down         </p> <p>   ZOOM in/out             FOCUS in/out         </p> <p> Preset</p>

 CHANNEL SPLIT	To select the numbers of display channel/channels (Single, quad, 9 channels, and 16 channels) of highlighted site.
 DVR SITE SPLIT	To select the numbers of DVR/DVRs (1 DVR, 4 DVRs, 9 DVRs, 16 DVRs) on main display screen.


### 10-3. Search and Playback Window

#### 10-3-1. Main user interface

You can access to search window by clicking the search icon (Local Playback / Remote Playback) on the upper left of Live Window.




If the software prompts for a password, enter the password as below.

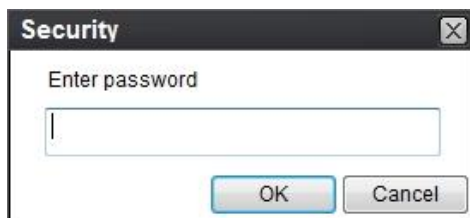

If you found this window then should have to setup the password at the setup menu.



Click this button and click the password icon as bellow.

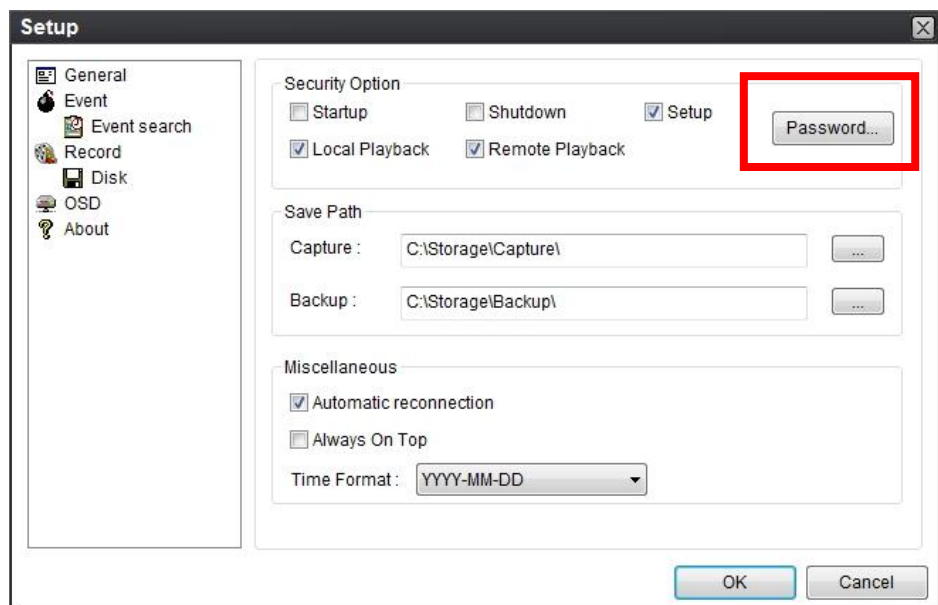

Insert new password and confirm password.


**Password Change**

Old Password:



New Password:



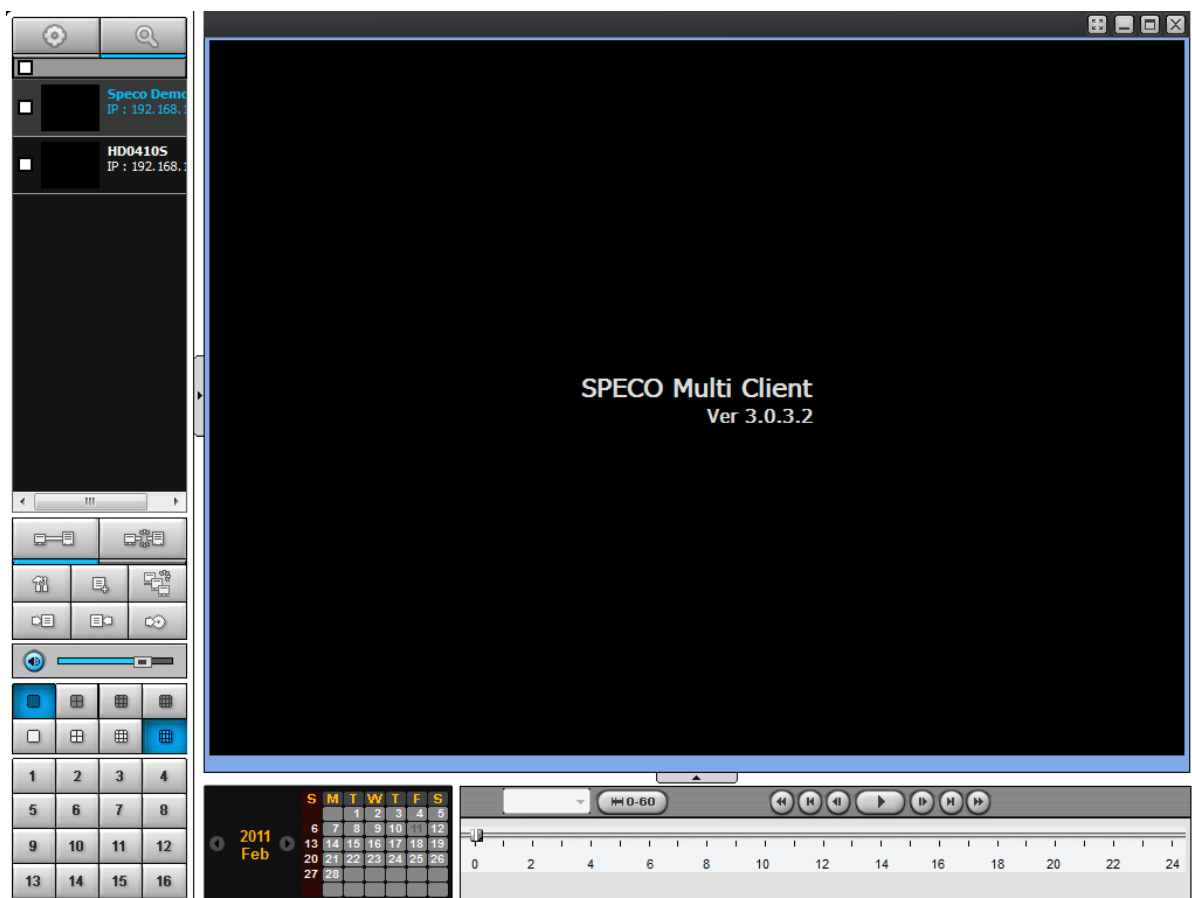









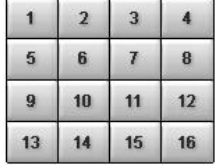
Confirm Password:

OK Cancel





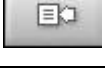



### 10-3-2. Main control panel

Button	Description
 LOCAL PLAYBACK	Click this icon to run a playback window to search and play videos that are recorded in local PC.
 REMOTE PLAYBACK	Click this icon to run a playback window to search and play videos that are recorded in remote DVR.

	<p>Directory window shows site/sites that are pre-registered.</p>
 CONNECT	<p>Click this icon to connect the selected site/sites.</p>
 DISCONNECT	<p>Click this icon to disconnect the selected site/sites.</p>
 SETUP	<p>Click this icon to setup configuration of UMS MULTI CLIENT.</p>
 CAPTURE	<p>Click this icon to capture a still image.</p>
 EVENT LIST	
 MARK IN	<p>Click this icon to set the beginning time for backup of the recorded video in AVI format.</p>
 MARK OUT	<p>Click this icon to set the ending time for backup of the recorded video in AVI format.</p>
 BACKUP	<p>Click this icon to backup the recorded video in AVI format.</p>
 AUDIO	<p>Use the volume control bar to set the audio level.</p>
 <p>DVR SITE SPLIT</p>	<p>To select the numbers of DVR/DVRs (1 DVR, 4 DVRs, 9 DVRs, 16 DVRs) on main display screen.</p>
 <p>CHANNEL SPLIT</p>	<p>To select the numbers of display channel/channels (Single, quad, 9 channels, and 16 channels) of highlighted site.</p>
	<p>To select the channel to playback.</p>

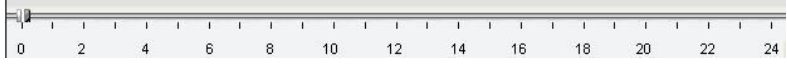


	<p>The calendar shows dates with recorded video in color.</p>
	<p>To display the recorded data of selected channel or all channels on a time line scale.</p>
	<p>To change a time line scale from 24 hours to 60 minutes or vise versa.</p>   <p>The timeline shows recorded data in color on the bar. You can adjust the time line scale and move it to the time you wish to playback. Then click the play icon to display the recorded video.</p>
	<p>Playback buttons.</p>

## 10-4. Setup

Click the setup icon



to setup the configuration of UMS Multi Client software. The Setup window displays.

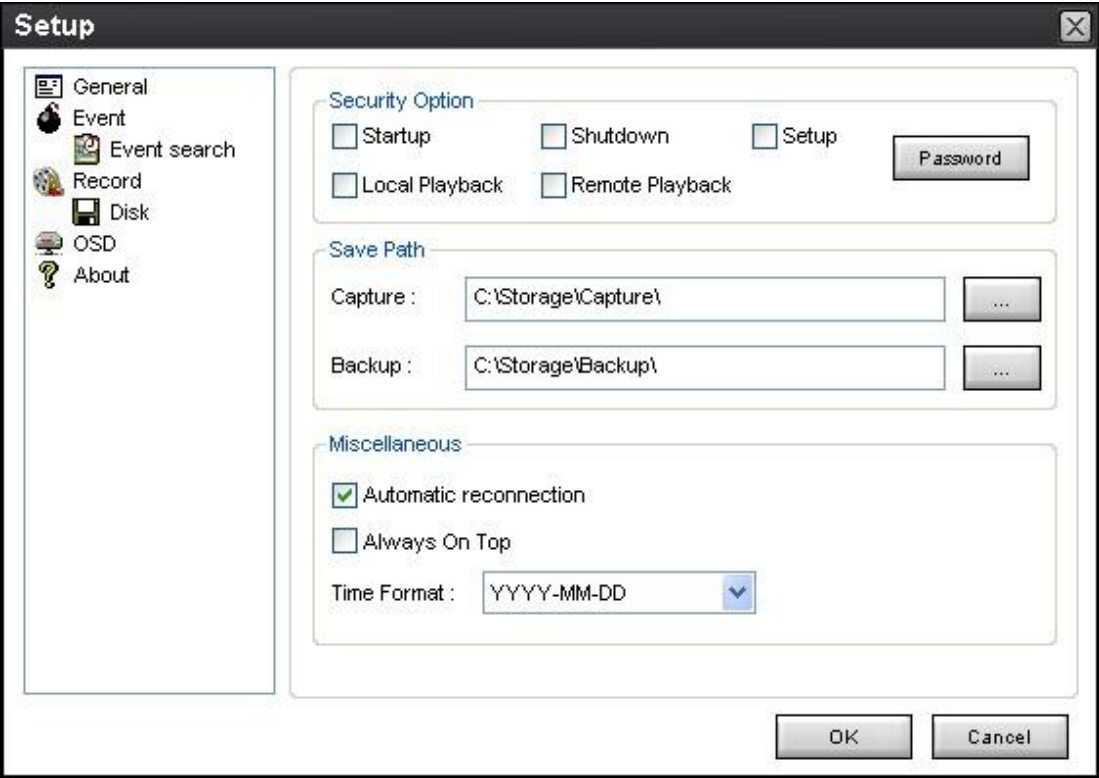

The Setup window is titled "Setup" and contains a sidebar with the following options: General, Event, Event search, Record, Disk, OSD, and About. The main area is divided into three sections:

- Security Option:**
  - ☐ Startup
  - ☐ Shutdown
  - ☐ Setup
  - ☐ Local Playback
  - ☐ Remote Playback
  - Password:
- Save Path:**
  - Capture:
  - Backup:
- Miscellaneous:**
  - ☒ Automatic reconnection
  - ☐ Always On Top
  - Time Format:

At the bottom right, there are  and  buttons.

#### 10-4-1. General

##### 10-4-1-1. Security Option: Set a password for security options.

Select security options and set a password.

Then when you access any of selected functions, you need to enter the password.

You can also set the save path for capturing and backup.

##### 10-4-1-2. Save Path: Specify the location to save captured still image for Capture and Backup data.

##### 10-4-1-3. Miscellaneous

**Automatic reconnection:** If a user selects this function, client S/W will automatically try to connect the finally connected IP address, after the network is disconnected.

**Always On Top:**


**Time Format:** Change the way the Client software displays the time.

The screenshot shows a 'Setup' dialog box with a sidebar on the left containing icons and labels for 'General', 'Event', 'Event search', 'Record', 'Disk', 'OSD', and 'About'. The main area is divided into three sections: 'Security Option' with checkboxes for 'Startup', 'Shutdown', 'Setup', 'Local Playback', and 'Remote Playback', and a 'Password' button; 'Save Path' with text boxes for 'Capture' (C:\Storage\Capture\) and 'Backup' (C:\Storage\Backup\), each with a browse button (...); and 'Miscellaneous' with a checked 'Automatic reconnection' checkbox, an unchecked 'Always On Top' checkbox, and a 'Time Format' dropdown menu set to 'YYYY-MM-DD'. 'OK' and 'Cancel' buttons are at the bottom right.


#### 10-4-2. Event

Event log can be archived and searched.

**10-4-2-1. Archiving Event Log:** Specify the location to save event logs and select event to archive.

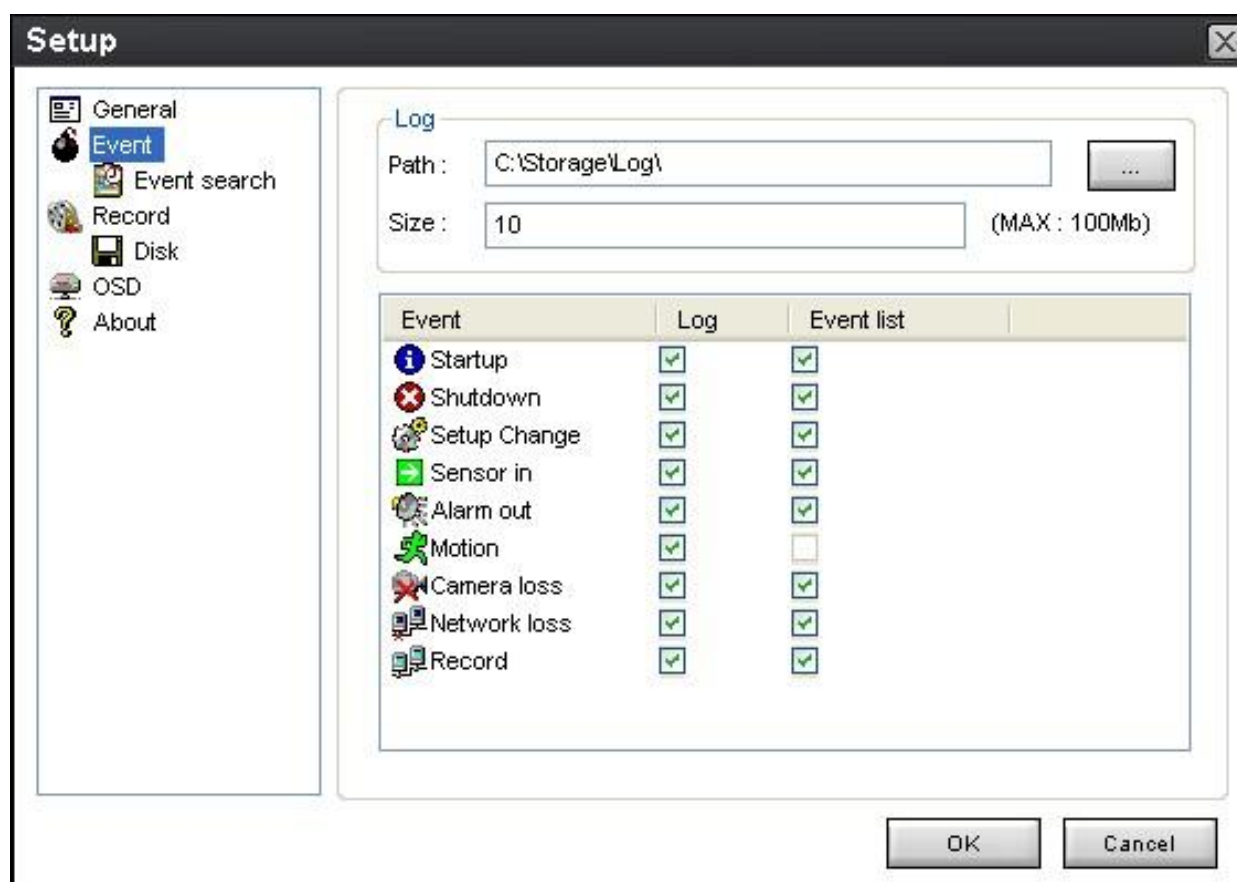

**10-4-2-2. Archiving Event Log:** Event log can be searched from selected time.

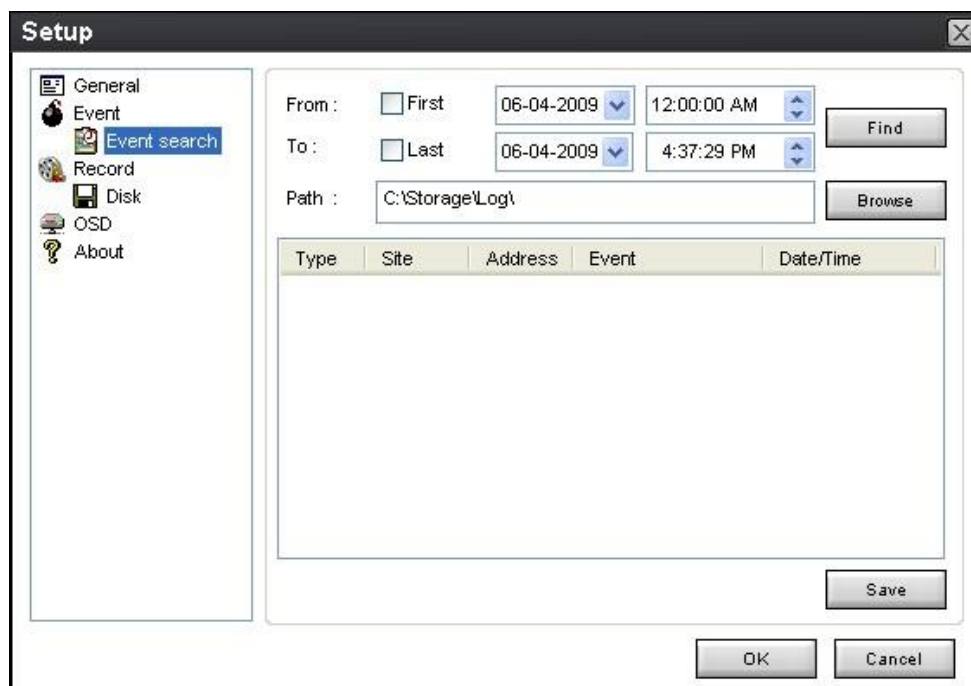

### 10-4-3. Record

**10-4-3-1. Record Setup:** You can set the recording conditions for Always, Event, or Auto record. And you can also select target DVR/DVRs and channel/channels.

When you set the recording condition to event, you can set event for motion or alarm with duration.

**Setup**

**General**  
Event  
Event search  
Record  
Disk  
OSD  
About

**Record Condition**  
☒ Always ☐ Event ☐ Auto record

**Event**  
☐ Motion ☐ Alarm Duration :  Sec

**Channel**  
Site :  ☒ All site  
☒ All

NO.	CH
<input checked="" type="checkbox"/> 1	Channel-1
<input checked="" type="checkbox"/> 2	Channel-2
<input checked="" type="checkbox"/> 3	Channel-3
<input checked="" type="checkbox"/> 4	Channel-4
<input checked="" type="checkbox"/> 5	Channel-5
<input checked="" type="checkbox"/> 6	Channel-6

OK Cancel

**10-4-3-2. Record Local Storage Setup:** You can select the local disk to use and the amount of disk space you want to allow the program to use for recording. You can also select the option to overwrite data or stop recording when the maximum amount of disk space is full.

**Setup**

**General**  
Event  
Event search  
Record  
Disk  
OSD  
About

Disk Space :   Gb


**Disk Info**  
Total space : 195 Gb  
Free space : 111 Gb

**Disk full**  
☒ Replace oldest files.  
☐ Stop recording.

OK Cancel


#### 10-4-4. OSD

You can select the OSD to be display

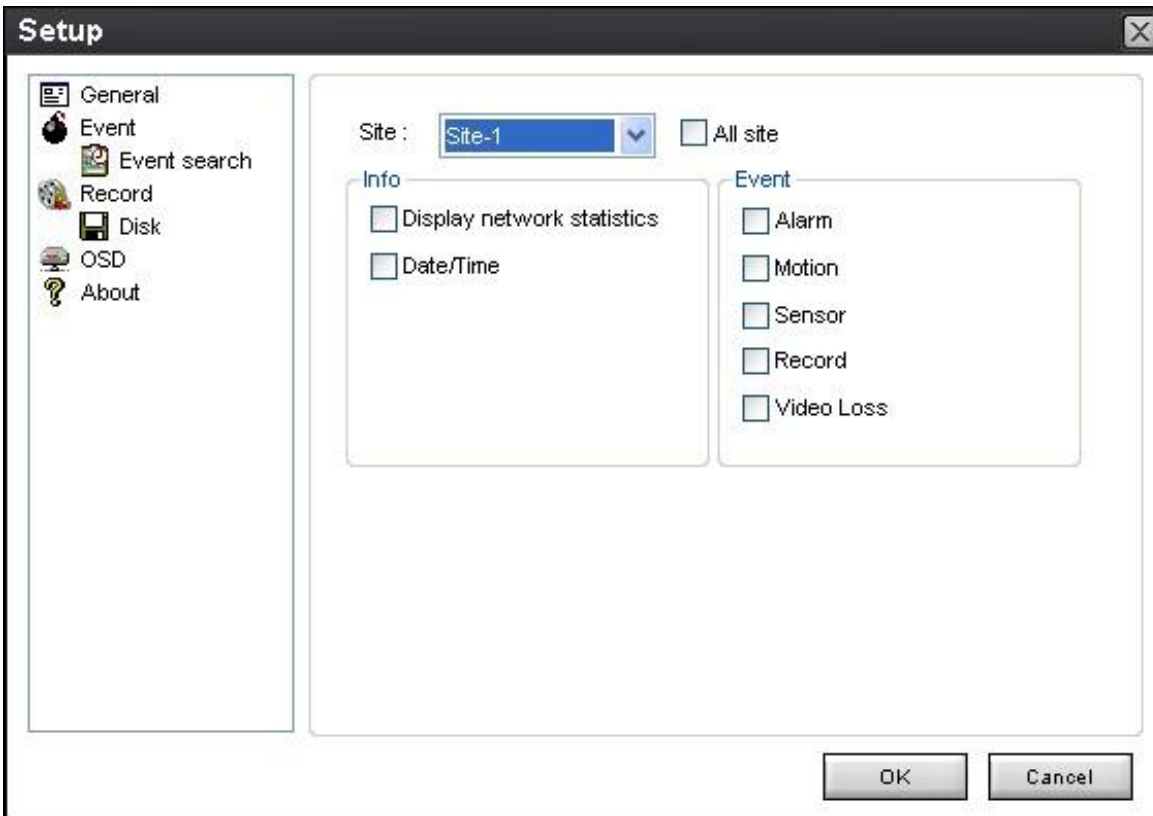

#### 10-4-5. About


“About” provides network client version information.

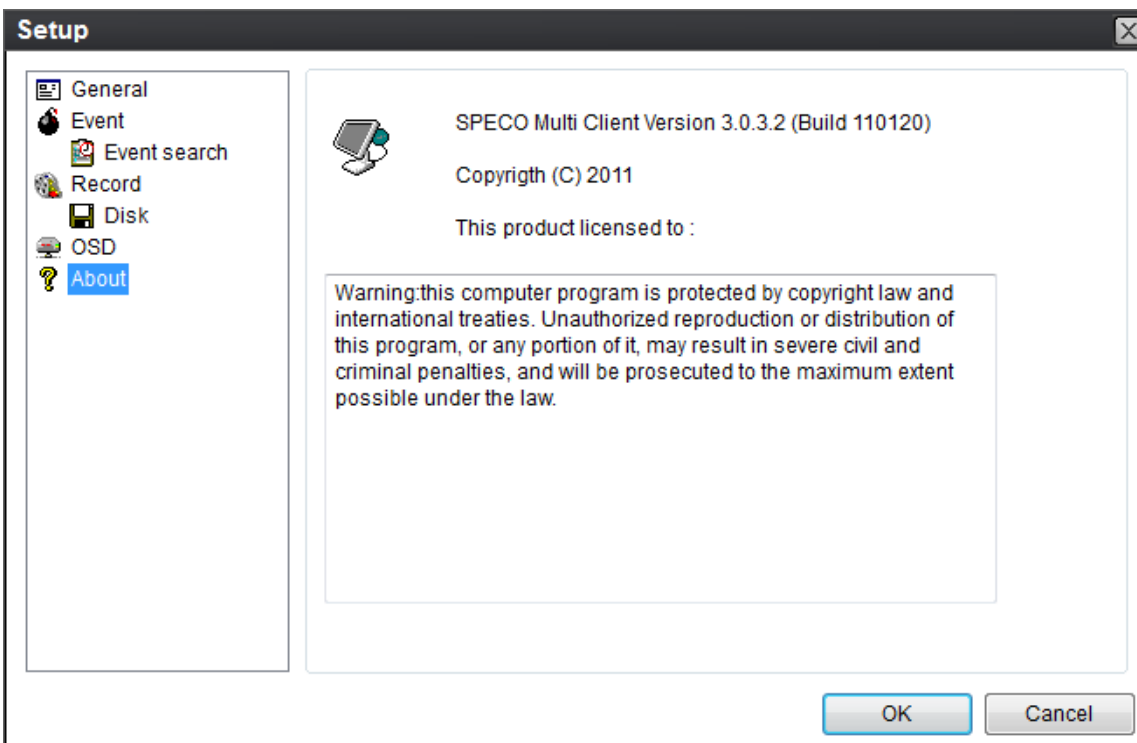


## 10-5. Remote Setup

The menu settings for the DVR unit can be set from a PC, via network. This function will be supported to the next version.

Put the cursor of the mouse on the channel which is connected to the site and press the right. Then the following window is displayed. Select the **Remote Setup**.

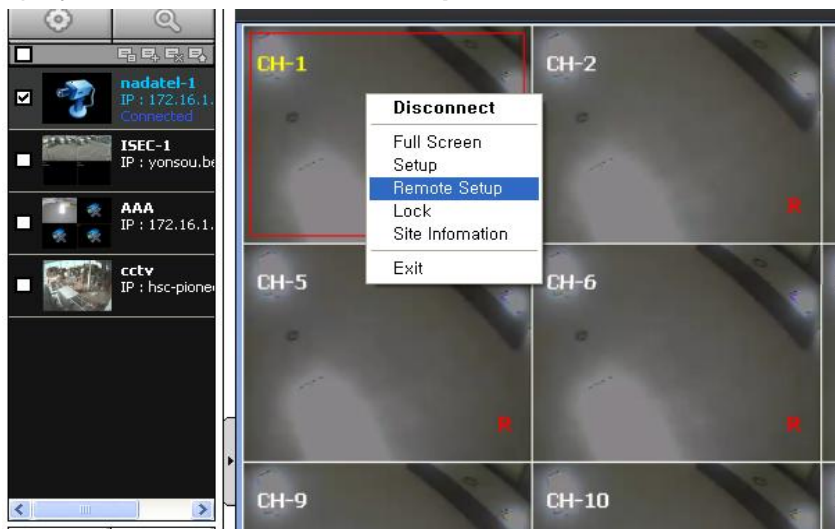

Then the setup window is displayed. The specified menu screen is displayed on the upper left of the screen.

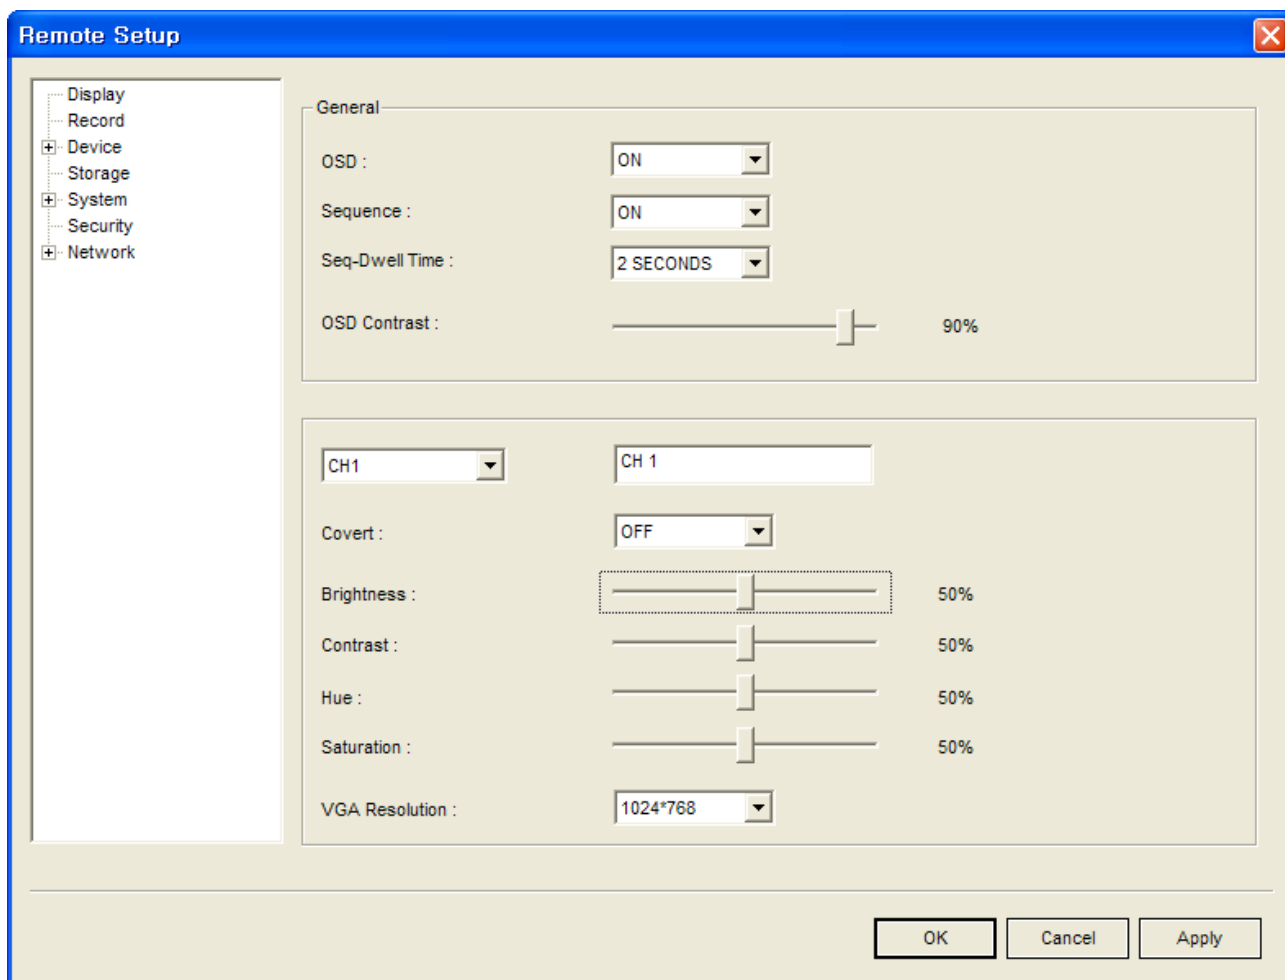

(Memo: Remote setup may not be supported depending on the DVR model or firmware version.)

Setting is basically the same as with the DVR menu setting. Refer to the corresponding pages for details on the setting items.



## 10-5-1. Setting the Display

Select **Display** to set the live video display conditions

### 10-5-1-1. General Settings

The screenshot shows the 'Remote Setup' dialog box with the 'General' tab selected. On the left is a tree view with 'Display' highlighted. The main area contains settings for 'General' and 'Channel-Specific' settings. The 'General' section includes 'OSD' (ON), 'Sequence' (ON), 'Seq-Dwell Time' (2 SECONDS), and 'OSD Contrast' (90%). The 'Channel-Specific' section includes 'CH1' (selected), 'CH 1' (text field), 'Covert' (OFF), 'Brightness' (50%), 'Contrast' (50%), 'Hue' (50%), 'Saturation' (50%), and 'VGA Resolution' (1024\*768). At the bottom are 'OK', 'Cancel', and 'Apply' buttons.

Setting	Value
OSD	ON
Sequence	ON
Seq-Dwell Time	2 SECONDS
OSD Contrast	90%
CH1	CH 1
Covert	OFF
Brightness	50%
Contrast	50%
Hue	50%
Saturation	50%
VGA Resolution	1024*768

These settings apply to all channels.

**OSD:** Sets whether to display or not date and time as well as channel number on the screen.

**Sequence:** Setting for automatically switching the displayed video.

**Seq-Dwell Time:** Sets the interval for automatically switching the screens.

**OSD Contrast:** Adjust the character contrast on the screen.

### 10-5-1-2. Channel-Specific Settings

These settings apply to the specified channel only.

#### Channel Designation

**Covert:** Sets whether to display or not video from the channel on the monitor.

#### Video Image Adjustment

## 10-5-2. Record

Select **Record** to set the recording conditions.

### 10-5-2-1. Common to All Channels

**Resolution:** Sets the resolution for the recordings. The set value applies to all channels.

The screenshot shows the 'Remote Setup' dialog box with the 'Record' tab selected. On the left is a tree view with 'Record' highlighted. The main area contains the following settings:

- Resolution : 352 X 240
- Channel : CH 1
- Frame Rate : 7 f/s
- Quality : HIGH
- Recording : BY MOTION
- Electronic Light Control : OFF
- Sensor Recording : Four dropdown menus, each showing '---'
- Pre Record : ON
- Audio : OFF
- Post Event Record : 10 Seconds
- Schedule : ...

At the bottom right are three buttons: OK, Cancel, and Apply.

### 10-5-2-2. Channel-Specific Settings

These settings apply to the specified channel only.

#### Channel Designation

**Frame Rate:** Sets the recording rate.

**Quality:** Sets the image quality in 5 levels.

**Recording:** Sets the recording mode.

**Electronic Light control:** Sets whether to perform or not the electronic light control

**Sensor Recording:** Sensor recording is performed when an external sensor signal is input to the specified external sensor input terminal.

**Pre Record:** Sets whether to perform or not pre recording.

**Audio:** Sets whether to perform or not audio recording.

**Post Event Record:** Sets the duration of the event recording.

**Schedule:** Sets the schedule for schedule recording.

#### 10-5-3. Device

Select **Device** to set the sensor input/alarm output conditions, PTZ control and spot setting conditions.

The screenshot shows the 'Remote Setup' dialog box with the 'Device' tab selected in the left-hand tree view. The tree view includes 'Display', 'Record', 'Device' (highlighted), 'PTZ Control', 'Spot', 'Storage', 'System', 'Security', and 'Network'. The main area contains several configuration sections:

- Sensor:** 'Sensor ID' is set to 1, and 'Sensor Type' is set to -----.
- Motion Zone:** 'CH 1' is selected in the dropdown, 'Motion Zone' is set to 'FULL ZONE', and 'Motion Sensitivity' is set to 9.
- Alarm - Out:** A dropdown shows '1'. Below it are four rows of four dropdown menus each, labeled 'Sensor In:', 'Motion ON:', and 'Video Loss On:'. All these dropdowns are currently set to '--'. 'Alarm Duration' is set to '5 SECONDS'.
- Error Alarm:** Set to 'OFF'.
- Remote Controller:** Set to 10.

At the bottom right are 'OK', 'Cancel', and 'Apply' buttons.

**Setting a Sensor Input Terminal:** Specify a sensor input terminal number and set the type.

**Setting the Motion Zone/Sensitivity:** Select the zone where the motion sensor is active. It is necessary to set a detection frame when PARTIAL ZONE is selected. Select the level of detection sensitivity of the motion sensor. Sensitivity selections: 1~9(High sensitivity level)

**Partial Zone:** If selecting Partial Zone, a button is displayed to the right. Click the button and click(or drag)a grid cell in the desired detection frame.

**Setting an Alarm Output Terminal:** Specify an alarm output terminal number (1-4) and set the alarm output conditions.

**Alarm Out No.:** Specifies the alarm output terminal number (1-4)

**Sensor In:** Outputs an alarm signal when the specified external sensor input terminal receives an input.

**Motion On:** Outputs an alarm signal when the specified video input terminal receives a motion detection signal.

**Video Loss On:** Outputs an alarm signal when a video loss occurs in the specified video input terminal.

**Alarm Duration:** Sets the duration of the alarm output signal

**Error Alarm:** Sets whether to output or not an alarm signal when the error condition occurs.  
(Options are OFF, ALL, HDD ERROR and VIDEO LOSS.)

**Remote Controller:** Sets an ID number on the supplied remote control for its identification.

The screenshot shows a 'Remote Setup' dialog box with a tree view on the left and a 'PTZ Control' section on the right. The tree view includes 'Display', 'Record', 'Device' (expanded), 'Spot', 'Storage', 'System' (expanded), 'Security', and 'Network'. Under 'System', 'PTZ Control' is selected. The 'PTZ Control' section contains four settings: 'CH 1' (dropdown), 'CAMERA SPEED : 9600' (dropdown), 'Protocol : AP8777' (dropdown), and 'Camera ID : 1' (dropdown). At the bottom right are 'OK', 'Cancel', and 'Apply' buttons.


**Setting the PTZ Control:** Sets the communication environment for remotely operating PTZ dome cameras connected to RS485 terminals.

### Camera Channel Designation

**Camera Speed:** Sets the communication speed. The set value applies to all channels.

**Protocol:** Sets the protocol type for the specified channel. When connecting multiple cameras, set the same protocol for all.

**Camera ID:** Sets the camera ID.

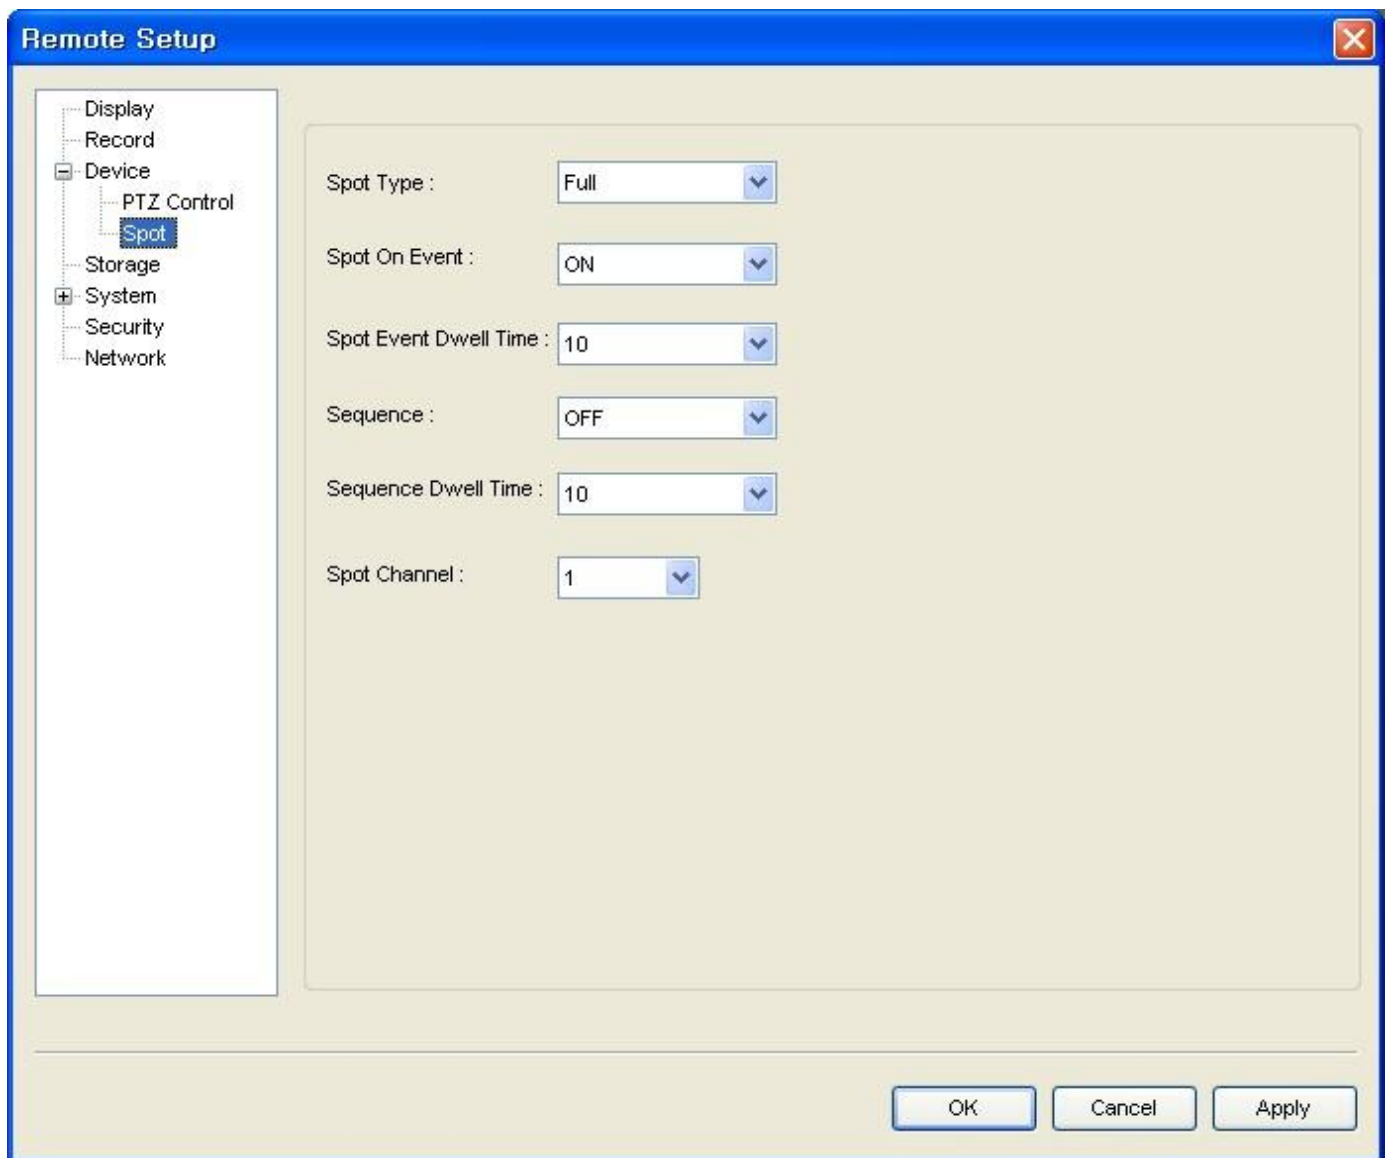

**Setting the SPOT:** Sets the output conditions of the spot video terminal.

**Spot Type:** Sets the output screen layout of the spot terminal.

**Spot On Event:** Sets whether to output or not the video of a sensor recording to spot while it is being recorded.

**Spot Event Dwell Time:** Sets the output duration of the sensor recording video.

**Sequence:** Sets whether to automatically switch or not the video output to spot terminal.

**Sequence Dwell Time:** Sets the video switching interval if Sequence is set to ON.

**Spot Channel:** Sets the channel that outputs video to the spot terminal.



#### 10-5-4. Storage

Select **Storage** to configure continued recording settings by overwriting the hard disk and the storage period for the recording data.

The image shows a 'Remote Setup' dialog box with a tree view on the left and configuration options on the right. The tree view includes 'Display', 'Record', 'Device' (expanded), 'PTZ Control', 'Spot', 'Storage' (selected), 'System', 'Security', and 'Network'. The main area is titled 'HDD SET' and contains an 'Overwrite' checkbox (checked), 'Record Limit' (OFF), and 'Record Limit Days' (30 Day). Below this is an 'HDD Info' section with four text boxes: 'Hard Disk Size' (460 GB), 'Remain' (445 GB), 'Hard Disk Start Time' (2009-09-19-13:00:00), and 'Hard Disk Last Time' (2009-11-09-14:55:00). At the bottom are 'OK', 'Cancel', and 'Apply' buttons.

Field	Value
Overwrite	<input checked="" type="checkbox"/>
Record Limit	OFF
Record Limit Days	30 Day
Hard Disk Size	460 GB
Remain	445 GB
Hard Disk Start Time	2009-09-19-13:00:00
Hard Disk Last Time	2009-11-09-14:55:00

**Overwrite:** To continue recording by overwriting when the hard disk becomes full, check the checkbox.

**Record Limit:** Sets whether to limit or not the recording data storage period.

**Record Limit Days:** Sets a recording data storage period.

## 10-5-5. System

Select **System** to set system and time settings.

The screenshot shows a 'Remote Setup' window with a tree view on the left and configuration fields on the right. The tree view includes: Display, Record, Device (with sub-items PTZ Control and Spot), Storage, System (selected), Description, Send E-Mail, NTP, Security, and Network. The 'System' tab is active, showing two sections: 'System' and 'Clock Set'. In the 'System' section, 'Client Access' and 'Band Width Saving' are checked. 'DVR ID' is set to 'DVR', 'Date Format' is 'YYYY/MM/DD', and 'Language' is 'ENGLISH'. In the 'Clock Set' section, 'Set Date & Time' is '2009 / 11 / 09' at '14 : 55 : 17', and 'D.S.T./SUMMER TIME' is 'OFF'. At the bottom right are 'OK', 'Cancel', and 'Apply' buttons.

### Setting the System

**Client Access:** To give permission to operate from an external PC by checking the checkbox.

**Bandwidth Saving:** Sets if the network bandwidth is not large enough when monitoring live videos by checking the checkbox. Live videos advance frame by frame(At the rate of 1 frame per second)

**DVR ID:** Sets individual designation to DVRs.

**Date Format:** Sets the date display format.

**Language:** Sets the display language.

### Clock Set

**Set Date & Time:** Sets the current date and time.

**D.S.T./SUMMER TIME:** Sets whether daylight saving is applicable or not.

**OFF:** Daylight saving not applicable.

**U.S.A.:** USA daylight saving time applicable.

**EU:** EU daylight saving time applicable. Select the GMT Area.(+00:00 to +05:00)

**OTHER:** Sets the start and end dates of the daylight saving period for time zones other than USA and EU.  
(Begin/End)

(Memo: A confirmation dialog is displayed when [Apply] or [ok] is clicked if the date and /or time settings have been changed. The DVR is restarted and the date and time updated when [YES] is clicked on the confirmation dialog.)

**Description:** To check information on the DVR such as the version information.

**Remote Setup**

Display  
Record  
Device  
PTZ Control  
Spot  
Storage  
System  
**Description**  
Send E-Mail  
NTP  
Security  
Network

Description

H/W Version : 0.0

S/W Version : H10S.1743(20090924)

Storage size : 460 GB (471040 MB) / 1 HDD

IP Address : 172.16.1.100

MAC Address : 00:02:69:03:84:fa

OK Cancel Apply

## Setting the Send E-Mail:

This setting is used to automatically send a notification e-mail to a specified address when an alarm occurs.  
(Memo: The DVR will be forcibly restarted if a value on this screen is changed.)

The screenshot shows the 'Remote Setup' window with a tree view on the left containing 'Display', 'Record', 'Device' (with sub-items 'PTZ Control' and 'Spot'), 'Storage', 'System' (with sub-items 'Description', 'Send E-Mail', and 'NTP'), 'Security', and 'Network'. The 'Send E-Mail' option is selected. The main area contains the following settings:

- Send E-Mail:** A dropdown menu set to 'ON'.
- IP Notification:** An unchecked checkbox.
- Transmission Mode:** A dropdown menu set to 'IMAGE'.
- Event Alarm:** A dropdown menu set to 'OFF'.
- Mail Address:** An empty text input field.
- Mail Server Name:** An empty text input field.
- ID:** An empty text input field.
- Password:** An empty text input field.
- Return Mail Address:** An empty text input field.

At the bottom right are three buttons: 'OK', 'Cancel', and 'Apply'.

**Send E-Mail:** Sets whether to enable/disable e-mail sending function.

**IP Notification:** To send a notification e-mail when the DVR IP address is changed, check the checkbox.

**Transmission Mode:** Enables sending image of the channel that triggered the alarm when an alarm event is triggered.

**Event Alarm:** Sets whether to enable/disable sending e-mail reports on the channel that triggered the alarm when an alarm event is triggered.

**Mail Address:** Input the destination address.

**Mail Server Name:** Input the SMTP server name as well as the user ID and password.

**Return Mail Address:** Set the source e-mail address to be notified to the destination.

**Setting the NTP:** It allows synchronizing the time using an internet of LAN NTP server.

The screenshot shows a 'Remote Setup' window with a tree view on the left and configuration fields on the right. The tree view includes 'Display', 'Record', 'Device' (with sub-items 'PTZ Control' and 'Spot'), 'Storage', 'System' (with sub-items 'Description', 'Send E-Mail', 'NTP', 'Security', and 'Network'), and 'Network'. The 'NTP' item is selected. The main area is titled 'NTP' and contains the following settings:

- NTP:** A dropdown menu set to 'ON'.
- Primary SNTP Server:** A text field containing 'pool.ntp.org'.
- Secondary SNTP Server:** A text field containing 'time.nist.gov'.
- Time Zone:** A dropdown menu set to 'GMT -12:00'.
- Connection Mode:** A dropdown menu set to 'Time'.
- Connection Period:** A dropdown menu set to '3'.

At the bottom right, there are three buttons: 'OK', 'Cancel', and 'Apply'.

**NTP:** Sets whether to synchronize the time using NTP server or not.

**Primary SNTP Server:** Input the NTP primary server address.

**Secondary SNTP Server:** Input the NTP secondary server address.

**Time Zone:** Select the time zone.

**Connection Mode:** Select the connection mode to NTP time server.

**Time:** Synchronize the time at the time that is set.

**Interval:** Synchronize the time by hours that is set

**Connection Period:** Set the connection period.

10-5-6. Security

Select **Security** to set password check for user authentication for the specific functions such as SETUP, PLAYBACK, PTZ control, RECORD OFF, PLAYBACK ON/OFF and NETWROK connection.

Remote Setup

Display

Record

Device

PTZ Control

Spot

Storage

System

Description

Send E-Mail

NTP

Security

Network

User Authentication

		Setup	PB	PTZ	R/OFF	P/OFF	P/ON	NET
Password Check		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
ADMIN	11111111	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
NETWORK	11111111	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
USER 1	11111111	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
USER 2	11111111	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
USER 3	11111111	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

OK

Cancel

Apply

**Checking the checkbox:** Ask for a password when the given function is selected for all users



### 10-5-7.Network

Select **Network** to set information about the DVR network.

(Memo: If a value on this screen is changed, the DVR will be restarted.)

The screenshot shows a 'Remote Setup' window with a tree view on the left containing: Display, Record, Device (with sub-items PTZ Control and Spot), Storage, System (with sub-items Description, Send E-Mail, NTP), Security, and Network (highlighted). The main area has a warning: 'Warning, if you change this value, DVR will be restart.' Below this is the 'Network' section with fields for Port (5445), WebPort (5440), Network Type (LAN), IP (172.16.1.100), Gateway (172.16.1.254), Subnet Mask (255.255.0.0), 1st DNS (0.0.0.0), and 2nd DNS (0.0.0.0). The 'DDNS' section has a dropdown menu set to 'OFF'. At the bottom are 'OK', 'Cancel', and 'Apply' buttons.

**Port:** When connecting multiple DVRs to the network, set a unique port number to each DVR.

**Web Port:** Set a web server port number.

#### Network Type

**LAN:** The address setting mode is manual. Input IP, Gateway, Subnet Mask, and DNS server IP.

**DHCP:** The address setting mode is automatic. Addresses and other information do not need to be set.

**ADSL:** Input the login ID and Password.

**DDNS:** Sets whether to use DDNS service or not.

### 10-5-8. Network – Dual Stream

Select **Dual Stream** to set frame rate and quality for a network streaming.

The screenshot shows a 'Remote Setup' window with a tree view on the left containing 'Display', 'Record', 'Device', 'Storage', 'System', 'Security', 'Network', and 'Dual-Stream' (which is selected). The main area is titled 'Dual-Stream' and contains two rows of settings for different channel counts. The first row is for 1 CH, 2 CH, 3 CH, and 4 CH, with Frame Rate options of 7 f/s and Quality set to STANDARD. The second row is for 5 CH, 6 CH, 7 CH, and 8 CH, with Frame Rate options of 2 f/s and Quality set to ULTRA. At the bottom right are 'OK', 'Cancel', and 'Apply' buttons.

User can set to the following values.


		NTSC	PAL
4ch	Frame Rate	1,2,3,7,10,12 and 15fps	1,2,3,6,8,9 and 12fps
	Quality	Standard, High, Ultra	Standard, High, Ultra
8ch	Frame Rate	1,2,3 and 7fps	1,2,3 and 6fps
	Quality	Standard, High, Ultra	Standard, High, Ultra
16ch	Frame Rate	1 and 2fps	1 and 2fps
	Quality	Standard, High, Ultra	Standard, High, Ultra

## 10-6. Operation

### 10-6-1. Addition, Delete, and modify of DVR sites

#### 10-6-1-1. Addition of sites

1. Click  SITE ADDITION button. And then the following window displays.

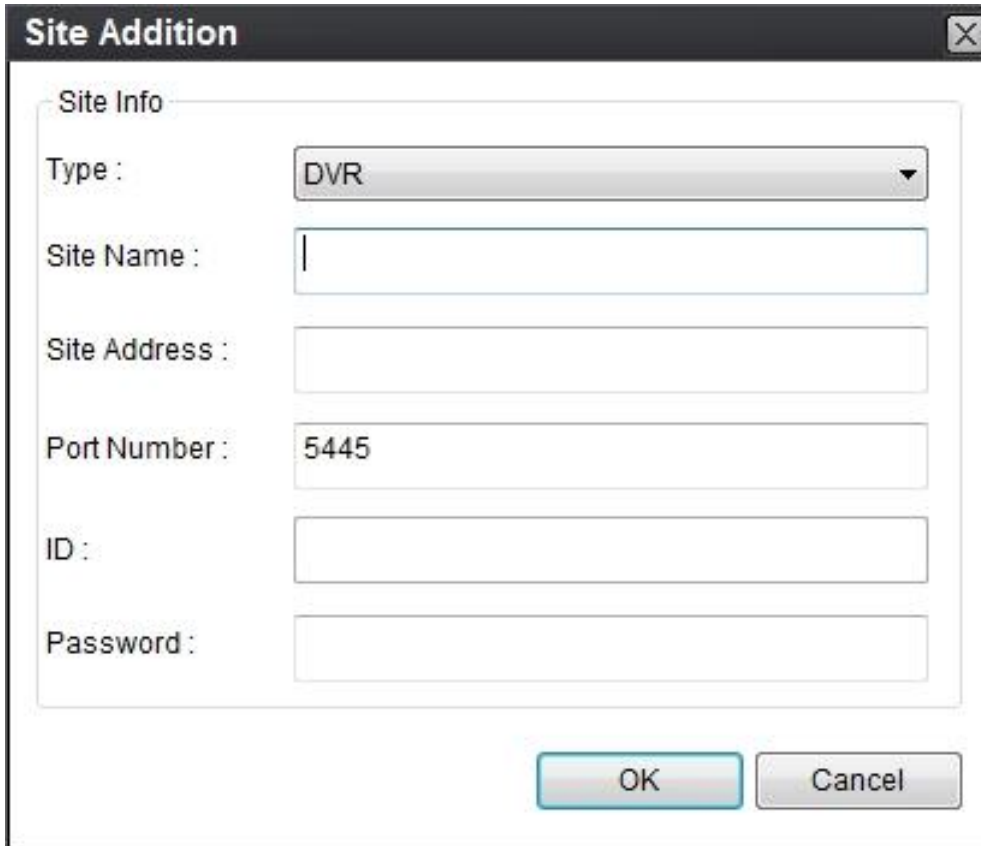

The 'Site Addition' dialog box contains the following fields:

- Type : DVR (selected in a dropdown menu)
- Site Name : (empty text box)
- Site Address : (empty text box)
- Port Number : 5445
- ID : (empty text box)
- Password : (empty text box)

Buttons: OK, Cancel

- Type : Choose the product type
- Site Name: Input a name that properly describes a site.
- IP Address: Input IP address (Public IP address of a router that DVR is connected.) or Domain name that is registered at [www.ddnscenter.com](http://www.ddnscenter.com)
- Port No.: Input port number of DVR.
- Password: Input network password of DVR.
- Channels: Select the channels number of DVR.


2. Click OK button. And then the registered site is added on the directory window.



### 10-6-1-2. Delete of Sites

1. Select the site/sites to delete from the directory window.




2. Click  SITE DELETE button. And then the selected site/sites is/are deleted.





### 10-6-1-3. Modify of Sites

1. Select the site/sites to modify from the directory window.



2. Click  SITE MODIFY button. And then the following window displays.

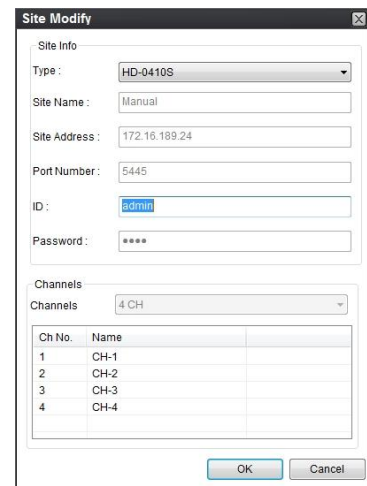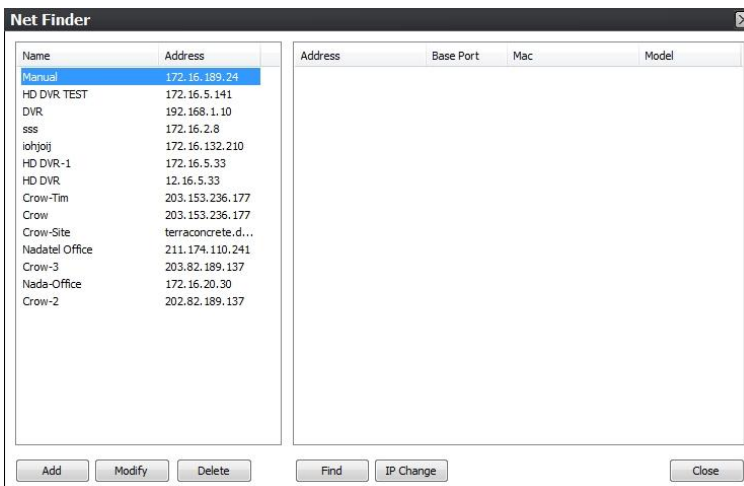

3. Click OK button. And then the modified information is applied.

10-6-2. Connect and Disconnect

10-62-1. **Connect**

1. Select site/sites to connect from the directory window.



2. Click **CONNECT** button, and then site/sites displays/display as connected.



## 10-6-2-2. Disconnect

1. Select site/sites to disconnect from the directory window.




2. Click DISCONNECT button, and then selected site/sites disconnected.






### 10-6-3. Still-image capture during Live


1. Double-click a channel to capture from the display screen. (Otherwise all channels will be captured.).

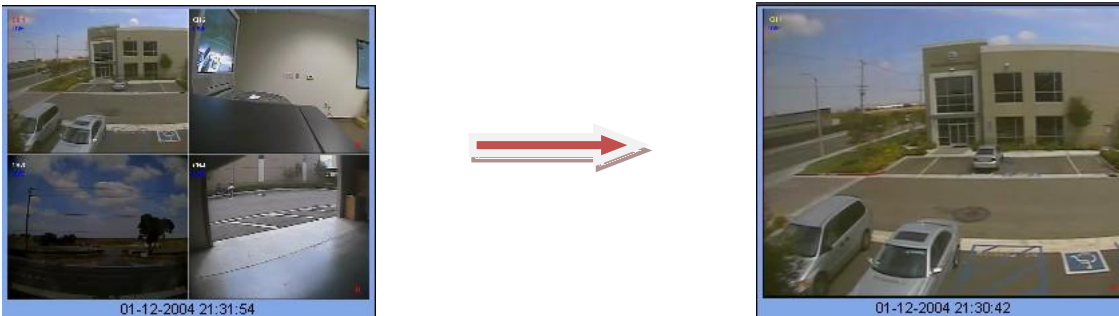

2. Click CAPTURE button. And then a Capture window displays.

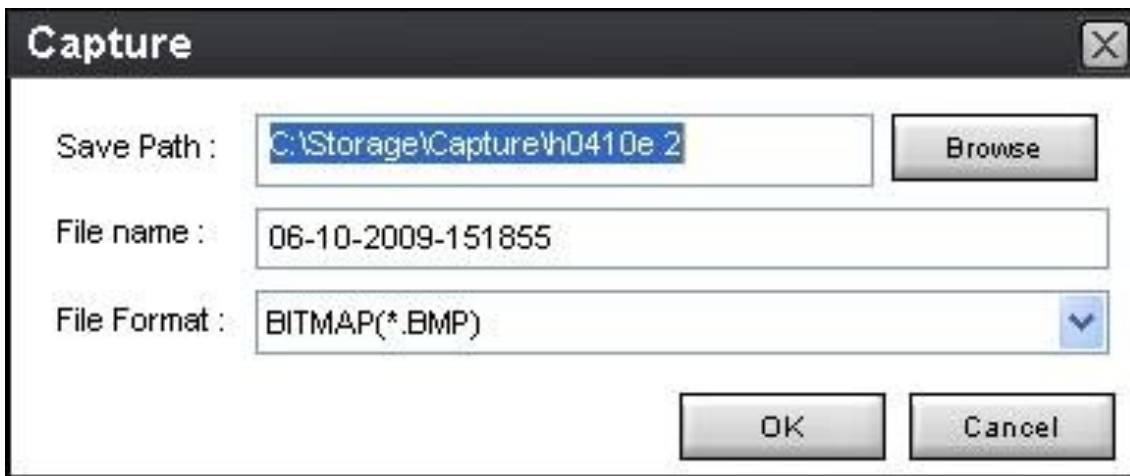


3. Set Save path, File Name, and File Format. And then click OK button.
4. Still image is saved as set in Capture window.

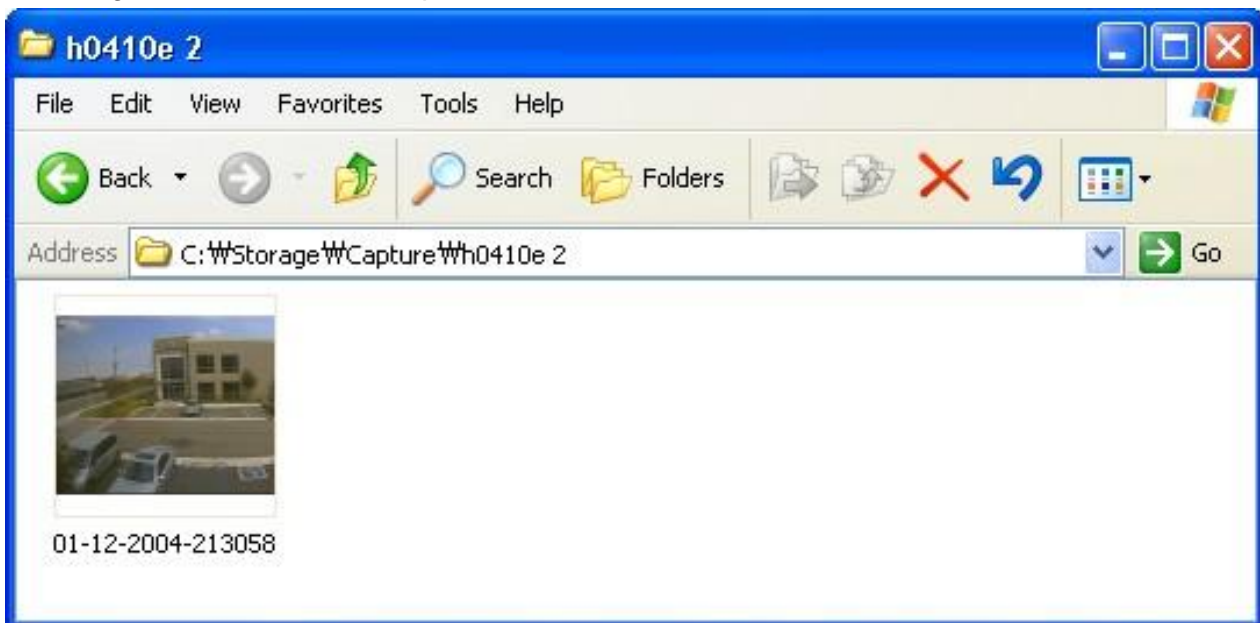


#### 10-6-4. Recording video on local PC during Live




1. Click **SETUP** button. And then a setup window display.
2. Select Record and set the values.

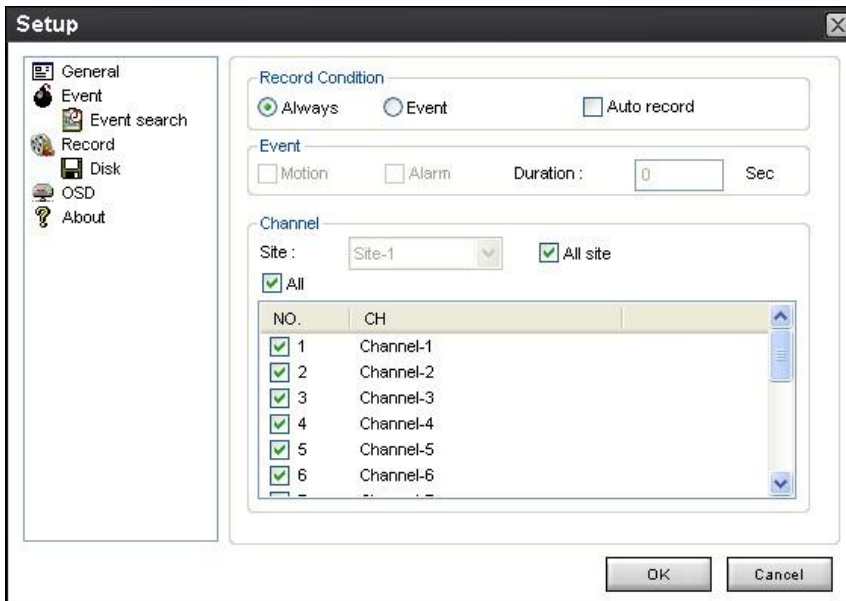

3. Select Disk and set the values.

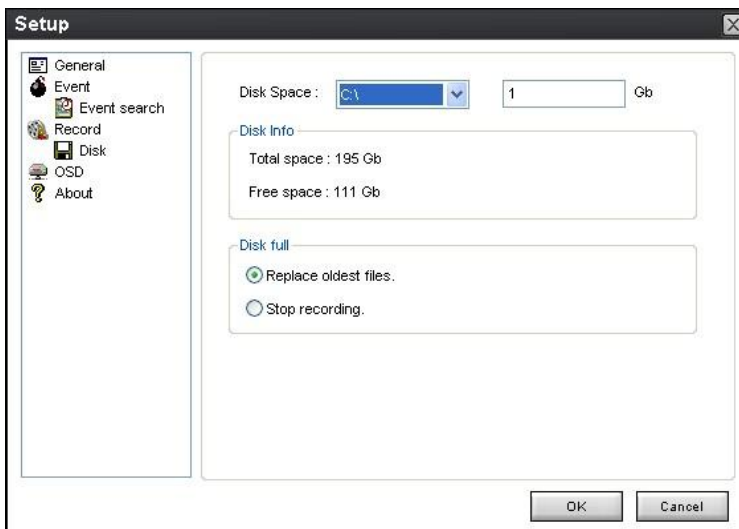


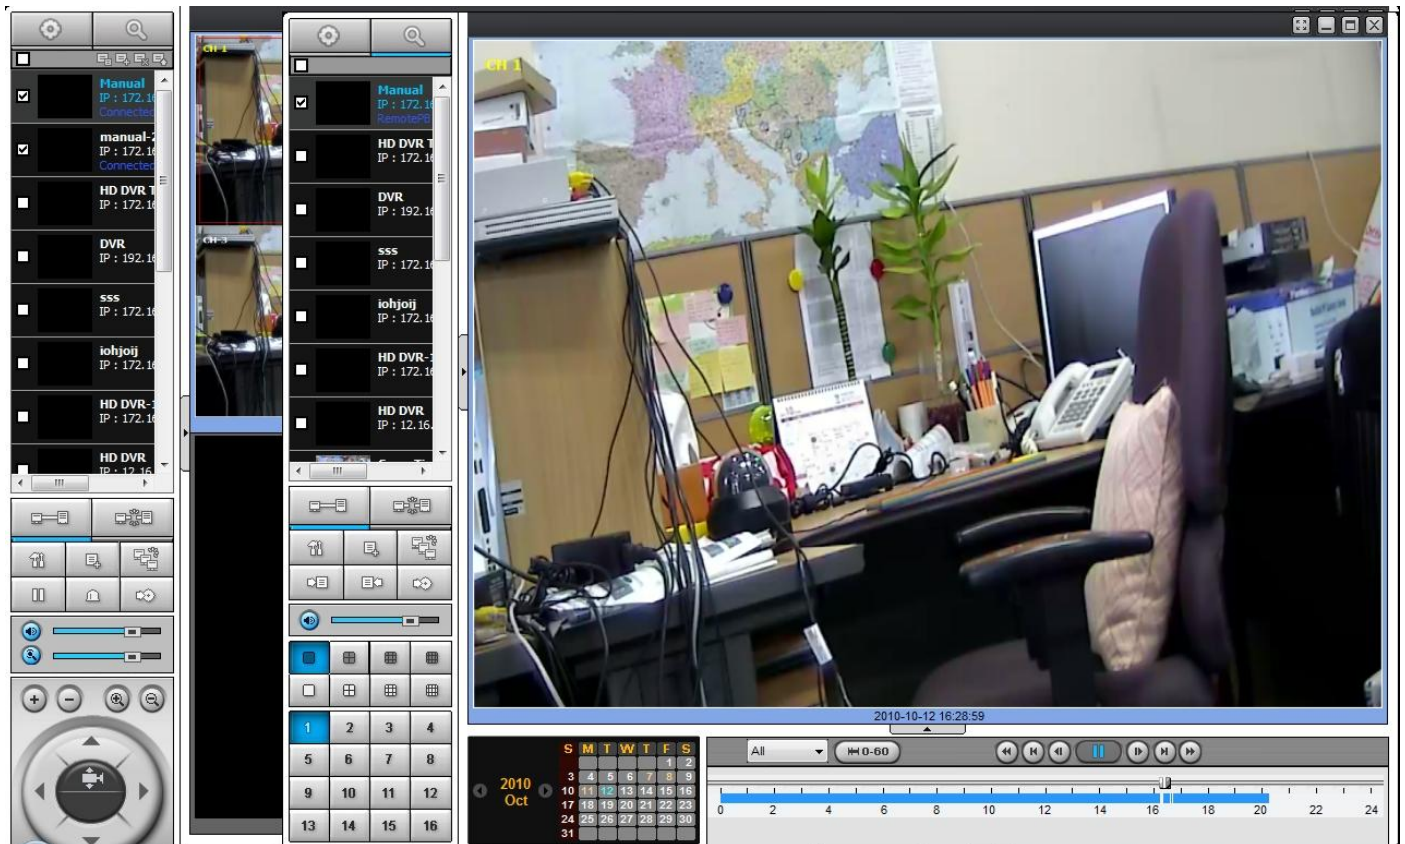
4. Click **RECORD ON** button. And the color of button is changed.
5. Live video data is recorded as set in Record and Disk setup. These video data can be searched and play-backed with Local Playback.

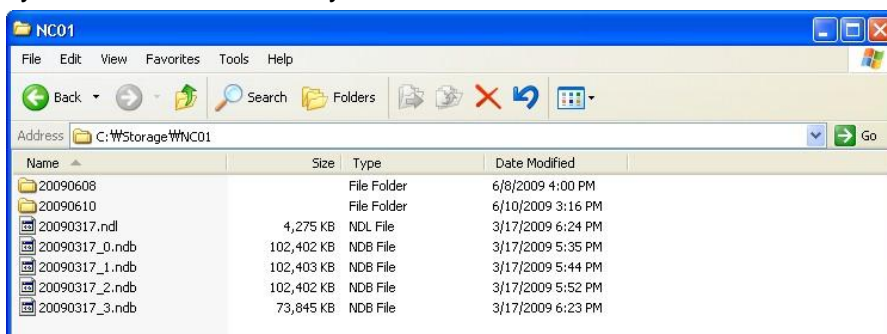

## 10-6-5. Local Playback and Remote Playback


### 10-6-5-1. Playback of Recorded Video on Local PC


1. Click  LOCAL PLAYBACK button. And then Playback Window display over Live Window.




2. Select site/sites to connect from the directory window.




3. Click  CONNECT button. And then Green bar displays on Search calendar and slide window.

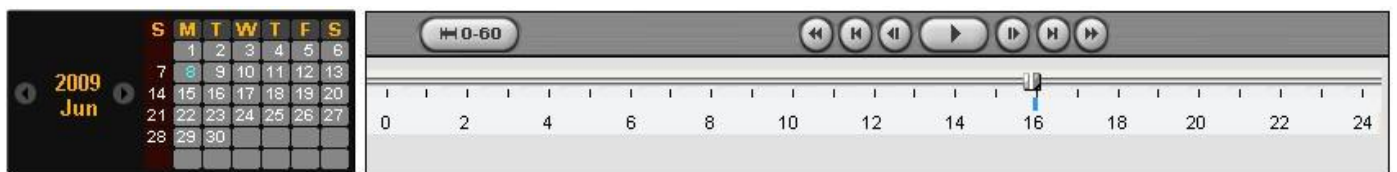

4. Move scroll bar on where there is video data and Play button.

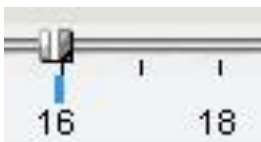


5. Video data that is recorded on local PC will be play-backed.

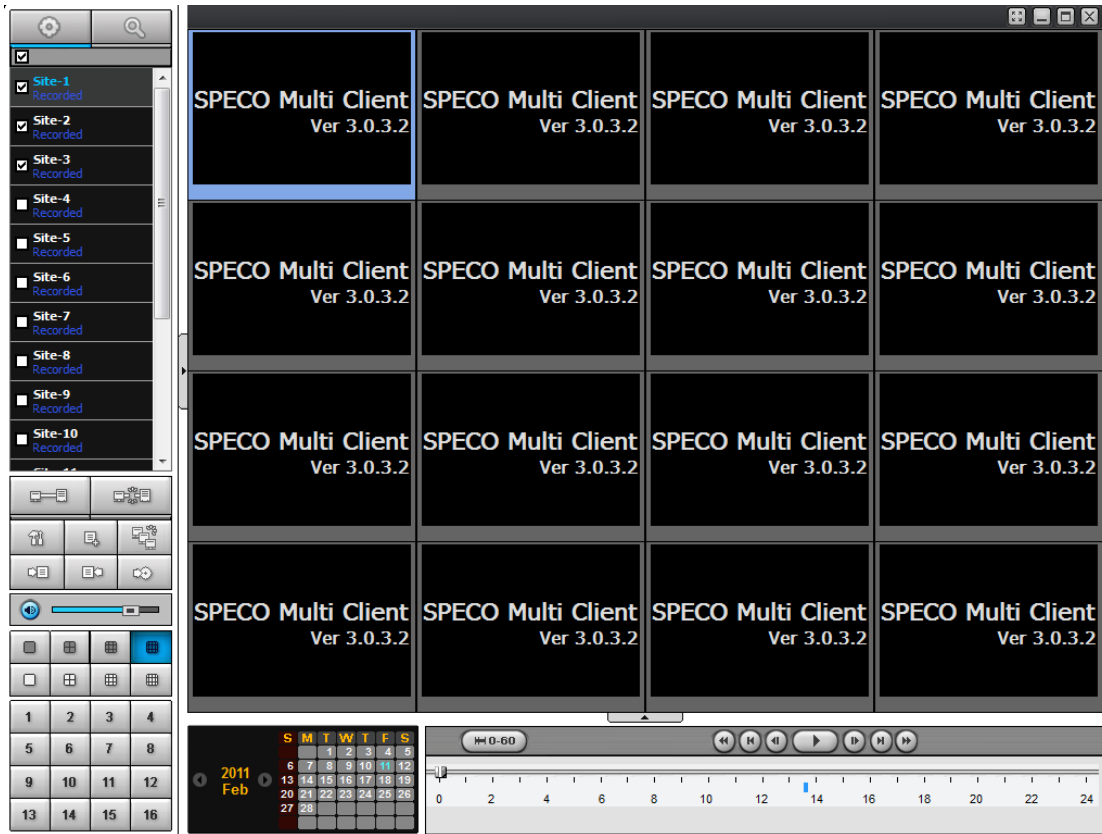

#### 10-6-5-2. Playback of Recorded Video on Remote DVR



1. Click  REMOTE PLAYBACK button. And then Playback Window display over Live Window.







2. Select site to connect from the directory window.



3. Click **CONNECT** button. And then Green bar displays on Search calendar and slide window.

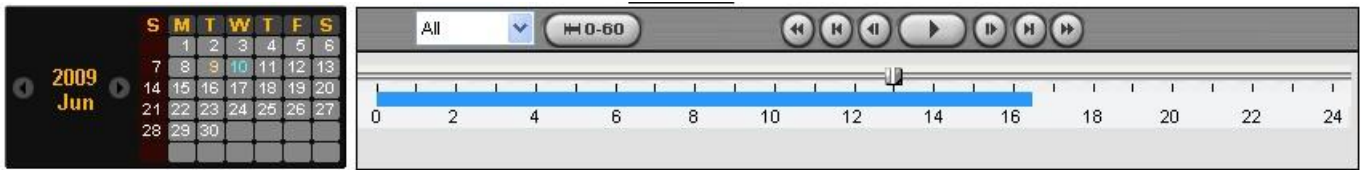

4. Move scroll bar on where there is video data and Play button.

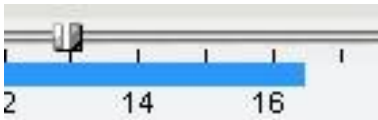


5. Video data that is recorded on a remote DVR is play-backed.




### 10-6-6. AVI Backup during playback

You can back up the recorded videos in AVI format during playback.


1. Double-click the target channel to backup.
2. Select the beginning time by using the search calendar and slide bar.

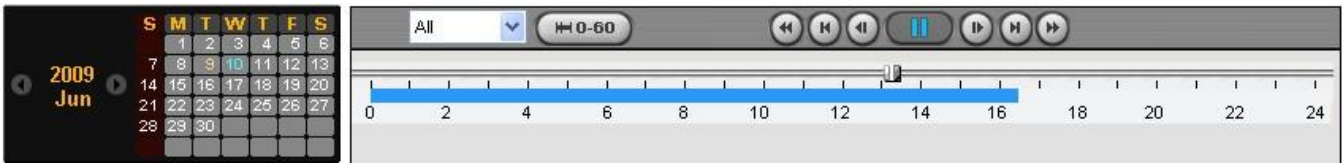


3. Click MARK IN button, when the scale of the timeline is located on the target time as the beginning time of backup.

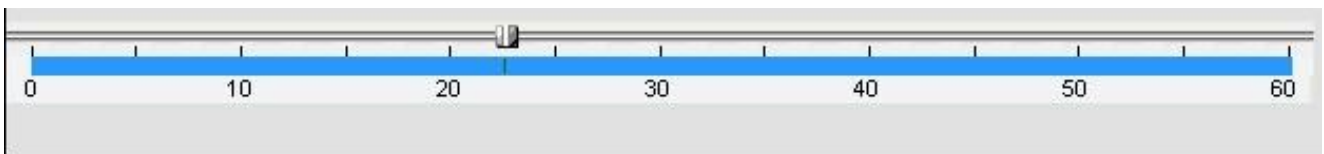

 
4. Set the ending time on the blue timeline by dragging the scale on the target time as the ending time of



- backup and clicking MARK OUT button. Then, color of the timeline between the beginning time and ending time will be changed into dark Green.

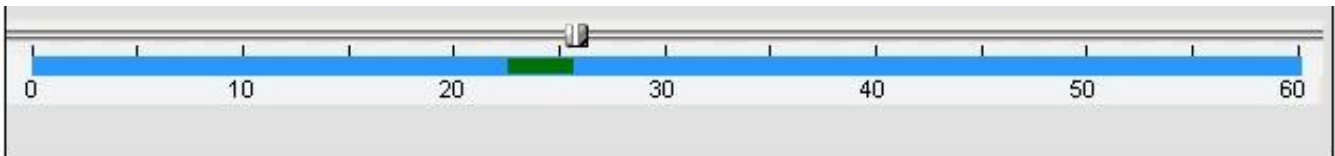


5. Click BACKUP. And then the window appears as below.

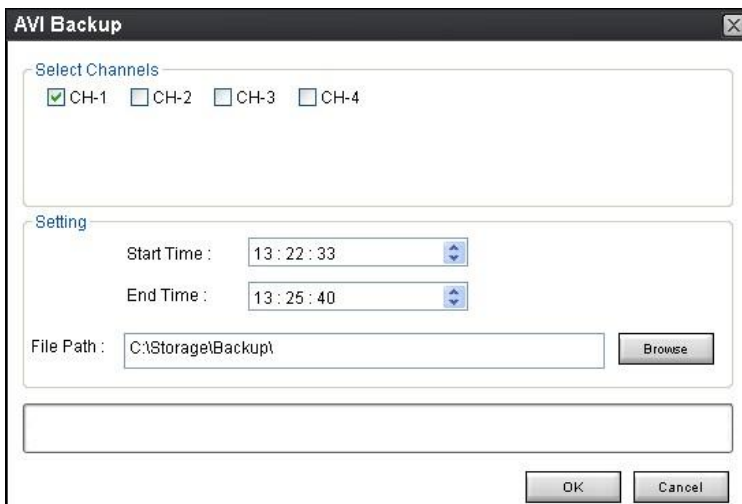



6. You can also set the beginning time and ending time on this window. After selecting a channel for backup, click the OK button. The backup will begin.

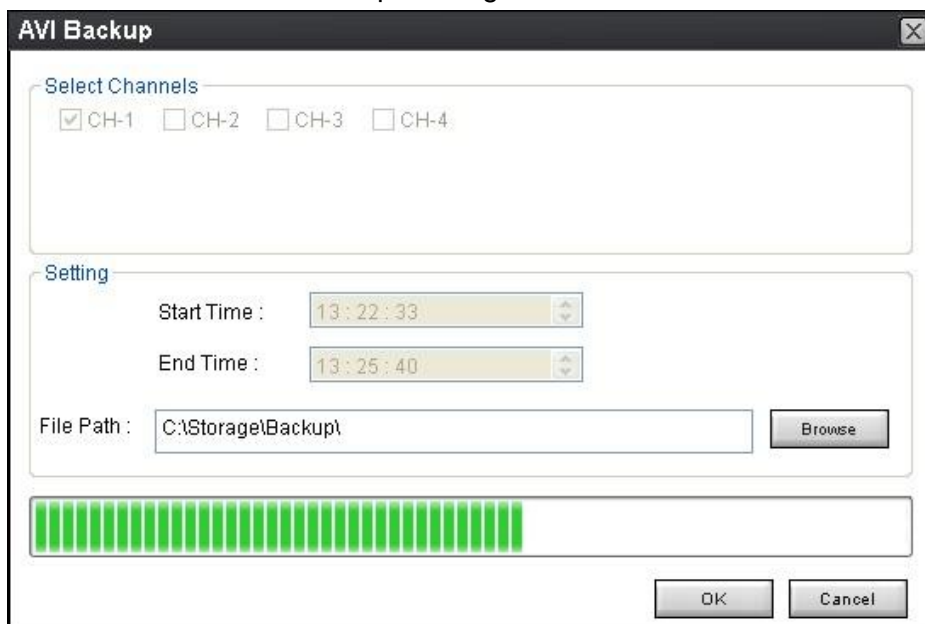

7. AVI video data is recorded as set in AVI Backup window. AVI format video can be played back by Window Media Player™ or other media player that is compatible with AVI format video.



### Notice

When PC doesn't have proper H.264 CODEC, the media players cannot playback the AVI format video.


## 11. Network Access Using the 3G App Viewer

### 11-1. Installing the 3G App Viewer

1. Enter the Apple App Store (For Apple iPhone Users) or the Android Market (For Android Phone users)




2. Search “Speco Viewer” in the App Store<sup>©</sup> or the Android Market<sup>©</sup>

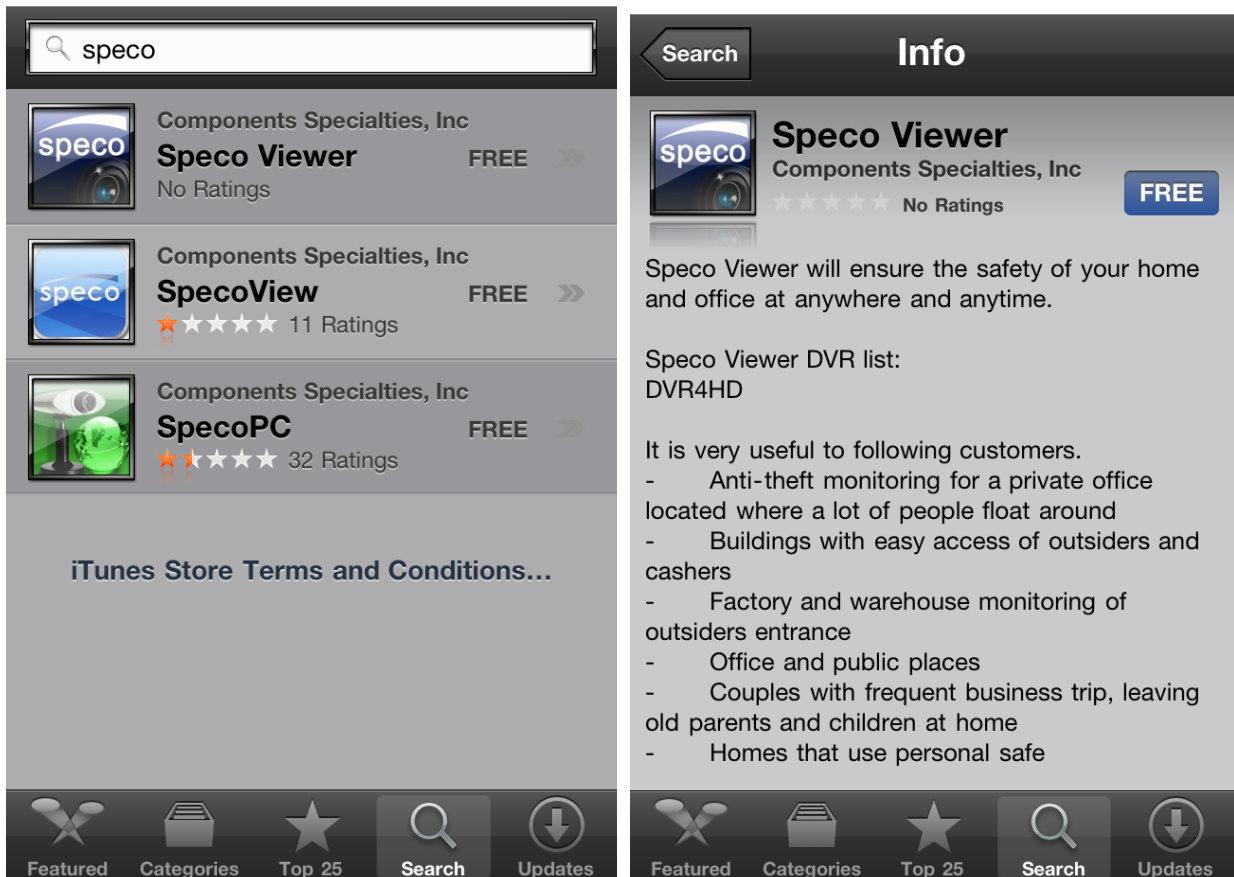

3. Install the “Speco Viewer” app.


### 11-2. Live Monitoring

1. Open the installed “Speco Viewer” App

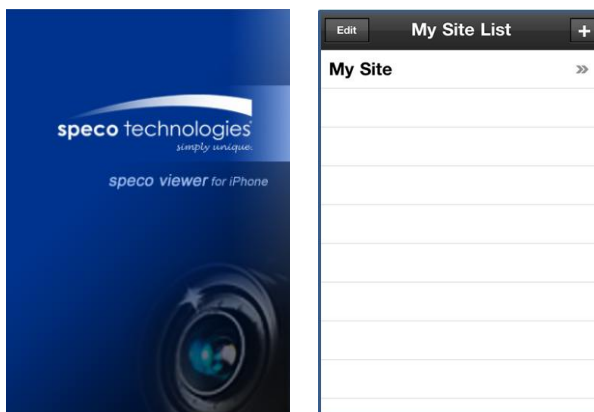

2. Select the  in the top right corner for “Site Information”

3. Input the “Site Information” and select  to save the “Site Information”

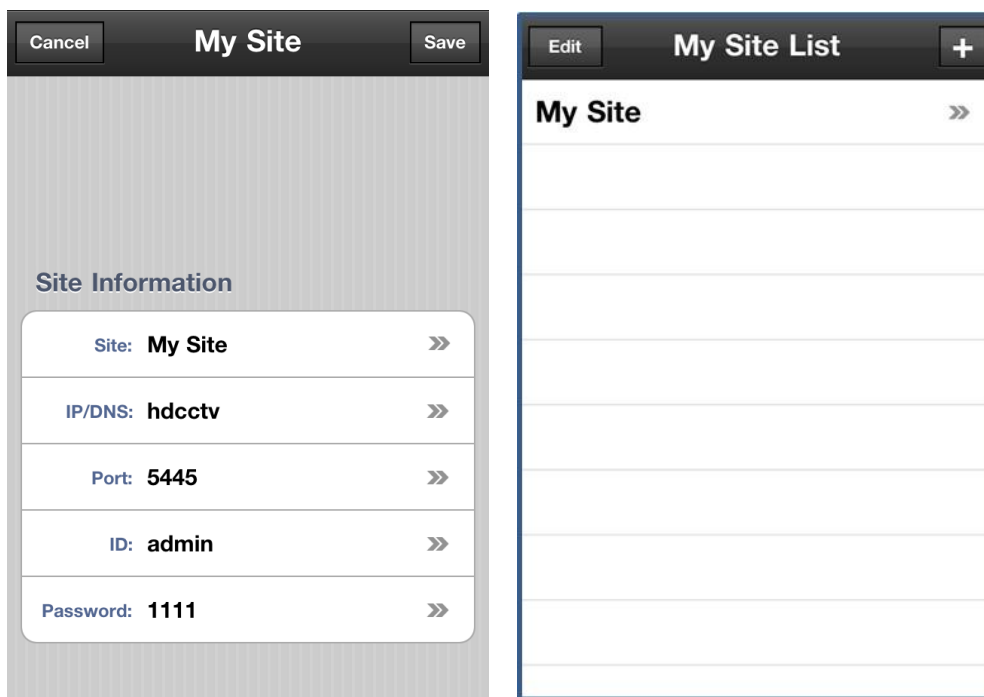


The left screenshot shows the 'My Site' form with the following fields:

Field	Value
Site	My Site
IP/DNS	hdcctv
Port	5445
ID	admin
Password	1111

The right screenshot shows the 'My Site List' screen with a list of saved sites. The first item is 'My Site' with a right arrow icon.

4. Select the saved site from “My Site List”
5. Select a channel to view.

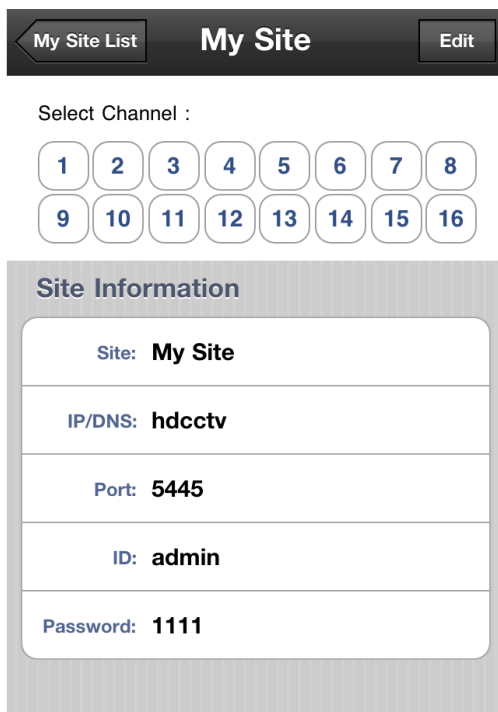

The screenshot shows the 'My Site List' screen with a 'Select Channel' section and a 'Site Information' section.

Select Channel :

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

Site Information

Field	Value
Site	My Site
IP/DNS	hdcctv
Port	5445
ID	admin
Password	1111

6. After selecting a channel, the app will display the following channel.



**Notice**

3G Data Usage applied without Wi-Fi connection. Please check with your Phone Carrier.