



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY PRS-650. You'll find the answers to all your questions on the SONY PRS-650 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY PRS-650
User guide SONY PRS-650
Operating instructions SONY PRS-650
Instructions for use SONY PRS-650
Instruction manual SONY PRS-650

SONY


Reader
Touch Edition™

Click for instant access!

Table of Contents

Index

User Guide
PRS-650
Digital Book Reader

©2010 Sony Corporation

4-257-611-11(1)



[Your user manual](#)
[SONY PRS-650](#)

Manual abstract:

The time to completely charge a depleted battery is about hours with a USB connection, or about 2 hours by the optional AC adapter (PRSA-AC1). Begin Charging Charge Completed! Turns off Charging time up to 3 hours Lights up in red Charging complete Charging battery* * The screen will appear after about 5 minutes if charging starts with a completely depleted battery. Table of Contents Index 12 Charging the Reader The Reader only charges when the connected computer is powered on. The Reader cannot be operated when connected to a computer via USB. Note Status indicators during charging Icon and message [Charging battery] Status Charging in progress. The battery icon does not indicate remaining battery power during charging. Fully charged The Reader is not charging its battery. Follow the on-screen instructions. [Charging complete] [Charging stopped] Tip While charging with the optional AC adapter (PRSA-AC1), appears in the status bar (0). appears when fully charged.

To check battery status in the status bar (30) during use Charging battery recommended Table of Contents Index 1 Power Saving Tips Power Saving Tips Charging Battery To fully charge your Reader, continue charging until indicator shows completion of charge (12). Charging a completely depleted battery will take hours when connected to the USB port of a powered on computer, 2 hours when connected to the optional AC adapter (PRSA-AC1). Operating your Reader while charging with the optional AC adapter may extend time to fully charge depending on how the Reader is being operated. Recommended Temperature Please use your Reader within the recommended operating temperature range (19). Table of Contents Index 14 Power Saving Tips More power requiring operations The following cases may consume more power.

Graphics intensive content Playing audio files Photo slideshow with a short duration Using external memory cards Frequent insertion and ejection of memory cards An excessive number of contents in a memory card ePub and PDF files partially conforming to document standard Annotation, keyword search and dictionary search functions Table of Contents Index 15 Power Saving Tips Tips to save Power If you do not use the Reader for more than one day, power off the Reader completely (8, 89). Do not leave the Reader uncharged for a prolonged period of time. This may reduce the charging capability. We recommend the optional AC adapter (PRSA-AC1). The performance of any third party charger is not guaranteed.

Please keep the Reader at normal temperature operation (19). Table of Contents Index 16 How to Get eBooks How to Get eBooks To purchase and transfer eBooks to your Reader, you need to following initial steps. 1 Install Reader™ Library software. 2 Create an account at your Reader Store or your eBook store. 3 Purchase and download eBooks. 4 Authorize your computer and Reader. 5 Select and transfer purchased eBooks to your Reader. After the initial steps, you only need steps and 5 to enjoy more eBooks. Reader comes with step-by-step instructions describing the above initial steps. Here is how to access the instructions.

PC: From the "Start" menu, click "My Computer" ("Computer" in the case of Windows Vista, Windows 7) and then double-click the "READER" drive. Drag the "How to get eBooks on Reader" file and drop it on the desktop. Mac: Double-click "READER" on the desktop, and drag the "How to get eBooks on Reader" file and drop it on the desktop. Double-click the file to open it and follow the step-by-step instructions. 17 Support Support First, check "Troubleshooting" (96) and refer to the Reader Library Help to resolve the issue. Support Web site and contact list: USA: www.sony.com/readersupport Phone number: 1-866-962-7669 Canada: www.sony.ca/readersupport Phone number: 1-877-899-7669 Europe: support.sony-europe.com/eBook/PRS Australia: www.sony.com.au/support Phone number: 100-17-669 Warranty Information for Australia customers: www.sony.com.au/warranty Table of Contents Index 18 Specifications Specifications Model name PRS-650 Power source Built-in rechargeable battery: ..



[Your user manual](#)
[SONY PRS-650](#)