

**Franklin®**

**BOOKMAN®**

---

**EXPANDABLE ELECTRONIC BOOK**

*Merriam-Webster®*

**Advanced Dictionary  
& Thesaurus**

**USER'S GUIDE**

**ADV-640**

## License Agreement

---

READ THIS LICENSE AGREEMENT BEFORE USING ANY BOOKMAN ELECTRONIC BOOK.

YOUR USE OF THE BOOKMAN ELECTRONIC BOOK DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE BOOKMAN ELECTRONIC BOOK AND YOUR PURCHASE PRICE WILL BE REFUNDED. BOOKMAN ELECTRONIC BOOK means the software product, hardware, and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

### LIMITED USE LICENSE

All rights in the BOOKMAN ELECTRONIC BOOK remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and non-exclusive license to use the BOOKMAN ELECTRONIC BOOK on a single FRANKLIN BOOKMAN at a time. You may not make any copies of the BOOKMAN ELECTRONIC BOOK or of the preprogrammed data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the BOOKMAN ELECTRONIC BOOK. You may not export or reexport, directly or indirectly, the BOOKMAN ELECTRONIC BOOK without compliance with appropriate governmental regulations. The BOOKMAN ELECTRONIC BOOK contains Franklin's confidential and propriety information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

# Contents

Welcome to the world of BOOK-MAN! With this *Advanced Dictionary & Thesaurus* you can find over 110,000 dictionary words with 300,000 entries, 500,000 synonyms, as well as antonyms, etymologies,

Classmates®, Confusables® and more. You can also correct misspellings, save words to your User list, and play three challenging word games. Read this User's Guide to learn how.

<b>Installing Batteries and Installing a Book Card .....</b>	<b>4</b>
<b>Selecting a Book and Using the Color Keys .....</b>	<b>5</b>
<b>Changing the Settings and Viewing a Demonstration .....</b>	<b>6</b>
<b>Finding Definitions .....</b>	<b>7</b>
<b>Finding Words in Definitions .....</b>	<b>7</b>
<b>Finding Thesaurus Entries .....</b>	<b>8</b>
<b>Finding Letters in Words .....</b>	<b>9</b>
<b>Correcting Misspellings .....</b>	<b>9</b>
<b>Highlighting Words to Look Up .....</b>	<b>10</b>
<b>Finding Classmates .....</b>	<b>10</b>
<b>Finding Confusables and Reviewing Words .....</b>	<b>11</b>
<b>Saving Words .....</b>	<b>12</b>
<b>Deleting Saved Words .....</b>	<b>13</b>
<b>Changing Game Settings .....</b>	<b>13</b>
<b>Playing the Games .....</b>	<b>14</b>
<b>Sending Words Between Books .....</b>	<b>15</b>

# Key Guide

## Function Keys

- CLEAR** Clears to *Enter your word*.
- MENU** Displays the main menus.
- THES** **(red)** Displays a thesaurus entry.
- CLASS** **(green)** Displays Classmates®.
- GAMES** **(yellow)** Displays the games list.
- LIST** **(blue)** Displays the UserList menu.
- CARD** Exits the selected book.
- ON/OFF** Turns BOOKMAN on or off.

## ► Understanding the Color Keys

The color keys (red, green, yellow, and blue) perform the functions listed above only for the book described in this User's Guide.

Other books have their own color key functions, which are labelled on their book cards or on the keyboard. For more information, read "Using the Color Keys."

## Other Keys

- BACK** Backs up and erases letters.
- CAP** Shifts keys to type punctuation.
- ENTER** Enters a search, selects a menu item, or starts a highlight.
- HELP** Displays help messages.
- ? \*** Types a question mark to stand for an unknown letter in a word; shifted, types an asterisk to stand for a series of unknown letters.



## Direction Keys

- SPACE** Move in indicated direction.
- SPACE** Types a space or pages down.

## Star Key Combinations\*

- ☆** + **CARD** Sends a word between books.
- ☆** + **DN** Displays next entry or match.
- ☆** + **UP** Displays previous entry or match.
- ☆** + **C** Displays Confusables®.
- ☆** + **D** Displays a definition.
- ☆** + **P** Displays the Path list.

\*Hold **☆** while pressing the other key.

## Installing Batteries

BOOKMAN model ADV-640 uses four AAA batteries. Here is how to install or replace them.

**Warning:** When the batteries lose power or are removed from BOOKMAN, information that you entered in its built-in book, and in an installed book card, may be erased.

1. Turn **BOOKMAN** over.
2. Slide off its battery cover in the direction of the triangle.
3. Install the batteries following the diagram on the case.
4. Replace the battery cover.

 
### ► About Screen Illustrations

Some screen illustrations may differ from what you see on your screen. This does not mean that your BOOKMAN is malfunctioning.

## Installing a Book Card

**Warning:** Never install or remove a book card when BOOKMAN is on. If you do, information that you entered in its built-in book and in an installed book card will be erased.

1. Turn your **BOOKMAN** off.
2. Turn your **BOOKMAN** over.
3. Align the tabs on the book card with the notches in the slot.

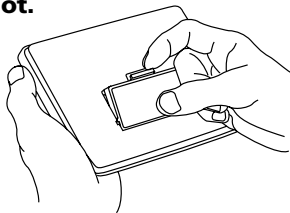

4. Press the book card until it snaps into place.

### ► Removing a Book Card

**Warning:** When you remove a book card to install another, information that you entered in the removed book card will be erased.

## Selecting a Book

Once you have installed a book card in your BOOKMAN, you can select which book you want to use.

**1. Turn your BOOKMAN on.**

**2. Press .**



These are sample books.

**3. Press  or  to highlight the book you want to use.**



**4. Press  to select it.**

 
### ► Resuming Where You Left Off

You can turn your BOOKMAN off at any screen. When you turn BOOKMAN on again, the screen that you last viewed appears.

## Using the Color Keys

The red, green, yellow, and blue keys on your BOOKMAN change functions according to which book is selected.

When the built-in book is selected, the color keys function as labelled on the BOOKMAN keyboard. When a book card book is selected, the color keys function as labelled on that book card.

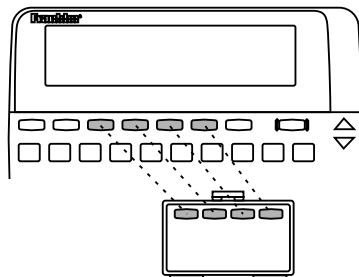

Remember, the color keys for book cards function as labelled on their book cards, not as on the BOOKMAN keyboard.

## Changing the Settings

You can adjust the font size, shutoff time, and screen contrast. The shutoff time is how long BOOKMAN stays on if you forget to turn it off.

1. Press **(CLEAR)**.
2. Press **(MENU)**.
3. Press the arrow keys to highlight the **Other** menu.
4. Highlight **Set Font, Set Shutoff, or Set Contrast**.



5. Press **(ENTER)**.
6. Highlight a setting.  
Or press **↑** or **↓** if you selected *Set Contrast*. To exit without changing settings, press **(BACK)**.
7. Press **(ENTER)** to select it.

### ► Follow the Arrows

The flashing arrows on the right of the screen show which arrow keys you can use to scroll.

## Viewing a Demonstration

Before you start using a book, you may want to see a demonstration.

If no book card is installed, the demonstration appears automatically when you turn on your BOOKMAN. To disable the automatic demonstration, highlight *Disable Demo* on the **Other** menu and then press **(ENTER)**. To re-enable it, select *Enable Demo*.

If a book card is installed, first press **(CARD)** and select this book. Then press **(MENU)** and select *View Demo* from the **Other** menu to see the demonstration.

### ► Help is Always at Hand

You can view a help message at virtually any screen by pressing **(HELP)**. Use **↓** or **(SPACE)** to read it. To exit help, press **(BACK)**.

If you need a reminder of what each key does, select *Tutorial* from the **Other** menu.

## Finding Definitions

It's easy to find definitions in this dictionary. Simply type a word and then press **ENTER**.

1. Press **CLEAR**.
2. Type a word (e.g., *acute*).

ENTER your word:  
acute

You cannot type capitals. To erase a letter, press **BACK**.

3. Press **ENTER**. Or hold **☆** and press **D**.

acute (adjective)  
acut·er; acut·est  
1. SHARP, POINTED

4. Press **↓** or **SPACE** to read the definition.

2. containing less than 90 degrees <an acute angle>  
3. sharply perceptive

5. Hold **☆** and press **DN** or **UP** to see the next or previous definition listed alphabetically.
6. Press **CLEAR** when done.

## Finding Words in Definitions

You can also search for all the definitions in which a specific word occurs.

1. Press **CLEAR**.
2. Press **MENU**.
3. On the **Other** menu, highlight *Search for a word* and then press **ENTER**.
4. Type a word (e.g., *legal*) and then press **ENTER**.

action (noun)  
plural actions  
1. a legal proceeding

Note: You can also search for a word in definitions by entering a word, pressing **MENU**, and then selecting *Search for...* from the **Other** menu.

5. Press **↓** or **SPACE** to read.
6. Hold **☆** and press **DN** repeatedly to see the next definitions containing your word.

ALA (abbreviation)  
: automobile legal association

7. Press **CLEAR** when done.



## Finding Thesaurus Entries

Each thesaurus entry contains a thesaurus meaning and synonyms for that meaning. Some thesaurus entries also contain antonyms and etymologies.

1. Press **CLEAR**.
2. Type a word (e.g., *splendid*).
3. Press **THES** (red).

**splendid** *adv.* extraordinarily or transcendently impressive.

This is its first thesaurus entry.

4. Press **↓** to see its synonyms.

**SYNONYMS:**  
glorious, gorgeous, magnificent, proud, resplen-

5. Hold **☆** and press **DN** to see the next thesaurus entry.

**splendid** *adjective*, marked by great magnificence, display, and usually

To return to the previous thesaurus entry, hold **☆** and press **UP**.

6. Press **CLEAR** when done.

## Finding Thesaurus Entries

### ► Other Ways to Find Thesaurus Entries

When you look up a dictionary definition of a word, THES may briefly appear at the upper right of the screen. THES indicates that the word you entered has one or more thesaurus entries. Press **THES** (red) to see them.

THES also flashes at the upper right of the screen when a highlighted word has thesaurus information. Again, press **THES** (red) to see that information.

### ► Comparing Synonyms

Some thesaurus entries include comparisons to dictionary definitions to help you understand their meaning. For example, if you see *COMPARE: promise 1*, read the first definition of *promise* to learn more.


## Finding Letters in Words

If you are uncertain about how to spell a word, type a question mark in place of each unknown letter.

To find prefixes, suffixes, and other parts of words, type an asterisk in a word. Each asterisk stands for a series of letters or spaces.

Note: If you type an asterisk at the beginning of a word, it may take a while to find the matching words.

### 1. Type a word with ?'s or an \*.

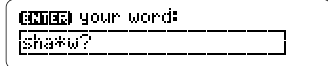

ENTER your word:  
sh\*w?

To type an asterisk, hold **CAP** and press **?\***.

### 2. Press **ENTER**.



shadows  
shadowy  
shake down

### 3. Highlight a match.


### 4. Press **ENTER** to define it.

### 5. Press **CLEAR** when done.

## Correcting Misspellings

If you misspell a word, a list of corrections automatically appears.

### 1. Type a misspelled word (e.g., *nolij*).

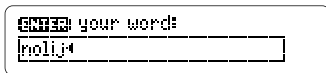

ENTER your word:  
nolij

### 2. Press **ENTER**.



1 shadows  
2 noels  
3 nola

### 3. Highlight a correction.

### 4. Press **ENTER** to view its dictionary definition.

### 5. To go back to the corrections, press **BACK**.

### 6. Press **CLEAR** when done.

## ► Two Ways to Back Up

Pressing **BACK** takes you back to the previous screen you viewed.

Holding **☆** and pressing **UP** takes you to the previous screen of similar information.

## Highlighting Words to Look Up

Another way to look up words is by highlighting them in dictionary definitions, thesaurus entries, and word lists.

1. At any text, press **ENTER** to start the highlight.

**understanding** (noun)  
1. understanding gained by actual experience <a

You can turn off the highlight by pressing **BACK**.

2. Use the arrow keys to highlight a word.

**knowledge** (noun)  
1. understanding gained by actual ~~experience~~ <a

3. Do one of the following:

**To...**

define the word  
see thesaurus entry  
see Classmates  
see Confusables  
add word to User list  
search for the word in definitions

**Press...**

**ENTER**  
**THES** (red)  
**CLASS** (green)  
**☆ + C**  
**LIST** (blue)  
**MENU** and  
then select  
*Search for...*

## Finding Classmates®

Classmates are words classified by subject. If an entry word or a highlighted word has Classmates, CLAS will flash once in the upper right of the screen.

1. Type a word (e.g., *lynx*).

**ENTER** your word:  
lynx

2. Press **CLASS** (green).

bobcat, catamount, cheetah,  
cougar, jaguar, leopard, lion,  
lioness, lynx, mountain

3. Press **↓** to read.

### ► Look for the Flashing Messages

When you enter a word or scroll down a word list, often messages such as THES, CLAS, or CONF will flash at the upper right of the screen. These messages show that the word has thesaurus information, Classmates, or Confusables. A word can have more than one message, so watch closely.

## Finding Confusables®

Confusables are words that sound alike but are spelled differently. If an entry word or a highlighted word has Confusables, CONF will flash once in the upper right of the screen.

1. Type a word (e.g., *rein*).



2. Hold  and press C.

rein: harness  
rain: precipitation  
reign: rule

Each Confusable is followed by an identifying word.

3. Press  and then highlight a word.


rein: **harness**  
rain: precipitation  
reign: rule

4. Press  to define it, or press  (red) to view its thesaurus entry, if any.

**harness** (noun)  
plural: harnesses  
: gear of a draft animal

## Reviewing Words

Use the Path list to review the last 15 words you looked up. The Path list is automatically saved between sessions unless the batteries lose power or your BOOKMAN is reset.

1. Select **Path list** from the Other menu. Or hold  and press P.

**Path list**  
experience  
knowledge

This is a sample Path list. If you haven't looked up any words, you see: *Path is empty.*

2. Highlight a word.

3. Do one of the following:

To...

define the word

see thesaurus entry

see Classmates


see Confusables

add word to User list

Press...



 (red)

 (green)

 + **C**

 (blue)

4. Press  to go back to the list.

5. Press  when done.

## Saving Words

You can save up to 40 words in the User list for personal study or review. Your User list is saved between sessions unless the batteries run out of power or your BOOKMAN is reset. Here is how to save your first word.

### 1. Press **LIST** (blue).



If you haven't added words to your User list, *View list:* **\*\*Empty\*\*** appears.

### 2. Highlight **Add word**.

### 3. Press **ENTER**.

### 4. Type a word.

### 5. Press **ENTER** to add the word.

### 6. Select **View list: 1 word**.

### 7. Do one of the following:

**To...**

define the word

see thesaurus entry

see Classmates

see Confusables

**Press...**

**ENTER**

**THES** (red)

**CLASS** (green)

**☆ + C**

## Saving Words

### ► Adding Highlighted Words

At any text, you can highlight a word and add it to your User list.

#### 1. At text, press **ENTER** to start the highlight.

#### 2. Highlight a word.

#### 3. Press **LIST** (blue).

#### 4. Select **Add "your word."**

#### 5. Press **CLEAR** when done.

### ► Adding Words Not Found in This Dictionary

When you try to add a word not in this dictionary, you're given three options from which to choose: *Cancel*, *Add anyway*, and *Correction candidate(s)*. **Caution:** Adding words that are not in this dictionary uses considerably more memory than adding words that are. If you add only those words that are not in this dictionary, it is possible that as few as 10 words can be added.

## Deleting Saved Words

You can delete one or all the words in your User list. Here's how.

### ► Deleting One Word

1. Press **LIST** (blue).
2. Select *Delete word*.
3. Highlight a word on the list.
4. Press **ENTER** to delete it.
5. Press **CLEAR** when done.

### ► Erasing Your User List

1. Press **LIST** (blue).
2. Select *Erase List*.
3. Press **Y** to erase the entire list. Or press **N** to cancel.

## Changing Game Settings

You can change the game settings at any time. Each setting applies to all the games.

1. Press **MENU**.
2. Press **←** to highlight the Game menu.



3. Highlight an option.
4. Press **ENTER**.
5. Highlight a setting.
6. Press **ENTER** to select it.

### ► Understanding the Settings

*Word List* lets you pick the words with which you'll play the games. If you select *Type Them In*, you'll need to type in words after you select a game.

*Word Length* lets you pick how many letters will be in the words.

*Skill Level* lets you select the level of difficulty.

## Playing the Games

Now that you have the games set, let's play.

1. Press **GAMES** (yellow).
2. Press **↑** or **↓** to highlight a game.
3. Press **ENTER** to start playing.
4. To exit a game and return to the list of games, press **BACK**.

### ► Seeing the Score

Your score appears after each round of a game.

Won 1 Lost 0

## Playing the Games

### Hangman

```
re????e?  
##### 9  
make a letter guess
```



Hangman challenges you to guess a mystery word, indicated by ?'s, one letter at a time. The number of guesses you can make appears to right of the #'s. For a hint, hold **CAP** and press **?**. Or press **?** to end the round. NOTE: If you ask for a hint, you will lose the round. Press **ENTER** to define the word. Press **BACK** to return to Hangman. Press **SPACE** to start a new round.

### Anagrams

```
worshipping  
ENTER word: 4
```

61

Anagrams challenges you to find all of the words that can occur within a selected word. Each letter can only be used as many times as it appears in the selected word. Each anagram must be a specified minimum length.

## Playing the Games

This will flash on the screen before each game. The number of possible anagrams is shown on the right side of the screen.

Type an anagram and then press **ENTER**. Use the arrows to view anagrams you've already entered. Hold **CAP** and press **?\*** to shuffle the letters in the selected word. Press **?\*** to end a round and reveal the remaining anagrams. Highlight a word, and then press **ENTER** to see its dictionary entry. Press **BACK** to exit Anagrams.

### Word Train™



All aboard the Word Train spelling game! You and the train take turns typing letters to form a word. Whoever types the last letter wins. To view the letters you can type at your turn, hold **CAP** and press **?\***. Or press **?\*** to end a round and reveal the word. Press **ENTER** to define the word.

## Sending Words Between Books

This book can send words to and receive words from certain other BOOKMAN books.

To send or receive a word to or from another book, you must have installed a book card in your BOOKMAN that is able to send or receive words, as well. To learn if a book card can send or receive words, read its User's Guide.

### 1. Highlight a word in this book.



To highlight a word in text, press **ENTER** and then press the arrow keys. To highlight a word in a list, press the arrow keys.

2. Hold **☆** and press **CARD**.
3. Highlight the other book.
4. Press **ENTER**.

The word that you highlighted appears in the other book.

5. Press **ENTER** to look up the word.



If the BOOKMAN keyboard fails to respond, or if its screen performs erratically, first press **CLEAR** and then press **ON/OFF** twice. If nothing happens, follow the steps below to reset it.

**Warning:** Pressing the reset button with more than very light pressure may permanently disable your BOOKMAN. In addition, resetting your BOOKMAN erases settings and information entered into its built-in book, and in any currently installed book cards.

**1. Hold **CLEAR** and press **ON/OFF**.**

If nothing happens, try Step 2.

**2. Use a paper clip to gently press BOOKMAN's reset button.**

The reset button is recessed in a pin-sized hole on the back of your BOOKMAN.

This unit may change operating modes due to Electro-static Discharge. Normal operation of this unit can be re-established by pressing the reset key, **ON/OFF**, or by removing/replacing batteries.

## Limited Warranty (U.S. only)

---

FRANKLIN warrants to you that the BOOKMAN PRODUCT will be free from defects in materials and workmanship for one year from purchase. In the case of such a defect in your BOOKMAN PRODUCT, FRANKLIN will repair or replace it without charge on return, with purchase receipt, to the dealer from which you made your purchase or Franklin Electronic Publishers, Inc., One Franklin Plaza, Burlington, NJ 08016, within one year of purchase. Alternatively, FRANKLIN may, at its option, refund your purchase price.

Data contained in the BOOKMAN PRODUCT may be provided under license to FRANKLIN. FRANKLIN makes no warranty with respect to the accuracy of data in the BOOKMAN PRODUCT. No warranty is made that the BOOKMAN PRODUCT will run uninterrupted or error free. You assume all risk of any damage or loss from your use of the BOOKMAN PRODUCT.

This warranty does not apply if, in the sole discretion of FRANKLIN, the BOOKMAN PRODUCT has been tampered with, damaged by accident, abused, misused, or misapplication, or as a result of service or modification by any party, including any dealer, other than FRANKLIN. This warranty applies only to products manufactured by or for FRANKLIN. Batteries, corrosion, or battery contacts and any damage caused by batteries are not covered by this warranty. NO FRANKLIN DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY ADDITIONAL WARRANTY IN THIS REGARD OR TO MAKE ANY MODIFICATION OR EXTENSION OF THIS EXPRESS WARRANTY.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES, WRITTEN OR ORAL, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. YOUR SOLE AND EXCLUSIVE REMEDY SHALL BE FRANKLIN'S OBLIGATION TO REPLACE OR REFUND AS SET FORTH ABOVE IN THIS WARRANTY. Some States do not allow the exclusion of implied warranties, or limitations on how long a warranty lasts. This warranty gives you specific rights; you may also have additional rights which vary from State to State. This warranty shall not be applicable to the extent that enforcement of any provision may be prohibited by applicable law. FRANKLIN SHALL IN NO EVENT BE LIABLE TO YOU OR TO ANY OTHER PERSON FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, OR ANY OTHER INDIRECT LOSS OR DAMAGE, ARISING OUT OF YOUR PURCHASE, THE MANUFACTURE OR SALE OF THE BOOKMAN PRODUCT, THIS LICENSE, OR ANY OBLIGATION RESULTING THEREFROM OR THE USE OR PERFORMANCE OF THE BOOKMAN PRODUCT UNDER ANY LEGAL THEORY, WHETHER BREACH OF CONTRACT, TORT, STRICT LIABILITY OR ANY OTHER CAUSE OF ACTION OR PROCEEDING, WHICH DAMAGES SHALL INCLUDE, BUT NOT BE LIMITED TO, LOST PROFITS, DAMAGES TO PROPERTY, OR PERSONAL INJURY (BUT ONLY TO THE EXTENT PERMITTED BY LAW). FRANKLIN'S ENTIRE LIABILITY FOR ANY CLAIM OR LOSS, DAMAGE, OR EXPENSE FROM ANY SUCH CAUSE SHALL IN NO EVENT EXCEED THE PRICE PAID FOR THE BOOKMAN PRODUCT. THIS CLAUSE SHALL SURVIVE FAILURE OF AN EXCLUSIVE REMEDY. This license and warranty is governed by the laws of the United States and the State of New Jersey.

## Copyrights and Patents

---

### **BOOKMAN Model ADV-640**

- batteries: 4 AAA, 1.5 volt
- size: 14 x 2.5 x 10.3 cm
- weight: 6 oz. (without batteries)

© 1987-1997 Franklin Electronic Publishers, Inc., Burlington, NJ 08016-4907 USA. All rights reserved.

© 1989 Merriam-Webster, Inc.

All rights reserved. Classmates, Confusables, and Word Train are trademarks of Franklin. All rights reserved.

**FCC Notice:** Complies with the limits for a Class B computing device pursuant to Subpart B of part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

U.S. Patents 4,490,811; 4,830,618; 4,891,775; 5,007,019; 5,113,340; 5,203,705; 5,218,536; 5,249,965; 5,333,313; European Patent 0 136 379. Pat. Pend.

ISBN 1-56712-130-6

# Index

---

- ?\* key 9, 14
- Anagrams game 14
- Arrow keys 3, 6
- Asterisks 9
- Backing up 9
- Book cards
  - installing 4
  - removing 4
- Changing settings 6
- CLAS message 10
- Color keys
  - understanding 3
  - using 5
- Compare**:, using 8
- CONF message 10
- Confusables 11
- Contrast, setting 6
- Demonstration 6
- Font size, changing 6
- Games
  - changing settings 13
  - playing 14-15
  - scoring 14
- Hangman game 14
- Help, finding 6
- Highlighting words 10
- Installing a book card 4
- Messages
  - Add anyway* 12
  - Cancel* 12
  - correction list 12
  - Path is empty* 11
  - Type Them in* 13
  - View list: \*\*empty\*\** 12
- Patents 17
- Path list 12
- Question mark key 9, 14
- Resetting BOOKMAN 16
- Reviewing words 11
- Searching for words 7
- Selecting a book 5
- Shutoff
  - changing 6
  - setting 6
- Spelling, correcting 9
- STAR key
  - with CARD key 15
  - with C key 3, 11, 12
  - with D key 3, 7
  - with UP/DN key 3, 7, 8
  - with P key 3, 11
- THES message 8, 10
- Thesaurus entries 8
- User List
  - adding highlighted words 12
  - adding words not in dictionary 12
  - deleting a word from 13
  - erasing the entire list 13
  - saving words 12
  - viewing the list 12
- Warranty 17
- Word Train game 15

**Franklin®**  
Electronic Publishers