

Franklin®

BOOKMAN®

Dizionario Inglese-
Italiano Compatto

GUIDA ALL'USO/USER'S GUIDE
BQL-2066

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING ANY BOOKMAN ELECTRONIC BOOK.

YOUR USE OF THE BOOKMAN ELECTRONIC BOOK DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE BOOKMAN ELECTRONIC BOOK AND YOUR PURCHASE PRICE WILL BE REFUNDED. BOOKMAN ELECTRONIC BOOK means the software product, hardware, and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

LIMITED USE LICENSE

All rights in the BOOKMAN ELECTRONIC BOOK remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use the BOOKMAN ELECTRONIC BOOK on a single FRANKLIN BOOKMAN at a time. You may not make any copies of the BOOKMAN ELECTRONIC BOOK or of the preprogrammed data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the BOOKMAN ELECTRONIC BOOK. You may not export or reexport, directly or indirectly, the BOOKMAN ELECTRONIC BOOK without compliance with appropriate governmental regulations. The BOOKMAN ELECTRONIC BOOK contains Franklin's confidential and propriety information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Contents

Introduction	23
Installing Book Cards	23
Selecting a Book	24
Using the Color Keys	24
Setting the Message Language	25
Viewing a Demonstration	25
Changing the Settings	26
Changing the Entry Language	26
Finding Dictionary Entries	27
Highlighting a Word	28
Finding English Inflections	29
Finding a Letter in a Word	30
Finding a Series of Letters	30
Correcting Misspellings	31
Using Your Personal List	31
Changing Game Settings	33
Playing the Games	33
Sending a Word Between Books	35
Book Card Care	36
Resetting Your BOOKMAN	38
Copyrights and Patents	38
Key Appendix	39

Key Guide

Color Keys

(red) Displays inflections of a word.

(green) Switches between English and Italian entry languages.

(yellow) Displays the games list.

(blue) Displays the personal word list menu.

Function Keys

BACK Backs up, erases letters, or stops a highlight.

CAP Shifts keys to type capitals and punctuation marks.

CARD Exits the book you are reading.

CLEAR Erases all entries and returns to the entry screen.

ENTER Enters a search, selects a menu item, or starts a highlight.

 
HELP Displays help messages.

MENU Displays the main menus.

ON/OFF Turns your BOOKMAN on or off.

SPACE Types a space or pages down.

? * Types a **?** to stand for an unknown letter in a word, displays a full menu item, or displays the headword in a dictionary entry.



Direction Keys

Move in indicated direction.

Accents a typed letter.

Pages up or down.

Key Combinations*

☆ + **CARD** Sends a word between books.

☆ + **←** or **→** Shows the next or previous word or inflection group.

☆ + **Q** - **P** Types letters.

☆ + **↓** Types a hyphen.

CAP + **↑** or **↓** Goes to the top or bottom of the text or menus.

CAP + **? *** Types an ***** to stand for a series of unknown letters.

* Hold the first key while pressing the other key.

► Understanding the Color Keys

The color keys (red, green, yellow, and blue) perform the functions listed above only for the BOOKMAN book described in this User's Guide.

Other books have their own color key functions, which are labelled on their book cards and listed in their User's Guides. For more information, read "Using the Color Keys."

Introduction

Welcome to the world of BOOKMAN! BOOKMAN is a powerful, portable electronic reference with a built-in book and a slot in the back for more books. With this *Dizionario Inglese-Italiano Compatto*, you can now translate and define more than 34,000 words, correct misspellings of both Italian and English words, view English inflections, and save words to a personal word list for a more enjoyable way to learn. To learn how to use this dictionary, read this User's Guide.

Use your BOOKMAN to read this book card. Read "Installing Book Cards" to learn how to get started.

► Resuming Where You Left Off

You can turn off your BOOKMAN at any screen. When you turn your BOOKMAN on again, the screen that you last viewed appears.

 
► Follow the Arrows

The flashing arrows on the right of the screen show which arrow keys you can press to move around the screen.

Installing Book Cards

Warning: Never install or remove a book card while BOOKMAN is on. If you do, information that you entered in its built-in book, as well as in an installed book card, may be erased.

1. Turn your **BOOKMAN** off.
2. Turn your **BOOKMAN** over.
3. Align the tabs on the book card with the notches in the slot.

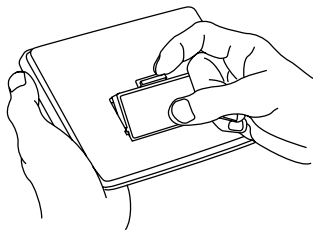

4. Press the book card down until it snaps into place.

► Removing Book Cards

Warning: When you remove a book card to install another, information that you entered into the removed book card may be erased.

Selecting a Book

Once you have installed a book card in your BOOKMAN, you can then select which book you want to use.

1. Turn your BOOKMAN on.
2. Press **CARD**.



These are sample books.

3. Press **↔** or **↵** to highlight the book you want to use.



4. Press **ENTER** to select it.

► About Screen Illustrations

 
Some screen illustrations in this User's Guide may differ from what you see on screen. This does not mean that your BOOKMAN is malfunctioning.

Note: The examples in the English half of this manual use English as the message language.

Using the Color Keys

The red, green, yellow, and blue keys on the top row of your BOOKMAN change functions according to which book is selected.

If you have selected the built-in book, the colour keys function as labeled on the BOOKMAN keyboard. If you have selected a book card, the color keys function as labeled on that card.

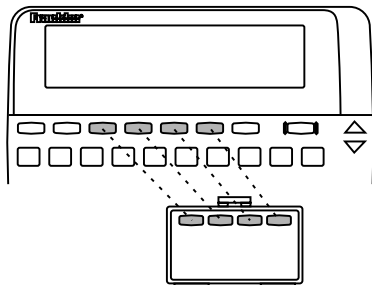

Remember, when you have selected a book card, the color keys function as labeled on that card, not as on the keyboard.

Setting the Message Language

When you turn on this product for the first time, you must choose the message language. The message language is the language of the prompts, screen instructions, menu items, and help messages.



Italiano: premere (A)
English: press (B)

- To select English as the message language, press (B).
- To select Italian as the message language, press (A).

► Changing the Message Language

Once you have set the message language, you may wish to change it.

Here is how to change the message language from Italian to English. First press (MENU) to go to the main menus, and use the arrow keys to highlight the Setup menu. Then highlight *Lingua del Messaggio* and press (ENTER) to select it.

To change the message language from Italian to English, select *Message Language* from the Setup menu.

Viewing a Demonstration

Before you start using your BOOKMAN, you can view a brief demonstration of what it can do.

When no book card is installed in your BOOKMAN, the demonstration will automatically appear after you turn the unit on. To stop the demonstration, press (CLEAR). To disable it, press (MENU) and then use the arrow keys to highlight the Setup menu. Highlight *Disable Demo* from the Setup menu and press (ENTER) to select it. To re-enable it, select *Enable Demo* from the Setup menu.

When a book card is installed in your BOOKMAN, press (MENU). Then use the arrow keys to highlight *View Demo* from the Setup menu and then press (ENTER) to view the demo.

► Help is Always at Hand


You can view a help message at virtually any screen by pressing (HELP). Use the Direction keys to read it. To exit help, press (BACK).

To read about what the keys do, select *Tutorial* from the Setup menu.

Finding Dictionary Entries

With this dictionary, you can translate English words to Italian and Italian words to English simply by typing the word.

1. Press **CLEAR**.
2. Press **LING** (green) to change the entry language to English, if needed.
3. Type a word. For example, type *woman*.
To erase a letter press **BACK**.
4. Press **ENTER**.

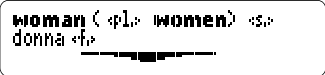

woman (pl. women) <:>
donna <:>

5. Use the Direction keys to read the dictionary entry, if needed.
6. Press **CLEAR** when finished.

► Understanding Dictionary Entries

The bold words at the top of the dictionary entry is the headword with its tense and gender in parentheses, which is followed by any available translation(s) of the headword. Other definitions, variants of the word, and similar words are shown along with their translations, if any are available.

Finding Dictionary Entries

► Typing Accents and Diacritical Marks

You do not need to type accent and diacritical marks when you are entering words at the entry screen. They will be added automatically. If you type a word which has two forms (for example, *resume*, *résumé*) that are accented differently, you must highlight the form that you want and press **ENTER**.

If you want to type accent and diacritical marks, you must use the correct marks or the word will be treated as a misspelling. To type an accent or diacritical mark, type the desired letter (for example, *e*) and press **↑** or **↓** until the desired mark appears.

► Browsing Dictionary Entries

Here is how to move around in the dictionary entries.

To...

Go to the next or previous dictionary entry

Go to the top or bottom of the dictionary entry

Page up or down

Press...

☆ +

↑ or **↓**

↑ +

↑ or **↓**

or

Finding Dictionary Entries

► Another Way to Find Words

Instead of entering words at the entry screen, you can also search the dictionary list. First press **(MENU)**. Then start typing a word at the dictionary list. To erase a letter, press **(BACK)**.

When the word you want translated is highlighted, press **(ENTER)** to view its dictionary entry. You can also use the Direction keys to help you highlight words on the dictionary list.

 
► Changing the Entry Language from the Main Menus

You can also change the entry language from the main menus. Simply highlight the Ling menu and select either *Ital* → *Engl* to change the entry language to Italian or select *Engl* → *Ital* to change the entry language to English. Or press **(LING)** (green) to change the current entry language.

Highlighting a Word

Another way to search for words is by highlighting them in dictionary entries or in any word lists. Then you can find their definitions, inflections, or add them to your personal words list. Note: If you look up a word in a language other than your current entry language, the entry language is temporarily changed to the other language. When you press **(CLEAR)** or **(MENU)**, your selected entry language is restored.


1. At any text, press **(ENTER)** to start the highlight.



office <s> 1 ufficio <m> 2 ministero <m> 3 funzione <f>, carica <f> 4 servizio <m>

You can turn the highlight off by pressing **(BACK)**.

2. Use the arrow keys to highlight at word.

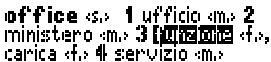

office <s> 1 ufficio <m> 2 ministero <m> 3 **funzione** <f>, carica <f> 4 servizio <m>

3. Do one of the following.

To...

Press...

define the word

(ENTER)

view English inflections

(CO NLU)

add words to the personal list

(LISTA)

Finding English Inflections

 
Inflections show changes in the meaning or function of a word. This dictionary includes inflections of English nouns, verbs, modifiers, and other words

1. Press **(LING)** (green) to change the entry language to English, if needed
2. Type an English word. For example, type *swim*.
3. Press **(CO NLU)** (red).



Some words may have more than one form or part of speech. In this example, you have to select the desired part of speech.

4. Highlight the desired form, if needed, and press **(ENTER)**.



These are the principal parts of the verb swim.

5. Press **↓**, **,** or **(SPACE)** to read.

Finding English Inflections

6. Press **(CO NLU)** (red) repeatedly to view inflections.

Or you can also hold **(☆)** and press **↑** or **↓** to go through the list of inflections.

7. Press **(CLEAR)** when finished.

▶ Getting Grammar Guidance

When viewing inflections, you can press **(HELP)** to view detailed descriptions of how to use inflections, with examples of use.

▶ English Verb Inflection Forms

Here are the English verb forms listed in this dictionary in the order that they appear: present, past, future, present progressive, past progressive, future progressive, present perfect, past perfect, future perfect, conditional, past conditional, present perfect progressive, past perfect progressive, imperative, subjunctive, infinitive, perfect infinitive, negatives, and interrogatives.

Correcting Misspellings

If you misspell a word in either language, this dictionary shows you a list of corrections from which you can choose.

1. Type a misspelled word. For example, *dociente*.

To erase a letter, press **BACK**.

2. Press **ENTER.**

```
dociente
toccante
decente
```

3. Use the arrow keys to highlight a correction.

4. Press **ENTER to select the word.**

```
docente
A <agg.> teaching
B <s, m, e f.> teacher
```

5. Press **CLEAR when finished.**

Using Your Personal List

Adding Words

You can save up to 10 words total, in both English and Italian, in your personal word list for study or review. The personal word list is saved between sessions, unless the batteries run out of power or your **BOOKMAN** is reset.

This dictionary has both an English and Italian words list, you can press **LING** (blue) at any time to switch between them.

1. Press **LISTA (blue).**

```
LISTA
ADD A WORD
DELETE A WORD
ERASE LIST
```

2. Use the arrow keys to highlight *add a word*, and then press **ENTER.**

3. Type a word in the current entry language

```
Italian word to add:
cane
```

4. Press **ENTER to add the word**

5. Press **CLEAR when finished.**

Using Your Personal List

► Adding Typed Words

You can also add words to your personal word list directly from the entry screen. Type the word you want to add to your personal word list. Press **(LISTA)** (blue) to go to the personal word list menu, and press **(ENTER)** to add the word. Then press **(CLEAR)** to return to the entry screen.

Note: You can add the headword of a dictionary entry, by pressing **(LISTA)** (blue) from within the entry.

► Adding Highlighted Words

You can also add words to your personal word lists from dictionary entries and correction lists. Highlight a word you want to add to your personal word list. Press **(LISTA)** (blue) to go to the personal word list menu, and then press **(ENTER)** to add the word. Press **(CLEAR)** to return to the entry screen.

Viewing Your List

1. Press **(LISTA)** (blue).
2. Press **(LING)** (green) to toggle between your English and Italian word lists, if needed.

Using Your Personal List

3. Press **(ENTER)** to view the current word list.
4. Highlight a word on the list.
5. To view the dictionary entry for the word, press **(ENTER)**.

Deleting a Word

1. Press **(LISTA)** (blue).
2. Press **(LING)** (green) to toggle between your English and Italian word lists, if needed.
3. Highlight *Delete a word*, and then press **(ENTER)**.
4. Use **↑** or **↓** to highlight a word.
5. Press **(ENTER)** to delete the word.

Erasing Your List

1. Press **(LISTA)** (blue).
2. Highlight *Erase List*.
3. Press **(ENTER)**.
4. Press **(Y)** for yes.
This will only erase the personal word list in the current entry language.
5. Press **(CLEAR)** to return to the entry screen.

Changing Game Settings

You can change the game settings at any time. Each setting applies to all of the games.

1. Press **(GEOCHI)** (yellow).
2. Press **(ENTER)** to select *Game Settings*.



3. Use **←** or **→** to highlight an option, if needed.
4. Press **↑** or **↓** to select the desired game setting.
5. Press **(ENTER)** to select the setting.
6. Press **(BACK)** to return to the games.

► Understanding Settings

Words: Determines the size of the words with which you play the games (from 3 to 14 letters). Also you can choose from *Random*, *Enter Your Own*, and *Personal Words*.

 
Level: Selects the level of difficulty: *Beginner*, *Intermediate*, *Advanced*, *Expert*, and *Wizard*.

Language: Selects the language with which you want to play the games.

Playing the Games

Now that you have selected the settings for the game, let's play them.

1. Press **(GEOCHI)** (yellow).
2. Highlight a game using the arrow keys.



3. Press **(ENTER)** to select it.
4. After the round is over, press **(SPACE)** to play another round.

► Help in Games

Press **(HELP)** while you are in a game if you need help. It will explain the game you are playing. To exit help, press **(BACK)**.

► Game Options

After you finish a round, you can do the following:

To...

Play another round

(SPACE)

View the dictionary entry for the word

(ENTER)

Play a different game

(BACK)

Hangman

Hangman challenges you to guess a mystery word, indicated by ?'s, one letter at a time. As you type letters, the correct letters appear in place of the question marks, your incorrect letters appear below, and guesses remaining appear to the right. You must guess the word before you run out of tries and your man hangs.

To reveal a single letter, hold **CAP** and press **?***. Or press **?*** to reveal the word and end the round. Note: If you ask for a hint, you will automatically lose the round.

Anagrams

Anagrams challenges you to find all of the words that can occur within a given word. Each letter can only be used as many times as it appears in the given word. Each anagram must contain at least the number of letters that appear on the screen before each round.

Type an anagram and then press **ENTER**. Use the arrow keys to view any anagrams you have already entered. Hold **CAP** and press **?*** to shuffle the letters of the given word. Press **?*** to end a round and reveal the remaining anagrams.

Flashcards

Flashcards flashes words for you to define or study. To view the definition of the word, press **ENTER**. Press **BACK** to return to Flashcards, and then press **↓** to try another word.

Word Train™

All aboard the Word Train spelling game! You and the train take turns typing letters to form a word. Whoever types the last letter wins.

To view the letters you can type during your turn, hold **CAP** and press **?***. Or press **?*** to end the round.

Conjumania™-English

 
Conjumania teaches verb conjugations. It shows you an infinitive English verb and asks you to enter a conjugation. Your conjugation must be spelled correctly, including accents. To try a new conjugation for the same word, press **SPACE**. To try a new conjugation for a new word, hold **☆** and press **SPACE**. Note: after four conjugations, the word will automatically be changed.

For a hint, hold **CAP** and press **?***. Or press **?*** to end the round. Note: If you ask for a hint, you will automatically lose the round.

This BOOKMAN dictionary can send words to and receive words from certain other BOOKMAN books.

To send a word, you must first install a book card in your BOOKMAN, and that book card must be able to send or receive words. To learn if book card can send or receive words, read its User's Guide.

1. Highlight a word in this book.



office <s> 1 ufficio <m> 2 ministero <m> 3 ~~ufficio~~ <t>, carica <t> 4 servizio <m>

To highlight a word in a list, press the arrow keys. To highlight a word in text, press **ENTER** and then use the arrow keys.

2. Hold **☆** and press **CARD**.

3. Highlight the other book.

4. Press **ENTER**.

The word that you highlighted appears in the other book.

5. If needed, press **ENTER** to look up the word.

Limited Warranty (outside U.S.)

This product, excluding batteries, is guaranteed by Franklin for a period of one year from the date of purchase. It will be repaired or replaced (at Franklin's option) free of charge for any defect due to faulty workmanship or materials.

Products purchased outside the United States that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This guarantee does not affect the consumer's statutory rights.

This unit may change operating modes due to Electro-static Discharge. Normal operation of this unit can be re-established by pressing the reset key, **(ON/OFF)** or by removing/replacing batteries

 
Book Card Care

- **Do not touch the metal contacts on the book cards**

Caution: Touching these electrical contacts with statically charged objects, including your fingers, could erase information entered in a book card or built-in book



- **Do not put excessive pressure on the book cards.**

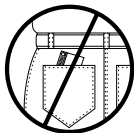

- **Do not expose the book cards to heat, cold, or liquids.**



Limited Warranty (U.S. only)

FRANKLIN warrants to you that the BOOKMAN PRODUCT will be free from defects in materials and workmanship for one year from purchase. In the case of such a defect in your BOOKMAN PRODUCT, FRANKLIN will repair or replace it without charge on return, with purchase receipt, to the dealer from which you made your purchase or Franklin Electronic Publishers, Inc., One Franklin Plaza, Burlington, NJ 08016-4907, within one year of purchase. Alternatively, FRANKLIN may, at its option, refund your purchase price. Data contained in the BOOKMAN PRODUCT may be provided under license to FRANKLIN. FRANKLIN makes no warranty with respect to the accuracy of data in the BOOKMAN PRODUCT. No warranty is made that the BOOKMAN PRODUCT will run uninterrupted or error free. You assume all risk of any damage or loss from your use of the BOOKMAN PRODUCT.

This warranty does not apply if, in the sole discretion of FRANKLIN, the BOOKMAN PRODUCT has been tampered with, damaged by accident, abused, misused, or misapplication, or as a result of service or modification by any party, including any dealer, other than FRANKLIN. This warranty applies only to products manufactured by or for FRANKLIN. Batteries, corrosion, or battery contacts and any damage caused by batteries are not covered by this warranty. NO FRANKLIN DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY ADDITIONAL WARRANTY IN THIS REGARD OR TO MAKE ANY MODIFICATION OR EXTENSION OF THIS EXPRESS WARRANTY.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES, WRITTEN OR ORAL, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. YOUR SOLE AND EXCLUSIVE REMEDY SHALL BE FRANKLIN'S OBLIGATION TO REPLACE OR REFUND AS SET FORTH ABOVE IN THIS WARRANTY. Some States do not allow the exclusion of implied warranties, or limitations on how long a warranty lasts. This warranty gives you specific rights; you may also have additional rights which vary from State to State. This warranty shall not be applicable to the extent that enforcement of any provision may be prohibited by applicable law.

FRANKLIN SHALL IN NO EVENT BE LIABLE TO YOU OR TO ANY OTHER PERSON FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, OR ANY OTHER INDIRECT LOSS OR DAMAGE, ARISING OUT OF YOUR PURCHASE, THE MANUFACTURE OR SALE OF THE BOOKMAN PRODUCT, THIS LICENSE, OR ANY OBLIGATION RESULTING THEREFROM OR THE USE OR PERFORMANCE OF THE BOOKMAN PRODUCT UNDER ANY LEGAL THEORY, WHETHER BREACH OF CONTRACT, TORT, STRICT LIABILITY OR ANY OTHER CAUSE OF ACTION OR PROCEEDING, WHICH DAMAGES SHALL INCLUDE, BUT NOT BE LIMITED TO, LOST PROFITS, DAMAGES TO PROPERTY, OR PERSONAL INJURY (BUT ONLY TO THE EXTENT PERMITTED BY LAW). FRANKLIN'S ENTIRE LIABILITY FOR ANY CLAIM OR LOSS, DAMAGE, OR EXPENSE FROM ANY SUCH CAUSE SHALL IN NO EVENT EXCEED THE PRICE PAID FOR THE BOOKMAN PRODUCT. THIS CLAUSE SHALL SURVIVE FAILURE OF AN EXCLUSIVE REMEDY. This license and warranty is governed by the laws of the United States and the State of New Jersey.

Resetting Your BOOKMAN

If the BOOKMAN keyboard fails to respond, or if its screen performs erratically, first press **CLEAR** and then press **ON/OFF** twice. If nothing happens, follow the steps below to reset it.

Warning: Pressing the reset button with more than very light pressure may permanently disable your BOOKMAN. In addition, resetting your BOOKMAN erases settings and information entered into its built-in book and in any installed book cards.

1. Hold **CLEAR and press **ON/OFF**.**

If nothing happens, try Step 2.

2. Use a paper clip to *gently* press BOOKMAN's reset button.

The reset button is located in a pin-sized hole either on the back or front of your BOOKMAN unit. To learn where the reset button is located, see the User's Guide for your BOOKMAN unit.

► Troubleshooting BOOKMAN

- Make sure your book card, if any, is installed correctly.
- Check that the book card's metal contacts are dirt and dust free

Copyrights and Patents

Model BQL-2066

- size: 5.9 x 4.2 0.6 cm
- weight 11.34 g (without batteries)

© 1997 Franklin Electronic Publishers, Inc., Burlington NJ 08016 USA. All rights reserved

© 1996 Zanichelli, editore S.p.A. All rights reserved.

FCC Notice: Complies with the limits for a Class B computing device pursuant to Subpart B of part 15 of FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

U.S. Patents 4,490,811; 4,830,618; 4,891,775; 5,113,340; 5,203,705; 5,218,536; 5,229,936; 5,295,070; 5,333,313; 5,007,019; 5,153,831; 5,249,965; 5,321,609; 5,396,606; GERMAN PATS M9409743.7 and M9409744.5

European Patent 0 136 379. Pat. Pend

ISBN 1-56712-348-1

Key Appendix

Some BOOKMAN keyboards use different words on the keys. Use the chart below for reference if the words on the keys of your BOOKMAN do not match the ones in this User's Guide. To learn what the keys do, read "Key Guide."

English

BACK

CAP

CARD

CLEAR

DN

ENTER

HELP

MENU

NEXT

ON/OFF

PREV

SPACE

UP

Italian

INDIETRO

↑

SCHED

CANC

GIÙ

INVIO

GUIDA

MENU

SUCC

ON/OFF

PREC

SPAZIO

SU

FRB-28077-00
P/N 7201165

Rev A

Franklin[®]
Electronic Publishers