

Franklin®
Electronic Publishers

Webster's

SPELLING CORRECTOR

CORRECTOR ORTOGRÁFICO

USER'S GUIDE

MANUAL DEL USUARIO

NCS-100

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING THE PRODUCT. YOUR USE OF THE PRODUCT DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE PRODUCT AND YOUR PURCHASE PRICE WILL BE REFUNDED. PRODUCT means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

Limited Use License

All rights in the PRODUCT remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use this PRODUCT. You may not make any copies of the PRODUCT or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the PRODUCT. You may not export or reexport, directly or indirectly, the PRODUCT without compliance with appropriate governmental regulations. The PRODUCT contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Introduction

Congratulations! You now own a powerful electronic spelling corrector that you can use at home, work, or school. Using your new *Webster's Spelling Corrector*, you can...

- correct and check spellings,
- find missing letters in words,
- find prefixes, suffixes, and other parts of words,
- find words that people often confuse,
- build words from letters, and
- play exciting and educational word games.

To learn how, follow the steps in this User's Guide using the examples shown or words that interest you.

To learn even more, also read tips like the ones below.

✓ **Changing the Contrast**

To adjust the screen contrast of your spelling corrector, first turn it on and then press **CLEAR**. Then press  or  repeatedly until the contrast suits you.

✓ **Replacing the Battery**

This spelling corrector uses one CR2032, 3-volt lithium battery. Should you need to replace the battery, remove the back cover of the spelling corrector with a small screwdriver. Then install a new battery, with its plus sign facing you, and replace the cover.

Key Guide

BACK	Backs up (e.g., erase a letter).
BUILD	Builds words from letters.
CLEAR	Clears to <i>Ready for word</i> .
CONF	Display Confusables®, if any.
DEMO	Displays a brief demonstration.
ENTER	Enters a word or selects an item.
GAMES	Displays the games.
HELP	Displays help messages.
ON/OFF	Turns this spelling corrector on or off.
←	Scrolls left or erases typed letters.
↑	Scrolls up or types an apostrophe.
↓	Scrolls down or types a period.
→	Scrolls right or types a space.
?	Types a ? to stand for a letter in a word. During a game, reveals a word.
*	Types an * to stand for a series of letters. During a game, reveals a hint.

✓ Follow the Arrows

The flashing arrows at the right of the screen show which arrow keys you can press to view more text.

Finding Spellings

It's easy to check or correct spellings. When you enter a correct word, a list of similar words appears. When you enter a misspelling, a list of corrections appears. Follow these steps.

 
1. **Type a word. To erase, press**  **or** .



serkut

You cannot type capital letters, but capitals are displayed in corrections.

2. **Press** .

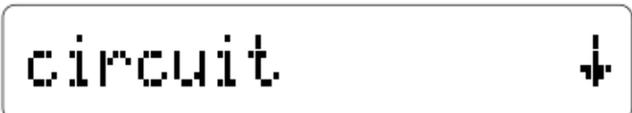

circuit

The flashing arrow indicates more words.

3. **Press**  **repeatedly to view more words.**

To find even more corrections, press  twice.

4. **Press**  **when finished.**

✓ Resuming Where You Left Off

If you forget to turn off this spelling corrector, it turns off automatically in about two minutes. When you turn it on again, the screen that you last viewed appears.

Finding Letters in Words

If you are uncertain how to spell a word, type a question mark in place of each unknown letter. A list of matching words will appear.

1. Type a word with question marks for letters.

conc??ve

2. Press **ENTER**.

conceive



3. Press  to view more matching words.
4. Press **CLEAR** when finished.

✓ Viewing a Demonstration

To see a brief demonstration of what this spelling corrector can do, press **DEMO**. To stop the demonstration, press **CLEAR**.

✓ Help is Always at Hand

You can view a help message at virtually any screen by pressing **HELP**. To exit a help message, press **BACK**.

Finding Parts of Words

You can find prefixes, suffixes, and other parts of words by typing asterisks in words. Each asterisk can stand for any series of letters.

1. Type a word with one or more asterisks.



2. Press **ENTER**.



3. Press **↓** to view more matching words.

4. Press **CLEAR** when finished.

✓ Tips for Finding Letters

- You can type both question marks and asterisks in a word.
- You can type asterisks at the beginnings of words, but the spelling corrector may take a while to find matches.
- You can use question marks to help solve crossword puzzles and similar word games by typing them in place of missing letters.

Finding Confusables®

Confusables are words that sound alike but are spelled differently. When a question mark flashes to the right of a word in a list, that word has Confusables. Try this example.

1. Type *air* and then press **ENTER**.

Notice the flashing question mark.

2. Press **CONF** to see its Confusables.

air : atmosphere †

3. Press **↓** repeatedly to view more.

ere : before †

4. Press **CLEAR** when finished.

✓ A Quick Way to View Confusables

Simply type a word and press **CONF**. Its Confusables, if any, will appear.

✓ Viewing Long Words

Some words in lists are too long to fit on the screen. To see the entire word, press **ENTER**. The rest of the word will automatically scroll into view.

Building Words from Letters

To help solve anagrams and similar word games, you can build words from letters by using the BUILD key.

1. Type letters.



xozjre

2. Press **BUILD**.



zero



3. Press to view more words.

4. Press **CLEAR** when finished.

✓ Typing Punctuation

You don't need to type punctuation marks to find spellings.

But if you want to type an apostrophe in a word, press . To type a period, press .

Note, however, that punctuation marks can't begin a word.

✓ Understanding the Skill Levels

The skill levels change the number of guesses in Hangman and the minimum number of letters (*Min size*) in Anagrams.

Playing Anagrams

Anagrams challenges you to find the anagrams of words. An anagram is a word formed from some or all the letters of another word.

1. Press **GAMES**.
2. Press **↓** or **↑** until you see *Anagrams* and then press **ENTER**.
3. Press **↓** or **↑** and then **ENTER** to select a skill level.

The *Min size* is the minimum number of letters the anagrams can have.

typists

22

word

anagrams to guess

4. Type an anagram and then press **ENTER**.
If the anagram is correct, *OK* appears.
5. Enter more anagrams.
6. Press ***** to jumble the letters.
7. Press **↑** to view the used anagrams.
8. Press **?** and then **↓** repeatedly to reveal all the anagrams.
9. Press **ENTER** to play a new round.

Playing Hangman

In Hangman, you try to guess mystery words.

1. Press **GAMES**.
2. Press **↓** or **↑** until you see *Hangman* and then press **ENTER**.
3. Press **↓** or **↑** and then press **ENTER** to select a skill level.



mystery word wrong guesses allowed

4. Type letters you think are in the word.



5. Press **ENTER** or ***** to reveal a letter.
6. Press **?** to reveal the word.
7. Press **ENTER** to play a new round.

✓ Cleaning and Storage

To clean this spelling corrector, spray a mild glass cleaner onto a cloth and wipe its surface. Don't spray liquids directly on the spelling corrector. Don't use or store this spelling corrector in extreme or prolonged heat, cold, humidity, or other adverse conditions.

Limited Warranty (U.S. only)

Franklin Electronic Publishers, Inc. ("Franklin") warrants to the end user that this product will be free from defects in material and workmanship for a period of ONE YEAR from the date of original retail purchase, as evidenced by sales receipt. On discovery of a defect, the end user must return this product (transportation charges prepaid) either to the dealer from whom it was purchased or directly to Franklin at the address given below. Each product returned must include the user's name, address, and telephone number, as well as a brief description of the nature of the defect and a copy of the sales receipt as proof of the date of the original retail purchase. Franklin will, at its option, repair or replace any product at no further charge to the end user on determination by Franklin, in its sole discretion, that the product was defective and that such defect arose within the duration of this limited warranty. Enclose \$3.00 check or money order for shipping and handling to Franklin Electronic Publishers, Inc.

This warranty does not apply if, in the sole discretion of Franklin, the product has been tampered with, damaged by accident, abuse, misuse, or misapplication, or as a result of service or modification by any party, including any dealer, other than Franklin. FRANKLIN SHALL NOT BE RESPONSIBLE IN ANY WAY FOR ANY SERVICE OR MODIFICATION TO THIS PRODUCT BY ANY PARTY, INCLUDING ANY DEALER, OTHER THAN FRANKLIN.

This warranty applies only to products manufactured by or for Franklin. Batteries, corrosion of battery contacts and any damage caused by batteries are not covered by this warranty.

ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE STRICTLY LIMITED IN DURATION TO THAT OF THE EXPRESS WARRANTY SET FORTH ABOVE, THAT IS, ONE YEAR FROM THE DATE OF ORIGINAL RETAIL PURCHASE.

THE WARRANTY AND REMEDY SET FORTH ABOVE ARE THE EXCLUSIVE REMEDY OF THE RETAIL BUYER AND END USER IN CONNECTION WITH THE MANUFACTURE, SALE, OR USE OF THIS PRODUCT AND ARE IN LIEU OF ANY AND ALL OTHER WARRANTIES OR REMEDIES, WRITTEN OR ORAL, EXPRESS OR IMPLIED. NO FRANKLIN DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY ADDITIONAL WARRANTY IN THIS REGARD OR TO MAKE ANY MODIFICATION OR EXTENSION OF THIS EXPRESS WARRANTY.

FRANKLIN SHALL NOT BE RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR IN CONNECTION WITH THE MANUFACTURE, SALE, OR USE OF THIS PRODUCT UNDER ANY LEGAL THEORY, WHICH DAMAGES SHALL INCLUDE, BUT NOT BE LIMITED TO, LOST PROFITS, DAMAGES TO PROPERTY OR DAMAGES FOR PERSONAL INJURY (BUT ONLY TO THE EXTENT PERMITTED BY LAW). UNLESS OTHERWISE CONTRARY TO APPLICABLE LAW, FRANKLIN'S LIABILITY SHALL IN NO CASE EXCEED THE PRICE PAID FOR THE PRODUCT CLAIMED TO BE DEFECTIVE.

This warranty shall not be applicable to the extent that the enforcement of any provision may be prohibited by applicable law. This warranty gives you specific rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty may last so the above limitation or exclusion may not apply to you. Enclose \$3.00 check or money order for shipping and handling to:

FRANKLIN ELECTRONIC PUBLISHERS, INC.
ATTENTION: SERVICE DEPARTMENT
ONE FRANKLIN PLAZA
BURLINGTON, NEW JERSEY 08016-4907

This unit may change operating modes due to Electro-static Discharge. Normal operation of this unit can be re-established by pressing the reset key, **ON/OFF**, or by removing/replacing batteries.

FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Customer Service

If you have a problem with your unit, refer to the limited warranty. If you purchased your unit outside the United States, contact the place of purchase to obtain warranty or repair information.

For registration and sales call 1-800-266-5626 (U.S. only) or visit us at www.franklin.com. Please have your product number (NCS-100) and date of purchase handy when you call to register.

For customer service call 609-239-4333.

For technical support call 609-386-8997.

Copyrights, Patents, and Trademarks

© 1999 Franklin Electronic Publishers, Inc. Burlington, N.J. 08016-4907 USA. All rights reserved. Confusables is a registered trademark of Franklin.

U.S. PATENTS; 4, 490,811; 4,792,458; 4,830,618; 4,891,775; 5,113,340; 5,203,705; 5,218,536; 5,396,606 EURO. PAT. 0 136 379 PAT. PEND. ISBN 1-56712-377-5