MaxxFan LCD Wall Control Operating Guide

Model Series 5500 and 6600



Note: Press keys firmly and hold momentarily until a change in setting is observed

Wall Control Features

- Built-in thermostat. Always displays room temperature in Fahrenheit or Celsius.
- Backlit screen makes it easy to read. Press any key and screen lights for 7 seconds.
- Thermostat setting can be selected to open vent and turn fan on and off as desired temperature is achieved.
- Select Fan Intake or Exhaust.
- 4 fan speeds to choose from.
- Electric lifting vent opens and closes with the touch of a button.
- Select Automatic or Manual control of fan.

SET TEMP





UP DOWN

Fahrenheit to Celsius view. Press and Hold both buttons for 7 seconds to change from Fahrenheit or Celsius.

Temperature set point control. When a set temperature button is pressed once, the display will light. When pressed again, the room temperature is replaced with a flashing set point temperature. When either button is pressed a third time, the set temperature will change accordingly. Display automatically returns to room temperature after 7 seconds of inactivity.



Air Direction Key (In/Out); **Changes fan motor direction** when pressed. Note: Models 5501 and 6601 are exhaust only. This keypad button is blanked out and not functional.



Vent Position Key; Opens and Closes the MaxxFan roof vent lid. Allows user to open and vent hot air out of the vehicle with the fan motor "on" or "off". Will automatically shut off the fan motor when this button is selected "CLOSED" and the fan is in the "ON" mode.

NOTE: This button will not close the vent lid when the "FAN MODE" is selected to the "AUTO" position. The word "AUTO" will flash for 5 seconds to remind the user that the fan must be in "ON" mode to close the vent lid.



OFF/ON/AUTO

FAN MODE Off / On / Auto Button

<u>The Off position</u> turns the fan motor off. The Vent Position Button remains operable. <u>The On position</u> turns on the fan motor to any selected speed. If vent lid is closed the vent lid will automatically open.

<u>Auto mode</u> allows the thermostat to turn the fan on and off depending on the thermostat set point. If the set point is lower than the room temp, the fan will run. If the set point is higher than room temperature the fan will not run. If the vent lid is closed and the thermostat set point is set below room temperature, auto mode will automatically open the vent lid and turn the fan on to the pre-selected speed.



Fan Speed Button; changes fan motor speeds. Selects speeds 1, 2, 3, or 4 when pressed. When button is pressed, a dash line will appear on the screen below the selected speed. Keep pressing this button until the desired speed is indicated.

