

Changing Programs in a Style – PA80/PA60/PA50

The PA80 allows the user to change the Programs (instruments) that a style uses. The user can select whether a style uses the original factory settings or his/her own. The following tutorial explains how to set up the PA80 to recognize your custom style settings.

For this example we will use the “Love Disco” style in the Dance category:

1. Press the STYLE PLAY button to enter the Style Play mode.
2. Select the style that you want to edit.
3. Press the MENU button to enter the Menu mode.
4. Press the UPPER button to select “RT Controls” (Real Time Controls) on screen.
5. Using the PAGE + button, page up to page 21 “StyCtl” (Style Control) on screen.
6. Select “Prog” (Program) on the screen by pressing the DRUM button located on the left side of the screen.
7. Using the value wheel, change “Prog: Orig” to “Prog: On”.
8. Press the EXIT button to return to the main style page.
9. Press the TRACK SELECT button.
10. Using the UP/+ or DOWN/- buttons, make your desired program changes to the style e.g. change the drum kit from “Standard Kit1” to “Room Kit1”.
11. After making your changes, press the WRITE button.
12. Select “Current Style” by pressing the ACC1 button.
13. Press the ENTER button twice, and your updated style will be saved into internal memory.