


Quick Operation Guide

While holding down the [DEMO/SONG], [PIANO/VOICE], or [METRONOME] button,
press the highlighted keys shown below to select voice demos etc, or set parameters. (Refer to the diagram 1/2/3 below.)


1

Voice Demo

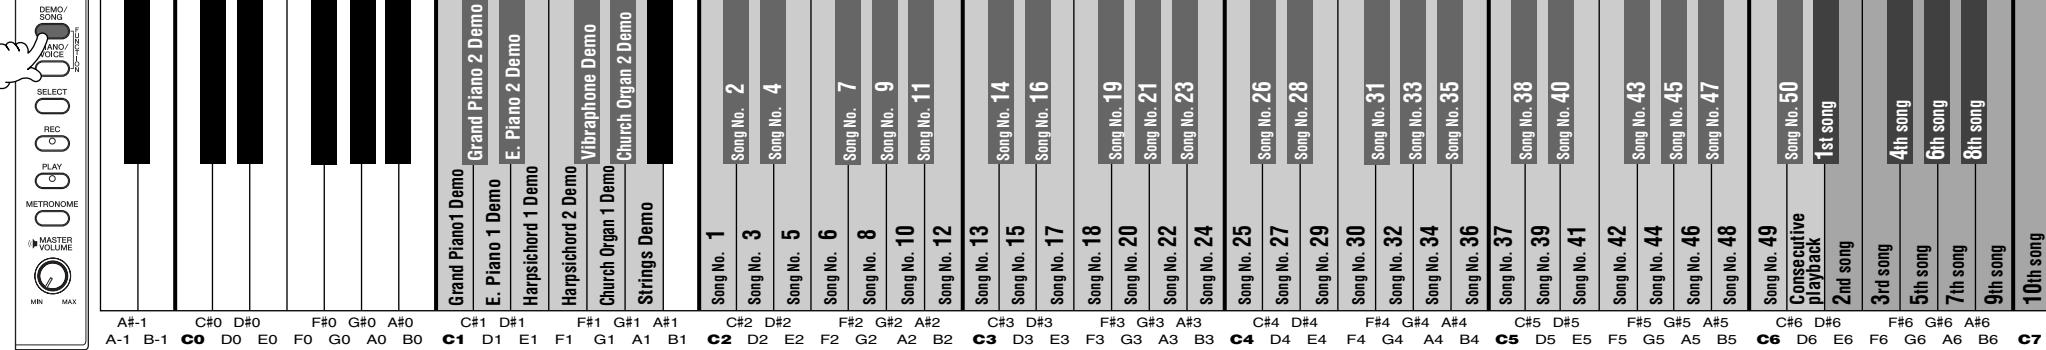

C1	Grand Piano 1 Demo	Grand Piano 2 Demo
C2	E. Piano 1 Demo	E. Piano 2 Demo
C3	Harpsichord 1 Demo	Harpsichord 1 Demo
C4	Harpsichord 2 Demo	Vibraphone Demo
C5	Church Organ 1 Demo	Church Organ 2 Demo
C6	Strings Demo	

Preset Song (50 greats for the Piano)

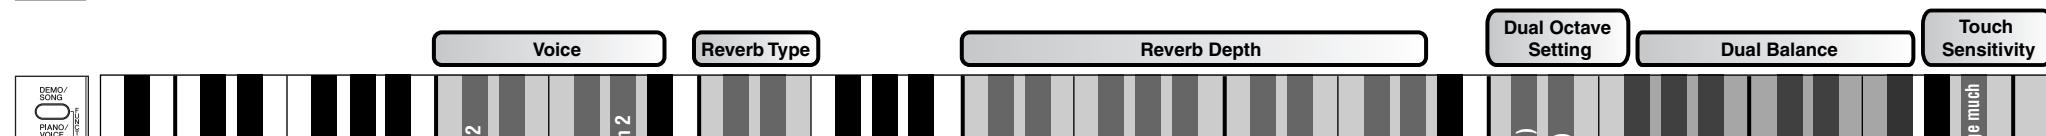

Song No. 1	Song No. 2
Song No. 3	Song No. 4
Song No. 5	Song No. 6
Song No. 7	Song No. 8
Song No. 9	Song No. 10
Song No. 11	Song No. 12
Song No. 13	Song No. 14
Song No. 15	Song No. 16
Song No. 17	Song No. 18
Song No. 19	Song No. 20
Song No. 21	Song No. 22
Song No. 23	Song No. 24
Song No. 25	Song No. 26
Song No. 27	Song No. 28
Song No. 29	


Song loaded from the computer



10th song	4th song
6th song	5th song
8th song	7th song
9th song	8th song
10th song	


2

Voice

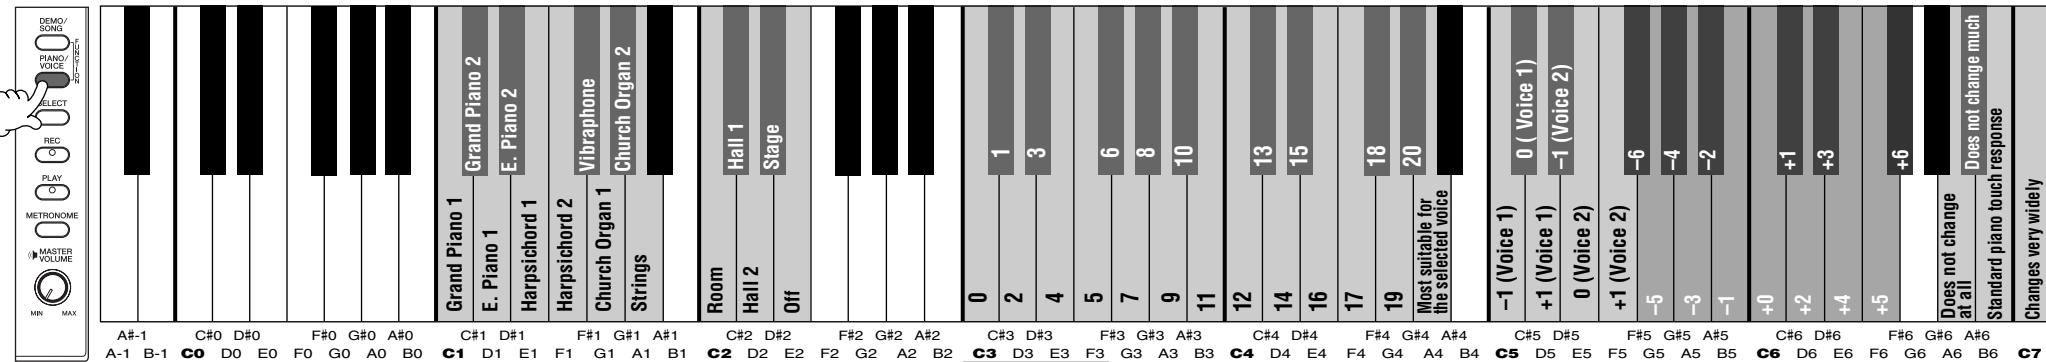

C1	Grand Piano 1	Grand Piano 2
C2	E. Piano 1	E. Piano 2
C3	Harpsichord 2	Vibraphone
C4	Church Organ 1	Church Organ 2
C5	Strings	

 Reverb Type




C1	Hall 1	Stage
C2	Hall 2	Off
C3	Room	
C4		
C5		
C6		
C7		

Reverb Depth



C1	1	3
C2	2	4
C3	5	7
C4	6	8
C5	9	10
C6	11	
C7		

 Dual Octave Setting



C1	0	1
C2	2	3
C3	4	5
C4	7	8
C5	10	11
C6	12	
C7		

Dual Balance



C1	Song No. 26	Song No. 27
C2	Song No. 28	
C3		
C4		
C5		
C6		
C7		

Touch Sensitivity



C1	Does not change at all	Does not change much
C2	Standard piano touch response	Changes very widely
C3		
C4		
C5		
C6		
C7		

3

Metronome Volume




C1	1	2
C2	3	4
C3	5	6
C4	7	8
C5	9	10
C6	11	
C7		

Metronome Time Signature



C1	2/4	3/4
C2	4/4	5/4
C3	6/4	7/4
C4	8/4	9/4
C5	10/4	11/4
C6	12/8	
C7		

Metronome / Preset Song Tempo

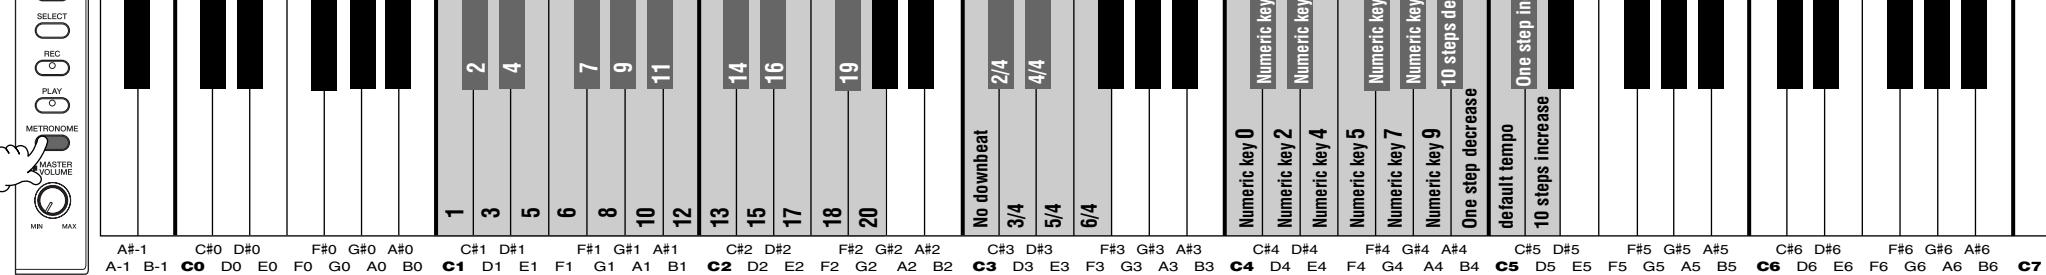


C1	Numeric key 1	Numeric key 6
C2	Numeric key 2	Numeric key 8
C3	Numeric key 4	10 steps decrease
C4	Numeric key 0	One step decrease
C5	Numeric key 5	default tempo
C6	Numeric key 7	One step increase
C7	Numeric key 9	10 steps increase


Quick Operation Guide

While holding down the highlighted leftmost keys shown below, press the other highlighted keys to set the various parameters. (Refer to the diagram 4 / 5 / 6 below.)
 While holding down the [DEMO/SONG] and [PIANO/VOICE] buttons, press the highlighted keys shown below to set parameters. (Refer to the diagram 7 below.)


4

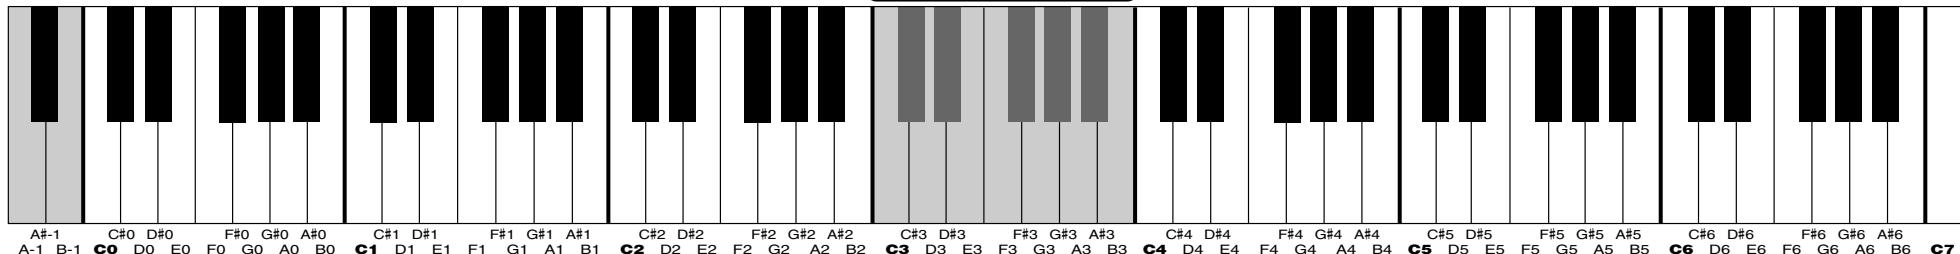

5

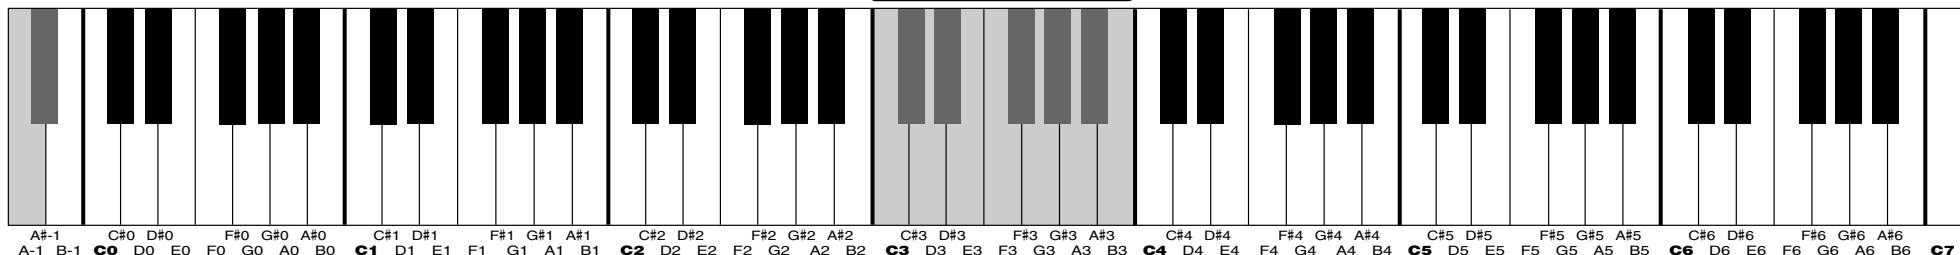

6

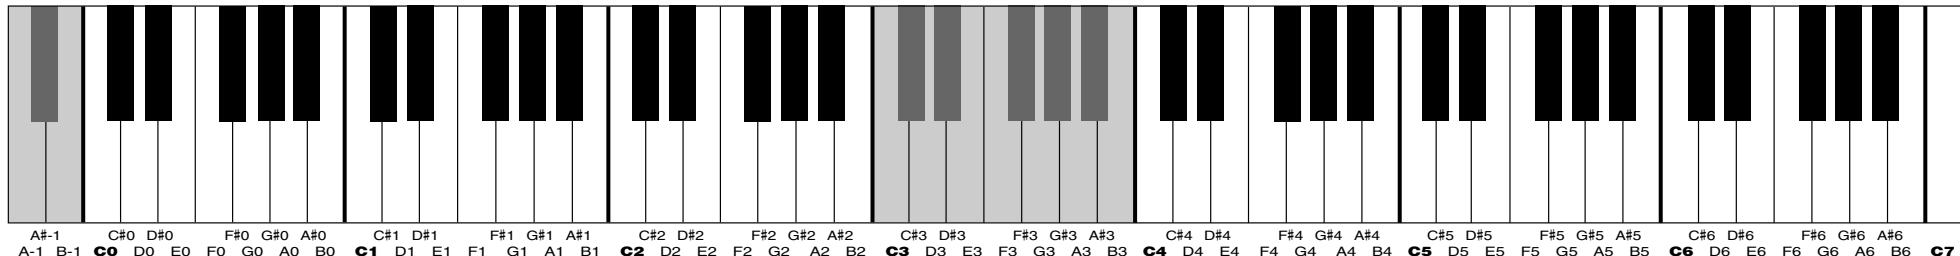

7

