 


1 Unpack your HP Fax.

The box contains:

- a. HP Fax
- b. Front panel overlay
- c. Fax connector & attached phone cord
- d. Paper tray
- e. Power cord
- f. Economy print cartridge*
- g. Documentation

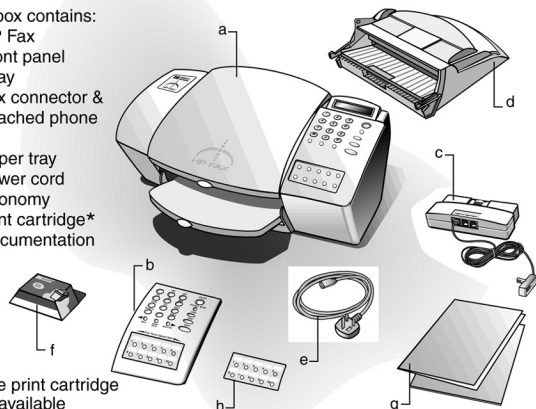 


*Large print cartridge also available


2 Install the front panel overlay.



3 Plug in the fax connector.

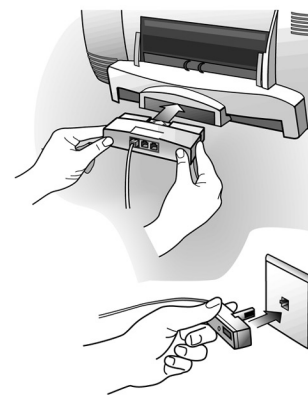


4 Install the paper tray.

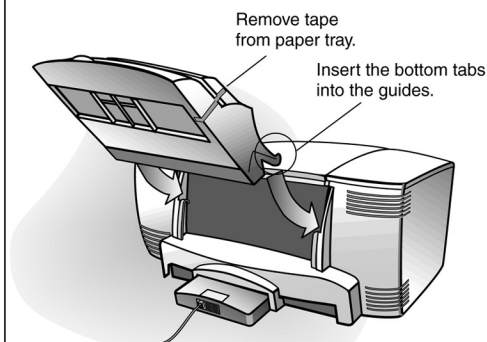 


5 Load blank paper.

 
The HP Fax has two paper trays. The front tray holds documents to be faxed or copied. The rear tray holds blank paper.

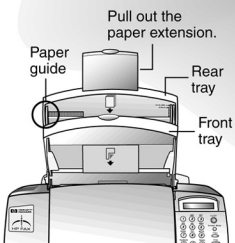

 1. Pull the front tray all the way forward (5a).

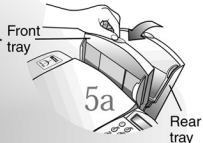

 2. Place a 1/2-inch stack of paper behind the stack guides on the rear tray (5b). If necessary, pinch and slide the left paper guide to fit the paper.

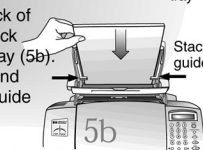


3. Push the front tray back until it rests against the rear tray.



4. Extend the output tray at the front of the HP Fax (5c).

 6 Plug in the power cord.

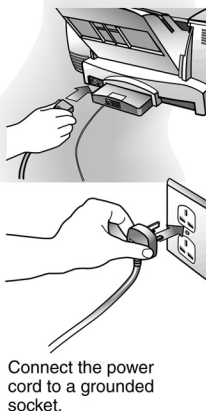

7 Insert the print cartridge.

 
 
Make sure your HP Fax is plugged in. After about 20 seconds, the display reads Insert

1. Unwrap the print cartridge.
2. Peel off tape.



Do not touch the ink nozzles or the copper contacts.

3. Open cover.

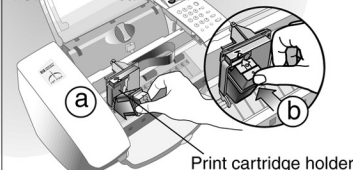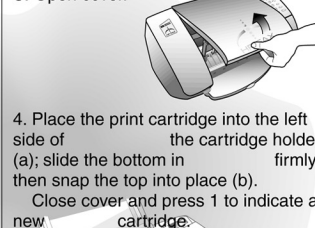

8 Connect additional equipment.

If you have a dedicated fax line you do not need to install extra equipment.

To connect a phone and/or answering machine remove the plastic plugs and connect your equipment as shown. For more information see your user's guide.

