


MODEL
UX-P10

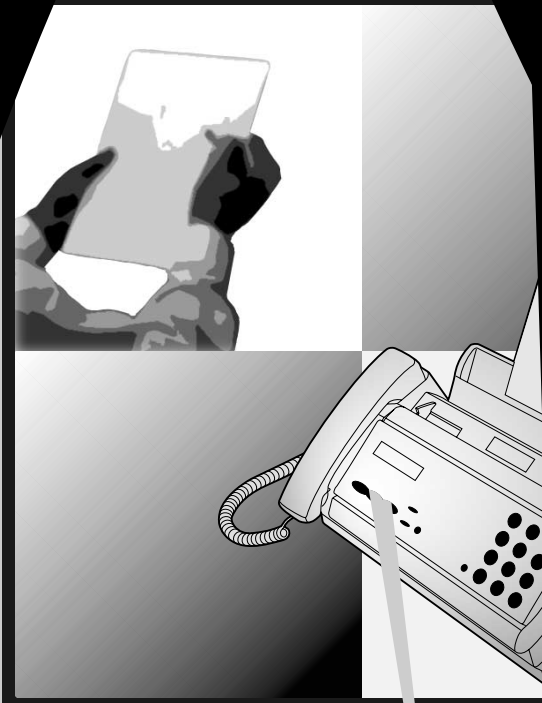

FACSIMILE
OPERATION MANUAL

1. Installation
2. Setting Up and Using OpenLCR
3. Sending Faxes
4. Receiving Faxes
5. Making Copies
6. Special Functions
7. Printing Lists
8. Maintenance
9. Troubleshooting

congr

To ensure Sharp quality, look for the Sharp Genuine Supplies Logo on your business products. We provide a full line of supplies that are designed and tested to maximize the life and performance of all Sharp products.

For your c
additional S

ww

visit

© 2001 Sharp
Design and spe

WARNING - FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ABOUT THE TELEPHONE CONSUMER PROTECTION ACT OF 1991

"The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone facsimile machine unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission the following information:

- (1) The date and time of transmission.
- (2) Identification of either the business, business entity or individual sending the message.
- (3) Telephone number of either the sending machine, business, business entity or individual.

In order to program this information into your facsimile machine, please refer to the appropriate instructions in the operation manual."



As an ENERGY STAR® partner, SHARP has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

FOR YOUR RECORDS

Please record the model number and serial number below, for easy reference, in case of loss or theft. These numbers are located on the rear side of the unit. Space is also provided for other relevant information.


Model Number UX-P100

Serial Number _____

Date of Purchase _____

Place of Purchase _____

Introduction

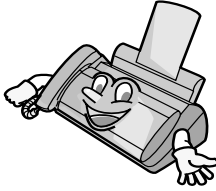

Welcome, and thank you for choosing a Sharp fax machine! The features and specifications of your new Sharp fax are shown below.

| | |
|----------------------------------|---|
| Automatic dialing | 30 numbers |
| Imaging film | Initial starter roll (included with machine): 32 ft. (10 m) (approx. 30 letter-size pages) Replacement roll (not included): UX-5CR 164 ft. (50 m) (one roll yields approx. 150 letter-size pages) |
| Memory size* | 448 KB (approx. 24 average pages) |
| Modem speed | 9,600 bps with automatic fallback to lower speeds. |
| Transmission time* | Approx. 15 seconds |
| Resolution | Horizontal: 203 pels/inch (8 pels/mm) Vertical: Standard: 98 lines/inch (3.85 lines/mm) Fine /Halftone: 196 lines/inch (7.7 lines/mm) Super fine: 391 lines/inch (15.4 lines/mm) |
| Automatic document feeder | 10 pages max. (letter/A4, 20 lb paper) |
| Recording system | Thermal transfer recording |
| Halftone (grayscale) | 64 levels |
| Compression scheme | MR, MH, H2 |
| Display | 16-digit LCD display |

*Based on ITU-T Test Chart #1 at standard resolution is Sharp special mode, excluding time for protocol signals (i.e., ITU-T phase C time only).

| | |
|--|---|
| Applicable telephone line | Public switched telephone network |
| Paper tray capacity (20-lb. paper at room temperature) | Letter: 50 sheets (max. stack height: 5 mm) Legal: 5 sheets |
| Compatibility | ITU-T (CCITT) G3 mode |
| Input document size | Automatic feeding: Width: 5.8 to 8.5" (148 to 216 mm) Length: 5.5 to 11" (140 to 279 mm) Manual feeding: Width: 5.8 to 8.5" (148 to 216 mm) Length: 5.5 to 23.6" (140 to 600 mm) |
| Effective scanning width | 8.3" (210 mm) max. |
| Effective printing width | 8.3" (210 mm) max. |
| Contrast control | Automatic/Dark selectable |
| Reception modes | TEL/FAX |
| Copy function | Single / Multi (99 copies/page) |
| Telephone function | Yes (cannot be used if power fails) |
| Power requirements | 120 V AC, 60 Hz |
| Operating temperature | 41 - 95°F (5 - 35°C) |
| Humidity | Maximum: 85% RH |
| Power consumption | Standby: 3.6 W Maximum: 100 W |
| Dimensions (without attachments) | Width: 12.9" (327 mm) Depth: 7.6" (193 mm) Height: 6.4" (163 mm) |
| Weight (without attachments) | Approx. 6.2 lbs. (2.8 kg) |

As a part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

Important safety information

Do not disassemble this machine or attempt any procedures not described in this manual. Refer all servicing to qualified service personnel.

Do not install or use the machine near water, or when you are wet. For example, do not use the machine near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool. Take care not to spill any liquids on the machine.

Unplug the machine from the power outlet and telephone jack and consult a qualified service representative if any of the following situations occur:

- Liquid has been spilled into the machine or the machine has been exposed to rain or water.
- The machine produces odors, smoke, or unusual noises.
- The power cord is frayed or damaged.
- The machine has been dropped or the housing damaged.

Do not allow anything to rest on the power cord, and do not install the machine where people may walk on the power cord.

This machine must only be connected to a 120 V, 60 Hz, grounded (3-prong) outlet. Connecting it to any other kind of outlet will damage the machine and invalidate the warranty.

Never insert objects of any kind into slots or openings on the machine. This could create a risk of fire or electric shock. If an object falls into the machine that you cannot remove, unplug the machine and consult a qualified service representative.

Do not place this machine on an unstable cart, stand or table. The machine could be seriously damaged if it falls.

Never install telephone wiring during a lightning storm.

Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.

Never touch bare telephone wires or terminals unless the telephone line has been disconnected at the network interface.

Use caution when installing or modifying telephone lines.

Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.

Do not use a telephone to report a gas leak in the vicinity of the leak.

The power outlet must be installed near the equipment and must be easily accessible.

Table of Contents


| | |
|---|-----------|
| A Look at the Operation Panel | 6 |
| <hr/> | |
| 1. Installation | 8 |
| <hr/> | |
| Unpacking Checklist | 8 |
| Connections | 9 |
| Loading the Imaging Film | 12 |
| Loading Printing Paper | 14 |
| Entering Your Name and Fax Number | 16 |
| Setting the Date and Time | 18 |
| Setting the Reception Mode | 20 |
| Volume Adjustment | 21 |
| 2. Setting Up and Using OpenLCR | 23 |
| <hr/> | |
| 3. Sending Faxes | 33 |
| <hr/> | |
| Transmittable Documents | 33 |
| Loading the Document | 34 |
| Adjusting the Resolution and Contrast | 35 |
| Sending a Fax by Normal Dialing | 37 |
| Sending a Fax by Automatic Dialing | 38 |
| Sending a Fax From Memory | 44 |
| 4. Receiving Faxes | 46 |
| <hr/> | |
| Using FAX Mode | 46 |
| Using TEL Mode | 47 |
| Optional Reception Settings | 49 |
| Substitute Reception to Memory | 51 |
| 5. Making Copies | 52 |
| <hr/> | |
| 6. Special Functions | 54 |
| <hr/> | |
| Caller ID (Requires Subscription to Service) | 54 |
| Distinctive Ring (Requires Subscription to Service) | 59 |
| Blocking Reception of Unwanted Faxes | 60 |

| | |
|----------------------------------|-----------|
| 7. Printing Lists | 61 |
| 8. Maintenance | 64 |
| 9. Troubleshooting | 67 |
| Problems and Solutions | 67 |
| Messages and Signals | 71 |
| Clearing Paper Jams | 74 |
| Quick Reference Guide | 80 |
| Guía de referencia rápida | 81 |
| Index | 82 |


- 7 COPY/HELP key**
When a document is in the feeder, press this key to make a copy of a document. At any other time, press this key to print out the Help List, a quick reference guide to the operation of your fax machine.
- 8 START/MEMORY key**
Press this key after dialing to begin fax transmission. Press this key before dialing to send a fax through memory.
- 9 FUNCTION key**
Press this key followed by the arrow keys to select special functions and settings.
- 10 OpenLCR key**
Press this key to register for OpenLCR service and receive rate information to your fax.
- 11 UP and DOWN arrow keys**
Enlarge/reduce setting: When making a copy of a document, press these keys to select an enlarge/reduce setting.
Volume setting: When a document is not in the feeder, press these keys to change the handset volume when the handset is lifted, the speaker volume when the **SPEAKER** key has been pressed, or the ringer volume at any other time.
FUNCTION key settings: Press these keys after pressing the **FUNCTION** key to scroll through the FUNCTION MODE settings.
- 12 SPEAKER key**
Press this key to listen to the line and fax tones through the speaker when faxing a document.
Note: **This is not a speakerphone.** You must pick up the handset to talk with the other party.

1. Installation

Unpacking Checklist

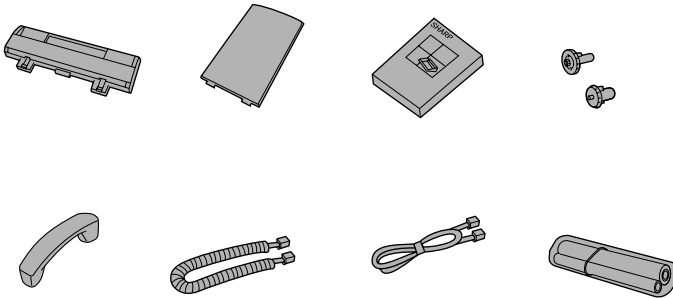


Points to keep in mind when setting up

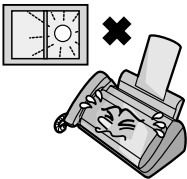

Do not place the machine in direct sunlight.

Do not place the machine near heaters or air conditioners.

Keep dust away from the machine.

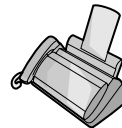

Keep the area around the machine clear.

About condensation

If the machine is moved from a cold to a warm place, it is possible that condensation may form on the scanning glass, preventing proper scanning of documents for transmission. To remove the condensation, turn on the power and wait approximately two hours before using the machine.



Connections

Connecting the handset

Connect the handset as shown and place it on the handset rest.

- ◆ The ends of the handset cord are identical, so they will go into either jack.

Make sure the handset cord goes into the jack marked with a handset symbol on the side of the machine!

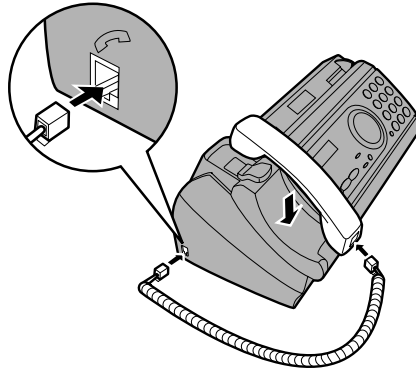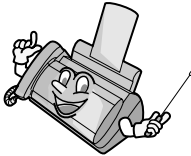

Use the handset to make ordinary phone calls, or to transmit and receive faxes manually.


Connecting the power cord

Plug the power cord into a 120 V, 60 Hz, grounded AC (3-prong) outlet.

Caution!


Do not plug the power cord into any other kind of outlet. This will damage the machine and is not covered under the warranty.

The machine does not have a power on/off switch, so the power is turned on and off by simply plugging in or unplugging the power cord.

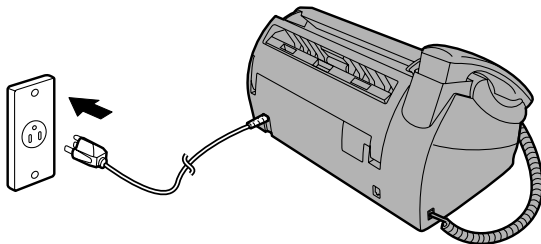

Connecting the telephone line cord

Insert one end of the line cord into the jack on the back of the machine marked **TEL. LINE**. Insert the other end into a standard (RJ11C) single-line wall telephone jack.

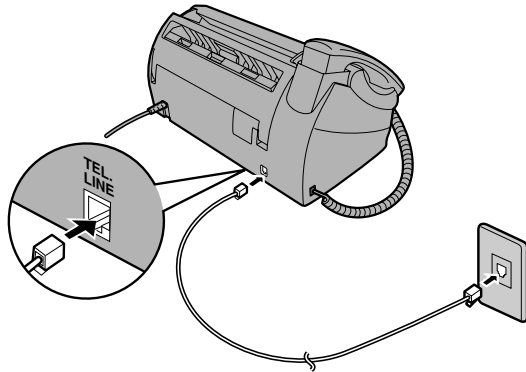

Dial mode:

The fax machine is set for tone dialing. If you are on a pulse dial line, you must set the fax machine for pulse dialing. Press the keys on the operation panel as follows:

1 Press **FUNCTION** once and **▲** twice.

Display:

OPTION SETTING

2 Press **▶** once and **▼** twice.

DIAL MODE

3 Press **▶** once.

1=TONE, 2=PULSE

4 Select the dial mode:

TONE: **1** PULSE: **2**

The display briefly shows your selection, then:

DISTINCTIVE



5 Press **STOP** to exit.

Comments:

- ◆ The fax machine is not designed for use on a line which has call waiting, call forwarding, or certain other special services offered by your telephone company. If you attempt to use the fax machine in conjunction with any of these services, you may experience errors during transmission and reception of facsimile messages.
- ◆ The fax machine is not compatible with digital telephone systems.
- ◆ If your area experiences a high incidence of lightning or power surges, we recommend that you install surge protectors for the power and telephone lines. Surge protectors can be purchased at most telephone specialty stores.

Attach the paper tray and paper tray extension

Attach the paper tray and paper tray extension.

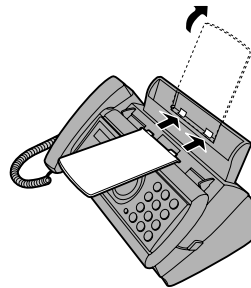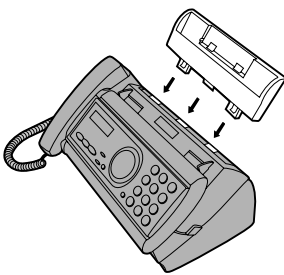

Insert
horizontally
and rotate up

Note: The paper tray extension has a top side and a bottom side. If you cannot insert the tabs into the holes, turn the support over.

Loading the Imaging Film

Your fax uses a roll of imaging film to create printed text and images. The print head in the fax applies heat to the imaging film to transfer ink to the paper. Follow the steps below to load or replace the film.

-
- 1** Remove the paper from the paper tray and open the operation panel (press **1**).

 


-
- 2** Remove the used film and empty spool.

-
- 3** Remove the two green gears from the spools.
DO NOT DISCARD THE TWO GREEN GEARS!


4 Remove the new roll of imaging film from its packaging.

- Cut the band that holds the rolls together.



5 Insert the green gears.


Make sure the gears fit into the slots in the ends of the rolls.

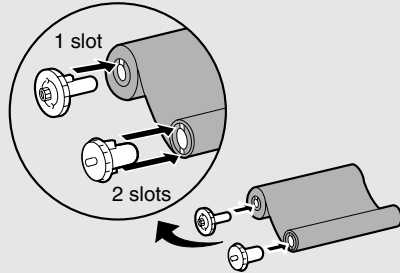


6 Insert the film into the print compartment.

Fit ends of rolls onto hubs


Thick roll to rear

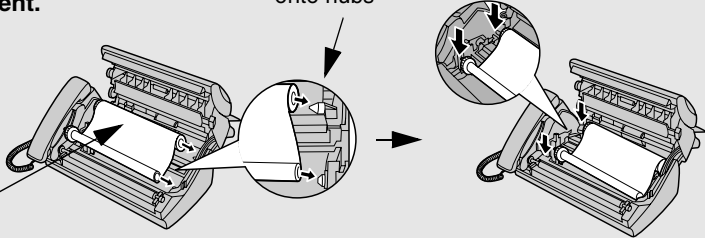

7 Rotate the front gear as shown until the film is taut.

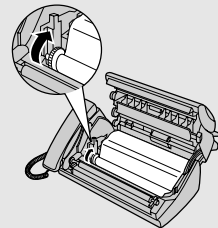

8 Close the operation panel (press down on both sides to make sure it clicks into place).

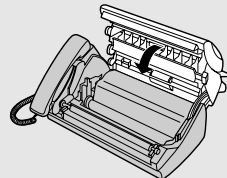


Loading Printing Paper

You can load letter or legal size paper in the paper tray. The maximum number of sheets is as follows:

Letter size: 50 sheets (20-lb. paper at room temperature; maximum stack height of 5 mm)


Legal size: 5 sheets

- 1 Fan the paper, and then tap the edge against a flat surface to even the stack.**

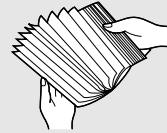


- 2 Insert the stack of paper into the tray, *PRINT SIDE DOWN*.**

- If paper remains in the tray, take it out and combine it into a single stack with the new paper.
- Be sure to load the paper so that printing takes place on the **print** side of the paper. Printing on the reverse side may result in poor print quality.

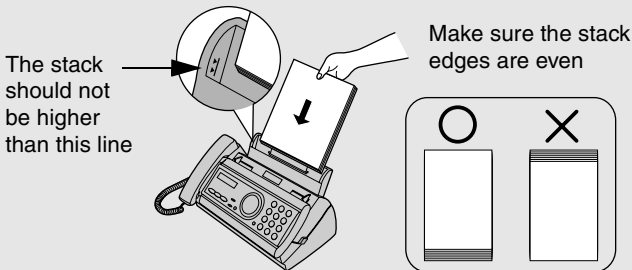

Note: Do not use paper that has already been printed on, or paper that is curled.

Note: If at any time the display shows the alternating messages at right, check the printing paper. If the tray is empty, add paper. If there is paper in the tray, take it out and then reinsert it.

When you are finished, press  .








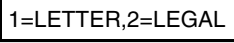




ADD PAPER &



PRESS START KEY





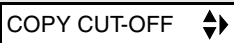


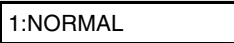




Setting the paper size

The fax has been set at the factory to scale received faxes to letter size paper. If you loaded legal paper, you must change the paper size setting to LEGAL.

| | | |
|----------|--|--|
| 1 | Press  once and  twice. | Display:  |
| 2 | Press  once and  twice. |  |
| 3 | Press  once. |  |
| 4 | Select the paper size: LETTER:  LEGAL:  | The display briefly shows your selection, then:  |
| 5 | Press  to return to the date and time display. | |

Print contrast setting

Your fax has been set at the factory to print at normal contrast. If desired, you can change the print contrast setting to LIGHT.

| | | |
|----------|--|--|
| 1 | Press  once and  twice. | Display:  |
| 2 | Press  once and  3 times. |  |
| 3 | Press  once. |  |
| 4 | Select the print contrast: NORMAL:  LIGHT:  | The display briefly shows your selection, then:  |
| 5 | Press  to return to the date and time display. | |

Entering Your Name and Fax Number

Before you can begin sending faxes, you must enter your name and fax (telephone) number. You also need to set the date and time.




Once you enter this information, it will automatically appear at the top of each fax page you send.



Important!

FCC regulations require that your name, telephone/fax number, and the date and time appear on each fax message you send. Enter your name and fax number here and set the date and time as explained in the following section to have the fax machine include this information automatically at the top of your fax messages.

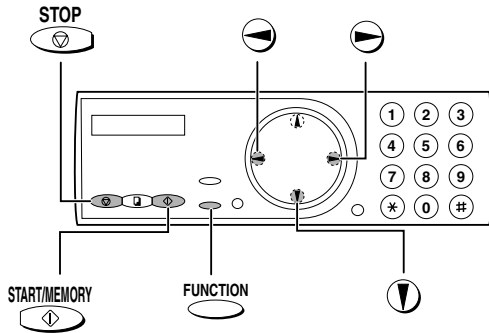

1 Press **FUNCTION** once and **▼** twice.

Display:

ENTRY MODE **↔**

2 Press **▶** once.

OWN NUMBER SET **↔**

3 Press **▶** once.

ENTER FAX #

4 Enter your fax number by pressing the number keys (max. 20 digits).

- To insert a space between digits, press **#**.
- To clear a mistake, press **SPEAKER**.

5 Press **START/MEMORY to enter the fax number in memory.**

6 Enter your name by pressing number keys for each letter as shown in the chart below. Up to 24 characters can be entered.

Example: SHARP = 7777 44 2 777 **▶** 7

| | | | |
|------------------|------------------|--------------------|--------------------|
| SPACE = 1 | G = 4 | N = 6 6 | U = 8 8 |
| A = 2 | H = 4 4 | O = 6 6 6 | V = 8 8 8 |
| B = 2 2 | I = 4 4 4 | P = 7 | W = 9 |
| C = 2 2 2 | J = 5 | Q = 7 7 | X = 9 9 |
| D = 3 | K = 5 5 | R = 7 7 7 | Y = 9 9 9 |
| E = 3 3 | L = 5 5 5 | S = 7 7 7 7 | Z = 9 9 9 9 |
| F = 3 3 3 | M = 6 | T = 8 | |

- ◆ To enter two letters in succession that require the same key, press **▶** after entering the first letter.
- ◆ To clear a mistake, press **SPEAKER**.
- ◆ To enter a lower case letter, continue pressing the key for the letter until the lower case letter appears. To enter one of the following symbols, press **#** or ***** repeatedly: . / ! " # \$ % & ' () * + , - : ; < = > ? @ [¥] ^ _ ' { | } * *

7 Press **START/MEMORY**


Display:

DATE&TIME SET **▶◀**

8 Press **STOP to return to the date and time display.**

Setting the Date and Time

The date and time appear in the display and are printed at the top of every page you fax. Set the date and time as shown below.

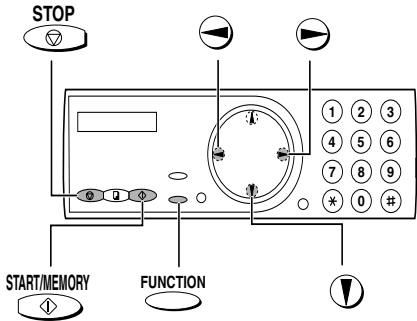

Do not set the date and time if you are using OpenLCR!

OpenLCR automatically sets the date and time each time your fax calls OpenLCR and receives rate data. To ensure accurate use of the rate data, do not change the date and time setting yourself.

1 Press **FUNCTION** once and **STOP** twice.

Display: **ENTRY MODE**

2 Press **RIGHT** once and **STOP** once.

DATE&TIME SET

3 Press **LEFT**. The currently set date appears (example):

DATE 08-15-2001

4 Enter a two-digit number for the month ("01" for January, "02" for February, "12" for December, etc.).

Example: January **0** **1**



DATE 01-15-2001

- To correct a mistake, press **LEFT** to move the cursor back to the mistake and then enter the correct number.





5 Enter a two-digit number for the day ("01" to "31").

Example: the 5th **0** **5**





DATE 01-05-2001

6 Enter the year (four digits). The currently set time appears (example):
 Example: 2001     → TIME 12:19 PM

7 Enter a two-digit number for the hour (“01” to “12”) and a two-digit number for the minute (“00” to “59”).
 Example: 9:25     → TIME 09:25 PM




8 Press  to select A.M. or .



9 Press  to start the clock. → ANTI JUNK # 


10 Press  to return to the date and time display.

Daylight Saving Time


If desired, you can set the clock to move forward and backward automatically at the beginning and end of Daylight Saving Time. Follow these steps:

1 Press  once and  twice. OPTION SETTING 

2 Press  once and  5 times. DAY LIGHT SAVE 

3 Press  once. 1=YES, 2=NO

4 Press  to select YES, or  to select NO. RECEIVE RATIO 

5 Press  to return to the date and time display.

Setting the Reception Mode

Your fax has two modes for receiving incoming faxes:

FAX mode:


Select this mode when you only want to receive faxes on your line. The fax machine will automatically answer all calls on four rings and receive incoming faxes.

TEL mode:


Select this mode when you want to receive both phone calls and faxes on the line connected to the fax machine. **All calls, including faxes, must be answered by picking up the fax machine's handset** or an extension phone connected to the same line.

Setting the reception mode



Make sure a document *is not loaded in the document feeder*, and then

press  until the arrow in the display points to the desired mode.

◆ **Note:** When a document is loaded in the document feeder, pressing

 adjusts the resolution for faxing and copying.


**RESOLUTION/
RECEPTION MODE** key

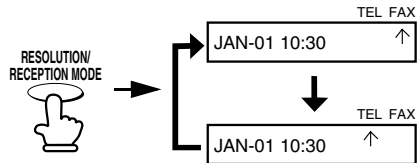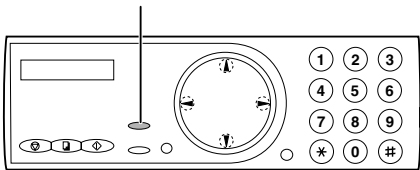

For more information on receiving faxes in FAX and TEL modes, see Chapter 4, *Receiving Faxes* (page 46).

Volume Adjustment


You can adjust the volume of the speaker, handset, and ringer using the up and down arrow keys.

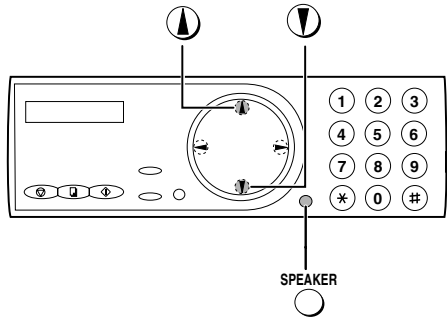


Speaker



1 Press  **SPEAKER**

2 Press  or  until the display shows the desired volume level.

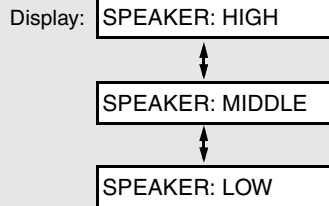- Press  **SPEAKER** again to turn off the speaker.




Handset

1 When talking through the handset, press  or  until the display shows the desired volume level.

- **Note:** The volume reverts to MIDDLE each time you replace the handset.

Display:

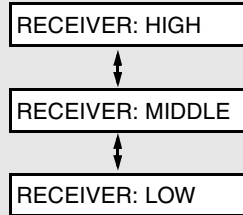


Ringer

1 Press  or . (Make sure  **SPEAKER** has not been pressed, the handset is not lifted, and a document is not loaded in the feeder.)

- The ringer will ring once at the selected level, then the date and time will reappear in the display.

Display:

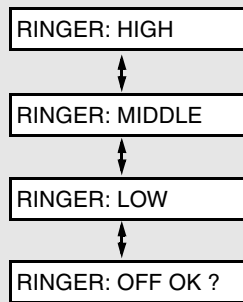

2 If you selected RINGER: OFF OK ?,

press .

2. Setting Up and Using OpenLCR

Your fax machine features OpenLCR technology, which helps you save money on long distance and international phone calls (both fax and voice) by automatically routing each call for the best available rate.

- ◆ OpenLCR service is free of charge. The only cost to you is that of a periodic call (usually once every three months) to OpenLCR to receive the latest rate data. (Once you have registered with OpenLCR, your fax machine automatically makes this call.)
- ◆ All calls routed by OpenLCR are consolidated on your monthly phone bill.

To take advantage of this feature, you will need to register with OpenLCR and download the rate data to your fax machine.




You can register with OpenLCR by fax, phone, or through OpenLCR's Web site (www.OpenLCR.com).

- ◆ Before registering, be sure to read the information on the **Fax Transmission Test and OpenLCR Line Activation Form** and **Terms of Service** sheet included with your fax machine. If you have any questions, call OpenLCR at 970-206-1207.
- ◆ OpenLCR uses Caller ID for identification purposes when your fax calls OpenLCR to receive rate information. Even if you have requested your telephone company to withhold your Caller ID information when you place calls, your fax will still automatically transmit this information only when it calls OpenLCR.
- ◆ It is possible to register for and use OpenLCR if you do not subscribe to a Caller ID service; however, in some instances where rate data must be changed on an emergency basis, your fax may not be able to respond automatically to OpenLCR's call to notify your fax that it must receive new rate data. If this occurs, old, incorrect data will continue to be used.
- ◆ Please note that the agreement you enter into by registering is between you and OpenLCR; it is not between you and any carriers.

Registering by fax

To register by fax, fill in the **Fax Transmission Test and OpenLCR Line Activation Form**, and then fax the form as follows:

- 1 Place the form with the side you wrote on face down, and push it gently into the document feeder of the fax machine.**

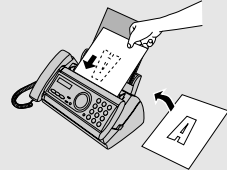

READY TO SEND


- 2 Press , , and then .**

- Your fax automatically calls OpenLCR and sends the form. After the form is sent, your fax will automatically receive the rate data. When downloading is completed, the display will briefly show **DOWNLOAD OK!!** and then revert to the date and time. Your fax will print out the registration form to confirm that it was received.
- OpenLCR will also program the date and time and your fax number in your fax machine.

Registering by phone

To register by phone, follow these steps:

- 1 Pick up the handset on the fax machine.**

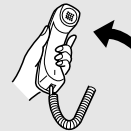


- 2 Press  and then .**

3 If the display shows the alternating messages at right, press the number keys to enter your fax/phone number, including the area code (the number must be 10 digits long). When finished,

press  .


(If the message at right doesn't appear, this step is not necessary.)

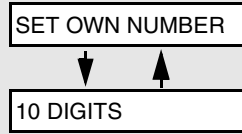

Important!

Be sure that you enter your correct area code and fax number. If not, your fax may not dial the correct number to connect to OpenLCR.

4 Follow the instructions you hear.

- ◆ If you are on a pulse dial line, press  before pressing the number keys to respond. (This makes your fax temporarily issue tone signals when you press the number keys.)
- ◆ When registration is completed, your fax machine will receive the rate data from OpenLCR. This will last one or two minutes. When downloading is completed, the display will briefly show DOWNLOAD OK!! and then revert to the date and time.
- ◆ OpenLCR will also program the date and time and your fax number in your fax machine.

Registering through OpenLCR's Web site

You can also register at OpenLCR's Web site, www.OpenLCR.com. After registering you will need to receive the rate data manually (service is not activated until your fax receives the rate data). See *Downloading (receiving) the rate data manually* on the following page.



If you move, you must re-register!

The rate data that you receive is based on the address you provide when registering with OpenLCR. If you move, the rate data will not be correct for your new location. In this case, repeat the registration procedure to give OpenLCR your new address.

Setting Up and Using OpenLCR

Note: If you wish to connect more than one OpenLCR-enabled device to the same line, please call OpenLCR at 970-206-1207. If you replace an old OpenLCR-enabled device with a new one, you must re-register with OpenLCR to use the new device.

Note: OpenLCR cannot be used if your fax machine is connected to a Private Branch Exchange (PBX).

Downloading (receiving) the rate data manually

 
Your fax machine will automatically call OpenLCR and download updated rate data about once every three months. Normally you will not need to download the rate data manually.

- ◆ If you register through OpenLCR's Web site, you must manually download the rate data to activate service.
- ◆ If the fax machine is unplugged or some other interruption occurs in the power, you will need to manually download the rate data.

Press ^{OpenLCR} and **2** to call OpenLCR and initiate downloading. Downloading lasts one or two minutes. During this time the display will show LCR DOWNLOADING. When downloading is completed, the display will briefly show DOWNLOAD OK!! and then revert to the date and time. OpenLCR will also program the date and time and your fax number in your fax machine.


Using OpenLCR

When you have registered with OpenLCR and downloaded the rate data to your fax machine, a highlighted "C" will appear in the date and time display to indicate that the OpenLCR feature is activated.



Each time you make a long distance phone or fax call, the fax machine will automatically route the call through the least expensive carrier based on the downloaded rate information.

Don't unplug the fax, or the rate data will be lost!

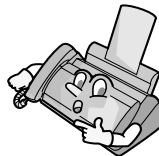

Caution!

If you unplug the fax machine or an interruption occurs in your power supply, the rate data will be erased. If this happens, the highlighted “C” in the display will blink to alert you. The fax machine will automatically call OpenLCR within the next 24 hours to receive new rate data; however, if you want to use OpenLCR service before that time, you should download the rate table manually as explained on page 26.

- ◆ We recommend that you do not unplug the fax machine on a regular basis (for example at night or on the weekends), as this may result in a large number of calls to OpenLCR and a higher phone bill.











The following table shows marks related to OpenLCR that may appear in the display.

| Mark | Meaning |
|-------------|--|
| | OpenLCR has been activated and is ready for use. |
| (Blinking) | OpenLCR cannot be used because the rate data has been erased. Your fax will automatically call OpenLCR within the next 24 hours to receive new data, or you can download the data manually if you need to use OpenLCR immediately. See <i>Downloading (receiving) the rate data manually</i> on page 26. |
| | The rate data in the fax is no longer correct and the fax cannot connect to OpenLCR to obtain new data. See <i>What to do if “E” appears in the display</i> on page 29. |
| | OpenLCR has been temporarily turned off. See <i>Temporarily turning off OpenLCR</i> below. |

Temporarily turning off OpenLCR

If needed, you can temporarily turn off OpenLCR.

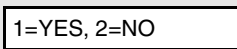- ◆ When you temporarily turn off OpenLCR, long distance and international calls will not be routed by OpenLCR. However, your fax will still call OpenLCR periodically to receive rate data.







| | |
|--|---|
| 1 Press  once and  once. | Display:  |
| 2 Press  once. |  |
| 3 Press  once. |  |
| 4 Press  (NO) to turn off OpenLCR. (Press  (YES) to turn OpenLCR back on.) <ul style="list-style-type: none">• When you turn off OpenLCR, the highlighted “C” in the display will change to “.”. | |
| 5 Press  to return to the date and time display. | |

To stop using OpenLCR


If you want to stop using the Open LCR feature, press this sequence of keys:

, , , , , 

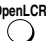- ◆ Calls will not be routed by OpenLCR and the fax machine will not call OpenLCR to update data.

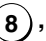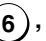To resume use of OpenLCR, press , , , , , 

Changing your user profile

If you need to change your user profile, pick up the handset on the fax machine, and then press  followed by **3**. Follow the instructions you hear.

 
- ◆ If the display shows the alternating messages SET OWN NUMBER / 10 DIGITS, press the number keys to enter your fax/phone number, including the area code (the number must be 10 digits long). When finished, press



- ◆ If you are on a pulse dial line, press ***** before pressing the number keys to respond to the instructions. (This makes your fax temporarily issue tone signals when you press the number keys.)


What to do if “E” appears in the display

A highlighted “E” will appear in the display in place of “C” if the rate data in the fax is out-of-date and the fax is unable to obtain new data. When this happens, OpenLCR routing will not take place.



“E” indicates that the rate data is out-of-date.



This will only occur if the fax machine is unable for some reason to make its periodic call to OpenLCR to receive new rate data.

First try downloading the rate data manually by pressing  and **2** as explained in *Downloading (receiving) the rate data manually* on page 26. If this doesn't work, proceed to the following section, *What to do if you cannot connect to OpenLCR*.

What to do if you cannot connect to OpenLCR


If you are unable to connect to OpenLCR when you use the OpenLCR key to register or manually download data, it is likely that the phone number that the fax machine dials when you press the **OpenLCR** key is no longer correct.

1 Press  once and  once.

2 Press  once and  once.


3 Press  once.

4 Press  (SET) to set the new phone number.

- **Note:** If you wish to restore the factory-set number, press  for CLEAR and then go to Step 6.
-

5 Press the number keys to enter the new phone number.

6 Press  to store the number.

7 Press  to return to the date and time display.

8 Press  to download new rate data.

- If you have not yet registered with OpenLCR, your fax will receive new phone numbers that will allow you to connect to OpenLCR. Register using one of the procedures described at the beginning of this chapter.

Note: The following settings are not required as of the printing of this manual. OpenLCR will inform you through its Web site (www.OpenLCR.com) if the settings become necessary in the future.

Selecting a long or short call

Before you make a long distance or international phone/fax call, select whether the call will be a long call or a short call.

- ◆ Your fax needs to know whether the call will be long or short to route it for the best rate.

1 Press  , .

Display:

LCR TABLE SELECT

- **Note:** If the display shows TABLE NOT EXIST, you must first download the rate data.

2 Press  to select the **SHORT TIME** setting, or  to select the **LONG TIME** setting.

- The initial SHORT TIME setting is 2 minutes, and the initial LONG TIME setting is 4 minutes. If desired, you can change these settings as explained on the following page.
- The short/long time selection will remain in effect for all calls until you change it.

Changing the SHORT TIME and LONG TIME settings

The initial SHORT TIME setting is 2 minutes, and the initial LONG TIME setting is 4 minutes. If the typical durations of your short and long calls are different, you should change the time settings to ensure that OpenLCR routes your calls for the best rate.

- ◆ For example, if your fax transmissions normally last about 3 minutes and your phone calls last about 5 minutes, set **03** for the SHORT TIME and **05** for the LONG TIME. Before sending a fax, select the SHORT TIME setting (03MIN) in the procedure on the preceding page. Before making a phone call, select the LONG TIME setting (05MIN).



Setting Up and Using OpenLCR


- ◆ When you change the SHORT TIME and/or LONG TIME setting, the fax machine will automatically call OpenLCR and receive rate data for the new times.

1 Press  once and  once.

Display:

LCR SETTING 

2 Press  once and  once.

LCR TIME 

3 Press 

SHORT TIME

4 Enter a 2-digit number (“01” to “29”) for the number of minutes of the SHORT TIME setting. (If the number is less than 10, enter a 0 before the number.)

The display briefly shows your selection, then:


LONG TIME


5 Enter a 2-digit number for the number of minutes of the LONG TIME setting. (The number must be greater than the SHORT TIME setting and no more than 30.)

The display briefly shows your selection. If the settings were changed, it will then show:

START: DOWNLOAD

- **Note:** If the display shows NO SERVICE, you must first download the rate data.

6 Press  to begin receiving the rate data for the new settings.

- Your fax calls OpenLCR and receives the data. This lasts one or two minutes.
- **Note:** If you do not press  to receive new data, the settings will revert to their previous state.

Other restrictions

- ◆ The scanner cannot recognize yellow, greenish yellow, or light blue ink.
- ◆ Ink, glue, and correcting fluid on documents must be dry before they pass through the document feeder.
- ◆ All clips, staples, and pins must be removed from documents before loading in the feeder. If these are not removed, they may damage the machine.
- ◆ Documents which are patched, taped, torn, smaller than the minimum size, carbon backed, easily smudged, or have a slippery coated surface should be photocopied, and the copy loaded in the feeder.



Loading the Document

Up to 10 pages can be placed in the feeder at one time. The pages will automatically feed into the machine starting from the bottom page.

- ◆ If you need to send or copy more than 10 pages, place the additional pages gently and carefully in the feeder just before the last page is scanned. Do not try to force them in, as this may cause double-feeding or jamming.

If your document consists of several large or thick pages which must be scanned one at a time, insert each page into the feeder as the previous page is scanned. Insert gently to prevent double-feeding.

Guides to the

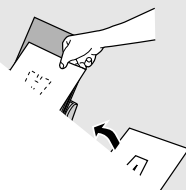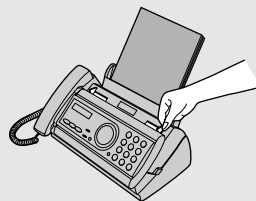

Adjusting

If desired, you can adjust the contrast of a document.

The default resolution setting is STANDARD and the default contrast setting is ALL.

Use the contrast settings to use the appropriate contrast settings.



Note: The resolution and contrast settings are only effective for sending a document. They are not effective for receiving a document.

Resolution Settings

STANDARD

Use STANDARD for ordinary documents. This setting gives you the fastest and most economical transmission.

Use FINE for documents containing small lettering and drawings.

Use SUPERFINE for documents containing very fine drawings.


Use PHOTOGRAPHY for photographs and drawings. This will be the best quality.

Contrast settings

- AUTO Use AUTO for normal documents.
- DARK Use DARK for faint documents.

1 Load the document(s).


- The document must be loaded before the resolution and contrast can be adjusted.

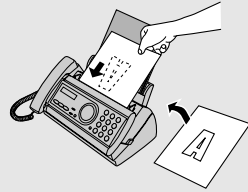

2 Press **RESOLUTION/RECEPTION MODE** one or more times until the desired resolution and contrast settings appear in the display.


- The first time you move through the list of resolution settings, the contrast setting AUTO will appear next to each resolution setting. The second time you move through the list, the contrast setting DARK will appear.


Display:

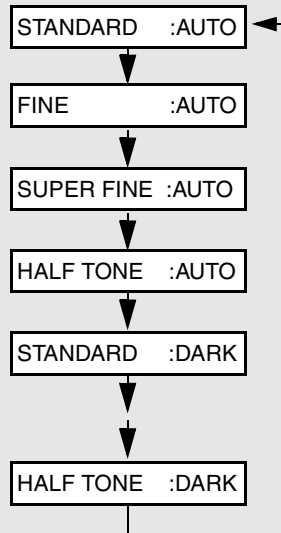


Note: In order to transmit in SUPER FINE resolution, the receiving fax machine must also have that resolution. If it doesn't, your machine will automatically step down to the next best available setting.


Sending a Fax by Normal Dialing

With Normal Dialing, you pick up the handset (or press ) and dial by pressing the number keys.

- ◆ If a person answers, you can talk with them through the handset before sending the fax. (If you pressed , you must pick up the handset to talk.)
- ◆ Normal Dialing allows you to listen to the line and make sure the other fax machine is responding.

1 Load the document(s).

- If desired, press  to set the resolution and/or contrast.

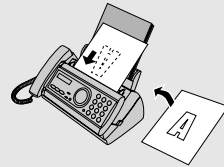


2 Pick up the handset or press . Listen for the dial tone.

or

3 Dial the number of the receiving machine by pressing the number keys.

4 Wait for the connection. Depending on the setting of the receiving machine, you will either hear a fax tone or the other person will answer.



- If the other party answers, ask them to press their Start key (if you pressed , pick up the handset to speak with them). This causes the receiving machine to issue a fax tone.

5 When you hear the fax tone, press . Replace the handset if you used it.



- When transmission is completed, the fax will beep once.

Sending a Fax by Automatic Dialing

You can store up to 30 fax or phone numbers in the machine for automatic dialing.

- ◆ Auto-dial numbers are dialed by pressing  until the desired number appears in the display, and then .

Storing fax and phone numbers for automatic dialing

1 Press  once and  once.



Display:

<NEW NUMBER> 

2 Press  once.


ENTER FAX #


























































3 Enter the fax or voice number by pressing the number keys.
(Note: A space cannot be entered.)




- To clear a mistake, press .
- If a pause is required between any of the digits to access a special service or an outside line, press . The pause appears as a hyphen (two seconds per pause). Several pauses can be entered in a row.

4 Press .

5 Enter a name by pressing number keys for each letter as shown in the chart below. Up to 15 characters can be entered. (If you do not wish to enter a name, go directly to Step 6.)


Example: SHARP = 7777 44 2 777  7


| | | | |
|---|---|---|---|
| SPACE =  | G =  | N =   | U =   |
| A =  | H =   | O =    | V =    |
| B =   | I =    | P =  | W =  |
| C =    | J =  | Q =   | X =   |
| D =  | K =   | R =    | Y =    |
| E =   | L =    | S =     | Z =     |
| F =    | M =  | T =  | |

- ◆ To enter two letters in succession that require the same key, press  after entering the first letter.
- ◆ To enter a lower case letter, continue pressing the key for the letter until the lower case letter appears. To enter one of the following symbols, press  or  repeatedly: . / ! " # \$ % & ' () * + , - : ; < = > ? @ [¥] ^ _ ' { | } * *

6 Press 

Display:




7 Return to Step 2 to store another number, or press  to return to the date and time display.

Note: The fax machine uses a lithium battery to keep automatic dialing numbers and other programmed information in memory when the power is turned off. Battery power is consumed primarily when the power is off. With the power kept continuously off, the life of the battery is about 5 years. If the battery dies, have your dealer or retailer replace it. Do not try to replace it yourself.



Editing and clearing auto-dial numbers

If you need to make changes to a previously stored auto-dial number, or clear a number, follow these steps:

1 Press **FUNCTION** once and  once.

Display:



<NEW NUMBER>  

2 Press  or  until the number you wish to edit or clear appears in the display.

3 Press 



1=EDIT, 2=CLEAR

4 Select **EDIT** or **CLEAR**:

EDIT:  **CLEAR:** 



- If you selected **CLEAR**, go to Step 8.

5 If you selected **EDIT**, make the desired changes to the number.


- Press  or  to move the cursor to the digit or digits you wish to change, and then enter the new digit. The new digit will replace the old digit.
- If you do not wish to change the number, go directly to Step 6.

6 Press **START/MEMORY** 

7 Make the desired changes to the name.

- Press  or  to move the cursor to the letter or letters you wish to change, and then press the appropriate number key repeatedly until the desired letter appears (see Step 5 on page 39). The new letter will replace the old letter.
- If you do not wish to change the name, go directly to Step 8.


8 Press  **START/MEMORY**

 

9 Return to Step 2 to edit or clear another number, or press  **STOP** to return to the date and time display.



Using an auto-dial number

Once you have stored a fax or phone number, you can use it to send a fax or make a phone call.

1 If you are sending a fax, load the document(s).

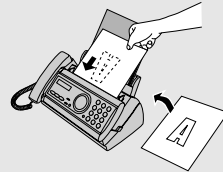- If desired, press  **RESOLUTION/RECEPTION MODE** to set the resolution and/or contrast.




2 Press  (or ) until the name of the other party appears in the display (if no name was stored, the number will appear).


3 If you are sending a fax, press  **START/MEMORY**. Dialing and transmission begins.


If you are making a phone call, lift the handset. Dialing begins.

Sending a fax by Direct Keypad Dialing

You can also enter a full number with the number keys and then press the **START/MEMORY**  key to begin dialing. You can use this method to dial a full number when you don't need to speak to the other party before faxing.


1 Load the document(s).

- If desired, press **RESOLUTION/RECEPTION MODE**  to set the resolution and/or contrast.

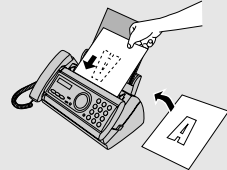


READY TO SEND

2 Enter the number of the receiving machine by pressing the number keys.

- If a pause is required between any of the digits to access a special service or an outside line, press **FUNCTION** . The pause will appear as a hyphen (two seconds per pause). Several pauses can be entered in a row.


3 Check the display. If the number of the receiving machine shown is correct, press **START/MEMORY .**


- If the number is not correct, press **STOP**  to backspace and clear one digit at a time, and then re-enter the correct digit(s).

Redial

You can automatically redial the last number dialed. This procedure can be used to send a fax or make a phone call.

1 If you are sending a fax, load the document(s).

- If desired, press  to set the resolution and/or contrast.

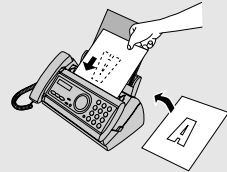

READY TO SEND


2 Press once. <REDIAL> appears in the display, followed by the last number dialed. Make sure the number that appears is the number you wish to dial.

3 If you are sending a fax, press . Dialing and transmission begins.

If you are making a phone call, lift the handset. Dialing begins.

Automatic redialing

If you use automatic dialing (including Direct Keypad Dialing) to send a fax and the line is busy, the fax machine will automatically redial the number. The fax machine will make three redial attempts at an interval of five minutes. During this time, RECALLING will appear in the display, followed by a two-digit number assigned to the fax job. You will not be able to dial any other locations while the message appears.

- ◆ To stop automatic redialing, press .
- ◆ Under certain conditions (for example if a person answers the call on a telephone), automatic redialing may stop before three redialing attempts are made.

Sending a Fax From Memory


You can scan a document into the fax's memory and send the document from memory. This increases transmission speed and allows you to send a fax to multiple destinations in a single operation. After transmission, the document is automatically cleared from memory.


Broadcasting (sending a fax to multiple destinations)

This function allows you to send the same fax to as many as 20 different locations in just one operation.

- ◆ When sending to multiple locations, only auto-dial numbers can be used to dial the numbers of the receiving machines.

1 Load the document(s).

- If desired, press  to set the resolution and/or contrast.

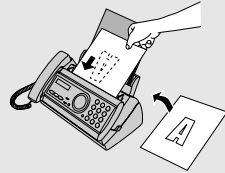



2 Press

3 Press (or) until the name of the number appears in the display (if no name was stored, the number will appear).

4 Press to select the number.

5 Repeat Steps 3 and 4 for each of the other locations to which you wish to send the fax (maximum of 20).

- To check your selected locations, press  to scroll through them. To delete a location, scroll to the location and then press .

6 When you are ready to begin transmission, press .

- A Transaction Report is automatically printed out after Broadcasting is completed. Check the "Note" column of the report to see if any of the locations are marked "Busy" or have a communication error code. If so, send the document to those locations again.

 
Memory transmission

You can also send a fax through memory when sending to a single location. This is convenient when sending to locations where the line is often busy, as it saves you from waiting to pick up the original document and frees the feeder for other operations.

4. Receiving Faxes

Using FAX Mode


To select FAX mode, press **RESOLUTION/RECEPTION MODE** until the arrow in the display points to FAX.



When the reception mode is set to FAX, the fax machine will automatically answer all calls on four rings and receive incoming faxes.

- ◆ If you pick up the handset before the machine answers, you can talk to the other party and/or receive a fax as explained in *Using TEL Mode* on page 47.

4 rings

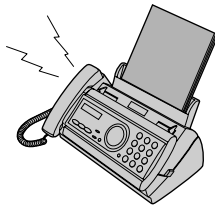

Fax reception



Changing the number of rings

If desired, you can change the number of rings on which the fax machine answers incoming calls in FAX mode. Any number from 2 to 5 can be selected.

1 Press **FUNCTION** once and **▲** twice.

Display:

OPTION SETTING **↔**

Answering with the fax's handset


- 1 When the fax machine rings, pick up the handset.



- 2 If you hear a fax tone, wait until the display shows RECEIVING and then replace the handset.



Note: If you have set the Fax Signal Receive setting to NO, press **START/MEMORY**  to begin reception.

- 3 If the other party first speaks with you and then wants to send a fax, press **START/MEMORY**  after speaking. (Press before the sender presses their Start key.)



- When RECEIVING appears in the display, hang up.





Answering on an extension phone connected to the same line

- 1 Answer the extension phone when it rings.



2 If you hear a soft fax tone, wait until ref-1280-T0f

- 4** Press  to turn on the function, or
 to turn it off.

The display briefly shows your selection, then:

CALLER-ID 

- 5** Press  to return to the date and time display.

Reception Ratio



The fax has been set at the factory to automatically reduce the size of received documents to fit the size of the printing paper. This ensures that data on the edges of the document are not cut off. If desired, you can turn this function off and have received documents printed at full size.

- ◆ If a document is too long to fit on the printing paper, the remainder will be printed on a second page. In this case, the cut-off point may occur in the middle of a line.
- ◆ Automatic reduction may not be possible if the received document is too large, contains too many fine graphics or images, or is sent at high resolution. In this case, the remainder of the document will be printed on a second page.

- 1** Press  once and  twice.

Display:



OPTION SETTING 

- 2** Press  once and  4 times.

RECEIVE RATIO 

- 3** Press  once.

1=AUTO, 2=100%

- 4** Press  to select AUTO, or  to select 100%.


The display briefly shows your selection, then:

PRINT CONTRAST 

5 Press  to return to the date and time display.

Substitute Reception to Memory

In situations where printing is not possible, such as when your fax runs out of paper, the imaging film needs replacement, or the paper jams, incoming faxes will be received to memory.

When you have received a document in memory, FAX RX IN MEMORY will appear in the display, alternating with ADD PAPER & PRESS START KEY or CHECK FILM / CHECK COVER / CHECK PAPER JAM. When you add paper (and press ) , replace the imaging film, or clear the jam, the stored documents will automatically print out.

- ◆ If you received documents in memory because the fax ran out of paper, be sure to add paper which is the same size as the paper previously used. If not, the document print-out size may not match the size of the printing paper.


Caution!


When documents are stored in memory, do not turn the power off. This will erase all of the contents.

5. Making Copies

Your fax machine can also be used to make copies. Single and multiple copies (up to 99 per original) can be made, enabling your fax to double as a convenience office copier.



1 Load the document(s) face down. (Maximum of 10 pages.)

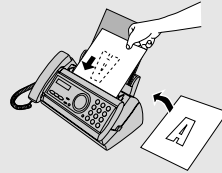- If desired, press  to set the resolution and/or contrast. (The default resolution setting for copying is FINE.)



READY TO SEND

2 If desired, select an enlarge/reduce setting, and/or select the number of copies per original:

- ENLARGE/REDUCE: Press  or  until the desired setting appears in the display. Settings are 100%, 125%, 135%, 50%, 73%, 88%, 94%, and AUTO. (The default setting is 100%.)

Example: Press  twice →

- Number of copies per original: Press the number keys to enter a number from 1 to 99. (The default setting is 1.)

Example: Press  for five copies →

3 When you are ready to begin copying, press .

If MEMORY IS FULL appears...

If the memory becomes full while a document is being scanned, MEMORY IS FULL and SEE MANUAL will alternately appear in the display and the document will automatically feed out. This may happen if the resolution is set to SUPER FINE, or if you selected an enlarge/reduce setting, or if you are making more than one copy per original. To avoid using memory, use STANDARD or FINE for the resolution, 100% for the enlarge/reduce setting, and make only one copy per original.

Copy Cut-off

When making a copy of a document that is longer than the printing paper, use the copy cut-off setting to select whether the remaining part of the document will be cut off or printed on a second page. The initial setting is YES (cut off the remainder). To change the setting, follow the steps below.

1 Press **FUNCTION** once and **▲** twice.

Display:

OPTION SETTING 

2 Press **▶** once and **▲** once.

COPY CUT-OFF 

3 Press **▶** once.

1=YES, 2=NO

4 Press **1** to set copy cut-off to YES (the remaining part of the document will not be printed), or **2** to set copy cut-off to NO (the remaining part will be printed on a second page).

The display briefly shows your selection, then:

NUMBER OF RING 

5 Press **STOP** to return to the date and time display.

6. Special Functions

Caller ID (Requires Subscription to Service)

If you subscribe to a caller identification service from your telephone company, you can set your fax machine to display the name and number of the caller while the fax rings.

Important:

- ◆ To use this function, you must subscribe to a caller identification service from your telephone company.
- ◆ Your fax may not be compatible with some caller identification services.

1 Press **FUNCTION** once and **▲** twice.

Display:

OPTION SETTING **↔**

2 Press **▶** once and **▼** 5 times.

CALLER-ID **↕**

3 Press **▶** once.

1=YES, 2=NO

4 Press **①** (YES) to turn on Caller ID.
(To turn off Caller ID, press **②** and go to Step 8.)

AREA CODE # MODE




1=SET, 2=CLEAR

5 Press **①** to select SET.
(To clear a previously programmed area code, press **②** and go to Step 8.)

ENTER AREA CODE

6 Enter the three digits of your area code.

7 Press  to store your area code.

DAY LIGHT SAVE 

 
8 Press  to return to the date and time display.

How Caller ID operates

When you receive a call, the name and phone number of the caller will alternately appear in the display, beginning just before the second ring. The information will continue to be displayed until the line is disconnected.

Note: Some caller ID services may not provide the name of the caller. In this case, only the phone number will appear.

Display example



Display messages

One of the following messages will appear while the fax rings if caller information is not available.

| | |
|-----------------|--|
| NO SERVICE | No caller information was received from your telephone company. Make sure that the telephone company has activated your service. |
| CALLER-ID ERROR | Noise on the telephone line prevented reception of caller information. |
| OUT OF AREA | The call was made from an area which does not have a caller identification service, or the caller's service is not compatible with that of your local phone company. |
| PRIVATE CALL | Caller information was not provided by the telephone company at the caller's request. |

Viewing the Caller ID list



If you subscribe to a Caller ID service and have turned on the Caller ID function, your fax machine will keep information on the most recent 30 calls and faxes you have received. You can view this information, which consists of the name and number of each caller, in the Caller ID List.

- ◆ After you have received 30 calls, each new call will delete the oldest call.
- ◆ All calls will be erased if you unplug the fax or a power failure occurs.


Follow the steps below to view the Caller ID List in the display. If desired, you can immediately dial a number when it appears.


1 Press  twice.





2 Press  or  to scroll through the list.


3 If you want to dial one of the numbers in the list, scroll through the list until the number appears in the display.

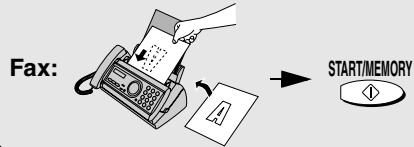- **Fax:** If you want to send a fax, load the document and then press . Dialing and transmission begin.



- **Voice call:** If you want to make a voice call, pick up the handset (or press ). Dialing begins automatically. (If you pressed , pick up the handset when the other party answers.)



4 Press  when you have finished viewing the list.

To delete calls from the Caller ID list

If you want to delete a single call from the caller list, press **0** while the call appears in the display. If you want to delete all calls from the list, hold **0** down for at least 3 seconds while you are viewing any number in the list.

Priority Call

With Caller ID turned on, you can set your fax to make a special ringing sound when you receive a call from a designated phone number. This lets you know immediately who is calling without having to look at the display.

To use this function, enter the desired phone number by following the steps below (only one phone number can be entered).

1 Press **FUNCTION** once and **▼** twice. Display: **ENTRY MODE** **↕**

2 Press **▶** once and **▲** once. **PRIORITY #** **↕**

3 Press **▶** once. **1=SET, 2=CLEAR**

4 Press **1** to store a number.
(To clear a previously stored number, press **2** and go to Step 6.)

5 Enter the number by pressing the number keys (max. 20 digits).

6 Press **START/MEMORY** to store (or clear) the number. **OWN NUMBER SET** **↕**

7 Press **STOP** to return to the date and time display.

Blocking voice calls

With Caller ID turned on, you can use the Anti Junk Fax function described in *Blocking Reception of Unwanted Faxes* in this chapter to block voice calls as well as faxes from your specified Anti Junk Number.

In this case, when a voice call or a fax transmission comes in from the number you have specified as a "Junk Number", your fax will break the connection as soon as it receives the calling phone number from the caller ID service (before the second ring).

To use this function, enter the number that you wish to block as explained in *Blocking Reception of Unwanted Faxes* (see page 60). Only one number can be blocked.

Note: This function cannot be used if you are using the Distinctive Ring function.

Distinctive Ring (Requires Subscription to Service)

Important:


- ◆ **To use distinctive ring, you must subscribe to a distinctive ring service from your local phone company.**
- ◆ Your fax machine may not be compatible with some distinctive ring services.



Distinctive ring is a service offered by some local telephone companies whereby they assign an additional second number to your regular single line. The second number rings differently from your normal number.

If you subscribe to a distinctive ring service, you can set the fax machine to automatically answer when your second number is called. This allows you to use the second number as an exclusive fax number. To have your fax automatically answer when your second number is called, follow the steps below:

1 Press  once and  twice.

Display:






OPTION SETTING 

2 Press  once and  3 times.

DISTINCTIVE 

2 Press  once.


 
3 Press a number from 1 to 3 to select the ring pattern below that matches your second number's ring pattern. Or, press 4 to have your fax automatically answer your normal telephone number. Press 5 to turn off the distinctive ring function.



- | | | |
|---|----------------|---|
|  | RING PATTERN 1 | Two short rings |
|  | RING PATTERN 2 | One short, one long, and one short ring |
|  | RING PATTERN 3 | Two short rings and one long ring |
|  | STANDARD RING | Your standard (normal) ring pattern |
|  | OFF SETTING | Turn distinctive ring off |

4 Press  to return to the date and time display.



5 Set the reception mode to FAX.

- ◆ When using distinctive ring, you must set the reception mode of your fax machine to FAX. When your designated fax number is dialed, your fax will automatically answer and begin reception after two rings. Note that other devices on the same line will also ring until your fax answers. If one of your other numbers is dialed, the fax will ring; however, it will not answer.



1 Press  once and  twice.

2 Press  once and  twice.

3 Press  once.

4 Press  to store an Anti Junk number, or  to clear a previously stored number (if you are clearing a number, go to Step 6).

5 Enter the fax number by pressing the number keys (max. 20 digits).

6 Press  and then press  to return to the date and time display.

7. Printing Lists

You can print lists showing settings and information entered in the fax machine. The lists are described below. To print a list, follow these steps.

1 Press **FUNCTION** once and **▼** once.

Display:

LISTING MODE **↔**

2 Press **▶** once.

TEL # LIST **↔**

3 Press **▲** or **▼** until the desired list appears in the display.

4 Press **▶** once.

PRESS START KEY

5 Press **START/MEMORY** to print the list.

Telephone Number List

This list shows the fax and phone numbers that have been stored for automatic dialing.

Setup List

This list shows your current selections for the **FUNCTION** key settings. The list also shows your name and fax/telephone number as entered in the machine, and a sample of the header printed at the top of every page you transmit (**HEADER PRINT**).

```
                SETUP LIST                JUN-21-2001 02:25 PM
-----
FOR:JOHN DOE CORP
-----
***ENTRY MODE***
ANTI JUNK #
PRIORITY CALL #
SENDER'S NAME
SENDER'S TELEPHONE #
HEADER PRINT
JUN-21-2001 02:25 PM                                P.01
-----
***OPTION SETTING***
NUMBER OF RINGS IN AUTO ANSWER MODE  4 RINGS
TRANSMISSION PRINT SELECT              NEVER PRINT
DIAL MODE                               TONE
DISTINCTIVE RINGING                    OFF
FAX SIGNAL RECEIVE                      YES
CALLER-ID                              YES
DAY LIGHT SAVING TIME                  NO
RECEPTION RATIO                        AUTO
PRINT CONTRAST                          NORMAL
PAPER SIZE SET                           LETTER
COPY CUT OFF                            YES
-----
***LCR SETTING***
LCR FUNCTION ON/OFF(#1062/#104#)      ON
LCR DIAL SELECT                          YES
LCR TIME SELECT                          02.04 MINUTES
LCR TABLE SELECT                       TABLE NOT EXIST
CENTER #                                12763772160
```

Caller-ID List

This list shows information about your 30 most recent calls. (This list is only available if you are using the Caller ID function.)

Transaction Report

This report is printed out automatically after an operation is completed to allow you to check the result. Your fax machine is set at the factory to print out the report only when an error occurs.

- ◆ The Transaction report cannot be printed on demand.

Headings in Transaction Report

**SENDER/
RECEIVER** The name or fax number of the other machine involved in the transaction. If that machine does not have an ID function, the communication mode will appear (for example, "G3").

START The time at which transmission/reception started.

TX/RX TIME Total time taken for transmission/reception.

PAGES Number of pages transmitted/received.

NOTE (One of the following notes will appear under **NOTE** in the report to indicate whether the transaction was successful, and if not, the reason for the failure.)

OK - Transmission/reception was successful.

P.FAIL - A power failure prevented the transaction.

JAM - The printing paper or document jammed, preventing the transaction.

BUSY - The fax was not sent because the line was busy.

COM.E-0 to COM.E-7 - A telephone line error prevented the transaction. See *Line error* on page 67.

CANCEL - The transaction was cancelled because the **STOP** key was pressed, no document was in the feeder, or



Transaction Report print condition

You can change the condition under which a Transaction Report is printed out. Follow the steps below.

1 Press  once and  twice.

Display:

OPTION SETTING 

2 Press  once and  once.






TRANSACTION 

3 Press  once.

1:ALWAYS PRINT


(Selections appear alternately)

4 Press a number from  to  to select the condition for printing.

- | | | |
|---|--------------|--|
|  | ALWAYS PRINT | A report will be printed after each transmission, reception, or error. |
|  | ERROR/MEMORY | A report will be printed after an error or a memory operation. |
|  | SEND ONLY | A report will be printed after each transmission. |
|  | ERROR ONLY | A report will be printed only when an error occurs. |
|  | NEVER PRINT | A report will never be printed. |

The display briefly shows your selection, then:

DIAL MODE 

5 Press  to return to the date and time display.


8. Maintenance

Print head


Clean the print head frequently to ensure optimum printing performance.

Note: Remove the paper from the paper tray before cleaning the print head.

-
- 1** Unplug the power cord, and open the operation panel (press **1**).

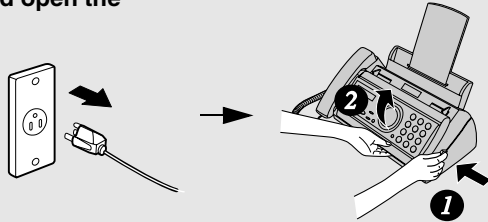


-
- 2** Take the imaging film out of the print compartment and place it on a sheet of paper.

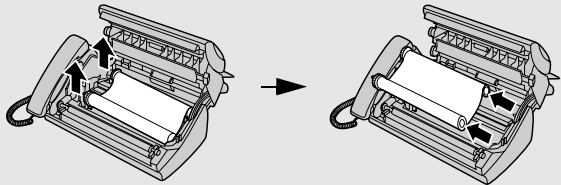


-
- 3** Wipe the print head with isopropyl alcohol or denatured alcohol.

Caution!

- Do not use benzene or thinner. Avoid touching the print head with hard objects.
- The print head may be hot if your fax machine has just received a large number of documents. If this is the case, allow the print head to cool prior to cleaning.

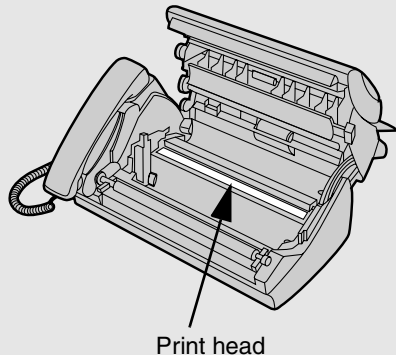

-
- 6** Place the imaging film back in the print compartment.

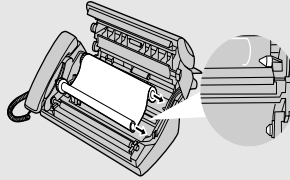

-
- 7** Rotate the front gear until the film is taut, and then close the operation panel (press down on both sides to make sure it clicks into place).

-
- 2** Flip up the green levers on each side of the white roller.


-
- 3** Wipe the scanning glass (under the white roller) and rollers with a cotton swab.

- Make sure that all dirt and stains (such as correcting fluid) are removed. Dirt and stains will cause vertical lines on transmitted images and copies.

If the scanning glass is difficult to clean

If you find it difficult to remove dirt from the scanning glass, you can try moistening the swab with isopropyl alcohol or denatured alcohol. Take care that no alcohol gets on the rollers.

-
- 4** Flip down the green levers on each side of the white roller, and close the operation panel (press down on both sides to make sure it clicks into place).

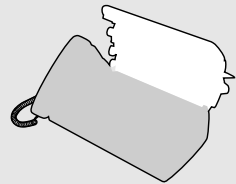

The housing

Wipe the external parts and surface of the machine with a dry cloth.

Caution!

Do not use benzene or thinner. These solvents may damage or discolor the machine.

9. Troubleshooting

Problems and Solutions

If you have any problems with your fax, first refer to the following troubleshooting guide. If you cannot solve the problem, call Sharp's Customer Assistance Center at 1-800-BE SHARP.

Line error

| Problem | Solution |
|------------------------------------|---|
| LINE ERROR appears in the display. | <p>Try the transaction again. If the error persists, check the following:</p> <ul style="list-style-type: none">• Check the connection. The cord from the TEL. LINE jack to the wall jack should be no longer than six feet.• Make sure there are no modem devices sharing the same telephone line.• Check with the other party to make sure their fax machine is functioning properly.• Have your telephone line checked for line noise.• Try connecting the fax machine to a different telephone line.• If the problem still occurs, your fax machine may need service. |

Dialing and transmission problems

| Problem | Solution |
|--|--|
| No dial tone when you pick up the handset or press the SPEAKER key. | <ul style="list-style-type: none">• Make sure the handset cord is connected to the correct jack. See <i>Connecting the handset</i> on page 9. |
| Dialing is not possible. | <ul style="list-style-type: none">• Make sure the power cord is properly plugged into a power outlet.• Make sure that the telephone line is properly connected to both the TEL. LINE jack and the wall jack.• Make sure that the fax machine is set to the correct dialing mode for your telephone line. See <i>Dial mode</i> on page 10. |
| The power is on, but no transmission takes place. | <ul style="list-style-type: none">• Make sure that the receiving machine has paper.• If the receiving machine is in manual mode with no attendant, reception will not be possible.• Check the display for error messages.• Pick up the handset and check for a dial tone. |
| Nothing is printed at the receiving end. | <ul style="list-style-type: none">• Make sure that the document for transmission is placed face down in the feeder. |
| A distorted image is received at the other end. | <ul style="list-style-type: none">• Noise on the telephone line may cause distortion. Try sending the document again.• Make a copy of the document on your fax machine. If the copy is also distorted, your fax machine may need service. |

Reception and copying problems

| Problem | Solution |
|--|---|
| The fax machine doesn't receive documents automatically. | <ul style="list-style-type: none"> • Make sure that the reception mode is set to FAX. If you subscribe to a distinctive ring service, make sure that the Distinctive Ring function is set to the correct ring pattern. If you do not subscribe to a distinctive ring service, make sure that Distinctive Ring is set to OFF SETTING. (See <i>Distinctive Ring</i> on page 59.) |
| The printing paper comes out blank when you try to receive a document. | <ul style="list-style-type: none"> • Make sure that the document is loaded properly in the feeder of the transmitting machine. Make a copy or print a report to confirm the printing ability of your machine. |
| General print quality is poor. | <ul style="list-style-type: none"> • It is important to select a paper that is appropriate for the thermal transfer printer in your fax. We recommend using laser quality paper that has a very smooth finish. Copier paper will work, but it sometimes tends to yield a lighter print quality. |
| The received document is faint. | <ul style="list-style-type: none"> • Ask the other party to send higher contrast documents. If the contrast is still too low, your fax machine may need service. Make a copy or print a report to check your machine's printing ability. |
| Received images are distorted. | <ul style="list-style-type: none"> • Noise on the telephone line may cause distortion. Have the other party try sending the document again. • The print head may be dirty. See <i>Print head</i> on page 64. • Make a copy or print a report on your fax machine. If the copy or report is also distorted, your fax machine may need service. |
| A received document or copy prints out in strips. | <ul style="list-style-type: none"> • Make sure the operation panel is completely closed (press down on both sides of the panel). |

Messages and Signals

Display messages

Note: If you have turned on the Caller ID function, see page 55 for display messages related to Caller ID.

| | |
|--|---|
| ADD PAPER & / PRESS START KEY (alternating messages) | Check the printing paper. If the tray is empty, add paper and then press the START/MEMORY key. If there is paper in the tray, make sure it is inserted correctly (take out the stack, align the edges evenly, and then reinsert it in the tray) and then press the START/MEMORY key. |
| CHECK FILM/ CHECK COVER/ CHECK PAPER JAM (alternating messages) | These alternating messages appear when there is a problem in the print compartment that prevents printing. Check to see if the imaging film is not loaded properly or if it has been used up and needs replacement. Make sure the operation panel is completely closed (press down on both sides). If a paper jam has occurred, clear the jam as explained in the following section, <i>Clearing Paper Jams</i> . |
| CHECK PAPER SIZE | The paper size setting is incorrect. Change the paper size setting as explained on page 15. |
| DOCUMENT JAMMED | The original document is jammed. See the following section, <i>Clearing Paper Jams</i> . Document jams will occur if you load more than 10 pages at once or load documents that are too thick (see page 33). |
| DOWNLOAD ERROR | The fax machine was unable to download rate data from OpenLCR. Try downloading the data manually as explained in <i>Downloading (receiving) the rate data manually</i> on page 26. |
| FAX RX IN MEMORY | A fax has been received in memory because the imaging film needs replacement, you have run out of printing paper, or the paper is jammed. The fax will print out automatically when the problem is fixed. |
| FUNCTION MODE | The FUNCTION key has been pressed. |

Messages and Signals

| | |
|---|---|
| LCR DOWNLOADING | The fax machine has called OpenLCR and is receiving carrier rate data. This message only appears if you have registered with OpenLCR. |
| LINE ERROR | Transmission or reception was not successful. Press the STOP key to clear the message and then try again. If the error persists, see <i>Line Error</i> on page 67. |
| MEMORY IS FULL/ SEE MANUAL (alternating messages) | The memory is full. This may occur during fax reception if too much data is received before the pages can be printed out. If faxes have been received to memory because printing is not possible (an additional message will indicate the problem), resolve the problem so that printing can continue (see <i>Substitute Reception to Memory</i> on page 51). If you are attempting to transmit from memory, see <i>If the memory becomes full</i> on page 45. If you are copying, see <i>If MEMORY IS FULL appears</i> on page 52. |
| MEMORY PRINTING | The fax is preparing to or printing out a document from memory. |
| NO DATA | This appears if you attempt to search for an auto-dial number when none have been stored. |
| NO SERVICE | This appears if you haven't registered with OpenLCR and press the FUNCTION key and 7. |
| OFF HOOK | This appears if you forgot to replace the handset after using it to dial and send a fax. Replace the handset or press the STOP key to clear the message. |
| ON HOOK DIAL | The SPEAKER key has been pressed and the fax machine is waiting for you to dial. |
| OVER HEAT | The print head has overheated. Operation can be continued after it cools. If overheating frequently occurs, try changing the print contrast setting to LIGHT (see page 15). |
| READY TO SEND | A document has been loaded and the fax machine is waiting for you to begin faxing or copying. |


| | |
|------------------|--|
| RECALLING | This appears if you attempt to send a fax by automatic dialing and the line is busy or the receiving fax machine does not answer. Your fax machine will automatically reattempt the call. (See <i>Automatic redialing</i> on page 43.) |
| TOTAL PAGE(S) 01 | Number of pages transmitted, received, or copied. |

Audible signals

| | | |
|-----------------------------|--|---|
| Continuous tone | 3 seconds | Indicates the end of transmission, reception, or copying. |
| Intermittent tone (3 beeps) | 5 seconds (1 second on, 1 second off) | Indicates incomplete transmission, reception, or copying. |
| Rapid intermittent tone | 35 seconds (0.7 seconds on, 0.3 seconds off) | Indicates that the handset is off hook. |

Clearing Paper Jams


Clearing a jammed document

If the original document doesn't feed properly during transmission or copying, or DOCUMENT JAMMED appears in the display, first try pressing **START/MEMORY** . If the document doesn't feed out, remove it as explained below.


Important:

Do not try to remove a jammed document without releasing it as explained below. This may damage the feeder mechanism.

-
- 1** Press **1** and slowly open the operation panel until it is half open.

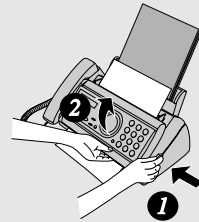


-
- 2** Flip up the green levers on each side of the white roller.

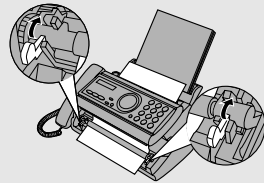


-
- 3** Gently and remove the document.

- Be careful not to tear the document.

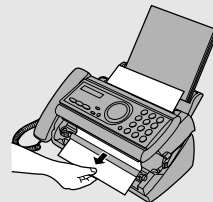


- 4** Flip down the green levers on each side of the white roller, and close the operation panel (press down on both sides to make sure it clicks into place).

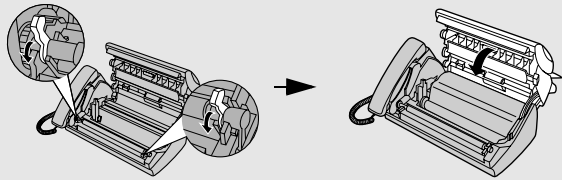


Clearing jammed printing paper


- 1** Open the operation panel (press 1).

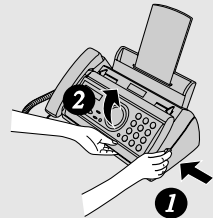

- 2** Gently pull the jammed paper out of the machine, making sure no torn pieces of paper remain in the print compartment or rollers.

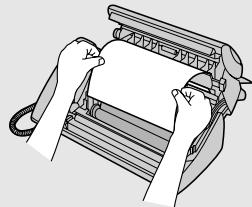

- 3** Rotate the front gear until the film is taut, and then close the operation panel (press down on both sides to make sure it clicks into place).

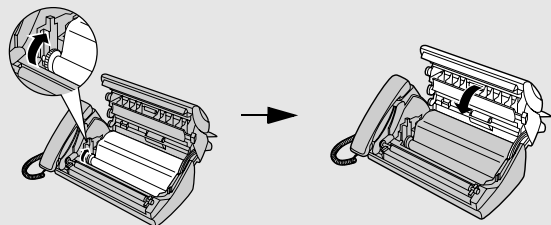

Ordering Parts

To order parts, contact the parts distribution center located nearest you. When ordering a part, use the part order number shown below.

| | |
|----------------------|--------------------------------|
| Operation manual | TINSE4228XHTZ |
| Setup Guide | TCADZ3233XHZZ |
| Handset cord | QCNWG209BXHOW |
| Telephone line cord | QCNWG208BXHOW |
| Hand set | DUNTK468BXHFV |
| Paper tray | CPLTP3183XH51 |
| Paper tray extension | LPLTP3184XHZZ |
| Gears | CGERH2566XH01 NGERH2568XHZZ |

Part distribution centers

| | |
|--|--|
| Tritronics, Inc. 1306 Continental Drive Abingdon, MD 21009 | Tel: 1-800-638-3328 Fax: 1-800-888-FAXD |
|--|--|

| | |
|---|--|
| Tritronics, Inc. 1015 NW 52nd Street Ft. Lauderdale, FL 33309 | Tel: 1-800-365-8030 Fax: 1-800-999-FAXD |
|---|--|

| | |
|---|--|
| Fox International, Ltd. 23600 Aurora Road Bedford Heights, OH 44146 | Tel: 1-800-321-6993 Fax: 1-800-445-7991 |
|---|--|

| | |
|---|--|
| Andrews Electronics 25158 Avenue Stanford Santa Clarita, CA 91355 | Tel: 1-800-274-4666 Fax: 1-805-295-5126 |
|---|--|

| | |
|--|---------------------|
| Sharp Accessories and Supply Center 2130 Townline Road Peoria, IL 61615 | Tel: 1-800-642-2122 |
|--|---------------------|

FCC Regulatory Information

This equipment complies with FCC rules, Part 68. On this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. If requested, this information must be provided to your telephone company.

An FCC compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is Part 68 compliant. This equipment connects to the telephone network through a standard USOC RJ-11C network interface jack.

The REN is used to determine the quantity of devices which may be connected to your telephone line and still have all of those devices ring when your number is called. Too many devices on one line may result in the devices not ringing in response to an incoming call. In most, but not all, areas as the sum of the RENs of all devices should not exceed five (5.0). To be certain of the number of devices that may be connected to your line, as determined by the total REN, contact your local telephone company.

If this equipment causes harm to the telephone network, your telephone company may disconnect your service temporarily. If possible, they will notify you in advance. If advance notice is not practical, you will be notified as soon as possible. You will also be advised of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of your equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If the equipment is causing harm to the telephone network, your telephone company may ask you to disconnect the equipment until the problem resolved.

If you have any questions or problems which cannot be solved by reading this manual, please contact Sharp's Customer Assistance Center. The number is 1-800-BE SHARP.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. Contact your state's public utility commission, public service commission, or corporation commission for more information.

This equipment is hearing-aid compatible.

When programming and/or making test calls to emergency numbers:

- ◆ Remain on the line and briefly explain to the dispatcher the reason for the call.
- ◆ Perform such activities in the off-peak hours, such as early morning or late evening.

S H A R P

Date Revised: _____

Date Issued : July. 3. 2001

MATERIAL SAFETY DATA SHEET (1/2)

MSDS No. B-1026

Section 1. Product and Company Identification

Product Name : IMAGING FILM UX-5CR**Supplier Identification :** Sharp Corporation

22-22 Nagaike-cho, Abeno-ku, Osaka, Japan

Manufacturer : DAINIPPON PRINTING CO. LTD.

591-2, Kamihirose, Higashikubo, Sayamashi, Saitama, 350-1321 JAPAN

Emergency telephone number : +81-42-952-9666

Local suppliers are listed below. Please contact the nearest supplier for additional information.

| (Country) | (Name and Telephone Number) |
|-----------|--|
| U.S.A. | Sharp Electronics Corporation Telephone number for information: 1-800-237-4277 |
| Canada | Sharp Electronics of Canada Ltd. Telephone number for information: 905-890-2100 Emergency telephone number: 1-800-255-3924 |

Section 2. Ingredients

| Ingredients | CAS No. | Proportion | OSHA PEL | ACGIH TLV | Other |
|----------------------------------|------------|------------|-----------------------|-----------------------|-------|
| Polyethylene terephthalate film | 25038-59-9 | 47 ~ 52% | - | - | None |
| Coating layer substances | | | | | |
| Carbon Black | 1333-86-4 | 7 ~ 10% | 3.5 mg/m ³ | 3.5 mg/m ³ | None |
| Ester wax | 8015-86-9 | 2 ~ 7% | - | - | None |
| Paraffin Wax | 8002-74-2 | 10 ~ 14% | - | 2.0 mg/m ³ | None |
| Microcrystalline wax | 63231-60-7 | 16 ~ 22% | - | - | None |
| Ethylene Vinyl Acetate Copolymer | 24937-78-8 | 1 ~ 5% | - | - | None |
| Others | | 1 ~ 6% | - | - | None |

Section 3. Hazardous Identification

| | | | |
|---------------------------|-------------------|-------------|---|
| Route(s) of Entry: | Inhalation? NO | Skin? NO | Ingestion? Possible but very unusual |
|---------------------------|-------------------|-------------|---|

Signs and Symptoms of Exposure: None**Medical Conditions Aggravated by Exposure:** None**POTENTIAL HEALTH EFFECTS:****Inhalation:** None**Skin Contact:** None**Eye Contact:** None**Ingestion:** None

Section 4. First-Aid Measures

Inhalation: No applicable

Skin Contact: In case of contact, usually special care is not necessary. If it dirties skin, clear with water and soap.

Eye Contact: In case of contact, immediately flush eyes with plenty of water. If necessary, then care for medical attention.

Ingestion: Immediately make vomit it and rinse mouth with water. If necessary, then care for medical attention.

Section 5. Fire-Fighting Measures

Flash Point: about 250°C for ink**Autoignition:** None**Flammability Limits:** Not applicable**Extinguishing Media:** CO₂, Water, Dry chemicals, Foam**Firefighting:** None**Fire and Explosion Hazard:** None**Hazardous Combustion Products:** None

S H A R P

Date Revised: _____

Date Issued :July. 3. 2001

MATERIAL SAFETY DATA SHEET (2/2)

MSDS No. B-1026

Section 6. Accidental Release Measures

Rumpling the product may cause the wax layer to peel off. Sweep up or vacuum. When sweeping, avoid raising film or dust. If a vacuum is used, motor should be rated as dust tight. Wash any residue off skin with soap and water. Garments may be washed or dry cleaned after removal of loose film or dust.

Section 7. Handling and Storage

No special precautions for safety reason.
Store in cool, dry place, avoid direct sunlight.

Section 8. Exposure Control/Personal Protection

Ventilation: None
Eye Protection: None
Protective Clothing: None
Gloves: None

Section 9. Physical and Chemical Properties

Description: Not applicable
Melting Point: 71 °C
Pressurized: None
pH: None
Evaporation Rate: Negligible
Volatility: None
Freezing Point: None
Boiling Point: None
Specific Gravity (H2O = 1): about 1.2
Water Solubility: Not applicable

Section 10. Stability and Reactivity

Stability: Stable
Conditions to Avoid: None
Incompatibility(Materials to Avoid): None
Hazardous Decomposition or Byproducts: CO, CO2, NOX and H2O
Hazardous Polymerization: Will not occur

Section 11. Toxicological Information

Acute Toxicity: None
Chronic Toxicity: None

Section 12. Ecological Information

No environmental effect at normal use.

Section 13. Disposal Consideration

Dispose by the same method of ordinary plastic products in accordance with all applicable regulations. Any disposal practice must be in compliance with local, state and federal laws and regulations. If necessary, contact government office and ensure conformity with disposal regulations.

Section 14. Transport Information

No specific precautionary transport measure for safety reasons.
As to storage conditions, see section 7.

Section 15. Regulatory Information

None


Section 16. Other Information

The information herein is given in good faith, but no warranty, if used any process.
Final determination of suitability of any material is the sole responsibility of the user.
Although certain information are described herein, we cannot guarantee, that these are the only hazard, which exist.
Information on this data sheet represents our current data and best opinion as to the proper use in handling of this product under normal conditions.
Restrictions: This information relates only to the specific material designated as supplied by the manufacturer. This information is supplied to us by the manufacturer and Sharp offers no warranties as to its accuracy and accepts no responsibilities for any typographical errors which may appear on these sheets. It is the responsibility of the user to determine the suitability of this product for each particular use.

Quick Reference Guide

Sending Faxes

Place your document (up to 10 pages) face down in the document feeder.

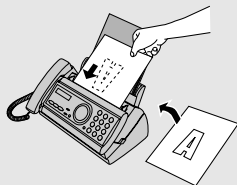

Normal Dialing

1. Lift the handset or press **SPEAKER** .
2. Dial the fax number.
3. Wait for the reception tone (if a person answers, ask them to press their Start key).

4. Press **START/MEMORY** .

Automatic Dialing

1. Press **▶** or **◀** until the name of the other party appears in the display (if no name was stored, the number will appear).

 
2. Press **START/MEMORY** .

Direct Keypad Dialing

1. Dial the fax number.
2. Press **START/MEMORY** .

Receiving Faxes

Press **RESOLUTION/RECEPTION MODE** until the arrow in the display points to the desired reception mode.



FAX mode: The fax machine automatically answers and receives the incoming document.

TEL mode: Answer all calls (even faxes) by picking up the handset. To begin fax

reception, press **START/MEMORY** .

Storing Auto Dial Numbers

1. Press **FUNCTION** once and **▶** twice.
2. Enter the full fax/phone number.

3. Press **START/MEMORY** .

4. Enter a name by pressing number keys. (To enter two letters in succession that require the same key, press **▶** after entering the first letter.)


| | | | |
|---------|---------|-----------|-----------|
| SPACE=1 | G=4 | N=6 6 | U=8 8 |
| A=2 | H=4 4 | O=6 6 6 | V=8 8 8 |
| B=2 2 | I=4 4 4 | P=7 | W=9 |
| C=2 2 2 | J=5 | Q=7 7 | X=9 9 |
| D=3 | K=5 5 | R=7 7 7 | Y=9 9 9 |
| E=3 3 | L=5 5 5 | S=7 7 7 7 | Z=9 9 9 9 |
| F=3 3 3 | M=6 | T=8 | |

5. Press **START/MEMORY** and then **STOP** .

Guía de referencia rápida

Transmisión de mensajes telefax

Coloque el original (hasta 10 páginas) cara abajo en el alimentador de documentos.

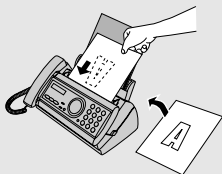

Marcación normal

1. Levante el auricular u oprima: .
2. Marque el número de telefax.
3. Espere hasta escuchar el tono de recepción (si contestara una persona, pídale oprimir su tecla Start).

4. Oprima: .

Marcación automática

1. Oprima o hasta que el nombre de la otra persona aparezca en el display (si no se ha memorizado el nombre, se visualizará el número).

2. Oprima: .

 
Marcación directa por teclado

1. Marque el número de fax.

2. Oprima: .

Recepción de mensajes telefax

Oprima hasta que la flecha que hay en el display señale hacia el número de recepción deseado.



Modo FAX: El fax responde automáticamente y recibe el documento entrante.

Modo TEL: Responda a todas las llamadas (incluso mensajes de fax), levantando el auricular. Para iniciar la recepción de fax,

oprima .

Memorizar números marc. automática

1. Oprima una vez y dos veces..

2. Introduzca el número de telefax/teléfono completo.

3. Oprima: .

4. Ingrese el nombre oprimiendo las teclas numéricas. (Para ingresar sucesivamente dos letras que requieren la misma tecla, oprima después de ingresar la primera letra.

| | | | |
|-----------|-----------|-------------|-------------|
| SPACE = 1 | G = 4 | N = 6 6 | U = 8 8 |
| A = 2 | H = 4 4 | O = 6 6 9 | V = 8 8 8 |
| B = 2 2 | I = 4 4 4 | P = 7 | W = 9 |
| C = 2 2 2 | J = 5 | Q = 7 7 | X = 9 9 |
| D = 3 | K = 5 5 | R = 7 7 7 | Y = 9 9 9 |
| E = 3 3 | L = 5 5 5 | S = 7 7 7 7 | Z = 9 9 9 9 |
| F = 3 3 3 | M = 6 | T = 8 | |

5. Oprima y luego .

...ception to, 51

...ng, 37
... of rings in FAX reception mode,
46

O

OpenLCR, 23-32
Ordering parts, 76
Original document support, 11

P

Paper jams, clearing, 74-75
Paper size setting, 14
Paper, loading, 14
Power cord, 9
Print contrast setting, 15

...mode, 20, 46
...receive, 49

Print head, cleaning, 64-65
Priority Call, 57

R

Reception mode
 FAX mode, 20, 46
 TEL mode, 20, 47
Reception Ratio setting, 50
Redialing, 43
Resolution, 35
Ringer volume, 22

S

Scanning glass, cleaning, 65

Sender's name and number, entering,
 16-17

Setup List, 61

Speaker volume, 21

T

TEL reception mode, 20, 47

TEL. LINE jack, 10

 
Telephone line cord, 10

Telephone Number List, 61

Time, setting, 18

Transaction Report, 62

 Setting print condition, 63



LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first end user purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced, which has been subjected to misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provided proof of purchase to the servicer.

To the extent permitted by applicable state law, the warranties set forth herein are in lieu of, and exclusive of, all other warranties, express or implied. Specifically, ALL OTHER WARRANTIES OTHER THAN THOSE SET FORTH ABOVE ARE EXCLUDED. ALL EXPRESS AND IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR USE, AND FITNESS FOR A PARTICULAR PURPOSE ARE SPECIFICALLY EXCLUDED. If, under applicable state law, implied warranties may not validly be disclaimed or excluded, the duration of such implied warranties is limited to the period(s) from the date of purchase set forth below.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described above, or to extend the duration of any warranties beyond the time period described above on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Sharp be liable, or in any way responsible, for any damages or defects

S

R