

SONY[®]

4-102-684-52

FD Trinitron Colour Television



Instruction Manual

GB

***KV-28CL11B
KV-29CL11B***

 
© 2003 by Sony Corporation

NOTICE

A moulded plug complying with BS1363 is fitted to this equipment for your safety and convenience. Should the fuse in the plug supplied need to be replaced, a 5 AMP fuse approved by ASTA or BSI to BS 1362 (i.e. marked with  or ) must be used. When an alternative type of plug is used it should be fitted with a 5 AMP fuse, otherwise the circuit should be protected by a 5 AMP fuse at the distribution board. If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service centre.

How to replace the Fuse

Open the fuse compartment with a flat blade screwdriver, and replace the fuse.

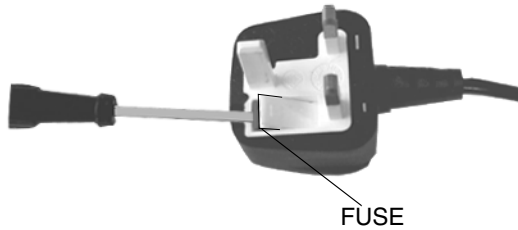

IMPORTANT

If the plug supplied is not suitable for the socket outlet in your home, it should be cut off and an appropriate plug fitted in accordance with the following instructions:

The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. Do not connect either wire to the earth terminal in the plug which is marked by the letter E or by the safety earth symbol \perp or coloured green or green and yellow.

WARNING

- To prevent shock hazard, do not insert the plug cut off from the mains lead into a socket outlet. This plug cannot be used and should be destroyed.
- To prevent fire or shock hazard, do not expose the unit to rain or moisture.
- Dangerously high voltages are present inside the set. Do not open the cabinet. Refer servicing to qualified personnel only.

Introduction

Thank you for choosing this Sony FD Trinitron Colour Television.

Before operating the TV, please read this manual thoroughly and retain it for future reference.

Table of Contents

Safety Information

Safety Information.....	4
-------------------------	---

Overview

Overview of the remote control.....	5
Overview of the TV buttons	6

Installation

Connecting the aerial and VCR.....	7
Inserting batteries into the remote control.....	7

First Time Operation

Switching On the TV and Automatically Tuning	8
--	---

Menu system

Introducing and Using the Menu System	10
Picture Adjustment	10
Sound Adjustment	11
Sleep Timer	12
Language/Country	12
Auto Tuning	12
Programme Sorting.....	12
Programme Labels.....	13
AV Preset	13
Manual Programme Preset	14
Auto Format	15
Noise Reduction	15
AV2 Output	16
RGB Centring.....	16
Picture Rotation.....	16




 
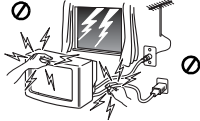 
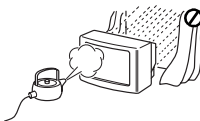 
 
 
 

 




Teletext	17
----------------	----

Additional Information


Connecting Optional Equipment	18
Using Optional Equipment.....	19
Specifications	20
Troubleshooting.....	21


GB

Safety Information

 <p>This set is to operate on a 220-240V AC supply only. Take care not to connect too many appliances to the same power socket as this could result in fire or electric shock.</p>	 <p>For environmental and safety reasons, it is recommended that the TV set is not left in standby mode when not in use. Disconnect from the mains.</p>	 <p>Do not open the cabinet and the rear cover of the TV. Refer to qualified service personnel only.</p>
 <p>Never push objects of any kind into the set as this could result in a fire or electric shock. Never spill liquid of any kind on the set. If any liquid or solid object does fall through, do not operate the TV. Have it checked immediately by qualified personnel.</p>	 <p>For your own safety, do not touch any part of the TV, power lead or aerial lead during lightning storms.</p>	 <p>To prevent fire or shock hazard, do not expose the TV to rain or moisture.</p>
 <p>Do not cover the ventilation openings of the TV. For ventilation, leave a space of at least 10cm all around the set.</p>	 <p>Never place the TV in hot, humid or excessively dusty places. Do not install the TV where it may be exposed to mechanical vibrations.</p>	 <p>To prevent fire, keep inflammable objects or naked lights (eg candles) away from the TV.</p>
 <p>Clean the screen and cabinet with a soft, lightly dampened cloth. Do not use any type of abrasive pad, alkaline cleaner, scouring powder or solvent, such as alcohol or benzine, or antistatic spray. As a safety precaution, unplug the TV before cleaning it.</p>	 <p>Pull out the power lead by the plug. Do not pull on the power lead itself.</p>	 <p>Take care not to place heavy objects on the power lead as this could result in damage. We recommend you wind any excess lead around the holders provided on the rear of the TV.</p>
 <p>Unplug the power lead before moving the TV. Avoid uneven surfaces, quick steps or excessive force. If the set has been dropped or damaged, have it checked immediately by qualified service personnel.</p>	 <p>Place the TV on a secure stable stand. Do not allow children to climb on it. Do not place the TV on its side or face up.</p>	 <p>Do not cover the ventilation openings of the TV with items such as curtains or newspapers etc.</p>

 Overview of the remote control

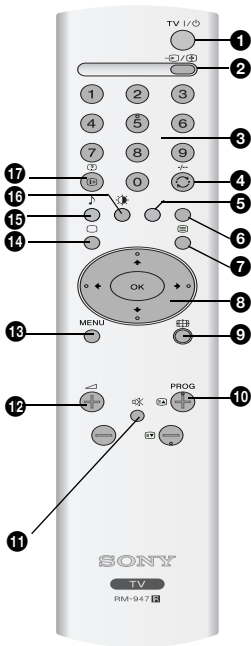

- 1** To temporarily switch off the TV: Press to temporarily switch off the TV (the standby indicator  on the TV lights up). Press again to switch on the TV from standby mode. To save energy we recommend switching off completely when the TV is not in use.

 
Note: After 15 minutes without a signal and without any button being pressed, the TV switches automatically into standby mode.
- 2** Selecting input source: Press repeatedly until the desired input symbol of the source appears on the TV screen.
- 3** Selecting channels: Press to select channels. For double-digit programme numbers, enter the second digit within 2.5 seconds, or press **-/-** and then the first and second digit. If you enter an incorrect first digit, this should be corrected by entering another digit (0-9) and then selecting the **-/-** button again to enter the programme number of your choice.
- 4** Back to the channel last watched: Press to watch the last channel selected (watched for at least 5 seconds).
- 5** *This button only works in Teletext mode.*
- 6** *This button only works in Teletext mode.*
- 7** Selecting Teletext: Press to switch on teletext.
- 8** Menu selection

 - When **MENU** is switched on:
 - ▼ Scroll Down.
 - ▲ Scroll Up.
 - ◀ Previous menu or selection.
 - ▶ Next menu or **OK** confirms your selection.
 - When **MENU** is switched off:


OK shows a channel overview. Press ▼ or ▲ to select the channel, then press the **OK** button to watch the selected channel.
- 9** Selecting Screen format: Press repeatedly to change the format of the screen. For more details, refer to the chapter "Auto Format" on page 15.
For KV-29CL11B model : Press to view programmes in 16:9 mode. Press again to return to 4:3 mode.
- 10** Selecting channels: Press to select the next or previous channel.
- 11** Muting the Sound: Press to mute the TV sound. Press again to restore the sound.
- 12** Adjusting TV volume: Press to adjust the volume of the TV.
- 13** Displaying the menu system: Press to display the menu on the TV screen. Press again to remove the menu display from the TV screen.
- 14** Selecting TV mode: Press to switch off teletext or video input.
- 15** Selecting sound mode: Press repeatedly to change the sound mode.
- 16** Selecting picture mode: Press repeatedly to change the picture mode.
- 17** Displaying on Screen information: Press to display all the on-screen indications. Press again to cancel.

GB

Overview of the TV buttons

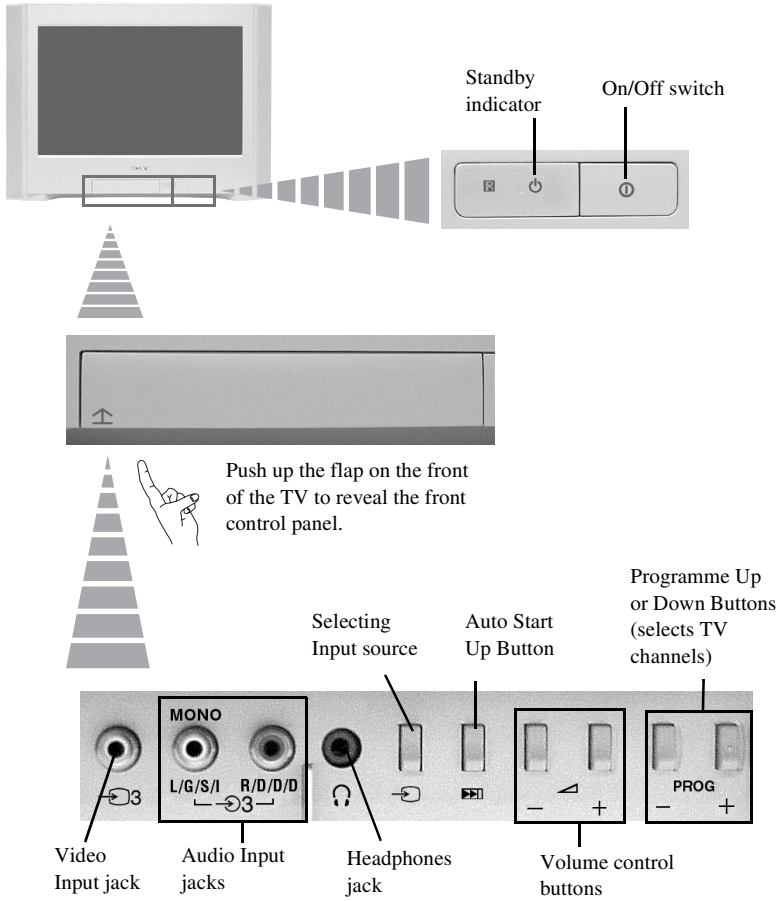

Connecting the aerial and VCR

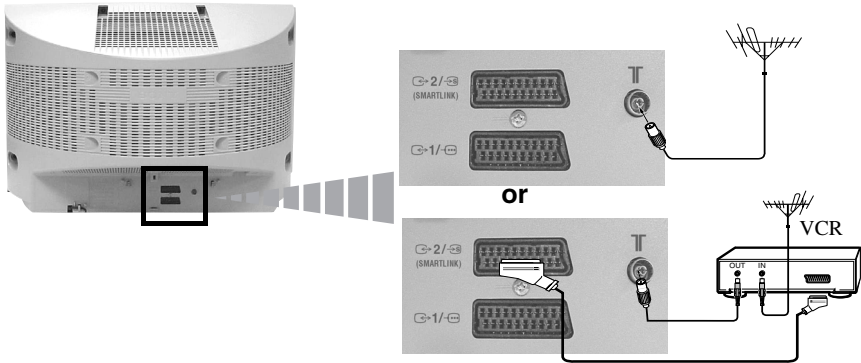 

Scart lead is optional.

 
For more details on VCR connection, please refer to the section "Connecting Optional Equipment" of this instruction manual on page 18.

Note: Connecting cables are not supplied.

GB

Inserting batteries into the remote control

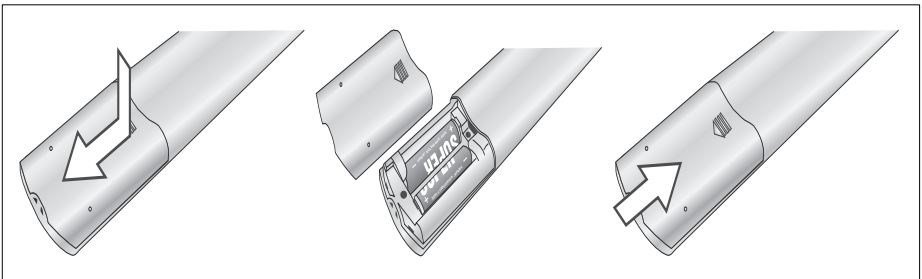

Please ensure you insert the supplied batteries using the correct polarities.
Always remember to dispose of used batteries in an environmentally friendly way.

 


Switching On the TV and Automatically Tuning


The first time you switch on your TV, a sequence of menu screens appear on the TV enabling you to:


- 1) choose the language of the menu screen,
- 2) choose the country in which you wish to operate the TV,
- 3) adjust the picture slant,
- 4) search and store all available channels (TV broadcasts) and
- 5) change the order in which the channels (TV broadcasts) appear on the screen.

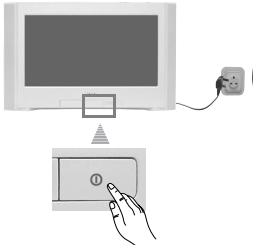

 However, if you need to change any of these settings at a later date, you can do that by selecting the appropriate option in the  (Set Up menu) or by pressing the Auto Start Up Button  on the TV set.




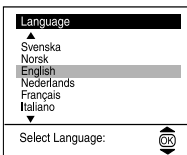

- 1 Connect the TV plug to the mains socket (220-240V AC, 50Hz).

 Press the  on/off button on the TV set to turn on the TV. The first time you press this button, a **Language** menu displays automatically on the TV screen.

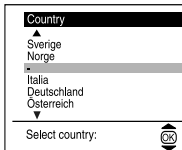


 - 2 Press the  or  button on the remote control to select the language, then press the **OK** button to confirm your selection. From now on all the menus appear in the selected language.







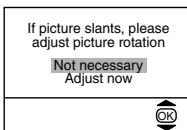


- 3 The **Country** menu appears automatically on the TV screen. Press the  or  button to select the country in which you will operate the TV set, then press the **OK** button to confirm your selection.

- If the country in which you want to use the TV set does not appear in the list, select “-” instead of a country.
- To avoid wrong teletext characters for cyrillic languages we recommend selecting ‘Russia’ if your own country does not appear in the list.




- 4 Because of the earth’s magnetism, the picture might slant. The **Picture Rotation** menu allows you to correct the picture slants if it is necessary.

 
- a) If it is not necessary, press  or  to select **Not necessary** and press **OK**.
- b) If it is necessary, press  or  to select **Adjust now**, then press **OK** and correct any slant of the picture between -5 and +5 by pressing  or . Finally press **OK** to store.

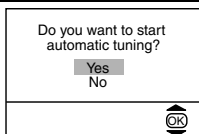

 
5 The Auto Tuning menu appears on the screen. Press the **OK** button to select **Yes**.

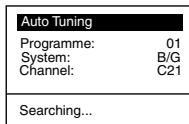

 6 The TV starts to automatically search and store all available broadcast channels for you. This procedure could take some minutes. Please be patient and do not press any buttons, otherwise the automatic tuning will not be completed.

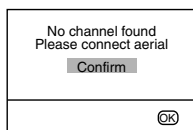

 If no channels were found during the auto tuning process then a new menu appears automatically on the screen asking you to connect the aerial. Please connect the aerial (see page 7) and press **OK**. The auto tuning process will start again.

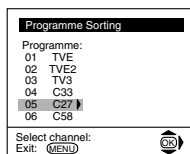


7 After all available channels are captioned and stored, the **Programme Sorting** menu appears automatically on the screen enabling you to change the order in which the channels appear on the screen.

GB

a) If you wish to keep the broadcast channels in the tuned order, go to step 8.

b) If you wish to store the channels in a different order:

 - i)** Press the **▼** or **▲** button to select the programme number with the channel (TV Broadcast) you wish to rearrange, then press the **➡** button.
- ii)** Press the **▼** or **▲** button to select the new programme number position for your selected channel (TV Broadcast), then press **⬅**.
- iii)** Repeat steps b)1 and b)2 if you wish to change the order of the other channels.

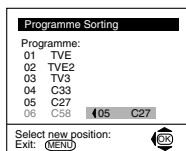

MENU



8 Press the **MENU** button to remove the menu display from the TV screen.



Your TV is now ready for use.

Introducing and Using the Menu System

 
Your TV uses an on-screen menu system to guide you through the operations. Use the following buttons on the remote control to operate the menu system:

1 Press the **MENU** button to switch the first level menu on.

MENU



- 2**
- To highlight the desired menu or option, press **↓** or **↑**.
 - To enter to the selected menu or option, press **▶**.
 - To return to the last menu or option, press **◀**.
 - To alter settings of your selected option, press **↓/↑/◀** or **▶**.
 - To confirm and store your selection, press **OK**.




3 Press the **MENU** button to remove the menu from the screen.

MENU



 Menu Guide

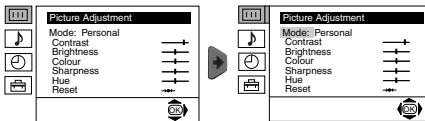


PICTURE ADJUSTMENT

The “Picture Adjustment” menu allows you to alter the picture settings.

To do this: after selecting the item you want to alter press **▶**, then press **↓/↑/◀** or **▶** repeatedly to adjust it and finally press **OK** to store the new adjustment.

 - This menu also allows you to customise the picture mode based on the programme you are watching:
 - Mode ▶**
 - **Personal** (for individual settings).
 - **Live** (for live broadcast programmes, DVD and Digital Set Top Box receivers).
 - **Movie** (for films).
- **Brightness**, **Colour** and **Sharpness** can only be altered if “Personal” mode is selected.
- **Hue** is only available for *NTSC* colour signal (e.g: *USA* video tapes).
- Select **Reset** and press **OK** to reset the picture to the factory preset levels.

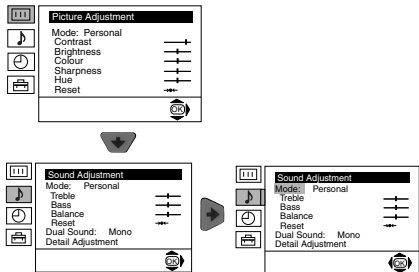

SOUND ADJUSTMENT

The “Sound Adjustment” menu allows you to alter the sound settings.

To do this: after selecting the item you want to alter, press **➡**, then press **▼/▲/◀** or **▶** repeatedly to adjust it and finally press **OK** to store the new adjustment.

This menu also contains two submenus as following:



- Mode** **➡ ▼ Personal** (for individual settings)
- ▼ Rock**
 - ▼ Pop**
 - ▼ Jazz**

GB


- Detail Adjustment** **➡ ▼ Sound Effect:** **➡ ▼ Off:** Normal.
- ▼ Spatial:** Acoustic sound effect.
- ▼ Auto volume:** **➡ ▼ Off:** Volume level changes according to the broadcast signal.
- ▼ On:** Volume level of the channels will stay the same, independent of the broadcast signal (e.g. in the case of advertisements).
- ▼ TV Speakers:** **➡ ▼ Off:** Sound from external amplifier connected to the audio outputs on the rear of the TV set.
- ▼ On:** Sound from the TV set.

- **Treble** and **Bass** can only be altered if “Personal” mode is selected.
- Select **Reset** and press **OK** to reset the sound to the factory preset levels.
- In case of a bilingual broadcast select **Dual Sound** and set **A** for sound channel 1, **B** for sound channel 2 or **Mono** for mono channel if available. For a stereo broadcast you can choose **Stereo** or **Mono**.

  Level 1



Level 2



 


Level 3 / Function

SLEEP TIMER

The “Sleep Timer” option in the “Timer” menu allows you to select a time period for the TV to switch itself automatically into the standby mode. To do this: after selecting the option press **➡**, then press **⬇** or **⬆** to set the time period delay (max. of 4 hours) and finally press **OK** to store.

  
 
- While watching the TV, you can press the **Ⓜ** button on the remote control to display the time remaining.
- One minute before the TV switches itself into standby mode, the time remaining is displayed on the TV screen automatically.



LANGUAGE / COUNTRY

The “Language/Country” option in the “Set Up” menu allows you to select the language that the menus are displayed in. It also allows you to select the country in which you wish to operate the TV set.


 
 
To do this: after selecting the option, press **➡** and then proceed in the same way as in the steps 2 and 3 of the section “Switching On the TV and Automatically Tuning”.



AUTO TUNING

The “Auto Tuning” option in the “Set Up” menu allows you to automatically search for and store all available TV channels.

   To do this: after selecting the option, press **➡** and then proceed in the same way as in TV steps 5 and 6 of the section “Switching On the TV and Automatically Tuning” on page 8.




PROGRAMME SORTING


The “Programme Sorting” option in the “Set Up” menu allows you to change the order in which the channels (TV broadcast) appear on the screen.

To do this: after selecting the option, press **➡** and then proceed in the same way as in step 7b) of the section “Switching On the TV and Automatically Tuning” on page 8.

 Level 1



Level 2



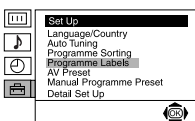 


Level 3 / Function

PROGRAMME LABELS

The “Programme Labels” option in the “Set Up” menu allows you to name a channel using up to five characters (letters or numbers). To do this:

   - 1 After selecting the option, press **➡**, then press **▼** or **▲** to select the programme number with the channel you wish to name.
- 2 Press **➡**. With the first element of the **Label** column highlighted, press **▼** or **▲** to select a letter or number (select “-” for a blank), then press **➡** to confirm this character. Select the other four characters in the same way. Finally press **OK** to store.

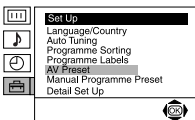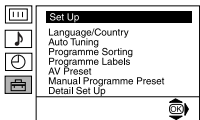


AV PRESET

The “AV Preset” option in the “Set Up” menu allows you to designate a name to the external equipment you have connected to the sockets of this TV.

To do this:

- 1 After selecting the option, press **➡**, then press **▼** or **▲** to select the input source you wish to name (AV1 and AV2 are for the rear Scarts and AV3 for front connectors). Then press **➡**.
- 2 In the label column automatically appears a label:
 - a) If you want to use one of the 6 predefined label (**CABLE**, **GAME**, **CAM**, **DVD**, **VIDEO** or **SAT**), press **▼** or **▲** to select the desired label and finally press **OK** to store.
 - b) If you want to set a different label, select **Edit** and press **➡**. Then with the first element highlighted, press **▼** or **▲** to select a letter, number or “-” for a blank, then press **➡** to confirm this character. Select the other four characters in the same way and finally press **OK** to store.

 GB

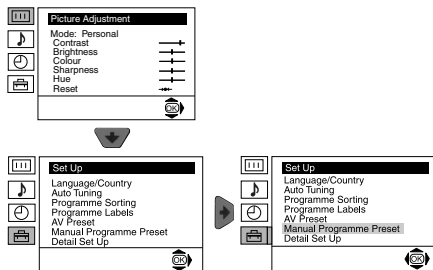




MANUAL PROGRAMME PRESET

The “Manual Programme Preset” option in the “Set Up” menu allows you to:

- 1) Preset channels or a video input source one by one to the programme order of your choice.
 - a) After selecting the “Manual Programme Preset” option, press **▶** then with Programme option highlighted press **▶**. Press **▼** or **▲** to select on which programme number you want to preset the channel (for VCR, select programme number “0”). Then press **◀**.
 - b) The following option is only available depending on the country you have selected in the “Language/Country” menu. After selecting the System option, press **▶**. Then press **▼** or **▲** to select the TV broadcast system (B/G for western European countries, D/K for eastern European countries, L for France or I for United Kingdom). Then press **◀**.
 - c) After selecting the Channel option, press **▶**. Then press **▼** or **▲** to select the channel tuning (“C” for terrestrial channels or “S” for cable channels). Next press **▶**. After that, press the number buttons to enter directly the channel number of the TV broadcast or the channel of the VCR signal. If you do not know the channel number, press **▼** or **▲** to search for it. When you have tuned the desired channel, press OK twice to store.

Repeat all the above steps to tune and store more channels.

   - 2) Label a channel using up to five characters. To do this: Highlighting the Programme option, then press the **PROGR +/-** button to select the programme number with the channel you wish to name. When the programme you want to name appears on the screen, select the Label option and press **▶**. Next press **▼** or **▲** to select a letter, number or “-” for a blank. Press **▶** to confirm this character. Select the other four characters in the same way. After selecting all the characters, press OK twice to store.
- 3) Normally the automatic fine tuning (AFT) is operating, however you can manually fine tune the TV to obtain a better picture reception in the case that the picture is distorted. To do this: while watching the channel (TV Broadcast) you wish to fine tune, select the AFT option and press **▶**. Next press **▼** or **▲** to adjust the fine tuning between -15 and +15. Finally press OK twice to store.
- 4) Skip any unwanted programme numbers when they are selected with the **PROGR +/-** buttons. To do this: Highlighting the Programme option, press the **PROGR +/-** button to select the programme number you want to skip. When the programme you want to skip appears on the screen, select the Skip option and press **▶**. Next press **▼** or **▲** to select Yes. Finally press OK twice to confirm and store.
To cancel this function afterwards, select “No” instead of “Yes” in the step above.
- 5) View and record correctly scrambled channels when using a decoder connected directly to the Scart **2/3** or through a VCR. This option is only available depending on the country you have selected in the “Language/Country” menu. To do this: select the **Decoder** option and press **▶**. Next press **▼** or **▲** to select **On**. Finally press **OK** twice to confirm and store.
To cancel this function afterwards, select “Off” instead of “On” in the step above.




AUTO FORMAT (for KV-28CL11B only)

The “Auto Format” option in the “Detail Set Up” menu allows you to automatically change the aspect ratio of the screen.

To do this: after selecting the option, press **➡**. Then press **⬇** or **⬆** to select **On** (if you wish the TV set to automatically switch the screen format according to the broadcast signal) or **Off** (if you wish to keep your preference). Finally press **OK** to store.

 Even if you have selected “On” or “Off” in the “Auto Format” option, you can always modify the format of the screen by pressing **⏏** repeatedly on the remote control to select one of the following formats:

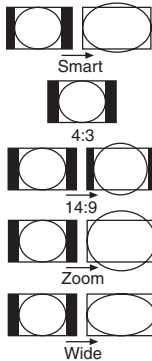

Smart: Imitation of wide screen effect for 4:3 broadcast.

4:3: Conventional 4:3 picture size, full picture information.

 
 
 
14:9: Compromise between 4:3 and 16:9 picture size.

Zoom: Widescreen format for letterbox movies.

Wide: For 16:9 broadcast. Full picture information.

*Note: In “Smart”, “Zoom” and “14:9” modes, parts of the top and bottom of the screen are cut off. Press **⬇** or **⬆** to adjust the position of the image on the screen (e.g. to read subtitles).*

GB



NOISE REDUCTION

The “Noise Reduction” option in the “Detail Set Up” menu allows you to automatically reduce the picture noise visible in the broadcast signal.




To do this: after selecting the option, press **➡**. Then press **⬇** or **⬆** to select **Auto**. Finally press **OK** to confirm and store.

To cancel this function afterwards, select “Off” instead of “Auto” in the step above.







Level 1

       Level 2


 

Level 3 / Function



AV2 OUTPUT


 
The “AV2 Output” option in the “Detail Set Up” menu allows you to select the source to be output from the Scart connector 2/S in order you can record from this Scart any signal coming from the TV or from external equipment connected to the Scart connector 1/ or front connectors 3 and 3.




If your VCR supports SmartLink, this procedure is not necessary.

To do this: after selecting the option, press . Then press  or  to select the desired output signal: **TV**, **AV1**, **AV3** or **AUTO**.

Notes:




If you select “AUTO”, the output signal will always be the same one that is displayed on the screen.

 
 
 
If you have connected a decoder to the scart connector 2/S or to a VCR connected to this scart, please remember to change back the “AV2 Output” to “AUTO” or “TV” for correct unscrambling.



RGB CENTRING

     
 
 
When connecting an RGB source, such as a “PlayStation”, you may need to readjust the horizontal position of the picture. In that case, you can readjust it through the “RGB Centring” option in the “Detail Set Up”.

To do this: while watching an RGB source select the “RGB Centring” option and press . Then press  or  to adjust the centre of the picture between -10 and +10. Finally press **OK** to confirm and store.



PICTURE ROTATION


Because of the earth’s magnetism, the picture may slant. In this case, you can correct the picture slant by using the option “Picture Rotation” in the “Detail Set Up” menu.

To do this: after selecting the option, press . Then press  or  to correct any slant of the picture between -5 and +5 and finally press **OK** to store.

Teletext

Teletext is an information service transmitted by most TV stations. The index page of the teletext service (usually page 100) gives you information on how to use the service. To operate teletext, use the remote control buttons as indicated below. Please ensure you use a channel (TV Broadcast) with a strong signal, otherwise teletext errors may occur.

To Switch On Teletext :

After selecting the TV channel which carries the teletext service you wish to view, press .



To select a Teletext page:

Input 3 digits for the page number, using the numbered buttons.

- *If you have made a mistake, retype the correct page number.*
- *If the counter on the screen continues searching, it is because this page is not available. In that case, input another page number.*



To access the next or preceding page:

Press **PROGR +** () or **PROGR -** ().


 
To superimpose teletext on to the TV:

Whilst you are viewing teletext, press . Press it again to cancel teletext mode.

To freeze a teletext page:

Some teletext pages have sub-pages which follow on automatically. To stop them, press  / . Press it again to cancel the freeze.

To reveal concealed information (e.g: answer to a quiz):

Press  / . Press it again to conceal the information.

To Switch Off Teletext:

 
Press .

Fastext

Fastext service lets you access pages with one button push. When you are in Teletext mode and Fastext is being broadcast, a colour coded menu appears at the bottom of the teletext page. Press the colour button (red, green, yellow or blue) to access the corresponding page.

Connecting Optional Equipment

Using the following instructions you can connect a wide range of optional equipment to your TV set. (Connecting cables are not supplied).

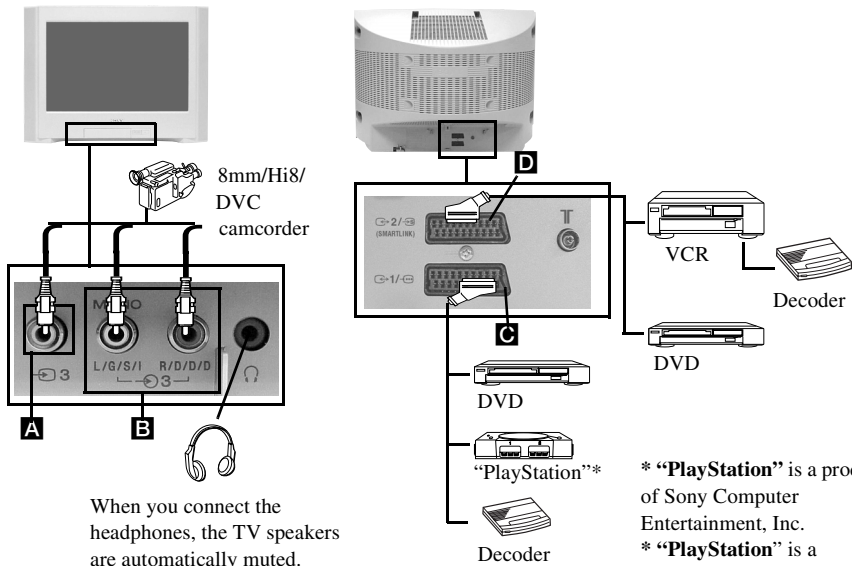



* “PlayStation” is a product of Sony Computer Entertainment, Inc.
* “PlayStation” is a trademark of Sony Computer

 
 
Connecting a VCR:

To connect a VCR, please refer to the section “Connecting the aerial and VCR” of this instruction manual. We recommend you connect your VCR using a scart lead. If you do not have a scart lead, tune in the VCR test signal to the TV programme number “0” by using the “Manual Programme Preset” option. (for details of how to manually programme these presets, see page 14, step a). Refer to your VCR instruction manual to find out how to find the output channel of your VCR.

Connecting a VCR that supports SmartLink:


SmartLink is a direct link between the TV set and the VCR. For more information on SmartLink, please refer to the instruction manual of your VCR. If you use a VCR that supports SmartLink, please connect the VCR by using a scart lead to the Scart   **D**.






If you have connected a decoder to the scart or through a VCR connected to this scart:

Select the “Manual Programme Preset” option in the “Set Up” menu and after entering in the “Decoder**” option, select “On” (by using  or ). Repeat this option for each scrambling signal.


**This option is only available depending on the country you have selected in the ‘Language/Country’ menu.

Using Optional Equipment


- 1 Connect your equipment to the designated TV socket, as indicated in the previous page.
- 2 Switch on the connected equipment.
- 3 To watch the picture of the connected equipment, press the  button repeatedly until the correct input symbol appears on the screen.

Symbol	Input Signals
 1	Audio / video input signal through the scart connector C .
	RGB input signal through the scart connector C . This symbol appears only if a RGB source has been connected.
 2	Audio / video input signal through the scart connector D .
 2	S Video input signal through the scart connector D .
 3	Video input signal through the phono socket A and audio input signal through B .

GB

- 4 Press the  button on the remote control to return to the normal TV picture.

For Mono Equipment

Connect the phono plug to the L/G/S/I socket on the front of the TV and select  input signal using the instructions above. Finally, refer to the “Sound Adjustment” section of this manual and select “Dual Sound” “A” on the sound menu screen (see page 11).

Specifications

TV system:

Depending on your country selection:
B/G/H, D/K, L, I

Colour system:

PAL, SECAM
NTSC 3.58, 4.43 (only Video In)

 
Channel Coverage:

VHF: E2-E12
UHF: E21-E69
CATV: S1-S20
HYPER: S21-S41
D/K: R1-R12, R21-R69
L: F2-F10, B-Q, F21-F69
I: UHF B21-B69


Picture Tube:

Flat Display FD Trinitron
28" (approx. 71 cm. measured diagonally)
29" (approx. 72 cm. measured diagonally)

Rear Terminals



 21-pin scart connector (CENELEC standard)
including audio/video input, RGB input,
TV audio/video output.



(SMARTLINK)
21-pin scart connector (CENELEC standard)
including audio/video input, S video input,
selectable audio/video output and SmartLink
interface.

Front Terminals



3 video input – phono jack



3 audio input – phono jacks



headphones jack

Sound Output:

2 x 10 W (music power)
2 x 5 W (RMS)

Power Consumption:

28" : 72 W
29" : 94 W

Standby Power Consumption:

0.5 W

Dimensions (w x h x d) :

28" : Approx. 788 x 517 x 523 mm
29" : Approx. 788 x 598 x 523 mm.

Weight:

28" : Approx. 41.5 Kg
29" : Approx. 45.8 Kg

Accessories supplied:

1 remote control (RM-947)
2 x IEC designated AA size batteries









Other features:

- Teletext, Fastext, TOPtext.
- Sleep Timer.
- SmartLink (direct link between your TV set and a compatible VCR. For more information on SmartLink, please refer to your VCR instruction manual).
- TV system autodetection.

Design and specifications are subject to change without notice.

Troubleshooting

Here are some simple solutions to the problems which may affect the picture and sound.

Problem	Solution
No picture (screen is dark) and no sound.	<ul style="list-style-type: none"> • Check the aerial connection. • Plug the TV in and press the  button on the front of the TV. • If the standby indicator  is on, press the  button on the remote control.
Poor or no picture (screen is dark), but good sound.	<ul style="list-style-type: none"> • Using the menu system, select the “Picture Adjustment” menu and select “Reset” to return to the factory settings.
No picture or no menu information from equipment connected to the scart connector.	<ul style="list-style-type: none"> • Check that the optional equipment is on and press the  button repeatedly on the remote control until the correct input symbol is displayed on the screen (see page 19).
Good picture, no sound.	<ul style="list-style-type: none"> • Press the  + button on the remote control. • Check that the headphones are not connected.
No colour on colour programmes.	<ul style="list-style-type: none"> • Using the menu system, select the “Picture Adjustment” menu and select “Reset” to return to factory settings.
Distorted picture when changing programmes or selecting teletext.	<ul style="list-style-type: none"> • Turn off any equipment connected to the scart connector on the rear of the TV.
Wrong characters appear when viewing teletext.	<ul style="list-style-type: none"> • Using the menu system, display the “Language/Country” menu and select the country in which you are operating the TV set. For cyrillic languages, we recommend selecting ‘Russia’ if your own country does not appear in the list.
The TV picture is slanted	<ul style="list-style-type: none"> • Using the menu system, select the “Picture Rotation” option in the “Detail Set Up” menu to correct the picture slant.
Noisy picture when viewing a TV channel.	<ul style="list-style-type: none"> • Using the menu system, select the “Manual Programme Preset” menu and adjust Fine Tuning (AFT) to obtain a better picture reception. • Using the menu system, select the “Noise Reduction” option in the “Detail Set Up” menu and select “Auto” to reduce the picture noise.
No unscrambled picture whilst viewing an unscrambled channel with a decoder connected through the scart connector  2/  .	<ul style="list-style-type: none"> • Using the menu system, display the “Set Up” menu. Then select the “Detail Set Up” option and set “AV2 Output” to “TV”.
Remote control does not function.	<ul style="list-style-type: none"> • Replace the batteries.
The standby indicator  on the TV flashes.	<ul style="list-style-type: none"> • Contact your nearest Sony service centre.

 
 
GB

If you continue to experience problems, have your TV serviced by qualified personnel. Never open the casing yourself.

4-102-684-52



410268452

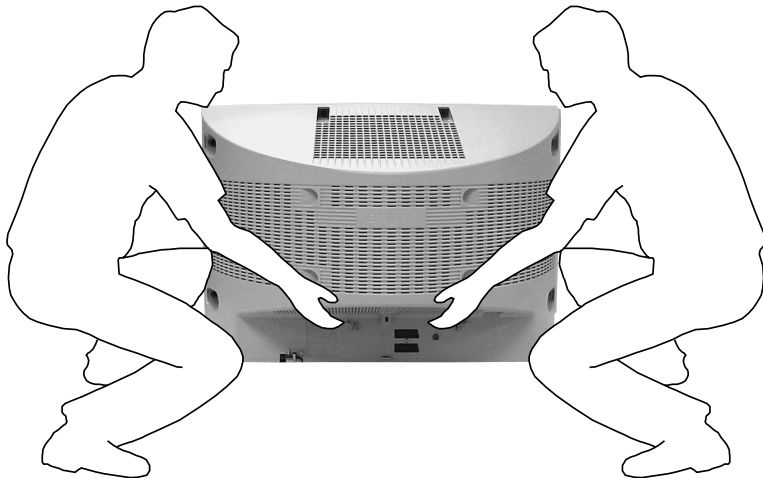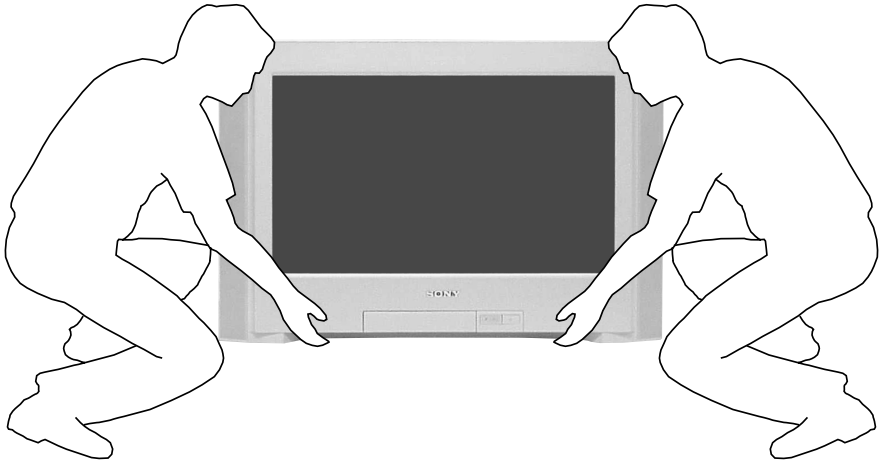

KV-28CL11B/29CL11B
<http://www.sony.net/>
Sony Corporation Printed in Spain



Recyclable