

**SONY**

**BRAVIA**

# LCD Digital Color TV

## Operating Instructions

KDL-46VL160  
KDL-40VL160

© 2009 Sony Corporation

### **Sony Customer Support**

U.S.A.: [www.sony.com/tvsupport](http://www.sony.com/tvsupport)  
Canada: [www.sony.ca/support](http://www.sony.ca/support)

United States	Canada
1.800.222.SONY	1.877.899.SONY

Please Do Not Return  
the Product to the Store

### Owner's Record

The model and serial numbers are located at the rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this TV.

Model Name

Serial No.

### CAUTION

To prevent electric shock and blade exposure, do not use this polarized AC plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted.

- ☐ Operate the TV only on 120-240 V AC.

### Declaration of Conformity

Trade Name: SONY  
Model: KDL-40VL160/KDL-46VL160  
Responsible Party: Sony Electronics Inc.  
Address: 16530 Via Esprillo,  
San Diego, CA 92127 U.S.A.  
Telephone Number: 858-942-2230

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Pursuant to FCC regulations, you are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

### CAUTION

Use the following Sony TVs only with the following WALL-MOUNT BRACKET or TV-stand.

Sony TV Model No.	
KDL-40VL160	KDL-46VL160
Sony Wall-Mount Bracket Model No.	SU-WL500
Sony TV Stand Model No.	WS-S10LS
	SU-FL71M

Use with other WALL-MOUNT BRACKETS or TV stands may cause instability and possibly result in injury.

### To Customers

Sufficient expertise is required for installing the specified TV. Be sure to subcontract the installation to a Sony dealer or licensed contractor and pay adequate attention to safety during the installation.

### Note

This television includes a QAM demodulator which should allow you to receive unscrambled digital cable television programming via subscription service to a cable service provider. Availability of digital cable television programming in your area depends on the type of programming and signal provided by your cable service provider.

### Licensing Information

Macintosh is a trademark of Apple Inc., registered in the U.S. and other countries.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

Ferguson Patent Properties, LLC:  
U.S. Patent No. 5,717,422  
U.S. Patent No. 6,816,141

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.


In the United States, TV Guide and other related marks are registered marks of Gemstar-TV Guide International, Inc. and/or one of its affiliates. In Canada, TV Guide is a registered mark of Transcontinental Inc., and is used under license by Gemstar-TV Guide International, Inc.

The TV Guide On Screen system is manufactured under license from Gemstar-TV Guide International, Inc. and/or one of its affiliates.

The TV Guide On Screen system is protected by one or more of the following United States patents 4,908,713; 6,498,895; 6,850,693; 6,396,546; 5,940,073; 6,239,794 to Gemstar-TV Guide International, Inc. and/or its subsidiaries.

Gemstar-TV Guide International Inc. and/or its related affiliates are not in any way liable for the accuracy or availability of the program schedule information or other data in the TV Guide On Screen system and cannot guarantee service availability in your area. In no event shall Gemstar-TV Guide International, Inc. and/or its related affiliates be liable for any damages in connection with the accuracy or availability of the program schedule information or other data in the TV Guide On Screen system.

Blu-ray Disc is a trademark.

"BRAVIA" and BRAVIA, S-Force, Motionflow, BRAVIA Sync, , DME<sup>+</sup>, MICRO VAULT, and "x.v. Color" are trademarks or registered marks of Sony Corporation.

"XrossMediaBar" is a trademark of Sony Corporation. "XMB" is a trademark of Sony Corporation and Sony Computer Entertainment Inc.

"PLAYSTATION" is a registered trademark and "PS3" is a trademark of Sony Computer Entertainment Inc.

Adobe is a registered trademark or a trademark of Adobe Systems Incorporated in United States and/or other countries.

DLNA<sup>®</sup>, the DLNA Logo and DLNA CERTIFIED<sup>™</sup> are trademarks, service marks, or certification marks of the Digital Living Network Alliance.



### For Customers in the United States

Lamp in this product contains mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance ([www.eiae.org](http://www.eiae.org)).

### For Customers in Canada

This Class B digital apparatus complies with Canadian ICES-003.

# Contents

## Welcome to the World of BRAVIA® HDTV

### The Four Steps to a Full HD Experience:

Set, Sound, Source, and Setup .....	4
Picture Quality and Aspect Ratio.....	4
TV Home Menu: XMB™ (XrossMediaBar).....	5

## Getting Started

<b>1. Installing the TV .....</b>	<b>6</b>
Carrying the TV .....	6
Preparation for Table-Top Stand .....	6
Preparation for Wall-Mount Bracket .....	7
When Installing the TV Against a Wall or Enclosed Area .....	7
Bundling the Connecting Cables .....	8
Securing the TV .....	8
<b>2. Locating Inputs and Outputs .....</b>	<b>10</b>
<b>3. Connecting the TV .....</b>	<b>12</b>
Cable System or VHF/UHF Antenna System .....	12
Cable System and VHF/UHF Antenna System .....	12
HD Cable Box/HD Satellite Box.....	12
PC.....	14
Other Equipment .....	15
<b>4. Setting Up the Channel List –     Initial Setup .....</b>	<b>16</b>

## Operating the TV

Inserting Batteries into the Remote Control...	19
When Using the Remote Control .....	19
TV Controls .....	19
Remote Control Button Description .....	20
Indicators .....	25
Programming the Remote Control.....	26
Programming Other Equipment.....	26
Auto Backlight.....	26
Backlight Time Out .....	26
Reset the Remote Control .....	26
<b>Manufacturer's Code List .....</b>	<b>27</b>
Sony Equipment Codes.....	27
Other Manufacturer Equipment Codes.....	27
<b>Using Other Equipment with Your Remote     Control .....</b>	<b>28</b>

## Exploring Fun Features

<b>Favorites .....</b>	<b>29</b>
Displaying Favorites .....	29
Navigating Favorites.....	29
Adding to Favorites.....	29
Removing from Favorites .....	29

<b>Background TV.....</b>	<b>30</b>
Navigating Background TV .....	30
<b>DLNA Certified™ Photo Media Player .....</b>	<b>30</b>
<b>Enjoying Photos and Music through     USB Port.....</b>	<b>30</b>
Using USB Equipment.....	30
Removing USB Equipment.....	30
USB Equipment Functionality.....	30
<b>Photo .....</b>	<b>31</b>
Accessing Photos .....	31
Navigating through Photo .....	31
Photo Options.....	32
<b>Music .....</b>	<b>33</b>
Accessing Music.....	33
Navigating through Music .....	34
Music Options.....	34
<b>How to Use TV Guide On Screen.....</b>	<b>35</b>
<b>Using BRAVIA® Sync™ with Control for HDMI...37</b>	
<b>Using DIGITAL MEDIA PORT Adapter.....</b>	<b>37</b>
<b>Using P&amp;P and PIP Features.....</b>	<b>38</b>
To Enter P&P and PIP .....	38
To Change Inputs or Channels (P&P).....	38
To Change Channels (PIP) .....	38
To Exit from P&P and PIP .....	38

## Using TV Settings

<b>Media Category Icons .....</b>	<b>39</b>
Adjusting TV Settings .....	39
Viewing Photos .....	39
Listening to Music .....	39
Watching TV .....	39
Accessing External Inputs .....	39
Navigating through TV Home Menu on XMB™ .....	40
<b>TV Settings Descriptions.....</b>	<b>41</b>
Product Support.....	41
Clock/Timers Settings.....	41
Picture Settings .....	42
Sound Settings .....	44
Screen Settings .....	45
Channel Settings .....	47
Closed Captions (CC) Settings.....	48
Parental Lock Settings.....	48
External Inputs Settings.....	51
HDMI Settings .....	51
Network Settings .....	52
General Setup Settings .....	52
Initial Setup.....	53

## Other Information

<b>Troubleshooting .....</b>	<b>55</b>
<b>Specifications .....</b>	<b>59</b>
<b>Index .....</b>	<b>60</b>



**Quick Setup Guide (separate volume)**  
Provides a variety of optional equipment  
connection diagrams.



**Customer Support**  
United States <http://www.sony.com/tvsupport>  
Canada <http://www.sony.ca/support>  
**On-line Registration**  
United States <http://productregistration.sony.com>  
Canada <http://www.SonyStyle.ca/registration>

# Welcome to the World of BRAVIA® HDTV

Thank you for purchasing this Sony BRAVIA® high-definition television. To experience the stunning detail of your new **BRAVIA** TV, you need access to HD programming. Your **BRAVIA** TV can receive and display HD programming from:

- Over-the-air broadcasting via HD-quality antenna
- HD cable subscription
- HD satellite subscription
- Blu-ray Disc™ player or other HD compatible external equipment

Contact your cable or satellite provider for information on upgrading to HD programming.

**To learn more about HDTV, visit:**

**U.S.A.** <http://www.sony.com/HDTV>

**Canada** <http://www.SonyStyle.ca/hd>

## The Four Steps to a Full HD Experience: Set, Sound, Source, and Setup

Along with your **BRAVIA** TV **set**, a complete HD system requires an HD **sound** system, a **source** of HD programming and proper **setup** connections. This manual explains basic setup connections (see page 12). The Quick Setup Guide, enclosed separately, illustrates how to connect other optional equipment.

## Picture Quality and Aspect Ratio

You can enjoy crisp, clear images, smooth movement and high-impact visuals from 1080 HD signals. When you compare a high-definition signal to a standard analog signal, you will notice a big difference.

High-definition and standard-definition signals are transmitted with different aspect ratios (the width-to-height ratio of the image). HDTV uses a wider screen than conventional standard-definition TV.



### 16:9 (high-definition) source

Most HDTV signals use a wide screen aspect ratio of 16:9. The 16:9 fills your **BRAVIA** TV screen, maintaining a crisp, clear, vivid picture.

### 4:3 (standard-definition) source


Most standard-definition signals use a boxy 4:3 aspect ratio. When a 4:3 image is displayed on an HDTV, you will see black bars on the sides. The picture quality may not be as sharp as with HD sources.



- You can use the **Wide Mode** function of the TV to adjust the 4:3 image to fit the entire screen (see pages 22, 45 and 46).

## TV Home Menu: XMB™ (XrossMediaBar)

The **XMB™** is an easy way to access the TV settings for customizing, making adjustments, viewing the available TV channels photo and music files, and selecting the connected equipment. Press the **HOME** button on your remote control to display the **XMB™**.

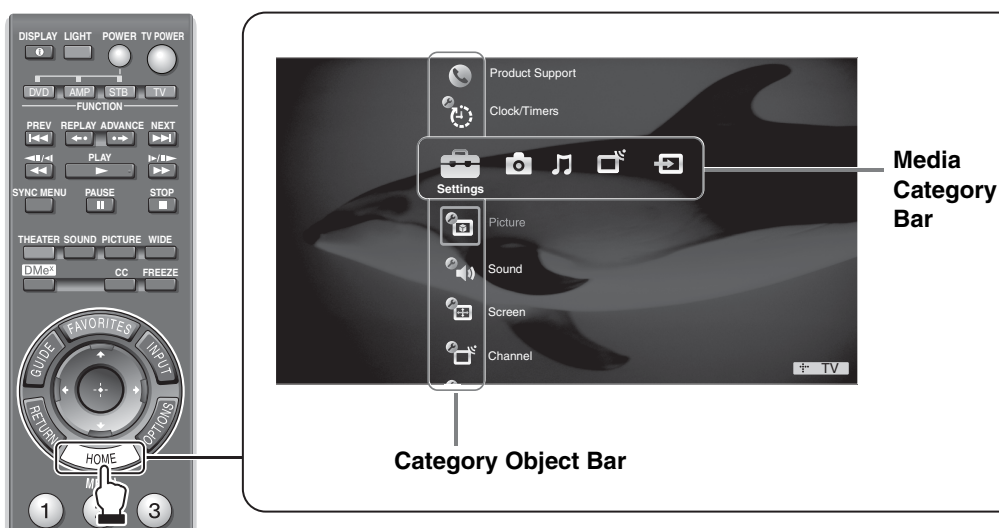

From the horizontal Media Category Bar you can control:

- **Settings:** timer, picture, sound, screen and other options (see page 41 for customization options).
- **Photo:** view photo files via USB or compatible DLNA Certified™ equipment (see page 31).
- **Music:** listen to music files via USB or add music to a slideshow (see page 33).
- **TV Channels:** TV Guide On Screen™ and available channels are displayed on the vertical Category Object Bar.
- **External Inputs:** cable, satellite, VCR, DVD players or other optional equipment can also be selected from the vertical Category Object Bar from the **External Inputs**.

**Your BRAVIA TV is ENERGY STAR® qualified.** It meets strict energy efficiency guidelines set by the U.S. Environmental Protection Agency and Department of Energy. ENERGY STAR is a joint program of these government agencies, designed to promote energy efficient products and practices.



- When the TV is initially set up, it is designed to meet ENERGY STAR requirements.
- Changes to certain features, settings, and functionalities of this TV (i.e. TV Guide, Picture/Sound, Light Sensor, Power Savings) can increase or change the power consumption.

Depending upon such changed settings, the power consumption may exceed the limits required for the ENERGY STAR qualification.



• This manual is for the 40 and 46 inch **BRAVIA** KDL-VL160 series models with screen size measured diagonally.

# Getting Started

## 1. Installing the TV


This TV can be mounted on a wall using a Wall-Mount Bracket or placed on a TV stand (each sold separately). This section will explain:

- How to carry the TV
- Preparation for a Table-Top stand
- Preparation for a Wall-Mount Bracket
- Installation against a wall or enclosed area
- Bundling the connecting cables
- Securing the TV


### Carrying the TV

Be sure to follow these guidelines to protect your property and avoid causing serious injury.


- Before carrying the TV, disconnect all cables.
- Carrying the large size TV requires two or more people.
- When carrying the TV, place your hand as illustrated and hold it securely. Do not subject the TV to shocks, vibration, or excessive force.

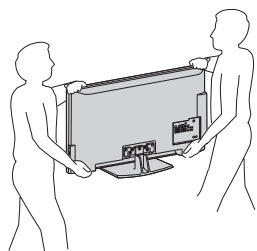

- Lift the TV by placing your palm directly underneath the panel but do not put stress on the LCD panel.

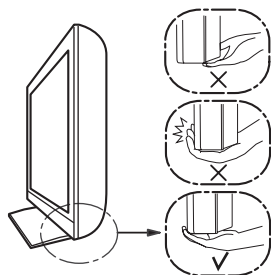

- Do not lift the TV from the bottom center.

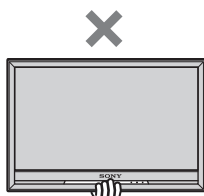


### Preparation for Table-Top Stand


Follow the assembling steps required to place on a TV stand.

- 1 Remove the Table-Top Stand and screws from the carton.


For product protection and safety reasons, Sony strongly recommends that you use the screws provided with the TV.

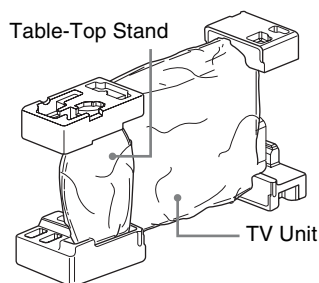

- 2 Place the Table-Top Stand on a level and stable surface. The screws are attached to the Table-Top Stand.

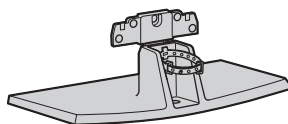


- 3 Gently slide the TV unit onto the neck of the Table-Top Stand and align the screw holes.

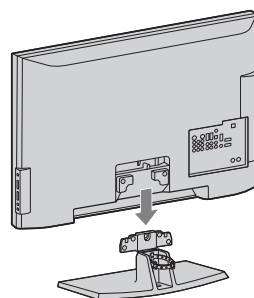

- Do not put stress on the LCD panel or the frame around the screen.
- Be careful to not pinch your hands or the AC power cord when you install the TV unit to the Table-Top Stand.

- 4 Use the supplied screws to attach the TV unit to the Table-Top Stand (refer to the “Attaching the Table-Top Stand” flyer).

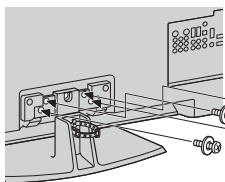


If an electric screwdriver is used, set the torque to tighten at approximately 1.5 N·m, 15 Kgf·cm.

### Preparation for Wall-Mount Bracket

All models are ready to be mounted on a wall.

- For product protection and safety reasons, Sony strongly recommends that you use the Wall-Mount Bracket model designed for your TV and the wall-mounting of your TV should be performed by a Sony dealer or licensed contractor.
- Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the mounting hooks to the TV set. The supplied M6 screws are designed so that they are 8 mm to 12 mm in length when measured from the attaching surface of the mounting hook. The diameter and length of the screws differ depending on the Wall-Mount Bracket model. Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.

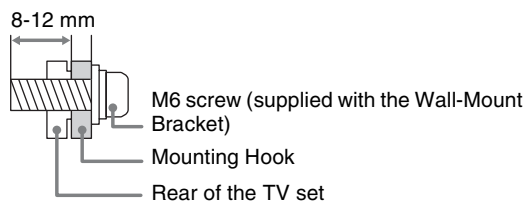

- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.


For details on how to use the Wall-Mount Bracket compatible with your model, visit [www.sony.com/accessories](http://www.sony.com/accessories)

Or call 1-800-488-7669 (for United States)  
1-877-899-7669 (for Canada)


### When Installing the TV Against a Wall or Enclosed Area

Make sure that your TV has adequate air circulation. Allow enough space around the TV as shown below. Avoid operating the TV at temperatures below 41 °F (5 °C).

#### Installed with stand

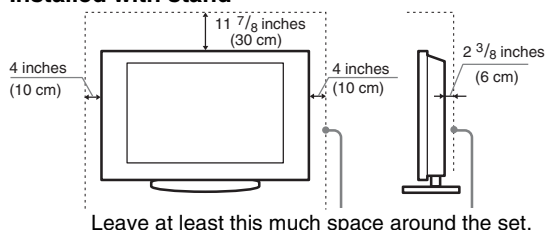


#### Installed on the wall

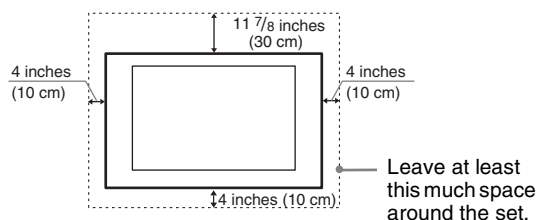


Never install the TV set as follows:

Air circulation is blocked.

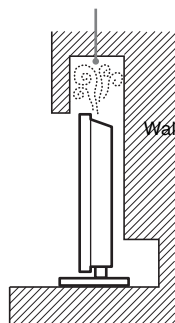

Air circulation is blocked.

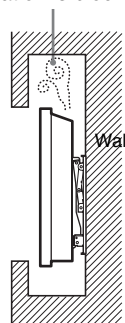

- Inadequate air circulation can lead to overheating of the TV and may cause damage to your TV or cause a fire.

(Continued)




## Consider the following for best picture quality

- Do not expose the screen to direct illumination or sunlight.
- Use spot lighting directed down from the ceiling or cover the windows that face the screen with opaque drapery.
- Install the TV in a room where the floor and walls are not of a reflective material.
- When moving the TV from a cold area to a warm area, a sudden room temperature change may cause the TV's picture to blur or show poor color due to moisture condensation. Should this occur, please wait a few hours to allow the moisture to evaporate before powering on the TV.

## Bundling the Connecting Cables

You can bundle the connecting cables as illustrated below.

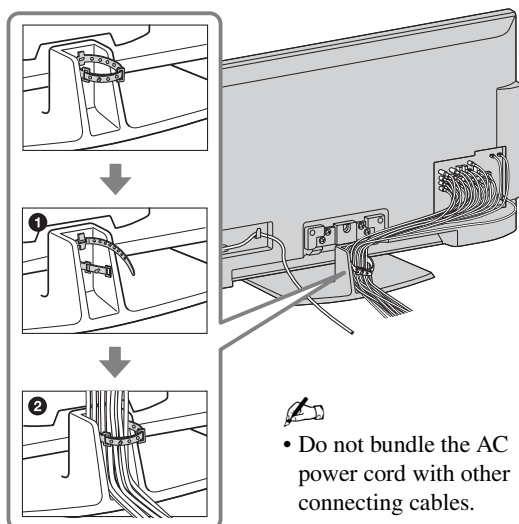

## Securing the TV



Sony strongly recommends taking measures to prevent the TV from toppling over. Unsecured TVs may topple and result in property damage, serious bodily injury or even death.

### Prevent the TV from Toppling Over

- ☐ Secure the TV to a wall and/or stand.
- ☐ Do not allow children to play or climb on furniture and TV sets.
- ☐ Avoid placing or hanging items on the TV.
- ☐ Never install the TV on:
  - slippery, unstable and/or uneven surfaces.
  - furniture that can easily be used as steps, such as a chest of drawers.
- ☐ Install the TV where it cannot be pulled, pushed, or knocked over.
- ☐ Route all AC power cords and connecting cables so that they are not accessible to curious children.

### Use a Sony TV Stand

Use a Sony specified TV stand (see page 2) and follow the instruction manual provided with the Sony TV stand.

If a Sony specified TV stand is not used, consider the following recommended measures.


### Recommended Measures to Secure the TV

#### Secure the Stand for the TV

Make sure the TV stand can adequately support the weight of the TV. Use two angle braces (not supplied) to secure the stand.

For each angle brace use the appropriate hardware to:

- attach one side of the angle brace to the wall stud.
- attach the other side to the TV stand.

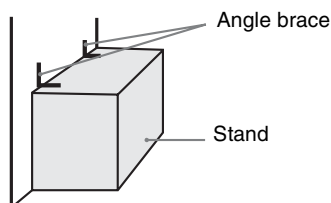




## Secure the TV to the Stand

Use the optional hardware listed below (not supplied):

- M6 × 10-12 mm anchor bolt (screwed into the TV's Table-Top Stand)
- A screw or similar (attach it to the TV stand)
- Rope or chain (strong enough to support the weight of the TV). Make sure that there is no excess slack in the rope or chain.

An alternative way to secure the TV is with an optional Sony Support Belt Kit.

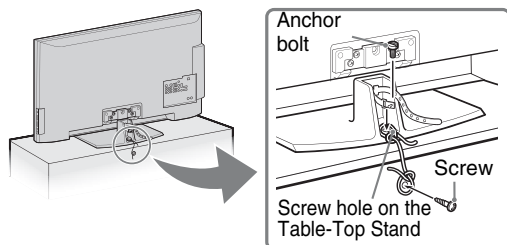



Contact Sony Customer Support to obtain the optional Support Belt Kit by providing your TV model name.

- For United States call: 1-800-488-7669 or visit: [www.sony.com/accessories](http://www.sony.com/accessories)
- For Canada call: 1-877-899-7669

## Anchor the TV to the Wall


Use the hardware listed below (not supplied):

- Two M6 × 12-18 mm anchor bolts (screw into the top-most wall-mount holes located on the rear of the TV)
- Rope or chain (attach to one M6 anchor bolt)
- Wall-anchor (attach to the wall stud) strong enough to support the weight of the TV (pass the rope through the wall-anchor, then attach to the other M6 anchor bolt)

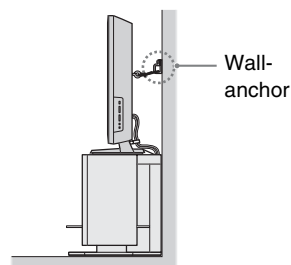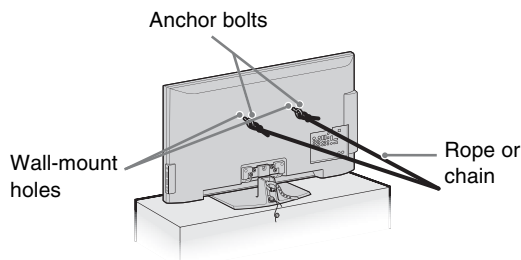




- Securing the TV to the stand without securing it and the stand to the wall provides minimum protection against the TV toppling over. For further protection, follow all three measures recommended above.
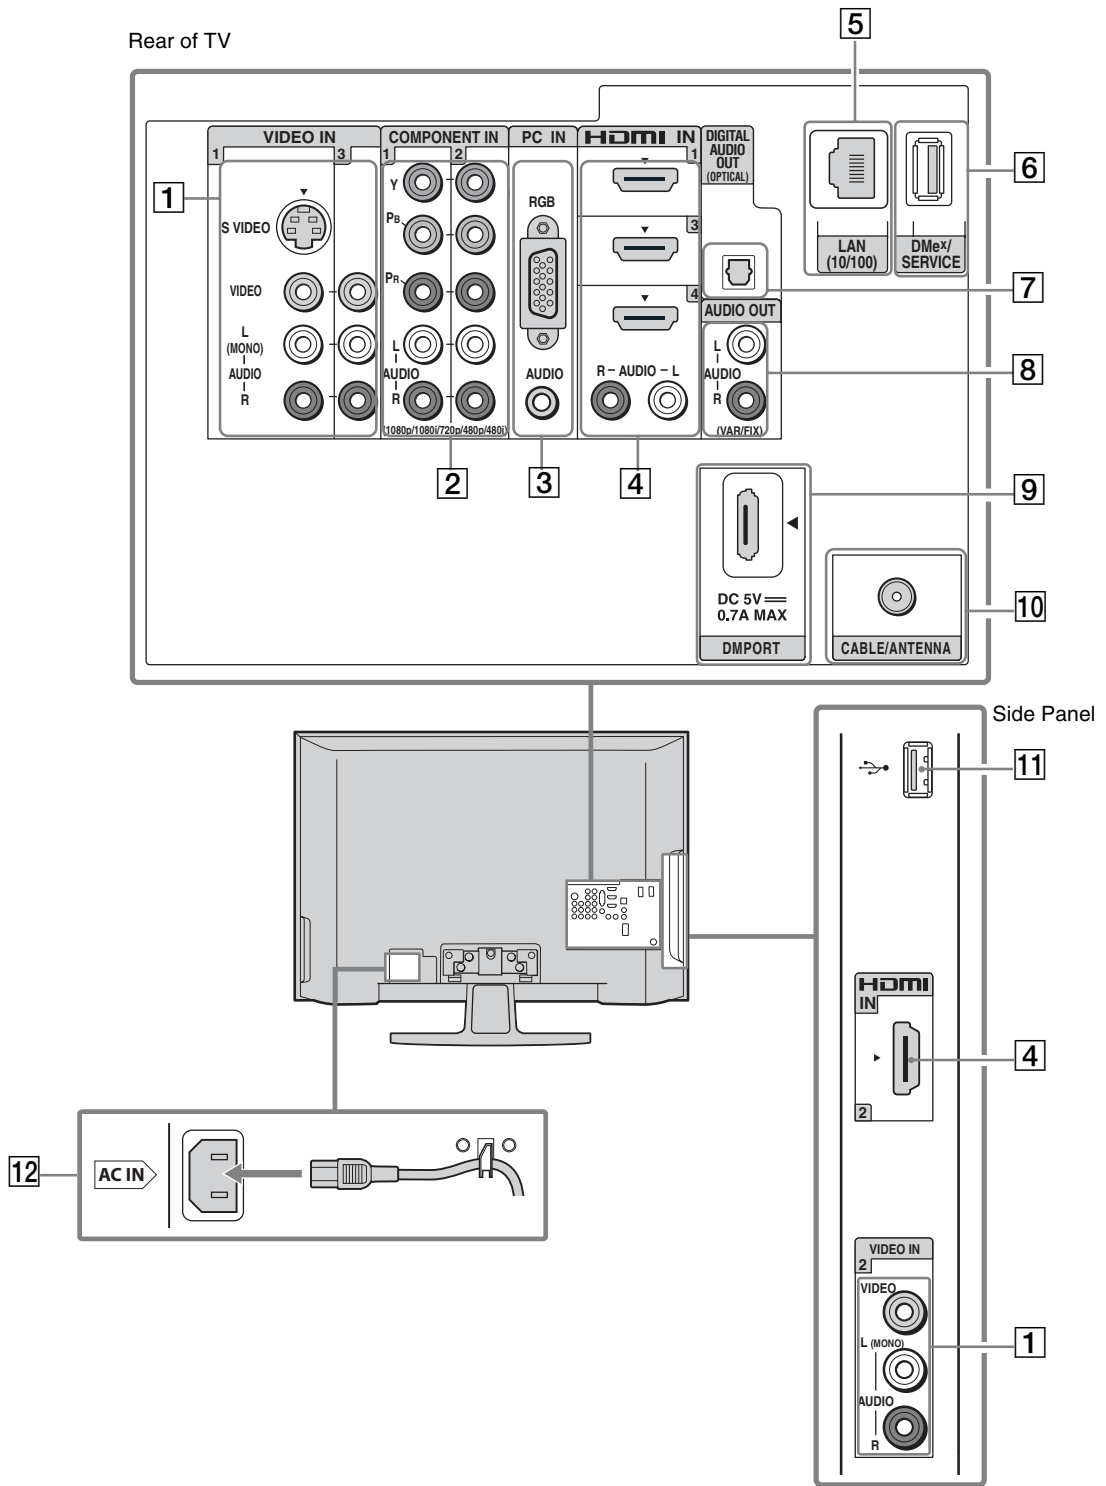
# 2. Locating Inputs and Outputs



- This TV displays all video input signals in a resolution of 1,920 dots × 1,080 lines.
- An HDMI or Component video (YPbPr) connection is required to view 480i, 480p, 720p, 1080i and 1080p video formats. 1080/24p is available only with HDMI connection.

Item	Description
<b>1 VIDEO IN 1 S VIDEO</b>  <b>VIDEO IN 2/3 VIDEO/L(MONO)-AUDIO-R</b>	<p>Connects to the S VIDEO output jack of video equipment. If both composite video and S VIDEO are connected, S VIDEO signal has priority.</p> <p>Connects to the composite video and audio output jacks on your A/V equipment.</p>  <ul style="list-style-type: none"> <li>• If you have mono equipment, connect its audio output jack to the TV's L (MONO) audio input jack.</li> </ul>
<b>2 COMPONENT IN 1/2 (1080p/1080i/720p/480p/480i)/L-AUDIO-R</b>	Connects to your equipment's component video (YPbPr) and audio (L/R) jacks.
<b>3 PC IN (RGB/AUDIO)</b>	<p>Connects to a personal computer's video and audio output connector (see page 14). Can also be connected to other analog RGB equipment. See "PC Input Signal Reference Chart" on page 14 for the signals that can be displayed.</p>  <ul style="list-style-type: none"> <li>• For some Apple Macintosh computers, it may be necessary to use an adapter (not supplied). If this is the case, connect the adapter to the computer before connecting the HD15-HD15 cable.</li> <li>• If the picture is noisy, flickering or not clear, adjust <b>Phase</b> and <b>Pitch</b> of <b>Screen</b> settings on page 46.</li> </ul>
<b>4 HDMI IN 1/2/3</b>  <b>HDMI IN 4 R-AUDIO-L</b>	<p>HDMI (High-Definition Multimedia Interface) provides an uncompressed, all-digital audio/video interface between this TV and any HDMI-equipped A/V equipment. HDMI supports enhanced, or high-definition video, plus digital audio.</p> <p>If the equipment has a DVI jack and not an HDMI jack, connect the DVI jack to the HDMI IN 4 (with DVI-to-HDMI cable or adapter) jack, and connect the audio jack to the AUDIO IN (L/R) jacks of HDMI IN 4.</p>  <ul style="list-style-type: none"> <li>• Be sure to use only an HDMI cable that bears the HDMI logo.</li> <li>• When connecting a DVI-equipped PC to an HDMI jack, also connect an Audio cable between the PC and R-AUDIO-L jack.</li> </ul>
<b>5 LAN (10/100)</b>	Connects to a Local Area Network using an Ethernet cable. You can use this connection to connect to a network, receive software updates and enjoy photos from your home network (see page 31).
<b>6 DMe<sup>x</sup>/SERVICE</b>	This USB port is for service only unless you are connecting the optional <b>BRAVIA</b> external module (DMe <sup>x</sup> ).
<b>7 DIGITAL AUDIO OUT (OPTICAL)</b>	Connects to the optical audio input of your digital audio equipment that is PCM/Dolby* Digital compatible.
<b>8 AUDIO OUT (VAR/FIX)</b>	Connects to the left and right audio input jacks of your analog audio equipment. You can use these outputs to listen to your TV's audio through your stereo system.
<b>9 DMPORT</b>	Connects to devices via a DIGITAL MEDIA PORT interface (not supplied) and displays photos or plays videos and music directly onto the TV from some DIGITAL MEDIA PORT equipment. Some devices can be controlled with the TV's remote control (see page 26).
<b>10 CABLE/ANTENNA</b>	RF input that connects to your cable or VHF/UHF antenna.
<b>11 USB</b>	Connects to USB equipment to access photo files and music files (see page 33).
<b>12 AC IN</b>	Connects to your power source. Connect the supplied power cord to AC IN and the nearest wall outlet.

\* Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

### 3. Connecting the TV

 
#### Cable System or VHF/UHF Antenna System

You can enjoy high-definition and standard-definition digital programming (if available in your area) along with standard-definition analog programming.




- This TV is capable of receiving unscrambled digital programming for both cable (QAM and 8VSB) and external VHF/UHF antenna (ATSC).
- It is strongly recommended that you connect the CABLE/ANTENNA input using a 75-ohm coaxial cable to receive optimum picture quality. A 300-ohm twin lead cable can be easily affected by radio frequency interference, resulting in signal degradation.

#### Cable or VHF/UHF (or VHF only)



#### Cable System and VHF/UHF Antenna System

Use an optional A-B RF switch (not supplied) to switch between the cable and over-the-air antenna programming, as indicated below.

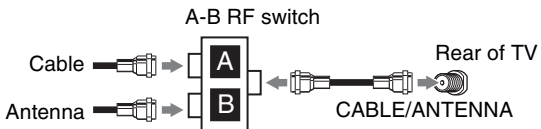


- Be sure to set the **Signal Type** setting to **Cable** or **Antenna** in the **Channel** settings for the type of input signal you choose (see page 47).


#### HD Cable Box/HD Satellite Box

You can enjoy high-definition programming by subscribing to a high-definition cable service or a high-definition satellite service. For the best possible picture, make sure you connect this equipment to your TV via the HDMI or component video (with audio) input on the back of your TV.

#### Shown with HDMI Connection

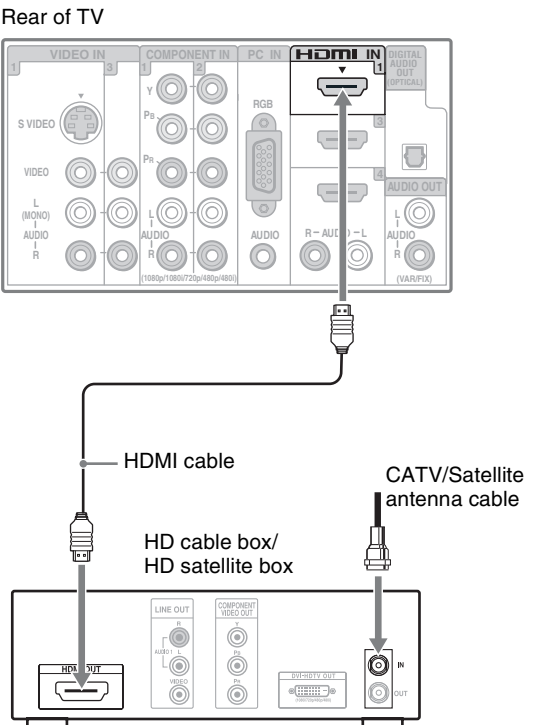


## Shown with DVI Connection

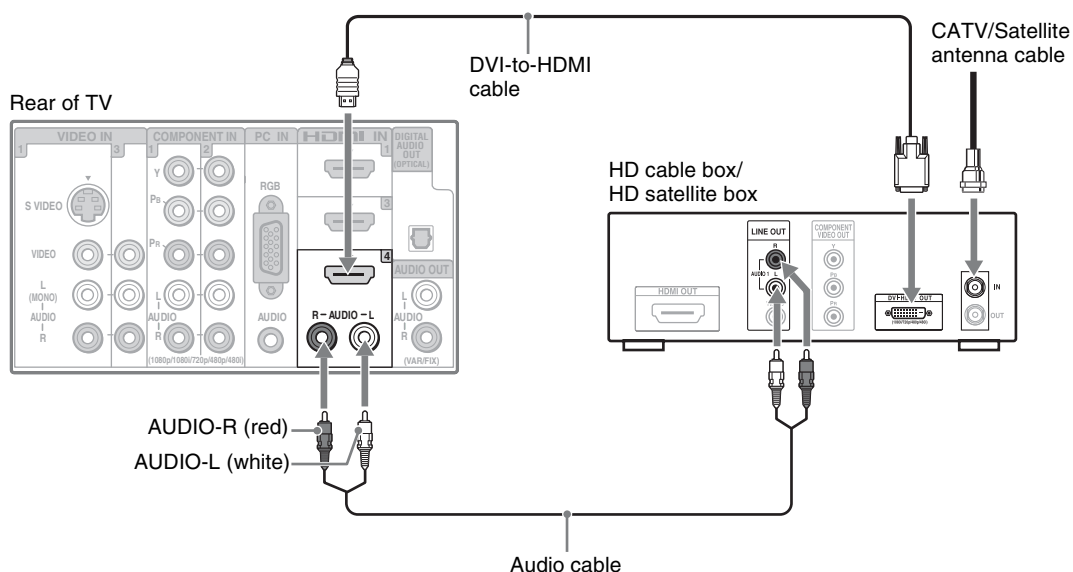


- If the equipment has a DVI jack and not an HDMI jack, connect the DVI jack to the HDMI IN 4 (with DVI-to-HDMI cable or adapter) jack and connect the audio jack to the AUDIO IN (L/R) jacks of HDMI IN 4. For details, see page 11.

## Shown with Component Connection

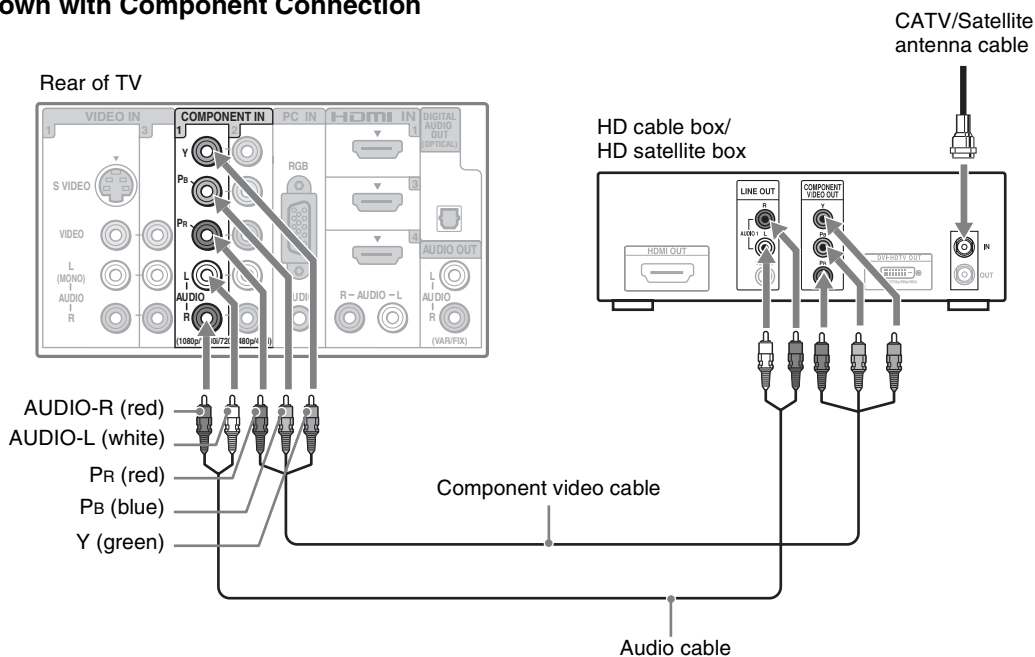

(Continued)

Use the TV as a monitor for your PC by connecting a HD15-HD15 cable as shown below. This TV can also be connected to a PC with a DVI or HDMI output. (Refer to the separate Quick Setup Guide.)

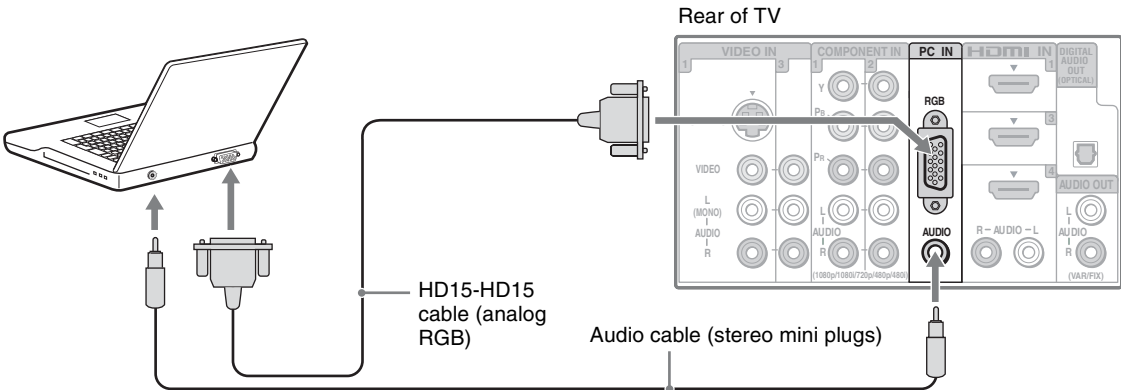

- Connect the PC IN jack to the PC using an HD15-HD15 cable with ferrite core (analog RGB) and audio cable (see page 11).
- If the PC is connected to the TV and no signal has been input from the PC for more than 30 seconds, the TV enters the standby mode automatically (see page 53).


PC Input Signal Reference Chart

After connecting the PC to the TV, set the output signal from the PC according to the supported resolutions and timings indicated below.

Supported resolutions				Horizontal frequency (kHz)	Vertical frequency (Hz)	Standard
Signal	Horizontal (Pixel)	×	Vertical (Line)			
VGA	<b>640</b>	×	<b>480</b>	<b>31.5</b>	<b>60</b>	VGA
	640	×	480	37.5	75	VESA
	720	×	400	31.5	70	VGA-T
SVGA	<b>800</b>	×	<b>600</b>	<b>37.9</b>	<b>60</b>	VESA Guidelines
	800	×	600	46.9	75	VESA
XGA	<b>1,024</b>	×	<b>768</b>	<b>48.4</b>	<b>60</b>	VESA Guidelines
	1,024	×	768	56.5	70	VESA
	1,024	×	768	60.0	75	VESA
WXGA	<b>1,280</b>	×	<b>768</b>	<b>47.4</b>	<b>60</b>	VESA
	<b>1,280</b>	×	<b>768</b>	<b>47.8</b>	<b>60</b>	VESA
	1,280	×	768	60.3	75	
	<b>1,360</b>	×	<b>768</b>	<b>47.7</b>	<b>60</b>	VESA
SXGA	<b>1,280</b>	×	<b>1,024</b>	<b>64.0</b>	<b>60</b>	VESA
HDTV	<b>1,920</b>	×	<b>1,080</b>	<b>67.5</b>	<b>60</b>	CEA-861*

- This TV's PC input does not support Sync on Green or Composite Sync.
  - This TV's PC VGA input does not support interlaced signals.
  - Your PC must support one of the above PC input signals to display on the television.
  - For the best picture quality, it is recommended to use the signals (boldfaced) in the above chart with a 60 Hz vertical frequency. In plug and play, signals with a 60 Hz vertical frequency will be detected automatically. (PC reboot may be necessary.)
- \*The 1080p timing when applied to the HDMI input will be treated as a video timing and not PC timing. This affects **Picture** settings, **Wide Mode** settings, and **PIP** function. To view PC content set **Picture Mode** to **Custom**, **Wide Mode** to **Full**, and **Display Area** to **Full Pixel**.

## Other Equipment

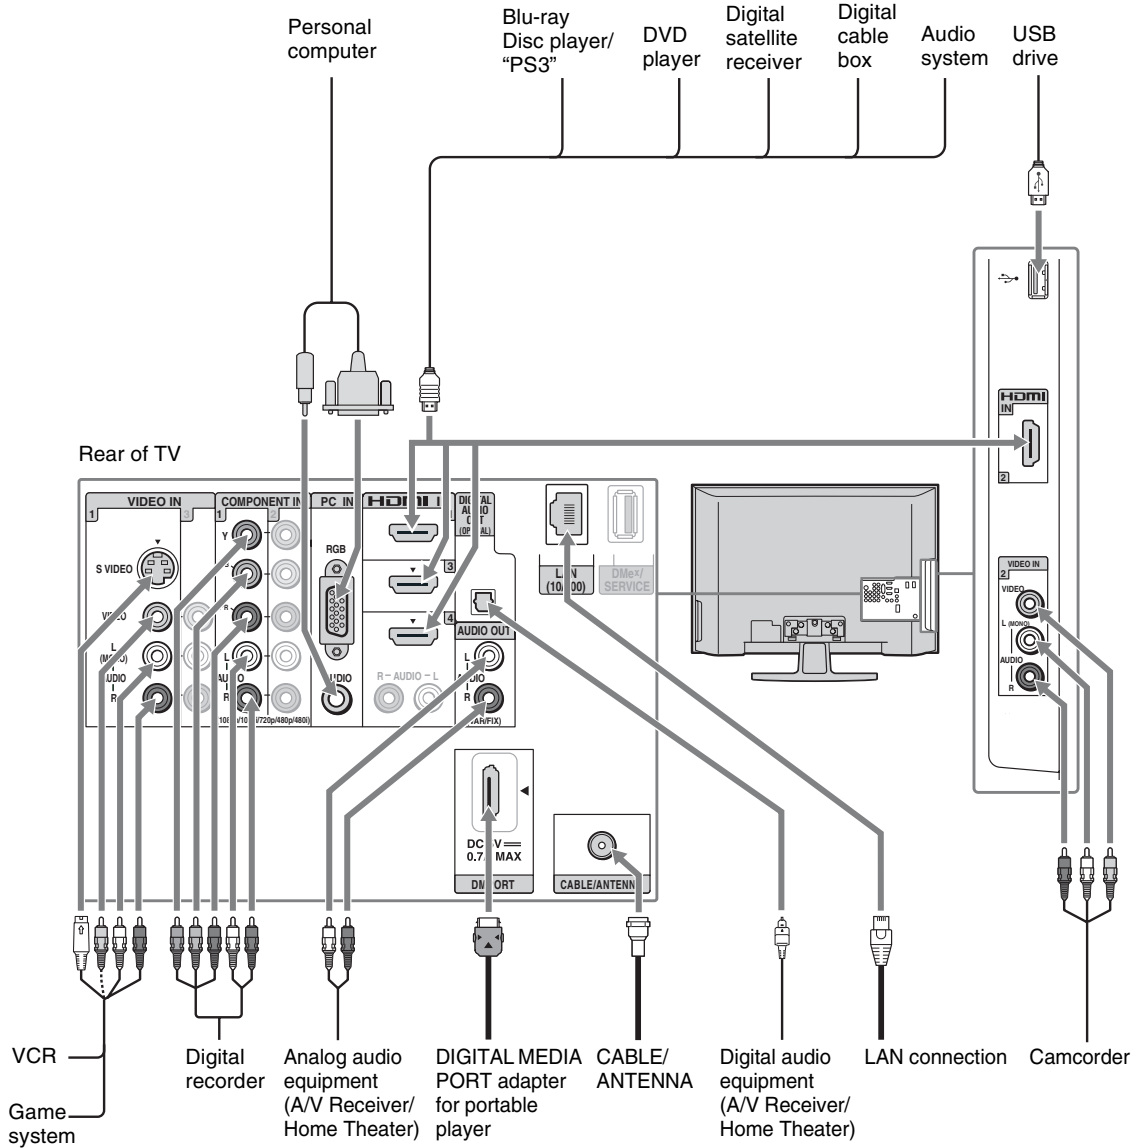


- Refer to the Quick Setup Guide (supplied) when connecting other equipment to your TV.




## 4. Setting Up the Channel List – Initial Setup

The **Initial Setup** screen appears when you turn on the TV for the first time.

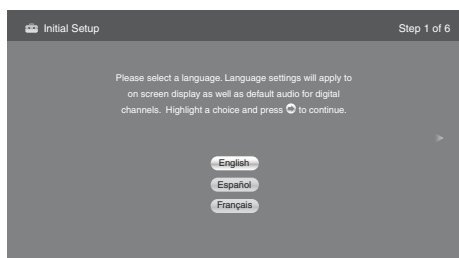

- 1 Complete your cable connections (refer to the preceding pages and the Quick Setup Guide provided separately) before proceeding with the **Initial Setup**.
- 2 Use the remote control to navigate through the **Initial Setup**:

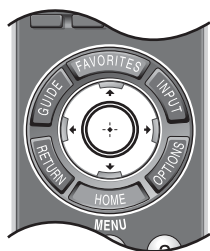

### ↑/↓ button:

Allows you to highlight options where applicable.

### [OK] button:

Allows you to select the highlighted option and advance to the next screen.

### ← button:

Allows you to move back to the previous screen.

### → button:

Allows you to move to the next screen.

- 3 Follow the help text provided on the screen to run **Auto Program**. **Auto Program** will scan for available channels from the signal source directly connected to the TV's CABLE/ANTENNA input.

If you receive channels from a cable box or satellite receiver without using the CABLE/ANTENNA input (e.g. using HDMI or component input), skip **Auto Program**.




- If you select **Skip**, you will be asked to disable **Channel Tuning Keys** to avoid accidental input change while using an external input; see page 51 for details.

- If the language that you have selected in the **Language** setting is available from the broadcaster as an **Alternate Audio** language, your TV will automatically switch to the matching language with the **Alternate Audio** feature. The **Alternate Audio** option may be accessed by pressing **OPTIONS** on the remote control when an alternate audio stream is available from the broadcaster. **Alternate Audio** is only available for digital programs (see page 45).

## 4 Set the date and time.

### Begin your TV Guide On Screen Setup

When the **Initial Setup** is completed, the TV will display this screen and prompt you to set up the electronic program guide. Follow the on screen instructions using your remote control.

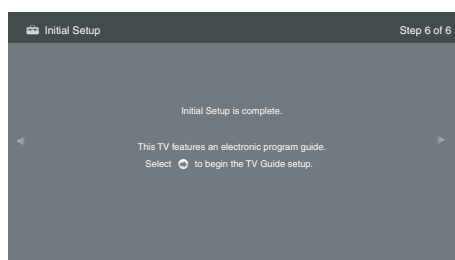

Next, you will see a confirmation screen with instructions on how to acquire the TV Guide On Screen service.

- The service is free of charge.
- Your TV acquires program listing information while your TV is turned off.
- Allow 24 hours (some areas may take longer) for the TV to fully receive the program listing information.
- Once the program information is obtained by the TV, you will be able to view a guide of up to two days of TV programming. See page 35 on how to use the TV Guide On Screen.



- Enabling the TV Guide On Screen feature will increase the amount of time the TV is in Download Acquisition Mode (DAM), see page 59.


## □ To Display TV Guide On Screen

Press **GUIDE**.



## □ To Run Initial Setup Again or Auto Program at a Later Time

Select the **Initial Setup** feature from the **XMB™** or perform the steps described in the **Initial Setup** section on page 53. To run **Auto Program**, see page 47.

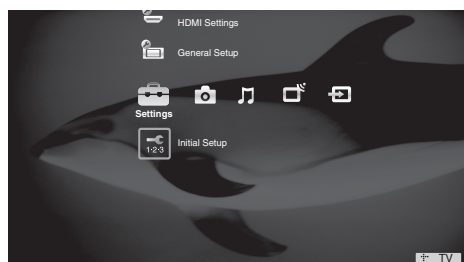

## □ To Add Digital Channels

Use the **Add Digital Channels** feature as described on page 47. (Useful for antenna installations.)




- If you accidentally turn off the TV during the **Initial Setup** process, the **Initial Setup** will restart from the beginning when the TV is turned back on.
- **Auto Program** may be canceled while the channels are being scanned. Press **RETURN** first, then press either **◀/▶** on the remote control. Select **Yes** to cancel or **No** to resume **Auto Program**.




# Operating the TV

## Inserting Batteries into the Remote Control

Insert two size AA batteries (supplied) by matching **+** and **-** on the batteries to the diagram inside the battery compartment of the remote control.

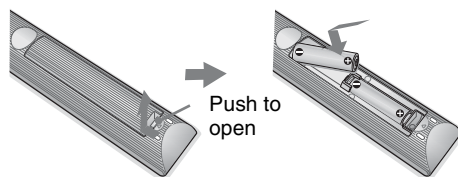


## When Using the Remote Control

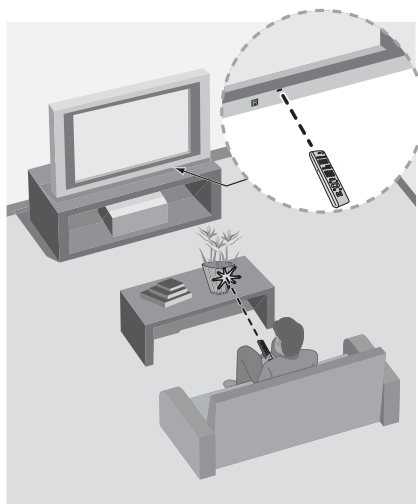

### Follow the guidelines below

- Point your remote control directly at the IR sensor located on your TV.
- Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.
- Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.
- If you are having problems with the remote control, reinsert or replace your batteries and make sure that they are correctly inserted.

## TV Controls

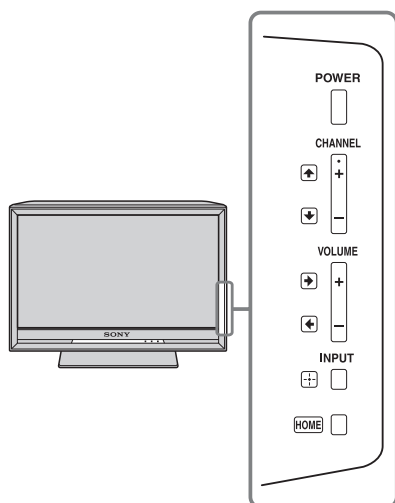


The buttons located on the side of the TV operate the same as the corresponding buttons on the remote control.

# Remote Control Button Description




• The 5, **PLAY** and **CH+** buttons have a tactile dot. Use them as a reference when operating the TV.

Button	Description
1 <b>DISPLAY</b>	Press once to display the banner with channel/program information you are watching. The banner will time out in about 10 seconds or press again to exit. You can select the banner size based on the amount of information. See <b>Info Banner</b> on page 52.
2 <b>LIGHT</b>	Press to light up the remote control buttons. The <b>FUNCTION</b> button indicator light will light up in red for the device mode the remote control is operating and other buttons will light up in blue (see page 51).
3 <b>FUNCTION Buttons</b>	The <b>FUNCTION</b> button indicator lights up momentarily when pressed to show which external equipment the remote control is operating. These buttons can be programmed to operate external equipment. You must first press one of these <b>FUNCTION</b> buttons to operate the corresponding equipment. See page 26 for “Programming the Remote Control”.
4 <b>Equipment Control/ BRAVIA Sync</b>	<p>The buttons listed below can operate video equipment programmed to the <b>DVD</b>, <b>AMP</b>, or <b>STB FUNCTION</b> buttons of the remote control. When the <b>TV FUNCTION</b> button is selected, the buttons can also be used to control the connected equipment with the <b>Control for HDMI</b> function (not available on all <b>Control for HDMI</b> equipment). Some of the other buttons on the remote may also operate <b>BRAVIA® Sync™</b> equipment.</p> <p><b>◀◀ PREV:</b> Press to replay the current program from the previous chapter mark (if any) or from the beginning of the live TV cache.</p> <p><b>◀◀•REPLAY:</b> Press to replay the current program for a set period of time.</p> <p><b>•➡ ADVANCE:</b> Press to advance forward a set period of time when playing back a recorded program.</p> <p><b>▶▶ NEXT:</b> Press to advance forward to the next chapter mark (if any) or to live TV when playing back a recorded program.</p> <p><b>◀◀ (fast reverse):</b> Press to play a program in fast rewind mode.</p> <p><b>▶▶ PLAY:</b> Press to play a program at a normal speed.</p> <p><b>▶▶ (fast forward):</b> Press to play a program in fast forward mode.</p> <p><b>⏸ PAUSE:</b> Press to pause playback.</p> <p><b>■ STOP:</b> Press to stop playback.</p> <p><b>SYNC MENU:</b> Press once to display the <b>Sync'd HDMI Devices</b> (while a <b>Control for HDMI</b> device is not selected). Select the HDMI device and then press <b>SYNC MENU</b> to display the menu of connected equipment (not available on all <b>Control for HDMI</b> equipment).</p> <p><b>THEATER:</b> Press to turn on and off the <b>Theater Mode</b>. The picture settings will be set for a cinema-like experience and the audio will be switched to the audio output of the attached speakers of your <b>BRAVIA Sync</b> audio system. Your <b>BRAVIA Sync</b> audio system must be connected by an HDMI connection to your TV (see page 37 for details).</p>
5 <b>SOUND</b>	Press to cycle through different sound settings: <b>Dynamic</b> , <b>Standard</b> , <b>Clear Voice</b> . The sound modes can also be accessed in the <b>Sound</b> settings. For details, see <b>Sound</b> settings on page 44.
6 <b>DMe<sup>x</sup></b>	Press to access features in the optional <b>BRAVIA</b> external module (e.g. DMX-NV1). See your dealer or <a href="http://www.sony.com/bravia">www.sony.com/bravia</a> for more information. The module may not be available in all regions.

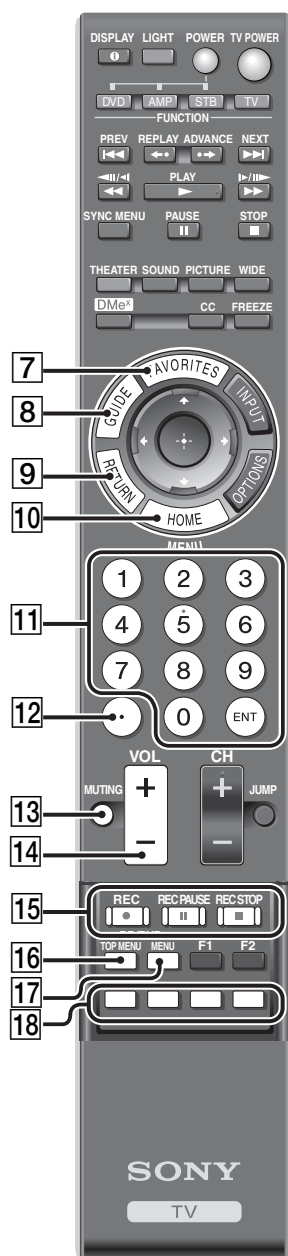

Button	Description
<b>7 FAVORITES</b>	Press once to display the <b>Favorites</b> menu. Press again to exit from the <b>Favorites</b> menu. See page 29 for detailed information.
<b>8 GUIDE</b>	Press to open the TV Guide On Screen system. Press again to exit the Guide. For instructions on using a specific menu, see “How to Use TV Guide On Screen” on page 35.
<b>9 RETURN</b>	Press to go back to the previous screen or exit from the screen when displaying menu items and settings.
<b>10 HOME</b>	Press to display the <b>TV Home Menu/XMB™</b> to access the <b>TV Home Menu</b> items such as the <b>TV Settings</b> , <b>Photo</b> , <b>Music</b> , <b>TV channels</b> and <b>External Inputs</b> list (see pages 5 and 39).
<b>11 0-9 ENT</b>	Press <b>0-9</b> to select a channel; the channel changes after two seconds. Press <b>ENT</b> to change channels immediately.
<b>12</b>	Use with <b>0-9</b> and <b>ENT</b> to select digital channels. For example, to enter 2.1, press <b>2</b> , <b>.</b> , <b>1</b> and <b>ENT</b> .
<b>13 MUTING</b>	Press to mute the sound. Press again or press <b>VOL +</b> to restore the sound.
<b>14 VOL +/-</b>	Press to adjust the volume.
<b>15 DVR/VCR Record Buttons</b>	<ul style="list-style-type: none"> <li>● <b>REC</b>: Press to record. Pressing this button alone starts the recording process.</li> <li>⏏ <b>REC PAUSE</b>: Press to pause recording.</li> <li>■ <b>REC STOP</b>: Press to stop recording.</li> </ul>
<b>16 BD/DVD TOP MENU</b>	Press to display the top menu of the BD/DVD disc.
<b>17 BD/DVD MENU</b>	Press to display the BD/DVD disc menu. <ul style="list-style-type: none"> <li>• For more information, refer to the operating manual of the connected equipment.</li> </ul>
<b>18 Red, Green, Blue, Yellow</b>	To use with Sony Blu-ray player (BD) see chart on page 27.

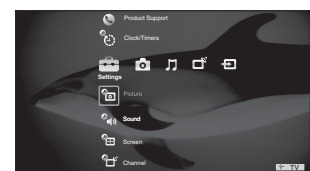

(Continued)



Button	Description
<b>19 TV POWER</b>	Press to turn on and off the TV.
<b>20 POWER</b>	Press to turn on and off the external equipment selected by <b>FUNCTION</b> buttons.
<b>21 WIDE</b>	Press repeatedly to cycle through the available <b>Wide Mode</b> settings: <b>Wide Zoom</b> , <b>Normal</b> , <b>Full</b> , <b>H Stretch</b> , <b>Zoom</b> . The <b>Wide Mode</b> settings can be also accessed in the <b>Screen</b> settings (see pages 45 and 46).

### Changing the Wide Screen Mode

4:3 Original source Standard-definition source	16:9 Original source High-definition source
<b>Wide Zoom</b> 	<b>Wide Zoom</b> 
<b>Normal</b> 	<b>Normal</b> This mode is not available.
<b>Full</b> 	<b>Full</b> 
<b>H Stretch</b> This mode is not available.	<b>H Stretch</b> 
<b>Zoom</b> 	<b>Zoom</b> 



- **Normal** is available with 480i or 480p sources only.
- **H Stretch** is only available with 720p, 1080i, 1080p and 1080/24p sources.

### Changing the Wide Screen Mode for PC Timing

Incoming PC signal 800 × 600	Incoming PC signal 1,280 × 768
<b>Normal</b> 	<b>Normal</b> 
<b>Full 1</b> 	<b>Full 1</b> 
<b>Full 2</b> 	<b>Full 2</b> 





Button	Description
<b>22 PICTURE</b>	Press repeatedly to cycle through the available picture modes: <b>Vivid, Standard, Cinema, Custom, Photo-Vivid, Photo-Standard, Photo-Original, Photo-Custom, Video, Text.</b> (Available options depend on the current mode.) The picture modes can also be accessed in the <b>Picture</b> settings. For details, see <b>Picture</b> settings on page 42.
<b>23 FREEZE</b>	Press once to display a frozen image with the current program in a window. Press again to fill the screen with the frozen image. Press a third time to return to the current program. <div data-bbox="709 396 1190 529" data-label="Image"> </div> <p>Press the <b>▲/▼/◀/▶</b> to move the small window showing current program to a different location on the screen.</p> <ul style="list-style-type: none"> <li>• With the <b>Freeze</b> feature active, some features are unavailable.</li> <li>• While the <b>Freeze</b> feature is active, pressing <b>HOME</b> will deactivate <b>Freeze</b> and display the <b>XMB™</b>.</li> </ul>
<b>24 CC</b>	Press to cycle through the available settings for <b>Closed Captions (CC): On, Off, and On with Muting.</b>
<b>25 INPUT</b>	Press to display the list of <b>External Inputs</b> and TV mode. Press repeatedly to toggle through the inputs. <ul style="list-style-type: none"> <li>• See page 51 on setting up the <b>External Inputs</b> labels.</li> </ul>
<b>26 ▲/▼/◀/▶</b>	Press <b>▲/▼/◀/▶</b> to move focus/highlight. Press <b>+</b> to select/confirm an item.
<b>27 OPTIONS</b>	Press to display a list of convenient functions and menu shortcuts. The <b>OPTIONS</b> menu items vary based on current input and content.

Menu Item	Reference Page
Picture Adjustments	See page 42
Sound Adjustments	See page 44
P&P or PIP	See page 38
Exit P&P or Exit PIP	See page 38
Speakers	See page 45
Audio Swap	See page 38
Screen	See page 46
Add to Favorites/ Remove from Favorites	See page 29
MTS	See page 45
Alternate Audio	See page 45
Digital Rating	See page 49
Background TV	See page 30
Motion Enhancer	See page 43
Device Control	See page 51
Device Control (Menu) for DMPort	See page 37
Photo	See page 31
Music	See page 33




- The **Digital Rating** and **Alternate Audio** options will appear in Options only when digital ratings or alternate audio streams are available in the currently tuned digital program.



Button	Description
<b>28 JUMP</b>	Press to jump back and forth between two channels. The TV alternates between the current channel and the last channel that was selected.
<b>29 CH +/-</b>	Press to scan through channels. To scan quickly through channels, press and hold down either <b>+/–</b> .
<b>30 F1/F2</b>	Press to select the function of connected components. For details, see “Using Other Equipment with Your Remote Control” on page 28.



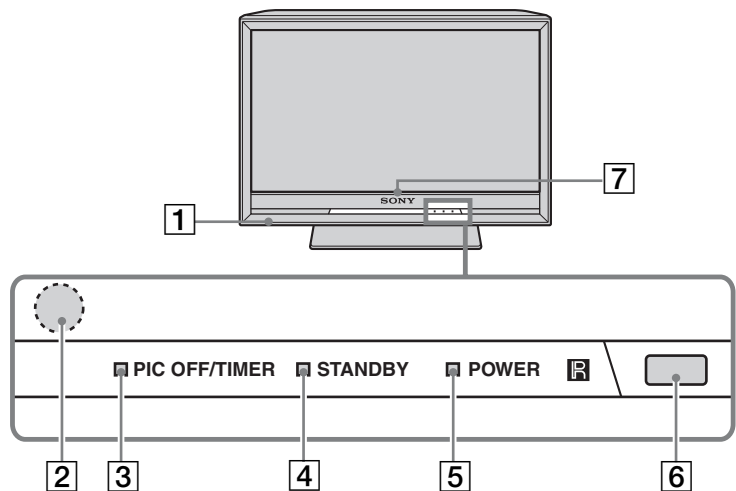


Item	Description
1 <b>Speaker</b>	Outputs the audio signal.
2 <b>Light Sensor</b>	Senses room light level and adjusts the screen brightness accordingly (see page 53 for details). Do not put anything near the sensor or the nearby general area (as shown above), as its function may be affected.
3 <b>PIC OFF/TIMER LED</b>	Lights up in green when the <b>Picture Off</b> feature is activated. Lights up in orange when the timer is set. When the timer is set, this LED will remain lit even if the TV is turned off. For details, see page 41 ( <b>Timer</b> ) and page 53 ( <b>Picture Off</b> ).
4 <b>STANDBY LED</b>	Lights up in red when your TV is in PC standby mode. If the LED blinks in red continuously, this may indicate that the TV needs servicing (see contacting Sony information on the back cover).
5 <b>POWER LED</b>	Lights up in green when the TV is turned on.
6 <b>(IR) Infrared Receiver</b>	Receives IR signals from the remote control. Do not put anything near the sensor, as its function may be affected.
7 <b>SONY Logo</b>	The Sony logo will illuminate when the TV is powered on. You can turn off the logo illumination, for details see page 53.

# Programming the Remote Control

The remote control can be programmed to operate other equipment and is pre-programmed to operate the following Sony equipment.

Function Button	Sony Equipment	Code Number
DVD	DVD Player	31033
AMP	Receiver	52172
STB	Digital Satellite	01639

## Programming Other Equipment

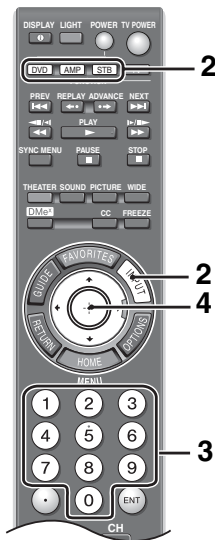

Follow the steps below to program your TV remote control.

- 1 Find the code that corresponds to your equipment from page 27. If more than one code is provided, try programming the first code listed.
- 2 Press and hold **DVD**, **AMP** or **STB** simultaneously with the **INPUT** button and release. When in the programming mode, the **FUNCTION** button blinks for approximately 30 seconds until a code is entered.
- 3 Enter the five digit code using **0-9**. while the **FUNCTION** button is lit. If the code is not entered within 30 seconds, you must repeat step 2.
- 4 Press **+** or **ENT** to confirm the code. If successfully programmed, the **FUNCTION** button blinks twice; if not, it blinks five times.



- Any of the **FUNCTION** buttons can be programmed to operate other equipment regardless of the labeling. For example, **DVD** can be programmed to operate a Blu-ray player.

## Confirm the Programming

If you can turn your equipment on and off using the green **POWER** button, the programming is complete. If not, try the next code listed.



- In some cases, you may not be able to program your remote control. If this is the case, use your equipment's own remote control.

## Auto Backlight

The backlight can be set to light up when a button is pressed.

### To set backlight:

Press **LIGHT** and **MUTING** simultaneously until the four **FUNCTION** buttons blink red.

### To turn off backlight:

Press **LIGHT** and **MUTING** until the **TV** button blinks red.

## Backlight Time Out

The remote control can be set to remain lit longer than the default time setting of approximately five seconds with the **FUNCTION** buttons.

### To change backlight time setting:

- 1 Press **LIGHT**, **VOL+**, and then **CH+** simultaneously until the **FUNCTION** button blinks red.
- 2 Select the **FUNCTION** button that corresponds to your preferred time out setting and press **+**.

<b>DVD</b> 5 seconds (default)	<b>AMP</b> 10 seconds
<b>STB</b> 15 seconds	<b>TV</b> 20 seconds

## Reset the Remote Control

To reset the remote control to the factory default settings, press and hold **SOUND**, **TV POWER**, and then **+** simultaneously. The **FUNCTION** buttons blink red simultaneously when successfully reset.

## Manufacturer's Code List

If your equipment's code is not listed, visit <http://esupport.sony.com/remotecodes> for a more comprehensive list.

### Sony Equipment Codes

Sony Equipment	Programmable Code Number
AV Receiver	52172
Blu-ray Disc Player	41516, 42178, 42180
Cable –Digital	02177
DVD AV System	51622, 51558, 51658, 51858
DVD Changers	31633
DVD Player	31033, 31069, 31070
DVD/HDD Combo Player	31033, 31069, 31070
DVD/VCR Combo Player	30864
DVR /HDD Player	22181, 22182, 22183
Satellite	01639
VCR	21232, 21546, 22184

### Other Manufacturer Equipment Codes

#### HD Blu-ray Players

Manufacturer	Code
LG	40741
Panasonic	41641
Philips	42084
Pioneer	40142
Samsung	40199

#### DVD Player

Manufacturer	Code
Coby	30778, 30852, 31077, 31086, 31107, 31165, 31177, 31351, 31628
Cyberhome	30816, 30874, 31023, 31024, 31117, 31129, 31502, 31537
GPX	30699, 30769
JVC	30558, 30623, 30867, 31164, 31550, 31602
Koss	30651, 30769, 30896, 31061, 31423
Memorex	30695, 30831, 31270
Panasonic	30490, 30503, 30571, 30703, 31762
Philips	30503, 30539, 30646, 30675, 31267, 31354, 32056
RCA	30522, 30571, 30717, 30790, 30822, 31022
Samsung	30490, 30573, 30744, 31044, 31075, 31470
Sylvania	30675, 31268
Toshiba	30503, 30539, 30573, 30695, 31154, 31503, 31588, 31608, 31854

#### DVD Changers

Manufacturer	Code
Sylvania	30675
Techwood	30692
Toshiba	30503, 31154
Yamaha	30497, 30545
Zenith	30741

#### DVD Recorder

Manufacturer	Code
Cyberhome	31129, 31502
JVC	31164
LG	30741
Lite-On	31158, 31416, 31440
Panasonic	30490
Philips	30646
Samsung	30490, 31470
Sylvania	30675
Toshiba	31588

#### DVD/VCR Combo Units

Manufacturer	Code
JVC	30867, 31164, 31550, 31602
Broksonic	30695, 31419
Panasonic	31762
Toshiba	30503, 31854
Zenith	30741, 30869

#### VCR's

Manufacturer	Code
Daewoo	20037, 20045, 20046, 20278, 21137
JVC	20041, 20067, 21162
Panasonic	20000, 20035, 20162, 20225, 20226, 20614, 20616, 21062, 21162, 21262
Philips	20000, 20035, 20045, 20048, 20081, 20162, 20209, 20616, 20618, 20739, 21081, 21181
Sylvania	20000, 20035, 20043, 20081, 20593, 21593

#### A/V Receiver/Home Theater Systems

Manufacturer	Code
Audiovox	30790, 51390
Bose	50674, 51229, 51933
Denon	50121, 51142, 51306, 51360, 52857
Emerson	50531
JVC	50331, 51495
Koss	30651
LG	51293
Onkyo	51298, 51320, 51805
Panasonic	50308, 51288, 51308, 51316, 51548, 51633, 51763, 51764
Philips	31267, 51189, 51266, 51269
Pioneer	50150, 50531, 50630, 50823, 51023, 51384
RCA	30790, 50531, 50823, 51023, 51254, 51390, 51511, 51609
Samsung	51295, 51500
Sherwood	31077, 51077, 51517, 51653
Yamaha	30497, 50176, 50354, 51023, 51276, 51331, 51376, 51815
Zenith	51293

#### Digital Video Recorders

Manufacturer	Code
TiVo	01442, 01443, 01444, 20618, 20636, 20739

#### Satellite

Manufacturer	Code
DirecTV	00099, 00247, 00392, 00566, 00639, 00749, 00819, 01076, 01108, 01109, 01142, 01377, 01392, 01414, 01442, 01442, 01443, 01444, 01609, 01639, 01640, 01749, 01856, 20739
Dish Network System	00775, 01170, 01505, 01775
Echostar	00775, 01170, 01505, 01775
Funai	01377
GE	00392, 00566
Hitachi	00749, 00819, 01250
Hughes	00749, 01142, 01443, 01444, 01749, 20739
Humax	01790, 20739, 21797, 21988
JVC	00775, 01170, 01775
LG	01226, 01414, 22010
Panasonic	00247, 00701, 20614, 20616
Philips	00099, 00722, 00749, 00775, 00819, 01076, 01142, 01749, 20618, 20739
RCA	00143, 00392, 00566, 00775, 00855, 01142, 01392, 01442, 20880
Samsung	01108, 01109, 01142, 01276, 01377, 01442, 01609, 20739
TiVo	01442, 01443, 01444, 20618, 20636, 20739

#### Cable Box

Manufacturer	Code
Jerrold/General Inst./Motorola	00003, 00276, 00476, 00810, 01187, 01254, 01376
Pace	00008, 00237, 00877, 01877
Panasonic	00000, 00008, 00107, 00144
Pioneer	00144, 00533, 00877, 01877
Scientific Atlanta	00000, 00003, 00008, 00237, 00477, 00877, 01877
Zenith	00000, 00525, 00899

## Using Other Equipment with Your Remote Control

Remote control tips are provided below for the equipment you have programmed on the **DVD, AMP, STB** buttons of the remote control. See page 26 for programming equipment to the remote control.

Press **INPUT** to see your connected equipment in the **External Inputs** menu. Button functionality may differ depending on your equipment.

		Universal Blu-ray, HD-DVD, DVD, DVD-R, DVD/ HDD, DVD/VCR	Universal VCR, DVR	Universal SAT/ CBL	Universal AMP/ Receiver
Button	Action				
Access Control					
DISPLAY	Display	✓	Information	✓	✓
⊕	Select	✓	✓	✓	✓
⊖	Clear, (cancel)	✓	✓	N/A	✓
ENT	Enter	✓	✓	✓	✓
Shortcuts Control					
GUIDE	Guide	✓	✓	✓	✓
FAVORITES	Favorites	N/A	N/A	✓	N/A
INPUT	Input Select	✓	✓	✓	✓
RETURN	Exit	✓	✓	✓	✓
HOME	Setup Menu	✓	✓	✓	✓
OPTIONS	Options	N/A	List	List	List
TOP MENU	Top Menu/List	Top Menu	List	List	Top Menu
MENU	Menu	Menu	Menu	Menu	Menu
F1	For selecting between DVD/ VCR in combo units	HDD, DVD/HDD, DVD/VCR	VCR, VCR/DVD	N/A	N/A
F2		DVD	DVD	N/A	N/A
Equipment Control					
POWER	Turn on/off	✓	✓	✓	✓
⏮	Previous, Skip backward	✓	✓	✓	✓
⏮⏪	Replay	✓	✓	✓	Band
⏮⏩	Advance, Skip	✓	✓	✓	Surround
⏭	Next, Skip forward	✓	✓	✓	✓
⏮⏮	Rewind	✓	✓	✓	✓
▶	Play	✓	✓	✓	✓
⏭⏭	Fast Forward	✓	✓	✓	✓
⏸	Pause	✓	✓	✓	✓
■	Stop	✓	✓	✓	✓
Recording Control					
●	Record	✓	✓	✓	✓
⏸	Record Pause	✓	✓	✓	✓
■	Stop	✓	✓	✓	✓
Navigation Control					
↑/↓	Cursor up/down	✓	✓	✓	✓
←/→	Cursor left/right	✓	✓	✓	✓
Tuning Control					
0 - 9	Digit input	✓	✓	✓	✓
CH +/-	Channel up/down	✓	✓	✓	✓
JUMP	Last channel	N/A	N/A	✓	N/A
Volume Control					
VOL +/-	TV volume +/-	N/A	✓	✓	AMP/RECEIVER Vol.
MUTING	Muting	N/A	N/A	N/A	✓
R/G/B/Y Control					
Red	Red	✓	N/A	✓	DVD or BD Input
Green	Green	✓	N/A	✓	VIDEO 1 or A/V Input
Blue	Blue	✓	N/A	✓	SAT or Cable Input
Yellow	Yellow	✓	N/A	✓	TV or Tuner Input


# Exploring Fun Features

## Favorites

With **Favorites**, you can manage your preferred **TV** channels, **External Inputs**, **Photo** content, **Music** content, and **Background TV** themes for easy access.

### Displaying Favorites

Press **FAVORITES**.

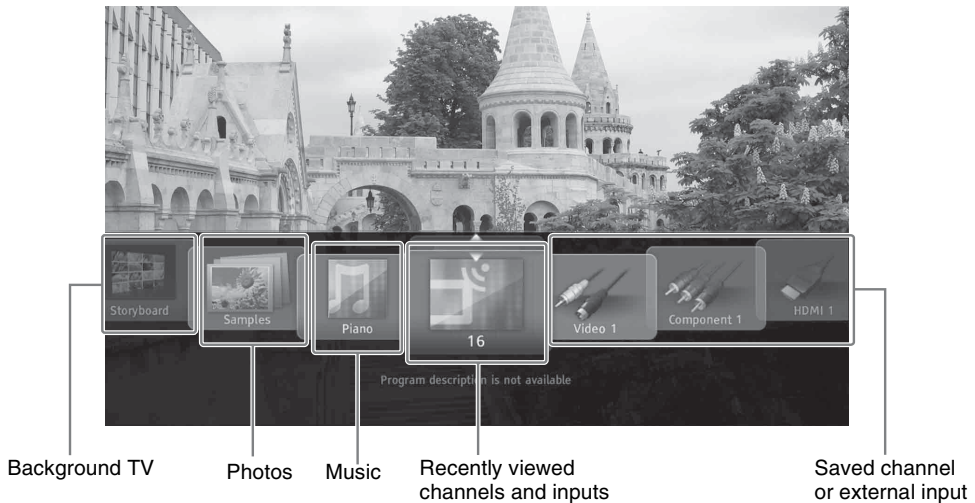

- The first time you enter **Favorites**, the recently viewed channels and inputs are highlighted.
- **Background TV** themes, built-in photos and music, and some inputs are automatically saved into **Favorites** as a factory default. To remove from **Favorites**, follow the instructions below.

### Navigating Favorites

- 1 Press **←/→** to move between saved selections in a carousel-like fashion.
- 2 When the recently viewed channels and inputs are highlighted, press **▲/▼** to move between them.
- 3 To view an item, highlight its icon and press **⊕**.



- To clear your recently viewed channels and inputs list, highlight the list in **Favorites** and press **OPTIONS**, then select **Clear Recently Viewed**. Recently viewed items are also cleared when the TV is powered off.

### Adding to Favorites

- 1 From the **XMB™**, select a **Photo**, **Music**, **TV**, or **External Inputs** icon. Locate the item you wish to add and press **OPTIONS**.
- 2 Press **▲/▼** to highlight **Add to Favorites** and press **⊕**.

### Removing from Favorites

- 1 Press **FAVORITES**, then select an item to be removed, and press **OPTIONS**.
- 2 Press **▲/▼** to highlight **Remove from Favorites** and press **⊕**.



- **Auto Program** will clear your TV channels from **Favorites** (see pages 16 and 47).
- **Initial Setup** will return your **Favorites** to factory default settings (see page 53).




## Background TV

**Background TV** displays images of current video on your TV that are similar to a screen saver. **Background TV** is available from the CABLE/ANTENNA, Composite, and DMPORT inputs.

### Navigating Background TV

- 1 Tune to one of the inputs listed above.
- 2 Press **OPTIONS**.
- 3 Highlight **Background TV** and press  $\odot$ .
- 4 Highlight a theme and press  $\odot$ . The TV will display the current channel or input using the selected **Background TV** theme.

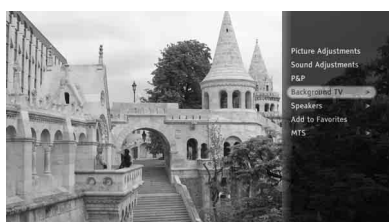

- 5 Press **RETURN** to exit the **Background TV** and return to the current channel or input.



- **Background TV** themes may also be saved to **Favorites**, so that you can launch these themes from the **Favorites** screen.

## DLNA Certified™ Photo Media Player

This TV is a DLNA Certified digital media photo player that can display JPEG photo content from your DLNA Certified networked equipment.

After configuring the TV to an active network (see page 52), the available media servers will be found automatically and will be displayed under the **Photo** icon (see page 31). See **Show/Hide Servers** (page 52) to manually search for media servers.

Consult your DLNA Certified media server's operating instructions for more details on JPEG photo displaying capabilities. Sony does not guarantee that all media servers will display JPEG photos on this TV.




- Viewing content which is obtained between networked DLNA Certified equipment depends on the media formats supported by the DLNA Certified equipment.

## Enjoying Photos and Music through USB Port

The TV offers easy access to JPEG photos and MP3 music files stored on Sony digital cameras (not supplied) connected via USB interface and Sony MICRO VAULT™ USB Flash Drives (not supplied).

### Using USB Equipment

The USB port is located on the side TV panel.

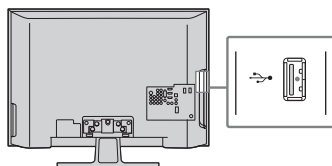

With the TV powered off, gently insert your USB equipment into the USB port and power on the TV. When inserted properly, it should slide in with little resistance. The TV will display "USB device detected". For information on how to access **Photo** or **Music** files, see pages 31-34.

### Removing USB Equipment

Power off the TV and slide the USB Equipment out of the USB port.

### USB Equipment Functionality

Sony cannot guarantee or assure the USB functionality on this TV in the following cases:

- Use of non-Sony brand USB equipment
- Use of video or audio clips processed on a computer
- Use of files obtained from the Internet or from a printed film processing center.

Sony recommends backing up all data stored on USB equipment to avoid potential data corruption. Sony cannot accept responsibility for lost or damaged data recorded on USB equipment.

The USB functionality on this TV is designed to be compatible with various Sony brand digital cameras and MICRO VAULT USB Flash Drives, but not all. Sony cannot guarantee or assure compatibility with all formats or products.


# Photo

The **Photo** feature allows easy access to JPEG files from Sony USB connected equipment and DLNA Certified media servers.


## Accessing Photos

Under the **Photo** icon found on the **XMB™**, select the DLNA Certified media server, **USB**, or **Samples** icon to locate your photo files.

- 1 Press **HOME**.
- 2 Highlight and select the **Photo** category.
- 3 Press **▲/▼** to highlight and select the photo file location.  
A sample DLNA Certified media server icon is shown below (actual icon may differ).

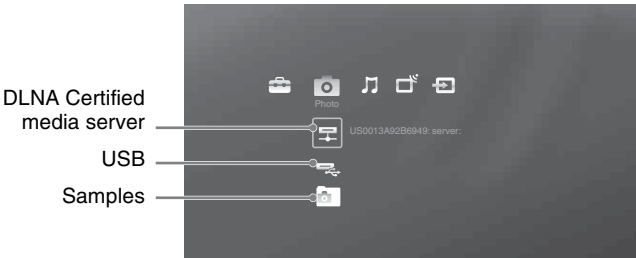


- 4 After locating your photo files, the **List View** will appear and display photo folders and files. Press **▲/▼** to highlight a file or folder and select (shown below with USB selected).

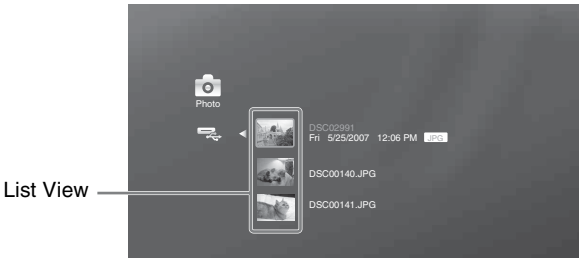

- To view available DLNA Certified media servers, your TV must be connected and configured to an active network (see page 52).
- The TV can display a maximum photo file size of 8 megabytes from DLNA Certified media servers.
- The photo display resolution range is 16 x 16 to 4,096 x 4,096 pixels.


## Navigating through Photo

Use the remote control buttons described below to navigate through the feature.




Button	To do...	Button	To do...
<b>OPTIONS</b>	To access Photo Options menu	<b>PLAY</b>	To play a slideshow
	To play and pause a slideshow or select a folder	<b>PAUSE</b>	To pause a slideshow
<b>RETURN</b>	To stop slideshow and return to <b>List View/Thumbnail View</b>	<b>STOP</b>	To stop slideshow and return to <b>List View/Thumbnail View</b>

## Photo Options

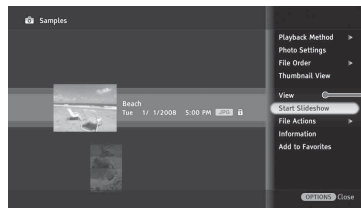
Pressing **OPTIONS** while displaying the **List View** will display the following Options menu.



List View Options menu

Playback Method	Sets the <b>Slideshow</b> play mode and photo display order.	
	<b>Repeat</b>	Select <b>On</b> to continuously play the slideshow.
	<b>Shuffle</b>	Select <b>On</b> to shuffle the photo order during the slideshow.
Photo Settings	Sets the <b>Slideshow</b> settings.	
	<b>Slideshow Speed</b>	Select from <b>Fast</b> , <b>Medium</b> , or <b>Slow</b> to set the photo display duration.
	<b>Slideshow Music</b>	Select music to play during the slideshow. Tracks must be added in <b>Music</b> to be available for selection (see page 33).
	<b>Slideshow Effect</b>	Select from <b>Simple</b> , <b>Butterfly</b> , <b>Maze</b> , <b>Sepia</b> , <b>Monochrome</b> , <b>Slide</b> , or <b>Fade</b> to set the slideshow transition or image effect (shown below is <b>Butterfly</b> effect).
	<div><ul style="list-style-type: none"><li>• <b>Maze</b> and <b>Butterfly</b> slideshow effects can only display JPEG files.</li></ul></div> <div></div>	
	<b>Display Preference</b>	Select to optimize picture display quality or display speed.
	<b>Display Size</b>	Select to view photos in <b>Standard</b> or <b>Expanded</b> size.
File Order	Sets the order in which files will be listed. Select from <b>Original</b> , <b>Alphabetical</b> , <b>Alphabetical Reverse</b> , <b>Date Order</b> , or <b>Date Order Reverse</b> .	
Thumbnail View	Select to fill the display screen with thumbnails.	
View	Select to view the photo file highlighted.	
Start Slideshow	Select to start the slideshow.	
File Actions	Select to modify file settings for photos from a USB connected equipment.	
	<b>Rotate and Save</b>	Select to rotate a photo <b>Right 90°</b> , <b>Left 90°</b> , or <b>180°</b> and save.
	<b>Protection</b>	Select to protect a photo from deletion.
	<b>Delete</b>	Select to delete a photo.
	<b>Print Quantity</b>	Select to set <b>Print Quantity</b> and save to USB connected equipment.
<div><ul style="list-style-type: none"><li>• Not available with photos accessed from a DLNA Certified media server.</li></ul></div>		
Information	Select to view photo folder, equipment, or server information.	
Add to Favorites	Select to add a photo, folder, or equipment to <b>Favorites</b> with the TV remote control.	
Remove from Favorites	Select to remove from <b>Favorites</b> with the TV remote control.	

Pressing **OPTIONS** while displaying a photo will display the following Photo Options menu.

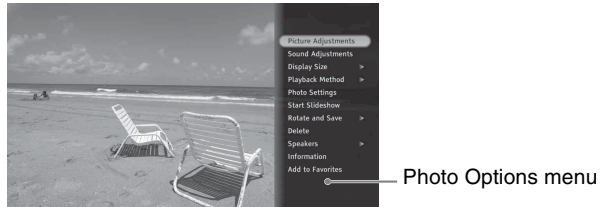

**Picture Adjustments** Select to make adjustments to photos (see page 42 **Picture Adjustments**).

**Sound Adjustments** Select to make sound adjustments (see page 44 **Sound Adjustments**).

**Speakers** Select to set sound to **TV Speakers** or **Audio System**.



- For **Display Size**, **Playback Method**, **Photo Settings**, **Start Slideshow**, **Rotate and Save**, **Delete**, **Information**, **Add to Favorites**, and **Remove from Favorites** see page 32.
- Photos cannot be stored in the TV.


## Music

Listen to music MP3 files directly from a Sony connected USB equipment (not supplied) or add music to a slideshow.

### Accessing Music

Under the **Music** icon, select the **USB** or **Samples** icon to locate your MP3 files.



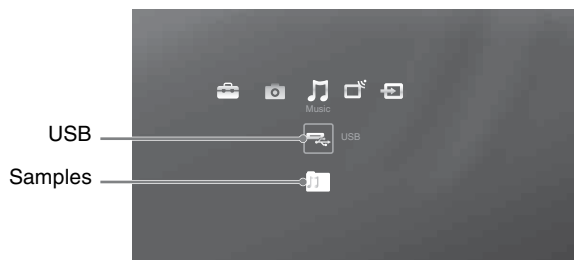


- 1 Press **HOME**.
- 2 Highlight and select the **Music** category.
- 3 Press **▲/▼** to highlight and select the music file location. A sample **USB** icon is selected below.



- 4 Music files and folders will be displayed in a **List View**. Highlight and select any available file or folder.


## Navigating through Music

 Use the remote control buttons described below to navigate through music tracks.


Button	To do...	Button	To do...
<b>OPTIONS</b>	To access Music Options menu	<b>PAUSE</b>	To pause or resume play of a music track.
	To play or pause a music, to select a folder or track	<b>STOP</b>	To stop playing a music track and return to <b>List View/Thumbnail View</b> .
	To play the previous music track		To navigate the <b>List View</b> or to play the previous/next music track
	To play the next music track		Press and hold to display control panel. Release to continue play.
<b>PLAY</b>	To play a track	<b>RETURN</b>	To navigate the <b>List View/Thumbnail View</b> .

## Music Options

Pressing **OPTIONS** while displaying the **List View** will display the following Music Options menu.

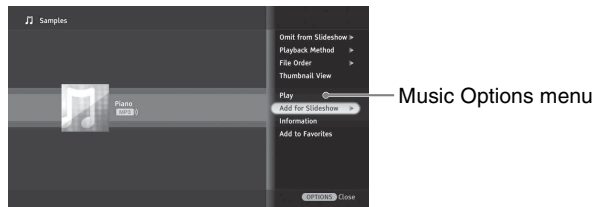

<b>Omit from Slideshow</b>	Select to remove selected track from the slideshow music.
<b>Playback Method</b>	Sets the play order and visual effect settings while playing music files.
<b>Repeat</b>	Select <b>On</b> to continuously play tracks.
<b>Shuffle</b>	Select <b>On</b> to shuffle the track play order.
<b>Track Selection</b>	Select <b>Single Track</b> or <b>All Tracks</b> to play during a slideshow.
<b>Visualizer Effect</b>	Select <b>Album Art</b> , <b>Bloom</b> , or <b>Burst</b> visual effects during a track play (shown below is <b>Burst</b> effect).

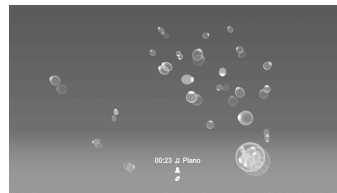

<b>File Order</b>	Sets the order in which files will be listed on the <b>List View</b> . Select from <b>Original</b> , <b>Alphabetical</b> , <b>Alphabetical Reverse</b> , <b>Date Order</b> , or <b>Date Order Reverse</b> .
<b>Thumbnail View</b>	Select to fill display screen with thumbnails.
<b>Add for Slideshow</b>	Select to make a music file accessible to play during slideshow. After adding a music file, see <b>Slideshow Music</b> under the Photo Options on page 32.
<b>Information</b>	Select to view track, folder, or equipment information.
<b>Add to Favorites</b>	Select to add a track, folder, or equipment to <b>Favorites</b> .
<b>Remove from Favorites</b>	Select to remove a track, folder, or equipment from <b>Favorites</b> .




- Music tracks cannot be stored in the TV.

# How to Use TV Guide On Screen

Use the Guide to find the show that you want to watch. The Guide allows you to search for shows by program categories and by keyword. The Guide provides up to two days of TV programming information. The Guide is available with cable service (without a cable box) or over-the-air antenna. Be sure to complete the **Initial Setup** on page 16 to use this service.

## TV Guide On Screen System Components

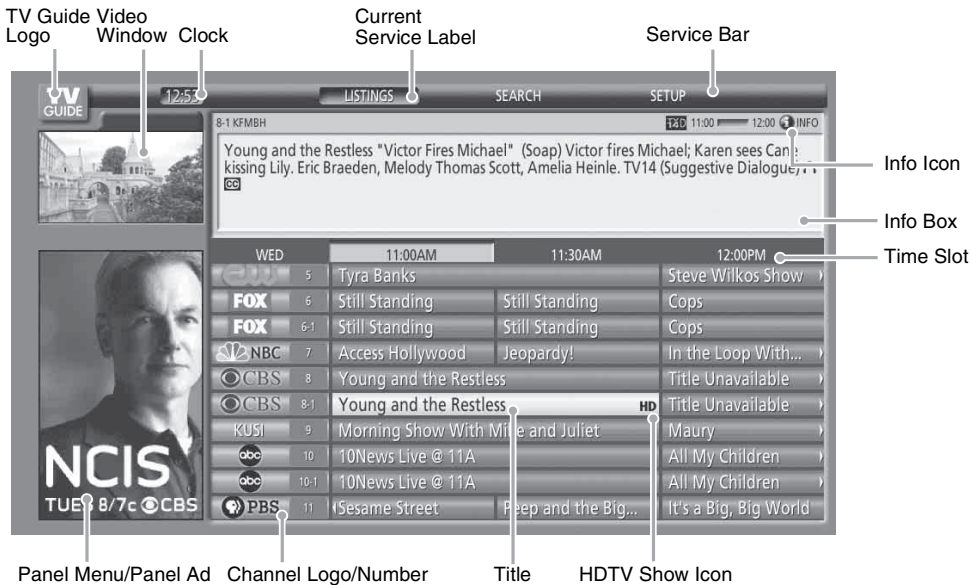

- Image shown above includes digital channels, which may not be available in some areas. If available, it may be necessary to manually change the channel display (see next page).

Use your TV's remote control to navigate the Guide system.

To Do This ...	Do This...
View TV Guide	Press <b>GUIDE</b> to display the TV Guide. Press <b>GUIDE</b> again to exit or press <b>HOME</b> to exit to <b>XMB™</b> . The TV Guide will time out in approximately 5 minutes when no action is taken.
Find a program to watch	Use <b>▲/▼/◀/▶</b> to highlight a program. The <b>CH+/-</b> buttons can be used to page up/down through the listings. The program information will appear in the Info Box. Press <b>(+)</b> to tune to the highlighted program.
Return to Service Bar	Press <b>RETURN</b> while in the TV Guide, or press <b>OPTIONS</b> to display the Panel Menu then highlight the <b>go to Service Bar</b> and press <b>(+)</b> . You can also press <b>▲</b> repeatedly to access the Service Bar.
Use shortcuts	Shortcuts allow viewing of listings for a different time slot or jumping to a channel of your choice. Enter a number using <b>0-9</b> buttons while <b>LISTINGS</b> on the Service Bar is highlighted. The Panel Menu will appear as soon as you enter a number. Complete entering the number in the Shortcuts. The entered number will determine the channel or listing hours ahead or back to view the program. Press <b>▲/▼</b> to make your selection.

(Continued)

To Do This ...	Do This...
Search program	Press <b>▲/▼/◀/▶</b> to highlight <b>SEARCH</b> on Service Bar. You can search for programs using the following options: <b>KEYWORD, ALPHABETICAL, MOVIES, SPORTS, CHILDREN, EDUCATIONAL, NEWS, VARIETY, SERIES</b> and <b>HDTV</b> . Press <b>⊕</b> then press <b>◀/▶</b> to highlight your search option. Press <b>▲/▼</b> to narrow your search. Press <b>⊕</b> when you find the program. If the program is airing now, press <b>⊕</b> to watch.
Keyword search	Keyword search can be done by type, category or subcategory of a program. Highlight <b>SEARCH</b> on the Service Bar, press <b>⊕</b> then press <b>◀/▶</b> to highlight <b>KEYWORD</b> . Press <b>⊕</b> again or press <b>OPTIONS</b> to display Keyword Options in the Panel Menu. Select <b>new search</b> to narrow your search by type, category or subcategory by pressing <b>▲/▼/◀/▶</b> .
Customizing the TV Guide On Screen system settings	Highlight <b>SETUP</b> on the Service Bar then press <b>▼</b> to highlight the available options to customize your system settings. You can change system settings, change channel display, change default options, display setup progress and diagnostics information.
Change channel display	Highlight <b>SETUP</b> on the Service Bar then press <b>▼</b> to highlight the <b>Change channel display</b> then press <b>⊕</b> . Highlight a channel then press <b>OPTIONS</b> to display the Grid Options. Make the changes using <b>▲/▼</b> and/or <b>0-9</b> buttons. When the changes are made, select <b>done</b> and press <b>⊕</b> . The Grid Options can also be used to re-sort the channel display numerically. Display the Grid Options and select <b>re-sort numerically</b> then press <b>⊕</b> . Confirm the numerical re-sort by selecting <b>yes</b> to complete the task.
The Guide appears each time TV is turned on	Highlight <b>SETUP</b> on the Service Bar then press <b>▼</b> to highlight <b>Change default options</b> and then press <b>⊕</b> . Highlight <b>General defaults</b> and press <b>⊕</b> to display options in the Panel Menu. Set <b>auto guide</b> to <b>on</b> to have the Guide appear when the TV powers on.
Lock/unlock video	Allows you to set the Video Window display to remain on a single channel ( <b>locked</b> ) or change channels ( <b>unlocked</b> ) as you navigate through Listings. While in Service Bar, press <b>OPTIONS</b> to display the Listings Options in the Panel Menu. Press <b>◀/▶</b> to <b>lock</b> or <b>unlock</b> the video. The locked video option displays a single channel.



## Using BRAVIA® Sync™ with Control for HDMI

The **BRAVIA Sync** function on this TV communicates with other Sony equipment supporting the **Control for HDMI** function.

### To connect Sony equipment with Control for HDMI

Use an HDMI cable that bears the HDMI logo for connection. See pages 12 to 15 or see the HDMI connection shown in the Quick Setup Guide provided with the TV documentation.

### Setting the Control for HDMI

The **Control for HDMI** function must be set up in order for the TV to communicate with other **Control for HDMI** enabled equipment. See page 51 for information on how to set up this TV's **Control for HDMI** function. For other equipment, refer to its operating instructions.

### Available options using Control for HDMI

The following operations are available after you connect the supported Sony equipment with **Control for HDMI** function to your TV:

- Automatically turn off the connected equipment when you turn off the TV.
- The TV will automatically turn on and select the respective HDMI input through the connected equipment by One-Touch-Play.
- Equipment listed under the **External Inputs** on the **XMB™** will turn on automatically when selected, see pages 5 and 39.
- Possible operations with **BRAVIA Sync** buttons, see page 20.

When a Sony A/V receiver with **BRAVIA Sync** is connected, the following additional operations are possible:

- Turning on the A/V receiver when the TV is turned on.
- Automatically switching to the audio output of the A/V receiver's attached speakers.
- Adjusting the volume and muting of the A/V receiver with the TV's remote control.



- The A/V receiver cannot be selected from the **XMB™**.

## Using DIGITAL MEDIA PORT Adapter

Connecting a DIGITAL MEDIA PORT (DMPort) adapter lets you display photos and play videos and music from a portable player on your TV.

The DMPort adapter's menu and portable player can be controlled via the TV's remote control. The DMPort input can be selected by pressing **INPUT**.

By pressing ◀, ▶, ||, ▶▶ or ■ you may be able to navigate through the portable player's menu.



- Viewing the equipment's menu on the TV and controlling it via the TV's remote control depends on the equipment; refer to the portable player's operating instructions.
- Available DIGITAL MEDIA PORT adapters vary in each area.
- Do not connect an adapter other than the DIGITAL MEDIA PORT adapter.
- If the portable player is capable of sending video signals, then the DIGITAL MEDIA PORT will have video output. In this case, the system outputs a composite video signal.
- Check compatibility between portable player and the DIGITAL MEDIA PORT adapter.
- The output volume level between the DMPort input and TV or other equipment input may be significantly different; adjusting the TV or other equipment's volume may be necessary.

# Using P&P and PIP Features

This TV comes with the **P&P** and **PIP** features which allow you to view two pictures simultaneously. **P&P** (picture and picture) provides two windows side by side. **PIP** (picture in picture) provides PC input signal and TV channels.



- The CABLE/ANTENNA input must be connected to use the **P&P/PIP** features.
- **P&P** is not available with 1080/24p video format.
- **Closed Captions (CC)** is available with **P&P** and **PIP** (see page 48).

## P&P



## PIP



## To Enter P&P and PIP

- 1 Press **OPTIONS** while watching one of the following inputs: TV channels, Video, Component, HDMI, DMPort or PC.
- 2 Press **▲/▼** to highlight **P&P** or **PIP** and press **(+)**.

P&P Supported Inputs	
In main window	In sub window
Video 1/2/3	TV channel (CABLE/ ANTENNA)
Component 1/2	
HDMI IN 1/2/3/4 (except PC timing)	
DMPort	

PIP Supported Inputs	
In main window	In sub window
PC	TV channel (CABLE/ ANTENNA)
HDMI IN 1/2/3/4 (PC timing)	



- To swap audio in **P&P** mode, use the **◀/▶** button to swap the highlight between the Main Window and Sub Window.
- To swap audio in **PIP** mode, press **OPTIONS**, then press **▲/▼** to highlight **Audio Swap**.
- For compatible PC Timings, refer to the PC Input Signal Reference Chart (see page 14).

## To Change Inputs or Channels (P&P)

- Press **◀/▶** to highlight the window to change for **P&P**.
- In the main window, press **INPUT** to select an input to watch.
  - In the sub window, change the channel by: pressing **CH+/-**; entering the channel number using the **0-9** numeric buttons; or pressing **JUMP** to switch to the previously viewed channel.

## To Change Channels (PIP)

You can change the channel of the sub window by pressing **CH+/-**; entering the channel number using the **0-9** numeric buttons; or pressing **JUMP** to switch to the previously viewed channel.

## To Exit from P&P and PIP

- 1 Press **OPTIONS**.
- 2 Press **▲/▼** to highlight **Exit P&P** or **Exit PIP** (depends on the mode you are in), and press **(+)** to exit.




- You may also press **RETURN** while in these features to exit.
- Additional compatible device with TV tuner is required to watch two simultaneous live TV programs.

# Using TV Settings



The **HOME** button allows you to access the **TV Home Menu** on the **XMB™** (XrossMediaBar) as well as a variety of TV features.

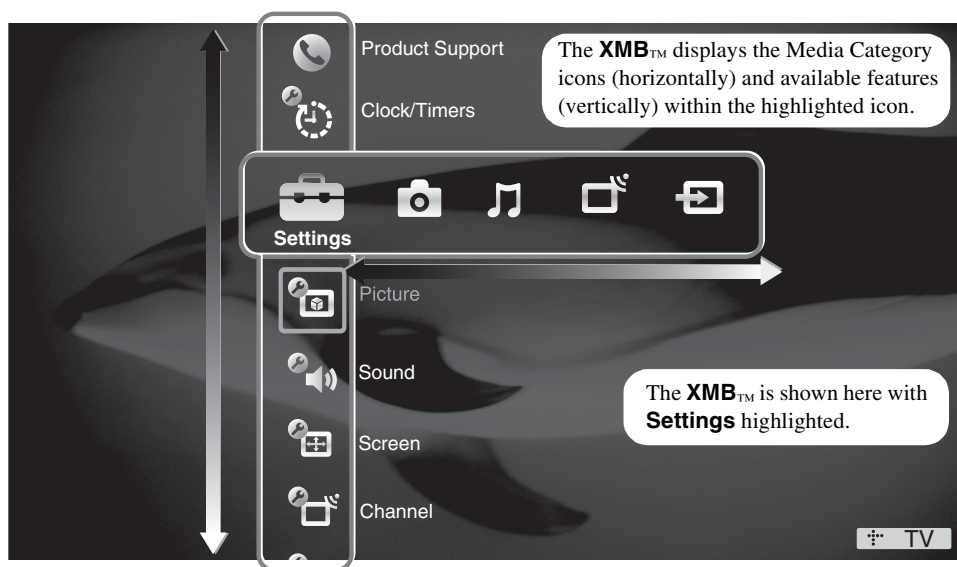

## Media Category Icons



Settings

### Adjusting TV Settings

Customize the TV settings with various options.

Explanations of different **Settings** start on page 41.

- The available options vary depending on the situations and conditions applied. Unavailable options are grayed out or not displayed.



Photo

### Viewing Photos

View photos and customize slideshows (see page 31).



Music

### Listening to Music

Listen to music or add a music track to a slideshow (see page 33).



TV

### Watching TV

Navigate through the channel list or select the TV Guide On Screen icon located at the top of the channel list to select a channel (see page 35).

- You can also select a TV channel using the **0-9** or **CH+/-** buttons (see remote control section on pages 21 and 24).





External Inputs


### Accessing External Inputs

Watch a movie, play a game, record a program or work on your PC.

Assign a label using the **Manage Inputs** feature for your convenience (see page 51).

## Navigating through TV Home Menu on XMB™

- 1  Press **HOME** to display the **XMB™**.
- 2  Press **←/→** to select a Media Category icon.
 




Available TV settings and features are listed under the **Settings** icon.


**Photo**  
file access




**Music**  
file access

TV Guide On Screen and available channels are listed under the **TV** icon.

Select inputs from CTRL: HDMI (**Control for HDMI**)  
**Video 1-3**  
**Component 1-2**  
**HDMI 1-4**  
**DMPORT**  
**PC**  
under the **External Inputs** icon.

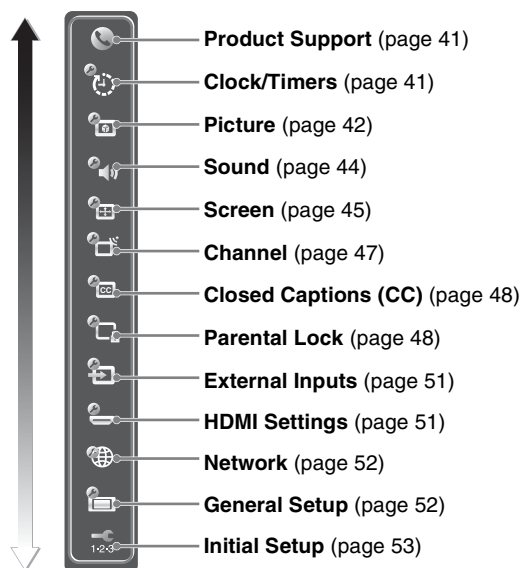- 3  Press **↑/↓** to move within the Category Object Bar.  
(The Category Object Bar shown below is for **Settings**.)




- 4  Press **⊕** when desired item is highlighted.
- 5  Press **⊕** or **↑/↓** to select the highlighted item.
- 6  Press **RETURN** or **HOME** to exit.

# TV Settings Descriptions




## Product Support

<b>Contact Sony</b>	Sony contact information is available from this screen for your convenience. Your TV's specific information such as Model Name, Serial Number, Software Version and downloadable ratings if available from the TV are displayed here.
<b>Signal Diagnostics</b>	Select to view the diagnostics information for the current signal.
<b>Software Update</b>	<p>To view the current software version and check for software updates, the network must be connected to the TV or a broadcast download must be available (for U.S. customers only). Press <b>▲/▼</b> to choose the new version (if available) and press <b>⊕</b> to begin the software update.</p>  <ul style="list-style-type: none"><li>• The Cable/Antenna cable needs to be connected directly to the TV and have digital TV programming (not available with the use of a cable box).</li><li>• The broadcast download is performed while the TV is off.</li><li>• The software update is performed while the TV is powered on.</li><li>• Do not turn off the TV during the software update, it may damage the TV software.</li></ul>



## Clock/Timers Settings

<b>Current Time</b>	<p>Set the current day and time (date, hour, minutes, and AM/PM). The <b>Timer</b> feature will not be available until you set the <b>Current Time</b>.</p>  <ul style="list-style-type: none"><li>• If the option is disabled, the TV Guide On Screen has automatically set the time.</li></ul>
<b>Timer</b>	<p><b>Timer</b> can be set to have the TV tune to a certain TV channel or other connected equipment as well as a specified volume at the specified time and duration you set. Turning on the <b>Timer</b> will allow setting the following: <b>Day of the Week, Time, Duration, Input, Channel, and TV On Volume</b>.</p>
<b>Sleep Timer</b>	<p>Sets the time in minutes (<b>Off, 15 min, 30 min, 45 min, 60 min, 90 min, or 120 min</b>) that you want the TV to remain on before shutting off automatically.</p>



## Picture Settings

Picture Adjustments	Picture Mode <i>For Video</i>	<b>Vivid</b>	For enhanced picture contrast and sharpness.
		<b>Standard</b>	For standard picture settings. Recommended for home entertainment.
		<b>Cinema</b>	For viewing film-based content. Most suitable for viewing in a theater-like environment.
		<b>Custom</b>	Allows you to store your preferred settings.
	<i>For Photo</i>	<b>Photo-Vivid</b>	For enhancing contrast and sharpness.
		<b>Photo-Standard</b>	For standard viewing; select for home use.
		<b>Photo-Original</b>	Images resemble the printed pictures from your photo album.
		<b>Photo-Custom</b>	Allows you to store your preferred settings.
	<i>For PC Timings</i>	<b>Video</b>	This option is available for PC timing (HDMI or PC input) signal to enhance the video shown on the screen.
		<b>Text</b>	This option is available for PC timing (HDMI or PC input) signal to enhance the text shown on the screen.



- **Picture Mode** for all inputs can also be accessed by pressing **PICTURE** on the remote control to directly toggle the modes.
- The options for **Picture Mode** may vary depending on the **Video/Photo Optimizer** setting (see page 44) and PC input.

<b>Reset</b>	Resets the current settings to the default values.	
<b>Backlight</b>	Brightens or darkens the backlight.	
<b>Picture</b>	Increases or decreases picture contrast.	
<b>Brightness</b>	Brightens or darkens the picture.	
<b>Color</b>	Increases or decreases color intensity.	
<b>Hue</b>	Increases or decreases the green tones.	
<b>Color Temperature</b> <i>White adjustment</i>	<b>Cool</b>	Gives the white colors a bluish tint.
	<b>Neutral</b>	Gives the white colors a neutral tint.
	<b>Warm 1, 2</b>	Gives the white colors a reddish tint.



- The option **Warm 1, 2** is not available for **Vivid** and **Photo-Vivid**.

<b>Sharpness</b>	Sharpens or softens the picture.
<b>Noise Reduction</b>	Reduces the picture noise level.
<b>MPEG Noise Reduction</b>	Reduces the mosaic effect in MPEG-compressed video. Useful for DVDs, Blu-ray and digital TV channels.

<b>Advanced Settings</b>	Available in the following <b>Picture Modes: Standard, Cinema, Custom, Photo-Standard, Photo-Original, and Photo-Custom.</b>
<b>Reset</b>	Resets all the advanced settings to the default values.
<b>Black Corrector</b>	Enhances black areas of the picture for stronger contrast.
<b>Advanced C.E. (Advanced Contrast Enhancer)</b>	Automatically optimizes the backlight and contrast. This setting is especially effective for dark picture scenes.
<b>Gamma</b>	Adjusts the balance between light and dark areas of the picture.
<b>Clear White</b>	Emphasizes white and light colors.
<b>Color Space</b>	Selects the range of color reproduction from <b>Wide</b> or <b>Standard</b> .
<b>Live Color</b>	Available when <b>Color Space</b> is set to <b>Wide</b> . Makes colors more vivid and reproduces clear skin tones.
<b>White Balance</b>	Adjusts the color temperature in detail.



- **Picture** settings for all inputs can also be accessed by pressing **OPTIONS** on the remote control, then selecting **Picture Adjustments** settings from the **OPTIONS** menu.
- **Picture** settings available during PC input are **Picture Mode, Reset, Backlight, Picture, Brightness, and Color Temperature**.

<b>Motion Enhancer</b>	Activates Motionflow to enhance the smoothness of picture movement and to reduce blur.
<b>High</b>	Provides smoother picture movement for film-based content.
<b>Standard</b>	Provides smooth picture movement. Use this setting for standard use.
<b>Off</b>	Use this setting when the <b>High</b> and <b>Standard</b> settings result in video artifacts such as ghosting.




- A noticeable change may be seen depending on the video.
- **Motion Enhancer** is not available when **Game Mode** is set to **On**.

<b>CineMotion</b>	Automatically detects film-based content and applies an inverse 3-2 pull-down process and a motion estimation engine to improve film content and de-interlacing performance.
<b>Auto 1</b>	Applies an inverse 3-2 pull-down process along with motion estimation to obtain the smoothest picture quality and reduces artifacts of moving images. Select for standard use.
<b>Auto 2</b>	Applies only the inverse 3-2 pull-down process. Picture movement will be similar to the original film.
<b>Off</b>	Turns off <b>CineMotion</b> .



- The **CineMotion** feature can be set separately for each input (except PC IN).

<b>Game Mode</b>	Select <b>On</b> to optimize the enjoyment of fast paced video games where response time is important. Select <b>Off</b> to disable this feature.
	 <ul style="list-style-type: none"> <li>The <b>Game Mode</b> can be set separately for each external input (except PC IN).</li> </ul>
<b>Video/Photo Optimizer</b>	Sets the picture settings to optimize the image quality of video (moving pictures) or photo (still image) content. Feature is only available for 1080i/p (excluding 1080/24p) content connected to the Component or HDMI input.
<b>Video-A</b>	The TV will automatically set the picture settings for video or still image content when Sony optional equipment that supports <b>Video-A</b> mode is connected to the HDMI input.
<b>Video</b>	Select to set the picture settings for video.
<b>Photo</b>	Select to set the picture settings for photos.





- Game Mode** and **Video/Photo Optimizer** features are not available when **Theater Mode** is set to **On**.




## Sound Settings

Available **Sound** settings depend on the **Speakers** setting.

<b>Sound Adjustments</b>	<b>Sound Mode</b>	<b>Dynamic</b>	Enhances treble and bass.
		<b>Standard</b>	Standard sound optimized for home use.
		<b>Clear Voice</b>	Suitable for spoken dialog.
	<b>Reset</b>	Resets the current settings to the default values.	
	<b>Treble</b>	Increases or decreases higher-pitched sounds.	
	<b>Bass</b>	Increases or decreases lower-pitched sounds.	
	<b>Balance</b>	Emphasizes left or right speaker balance.	
	<b>Surround</b>	<b>S-FORCE</b>	Provides a virtual surround sound experience made possible using just two front speakers.
		<b>Off</b>	Select for normal stereo or mono reception.
	<b>Voice Zoom</b>	Adjusts the clarity of human voices. For example, if the voice of a news announcer is indistinct, you can turn up this setting to make the voice clearer. Conversely, if you are watching a sports program, you can turn down this setting to soften the voice of the commentator.	
	<b>Sound Booster</b>	The <b>Sound Booster</b> provides a fuller sound with a greater sense of depth and width, by emphasizing the high and low frequency sounds. Select <b>High</b> , <b>Low</b> or <b>Off</b> for the amount of boost you desire. Selecting <b>Off</b> will bypass the emphasis.	
		 <ul style="list-style-type: none"> <li>Only available when in <b>Standard</b> mode.</li> </ul>	
	<b>Steady Sound</b>	Select <b>On</b> to stabilize the volume across all programs and commercials. Select <b>Off</b> to disable this feature.	
	<b>Volume Offset</b>	Adjusts the volume level of the current input (TV or video input) relative to other inputs.	
		 <ul style="list-style-type: none"> <li><b>Sound Adjustments</b> can also be accessed by pressing <b>OPTIONS</b> on the remote control.</li> </ul>	




<b>MTS</b> <i>Enjoy stereo, bilingual and mono programs</i>	<b>Stereo</b>	For stereo reception when viewing a TV program broadcasted in stereo.
	<b>Auto SAP</b>	Automatically switches the TV to second audio programs when a SAP signal is received. If no SAP signal is present, the TV remains in <b>Stereo</b> mode.
	<b>Mono</b>	For mono reception. Use to reduce noise during weak stereo broadcasts.
<b>Speakers</b>		
	• <b>MTS</b> is available only for analog programs.	
	• <b>MTS</b> can also be accessed by pressing <b>OPTIONS</b> on the remote control.	
<b>Audio Out</b> <i>Easy control of volume adjustment</i>	<b>TV Speakers</b>	Select to use the TV speakers for audio.
	<b>Audio System</b>	Select this option if you wish to use an external audio system for the TV sound. By selecting this option you are disabling the TV speakers.
	<b>Fixed</b>	Select to fix the audio output and allow you to adjust the volume with your audio system's remote control. (The TV's remote control's <b>VOL</b> and <b>MUTING</b> buttons have no effect on the <b>Audio Out</b> .)
	<b>Variable</b>	Select to control the volume of your TV's speakers or audio system with your TV's remote control.







 






- **Alternate Audio** is available only for digital programs. If the program you are watching is also available in other languages from the audio tracks, and if that language is what you have selected in the **Language** setting, your TV will automatically switch to the matching language with the **Alternate Audio** feature. The **Alternate Audio** option may be accessed by pressing **OPTIONS** on the remote control when an alternate audio stream is available from the broadcaster.







## Screen Settings

<b>Wide Mode</b>	<b>Wide Zoom</b>	Fills the screen with minimum distortion.
	<b>Normal</b>	Displays the 4:3 picture in its original aspect ratio when the original source is 4:3.
	<b>Full</b>	Enlarges the picture horizontally to fill the screen when the original source is 4:3. When the original source is 16:9 (High-definition source), select this mode to display the 16:9 picture in its original size.
	<b>H Stretch</b>	Enlarges the picture horizontally to fill the screen when the original source is 16:9. It is useful for HD channels with 4:3 content.
	<b>Zoom</b>	Select to enlarge the picture horizontally and vertically to fill the screen while maintaining the aspect ratio.
		
	• <b>Wide Mode</b> can also be accessed by pressing <b>WIDE</b> on the remote control.	
	• See <b>WIDE</b> button description on page 22 for accessing the <b>Wide Mode</b> .	
<b>Auto Wide</b>	• <b>Normal</b> is available with 480i or 480p sources only.	
	• <b>H Stretch</b> is only available with 720p, 1080i, 1080p and 1080/24p sources.	
	<b>On</b>	Automatically changes <b>Wide Mode</b> setting based upon content. If frequent screen changes are disturbing to you, select <b>Off</b> .
	<b>Off</b>	Turns off the <b>Auto Wide</b> option. Choose a <b>Wide Mode</b> from the <b>Wide Mode</b> option.

(Continued)

<b>4:3 Default</b> <i>Select the default screen mode to use for 4:3 sources</i>	<b>Wide Zoom</b>	Enlarges the 4:3 picture to fill the 16:9 screen, displaying as much of the original image as possible.
	<b>Normal</b>	Displays the 4:3 picture in its original aspect ratio.
	<b>Full</b>	Select to enlarge the 4:3 picture horizontally only, to fill the screen.
	<b>Zoom</b>	Select to enlarge the picture horizontally and vertically to fill the screen while maintaining the aspect ratio.
	<b>Off</b>	Select to continue using the current <b>Wide Mode</b> setting when the channel or input is changed.
 <ul style="list-style-type: none"><li>• <b>4:3 Default</b> is not available if <b>Auto Wide</b> is set to <b>Off</b>.</li><li>• If <b>4:3 Default</b> is set to anything but <b>Off</b>, the <b>Wide Mode</b> setting applies only to the current channel. When you change channels (or inputs), <b>Wide Mode</b> is automatically replaced with the <b>4:3 Default</b> setting for 4:3 sources. To retain the current <b>Wide Mode</b> setting as channels and inputs are changed, set <b>4:3 Default</b> to <b>Off</b>.</li></ul>		
<b>Display Area</b>	<b>Full Pixel</b>	Displays the picture for 1080i, 1080p or 1080/24p sources in its original size.
	<b>Normal</b>	Displays the picture in its original size.
	<b>-1/-2</b>	Enlarges the picture to hide the edges of the picture.
 <ul style="list-style-type: none"><li>• For 720p, 1080i, 1080p and 1080/24p, feature is only available when <b>Wide Mode</b> is set to <b>Full</b>.</li></ul>		
<b>Screen Position</b>	Adjust the <b>Vertical</b> positioning by pressing   . Press   to adjust the <b>Horizontal</b> positioning.	
 <ul style="list-style-type: none"><li>• <b>Screen Position</b> feature is useful if the TV is connected to game equipment.</li><li>• Vertical position is available only when <b>Wide Mode</b> is set to <b>Zoom</b>.</li><li>• For high-definition signals, <b>Vertical</b> and <b>Horizontal</b> positions are not available.</li></ul>		
<b>Vertical Size</b>	Adjusts the vertical size of a standard-definition picture.	
 <ul style="list-style-type: none"><li>• <b>Vertical Size</b> is available only when <b>Wide Mode</b> is set to <b>Wide Zoom</b> or <b>Zoom</b> for standard-definition channels.</li></ul>		
<b>Screen</b> settings for PC timings and HDMI-PC (PC input) differ from all other input modes and are shown below.		
<b>Auto Adjust</b>	Select <b>Yes</b> to start the auto adjust for the PC input.	
<b>Reset</b>	Resets the settings to the default values.	
<b>Phase</b>	Adjust after <b>Pitch</b> to fine tune overall sharpness.	
<b>Pitch</b>	Adjust uneven sharpness on screen.	
 <ul style="list-style-type: none"><li>• For the PC Input Signal Reference Chart, see page 14.</li></ul>		
<b>H Center</b>	Allows you to move the position of the picture horizontally (left and right).	
<b>V Center</b>	Allows you to move the position of the picture vertically (up and down).	
<b>Wide Mode</b>	<b>Normal</b>	Select to display the picture in its original resolution and aspect ratio.
	<b>Full 1</b>	Select to enlarge the picture to fill the screen, while maintaining its original aspect ratio.
	<b>Full 2</b>	Select to enlarge the picture to fill the screen.
 <ul style="list-style-type: none"><li>• <b>Wide Mode</b> can also be accessed by pressing <b>WIDE</b> on the remote control.</li><li>• See <b>WIDE</b> button description on page 22 for accessing <b>Wide Mode</b>.</li></ul>		
 <ul style="list-style-type: none"><li>• <b>Phase</b> and <b>Pitch</b> options are not available with PC signal connected to HDMI input.</li></ul>		



<b>Signal Type</b>	<b>Cable</b>	For receiving cable channels via cable TV provider.
	<b>Antenna</b>	For receiving signal via over-the-air antenna.
 <ul style="list-style-type: none"><li>• You should run <b>Auto Program</b> after changing the <b>Signal Type</b> setting.</li></ul>		
<b>Auto Program</b>	<p>Automatically sets the channel list in the TV for all receivable channels. Channel scanning will be based on the <b>Signal Type (Cable/Antenna)</b> setting.</p> <ol style="list-style-type: none"><li><b>1</b> Select <b>Auto Program</b>.</li><li><b>2</b> Select <b>OK</b> to start <b>Auto Program</b>. When <b>Auto Program</b> is completed, the screen will display the number of channels found.</li><li><b>3</b> Press <b>RETURN</b> to exit <b>Auto Program</b>.</li></ol>  <ul style="list-style-type: none"><li>• Running <b>Auto Program</b> will clear the <b>Favorites</b> channel list for the current signal type.</li><li>• If you run <b>Auto Program</b> again, previously scanned channels will be overwritten with the newly scanned channels.</li></ul>	
<b>Add Digital Channels</b>	Select to add digital channels. Be sure to have the <b>Signal Type</b> option selected appropriately for the signal source. (Useful for antenna installations.)	
<b>Show/Hide Channels</b>	<p>Allows you to show or hide channels when you surf with the <b>CH +/-</b> button or in the <b>TV</b> channel list on the <b>XMB™</b>.</p> <ol style="list-style-type: none"><li><b>1</b> Press <b>▲/▼</b> to scroll through the channels until you highlight the channel to show or hide.</li><li><b>2</b> Press <b>⊕</b> to select <b>Shown</b> or <b>Hidden</b>. To show or hide more channels, repeat steps 1-2.</li></ol>  <ul style="list-style-type: none"><li>• <b>Hidden</b> channels can be accessed by entering the channel number with <b>0-9</b> buttons on the remote control.</li></ul>	
<b>Edit Channel Labels</b>	<p>Assigns labels (such as station call letters) to channel numbers.</p> <ol style="list-style-type: none"><li><b>1</b> Press <b>▲/▼</b> to scroll through the channel numbers. Then press <b>⊕</b> to select the channel number to assign a label.</li><li><b>2</b> Press <b>▲/▼</b> to scroll through the label characters (A-Z, 0-9, etc.). Press <b>➡</b> to move to the next character. Repeat to add up to 7 characters to the label. Press <b>⊕</b> to set it. To assign labels to more channels, repeat steps 1-2.</li></ol>  <ul style="list-style-type: none"><li>• This feature is not available when using the TV Guide On Screen system.</li></ul>	



## Closed Captions (CC) Settings

<b>CC Display</b>	This option allows you to view <b>Closed Captions (CC)</b> .	
	<b>On</b>	Enables <b>CC Display</b> .
	<b>Off</b>	Disables <b>CC Display</b> .
	<b>On with Muting</b>	Automatically displays closed captions when the TV is muted.
<b>Analog CC</b>	For the basic analog (EIA-608) closed caption options.	
	<b>CC1, CC2, CC3, CC4</b>	Displays a printed version of the dialogue or sound effects of a program. (Should be set to <b>CC1</b> for most programs.)
	<b>Text1, Text2, Text3, Text4</b>	Displays network/station information presented using either half or the whole screen (if available).
<b>Digital CC</b>	For both analog (EIA-608) and digital (EIA-708) closed caption options. Select from <b>Service 1-6</b> and <b>CC1-4</b> (advanced digital closed caption options).	
<b>Display Options</b>	Customize the <b>Closed Captions (CC)</b> displays with <b>Text, Character Size, Character Style, Character Color, Character Opacity, Edge Type, Edge Color, Background Color</b> and <b>Background Opacity</b> .	



- **Closed Captions (CC)** can be turned **On, Off** or **On with Muting** directly by pressing **CC** on the remote control.



## Parental Lock Settings

The **Parental Lock** feature allows you to block programs according to their content and rating levels and block channels (regardless of the programs). Password is necessary in setting up blocking.



- The **Parental Lock** feature is also available with Video and Component (480i) inputs.

### To View Blocked Programs

Press **ENT** when tuned to a blocked program, then enter the password. To reactivate the **Parental Lock** settings, turn off and on the TV.

<b>Password</b>	Use <b>0-9</b> button on the remote control to enter a four-digit password. The first time the password is created, you must re-enter it again to confirm the password. "Password set" message will appear on the screen upon confirmation. <b>Change Password</b> You can change your password by entering the <b>Parental Lock</b> setting with the previously set password. Highlight and select <b>Change Password</b> , then enter the new password.  <ul style="list-style-type: none"><li>• You need your password for any future access into the <b>Parental Lock</b> settings. If you lose your password, see "Lost password" on page 58.</li></ul>
<b>Country</b>	Select the country name of <b>U.S.A.</b> or <b>Canada</b> for the appropriate ratings. The rating system varies between these two countries. See Custom Rating System Chart on page 50.

<b>Rating</b>	<b>Off</b>	Turns off <b>Parental Lock</b> . No programs are blocked from viewing based on their ratings.
	<b>Child</b>	Ratings permitted are: United States TV Rating: TV-Y, TV-G MPAA: G Canada English TV Rating: C, G French TV Rating: G
	<b>Youth</b>	Maximum ratings permitted are: United States TV Rating: TV-PG MPAA: PG Canada English TV Rating: PG French TV Rating: 8 ans+
	<b>Young Adult</b>	Maximum ratings permitted are: United States TV Rating: TV-14 MPAA: PG-13 Canada English TV Rating: 14+ French TV Rating: 13 ans+
	<b>Custom</b>	Sets ratings manually. U.S.: See page 50 for details. Canada: See page 50 for details.




- If you are not familiar with the parental guideline rating system, you should select **Child**, **Youth**, or **Young Adult** to help simplify the rating selection. To set more specific ratings, select **Custom**.

<b>Digital Rating</b> (Available only in U.S.A. where advanced ratings exist)	<b>Off</b>	Turn <b>Digital Rating</b> off. No programs containing digital ratings are blocked from viewing.
	<b>Custom</b>	Select to customize the <b>Parental Lock</b> with downloadable digital ratings.
	<b>Clear All</b>	Select to clear the downloaded ratings.
<b>Unrated</b> (Available only when <b>Country</b> is set to <b>U.S.A.</b> )	<b>Allow</b>	Allows programs and movies that are broadcasted without a rating.
	<b>Block</b>	Blocks all programs and movies that are broadcasted without a rating.
<ul style="list-style-type: none"> <li>• If you block unrated TV programs, be aware that the following types of programs may be blocked: programs broadcast from another country, emergency broadcasts, political programs, sports, news, public service announcements, religious programs and weather.</li> </ul>		
<b>Channel Block</b>	Allows you to block specific channels regardless of program ratings. The password needs to be set up prior to blocking channels. The blocked channel can only be viewed by entering the correct password.  <b>To View a Blocked Channel</b> Press <b>ENT</b> when tuned to the blocked channel then enter the password.	

Custom Rating System Chart

For **Country** selection of **U.S.A.:**

<b>Movie Rating</b>	<b>G</b>	All children and general audience
	<b>PG</b>	Parental guidance suggested
	<b>PG-13</b>	Parental guidance for children under 13
	<b>R</b>	Restricted viewing, parental guidance is suggested for ages under 17
	<b>NC-17 and X</b>	No one 17 or under allowed
<b>TV Rating</b> <i>Block programs by their rating, content or both</i>	Age-Based Ratings	
	<b>TV-Y</b>	All children
	<b>TV-Y7</b>	Directed to children age 7 and older
	<b>TV-G</b>	General audience
	<b>TV-PG</b>	Parental guidance suggested
	<b>TV-14</b>	Parents strongly cautioned
	<b>TV-MA</b>	Mature audience only
	Content-Based Ratings	
	<b>FV</b>	Fantasy violence
	<b>D</b>	Suggestive dialogue
	<b>L</b>	Strong language
	<b>S</b>	Sexual situations
	<b>V</b>	Violence
		
	• To ensure maximum blocking capability, set the Age-Based Ratings.	

For **Country** selection of **Canada:**

<b>English Rating</b>	<b>C</b>	All children
	<b>C8+</b>	Children 8 years and older
	<b>G</b>	General programming
	<b>PG</b>	Parental guidance
	<b>14+</b>	Viewers 14 and older
	<b>18+</b>	Adult programming
<b>French Rating</b>	<b>G</b>	General programming
	<b>8 ans+</b>	Not recommended for young children
	<b>13 ans+</b>	Not recommended for ages under 13
	<b>16 ans+</b>	Not recommended for ages under 16
	<b>18 ans+</b>	Programming restricted to adults
<b>U.S.A. Rating</b>	See <b>TV Rating</b> under <b>U.S.A.</b> for details.	

## External Inputs Settings

### Manage Inputs

Follow the steps below to customize your input menu for easy recognition when the **INPUT** button is pressed or when selecting an input from the **XMB™**.

- 1 Press **▲/▼** to highlight your input selection.
- 2 Press **⊕** to set **Enable** setting to either **Always** or **Auto**. The **Always** option will display this input in the input menu at all times. With the **Auto** option, the input with connected icon will only appear when external equipment is connected and/or an HDMI signal is present. Some external equipment may not be detected automatically.
- 3 To assign your own label to the input, press **▶** to highlight the label option, then press **▲/▼** to choose a name of the equipment that is connected to this input.



- You can assign the following labels for each input (except PC IN and DMPORT):  
**—, DVD, Cable Box, Satellite, BD, VCR, Receiver, DVR, Game, Camcorder, PC.**
- “—” indicates that no labels are assigned.

### Channel Tuning Keys

This setting controls how the remote control channel tuning keys (**0-9, CH+/-** and **JUMP**) behave while using an external input.

<b>Enabled</b>	Select to allow the TV to exit from the external input and return to a TV channel when pressing the tuning keys.
<b>Disabled</b>	Select to disable the tuning keys during external input mode and prevent unintentionally exiting the external input.



- Useful for applications that do not have a connection to the CABLE/ANTENNA input.

## HDMI Settings

HDMI inputs of this TV will recognize and communicate with other Sony equipment equipped with **Control for HDMI** function.

### Control for HDMI

**On/Off** feature allows your TV to communicate with other equipment that supports **Control for HDMI** function.

### Device Auto Power Off

Select **On** to have your connected equipment with **Control for HDMI** function to power off automatically when the TV is turned off. Select **Off** to disable this function. This feature is available when **Control for HDMI** is **On**.

### TV Auto Power On

Select **On** to control your TV's power on from your connected equipment with **Control for HDMI** function. Select **Off** to disable this function. This feature is available when **Control for HDMI** is **On**.

### Device List


Displays a list of equipment with **Control for HDMI** function connected to the TV.



- Press **OPTIONS** while the equipment supporting **Control for HDMI** is connected to display the **Device Control** options. The **Device Control** option provides access to the **Menu, Options** and **Content List** of your connected equipment with your TV remote control.
- Some equipment with **Control for HDMI** does not support the **Device Control** feature.





## Network Settings




<b>Network Setup</b>	Select to configure your TV's accessibility to your network via an Ethernet cable and configure <b>Network Setup</b> or review your TV's current network settings. Select your preferred configuration type.
<b>Easy</b>	The TV will automatically configure your network settings. Most networks can be configured with this option.
<b>Custom</b>	This option allows you to manually enter the IP address and proxy settings (FOR ADVANCED USERS ONLY).
<b>Auto</b>	Select to populate the IP address and jump to the proxy setting selection.
<b>Manual</b>	Select to manually enter an IP address. If you would like to use a proxy setting, select <b>Use</b> , if not, select <b>Don't Use</b> .
<b>Review</b>	Select to view current network settings.
<b>Show/Hide Servers</b>	Allows you to show or hide available DLNA Certified media servers. When in <b>Show/Hide Servers</b> menu, press <b>OPTIONS</b> to display the items below.
<b>Delete All</b>	Select to delete all connected servers.
<b>Update List</b>	Select to update the server list.
<b>Details</b>	Select to display the detailed information of the connected server.
<b>Delete</b>	Select to delete the highlighted server.
	 <ul style="list-style-type: none"><li>• The items above can only be accessed by pressing <b>OPTIONS</b> while in the <b>Show/Hide Servers</b> menu.</li></ul>
<b>Server Diagnostics</b>	Select to view the server diagnostic information.



## General Setup Settings

<b>Language</b>	Select the language of your choice from <b>English</b> , <b>Español</b> and <b>Français</b> to be used for displaying all the on-screen settings.
<b>Info Banner</b>	Displays the program name and the program information such as program title and program rating (if available from the broadcaster). Select the amount of program information to display when tuning.
<b>Small</b>	Select to display minimal channel and program information.
<b>Medium</b>	Select to display channel and program information.
<b>Large</b>	Select to display detailed channel and program information.
	 <ul style="list-style-type: none"><li>• <b>Info Banner</b> appears on the screen each time the channel and external inputs are changed or when <b>DISPLAY</b> on the remote control is pressed.</li></ul>
<b>USB Auto Start</b>	Select to automatically display photos when a camera is connected via USB.
<b>Slideshow</b>	Select to view JPEG files as a <b>Slideshow</b> .
<b>Thumbnail View</b>	Select to view JPEG files up to 60 thumbnails at a time.
<b>Off</b>	Select to disable this function.
	 <ul style="list-style-type: none"><li>• Press <b>HOME</b> on the remote control to exit this function.</li></ul>



<b>Home Menu Scrolling</b>	Adjust the navigation speed through menu items.
	<b>Standard</b> Select to scroll quickly with <b>▲/▼</b> buttons.
	<b>Mode 1</b> Select to scroll slowly with <b>▲/▼</b> buttons.
	<b>Mode 2</b> Select to scroll individually with repeated <b>▲/▼/◀/▶</b> button press.
<b>Power Saving</b>	<p>Reduces the power consumption by adjusting the backlight brightness. This also enhances the black level. Select from <b>Off</b>, <b>Low</b>, <b>High</b> and <b>Picture Off</b>.</p> <p></p> <ul style="list-style-type: none"> <li>While <b>Picture Off</b> is set, pressing <b>VOL +/-</b> or <b>MUTING</b> buttons will not disable this function. Press other buttons to disable it.</li> </ul>
<b>Light Sensor</b>	<p>Enables the automatic picture (screen) brightness control. The <b>Light Sensor</b> measures the room brightness which allows the TV to automatically adjust the backlight brightness based on the picture settings and the ambient room light conditions.</p> <p></p> <ul style="list-style-type: none"> <li>Be sure not to put anything around the sensor, as its function may be affected (see page 19).</li> <li>In low light the range of the backlight control is reduced when the <b>Light Sensor</b> is set to <b>On</b>.</li> </ul>
<b>PC Power Management</b>	<p>Select <b>On</b> to have the TV automatically enter standby mode when there is no signal input for more than 30 seconds. The <b>STANDBY</b> LED on the front panel illuminates with the <b>On</b> option. Select <b>Off</b> to disable this feature.</p> <p></p> <ul style="list-style-type: none"> <li>Press <b>POWER</b> to exit from standby mode.</li> <li><b>PC Power Management</b> is not VESA-compliant.</li> </ul>
<b>Logo Illumination</b>	Select <b>On</b> to illuminate the SONY logo on the front panel or select <b>Off</b> to disable this function.
<b>Picture Adjustments Lock</b>	Select <b>Lock</b> to prevent the picture adjustments from being changed. To disable this feature and allow picture adjustments, select <b>Unlock</b> .

## **Initial Setup** 1·2·3

If you missed the **Initial Setup** when you first connected the TV or if you want to scan all receivable channels, select **Initial Setup**. Follow the instructions on the screen. Some settings such as **Picture Adjustments**, **Sound Adjustments**, and **Parental Lock** will not be affected by this **Initial Setup**. If you wish to return your TV to factory settings, please see the Troubleshooting section on page 58.



- Favorite** channel list will be cleared each time you run the **Initial Setup**.



# Other Information


## Troubleshooting


 
If you have questions, service needs, or require technical assistance related to the use of your Sony TV, please visit our website or call one of the following numbers:

<http://www.sony.com/tvsupport> for US Support  
<http://www.sony.ca/support> for Canadian Support  
 1-800-222-SONY(7669) for US Support  
 1-877-899-SONY(7669) for Canadian Support

Condition	Explanation/Solution
<b>No picture</b>	
No picture	<ul style="list-style-type: none"> <li>Check the <b>Power Saving</b> settings (see page 53).</li> </ul>
Cannot receive any channels	<ul style="list-style-type: none"> <li>Make sure the power cord is connected securely.</li> <li>Turn on the power of the TV.</li> <li>Check cable/antenna connections.</li> <li>Make sure the <b>Signal Type</b> setting is correct for your TV signal source.</li> </ul>
TV is locked to one channel	<ul style="list-style-type: none"> <li>Perform <b>Auto Program</b> to add receivable channels that are not present in the TV's memory (see pages 16 and 47).</li> </ul>
Cannot receive or select channels	<ul style="list-style-type: none"> <li>Perform <b>Auto Program</b> to add receivable channels that are not present in the TV's memory (see pages 16 and 47).</li> <li>To receive or select cable channels, make sure that <b>Signal Type</b> in the <b>Channel</b> settings is set to <b>Cable</b> (see page 47). To receive or select UHF channels over an antenna, make sure <b>Signal Type</b> is set to <b>Antenna</b>.</li> </ul>
The TV turns off automatically	<ul style="list-style-type: none"> <li>Check if <b>Sleep Timer</b> is activated, or confirm the <b>Duration</b> setting of <b>Timer</b> (see page 41).</li> <li>Check <b>PC Power Management</b> in <b>General Setup</b> settings (see page 53).</li> </ul>
No picture from some video sources	<ul style="list-style-type: none"> <li>Check the connection between the optional video equipment and the TV.</li> <li>Press <b>INPUT</b> on the remote control (see page 23).</li> <li>Press <b>HOME</b> on the remote control. Select your desired input from the <b>External Inputs</b> list.</li> </ul>
<b>Poor picture</b>	
Picture quality not as good as viewed at the store	<ul style="list-style-type: none"> <li>Picture quality depends on the signal content. See Quick Setup Guide (supplied) to display the best possible picture for that signal.</li> </ul>
Broadcast HD formats have poor quality	<ul style="list-style-type: none"> <li>Content and signal quality are regulated by the signal provider. Many HD channels and content are actually upscaled versions of standard-definition broadcasts. The picture is affected by the quality of the signal received, which varies between channel and program.</li> <li>Confirm the picture quality by selecting <b>Signal Diagnostics</b> in the <b>Product Support</b> settings (page 41). Then select <b>Sample Image</b> (or <b>Additional Information</b> first). An HD image will display on the screen to confirm routine panel operation. If your normal picture quality is worse than this sample image, it is most likely due to the signal provided by the broadcaster.</li> </ul>
Double images or ghosts	<ul style="list-style-type: none"> <li>Check cable/antenna connections.</li> <li>Check the antenna location and direction.</li> <li>Set the <b>Motion Enhancer</b> to <b>Standard</b> or <b>Off</b> (see page 43).</li> </ul>
Only snow and noise appear on the screen	<ul style="list-style-type: none"> <li>Check if the antenna is broken or bent.</li> <li>Check if the antenna has reached the end of its serviceable life. (3-5 years in normal use, 1-2 years at the seaside.)</li> </ul>
Dotted lines or stripes	<ul style="list-style-type: none"> <li>Keep the TV away from noise sources such as cars, motorcycles, or hair-dryers.</li> <li>If using 300 ohm twin lead, move the excess lead away from the TV or try using 75 ohm coaxial cable instead.</li> </ul>

(Continued)

Condition	Explanation/Solution
No color / Dark picture / Color is not correct / The picture is too bright	<ul style="list-style-type: none"> <li>Press <b>PICTURE</b> to select the desired <b>Picture Mode</b> (see page 23).</li> <li>Adjust the <b>Picture Mode</b> options in the <b>Picture</b> settings (see page 42).</li> <li>If you set the <b>Power Saving</b> mode to <b>Low</b> or <b>High</b>, it will enhance the black level (see page 53).</li> </ul>
Noisy picture	<ul style="list-style-type: none"> <li>Make sure that the antenna is connected using a 75-ohm coaxial cable.</li> <li>Keep the antenna cable away from other connecting cords.</li> <li>To avoid TV interference, make sure to use an undamaged antenna cable.</li> </ul>
Blurry picture / Poor color	<ul style="list-style-type: none"> <li>Transporting the TV from a cold to a warm location or a sudden change in room temperature may cause moisture condensation, resulting in a blurry picture or poor color. Turn off your TV and wait a few hours before powering on again.</li> </ul>
<b>No sound / Noisy sound</b>	
No sound / Good picture	<ul style="list-style-type: none"> <li>Check the volume control.</li> <li>Press <b>MUTING</b> or <b>VOL +</b> so that “Muting” disappears from the screen (page 21).</li> <li>Set <b>Speakers</b> to <b>TV Speakers</b> in the <b>Sound</b> settings (see page 45). If it is set to <b>Audio System</b>, sound is not output from the TV’s speakers regardless of the TV’s volume control.</li> <li>When using HDMI input with Super Audio CD or DVD-Audio, DIGITAL AUDIO OUT (Optical) may not provide an audio signal.</li> <li>When tuned to a digital channel with <b>Alternate Audio</b>, the broadcaster may not be broadcasting your preferred <b>Alternate Audio</b> language. Press <b>OPTIONS</b>, highlight and select <b>Alternate Audio</b>, and change the <b>Alternate Audio</b> language (see page 45).</li> </ul>
Audio noise	<ul style="list-style-type: none"> <li>Make sure that the antenna is connected using a 75-ohm coaxial cable.</li> <li>Keep the antenna cable away from other connecting cords.</li> <li>To avoid TV interference, make sure to use an undamaged antenna cable.</li> </ul>
No Audio or Low Audio with Home Theater System	<ul style="list-style-type: none"> <li>Press <b>THEATER</b> for <b>BRAVIA® Sync™</b> activated Theater System (see page 20).</li> <li>Set <b>Speakers</b> to <b>Audio System</b> in the <b>Sound</b> settings (see page 45).</li> <li>Set <b>Audio Out</b> to <b>Fixed</b> in the <b>Sound</b> settings (see page 45).</li> </ul>
<b>BRAVIA Sync</b>	
Cannot find connected <b>BRAVIA Sync</b> HDMI device	<ul style="list-style-type: none"> <li>Make sure that the <b>Control for HDMI</b> is set up on both the TV and the optional device compatible with <b>BRAVIA Sync</b> (see page 37).</li> </ul>
Cannot control second AV receiver	<ul style="list-style-type: none"> <li>Only one A/V receiver may be used with the <b>BRAVIA Sync</b> and <b>Control for HDMI</b> functions at one time (see page 51).</li> </ul>
<b>DLNA Certified™ Photo Media Player</b>	
DLNA Certified™ Photo Media Player is not connecting to the server	<ul style="list-style-type: none"> <li>Check the LAN cable/connection to your server and your TV.</li> <li>Check if your network is properly configured on your TV. See <b>Network Setup</b> on page 52.</li> </ul>
When “Network disconnected” appears on your TV screen	<ul style="list-style-type: none"> <li>Check the current network settings. From the <b>Network</b> icon located on the <b>XMB™</b>, select <b>Network Setup</b>, then the <b>Review</b> option. If all of your network settings are 0.0.0.0, your server may not be connected properly. Check your network connections and/or server’s instruction manual for connection information.</li> <li>Reconfigure your network settings. See <b>Network Setup</b> on page 52.</li> <li>If the LAN cable is connected to an active server and the TV has acquired an IP Address, check your DLNA Certified media server’s connections and configurations.</li> </ul>
	 <ul style="list-style-type: none"> <li>Your IP Address configuration can be viewed by selecting the <b>Review</b> option. See <b>Network Setup</b> on page 52.</li> </ul>
DLNA Certified™ server is listed under the <b>Photo</b> icon, but is inaccessible	<ul style="list-style-type: none"> <li>The TV may have lost connection with the server, check your LAN cable/connection or your server connections.</li> </ul>

Condition	Explanation/Solution
<b>PC Input</b>	
No picture / No signal	<ul style="list-style-type: none"> <li>• Confirm the PC is correctly connected to the TV with either the PC IN (with an HD15 cable) or with the HDMI IN.</li> <li>• Ensure the output signal from the PC is one of the formats listed on page 14.</li> <li>• Turn the PC off. Confirm the PC connection and restart the PC. Plug-and-play will auto-detect the TV and correctly set up PC timing.</li> <li>• Verify <b>PC Power Management</b> is activated (see page 53).</li> <li>• Verify the PC is not in standby or hibernation mode.</li> </ul>
Poor Picture	<ul style="list-style-type: none"> <li>• Adjust the resolution (see page 14).</li> <li>• Adjust <b>Pitch</b> and <b>Phase</b>.</li> </ul>
<b>General</b>	
<b>Wide Mode</b> changes automatically	<ul style="list-style-type: none"> <li>• The current <b>Wide Mode</b> setting is automatically replaced with the <b>4:3 Default</b> setting when you change the channel or video input, if <b>4:3 Default</b> in the <b>Screen</b> settings is set to other than <b>Off</b>. If you want to lock in <b>Wide Mode</b> selected with <b>WIDE</b> on the remote control, set <b>4:3 Default</b> to <b>Off</b> in the <b>Screen</b> settings (see page 45).</li> <li>• Check the <b>Auto Wide</b> option in the <b>Screen</b> settings (see page 45).</li> </ul>
Suddenly the picture gets smaller 	<ul style="list-style-type: none"> <li>• The picture gets smaller during the commercials due to the method in which the provider broadcasts their content. When HD content channels switch to SD content (commercials), the picture may be small with a black border.</li> <li>• <b>Auto Wide</b> will not expand the picture during these content changes since the content information is regulated by the channel signal provider. You can manually change the <b>Wide Mode</b> if you prefer (see page 22). This setting will remain in effect until you change the channel or input or manually change the <b>Wide Mode</b> again.</li> </ul>
“Black box” on screen	<ul style="list-style-type: none"> <li>• You have selected a text option and no text is available (see page 48). To turn off this feature, set the <b>CC Display</b> option to <b>Off</b>. If you were trying to select closed captioning, select <b>CC1</b> instead of <b>Text1-4</b>.</li> </ul>
Black bands appear at the edges of the screen 	<ul style="list-style-type: none"> <li>• Some wide screen programs are filmed in aspect ratios that are greater than 16:9 (this is especially common with theatrical releases). Your TV will show these programs with black bands at the top and bottom of the screen. For more details, check the documentation that came with your DVD (or contact your program provider).</li> <li>• Programs in 4:3 aspect ratio will have bands on left and right sides of the screen.</li> <li>• Programs broadcasted in HD formats (720p and 1080i) with 4:3 content will commonly have black bands on the left and right sides of the screen which are added by the broadcaster (see image on left).</li> <li>• <b>Auto Wide</b> will not expand the picture when the black bands on the sides of the screen are added by the broadcaster. You can manually change the <b>Wide Mode</b> to <b>Wide Zoom</b>, <b>H Stretch</b> or <b>Zoom</b> to fill the screen, which will remain in affect until you change the channel or input or manually change the <b>Wide Mode</b> again.</li> </ul>
Certain programs on DVD or other digital sources display a loss of detail, especially during fast-motion or dark scenes	<ul style="list-style-type: none"> <li>• This is due to the digital compression of the source content used by certain digital broadcasts and DVDs which may cause your TV's screen to display less detail than usual, or cause artifacts (small blocks or dots, pixelations) to appear on your screen. These signal compressions are more visible and are dependent on the clarity and resolution of the TV.</li> </ul>
Remote control does not operate	<ul style="list-style-type: none"> <li>• To determine if the problem is with the remote control or not, press a button on the TV.</li> <li>• Check the polarity of the batteries or replace the batteries.</li> <li>• Point the remote control at the remote control sensor located at the front of the TV.</li> <li>• Keep the remote control sensor area clear from obstacles.</li> <li>• Fluorescent lamps can interfere with your remote control operation; try turning off the fluorescent lamps.</li> </ul>

(Continued)

Condition	Explanation/Solution
Some digital cable channels are not being displayed	<ul style="list-style-type: none"> <li>• Certain cable companies have limitations on the broadcast of digital cable channels. Check with your cable company for more information.</li> <li>• The digital cable channel may be set to <b>Hidden</b> in the <b>Show/Hide Channels</b> setting (see page 47).</li> </ul>
Some photo files or music files are not displayed from my USB equipment or DLNA Certified media server	<ul style="list-style-type: none"> <li>• The accessible file or folder limit in a directory is 1,000 for USB and 30,000 for a DLNA Certified media server. This limit includes non-JPEG, MP3 files or just folders. Files or folders are populated based on their time stamps. Photo, music files or folders exceeding the limit will not be displayed.</li> </ul>
Photo images appear small in the screen	<ul style="list-style-type: none"> <li>• Set <b>Display Size</b> to <b>Expanded</b> (see page 32).</li> <li>• Whether or not photo images can or cannot be displayed in full-screen depends on the resolution or aspect ratio of the file.</li> </ul>
Photo images or folders take time to display	<ul style="list-style-type: none"> <li>• Depending on the image dimension, file size, and number of files in a folder, some photo images or folders take time to display.</li> <li>• The first time a camera is connected to the TV via USB cable, it may take up to a couple of minutes for the photos to display.</li> </ul>
Lost password	<ul style="list-style-type: none"> <li>• Select the <b>Password</b> settings on the <b>Parental Lock</b> settings, then enter the following master password: 4357. This password clears your previous password and allows you to enter a new password (see page 48).</li> </ul>
How to reset the TV to factory settings	<ul style="list-style-type: none"> <li>• Turn on the TV. While holding down <b>▲</b> on the remote control, press <b>POWER</b> on the TV. (The TV will turn itself off, then back on again.) Release <b>▲</b>. WARNING: The reset will clear all of your customized settings including the <b>Parental Lock</b> setting.</li> </ul>
TV screen feels warm	<ul style="list-style-type: none"> <li>• Due to the thin profile of this television, the heat generated by the LCD panel backlight and supporting electronics will be more noticeable. This is normal operation and not a cause for concern.</li> </ul>

# Specifications

Model	KDL-40VL160		KDL-46VL160
System			
Television system	NTSC: American TV standard ATSC (8VSB terrestrial): ATSC compliant 8VSB QAM on cable: ANSI/SCTE 07 2000 (Does not include CableCARD functionality)		
Channel coverage	Analog terrestrial: 2 - 69 / Digital terrestrial: 2 - 69 Analog Cable: 1 - 135 / Digital Cable: 1 - 135		
Panel system	LCD (Liquid Crystal Display) Panel		
Speaker output	10 W + 10 W		
Input/Output jacks			
CABLE/ANTENNA	75-ohm external terminal for RF inputs		
VIDEO IN 1/2/3	S VIDEO (4-pin mini DIN) (VIDEO 1 only): Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative / C: 0.286 Vp-p (Burst signal), 75 ohms VIDEO: 1 Vp-p, 75 ohms unbalanced, sync negative AUDIO: 500 mVrms (Typical) / Impedance: 47 kilohms		
COMPONENT IN 1/2	YPbPr (Component Video): Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative / PB: 0.7 Vp-p, 75 ohms / PR: 0.7 Vp-p, 75 ohms / Signal format: 480i, 480p, 720p, 1080i, 1080p AUDIO: 500 mVrms (Typical) / Impedance: 47 kilohms		
HDMI IN 1/2/3/4	HDMI: Video: 480i, 480p, 720p, 1080i, 1080p, 1080/24p / Audio: Two channel linear PCM 32, 44.1 and 48 kHz, 16, 20 and 24bits, Dolby Digital AUDIO (HDMI IN 4 only): 500 mVrms (Typical) / Impedance: 47 kilohms		
AUDIO OUT	500 mVrms (Typical)		
DIGITAL AUDIO OUT (OPTICAL)	PCM/Dolby Digital optical signal		
PC IN	D-sub 15-pin, analog RGB, 0.7 Vp-p, 75 ohms, positive See the PC Input Signal Reference Chart on page 14.		
PC AUDIO INPUT	Stereo mini jack, 500 mVrms, (Typical) / Impedance: 47 kilohms		
LAN (10/100)	10 BASE-T/100 BASE-TX Connector (connection speed may vary depending on the network environment. This product does not guarantee network quality or speed of 10 BASE-T/100 BASE-TX terminals.)		
DMPort	VIDEO: 1 Vp-p, 75 ohms unbalanced, sync negative AUDIO: 500 mVrms (Typical) / Impedance: 47 kilohms		
USB	Hi-Speed USB		
Power and others			
Power requirement	120-240 V AC, 50/60 Hz		
Power consumption			
in use	255 W	285 W	
in DAM*	All models less than 30 W (You may hear a clicking noise during the download but this is normal.)		
in standby	All models less than 0.1 W with 120 V AC and all models with 240 V AC less than 0.4 W*		
Screen size (inches measured diagonally)	40	46	
Display resolution	1,920 dots (horizontal) × 1,080 lines (vertical)		
Speaker/Full range (2) (mm) (inches)	45 × 200 1 3/4 × 7 7/8	45 × 200 1 3/4 × 7 7/8	
Dimensions			
with stand (mm) (inches)	944 × 654 × 279 37 1/4 × 25 3/4 × 11	1,079 × 734 × 307 42 1/2 × 29 × 12 1/8	
without stand (mm) (inches)	944 × 608 × 72 37 1/4 × 24 × 2 7/8	1,079 × 686 × 74 42 1/2 × 27 1/8 × 3	
wall-mount hole pattern (mm)	300 × 300	300 × 300	
wall-mount screw size (mm)	M6 (length: refer to diagram on page 7)		
Mass with stand (kg) (lb.)	21.5 48.0	26.0 58.0	
without stand (kg) (lb.)	18.0 40.0	22.0 49.0	
Supplied accessories	Remote control RM-YD024 (1) / Size AA batteries (2) / AC power cord (1) / Cable holder (1 attached to the Table-Top Stand) / Operating Instructions (1) / Quick Setup Guide (1) / Warranty Card (1) / Safety and Regulatory Booklet (1) / Attaching the Table-Top Stand (1) / Screws (4)		
Optional accessories	Connecting cables / Support Belt Kit / Wall-Mount Bracket: SU-WL500 / TV Stand: see page 2		

\*DAM mode is used for software updates and/or collecting data for TV Guide On Screen.



- Optional accessories availability depends on its stock.
- Design and specifications are subject to change without notice.

# Index

0-9 buttons 21  
4:3 Default 46

## A

AC IN 11  
Add Digital Channels 47  
Add for Slideshow 34  
Add to Favorites 32, 34  
Advanced Settings 43  
Analog CC 48  
Audio Out 45  
AUDIO OUT jack 11  
Auto Adjust 46  
Auto Program 47  
Auto Wide 45

## B

Background TV 30  
Backlight 42  
Balance 44  
Bass 44  
BD/DVD MENU button 21  
BD/DVD TOP MENU button 21  
Bilingual audio 45  
Brightness 42

## C

CABLE/ANTENNA input 11  
CC button 23  
CC Display 48  
CH +/- button 24  
Channel Block 49  
Channel Tuning Keys 51  
CineMotion 43  
Color 42  
Color Temperature 42  
COMPONENT IN jack (1080p/1080i/  
720p/480p/480i) 11  
Contact Sony 41  
Control for HDMI 51  
Country 48  
Current Time 41

## D

Device Auto Power Off 51  
Device List 51  
DIGITAL AUDIO OUT (OPTICAL)  
jack 11  
Digital CC 48  
Digital Rating 49  
Display Area 46  
DISPLAY button 20  
Display Options 48  
DMe<sup>x</sup> button 20  
DMe<sup>x</sup>/SERVICE 11  
DVR/VCR Record Buttons 21

## E

Edit Channel Labels 47  
English Rating 50  
ENT button 21  
Equipment Control/BRAVIA Sync 20

## F

F1/F2 button 24  
Favorites 29  
FAVORITES button 21  
File Actions 32  
File Order 32, 34  
FREEZE button 23  
French Rating 50  
FUNCTION buttons 20

## G

Game Mode 44  
GUIDE button 21

## H

H Center 46  
HDMI IN jack 11  
HOME button 21  
Home Menu Scrolling 53  
Hue 42

## I

Info Banner 52  
Information 32, 34  
Infrared Receiver (IR) 25  
INPUT button 23  
Installing the TV on a wall 7

## J

JUMP button 24

## L

Language 52  
LIGHT button 20  
Light Sensor  
Described 25  
Setting 53  
Logo Illumination 53

## M

Manage Inputs 51  
Motion Enhancer 43  
Movie Rating 50  
MPEG Noise Reduction 42  
MTS 45  
Music 33  
MUTING button 21

## N

Network Setup 52  
Noise Reduction 42

## O

Omit from Slideshow 34  
OPTIONS button 23

## P

P&P 38  
Password 48  
PC IN jack 11  
PC Power Management 53  
Phase 46  
Photo 31  
Photo Settings 32  
PIC OFF/TIMER LED 25  
Picture 42  
Picture Adjustments 33, 42  
Picture Adjustments Lock 53  
PICTURE button 23  
Picture Mode 42  
PIP 38  
Pitch 46  
Playback Method 32, 34  
POWER button 22  
POWER LED 25  
Power Saving 53

## R

Rating 49  
Remote control  
programming 26  
Remove from Favorites 32, 34  
Reset 42, 44, 46, 58  
RETURN button 21

## S

S VIDEO jack 11  
Screen Position 46  
Server Diagnostics 52  
Settings  
Channel 47  
Clock/Timers 41  
Closed Captions (CC) 48  
External Inputs 51  
General Setup 52  
HDMI Settings 51  
Initial Setup 53  
Network 52  
Parental Lock 48  
Picture 42  
Product Support 41  
Screen 45  
Sound 44  
Sharpness 42  
Show/Hide Channels 47  
Show/Hide Servers 52  
Signal Diagnostics 41  
Signal Type 47  
Sleep Timer 41  
Software Update 41  
Sound Adjustments 33, 44  
Sound Booster 44  
SOUND button 20  
Sound Mode 44  
Speaker 25  
Speakers 33, 45  
STANDBY LED 25  
Start Slideshow 32



Steady Sound 44  
Surround 44

## **T**

Thumbnail View 32, 34  
Timer 41  
Treble 44  
Troubleshooting 55–58  
TV Auto Power On 51  
TV Guide On Screen 35  
TV POWER button 22  
TV Rating 50

## **U**

U.S.A. Rating 50  
Unrated 49  
USB Auto Start 52

## **V**

V Center 46  
Vertical Size 46  
VIDEO IN jack 11  
Video/Photo Optimizer 44  
View 32  
Voice Zoom 44  
VOL +/- button 21  
Volume Offset 44

## **W**

WIDE button 22  
Wide Mode 45, 46





## For Your Convenience

### Online Registration:

Be sure to register your TV.

**United States** <http://productregistration.sony.com>  
**Canada** <http://www.SonyStyle.ca/registration>



**Recycled**  
Supporting responsible  
use of forest resources

Cert no. SCS-COC-001395  
[www.fsc.org](http://www.fsc.org)  
© 1996 Forest Stewardship Council

<http://www.sony.net/>

Printed in U.S.A

4-146-178-11(1)



4 1 4 6 1 7 8 1 1 1