

Quick Setup Guide

Please follow the steps to setup your TV:

- 1

Checking the Supplied Accessories
- 2

Connecting Your TV
(See reverse side)
- 3

Running Initial Setup
- 4

Programming the Remote Control

If your product is not working properly
DO NOT RETURN TO THE STORE.
For service and technical assistance
Call our Customer Information Service Center (Toll Free):
1-877-899-SONY (7669) for Canadian residents.

3 Running Initial Setup

- 1

Press POWER to turn on the TV.
The Initial Setup screen appears.
- 2

Press or to select the on-screen display language. Then press .
The message “First please connect cable/antenna” appears.
- 3

By default, Auto Program is set to scan cable TV channels.
- 3

Press CH+ to start Auto Program.

Auto Program automatically creates a list of receivable channels. When finished, the lowest numbered channel is displayed. When all the receivable channels are stored, the “Show/Hide Channels” settings appear.

To scan available VHF/UHF antenna channels instead of the cable TV channels

- 1

Select Settings in WEGA GATE, then go to Channels settings.
- 2

Set Cable to Off.
- 3

Start Auto Program by pressing CH+.

To perform Auto Program again, follow the above instructions. Depending on your signal source, be sure to set Cable to On or Off accordingly (see Operating Instructions).


The Initial Setup menu will appear each time the TV is turned on until you complete the scanning for the available channels.

1 Checking the Supplied Accessories

- Remote control (RM-YA001) (1) and size AA batteries (2)
- 75-ohm coaxial cable (ferrite core attached) (1)
- AC power cord (1)
- HD15-HD15 cable (1)
- Support belt (1), securing screw (1) and wood screw (1)
- Operating Instructions (1)
- Quick Setup Guide (1)
- Leaflet (Installing the Wall-Mount Bracket) (1)
- Warranty Card (1)

Inserting Batteries into the Remote Control

Insert two size AA batteries (supplied) by matching the and on the batteries to the diagram inside the remote control’s battery compartment.

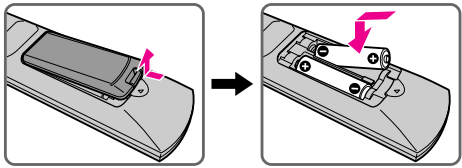

4 Programming the Remote Control

The remote control is preset to operate Sony brand video equipment.

Sony Equipment	Programmable Code Number
DVD/VCR	601 (Sony Dream System)
SAT/Cable	801 (Sony Satellite Receiver)

Follow the steps below to program your TV’s remote control to operate the other video equipment.

Using the code list on the right, find the three-digit code number for the manufacturer of your equipment. (If more than one code number is listed, use the number listed first.)

- 1

Press and hold the or FUNCTION button you want to program on the remote control and press the button simultaneously. The selected FUNCTION button (DVD/VCR or SAT/CABLE) will flash.
- 2

Enter the three-digit manufacturer’s code number using the buttons while the button is lit, approximately 10 seconds.
- 3

Press button.
When the programming is correct, the selected FUNCTION button will flash twice slowly, and when not, flashes five times quickly.

To check if the code works

Aim your TV’s remote control at the equipment, and press the green POWER button. If the equipment responds, the programming is completed. If not, try the next code listed.

- ⚠

If no code is input within the above specified time, or an invalid or incorrect code number is input, the remote control automatically goes back to the previous setting.
- ⚠

In some cases, you may not be able to program your remote control to operate other equipment. In such cases, use the equipment’s own remote control.
- ⚠

Dead batteries or removing the batteries may cause the programmable codes to be lost and revert back to factory settings. Reprogramming the codes may be necessary.

2 Connecting Your TV

- Review the following chart to determine which diagram to use to connect the components in your system:

For these components	See reverse side
OR	A
OR	B
OR	C
OR	D
OR	E
OR	F

- See the “Cables Required” chart that appears with the diagram to determine which cables you’ll need. You may need to purchase extra accessories, such as cables and splitters, depending on the components you plan to connect.
- Turn off and unplug all components before making connections.
- If you are connecting a digital cable box, you’ll need a special bi-directional splitter that’s compatible with your cable box. Contact your cable provider for details.

Manufacturer’s Codes

DVD Players

Manufacturer	Code
Sony	751
General Electric	755
Hitachi	758
JVC	756
Magnavox	757
Mitsubishi	761
Panasonic	753
Philips	757
Pioneer	752
RCA/PROSCAN	755
Samsung	758
Toshiba	754
Zenith	760

DVD Changers

Manufacturer	Code
Sony	765
Panasonic	766

DVD/VCR Combo Units

Manufacturer	Code
Sony	767
Zenith	768
Toshiba	773
Samsung	774
JVC	775
Broksonic	776
Panasonic	777

HDD/DVD Combo Units

Manufacturer	Code
Sony	770, 771, 772

5.1ch DVD AV System

Manufacturer	Code
Sony (DAV)	601, 602, 603, 604

AV Receivers

Manufacturer	Code
Sony	764

VCRs

Manufacturer	Code
Sony	301, 302, 303
Admiral (M. Ward)	327

Manufacturer Code

Aiwa*	338, 344
Audio Dynamic	314, 337
Broksonic	319, 317
Canon	309, 308
Citizen	332
Craig	302, 332
Curtis Mathes	304, 338, 309
Daewoo	341, 312, 309
DBX	314, 336, 337
Dimensia	304
Emerson	319, 320, 316, 317, 318, 341
Fisher	330, 335
Funai	338
General Electric	329, 304, 309
Go Video	322, 339, 340
Goldstar	332
Hitachi	306, 304, 305, 338
Instant Replay	309, 308
JC Penney	309, 305, 304, 330, 314, 336, 337
JVC	314, 336, 337, 345, 346, 347
Kenwood	314, 336, 332, 337
LG	332
LXI (SEARS)	332, 305, 330, 335, 338
Magnavox	308, 309, 310
Marantz	314, 336, 337
Marta	332
Memorex	309, 335
Minolta	305, 304
Mitsubishi/MGA	323, 324, 325, 326
Multitech	325, 338, 321
NEC	314, 336, 337
Olympic	309, 308
Optimus	327
Orion	317
Panasonic	308, 309, 306, 307
Pentax	305, 304
Philco	308, 309
Philips	308, 309, 310
Pioneer	308
Quasar	308, 309, 306
RCA/PROSCAN	304, 305, 308, 309, 311, 312, 313, 310, 329
Realistic	309, 330, 328, 335, 324, 338
Sansui	314
Samsung	322, 313, 321
Sanyo	330, 335

Manufacturer Code

Scott	312, 313, 321, 335, 323, 324, 325, 326
Sharp	327, 328
Signature 2000 (M. Ward)	338, 327
SV 2000	338
Sylvania	308, 309, 338, 310
Symphonic	338
Tashiro	332
Tatung	314, 336, 337
Teac	314, 336, 338, 337
Technics	309, 308
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	314, 330, 336, 337
Zenith	331

Cable Boxes

Manufacturer	Code
Sony	230
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/G.I./ Motorola	201, 202, 203, 204, 205, 206, 207, 208, 218, 222
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213


Satellite Receivers

Manufacturer	Code
Sony	801
Dish Network	810
Echostar	810
General Electric	802
Hitachi	805
Hughes	804
Mitsubishi	809
Panasonic	803
RCA/PROSCAN	802, 808
Toshiba	806, 807
Philips	811
Samsung	812

* If an Aiwa VCR does not work even though you enter the code for Aiwa, enter the code for Sony instead.

Making Video Connections

Your TV includes several types of video inputs. Use the inputs that are available on your components that provide the best video performance, as shown in the table on the right.

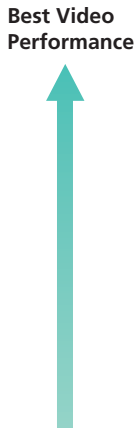

Connector type
HDMI* (High-Definition Multimedia Interface)
Component video*
S VIDEO
Composite video
RF/Coaxial

* Support 480i, 480p, 720p, 1080i

Additional Connections

For best audio performance, connect your digital audio components using either digital optical or digital coaxial audio connections. Depending on which components are in your system, you may need to complete additional connections. For example, if you have a satellite receiver, you’ll need to connect the satellite antenna. If you have an A/V receiver, you’ll need to connect speakers.


- ⚠

The connection diagrams shown on the reverse side are recommendations only; other possible solutions may exist. Connections that include an A/V receiver can often be very complex, so check your A/V receiver’s instruction manual for additional details.
- ⚠

See the Operating Instructions when connecting to a personal computer.

Enjoy your new TV with WEGA GATE


The WEGA GATE button on your remote control is a new feature that allows you to easily navigate to the most convenient TV functions such as Favorite Channels, TV Channel List, External Input list or Settings. The TV’s main menu is found under Settings.

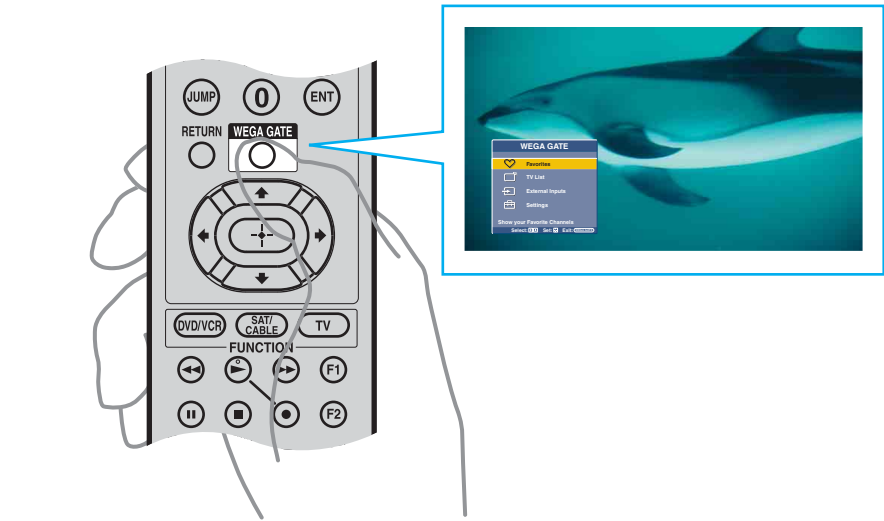

To adjust Settings related to Video, Audio, Screen, Channel, Parent (V-chip), Clock/Timers or to set up certain features on your TV, press then select “Settings” on the WEGA GATE control panel.

A

Use this diagram if you have;

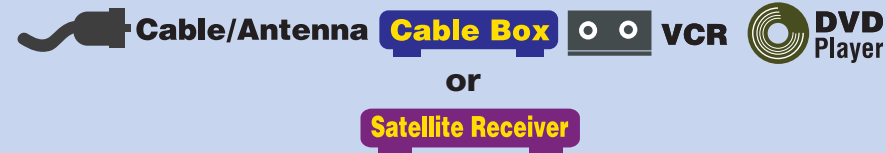


Cables Required

Splitter	1
Coaxial	4
Composite	2
Component	1
Audio	1

If your DVD player or satellite receiver has an HDMI jack, use that instead of the video connections shown here.

If you are not using a cable box or satellite receiver, connect your cable or antenna to the VCR's RF IN jack.

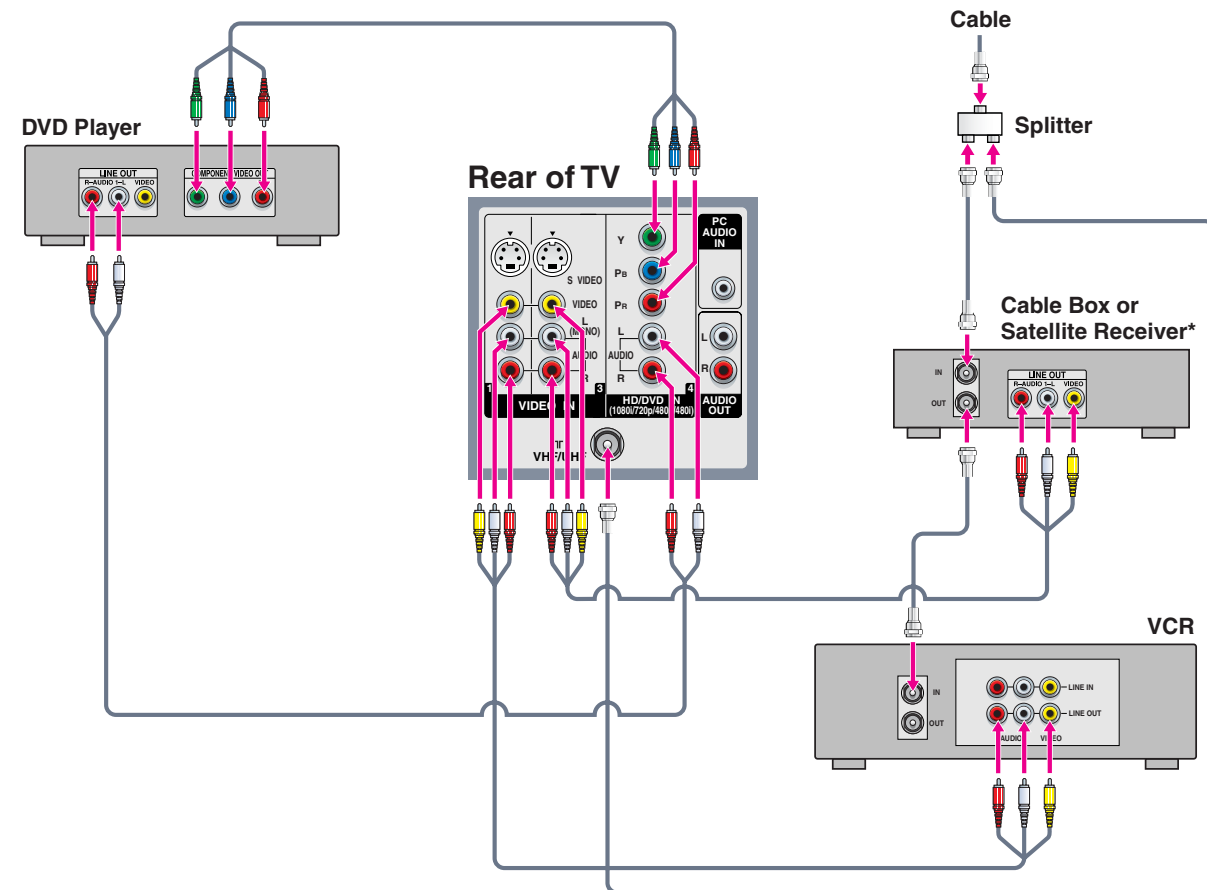

B

Use this diagram if you have;




Cables Required

Splitter	1
Coaxial	4
Composite	3
Component	1
Audio	2

If your DVD player or satellite receiver has an HDMI jack, use that instead of the video connections shown here.

If you are not using a cable box or satellite receiver, connect your cable or antenna to the VCR's RF IN jack.

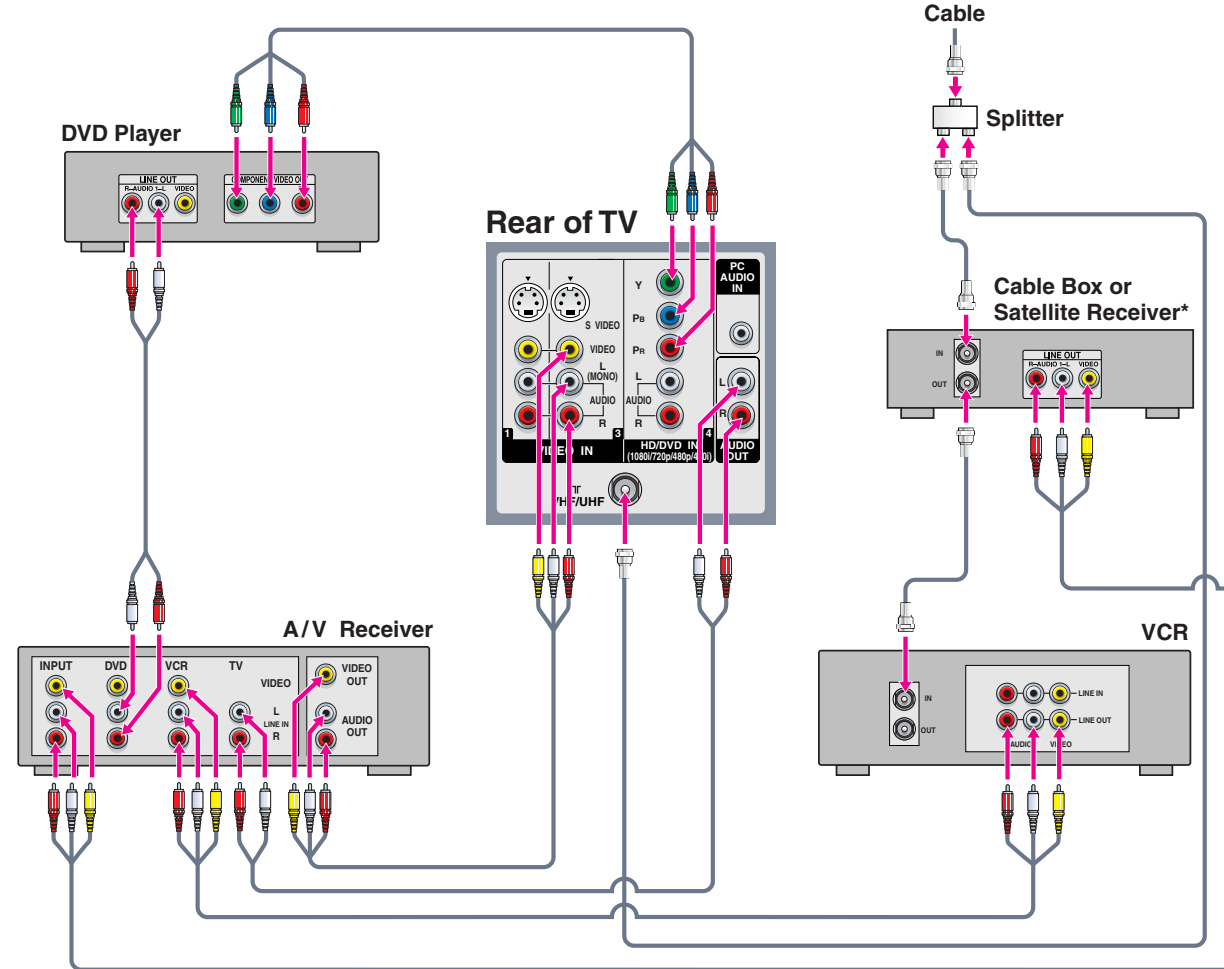

C

Use this diagram if you have;




Cables Required

Splitter	1
Coaxial	6
Composite	3
Component	1
HDMI	1
Audio	1

The DVI-HDTV VIDEO connector does not provide audio, so audio cables must be connected to provide sound when a DVI to HDMI adaptor is used.

If you are not using a cable box, connect your cable or antenna to the VCR's RF IN jack.

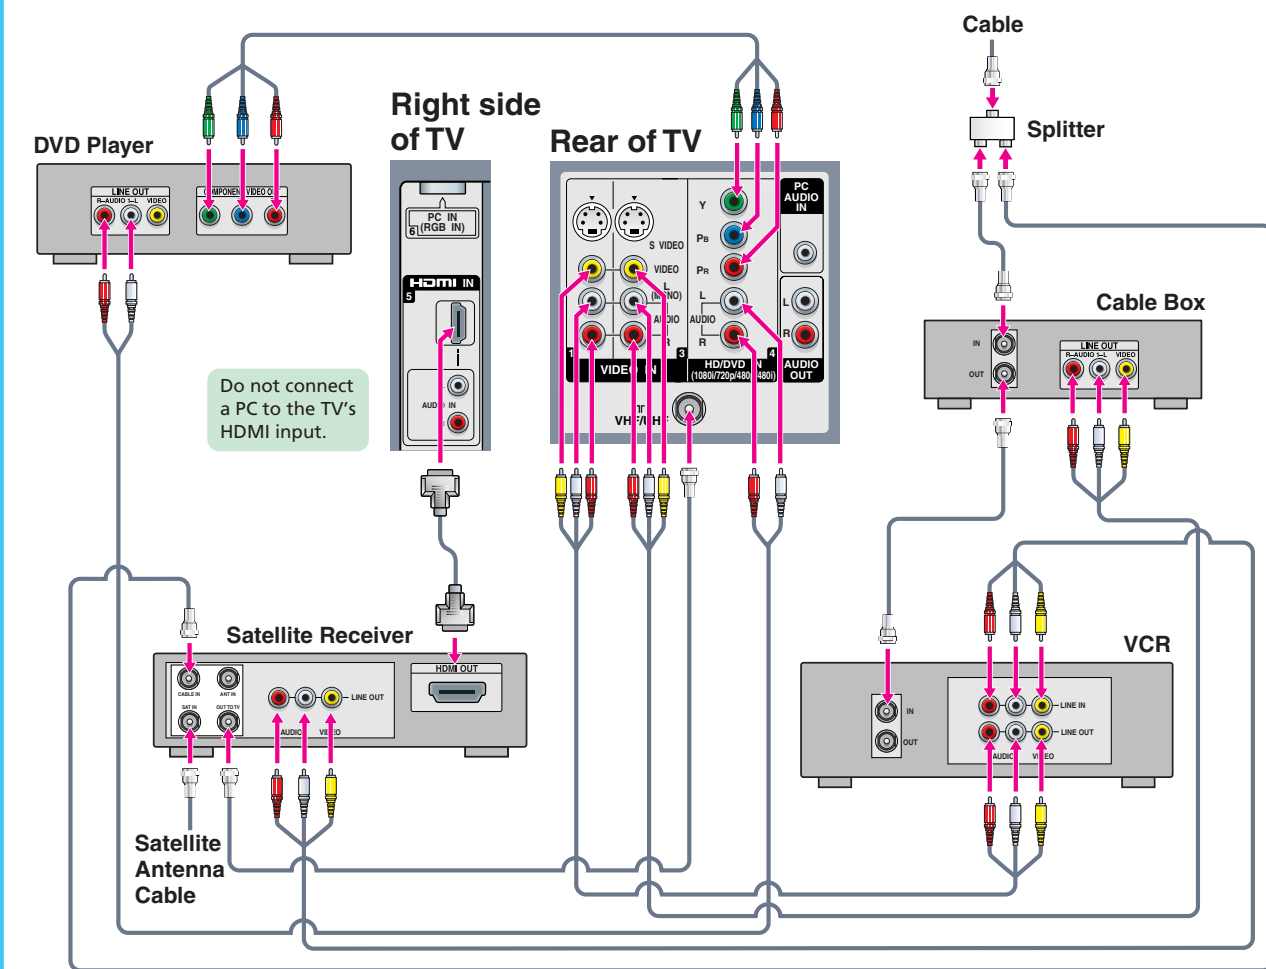

D

Use this diagram if you have;




Cables Required

Splitter	1
Coaxial	3
Composite	3
Component	1
Audio	2


If your DVD player or satellite receiver has an HDMI jack, use that instead of the video connections shown here.

If you are not using a cable box or satellite receiver, connect your cable or antenna to the VCR's RF IN jack.

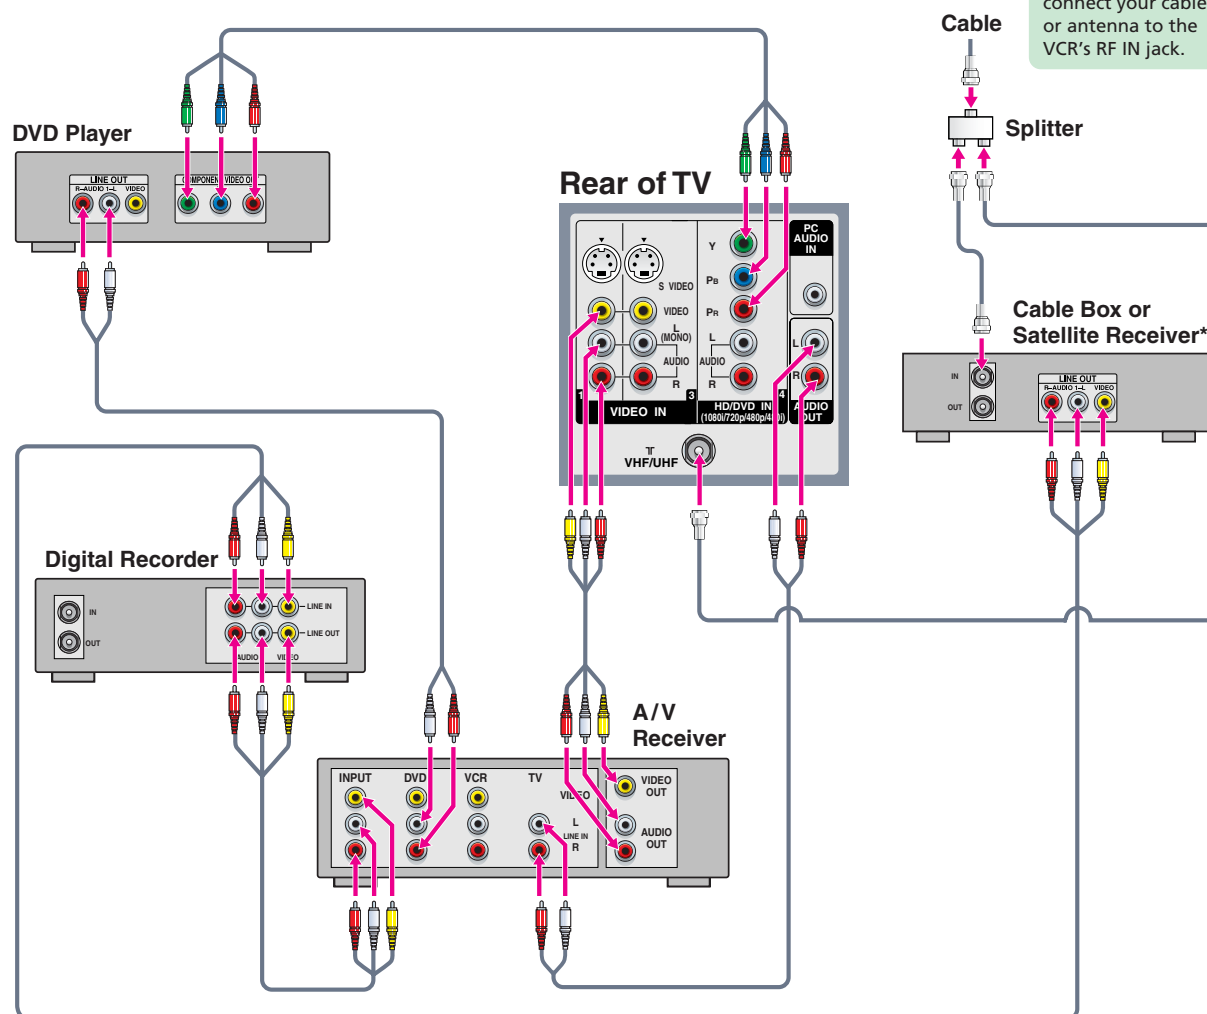

E

Use this diagram if you have;

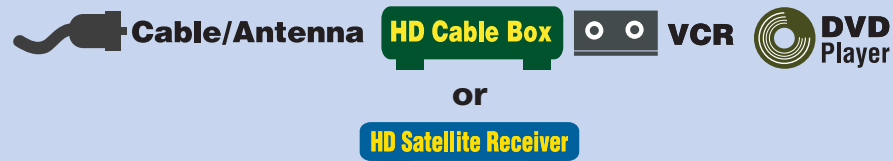


Cables Required

Splitter	1
Coaxial	3
Composite	2
Component	1
HDMI	1
Audio	1


The DVI-HDTV VIDEO connector does not provide audio, so audio cables must be connected to provide sound when a DVI to HDMI adaptor is used.

If your cable box has a DVI jack, use that instead of the video connections shown here.

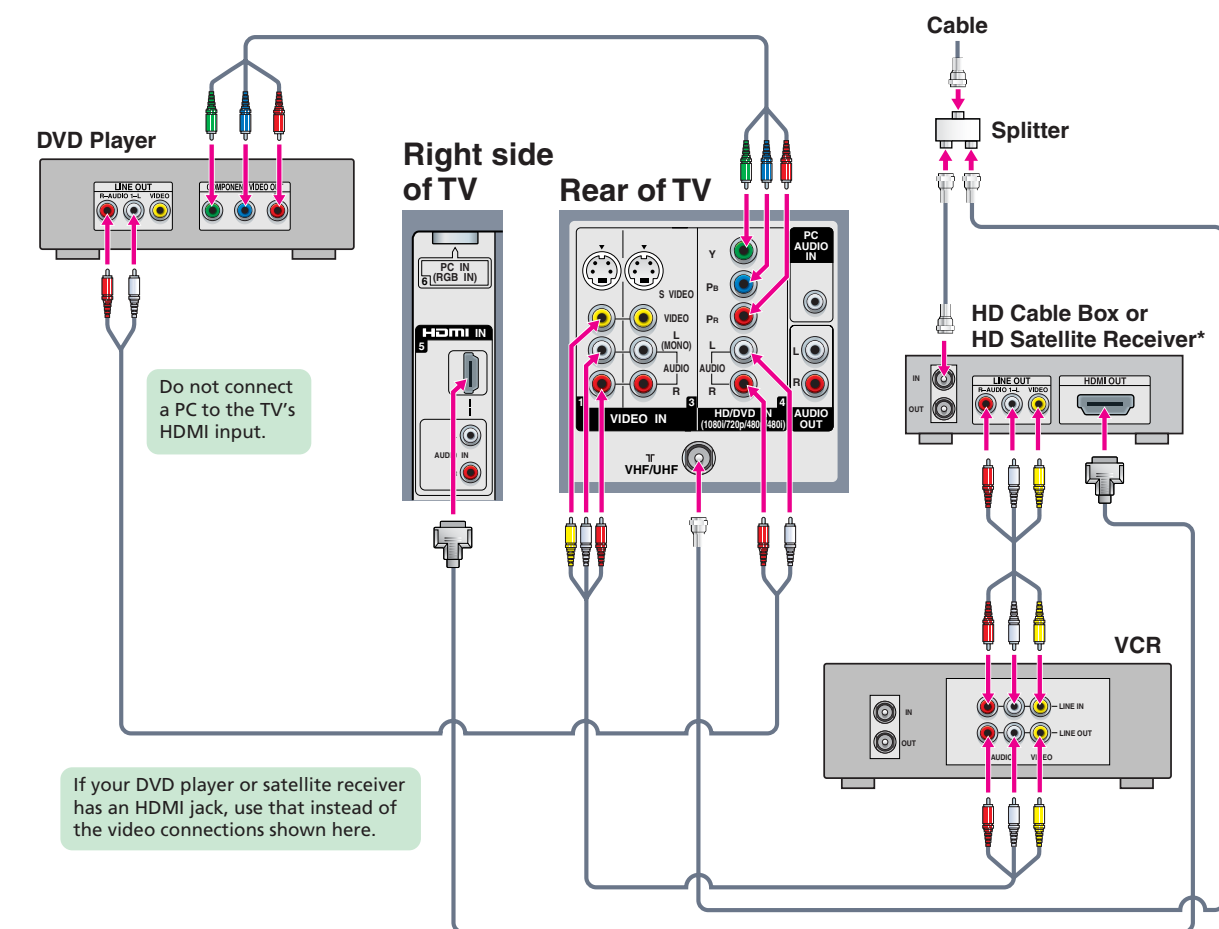

F

Use this diagram if you have;

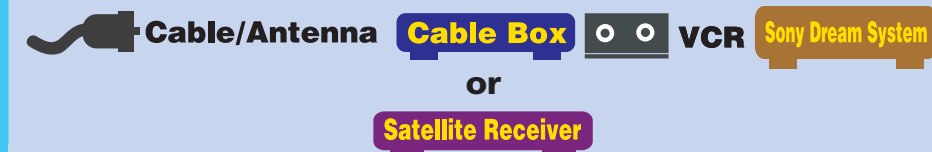

Cables Required

Splitter	1
Coaxial	4
Composite	2
Component	1
(without Audio)	1
Component	1

If you are not using a cable box or satellite receiver, connect your cable or antenna to the VCR's RF IN jack.

