

KDL-26M3000 **KDL-26ML130** KDL-32M3000 **KDL-32ML130 KDL-37M3000** 

## **Quick Setup Guide**

For further information, see the Operating Instruction Manual supplied with the TV Please retain this guide for your future reference.

#### Please contact Sony directly if you have questions on the use of your television after reading your Quick Setup Guide and Operating Instruction Manual.

**For Your Convenience** 

Contact Sony Customer Support at:

http://www.sony.com/tvsupport

Or to speak with a support representative:

**United States** Canada 1-800-222-SONY (7669) 1-877-899-SONY (7669)

Please Do Not Return the Product to the Store

©2007 Sony Corporation Printed in U.S.A.

## **Running Initial Setup**

**Initial Setup** instructions are displayed on the screen when your BRAVIA<sup>™</sup> is powered on for the first time.

**1** Select the language for the OSD (on screen display)



**2** Connect either **Cable** or **Antenna** to your TV (you can connect both using an A-B RF switch). If you connect **Cable**, the TV will scan



you want to use air signals, plea low 50+ minutes for completion

cable channels. After this scanning, you can search antenna channels as well. Ø. If you have Cable and Antenna connection available, please connect Cable first. If you are not using the VHF/UHF/CABLE connection to TV, you can cancel the Auto

**Program** by selecting **No**. **3** Your TV will detect the type of signal connected and will start scanning for the channels.





search antenna channels.

## Your New **BRAV Flat-panel LCD HDTV**

Congratulations! Your new BRAVIA<sup>™</sup> TV opens the door to the "Stunning HD Experience". This guide will explain how to get the most from your new High Definition TV.

Learn more. Visit the Sony HDTV Learning Center www.sony.com/HDTV

- Please take these steps before you power up your BRAVIA<sup>™</sup>:
  - www.sony.com/registration (from U.S.A.)
  - www.SonyStyle.ca/registration (from Canada)
- Make sure you've removed all accessory contents from packaging.
- Install 2 AA batteries (supplied separately) in your remote control.
- Determine whether you will hang your TV on a wall or place it on a floor stand. Sony wall mounting brackets are designed to provide the best fit.
- Give your TV 2 3/8 inches (6 cm) of space behind it to properly ventilate.

#### The Four Steps to a Stunning HD Experience: Set, Sound, Source, and Setup

Along with your BRAVIA<sup>™</sup> TV set, a complete HD system requires an HD sound system, a source of HD content, and proper setup connection with components such as your HD cable or satellite box.

#### You must get HD programming to experience the stunning detail of HDTV.

The quality of the image you see on your BRAVIA<sup>™</sup> can only be as high as the quality of the signal it is displaying. This chart shows the different signal types and how to access them.

#### **Best Signal** Performance

Lê

chomanee		Comments	Sources
Î	High Definition Content	Best Picture Quality 16:9 Aspect Ratio	HD Over-The-Air Antenna HD Cable Subscription/ Programming HD Satellite Subscription
	Digital Content	Good Picture Quality Aspect Ratio based on Program	Over-The-Air Antenna Digital Cable Subscription Digital Satellite Subscription
	Analog Content	Original TV format 4:3 Aspect Ratio	Over-The-Air Antenna Cable Subscription

Contact your cable or satellite provider to upgrade your service to HD. Receive over-the-air HD broadcasts with an HD-quality antenna (www.antennaweb.org) and discover the wealth of entertainment now available on super-high-resolution Blu-ray Disc<sup>™</sup>.



4

#### Select Your Content Source

Whether you are watching cable, satellite or broadcast TV; playing a VCR, DVD or Blu-ray Disc<sup>™</sup>; or connecting to your PC, you need to choose the correct Input using your remote control:

- external inputs; OR
- input.

### Adjust Screen Shape and Aspect Ratio

High Definition and Standard Definition signals are transmitted with different aspect ratios (the width-to-height shape of the image). Most HD signals use a widescreen aspect ratio of 16:9. Most SD signals use a boxy 4:3 aspect ratio. The 16:9 aspect ratio looks perfect on your BRAVIA<sup>™</sup>, but a 4:3 image must be adjusted

- to look right. You can:
- of your preference. Visit

www.learningcenter.sony.us/HomeAudioandVideo/Televisions/Research1/ TheBasicsofDTV for more information.

#### **Customize Sound and Picture Quality**

- displaying on your TV:

Comp Video Video Video Video

Audio/Video

Performance

#### What is HDMI<sup>™</sup>?

HDMI (High-Definition Multimedia Interface) cables are the standard for connecting HDTV. They are built to properly handle high bandwidth, uncompressed video and multi-channel audio-all in one cable.

### Connecting a PC to Your BRAVIA<sup>™</sup>











3-213-438-11(3)

3213438113

Your BRAVIA™ TV must be properly connected to components such as sound system and cable or satellite box.

### See reverse side of this poster for sample connection diagrams.

 Turn off and unplug all components before making connections. Do not turn on the TV until connection setup is completed.

Input Connector	Video Connection	Audio Connection	High or Standard Definition Quality	
HDMI 1 HDMI 2	HDMI connection*	HDMI cable carries both video and audio signals. Separate audio cable is not needed. (*When HDMI is connected to DVI with an adapter, a separate audio L/R is necessary.)	1080i, 720p, 480p, 480i, PC (Compatible with HD or SD content)	
Component 1 Component 2	Component connection	Image: Audio L/R	1080i, 720p, 480p, 480i (Compatible with HD or SD content)	
Video 1	S VIDEO connection (Use this connector in place of composite video connector)	Audio L/R	480i	
Video 1 Video 2 Video 3	Composite video and audio connectors)	O O C C C C C C C C C C C C C C C C C C	(SD content)	

• May require DVI-to-HDMI adapter and separate audio connector when connecting to the HDMI input.

Connect PC's audio output when using a Digital Video Interface (DVI) or HD15 connection.

• Press PC's FUNCTION Key + Select Output to transmit to TV. ■ Refer to your BRAVIA<sup>™</sup> Operating Instruction Manual for more information.

To learn more about HDTV, visit www.sony.com/HDTV

# Watching Your TV

Press the MENU button on your remote control to display on-screen the Applications menu, then select External Inputs and will appear the list of

Press the button to display the list of external inputs and choose the desired

Adjust your TV so boxy 4:3 images are automatically re-configured (zoomed or stretched) to fit the wide TV screen; OR

• Watch SD content in its original, boxy format with wide black bars surrounding the image to fill in unused space (for example, you may prefer to watch an old classic movie in its original 4:3 format, not reconfigured for a wide screen). Press the button on your remote control to display the Wide Mode setting

You can choose optimum sound and picture settings to match the content you are

 Press the MENU button on your remote control and select Picture or Sound menu, then choose the appropriate setting for your content. • Use the remote control <sup>PICTURE</sup> button to quickly adjust picture quality.

■ Refer to your BRAVIA<sup>™</sup> Operating Instruction Manual for more information.

To learn more about HDTV, visit www.sony.com/HDTV



Button	Description	
1 POWER	Press to turn On and Off the TV.	
2 SLEEP	Press repeatedly until the TV displays the time in minutes (Off, 15, 30, 60 or 120) that you want the TV to remain on before shutting off. To cancel <b>Sleep</b> , press O repeatedly until <b>Sleep</b> <b>Off</b> appears.	
<b>3 DISPLAY</b>	Press once to display the current channel number, channel label, remaining time, <b>Wide Mode</b> settings and current time. The on screen display (OSD) will turn off after a few seconds.	
<b>4 GUIDE</b> (For all channels including	Press to display the Guide when you are watching digital channels (if it is available from the station).	
Digital/Analog channels)	Using the Guide The Guide allows you to select the channels from a channel list; also provides information about the current program being shown on each channel. ℤ <sub>D</sub> • Program information in the guide is	
	provided by the broadcasters. As a result, it may sometimes include only the channel number, without a program title or description.	
5 RETURN	Press to go back to the previous screen when displaying <b>MENU</b> items and settings.	
6 TOOLS	This function is only available when PC input is active. Press of to view a channel at the same time as a Picture in Picture (PIP) screen.	
7 MENU	Press to display the <b>MENU</b> with TV functions and settings.	
8 JUMP	Press to alternate between two channels. The TV will alternate between the current channel and the last channel tuned to with the buttons	

For more details regarding to remote control functions, please refer to the Operating Instructions manual.

0 - 9 and  $\bigcirc$  on the remote control.

