



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY BRAVIA KDL-40EX725. You'll find the answers to all your questions on the SONY BRAVIA KDL-40EX725 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SONY BRAVIA KDL-40EX725**  
**User guide SONY BRAVIA KDL-40EX725**  
**Operating instructions SONY BRAVIA KDL-40EX725**  
**Instructions for use SONY BRAVIA KDL-40EX725**  
**Instruction manual SONY BRAVIA KDL-40EX725**

**SONY** 4-269-996-F1(1)

LCD  
Digital Colour TV

**Operating Instructions**

- Getting Started
- Using Your BRAVIA TV
- Network Setup
- Additional Information

i-MANUAL ?

**BRAVIA**

KDL-40EX725 / 32EX725



[Your user manual](#)  
[SONY BRAVIA KDL-40EX725](#)

#### **Manual abstract:**

*· The illustrations used in this manual may differ depending on your TV model. · The illustrations of the remote used in this manual are of the RM-ED044 unless otherwise stated. · Before operating the TV, please read "Safety Information" (page 30). Retain this manual for future reference. Location of the identification label Labels for Model No., Production Date (month/year) and Power Supply rating (in accordance with applicable safety regulation) are located on the rear of the TV or package. 2 GB Precautions Viewing the TV · Some people may experience discomfort (such as eye strain, fatigue, or nausea) while watching 3D video images or playing stereoscopic 3D games. Sony recommends that all viewers take regular breaks while watching 3D video images or playing stereoscopic 3D games. The length and frequency of necessary breaks will vary from person to person. You must decide what works best. If you experience any discomfort, you should stop watching the 3D video images or playing stereoscopic 3D games until the discomfort ends; consult a doctor if you believe necessary. You should also review (i) the instruction manual of any other device or media used with this television and (ii) our website (<http://www.sony-europe.com/myproduct>) for the latest information. The vision of young children (especially those under six years old) is still under development. Consult your doctor (such as a pediatrician or eye doctor) before allowing young children to watch 3D video images or play stereoscopic 3D games. Adults should supervise young children to ensure they follow the recommendations listed above. · Do not use, store, or leave the 3D Glasses or the battery near fire, or in places with a high temperature, e.g., in direct sunlight, or in sun-heated cars.*

*· When using the simulated 3D function, please note that the displayed image is modified from the original due to the conversion done by this television. · View the TV in moderate light, as viewing the TV in poor light or during long period of time, strains your eyes. · When using headphones, adjust the volume so as to avoid excessive levels, as hearing damage may result. · The LCD screen contains a small amount of liquid crystal. Some fluorescent tubes used in this TV set also contain mercury (except for LED backlight LCD TV). Follow your local ordinances and regulations for disposal. Disposal of the TV set Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems) This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources.*

*For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Handling and cleaning the screen surface/cabinet of the TV set Be sure to unplug the mains lead connected to the TV set from mains socket before cleaning. To avoid material degradation or screen coating degradation, observe the following precautions. · To remove dust from the screen surface/ cabinet, wipe gently with a soft cloth. If dust is persistent, wipe with a soft cloth slightly moistened with a diluted mild detergent solution. · Do not spray water or detergent directly on the TV set. It may drip to the bottom of the screen or exterior parts, and may cause a malfunction. · Never use any type of abrasive pad, alkaline/acid cleaner, scouring powder, or volatile solvent, such as alcohol, benzene, thinner or insecticide. Using such materials or maintaining prolonged contact with rubber or vinyl materials may result in damage to the screen surface and cabinet material..*



[Your user manual](#)  
[SONY BRAVIA KDL-40EX725](#)