

**SONY**<sup>®</sup>

3-866-305-21

FD Trinitron

# WEGA




 
---

Operating Instructions

KV-27FV15  
KV-32FS10  
KV-32FV15  
KV-36FS10  
KV-36FV15


© 1999 by Sony Corporation

# Table of Contents

 
<b>Important Safeguards</b> .....	<i>i</i>	<b>Basic Set Up</b>		<b>Operating Video Equipment</b>	
<b>Welcome!</b> .....	1	Inserting batteries .....	12	Programming the remote .....	29
<b>Precautions</b> .....	1	Using the remote control move & select buttons .....	12	<b>Operating a Cable Box or Satellite Receiver</b>	
<b>Using This Manual</b> .....	1	Front panel menu control .....	12	Programming the remote control .....	31
<hr/>		<hr/>		<hr/>	
<b>Connecting and Installing the TV</b>		<b>Using Your New TV</b>		<b>Troubleshooting</b> .....	32
Making Connections .....	2	Setting up the TV automatically .....	13	<b>Specifications</b> .....	33
Note about the AC Power Cord .....	3	Watching the TV .....	14	<b>Index</b> .....	35
Cable or Antenna Connections .....	3	Using Picture-in-Picture — PIP .....	16		
Cable Box Connections .....	4				
VCR Connections .....	5	<b>Using Your Menus</b>			
Satellite Receiver Connections .....	7	Learning menu selection .....	17		
DVD Player Connections .....	8	Quick start to the menus .....	18		
Additional Connections .....	9	Using the VIDEO  menu .....	19		
Using Special Sony Features .....	10	Using the AUDIO  menu .....	20		
		Using the TIMER  menu .....	21		
		Using the SET UP  menu .....	22		
		Using the CHANNEL SET UP menu ...	23		
		Using the PARENTAL CONTROL menu .....	27		

# Remote Control

Keep this flap unfolded and use this page for reference.



- SYSTEM OFF (page 15)
- TV/VTR (page 15)
- ANT (pages 3 and 15)
- PICTURE MODE (pages 14 and 19)
- SLEEP (page 14)
- JUMP (page 14)
- TV/SAT (page 15)
- RESET (page 14)
- VOL +/-
- CODE SET (pages 29-31)

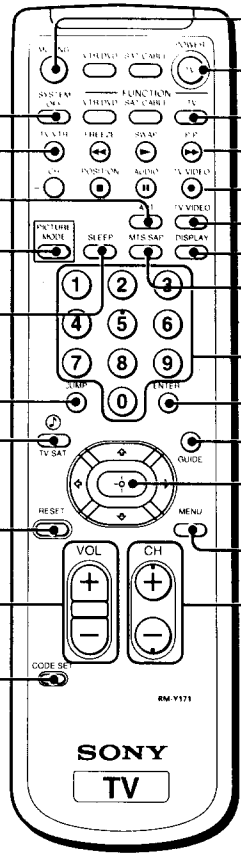

- MUTING
- TV (POWER)
- TV (FUNCTION)
- PIP (page 16)
- TV/ VIDEO
- DISPLAY
- MTS/SAP (pages 15 and 20)
- 0 - 9 buttons
- ENTER
- GUIDE
- Select buttons (pages 12 and 17)
- MENU
- CH +/-

## Getting to know the buttons on the remote control

Names of the buttons on the remote control are in different colors to represent the available functions.

### Button color

- Clear ..... Indicates which equipment is currently being controlled
- Green ..... Buttons relevant to power operations



### Label color


- White ..... TV/VTR (VCR)/DVD/SAT/CABLE operation buttons
- Yellow ..... PIP operation buttons
- Blue ..... SAT operation buttons
- Green ..... SYSTEM OFF operation button


All references to buttons on the remote control will be highlighted with **bold text**.

## WARNING

To reduce the risk of fire or shock hazard, do not expose the TV to rain or moisture.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<b>ATTENTION</b> RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR		
<b>PRECAUCION</b> RIESGO DE CHOQUE ELECTRICO NO ABRIR		
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

 This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

 This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## CAUTION

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OR PLUG TO WIDE SLOT, FULLY INSERT.

## CAUTION

When using TV games, computers, and similar products with your TV, keep the brightness and picture contrast functions at low settings. If a fixed (non-moving) pattern is left on the screen for long periods of time at a high brightness or picture contrast setting, the image can be permanently imprinted onto the screen. Continuously watching the same program can cause the imprint of station logos onto the TV screen. These types of imprints are not covered by your warranty because they are the result of misuse.

### Note on Caption Vision

This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

### Note on cleaning the TV

Clean the TV with a soft dry cloth. Never use strong solvents such as thinner or benzine, which might damage the finish of the cabinet.

### Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Use of this television receiver for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster/cable company and/or program owner.

## NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennas.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This document is for the remote control RM-Y168, 171.

MODELS: KV-27FV15, 32FS10, 32FV15, 36FS10, 36FV15



As an ENERGY STAR® Partner, Sony has determined that this product or product models meets the ENERGY STAR® guidelines for energy efficiency.

ENERGY STAR® is a U.S. registered mark.

# Important Safeguards

For your protection, please read these instructions completely, and keep this manual for future reference.

Carefully observe and comply with all warnings, cautions and instructions placed on the set, or described in the operating instructions or service manual.

## WARNING

To guard against injury, the following basic safety precautions should be observed in the installation, use, and servicing of the set.

### Use

#### Power Sources

This set should be operated only from the type of power source indicated on the serial/model plate. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. Do not use those sets designed to operate from battery power, or those sets designed to operate from battery power, other than the operating instructions.



#### Grounding or Polarization

This set is equipped with a polarized AC power cord plug (a plug having one blade wider than the other), or with a three-wire grounding type plug (a plug having a third pin for grounding).

Follow the instructions below:

#### For the set with a polarized AC power cord plug

 
This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.



#### Alternate Warning

#### For the set with a three-wire grounding type AC plug


This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the grounding plug.



#### Overloading


Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.

 Always turn the set off when it is not to be used. When the set is left unattended and unused for long periods of time, unplug it from the wall outlet as a precaution against the possibility of an internal malfunction that could create a fire hazard.



#### Object and Liquid Entry

Never push objects of any kind into the set through the cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.

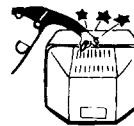

#### Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.



#### Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set. If a snapping or popping sound from a



TV set is continuous or frequent while the TV is operating, unplug the TV and consult your dealer or service technician. It is normal for some TV sets to make occasional snapping or popping sounds, particularly when being turned on or off.



#### Installation

#### Water and Moisture

Do not use power-line operated sets near water — for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.



#### Accessories

Do not place the set on an unstable cart, stand, table or shelf. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart or stand recommended by the manufacturer for the specific model of TV. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



#### Ventilation

 
The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.



- Never cover the slots and openings with a cloth or other materials.



- Never block the slots and openings by placing the set on a bed, sofa, rug or other similar surface.



## Important Safeguards (continued)

- Never place the set in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.



- Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.



### Power-Cord Protection

Do not allow anything to rest on or roll over the power cord, and do not place the set where the power cord is subject to wear or abuse.



### Antennas

#### Outdoor Antenna Grounding

If an outdoor antenna is installed, follow the precautions below.

An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits.


WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code (NEC) in USA and Section 54 of the Canadian Electrical Code in Canada provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

ii

### Antenna Grounding According to the NEC

Refer to section 54-300 of Canadian Electrical Code for Antenna Grounding.

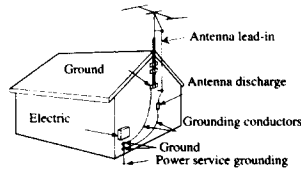

NEC: National

### Lightning

 
For added protection for this television receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the receiver due to lightning and power-line surges.

### Service

#### Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.




- If liquid has been spilled into the set.




- If the set has been exposed to rain or water.



 - If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.



 - If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.



- When the set exhibits a distinct change in performance — this indicates a need for service.

### Service

Do not attempt to service the set yourself since opening the cabinet may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



### Replacement Parts

When replacement parts are required, be sure the service technician certifies in writing that he has used replacement parts specified by the manufacturer that have the same characteristics as the original parts.

Unauthorized substitutions may result in fire, electric shock, or other hazards.

### Safety Check

Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition, and to so certify. When the set reaches the end of its useful life, improper disposal could result in a picture tube implosion. Ask a qualified service technician to dispose of the set.



## Welcome!

Thank you for purchasing the Sony Trinitron® Color TV. Before reading, check the model number located on the front of this manual.

The menus and illustrations used in these instructions are for KV-36FV15 to show the maximum number of features available. Differences in operation or features will be indicated in the text, for example, "KV-36FV15 only."

Model Number	S VIDEO INPUTS	PICTURE IN PICTURE (PIP)	FAVORITE CHANNEL	COMPONENT VIDEO INPUTS	S-LINK
KV-27FV15	•	•	•	•	•
KV-32FS10	•	•	•	•	•
KV-32FV15	•	•	•	•	•
KV-36FS10	•	•	•	•	•
KV-36FV15	•	•	•	•	•

## Precautions

### Safety

- Operate the TV only with 120 V AC .
- The plug is designed, for safety purposes, to fit in the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- If any liquid or solid object should fall inside the cabinet, unplug the TV immediately and have it checked by qualified personnel before operating it further.

### Installing

- To prevent internal heat build-up, do not block the ventilation openings.
- Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.
- The AC power cord is attached to the rear of the TV with hooks. Do not attempt to remove the cord from these hooks. Doing so could cause damage to the TV.

## Using This Manual

This manual is divided into five major sections. We recommend that you review the contents before you begin to use your new TV.

### 1 Connecting and Installing the TV

This section guides you through your initial set up. It shows how to connect to your antenna or cable, and connect any accessories.

### 2 Basic Set Up

This section teaches you the basic skills needed to operate your new TV.

### 3 Using your New TV

This section shows the initial setup screen and how to use your remote control.

### 4 Using your Menus

This section teaches you how to access on-screen menus and adjust your TV's settings.

### 5 Troubleshooting

This section helps you to correct problems you may encounter with your TV.

## **Making Connections**


Refer to the table below, it will direct you to the diagram suitable to the equipment you will be connecting.

<b>If you will be connecting</b>	<b>See page</b>
Cable or antenna only	3
Cable and antenna	3
Cable box	4
Cable box and cable to view scrambled channels	4
VCR and cable or antenna	5
VCR and cable box	5
Two VCRs for tape editing	6
Satellite Receiver	7
VCR and Satellite Receiver	7
DVD Player	8
DVD Player with component video output connectors	8
Audio system	9
Camcorder to view tapes	9
CONTROL S	10
VCR using S-Link	11
Satellite Receiver using S-Link	11



## Note about the AC Power Cord




The AC power cord is attached to the rear of the TV with hooks. Use caution when removing the AC plug from its holder. Gently slide the cord in the upward direction, without removing the cord from the two lower hooks.

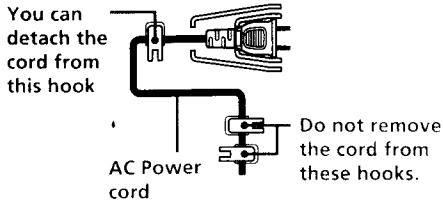

## Cable or Antenna Connections


### Connecting directly to cable or an antenna

The connection you choose will depend on the cable found in your home. Newer homes will be equipped with standard coaxial cable (see **A**); older homes will probably have 300-ohm twin lead cable (see **B**); still other homes may contain both (see **C**).

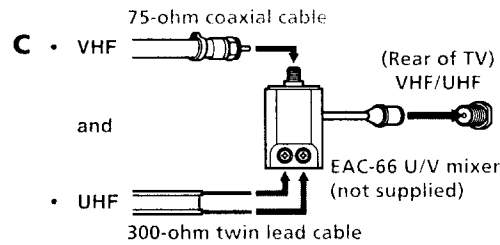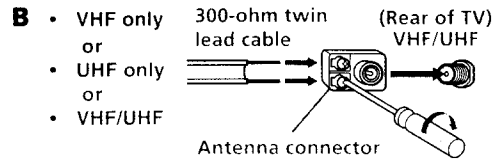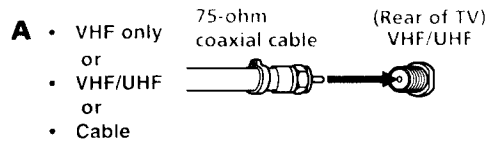

## Cable and antenna

If your cable provider does not feature local channels, you may find this set up convenient.

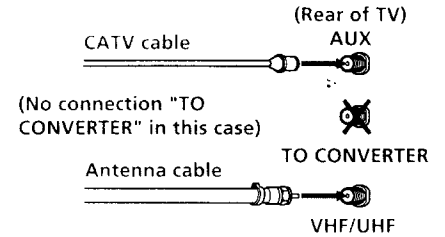

Select CABLE or antenna (ANT) mode by pressing ANT on the remote control.

## Note

In order to receive channels with an antenna, you will need to turn your CABLE to OFF and perform the AUTO PROGRAM function, (see page 23).


## Cable Box Connections

Some pay cable TV systems use scrambled or encoded signals that require a cable box to view all channels.

### Cable box

- 1 Connect the coaxial connector from your cable to the IN on your cable box.
- 2 Using a coaxial cable, connect OUT on your cable box to VHF/UHF on your TV.

*If you will be controlling all channel selection through your cable box, you should consider using the CHANNEL FIX feature, (see page 23).*

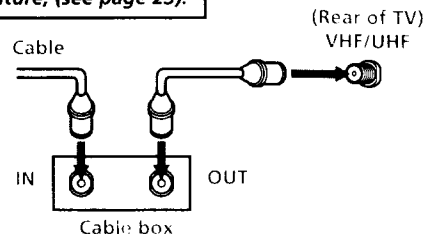

### Cable box and cable

For this set up, you can switch between scrambled channels (through your cable box), and normal (CATV) channels by pressing ANT on your remote control.


#### Notes

- Your Sony remote control can be programmed to operate your cable box, (see page 31).
- When using PIP, you cannot view the AUX input in the window picture.

#### Tip

Pressing ANT switches between these inputs.

*If you are connecting a cable box through the AUX input and would like to switch between the AUX and normal (CATV) input you should consider using the CHANNEL FIX feature, (see page 23).*

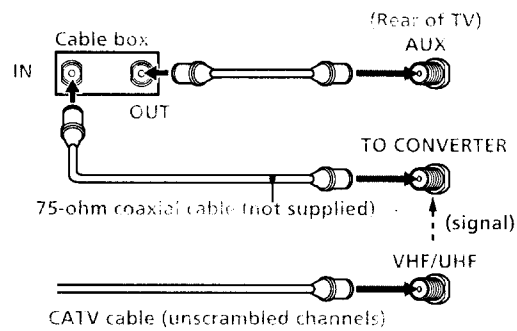

## VCR Connections


### Connecting an antenna/cable TV system with a VCR

- 1 Attach the coaxial connector from your cable or antenna to IN on your VCR.
- 2 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.
- 3 Using a coaxial connector, connect OUT on your VCR to VHF/UHF on your TV.

Tip 


If you are connecting a monaural VCR, connect only the single white audio output to the left input on your TV.

For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S VIDEO does not provide sound, your audio connectors must still be connected.

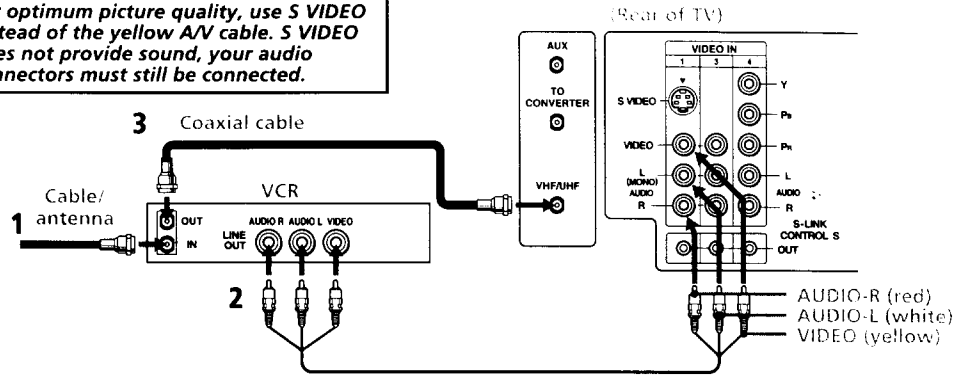

### Connecting a VCR and TV with a cable box

- 1 Connect the coaxial cable from the wall to IN on your cable box.
- 2 Using a coaxial connector, connect OUT on your cable box to IN on your VCR.
- 3 Connect a coaxial cable (not supplied) from the OUT jack on your VCR to VHF/UHF on your TV.
- 4 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.

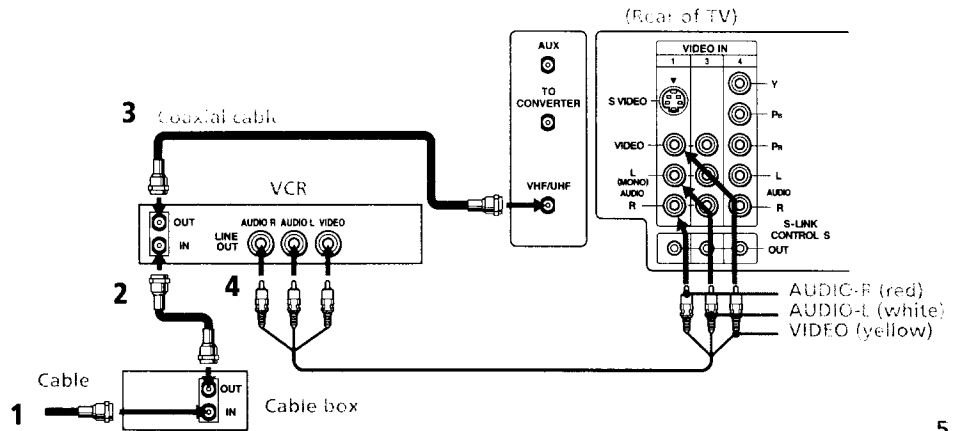


**Connecting two VCRs for tape editing**

MONITOR OUT gives you the ability to use a second VCR to record a program being played by the primary VCR or to perform tape editing and dubbing.

- 1 Connect the VCR intended for playback using the connection instructions on page 5 of this manual.
- 2 Using A/V connectors, connect AUDIO and VIDEO IN on your VCR intended for recording to MONITOR AUDIO and VIDEO OUT on your TV.

**Note**  
You cannot record signals from equipment connected to the Y, P<sub>B</sub>, P<sub>R</sub> input.

*To perform tape editing; set the TV to the video input intended for playback by pressing TV/VIDEO.*

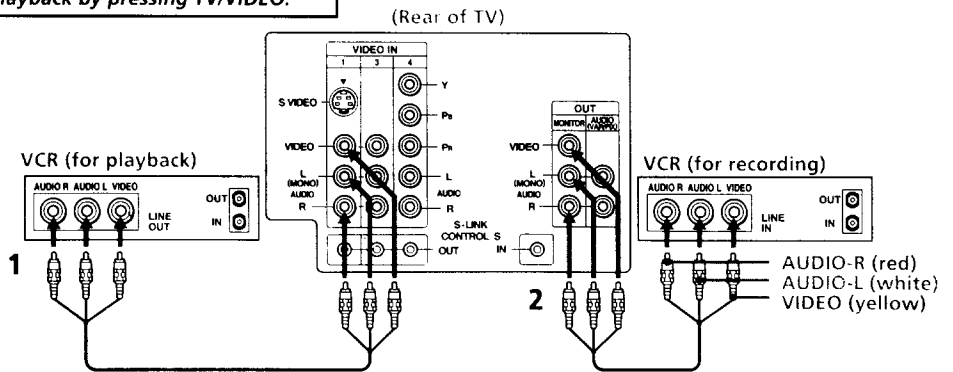


## Satellite Receiver Connections

### Connecting a satellite receiver

- 1 Connect the cable from your satellite antenna to SATELLITE IN on your receiver.
- 2 Attach the coaxial connector from your cable or antenna to VHF/UHF on your TV.
- 3 Using A/V connectors, connect AUDIO and VIDEO OUT on your receiver to AUDIO and VIDEO IN on your TV.


For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S Video does not provide sound, your audio connectors must still be connected.

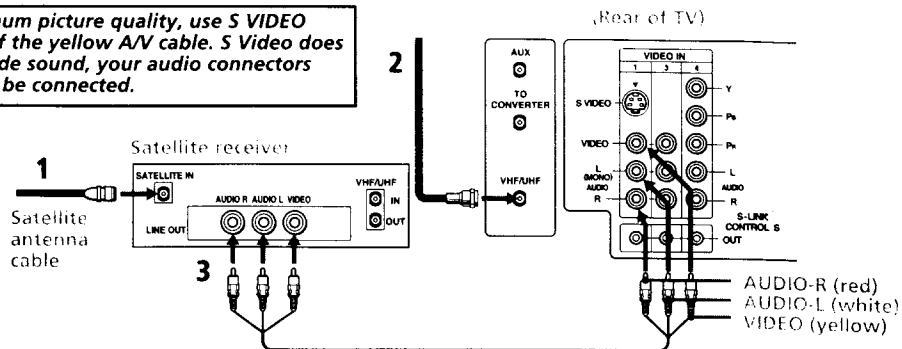

### Connecting a satellite receiver and a VCR

- 1 Connect the cable from your satellite antenna to SATELLITE IN on your receiver.
- 2 Attach the coaxial connector from your cable or antenna to IN on your VCR.
- 3 Using a coaxial connector, connect OUT on your VCR to VHF/UHF on your TV.
- 4 Using A/V connectors, connect AUDIO and VIDEO OUT on your receiver to AUDIO and VIDEO IN on your VCR.
- 5 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.

Pressing TV/VIDEO on the remote control will allow you to view from the satellite receiver or VCR.

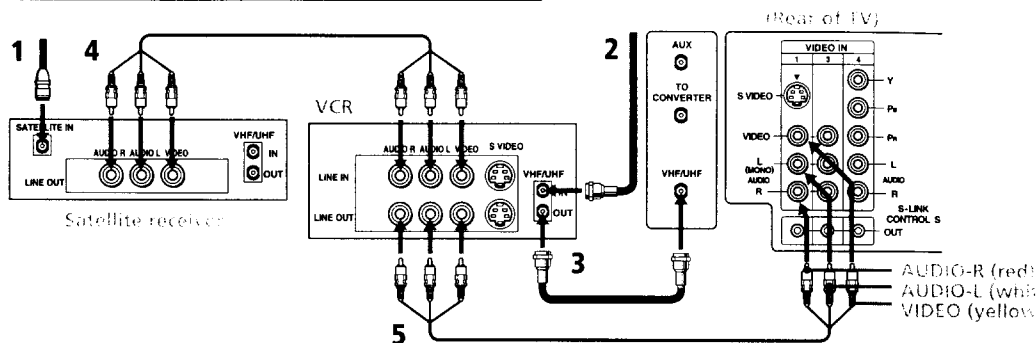




## DVD Player Connections

### Connecting a DVD Player

- 1 Using audio connectors, connect AUDIO OUT on your DVD player to AUDIO IN on your TV.
- 2 Using an S VIDEO cable, connect S VIDEO on your DVD player to S VIDEO on your TV.

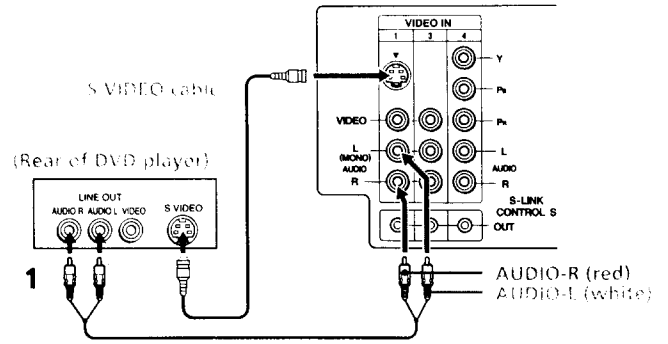


### Connecting a DVD Player with component video output connectors

#### Except KV-27FV15

This connection option offers the highest quality DVD picture.

- 1 Using AUDIO connectors, connect AUDIO R and L of the LINE OUT on your DVD player to AUDIO R and L on the VIDEO IN 4 panel at the rear of your TV.
- 2 Using three VIDEO connectors, connect Y, Pb, and Pr on the COMPONENT VIDEO OUT on your DVD player to Y, Pb, and Pr on the VIDEO IN 4 panel at the rear of your TV.

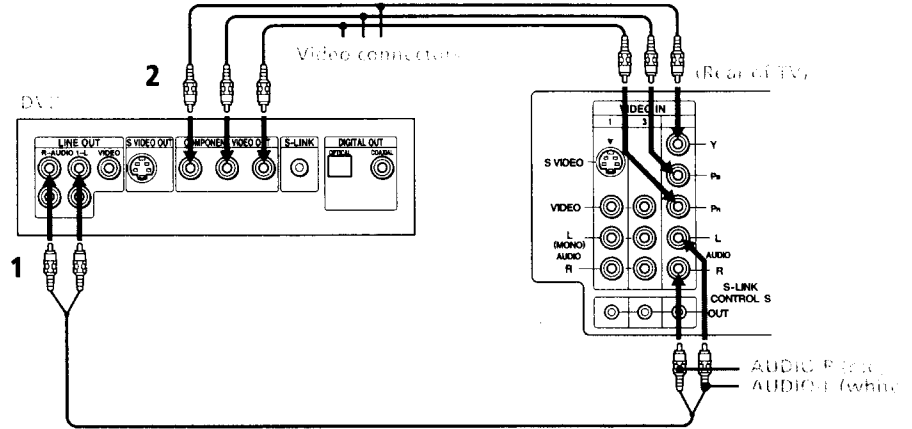


#### Note


Some DVD player terminals may be labeled Y, CB, and CR, or Y, B-Y, and R-Y. If so, connect them by matching the colors.

## Additional Connections

### Connecting an audio system

 For an enhanced sound, connect your audio system to your TV.

- 1 Using AUDIO connectors, connect AUDIO OUT on your TV to one of the unused Line inputs (e.g. Tape-2, AUX1, etc.) on your stereo.
- 2 Set your stereo to the chosen Line input and use the AUDIO  menu to set your audio output, (see page 20).

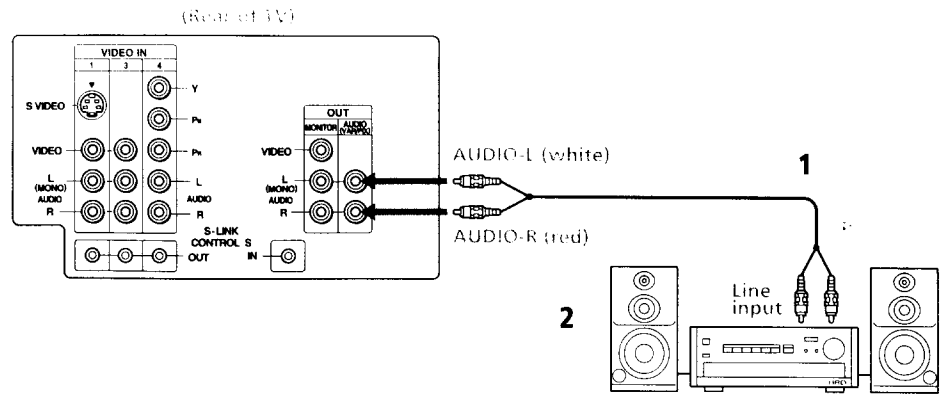

### Connecting a camcorder


This connection is convenient for viewing a picture directly from your camcorder.

Using A/V connectors, connect AUDIO and VIDEO OUT on your camcorder to AUDIO and VIDEO IN on your TV.



*If you are connecting a monaural camcorder, connect only the single white audio output to the left input on your TV.*

*If you have an S VIDEO equipped camcorder, you can use an S Video cable for optimum picture quality.*

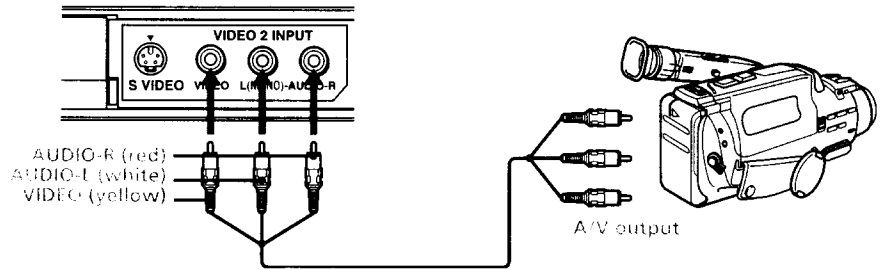

## Using Special Sony Features

### Using the CONTROL S feature


**KV-27FV15, 32FV15, 36FV15 only**

CONTROL S allows you to control your TV and other Sony equipment with one remote control.

Using the supplied CONTROL S cable, connect CONTROL S IN on your Sony equipment, (e.g. VCR) to CONTROL S OUT on your TV.

*Tip*

You can also program your remote control to operate other equipment, (see page 29).

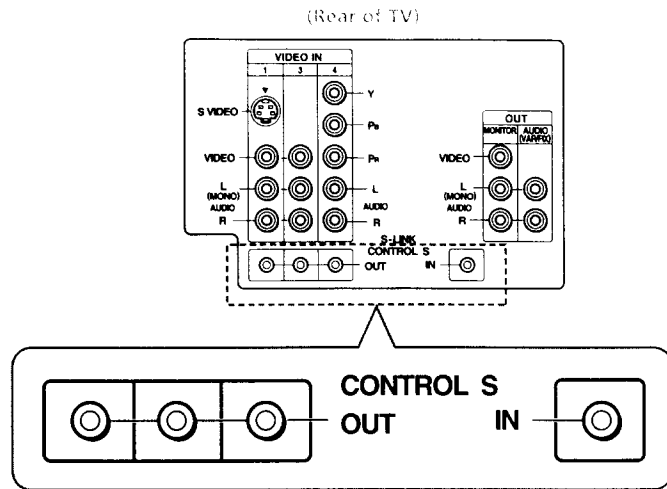




## Connecting S-Link to a VCR

### KV-27FV15, 32FV15, 36FV15 only

S-Link automatically powers on the TV and switches to the correct video input when a tape is inserted in the VCR.

- 1 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.
- 2 Using an S-Link connector (mono mini plug), connect S-LINK on your VCR to S-LINK/CONTROL S-OUT in the same VIDEO IN column on your TV.

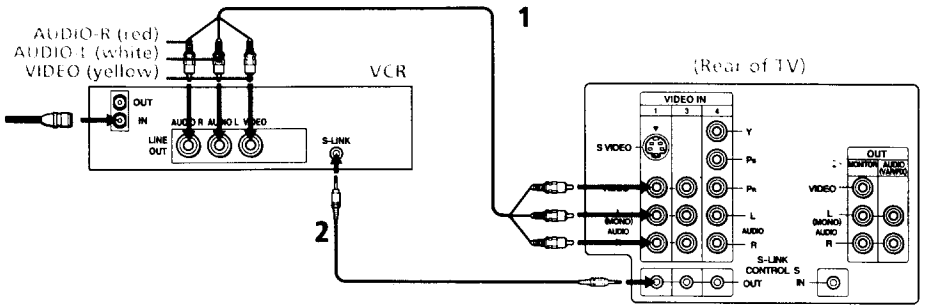


## Connecting S-Link to a satellite receiver

### KV-27FV15, 32FV15, 36FV15 only

When you power on the satellite receiver, S-Link automatically powers on the TV and switches to the correct video input.

- 1 Using A/V connectors, connect AUDIO and VIDEO OUT on your satellite receiver to AUDIO and VIDEO IN on your TV.
- 2 Using an S-Link connector (mono mini plug), connect S-LINK on your satellite receiver to S-LINK/CONTROL S-OUT in the same VIDEO IN column on your TV.

*The S-Link connector must be in the same VIDEO-IN column as the connected A/V cables.*

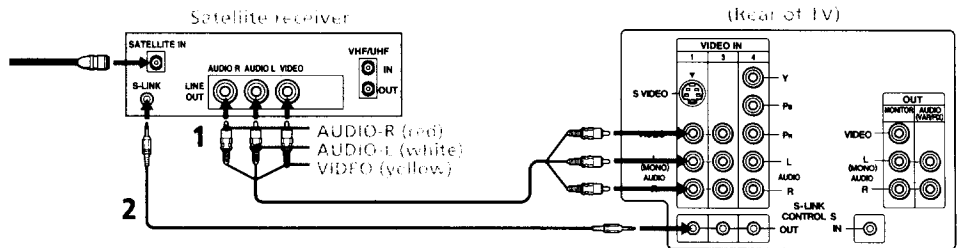


### Note

The S-Link feature will override the "SKIP" VIDEO LABEL input, (see page 22).

## Inserting batteries


Insert two size AA (R6) batteries (supplied) by matching the + and - on the batteries to the diagram inside the battery compartment.

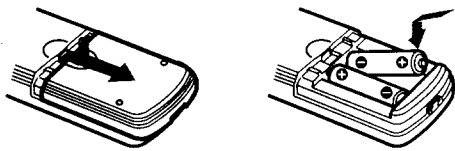

### Notes

- Remove the batteries to avoid damage from possible battery leakage whenever you anticipate that the remote control will not be used for an extended period.
- Handle the remote control with care. Avoid dropping it, getting it wet, or placing it in direct sunlight, near a heater, or where the humidity is high.
- Your remote control can be programmed to operate most video equipment, (see page 29).


## Using the remote control move & select buttons

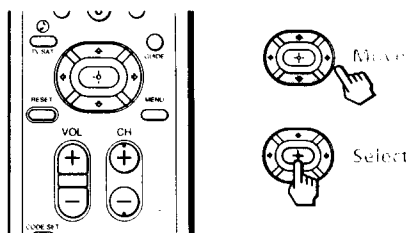

The supplied remote control has "arrow" buttons (↑, ↓, ←, →) which allow for movement of the on-screen (▶) cursor. Pressing on the outer buttons will cause the cursor to *move* in the corresponding direction. Pressing the center button (○) will *select* the item.

## Front panel menu control

The front panel menu controls allow access to the on-screen menus without the use of a remote control. Pressing the **MENU** button will bring up the on-screen menus. The arrow buttons, (↑, ↓) move the on-screen cursor in the menus and the (○) button selects the menu item.

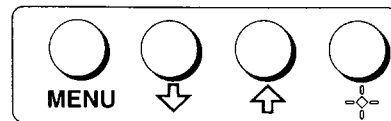

## Setting up the TV automatically

 
After you have finished connecting your TV, you will want to run AUTO PROGRAM to set up your channels.

*The AUTO PROGRAM feature does not apply for installations that use a cable box for all channel selection.*

### Tips

- Perform this function during the day, with the antenna and/or cable properly connected, to ensure that all available channels will be broadcasting and receivable.
- If your cable or antenna is connected to AUX, press ANT until AUX appears next to the channel number.


Using the buttons on the top of the TV:



- 1 Press POWER to turn on the TV. The initial setup screen appears.




POWER

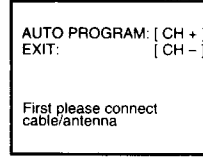

- 2 Press CH + to run AUTO PROGRAM or press CH - to exit.



- CHANNEL +



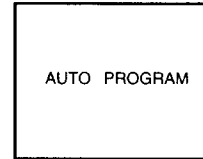







      To reset your TV to factory settings, turn the TV on. Then, while pressing the RESET button on your remote control, press the POWER button on your TV. The TV will turn itself off, then back on.


 
 




## Watching the TV

The following chart explains more advanced buttons on your remote control.

REFER TO THE ILLUSTRATION OF THE REMOTE CONTROL ON THE INSIDE FRONT COVER OF THIS MANUAL AS YOU REVIEW THIS CHART

Using the White Labeled Buttons for TV Operations	
	Press when you want to turn connected equipment on and off.
	Press when you want to control connected equipment with your remote control, (see pages 29-31 for instructions on programming your remote control).
	Use for direct channel selection. Press <b>0-9</b> to select a channel, the channel will change after 2 seconds, or you can press <b>ENTER</b> for immediate selection.
	Cycles through the VIDEO MODE settings: VIVID, SPORTS, MOVIE, STANDARD.
	Alternates back and forth between the last two channels selected with the <b>0-9</b> keys.
	Instantly turns off the sound. Press again or press <b>VOL +</b> to restore sound.
	Turns the TV off in approximately 30, 60, or 90 minutes. Cancel by pressing until <b>SLEEP OFF</b> appears.
	Press to return to factory settings while in the on-screen menus.

### Using the White Labeled Buttons for TV Operations

<p>DISPLAY</p> 	<p>Press once to display current time (if set) and channel number. Press again to activate current CAPTION VISION setting. To cancel, press <b>DISPLAY</b> until DISPLAY OFF appears.</p>
<p>TV/VIDEO</p> 	<p>Press repeatedly to cycle through available video inputs: TV, VIDEO 1, VIDEO 2, VIDEO 3 and VIDEO 4</p>
<p>ANT</p>  <p>(AUX input)</p>	<p>Press to change the VHF/UHF input to the AUX input.</p>
<p>TV/VTR</p> 	<p>Press when you are finished using a VCR and you want to switch to the TV input. Your VCR power will remain on.</p>
<p>MTS/SAP</p> 	<p>Cycles through the Multi-channel TV Sound (MTS) options: STEREO, SAP (Second Audio Program), MONO (see page 20).</p>
<p>SYSTEM OFF</p> 	<p>Powers off all Sony equipment at once. <i>This feature may not work with older Sony equipment.</i></p>
<p></p> <p>TV/SAT</p>	<p>Cycles through the available audio settings.</p>


## Using Picture-in-Picture – PIP

**KV-27FV15, 32FV15, 36FV15 only**

These models are equipped with dual tuners. This means that PIP is "ready to use".





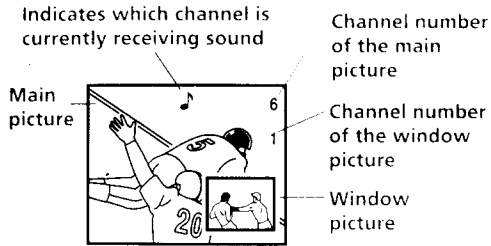





REFER TO THE ILLUSTRATION OF THE REMOTE CONTROL ON THE INSIDE FRONT COVER OF THIS MANUAL AS YOU REVIEW THIS CHART



### Notes


- You must press **TV (FUNCTION)** before you can control PIP with the yellow labeled buttons.
- The **AUX** input cannot be viewed in the window picture.

Use the Yellow Labeled Buttons for PIP Operations	
PIP 	Displays the window picture. Press again to decrease the size. To cancel, press until the window picture turns off.
TV/VIDEO 	Cycles through available video inputs: TV, VIDEO 1, VIDEO 2, VIDEO 3, VIDEO 4
AUDIO 	Alternates sound between the main picture and the window picture. A 🎵 will appear to indicate which picture is receiving sound.
TV/MTR +  CH - 	Changes the channel in the window picture.
POSITION 	Moves the location of the window picture.
FREEZE 	Press to freeze the window picture. Press again to restore the picture.
SWAP 	Switches the position of the main picture with the window picture.


## Learning menu selection

Use the MENU button to access a menu and use the arrow buttons (▲ or ▼) to alter settings. Use the following example, in which we activate the CABLE, to learn how to modify settings.


- 1 Press the MENU button.  
The main menu appears.

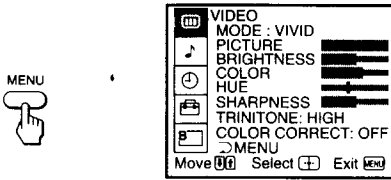


- 2 Press ▲ or ▼ to highlight the desired menu (in this case SET UP), and press [Enter] to select it.

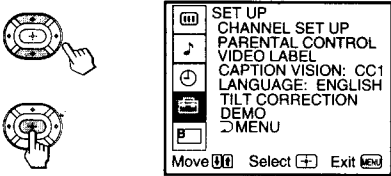


- 3 Press ▲ or ▼ to move to the desired option and press [Enter].

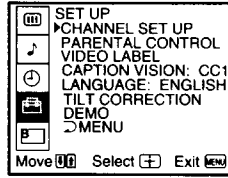


- 4 Press ▲ or ▼ to move to the desired feature and press [Enter].  
Options for your selection will be highlighted.

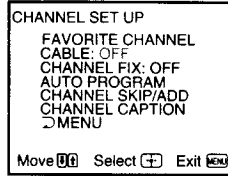

- 5 Press ▲ or ▼ to make your selection and press [Enter].

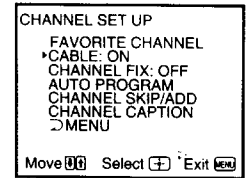

When you are finished making changes to the selected menu, choose ▷MENU to return to the main menu.

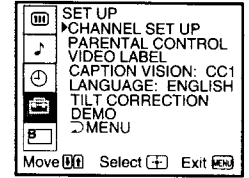


*Tip* 💡

Pressing MENU on the remote control will allow you to exit from the menus at any time.

## Quick start to the menus

The following is a guide to your menus.

### To select a menu:

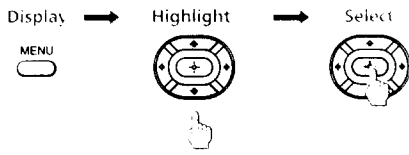


**Note**  
Menus shown are for KV-36FV15, your menus may not look exactly like those illustrated.


	<p>The VIDEO menu will allow you to make adjustments to your picture settings. It will also allow you to customize the picture MODE based on the type of program you are viewing.</p>
	<p>The AUDIO menu offers enhanced audio options such as listening to second audio programming (SAP), or customizing the EFFECT of the sound on your TV.</p>
	<p>The TIMER menu sets the clock on your TV and allows you to program your TV for scheduled viewing using the ON/OFF TIMER.</p>
	<p>The SET UP menu provides several options for setting up your channels, labeling your TV/VIDEO inputs, and selecting the LANGUAGE of your menus.</p> <p>The CHANNEL SET UP menu is a sub-menu which provides further options for setting up your TV.</p>
	<p>The Basic Menu provides quick access to frequently used settings.</p>



## Using the VIDEO menu

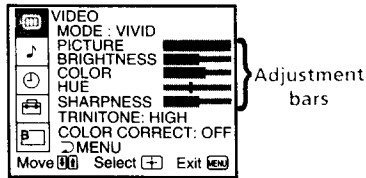


### To select the VIDEO menu:

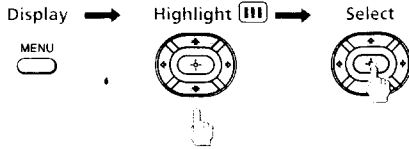


<b>MODE</b> <i>Customized picture viewing</i>	<b>VIVID:</b> Select for enhanced picture contrast and sharpness. <b>SPORTS:</b> Select for a bright picture. <b>MOVIE:</b> Select for a finely detailed picture. <b>STANDARD:</b> Select to receive a standard picture. <i>Press the <b>PICTURE MODE</b> button to access one of the above settings directly.</i>
<b>PICTURE</b> <i>Picture contrast</i>	Adjust left to decrease picture contrast and soften the color. Adjust right to increase picture contrast and create more vivid color.
<b>BRIGHTNESS</b> <i>Picture adjustment</i>	Adjust left to darken the picture. Adjust right to brighten the picture.
<b>COLOR</b> <i>Color saturation</i>	Adjust left to decrease color intensity or saturation. Adjust right to increase color intensity or saturation.
<b>HUE</b> <i>Color tones</i>	Adjust left to increase the red tones. Adjust right to decrease the red tones.
<b>SHARPNESS</b> <i>Picture detail</i>	Adjust left to soften the picture detail. Adjust right to sharpen the picture detail.
<b>TRINITONE</b> <i>White intensity adjustment</i>	<b>HIGH:</b> Gives the white colors a blue tint. <b>MEDIUM:</b> Gives the white colors a neutral tint. <b>NTSC STD:</b> Gives the white colors a red tint.
<b>COLOR CORRECT</b> <i>Color ratio adjustment</i>	<b>ON:</b> Emphasizes reds and blues. <b>OFF:</b> Emphasizes greens.

## Using the AUDIO 🎵 menu

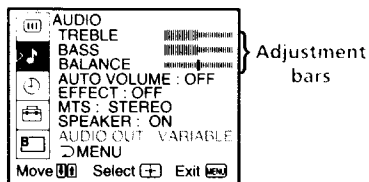

### To select the AUDIO 🎵 menu:

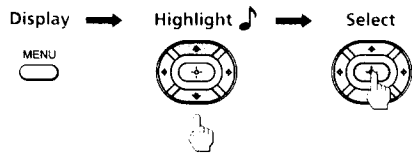


#### Tips 💡


- Press to cycle through your AUDIO options.
- Press **MTS/SAP** on your remote control to cycle through the MTS options.

<b>TREBLE</b>	Adjust left or right to decrease or increase higher pitched sound.
<b>BASS</b>	Adjust left or right to decrease or increase low pitched sounds.
<b>BALANCE</b>	Adjust left or right to emphasize left and right speaker balance.
<b>AUTO VOLUME</b> <i>Stabilizes volume</i>	(KV-27FV15, 32FV15, 36FV15 only) <b>ON:</b> Select to stabilize the volume. <b>OFF:</b> Select to turn AUTO VOLUME off.
<b>EFFECT</b> <i>Enhanced audio</i>	<b>SIMULATED:</b> Adds a surround-like effect to mono programs. <b>SRS:</b> Produces a dynamic three dimensional sound for stereo signals. <b>OFF:</b> Normal stereo or mono reception.
<b>MTS</b> <i>Multi-Channel sound</i>	<b>MONO:</b> Select to reduce noise in areas with poor reception. <b>SAP:</b> Select to listen to bilingual broadcast or other Second Audio Programs (SAP). <b>STEREO:</b> Select when viewing a broadcast in stereo.
<b>SPEAKER</b> <i>Custom selection of audio output source</i>	<b>ON:</b> Select to listen to the sound from the TV speakers with or without a separate stereo system. <b>OFF:</b> Select to turn off the TV speakers and listen to the TV's sound only through external audio system speakers.
<b>AUDIO OUT</b> <i>Use to control the TV's volume through a stereo</i>	AUDIO OUT can only be set when SPEAKER is set to OFF. <b>VARIABLE:</b> Adjust the volume through your TV. <b>FIXED:</b> Adjust the TV volume through a connected stereo.

## Using the **TIMER** menu

 
 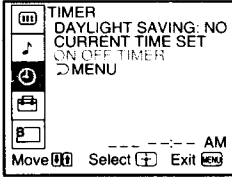

 
 

 

 


 
 
 
 


 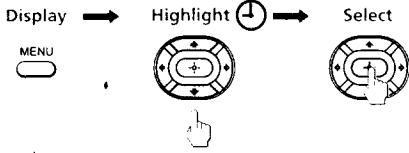







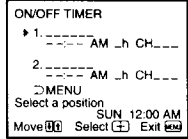
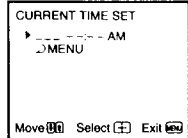
### To select the **TIMER** menu:




Tip 

Set **DAYLIGHT SAVING** before setting the clock.


<b>DAYLIGHT SAVING</b>	<b>YES:</b> Select to compensate for Daylight Saving Time. <b>NO:</b> Select at the end of Daylight Saving Time.
<b>CURRENT TIME SET</b> <i>Necessary for the ON/OFF TIMER</i>	With the <b>CURRENT TIME SET</b> menu open: <ol style="list-style-type: none"> <li>1 Press .</li> <li>2 Press  or  until the current day is displayed. Press  to select.</li> <li>3 Press  or  until the current hour and AM/PM is displayed. Press  to select.</li> <li>4 Press  or  until the current minute is displayed, and press .</li> </ol> Any loss of power will cause these settings to be cleared.
<b>ON/OFF TIMER</b> <i>Wake up or scheduled viewing</i>	<b>CURRENT TIME SET must be programmed before you can use the ON/OFF TIMER.</b> With the <b>ON/OFF TIMER</b> menu open: <ol style="list-style-type: none"> <li>1 Choose the <b>ON/OFF TIMER</b> you would like to set and press .</li> <li>2 Press  or  until the desired day or range of days is displayed. Press  to select.</li> <li>3 Indicate the time that you want the TV to turn on (hour, then minutes) by pressing  or  and then .</li> <li>4 Set the time duration (maximum of 6 hours) by pressing  or  and then .</li> <li>5 Press  or  until you reach the desired channel. Press  to select.</li> </ol> When you perform <b>AUTO PROGRAM</b> , all <b>ON/OFF TIMER</b> settings will be cleared.



## Using the SET UP menu

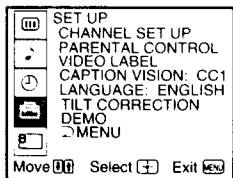


### To select the SET UP menu:

 


#### Note


The FAVORITE CHANNEL feature is not available for the AUX input.

<b>CHANNEL SET UP</b>	The CHANNEL SET UP menu is a submenu which provides further options for setting up your TV. (see page 23)
<b>PARENTAL CONTROL</b>	The PARENTAL CONTROL feature provides parents several options for programming the TV to block shows based on their rating. (see pages 25-28).
<b>VIDEO LABEL</b> <i>Label connected equipment for easy recognition</i>	<p><b>With the VIDEO LABEL window open:</b></p> <ol style="list-style-type: none"> <li>1 Press <math>\blacktriangle</math> or <math>\blacktriangledown</math> to access the input you want to label and press <math>\odot</math>.</li> <li>2 Press <math>\blacktriangle</math> or <math>\blacktriangledown</math> to choose the label and press <math>\odot</math>.</li> </ol> <p><b>VIDEO LABEL Options:</b>                  VIDEO 1/2/3: VHS, 8mm, BETA, LD, GAME, SAT, DVD, WEB, RECEIVER, DTV, SKIP                  VIDEO 4: DVD, DTV, SKIP                  If you select SKIP, your TV will skip this connection when you press the TV/VIDEO button.</p> 
<b>CAPTION VISION</b> <i>Closed Captioning and channel information</i>	<p><b>CC1, 2, 3 or 4:</b> Displays a printed version of the dialog or sound effects of a program, (the mode should be set to CC1 for most programs).</p> <p><b>TEXT1, 2, 3 or 4:</b> Displays network/station information presented using either half or the whole screen.</p> <p><b>XDS (Extended Data Service):</b> Displays network name, program name, program length, and time of the show if the broadcaster offers this service.</p>
<b>LANGUAGE</b>	Select from available languages to display all menus in your language of choice.
<b>TILT CORRECTION</b>	Press $\blacktriangle$ or $\blacktriangledown$ to correct any tilt of the picture between +5 and -5 and press $\oplus$ .
<b>DEMO</b>	Select to run a demonstration of on-screen menus.

## Using the CHANNEL SET UP menu

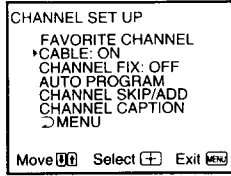



### To select the CHANNEL SET UP menu:

 

### Note

Your remote control can be programmed to operate your cable box. (see page 31)

<p><b>FAVORITE CHANNEL</b> <i>Quick access to favorite channels</i></p>	<p><b>Setting FAVORITE CHANNEL:</b></p> <ol style="list-style-type: none"> <li>1 Press  and then  or  to select AUTO or MANUAL. (Selecting AUTO will display the last five channels chosen with the remote control's 0-9 buttons.)</li> <li>2 Press  or  to move the cursor to 1, 2, 3, 4 or 5 and press .</li> <li>3 Press  or  to access the desired channel and press .</li> </ol> <p>To preview your favorite channels in the window picture, set PREVIEW to ON.</p> <p><b>Using FAVORITE CHANNEL:</b></p> <ol style="list-style-type: none"> <li>1 Exit all menus and press , your FAVORITE CHANNEL options will appear.</li> <li>2 Press  or  to access the channel you want to watch, and press .</li> </ol> <p>For KV-27FV15, 32FV15, 36FV15 only If PREVIEW is set to ON, a window picture displays your favorite channels as you cycle through the options.</p>
<p><b>CABLE</b></p>	<p><b>ON:</b> Select if you are receiving cable channels with a CATV cable. <b>OFF:</b> Select if you are using an antenna. You will need to run AUTO PROGRAM after changing your CABLE settings.</p>
<p><b>CHANNEL FIX</b> <i>Used when you have a cable box or satellite receiver connected</i></p>	<p><b>2-6:</b> Select when you want to control all channel selection through a cable box. Select the appropriate channel number (usually 3 or 4) and use the cable box's remote control for selection. <b>AUX 2-6:</b> Select when a cable box is connected to the AUX input, (see page 4). Press the <b>AUX</b> button to alternate between. <b>VIDEO:</b> Select from available video inputs when you have video equipment connected (e.g. satellite receiver) and you want your TV fixed to it.</p>
<p><b>AUTO PROGRAM</b></p>	<p>Instructs the TV to program all receivable channels.</p>

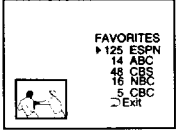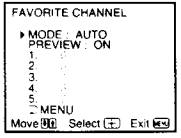

<p><b>CHANNEL SKIP/ADD</b></p>	<p>With the CHANNEL SKIP/ADD window open:</p> <ol style="list-style-type: none"> <li>1 Select the desired channel.</li> <li>2 Press  to SKIP or ADD (only one option will be available).</li> </ol>	<div style="border: 1px solid black; padding: 5px;"> <p>CHANNEL SKIP/ADD 33</p> <p> ADD</p> <p> MENU</p> <p>Use [0-9] or [CH +/-] to select the channel</p> <p>Move   Select  Exit </p> </div>
<p><b>CHANNEL CAPTION</b></p> <p><i>Labeling of channels with their captions</i></p>	<p>With the CHANNEL CAPTION menu open:</p> <ol style="list-style-type: none"> <li>1 Press  and then  or  to access the desired channel, and press  again.</li> <li>2 Press  or  to display the first letter or number of the caption and press  to select it.</li> <li>3 Press  to activate.</li> </ol>	<div style="border: 1px solid black; padding: 5px;"> <p>CHANNEL CAPTION</p> <p> CHANNEL CAPTION 33</p> <p> MENU</p> <p>Move   Select  Exit </p> </div>

## The Parental Guideline Rating System

This table provides a brief overview of the ratings systems available for the PARENTAL CONTROL feature.

For detailed information on how to change your TV rating, see pages 27-28.

### Notes

- The content ratings will increase depending on the level of the age-based rating. For example, a program with a TV-PG V (Violence) rating may contain moderate violence, while a TV-14 V (Violence) rating may contain more intense violence.
- If you choose to block unrated TV programs, please be aware that the following programs may be blocked: emergency broadcasts, political programs, sports, news, public service announcements, religious programs and weather.

Overview of the Ratings		
<p><b>TV RATINGS</b></p> <p>Block programs by TV rating content</p>	<p><b>Age based options:</b></p> <p><b>TV-Y:</b> All children.  <b>TV-Y7:</b> Directed to older children.  <b>TV-G:</b> General Audience.  <b>TV-PG:</b> Parental Guidance suggested.  <b>TV-14:</b> Parents Strongly cautioned.  <b>TV-MA:</b> Mature Audience only.</p> <p><b>Content based options:</b></p> <p><b>FV:</b> Fantasy Violence.  <b>D:</b> Suggestive Dialogue.  <b>L:</b> Strong Language.  <b>S:</b> Sexual situations.  <b>V:</b> Violence.</p>	<p>TV RATINGS</p> <p>▶TV-Y: - FV: -  TV-Y7: -  TV-G: - D_L_S_V_  TV-PG: - D_L_S_V_  TV-14: - L_S_V_  TV-MA: -  ▷MENU</p> <p>Select category  Move [Left] Select [Right] Exit [Exit]</p>
<p><b>MOVIE RATINGS</b></p>	<p>(U.S. models only)</p> <p><b>G:</b> All children.  <b>TV-PG:</b> Directed to older children.  <b>PG-13:</b> General Audience.  <b>R:</b> Parental Guidance suggested  <b>NC-17:</b> No one under 17 admitted.  <b>X:</b> No one under 17 admitted.</p>	<p>MOVIE RATINGS</p> <p>▶G: -  PG: -  PG-13: -  R: -  NC-17: -  X: -  ▷MENU</p> <p>Select rating  Move [Left] Select [Right] Exit [Exit]</p>
<p><b>UNRATED</b></p> <p>Block programs by TV rating content</p>	<p>(U.S. models only)</p> <p><b>VIEW ALL:</b> Allows all unrated programming.  <b>BLOCK TV:</b> Blocks all unrated TV programs.  <b>BLOCK MOVIE:</b> Blocks all unrated movies.  <b>BLOCK ALL:</b> Blocks all unrated programming.</p>	<p>CUSTOM MENU</p> <p>TV RATINGS  MOVIE RATINGS  ▶UNRATED: VIEW ALL  ▷MENU</p> <p>Select category  Move [Left] Select [Right] Exit [Exit]</p>


Overview of the Ratings		
<p><b>ENGLISH RATINGS</b> For Canadian programs that are broadcast in English.</p>	<p>(Canadian models only)  <b>C:</b> All children.  <b>C8+:</b> Children 8 years and older.  <b>G:</b> General programming.  <b>PG:</b> Parental Guidance.  <b>14+:</b> Viewers 14 and older.  <b>18+:</b> Adult programming.</p>	<p><b>ENGLISH RATINGS</b>            ▶C: -            C8+: -            G: -            PG: -            14+: -            18+: -            ↵MENU            Select rating            Move [Left] Select [Right] Exit [Exit]</p>
<p><b>FRENCH RATINGS</b> For Canadian programs that are broadcast in French.</p>	<p>(Canadian models only)  <b>G:</b> General programming.  <b>8 ans+:</b> Not recommended for young children.  <b>13 ans+:</b> Not recommended for ages under 13.  <b>16 ans+:</b> Not recommended for ages under 16.  <b>18 ans+:</b> Programming restricted to adults.</p>	<p><b>FRENCH RATINGS</b>            ▶G: -            8 ans+: -            13 ans+: -            16 ans+: -            18+: -            ↵MENU            Select rating            Move [Left] Select [Right] Exit [Exit]</p>
<p><b>U.S.A. RATINGS</b> For programs from the United States.</p>	<p>(Canadian models only)            Please see TV RATINGS on page 25 for information on U.S.A. RATINGS.</p>	




## Using the PARENTAL CONTROL menu

This section shows you how to access the PARENTAL CONTROL menu. After you follow the example below, the next section shows you how to adjust your TV's rating.

- 1 Press **MENU** and select the **SET UP** menu.

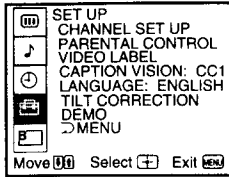


- 2 Point the cursor to **PARENTAL CONTROL** and press **+**.

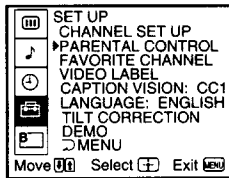


You will be asked to enter a 4-digit password for any future access into the PARENTAL CONTROL menu.

- 3 Press **+** and use the **0-9** buttons to enter your 4-digit password.

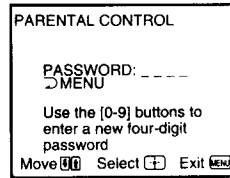


- 4 Confirm your password by entering it again.

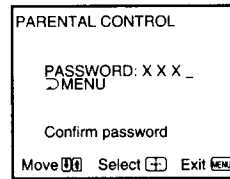

Once your password is set correctly, you will be taken into the PARENTAL CONTROL menu.

In order to change the RATING you will need to set PARENTAL LOCK to ON.

- 5 Point the cursor at **PARENTAL LOCK** and press **+**. Press **▲** or **▼** to ON and press **+**.

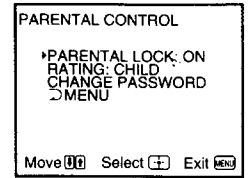


See pages 25-26 for an overview of the Parental Guideline ratings.

### Tip

Keep this instruction manual in a safe place. In the event that you forget your password, please see page 33.

## Setting the TV's RATING


This section provides information on how to set the TV's RATING and how to change your password.

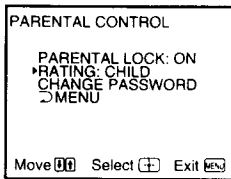

### Note

Entering your password to view a blocked program will temporarily turn PARENTAL LOCK to OFF. To reactivate your PARENTAL CONTROL settings, turn the TV off then back on; the TV will restore your rating settings.

<p><b>PARENTAL LOCK</b></p> <p><b>RATING</b></p>	<p><b>ON:</b> Select to activate the RATING.  <b>OFF:</b> Turns off current ratings.</p> <p>If you are not familiar with the Parental Guideline rating system, you should use one of the following preselected categories to help simplify the rating selection.  <b>The following maximum ratings will be allowed:</b>  <b>CHILD:</b> TV-Y, TV-G, G (U.S. models only),  TV-Y, G (Canadian models only).  <b>YOUTH:</b> TV-PG, PG (U.S. models only),  TV-PG, PG, 8 ans+ (Canadian models only).  <b>YOUNG ADULT:</b> TV-14, PG-13 (U.S. models only),  TV-14, 14+, 13 ans+ (Canadian models only).</p> <p><b>CUSTOM:</b> If you prefer to set more restrictive ratings, highlight CUSTOM and press . See pages 25-26, for an overview of the rating systems available.</p> <p><b>In the CUSTOM RATINGS menu:</b></p> <ol style="list-style-type: none"> <li>1 Select the desired rating category and press .</li> <li>2 Press  or  to select the maximum rating or content and press .</li> <li>3 Press  or  to block or unblock the rating or content and press .</li> </ol> <p><i>Once you have blocked a rating or content, all higher ratings or contents will be automatically blocked.</i></p> <p><b>To view a blocked program:</b>  Press <b>ENTER</b> on the remote control, then use the <b>0-9</b> buttons to enter your password.</p>
<p><b>CHANGE PASSWORD</b></p>	<p><b>To reset your password:</b></p> <ol style="list-style-type: none"> <li>1 Move the cursor to CHANGE PASSWORD press .</li> <li>2 Use the <b>0-9</b> buttons to create a new password, enter again to confirm.</li> </ol> <p><i>In the event that you forget your password, see page 33.</i></p>

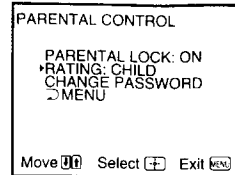

## Programming the remote

You can use the supplied remote control to operate Sony or non-Sony video equipment.

- 1 Press **CODE SET**.
- 2 Press **VTR/DVD (FUNCTION)**.
- 3 Use the **0-9** buttons to key in the manufacturer's code number from the following chart.
- 4 Press **ENTER**.

### VCR code numbers

Manufacturer	Code
Sony	301, 302, 303
Admiral (M. Ward)	327
Aiwa	338, 344
Audio Dynamic	314, 337
Broksonic	319, 317
Canon	309, 308
Citizen	332
Craig	302, 332
Criterion	315
Curtis Mathes	304, 338, 309
Daewoo	341, 312, 309
DBX	314, 336, 337
Dimensia	304
Emerson	319, 320, 316, 317, 318, 341
Fisher	330, 335
Funai	338
General Electric	329, 304, 309
Go Video	322, 339, 340
Goldstar	332

Hitachi	306, 304, 305, 338
Instant Replay	309, 308
JC Penney	309, 305, 304, 330, 314, 336, 337
JVC	314, 336, 337, 345, 346, 347
Kenwood	314, 336, 332, 337
LXI (Sears)	332, 305, 330, 335, 338
Magnavox	308, 309, 310
Marantz	314, 336, 337
Marta	332
Memorex	309, 335
Minolta	305, 304
Mitsubishi/MGA	323, 324, 325, 326
Multitech	325, 338, 321
NEC	314, 336, 337
Olympic	309, 308
Optimus	327
Panasonic	308, 309, 306, 307
Pentax	305, 304
Philco	308, 309
Philips	308, 309, 310
Pioneer	308
Quasar	308, 309, 306
RCA/PROSCAN	304, 305, 308, 309, 311, 312, 313, 310, 329
Realistic	309, 330, 328, 335, 324, 338
Sansui	314
Samsung	322, 313, 321
Sanyo	330, 335
Scott	312, 313, 321, 335, 323, 324, 325, 326
Sharp	327, 328
Shintom	315
Signature 2000 (M. Ward)	338, 327
SV2000	338
Sylvania	308, 309, 338, 310
Symphonic	338
Tashiro	332
Tatung	314, 336, 337

Teac	314, 336, 338, 337
Technics	309, 308
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	314, 330, 336, 337
Zenith	331

### Operating a VCR Buttons on the remote control

To turn on or off	Press <b>VTR/DVD (POWER)</b> .
To select a channel directly	Press the <b>0-9</b> buttons.
To change channels	Press <b>CH +/-</b> .
To record	Press <b>▶</b> and <b>●</b> simultaneously.
To play	Press <b>▶</b> .
To stop	Press <b>■</b> .
To fast forward	Press <b>▶▶</b> .
To rewind the tape	Press <b>◀◀</b> .
To pause	Press <b>II</b> . To resume normal playback, press again or press <b>▶</b> .
To scan	Press <b>▶▶</b> or <b>◀◀</b> during playback. To resume normal playback, release the button.
To change input mode	Press <b>TV/VTR</b> .

**Tips**

- In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied remote control. In this case, please use the equipment's own remote control.
- When you remove the batteries, the code number may revert to the factory setting.
- The code numbers for Sony VCRs are assigned at the factory as follows:

VHS VCR	<b>301</b>
	(preset code for the supplied remote control)
8 mm VCR	<b>302</b>
Beta, ED Beta VCRs	<b>303</b>

**Laserdisc code numbers**

Manufacturer	Code
Sony	701
Panasonic	704, 710
Pioneer	702

**Operating a Laserdisc**      **Buttons on the remote control**

To turn on or off	Press <b>VTR/DVD (POWER)</b> .
To play	Press <b>▶</b> .
To stop	Press <b>■</b> .
To pause	Press <b>⏸</b> . To resume normal playback, press again or press <b>▶</b> .
To scan	Press <b>▶▶</b> or <b>◀◀</b> during playback. To resume normal playback, press <b>▶</b> .
To search the chapter forward or backward	Press <b>CH +/-</b> .

**Tip**

If you will not be programming a satellite receiver or cable box into the SAT/CABLE function of your remote, you can use it to program other video equipment (e.g. DVD, MDP, or second VCR).

**DVD (Digital Versatile Disc) code numbers**

Manufacturer	Code
Sony	751
Panasonic	753
Pioneer	752
RCA	755
Toshiba	754

**Operating a DVD player**      **Buttons on the remote control**

To turn on or off	Press <b>VTR/DVD (POWER)</b> .
To play	Press <b>▶</b> .
To stop	Press <b>■</b> .
To pause	Press <b>⏸</b> . To resume normal playback, press again or press <b>▶</b> .
To scan	Press <b>▶▶</b> or <b>◀◀</b> during playback. To resume normal playback, press <b>▶</b> .
To search the chapter forward or backward	Press <b>CH +/-</b> .
To select chapters directly	<b>0-9 + ENTER</b> .
<b>MENU</b>	Press to display DVD menu.
To move cursor in menu	Use your arrow buttons <b>↑, ↓, ←, →</b> .

## Programming the remote control

You can program the supplied remote control to operate a cable box or satellite receiver.

- 1 Press **CODE SET**.
- 2 Press **SAT/CABLE (FUNCTION)**.
- 3 Use the **0-9** buttons to key in the manufacturer's code number from the following chart.
- 4 Press **ENTER**.

## For more details on operating the cable box or satellite receiver

Refer to the operating instructions that were supplied with the equipment.

## If the remote control doesn't work

First, try repeating the setup procedures using the other codes listed for your equipment.

### Tips

- If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some rare cases, you may not be able to operate your equipment with the supplied remote control. In this case, use the equipment's supplied remote control.
- Whenever you remove the batteries the code numbers may revert to the factory setting.

## Cable box code numbers

Manufacturer	Code
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/G. I.	201, 202, 203, 204, 205, 206, 207, 208, 218
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213

## Satellite receiver code numbers

Manufacturer	Code
Sony	801 (preset code for remote control)
General Electric	802
Hitachi	805
Hughes	804
Panasonic	803
RCA/PROSCAN	802, 808
Toshiba	806, 807

Consult the table below; it suggests solutions to specific problems.

<b>Problem</b>	<b>What it could be</b>	<b>What you can do</b>
You want to restore the TV's factory settings		<ul style="list-style-type: none"> <li>• First, turn the TV on. Then while pressing the <b>RESET</b> button on the remote control, press the <b>POWER</b> button on the TV. The TV will turn itself off and then back on. When the TV turns on again, all settings will be reset, and the initial setup screen will appear.</li> </ul>
A red light keeps flashing on the TV for more than a few seconds	<ul style="list-style-type: none"> <li>• Your TV may need service.</li> </ul>	<ul style="list-style-type: none"> <li>• Call your local Sony service center.</li> </ul>
TV makes a noise when turned on	<ul style="list-style-type: none"> <li>• This is a normal function of your TV.</li> </ul>	
Screen is not lit and there is no sound	<ul style="list-style-type: none"> <li>• Power cord may not be plugged in.</li> <li>• Remote control batteries may not be inserted correctly.</li> <li>• TV/VIDEO setting may be incorrect.</li> <li>• Current program may exceed PARENTAL CONTROL settings.</li> </ul>	<ul style="list-style-type: none"> <li>• Check your power cord.</li> <li>• Re-insert the batteries in your remote control.</li> <li>• Press <b>TV/VIDEO</b> until you receive a channel.</li> <li>• Check your PARENTAL CONTROL settings, (page 28).</li> </ul>
Poor or no picture (screen lit), good sound	<ul style="list-style-type: none"> <li>• VIDEO menu settings may not be adjusted correctly.</li> <li>• Antenna/cable connections may be faulty.</li> <li>• VIDEO LABEL inputs may be set to WEB. (This label darkens the screen for ideal WebTV viewing)</li> </ul>	<ul style="list-style-type: none"> <li>• Readjust your VIDEO menu settings, (page 19).</li> <li>• Check your VIDEO LABEL settings, (page 22).</li> </ul>
Good picture, no sound	<ul style="list-style-type: none"> <li>• Sound may be set to MUTE.</li> <li>• Your TV may be set to SAP.</li> <li>• SPEAKER may not be set correctly.</li> </ul>	<ul style="list-style-type: none"> <li>• Press <b>MUTE</b>.</li> <li>• Check the MTS setting in the AUDIO menu, (page 20).</li> <li>• Check your SPEAKER settings, (page 20).</li> </ul>
No color	<ul style="list-style-type: none"> <li>• Color settings may not be adjusted correctly.</li> </ul>	<ul style="list-style-type: none"> <li>• Adjust the COLOR settings in the VIDEO menu, (page 19).</li> </ul>
Only snow and noise appear on the screen	<ul style="list-style-type: none"> <li>• CABLE may not be set correctly in the CHANNEL SET UP menu.</li> <li>• Antenna/cable connections may not be correct.</li> <li>• TV may be set to AUX mode.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure that you have selected the correct CABLE mode in the CHANNEL SET UP menu, (page 23).</li> <li>• Press <b>ANT</b> on your remote control to change the input mode, (page 15).</li> </ul>

**Supplied accessories**

Remote control RM-Y168 (KV-32FS10, 36FS10 only), RM-Y171 (KV-27FV15, 32FV15, 36FV15 only)(1)  
 Batteries size AA (R6) (2)

**Optional accessories**

Connecting cables  
 RK-74A, RK-G69HG, VMC-10HG,  
 VMC-720M, VMC-810S/820S, YC-15V/  
 30V  
 TV Stand SU-27FD2, SU-32FD2, SU-36FD2  
 U/V mixer EAC-66

<b>Problem</b>	<b>What it could be</b>	<b>What you can do</b>
Cannot receive upper channels (UHF) when using an antenna	<ul style="list-style-type: none"> <li>CABLE setting may not be correct in the CHANNEL SET UP menu.</li> </ul>	<ul style="list-style-type: none"> <li>Ensure that CABLE is set to OFF in the CHANNEL SET UP menu, (page 23).</li> <li>Use AUTO PROGRAM to add receivable channels that are not presently in TV memory, (page 23).</li> </ul>
Cannot receive any channels when using cable	<ul style="list-style-type: none"> <li>CABLE setting may not be correct in the CHANNEL SET UP menu.</li> </ul>	<ul style="list-style-type: none"> <li>Ensure that CABLE is set to OFF in the CHANNEL SET UP menu, (page 23).</li> <li>Use AUTO PROGRAM to add receivable channels that are not presently in TV memory, (page 23).</li> </ul>
Cannot gain enough volume when using a cable box	<ul style="list-style-type: none"> <li>Volume may not be adjusted on your cable box.</li> </ul>	<ul style="list-style-type: none"> <li>Use the remote control supplied with the cable box.</li> </ul>
TV is fixed to one channel	<ul style="list-style-type: none"> <li>CHANNEL FIX settings may not be correct.</li> </ul>	<ul style="list-style-type: none"> <li>Check your CHANNEL FIX settings, (page 23).</li> </ul>
Lost password for PARENTAL CONTROL		<ul style="list-style-type: none"> <li>In the password screen, enter the following master password: 4357. The master password cannot be used to unlock currently blocked channels.</li> </ul>

If, after reading these operating instructions, you have additional questions related to the use of your Sony television, please call our Direct Response Center at 1-800-222-SONY (7669)(U.S. residents only) or (416) 499-SONY (7669)(Canadian residents only).

# Specifications (continued)

	KV - 27FV15	KV - 32FS10	KV - 32FV15	KV - 36FS10	KV - 36FV15
Power requirements	120 V, 60 Hz	120 V, 60 Hz	120 V, 60 Hz	120 V, 60 Hz	120 V, 60 Hz
<b>Number of inputs/outputs</b>					
Video <sup>1)</sup>	3	3	3	3	3
S VIDEO <sup>2)</sup>	2	2	2	2	2
Audio <sup>3)</sup>	3	4	4	4	4
Audio out <sup>4)</sup>	1	1	1	1	1
Monitor out <sup>1)</sup>	1	1	1	1	1
S-Link	2	—	3	—	3
Y, Pb, Pr <sup>5)</sup>	—	1	1	1	1
<b>Speaker output (W)</b>	15W x 2	10W x 2	15W x 2	10W x 2	15W x 2
<b>Power consumption (W)</b>					
In use (Max.)	165 W	190 W	200 W	190 W	200 W
In standby	2 W	2 W	2 W	2 W	2 W
<b>Dimensions (W/H/D)</b>					
(mm)	762 x 604 x 499 mm	882 x 687 x 592 mm	882 x 687 x 592 mm	974 x 757 x 633 mm	974 x 757 x 633 mm
(in.)	30 x 23 3/4 x 19 5/8 in	34 3/4 x 27 x 23 1/4 in	34 3/4 x 27 x 23 1/4 in	38 3/8 x 29 3/4 x 24 7/8 in	38 x 29 3/4 x 25 in
<b>Mass (kg)</b>					
	50 kg 110 lbs	80 kg 176 lbs	80 kg 176 lbs	107 kg 236 lbs	107 kg 236 lbs

## Notes

- <sup>1)</sup> 1 Vp-p, 75 ohms unbalanced, sync negative
- <sup>2)</sup> Y: 1 Vp-p, 75 ohms unbalanced, sync negative  
C: 0.286 Vp-p (Burst signal), 75 ohms
- <sup>3)</sup> 500 mVrms Impedance: 47 kilohms
- <sup>4)</sup> More than 408 mVrms at the maximum volume setting (variable)  
More than 408 mVrms (fix)  
Impedance (Output): 2 kilohms
- <sup>5)</sup> Y: 1.0 Vp-p, 75 ohms, sync negative  
Pb: 0.7 Vp-p, 75 ohms  
Pr: 0.7 Vp-p, 75 ohms

## Television system

American TV standard, NTSC

## Channel coverage

VHF: 2-13/UHF: 14-69/CATV: 1-125

## Picture tube

FD Trinitron® tube

## Visible screen size

27-inch picture measured diagonally (KV-27FV15 only)  
32-inch picture measured diagonally (KV-32FS10, 32FV15 only)  
36-inch picture measured diagonally (KV-36FS10, 36FV15 only)

## Actual screen size

29-inch picture measured diagonally (KV-27FV15 only)  
34-inch picture measured diagonally (KV-32FS10, 32FV15 only)  
38-inch picture measured diagonally (KV-36FS10, 36FV15 only)

## Antenna

75 ohm external terminal for VHF/UHF

*Design and specifications are subject to change without notice.*




## ● SRS (SOUND RETRIEVAL SYSTEM)




The ● SRS (SOUND RETRIEVAL SYSTEM) is manufactured by Sony Corporation under license from SRS Labs, Inc. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.

The word 'SRS' and the SRS symbol ● are registered trademarks of SRS Labs, Inc.

Licensed by BBE Sound, Inc. under USP 4638258.4482866. BBE and BBE symbol are trademarks of BBE Sound, Inc.



<b>A</b>		CH +/- ..... 16
Adjusting your menus ..... 17	CHANNEL CAPTION ..... 24	
ANT ..... 15	CHANNEL FIX ..... 23	
Antenna cable ..... 3	CHANNEL SET UP MENU ..... 23	
Antenna connector ..... 3	AUTO PROGRAM ..... 23	
AUDIO  button ..... 15, 16, 20	CABLE ..... 23	
AUDIO menu operations 	CHANNEL CAPTION ..... 24	
AUDIO OUT ..... 20	CHANNEL FIX ..... 23	
BALANCE ..... 20	CHANNEL SKIP/ADD ..... 24	
BASS ..... 20	FAVORITE CHANNEL ..... 23	
EFFECT ..... 20	COLOR ..... 19	
MTS ..... 20	COLOR CORRECT ..... 19	
SPEAKER ..... 20	Connecting TV to	
TREBLE ..... 20	Antenna ..... 3	
AUDIO OUT	Audio system ..... 9	
FIXED ..... 20	Cable ..... 3	
VARIABLE ..... 20	Cable box and cable ..... 4	
AUTO PROGRAM ..... 23	Camcorder ..... 9	
AUTO VOLUME CONTROL ..... 20	CONTROLS ..... 10	
AUX Hookup ..... 3, 4	DVD player ..... 8	
A/V receiver ..... 9	Satellite receiver ..... 7	
	Satellite receiver and VCR ..... 7	
<b>B</b>	Two VCRs ..... 6	
BALANCE ..... 20	VCR ..... 5	
BASIC menu operations  ..... 18	CURRENT TIME SET ..... 21	
BASS ..... 20	<b>D</b>	
Battery installation ..... 12	DAYLIGHT SAVING ..... 21	
BRIGHTNESS ..... 19	DEMO ..... 22	
<b>C</b>	DISPLAY button	
CABLE ..... 23	CAPTION VISION ..... 22	
Cable box ..... 4	XDS ..... 22	
operation ..... 31	DVD operation ..... 30	
CAPTION VISION (closed caption) ..... 22		
	<b>E</b>	
	Editing using MONITOR OUT ..... 6	
	EFFECT	
	AUTO SRS ..... 20	
	OFF ..... 20	
	SIMULATED ..... 20	
	SRS ..... 20	
	<b>F</b>	
	FAVORITE CHANNEL ..... 23	
	FAVORITE CHANNEL w/preview ..... 23	
	FREEZE button ..... 16	
	<b>H</b>	
	HUE ..... 19	
	<b>I, J, K</b>	
	JUMP button ..... 14	
	<b>L</b>	
	LANGUAGE ..... 22	
	Language selection ..... 13, 22	
	Laserdisc ..... 30	
	<b>M</b>	
	Menu selection ..... 17	
	MODE	
	MOVIE ..... 19	
	SPORTS ..... 19	
	STANDARD ..... 19	
	VIVID ..... 19	

MONITOR OUT .....	6	<b>R</b>	
MTS		RATINGS	
MONO .....	20	ENGLISH .....	26
SAP .....	20	FRENCH .....	26
STEREO .....	20	MOVIE .....	25
MUTING button .....	14	TV .....	25
<b>O</b>		U.S.A. ....	26
ON/OFF TIMER .....	21	UNRATED .....	25
Operating video equipment .....	29	Remote control .....	12, 14
<b>P, Q</b>		FUNCTION buttons .....	14
PARENTAL CONTROL		Illustration .....	inside front cover
PARENTAL LOCK .....	28	<b>S</b>	
RATING .....	28	SAP .....	20
CHANGE PASSWORD .....	28	Safety .....	1
Picture-in-Picture (PIP)		Select buttons .....	12
Main picture .....	16	Adjustment bars .....	12
Window picture .....	16	SET UP menu  .....	22
PICTURE MODE, button .....	14	CAPTION VISION .....	23
PIP connections .....	16	CHANNEL SETUP .....	24
PIP operations		DEMO .....	22
AUDIO .....	16	LANGUAGE .....	22
CH+/- .....	16	PARENTAL CONTROL .....	22
FREEZE .....	16	TILT CORRECTION .....	22
PIP .....	16	VIDEO LABEL .....	22
POSITION .....	16	Setting up TV .....	13
SWAP .....	16	SHARPNESS .....	19
TV/VIDEO .....	16	SLEEP button .....	14
Programming the remote .....	29, 31	SPEAKER	
		ON .....	20
		OFF .....	20
		Specifications .....	33, 34
		SWAP button .....	16
		SYSTEM OFF button .....	15
		<b>T, U</b>	
		TILT CORRECTION .....	22
		TIMER menu operations  .....	21
		CURRENT TIME SET .....	21
		DAYLIGHT SAVING .....	21
		ON/OFF TIMER .....	21
		TREBLE .....	20
		TRINITONE .....	19
		Troubleshooting .....	32, 33
		TV (FUNCTION) button .....	14
		TV POWER button .....	14
		TV/VIDEO button .....	15
		TV OUT .....	9
		<b>V, W, X</b>	
		VCR .....	5
		VCR codes .....	29
		VCR operation .....	29
		VIDEO LABEL .....	22
		VIDEO menu operations  .....	
		BRIGHTNESS .....	19
		COLOR .....	19
		COLOR CORRECT .....	19
		HUE .....	19
		MODE .....	19
		PICTURE .....	19
		SHARPNESS .....	19
		TRINITONE .....	19
		VOL +/- .....	13
		VTR .....	29
		XDS .....	22
		<b>Y, Z</b>	
		Y/PB/PR .....	1, 8