

LCD Colour TV

PDP Colour TV

Quick Start Guide

Operating Instructions



Before operating the TV, please read the "Safety Information" section of this manual.
Retain this manual for future reference.

WEGA

KLV-L32M1

KE-P42M1

Quick Start Guide
Operating Instructions


NOTICE FOR CUSTOMERS IN THE UNITED KINGDOM

A moulded plug complying with BS1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a 5 AMP fuse approved by ASTA or BSI to BS 1362 (i.e. marked with ⚡ or ⚡) must be used.

When an alternative type of plug is used it should be fitted with a 5 AMP FUSE, otherwise the circuit should be protected by a 5 AMP FUSE at the distribution board.

If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

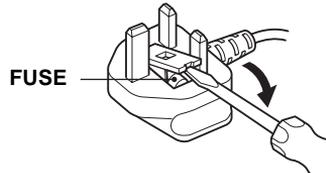

How to replace the fuse

Open the fuse compartment with a blade screwdriver, and replace the fuse.

IMPORTANT

If the plug supplied is not suitable for the socket outlets in your home, it should be cut off and an appropriate plug fitted in accordance with the following instructions:

The wires in this mains lead are coloured in accordance with the following code:

Green-and-yellow	Earth
Blue	Neutral
Brown	Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol \perp or coloured green or green-and-yellow. The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

WARNING

- To prevent the risk of electric shock, do not insert the plug cut off from the mains lead into a socket outlet. This plug cannot be used and should be destroyed.
- To prevent the risk of fire or electric shock, do not expose the unit to rain or moisture.
- Dangerously high voltages are present inside the unit. Do not open the cabinet. Refer servicing to qualified personnel only.

Introduction

Thank you for choosing this Sony LCD/PDP Colour Television.

Before operating the TV, please read this manual thoroughly and retain it for future reference.

Symbols used in the manual



..... Important information.



..... Information on a feature.

1, 2..... Sequence of instructions.



..... Shaded buttons on the remote control show you the buttons you have to press to follow the sequence of instructions.



..... Informs you of the result of instructions followed.

The illustrations used in this manual are of the KLV-L32M1 unless otherwise stated.

Table of Contents

<i>Quick Start Guide</i>	4
--------------------------------	---

Operating Instructions	13
-------------------------------------	----

Safety Information	13
Precautions	18

Overview

Overview of the TV Buttons and Indicators	21
Overview of the Remote Control Buttons	23

Installation

Inserting Batteries into the Remote Control	25
Connecting an Aerial and a VCR	26
Preventing the TV from Falling Down	29

First Time Operation

Switching On the TV and Tuning the TV Automatically ...	30
---	----

Menu System

Introducing and Using the Menu System	32
Picture Adjustment	33
Sound Adjustment	34
Screen Control	36
Features	38
Set Up	40

Other Functions

Sleep Timer Function	44
Picture Off Function (KE-P42M1 only)	44
Screen Memo Function	45
Teletext	46
NexTView	47

Additional Information

Connecting Optional Equipment	50
Using Optional Equipment	57
Remote Control Configuration for VCR/DVD	58
Specifications	60
Troubleshooting	61
Television Channel Number Guide for the United Kingdom	64

Quick Start Guide

Thank you for purchasing this Sony product.


After following this step by step guide you will be able to:

- Insert batteries into the remote control.
- Connect an aerial, VCR, and mains lead to your TV.
- Select the language of the menu screens.
- Select the country/region in which you want to operate your TV.
- Tune your TV.
- Change the broadcast channels into a different order.

1

Checking the Accessories Supplied

Remote Control
RM-Y1102 (KLV-L32M1) (1) or
RM-Y1002 (KE-P42M1) (1):

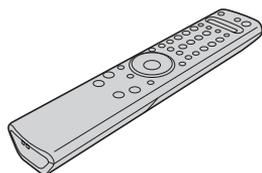

Size AA Batteries
(R6 Type) (2):



Coaxial Cable (1):



Do not remove ferrite cores.

Mains Lead
(Type BF) (1):

KLV-L32M1



KE-P42M1



Refer to “NOTICE FOR CUSTOMERS IN THE UNITED KINGDOM” on page 2 when using this mains lead.


Cleaning Cloth (KE-P42M1 only) (1)
Clamp screws (2)
Plug Holder (KE-P42M1 only) (1)

2

Inserting Batteries into the Remote Control



- Make sure you insert the supplied batteries observing the correct polarity.
- Always remember to dispose of used batteries in an environmentally friendly way.
- Do not use different types of batteries together or mix old and new batteries.

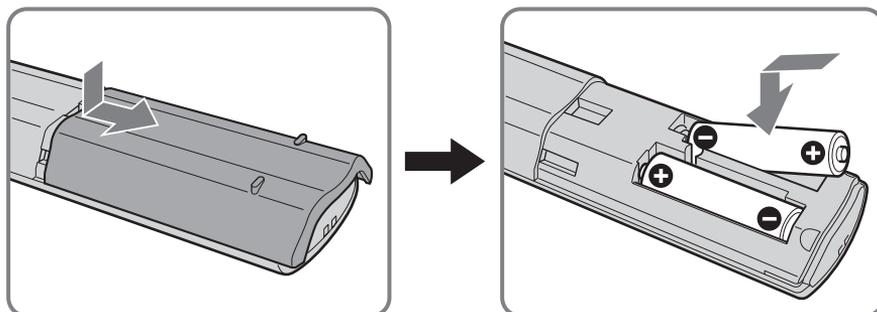

3


Connecting an Aerial, VCR, and Mains Lead to the TV

- Use the supplied mains lead.
- Use the supplied coaxial cable for aerial connection.


 Do not connect to the mains before all connections are complete.

Connecting an aerial

KLV-L32M1

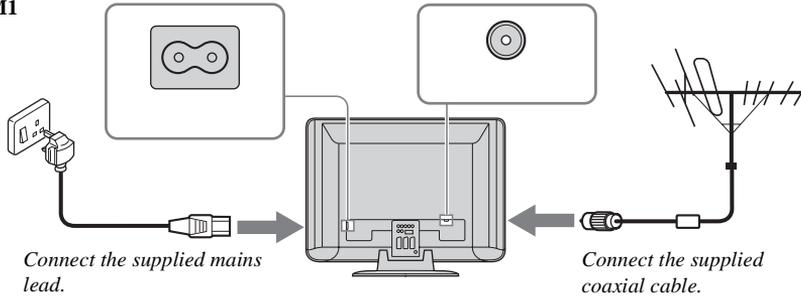


KE-P42M1

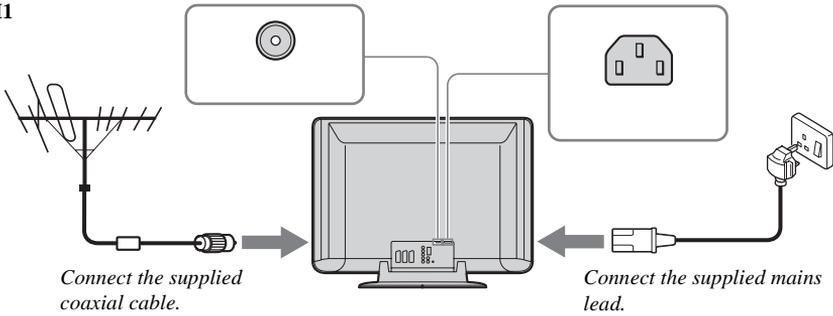


Connecting a VCR with an aerial

KLV-L32M1

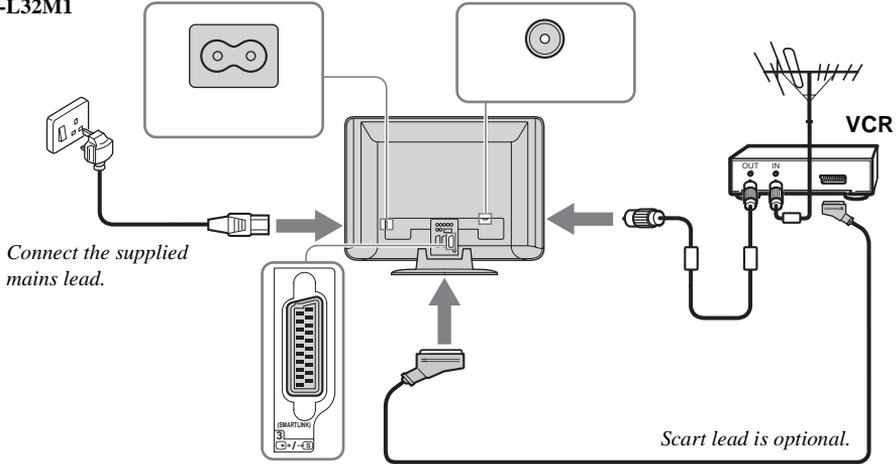

KE-P42M1

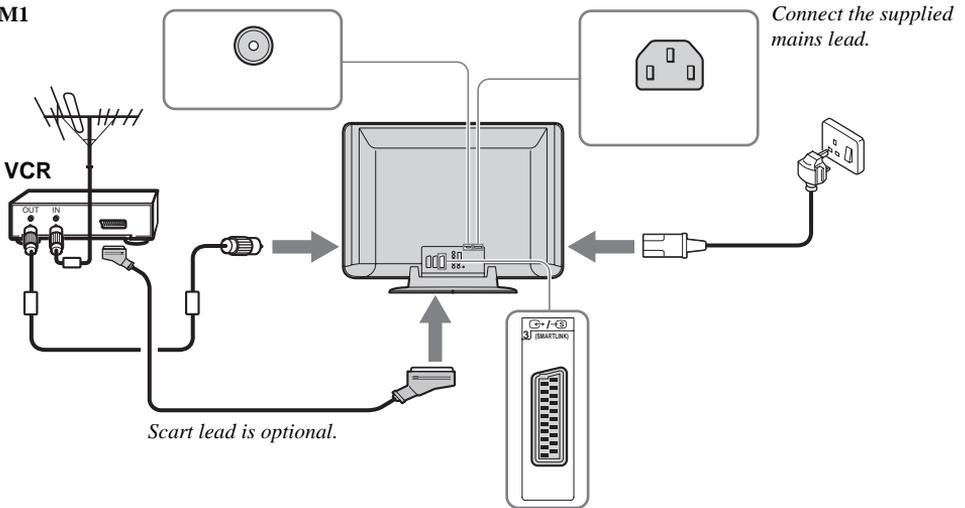

- For more details regarding VCR connection, refer to "Connecting Optional Equipment" on page 50.
- Note that some Scart leads may not fit into the connector on the TV.


(continued)

4 Bundling the Cables (KLV-L32M1 only)

i You can store the cables in the back of the TV.

Bundle the mains lead and the coaxial cable and secure them with the clips on the TV.


i When you install the coaxial cable, loop it as shown in the illustration.

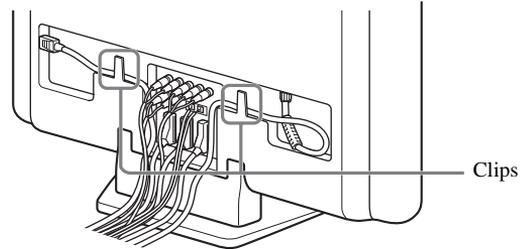

4 Securing the mains plug (KE-P42M1 only)


i You must secure the mains plug to the TV's AC IN jack.

1 Attach the mains plug holder (supplied) to the mains lead.

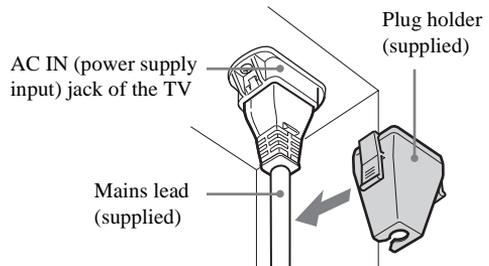


2 Clip on the AC IN jack until you hear a click.

i To unplug the mains lead pull down the plug holder while pushing on both sides of the holder, then pull out the plug.

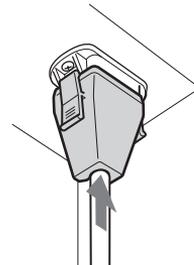


5 *Switching On the TV*

1 Connect the TV to the mains (220–240 V AC, 50 Hz).

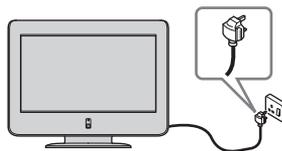


2 Press the  (Power) switch on the TV to switch it on.

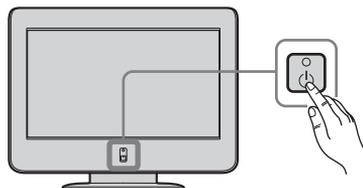

(continued)

6 Selecting the Language of the Menu Screens and the Country/Region

This TV works with menu screens. By following the instructions below, you can select the desired language of the menu screens, and the country/region in which you want to operate the TV.

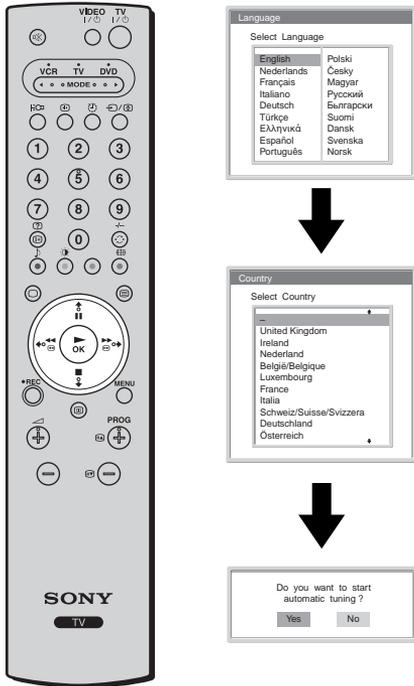

The first time you switch on the TV, the **Language** menu appears automatically on the screen (Auto Startup).


- 1 Press **▼/▲/◀/▶** on the remote control to select the language, then press **OK** to confirm your selection. From now on, all the menus will appear in the selected language.
- 2 The **Country** menu appears automatically on the screen. Press **▼** or **▲** to select the country/region in which you will operate the TV, then press **OK** to confirm your selection.

i If the country/region in which you want to use the TV does not appear in the list, select “-” instead of a country/region.


The **Auto Tuning** menu appears automatically on the screen.

i To perform Auto Startup later, press ******* on the rear panel of the TV.

KLV-L32M1

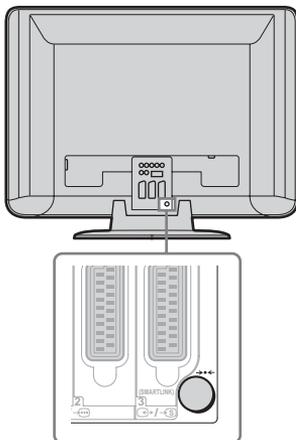



KE-P42M1

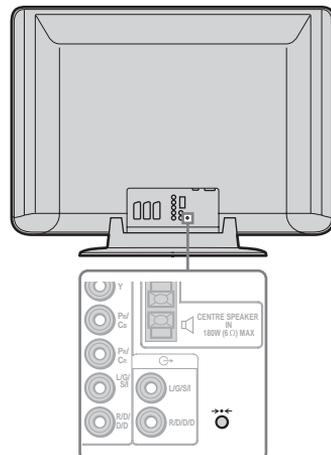

7

Tuning the TV Automatically

You must tune the TV to receive channels (TV Broadcast). If you follow the instructions below, the TV automatically searches and stores all available broadcast channels.

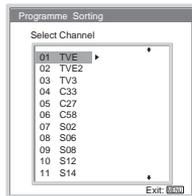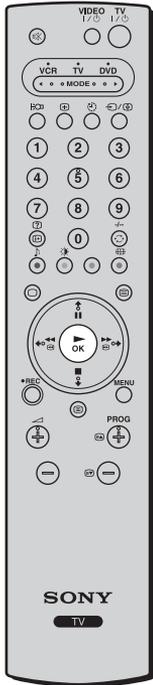

- 1 Press **OK** to select **Yes**.
- 2 The TV starts searching and storing all available broadcast channels.




- This procedure could take some minutes. Please be patient and do not press any buttons, otherwise the auto tuning will not be completed properly.
- If no channels are found during the auto tuning process, a new menu appears automatically on the screen asking you to connect the aerial. Please connect the aerial (see page 6) and press **OK**. The auto tuning process will start again.

When the auto tuning is finished, the **Programme Sorting** menu appears automatically on the screen.

8


Changing the Programme Order of the Broadcast Channels

By following the instructions below, you can rearrange the order in which the broadcast channels appear on the screen.

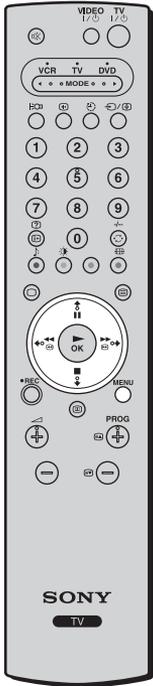

A) If you want to keep the broadcast channels in the tuned order

Press **MENU** to exit and return to the normal TV screen.


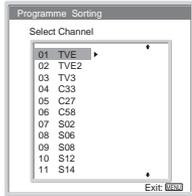


B) If you want to store the broadcast channels in a different order

1 Press **↓** or **↑** to select the programme number with the channel you want to rearrange, then press **→**.

2 Press **↓** or **↑** to select the new programme number position for your selected channel, then press **←**.

i The selected channel now moves to its new programme position and the other channels move accordingly.

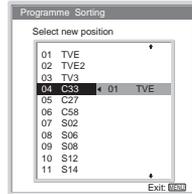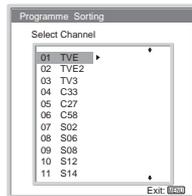

3 Repeat steps 1 and 2 if you want to change the order of the other channels.

4 Press **MENU** to exit and return to the normal TV screen.

 *Your TV is now ready for use.*

Operating Instructions

Safety Information

For Safety

Mains lead

Unplug the mains lead when moving the unit. Do not move the unit with the mains lead plugged in. It may damage the mains lead and result in fire or electric shock. If the unit has been dropped or damaged, have it checked immediately by qualified service personnel.



Installation

Installation of the unit on the wall should be carried out by qualified servicemen. Improper installation may render the unit unsafe.



Medical institutions

Do not place this unit in a place where medical equipment is in use. It may cause malfunction of medical instruments.



Carrying

- Before carrying the unit, disconnect all the cables from the unit.
- When you carry the unit by hand, hold the unit as illustrated on the right. As the rear cover comes off easily, the unit may fall and be damaged or cause serious injury.
- When transporting it, do not subject the unit to shocks or excessive vibration. The unit may fall and be damaged or cause serious injury.
- When you carry the unit in for repair or when you move it, pack it using the original carton and packing material.
- Carrying the unit requires two or more people.



(continued)

Installation and Moving

Ventilation

Never cover the ventilation holes in the cabinet. It may cause overheating and result in fire. Unless proper ventilation is provided, the unit may gather dust and get dirty. For proper ventilation, observe the following:

- Do not install the unit turned backwards or sideways.
- Do not install the unit turned over or upside down.
- Do not install the unit on a shelf or in a closet.
- Do not place the unit on a rug or bed.
- Do not cover the unit with cloth, such as curtains, or items such as newspapers, etc.



Vehicle or ceiling

Do not install this unit in a vehicle. The motion of the vehicle may cause the unit to fall down and cause injury. Do not hang this unit from the ceiling.



Water and moisture

Do not use this unit near water – for example, near a bathtub or shower room. Also do not expose to rain, moisture or smoke. This may result in fire or electric shock. Do not use this unit where insects may enter.



Optional accessories


Observe the following when installing the unit using a stand or wall-mount bracket. If you do not do so, the unit may fall and cause serious injury.

- Be sure to follow the instructions supplied with your stand or wall-mount bracket when installing the unit.
- Be sure to attach the brackets supplied with your stand.




Outdoor use

Do not install this unit outdoors. If the unit is exposed to rain, it may result in fire or electric shock. If the unit is exposed to direct sunlight, the unit may heat up and this may result in damage to the unit.

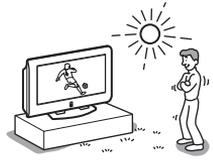

Ships and other vessels

Do not install this unit on a ship or other vessel. If the unit is exposed to seawater, it may cause fire or damage the unit.

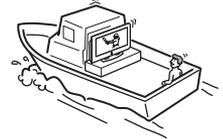

To prevent the unit from falling

Place the unit on a secure, stable stand. Do not hang anything on the unit. If you do, the unit may fall from the stand or wall-mount bracket, causing damage or serious injury.

 
Do not allow children to climb on the unit.



Power Sources

Overloading

This unit is designed to operate on a 220–240 V AC supply only. Take care not to connect too many appliances to the same mains socket as this could result in fire or electric shock.



Mains

Do not use a poor fitting mains socket. Insert the plug fully into the mains. If it is loose, it may cause arcing and result in fire. Contact your electrician to have the mains socket changed.



Moisture

Do not touch the mains lead with a wet hand. If you plug/unplug the mains lead with a wet hand, it may cause electric shock.



Lightning storms

For your own safety, do not touch any part of the unit, mains lead, or aerial lead during lightning storms.



Use

Damage requiring service

If the surface of the unit cracks, do not touch it until you have unplugged the mains lead. Otherwise electric shock may result.

 
Servicing

Do not open the cabinet. Entrust the unit to qualified service personnel only.



Mains lead protection

Pull out the mains lead by the plug. Do not pull on the mains lead itself.



Wiring

Unplug the mains lead when wiring cables. Be sure to unplug the mains lead for your safety, when hooking up.

Cleaning

Clean the mains plug regularly. If the plug is covered with dust and it picks up moisture, its insulation may deteriorate and result in fire. Unplug the mains plug and clean it regularly.



Ventilation holes

Do not insert anything in the ventilation holes. If metal or something flammable is inserted in these holes, it may result in fire or electric shock.



Moisture and flammable objects

- Do not let this unit get wet. Never spill liquid of any kind on the unit. If any liquid or solid object does fall through openings in the cabinet, do not operate the unit. It may result in electric shock or damage to the unit. Have it checked immediately by qualified service personnel.
- To prevent fire, keep flammable objects or naked lights (e.g. candles) away from the unit.



(continued)

Additional Safety Information

Electric shock

Do not touch the unit with wet hands. Doing so may cause electric shock or damage the unit.

Protruding location

Do not install the unit in locations where it may protrude. If you install the unit in the following locations, it may result in injury.

- Do not install the unit in a location where the unit protrudes, such as on or behind a pillar.
 - Do not install the unit in a location where you might bump your head on it.
-

Placement

Never place the unit in hot, humid or excessively dusty places. Do not install the unit where insects may enter. Do not install the unit where it may be exposed to mechanical vibration.



Accessories

Secure the unit properly.

 
If the unit is not secured properly, it may fall and cause injury. Take measures to prevent this by using a stand or other apparatus on the floor or wall in the specified manner, referring to the operating instructions supplied with your stand.

Disposal of the unit (KLV-L32M1 only)

- Do not dispose of the unit with general household waste.
 - The LCD contains a small amount of liquid crystal and mercury. The fluorescent tube used in this unit also contains mercury. Follow your local ordinances and regulations for disposal.
-

Broken glass

Do not throw anything at the unit. The screen glass may explode by the impact and cause serious injury.



Oils

Do not install this unit in restaurants that use oil. Dust absorbing oil may enter the unit and damage the unit.

Corrosion

If you use this unit near the seashore, salt may corrode metal parts of the unit and cause internal damage or fire. It may also shorten the life of the unit. Steps should be taken to reduce the humidity and temperature of the area where the unit is located.

Cleaning

Unplug the mains lead when cleaning this unit. If you do not do so, it may result in electric shock.

Recommended place for the unit

Place the unit on a stable, level surface. Otherwise, the unit may fall and cause injury.



LCD Screen (KLV-L32M1 only)

- Although the LCD screen is made with high-precision technology and 99.99% or more of the pixels are effective, black dots may appear or bright points of light (red, blue, or green) may appear constantly on the LCD screen. This is a structural property of the LCD panel and is not a malfunction.
- Do not expose the LCD screen surface to the sun. Doing so may damage the screen surface.
- Do not push or scratch the front filter, or place objects on top of this unit. The image may be uneven or the LCD panel may be damaged.
- If this unit is used in a cold place, a smear may occur in the picture or the picture may become dark. This does not indicate a failure. These phenomena disappear as the temperature rises.
- Ghosting may occur when still pictures are displayed continuously. It may disappear after a few moments.
- The screen and cabinet get warm when this unit is in use. This is not a malfunction.

Fluorescent lamp (KLV-L32M1 only)

This unit uses a special fluorescent lamp as its light source. If the screen image becomes dark, flickers, or does not appear, the fluorescent lamp has run down and should be replaced. For replacement, consult qualified service personnel.

Heat

Do not touch the surface of the unit. It remains hot, even after the unit has been turned off for some time.

Cleaning the screen surface

The screen surface is finished with a special coating to prevent strong light reflections. Be sure to observe the following precautions to avoid damaging the finish.

- To remove dust from the screen surface, wipe gently with a soft cloth. If dust is persistent, wipe with a soft cloth slightly moistened with a diluted mild detergent solution. You can wash and repeatedly use the soft cloth.
- Never use any type of abrasive pad, alkaline/acid cleaner, scouring powder, or strong solvent such as alcohol, benzine or thinner.

Mains lead

If you damage the mains lead, it may result in fire or electric shock.

- Do not pinch, bend, or twist the mains lead excessively. The core lines may be exposed or cut, causing a short-circuit which may induce fire or electric shock.
 - Do not convert or damage the mains lead.
 - Do not put anything heavy on the mains lead. Do not pull the mains lead.
 - Keep the mains lead away from heat sources.
 - Be sure to grasp the plug when disconnecting the mains lead.
- If the mains lead is damaged, stop using it and ask your dealer or Sony service centre to exchange it.



When not in use

For environmental and safety reasons, it is recommended that the unit be switched off when not in use – not left in standby mode. Disconnect it from the mains.



Cable wiring

Take care not to catch your feet on the cables. It may damage the unit.

Installation


Do not install optional components too close to the unit. Keep optional components at least 30 cm away from the unit. If a VCR is installed in front of the unit or beside the unit, the picture may become distorted.

Precautions


Precautions concerning ventilation

Leave space around the unit. Otherwise, adequate air-circulation may be blocked causing overheating, which may cause fire or damage to the unit.

When installing the unit on the wall

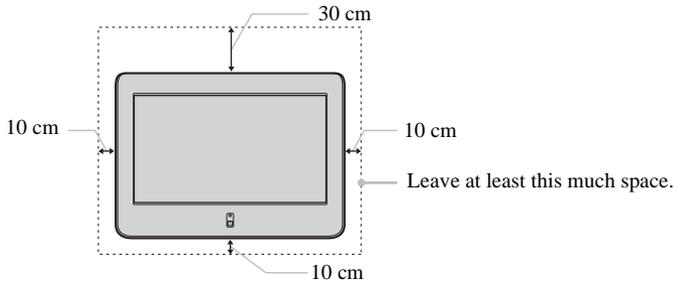


When installing the unit using a stand

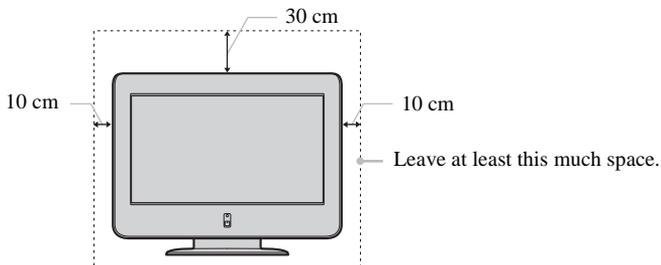


Never install the unit as follows:

Air circulation is blocked.

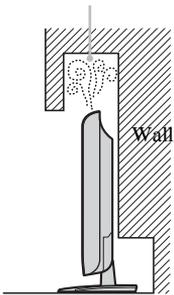

Air circulation is blocked.

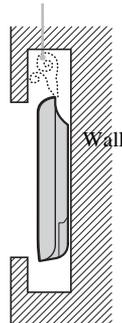

Viewing the TV comfortably

- To view the TV comfortably, the recommended viewing position is from four to seven times the screen's vertical length away from the TV.
- View the TV in moderate light, as viewing the TV in poor light taxes your eyes. Watching the screen continuously for long periods of time can also tax your eyes.

Installing the unit

Use the specified wall-mount bracket or stand.

- Do not install the unit in places subject to extreme temperature, for example in direct sunlight, or near a radiator, or heating vent. If the unit is exposed to extreme temperature, the unit may heat up and this may cause deformation of the casing or cause the unit to malfunction.
- To obtain a clear picture, do not expose the screen to direct illumination or direct sunlight. If possible, use spot lighting directed down from the ceiling.
- The unit is not disconnected from the mains when the unit is switched off. To disconnect the unit completely, pull the plug from the mains.

Volume adjustment

- Adjust the volume so as not to trouble your neighbours. Sound carries very easily at night time. Therefore, closing the windows or using headphones is suggested.
- When using headphones, adjust the volume so as to avoid excessive levels, as hearing damage may result.

Handling the remote control

- Handle the remote control with care. Do not drop or step on it, or spill liquid of any kind onto it.
- Do not place the remote control in a location near a heat source, or in a place subject to direct sunlight, or in a damp room.

Handling and cleaning the screen surface of the unit

To avoid screen degradation, follow the advice given below. Do not push on the screen or scratch it with hard objects, or throw anything at it. The screen may be damaged.

- Be sure to unplug the mains lead before cleaning the unit.
- Do not touch the display panel after operating the unit continuously for a long period as the display panel becomes hot.
- We recommend that the screen surface be touched as little as possible.
- Clean the screen with a soft cloth.
- Never use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzene. Using such materials may result in damage to the screen surface.

Cleaning the cabinet

- Be sure to unplug the mains lead before cleaning the cabinet.
- Clean the cabinet with a soft cloth.
- Note that material deterioration or screen coating degradation may occur if the unit is exposed to a volatile solvent, such as alcohol, thinner, benzene or insecticide, or if prolonged contact is maintained with rubber or vinyl materials.
- The ventilation holes can accumulate dust over a period of time. To ensure proper ventilation, we recommend removing the dust periodically (once a month) using a vacuum cleaner.

(continued)

On the PDP (Plasma Display Panel) (KE-P42M1 only)

On image

- Please note that the PDP screen is made with high-precision technology. However, black points or bright points of light (red, blue, or green) may appear constantly on the PDP screen, and irregular coloured stripes or brightness may appear on the PDP screen. This is not a malfunction.
- With extensive use of this TV set in 4:3 mode, the 4:3 screen area might become darker within a 16:9 panel. To avoid this problem, the “Smart” picture mode should be used (see page 37).

On image retention

- If the following images are displayed for an extended period time, image retention (afterimage) in areas of the screen may result due to the characteristics of the Plasma Display Panel.
 - Black bars at the top and bottom that appear with a wide video source (Letterbox picture).
 - Black bars to the left and right that appear with a 4:3 video source (conventional TV broadcasts).
 - Video game sources
 - DVD on-screen menu displays
 - On-screen menus, channel numbers, etc., of connected equipment such as Set top box, Cable modem, VCR, etc.The risk of this is higher if the set is in “Live” mode or has a high contrast setting. This image cannot be removed once burnt onto the screen. To avoid the risk of image retention do not leave the TV set operating on such a picture, or programme for a long time, use the “Screen Saver” function (page 39) or lower the contrast setting. Repeated extended daily usage of the same image, or programme can also result in this occurrence. **IMAGE RETENTION IS NOT COVERED BY THE SONY WARRANTY.**
- To reduce image retention, this TV set has the “Screen Saver” function. The default setting of the “Orbit” function in “Screen Saver” is “On” (page 39).
- The “Screen Saver” function prevents and reduces image retention. For more details, see page 39.



On altitude

When used at an altitude of greater than 1900m or 6248 feet (air pressure less than 800hPa), this Plasma Display Panel may generate a low buzzing sound as a result of the difference between the interior and exterior air pressure of the panels. This is not considered a defect and is not covered under by the Sony Warranty. This buzzing sound is an inherent characteristic of any Plasma Display Panel.

Overview

Overview of the TV Buttons and Indicators

i To open the drop-down panel of your TV, push up the panel door just under the  mark until you hear a click, then the panel door will open.

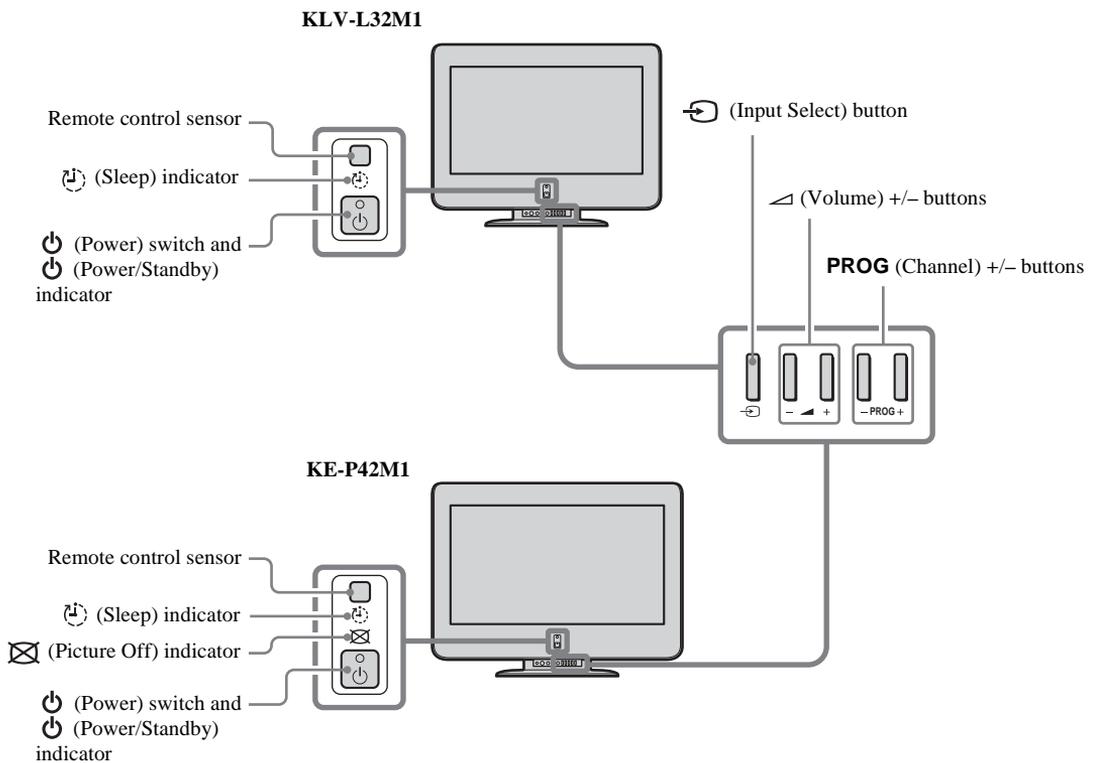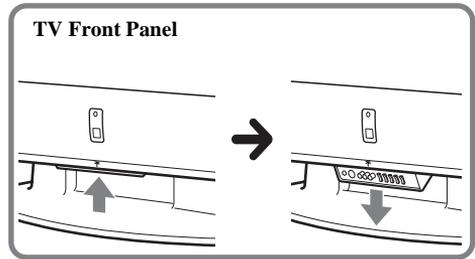

(continued)

Status of the indicators

(Power/Standby) indicator lights up in green

The power of the TV is on.

(Power/Standby) indicator lights up in red

The TV is in the standby mode.

(Power/Standby) indicator flashes in red

The TV is receiving remote control signals.

(Power/Standby) indicator flashes in red repeatedly

There is a problem with the TV. For more details, refer to “Self-diagnosis function” on page 61.

(Sleep) indicator lights up in red

The Sleep Timer function is on when the TV is turned on. For more details, refer to “Sleep Timer Function” on page 44.


(Picture Off) indicator lights up in blue (KE-P42M1 only)

The picture is switched off. Only the picture is switched off (the sound remains unchanged). Press again to cancel. For more details, refer to “Picture Off Function (KE-P42M1 only)” on page 44.



For the connectors on the rear panel of the TV, refer to “Connecting Optional Equipment” on page 50.

Overview of the Remote Control Buttons

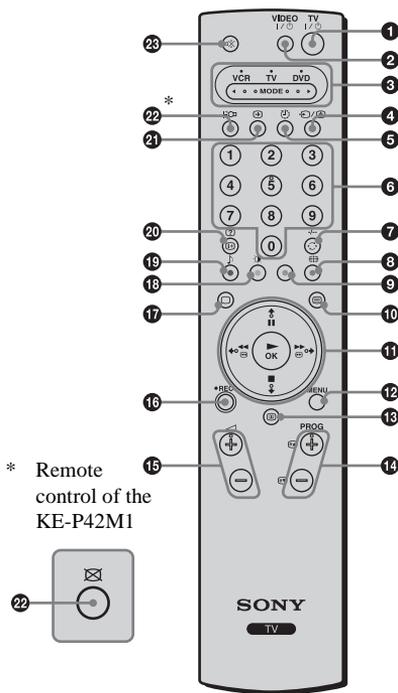

1 Switching the TV to the standby mode:

Press this button to temporarily turn off the TV and switch it to the standby mode (the (Power/Standby) indicator on the TV lights up in red). Press it again to switch on the TV from the standby mode. To save energy, we recommend switching the TV off completely when the TV is not in use.



If no signal is received or no operation is performed in the TV mode for 10 minutes, the TV automatically switches to the standby mode.

2 Switching the VCR or DVD on/off:

Press this button to switch your VCR or DVD on or off.

3 Selecting the VCR, TV or DVD (Media Selector):

With this remote control you can operate not only this TV but also the main functions of your VCR or DVD.

Switch on the equipment you want to operate and press this button repeatedly to select VCR, TV, or DVD. The green light just above the selected equipment lights up momentarily.



An initial setup is required to synchronise this remote control to your VCR or DVD. This setup depends on the manufacturer. For more details, refer to "Remote Control Configuration for VCR/DVD" on page 58.

4 Selecting the input source:

Press this button repeatedly until the input symbol of the desired source appears on the screen.

5 Turning on the Sleep Timer function:

Press this button to set the TV to automatically switch to the standby mode after a specified time period. For more details, refer to "Sleep Timer Function" on page 44.

6 Selecting channels:

Press this button to select channels.

For double-digit programme numbers, enter the second digit within 2.5 seconds.

7 a) If the TV is selected:

Press this button to watch the last channel selected (the last channel watched for at least five seconds).

b) If the VCR is selected:

For Sony's VCR double-digit programme numbers, e.g. 23, press this button first then press the **2** and **3** buttons.

8 Selecting a screen format:

Press this button repeatedly to change the screen format. For more details, refer to "Screen Control" on page 36.

9 Programming the remote control:

Use this button to programme the remote control to operate your VCR or DVD. For more details, refer to "Remote Control Configuration for VCR/DVD" on page 58.

10 Selecting Teletext:

Press this button to switch on Teletext. For more details, refer to "Teletext" on page 46.

11 /OK buttons

a) If the TV is selected:

- When the menu is displayed, use these buttons to operate the menu system. For more details, refer to "Introducing and Using the Menu System" on page 32.
- When the menu is turned off, press **OK** to show an overview of all TV channels. Then press or to select the channel and press **OK** to watch the selected channel.

b) If the VCR or DVD is selected:

Use these buttons to control the main functions of your VCR or DVD.

12 Displaying the menu system:

Press this button to display the menu on the screen. Press it again to remove the menu display from the screen.

13 Displaying NexTVView:

For more details, refer to "NexTVView" on page 47.

(continued)

14 Selecting channels:

Press these buttons to select the next or previous channel.

15 Adjusting the TV volume:

Press these buttons to adjust the volume of the TV.

16 Recording programmes on your VCR:

If the VCR is selected, press this button to record programmes.

17 Selecting the TV mode:

Press this button to switch off Teletext or video input.

18 Selecting a picture mode:

Press this button repeatedly to change the picture mode. For more details, refer to "Picture Adjustment" on page 33.

19 Selecting a sound effect:

Press this button repeatedly to change the style of sound used by your TV. For more details on the styles available, refer to "Sound Adjustment" on page 34.

20 Displaying on-screen information:

Press this button to display all on-screen indicators. Press it again to cancel.

21 Turning on the Screen Memo function:

Press this button to temporarily freeze the picture on the screen. For more details, refer to "Screen Memo Function" on page 45.

22 (KLV-L32M1)

Turning on the Power Saving function:

Press this button to turn on the Power Saving function. "Power Saving" appears on the screen for a few seconds. Press this button again to cancel. For more details, refer to "Features" on page 38.

(KE-P42M1)

Switching off the picture:

Press this button to switch off the picture. Only the picture is switched off; the sound remains on. Press this button again to cancel. For more details, refer to "Picture Off Function (KE-P42M1 only)" on page 44.

* This button is marked with  on the remote control of the KE-P42M1.

23 Muting the sound:

Press this button to mute the sound from the TV. Press it again to restore the sound.




In addition to the TV functions, the coloured buttons (except for the **TV I**  and **VIDEO I**  buttons) are used for Teletext operations. The buttons with green symbols (except for the  button) are also used. For more details, refer to "Teletext" on page 46.

Installation

Inserting Batteries into the Remote Control



- Make sure you insert the supplied batteries observing the correct polarity.
- Always remember to dispose of used batteries in an environmentally friendly way.
- Do not use different types of batteries together or mix old and new batteries.

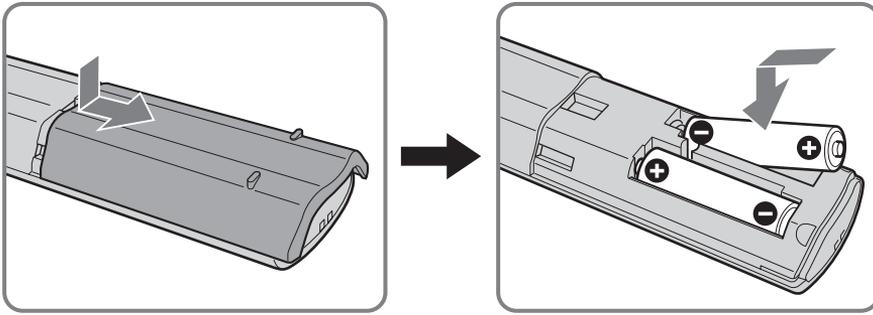


Connecting an Aerial and a VCR

- Use the supplied mains lead.
- Use the supplied coaxial cable for aerial connection.


⚠ Do not connect to the mains before all connections are complete.

Connecting an aerial

KLV-L32M1

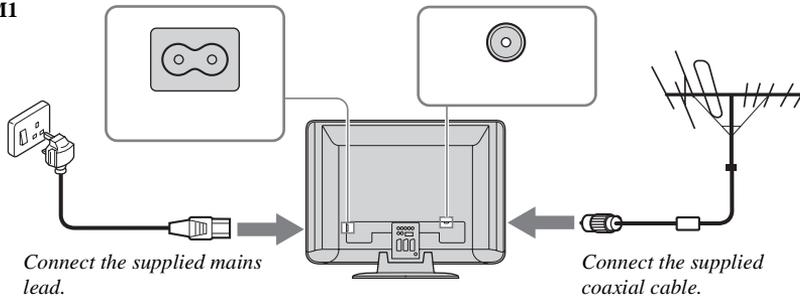


KE-P42M1

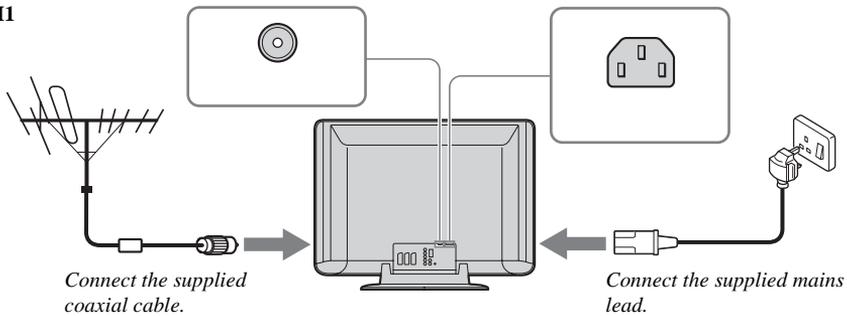


Connecting a VCR with an aerial

KLV-L32M1

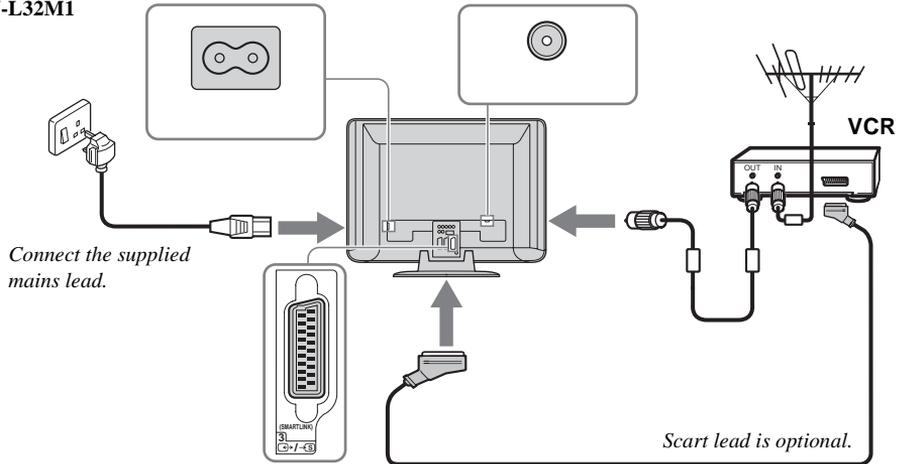

KE-P42M1

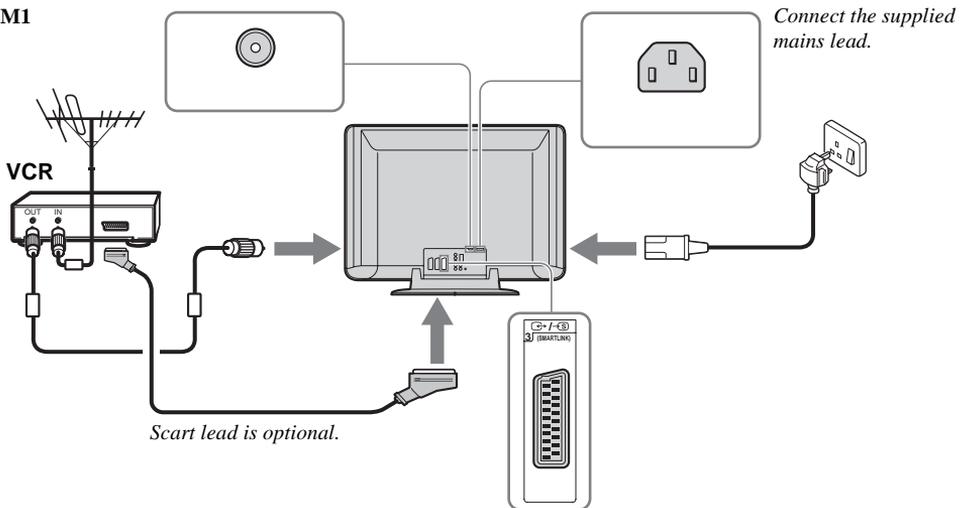

- For more details regarding VCR connection, refer to “Connecting Optional Equipment” on page 50.
- Note that some Scart leads may not fit into the connector on the TV.


(continued)

Bundling the cables (KLV-L32M1 only)

i You can store the cables in the back of the TV.

Bundle the mains lead and the coaxial cable and secure them with the clips on the TV.


i Install the coaxial cable (shown on the right) when you store the coaxial cable with the clip.

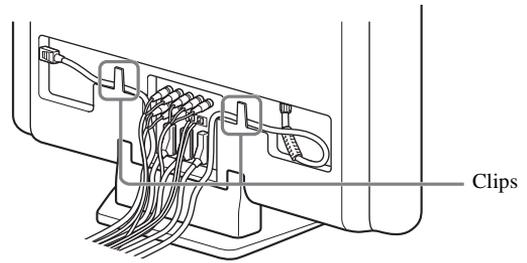

Securing the mains plug (KE-P42M1 only)


i You must secure the mains plug to the TV's AC IN jack.

1 Attach the mains plug holder (supplied) to the mains lead.

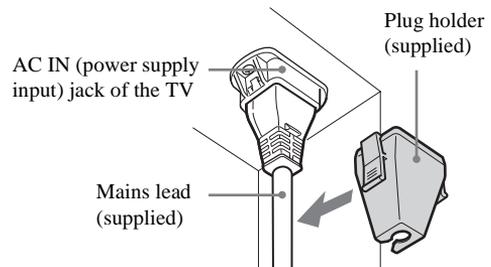

2 Clip on the AC IN jack until you hear clicking.


i To unplug the mains lead pull down the mains plug holder by pushing in both sides of the holder, then pull out the plug.

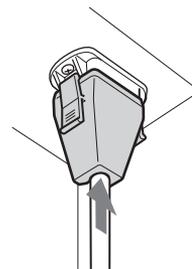

Preventing the TV from Falling Down

i After aerial and other equipment connections are completed, be sure to attach the supplied clamp screws to the rear of the TV, and thread a sturdy cord or chain through it and attach it to a wall or pillar.

1 Remove one of the two screws on the rear of the TV, then install the supplied clamp screw in the screw hole.

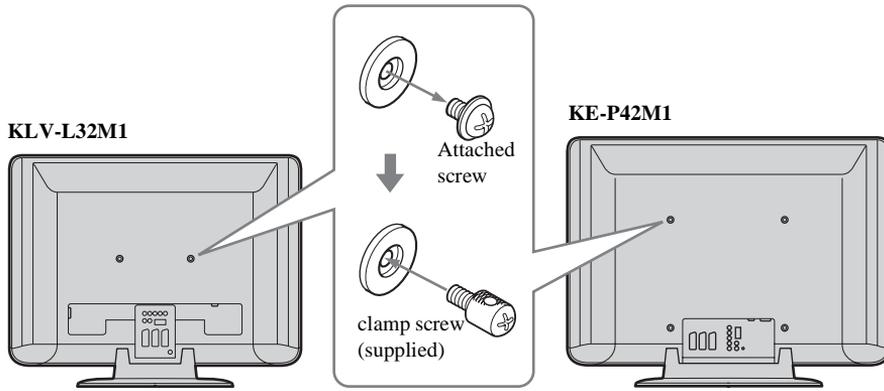

2 Repeat step 1 to install the other clamp screw.


3 Attach a sturdy cord or chain securely to each clamp screw, and attach the cord or chain to a wall or pillar.

First Time Operation

Switching On the TV and Tuning the TV Automatically


- i** The first time you switch on your TV, a sequence of menu screens appear on the TV enabling you to: 1) choose the language of the menu screen, 2) choose the country/region in which you want to operate the TV, 3) search and store all available channels (TV Broadcast), and 4) change the order in which the channels (TV Broadcast) appear on the screen. However, if you need to change any of these settings at a later date, you can do so by selecting the appropriate option in the “Set Up” menu (see page 40).

- 1** Connect the TV to the mains (220–240 V AC, 50 Hz).

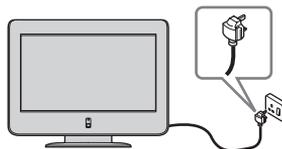

- 2** Press the **⏻** (Power) switch on the TV to switch it on. The first time you switch on the TV, the **Language** menu appears automatically on the screen (Auto Startup).

- i** To perform Auto Startup later, press **⏻** on the rear panel of the TV.

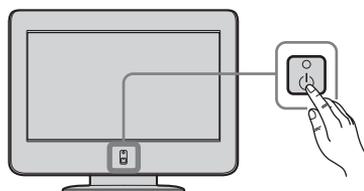


- 3** Press **⏴** / **⏵** / **⏶** or **⏷** on the remote control to select the language, then press **OK** to confirm your selection. From now on, all the menus will appear in the selected language.



- 4** The **Country** menu appears automatically on the screen. Press **⏴** or **⏵** to select the country/region in which you will operate the TV, then press **OK** to confirm your selection.

- i** If the country/region in which you want to use the TV does not appear in the list, select “—” instead of a country/region.

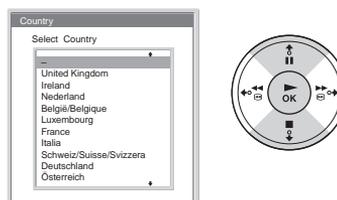


- 5** The **Auto Tuning** menu appears automatically on the screen. Press **OK** to select **Yes**.



6 The TV starts searching and storing all available broadcast channels.



 - This procedure could take some minutes. Please be patient and do not press any buttons, otherwise the auto tuning will not be completed properly.
- If no channels are found during the auto tuning process, a new menu appears automatically on the screen asking you to connect the aerial. Please connect the aerial (see page 26) and press **OK**. The auto tuning process will start again.



7 When the auto tuning is finished, the **Programme Sorting** menu appears automatically on the screen.

A) If you want to keep the broadcast channels in the tuned order, go to step 8.

 


B) If you want to store the broadcast channels in a different order:

- 1 Press **↓** or **↑** to select the programme number with the channel you want to rearrange, then press **→**.
- 2 Press **↓** or **↑** to select the new programme number position for your selected channel, then press **←**.



The selected channel now moves to its new programme position and the other channels move accordingly.

- 3 Repeat steps 1 and 2 if you want to change the order of the other channels.

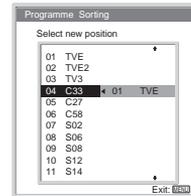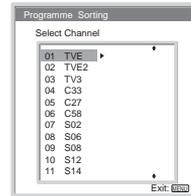

8 Press **MENU** to turn off the menu.

MENU



Your TV is now ready for use.

Menu System

Introducing and Using the Menu System


i Your TV uses an on-screen menu system to guide you through the operations. Use the following buttons on the remote control to operate the menu system.

1 Press **MENU** to switch the first level menu on.



2 Do the following to operate the menu.



- To highlight the desired menu or option, press **▼** or **▲**.
- To enter the selected menu or option, press **OK**.
- To return to the last menu or option, press **◀**.
- To alter the settings of your selected option, press **▼** / **▲** / **◀** or **▶**.
- To confirm your selection, press **OK**.

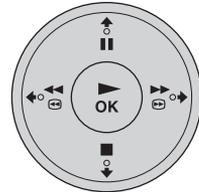

3 Press **MENU** to turn off the menu.



Picture Adjustment

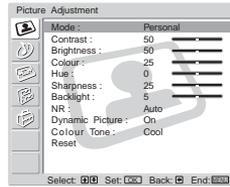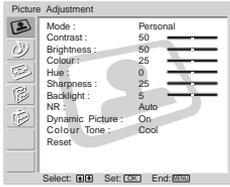

The “Picture Adjustment” menu allows you to alter the picture adjustments.




To do this:

After selecting the item you want to alter, press **OK**, then press \blacktriangledown / \blacktriangle / \blackleftarrow or \blackrightarrow repeatedly to adjust it. This menu also allows you to customise the picture quality for the “Personal” mode based on the programme you are watching.

Mode	<p>Live For enhanced picture contrast and sharpness.</p> <p>Movie For a finely detailed picture.</p> <p>Personal For your own custom settings.</p>
Contrast	<p>Press \blacktriangledown or \blackleftarrow to reduce picture contrast. Press \blacktriangle or \blackrightarrow to enhance picture contrast.</p>
Brightness	<p>Press \blacktriangledown or \blackleftarrow to darken the picture. Press \blacktriangle or \blackrightarrow to brighten the picture.</p>
Colour	<p>Press \blacktriangledown or \blackleftarrow to decrease colour intensity. Press \blacktriangle or \blackrightarrow to increase colour intensity.</p>
Hue	<p>Press \blacktriangledown or \blackleftarrow to decrease the green tones. Press \blacktriangle or \blackrightarrow to increase the green tones.</p>
 Hue can only be adjusted for an NTSC colour signal (e.g. U.S.A. video tapes).	
Sharpness	<p>Press \blacktriangledown or \blackleftarrow to soften the picture. Press \blacktriangle or \blackrightarrow to sharpen the picture.</p>
Backlight (KLV-L32M1 only)	<p>Press \blacktriangledown or \blackleftarrow to darken the backlight. Press \blacktriangle or \blackrightarrow to brighten the backlight.</p>
NR (Noise Reduction)	<p>Auto/Off Select to reduce the noise level.</p>
 NR (Noise Reduction) cannot be adjusted for an input signal from the Y, Pb/Cb, Pr/Cr jacks of  .	
Dynamic Picture	<p>On/Off Select to enhance the picture contrast.</p>
Colour Tone	<p>Cool/Normal/Warm Select to give bright colours a red tint (setting is variable from Cool to Warm).</p>
Reset	<p>Cancel/OK Select OK to reset the picture to the factory preset levels.</p>

 Only “Mode,” “Contrast,” and “Reset” can be adjusted when “Mode” is set to “Live” or “Movie.”

Sound Adjustment

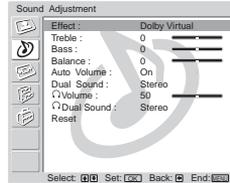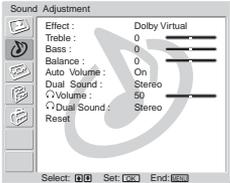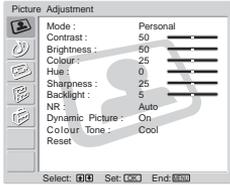

The “Sound Adjustment” menu allows you to alter the sound adjustments.

To do this:

After selecting the item you want to alter, press **OK**, then press **↓** / **↑** / **←** or **→** repeatedly to adjust it.

Effect

Off

No effect.

Natural

Enhances clarity, detail and presence of sound by using the “BBE High Definition Sound system.”

Dynamic

Intensifies clarity and presence of sound for better intelligibility and musical realism by using the “BBE High Definition Sound system.”

* **Dolby Virtual**

Uses the TV speakers to simulate the surround effect produced by a multi channel system.



- If you set “Auto Volume” to “On” when **Dolby Virtual** is selected, the **Effect** option automatically changes to **Natural**.
- The sound from the headphones is not effected when the **Effect** option is set to **Natural**, **Dynamic** or **Dolby Virtual**.

Licensed by BBE Sound, Inc. under USP4638258, 4482866. “BBE” and the BBE symbol are trademarks of BBE Sound, Inc.

- * Manufactured under licence from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

Treble

Press **↓** or **←** to decrease higher-frequency sounds.
Press **↑** or **→** to increase higher-frequency sounds.

Bass

Press **↓** or **←** to decrease lower-frequency sounds.
Press **↑** or **→** to increase lower-frequency sounds.

Balance

Press **↓** or **←** to emphasise the left speaker.
Press **↑** or **→** to emphasise the right speaker.

Auto Volume

On/Off

Volume level of the channels will stay the same, independent of the broadcast signal (e.g. in the case of advertisements).



If you set “Effect” to “Dolby Virtual,” **Off** is selected automatically.



When the “Speaker” option in the “Features” menu is set to “Centre in,” the options in the “Sound Adjustment” menu cannot be adjusted.

Dual Sound **Stereo/Mono**
For a stereo broadcast, select **Stereo** or **Mono**.

A/B/Mono
For a bilingual broadcast, select **A** for sound channel 1, **B** for sound channel 2, or **Mono** for a mono channel, if available.

 If you select other equipment connected to the TV, set the **Dual Sound** option to **Stereo**, **A**, or **B**.

 **Volume** Press  or  to turn the volume of the headphones down.
Press  or  to turn the volume of the headphones up.

 Even if headphones are connected to the TV, you can hear the sound from the TV speakers.

 **Dual Sound** Select the “Dual Sound” option of the headphones.

Stereo/Mono
For a stereo broadcast, select **Stereo** or **Mono**.




A/B/Mono
For a bilingual broadcast, select **A** for sound channel 1, **B** for sound channel 2, or **Mono** for a mono channel, if available.

 • If you select other equipment connected to the TV, set the  **Dual Sound** option to **Stereo**, **A**, or **B**.
•  **Dual Sound** works in conjunction with “Dual Sound.”

Reset **Cancel/OK**
Select **OK** to reset the sound to the factory preset.

 Only “Treble,” “Bass,” and “Balance” are restored to the factory settings when you reset the sound.

Screen Control

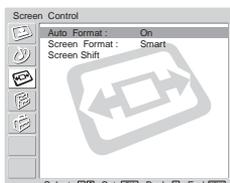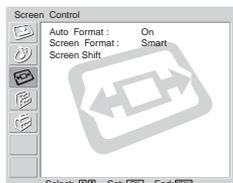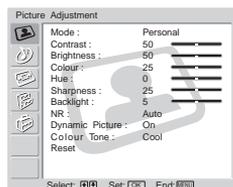

The “Screen Control” menu allows you to alter the screen adjustments.

Auto Format

The “Auto Format” option allows you to automatically change the aspect ratio of the screen.

To do this:

- 1 After selecting this option, press **OK**.
- 2 Press **↓** or **↑** to select **On** (if you want the TV to automatically switch the screen format according to the video input signal) or **Off** (if you want to keep your preference).



- Even if you have selected **On** or **Off** in the **Auto Format** option, you can always modify the format of the screen by pressing **[[[** repeatedly on the remote control.
- **Auto Format** is available for PAL signal and SECAM signal only.

Screen Format

The “Screen Format” option allows you to modify the format of the screen.

To do this:

- 1 After selecting this option, press **OK**.
- 2 Press **▼** or **▲** to select the desired screen format and press **OK**.


Smart

Imitation of the wide screen effect for a 4:3 broadcast.



4:3

 Conventional 4:3 picture size, full picture information.



14:9

Compromise between 4:3 and 16:9 picture size.



Zoom

Wide screen format for letterbox movies.



Wide

For a 16:9 broadcast.



You can adjust the position of the image when **Smart**, **14:9**, or **Zoom** is selected. If parts of the top and bottom of the screen are cut off, press **▲** or **▼** to move the image up or down (e.g. to read subtitles).

Screen Shift

The “Screen Shift” option allows you to adjust the position of the picture for each screen format.

To do this:

- 1 After selecting this option, press **OK**.
- 2 Press **▼** or **▲** to select the desired option and press **OK**. Then press **▼**/**▲**/**◀** or **▶** to adjust the position of the picture.

V Shift (Vertical Shift)

Press **▲** to move the screen up.

Press **▼** to move the screen down.

H Shift (Horizontal Shift)

Press **◀** to move the screen to the left.




Press **▶** to move the screen to the right.

Reset

Select **OK** to reset to the factory settings.



When “Screen Format” is set to “4:3” or “Wide,” **V Shift** (Vertical Shift) cannot be adjusted.

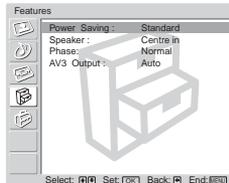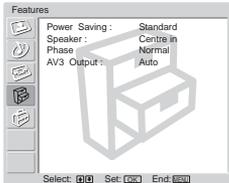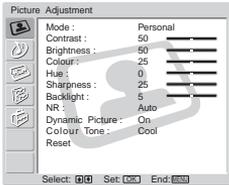

The “Features” menu allows you to alter various adjustments of the TV.

Power Saving

The “Power Saving” option allows you to reduce the power consumption of the TV.

To do this:

- 1 After selecting this option, press **OK**.
- 2 Press **↓** or **↑** to select **Reduce**.



If you switch the TV off then on again when the **Power Saving** option is set to **Reduce**, the setting remains unchanged.

Speaker

The “Speaker” Option allows you to select if you want to listen the TV from the TV speakers or from an external audio equipment connected to the audio output jacks .

To do this:

- 1 After selecting this option, press **OK**.
- 2 Press **↓** or **↑** to select the desired output.

Main:

The sound of the TV is output through the TV’s speakers.

Centre in:

When an external amplifier is connected to the TV’s CENTRE SPEAKER IN terminals, the centre speaker sound from the external amplifier is output through the TV’s speakers.

Off:

The sound of the TV is output through the external audio equipment.



If you have selected **Centre in**, the volume of the centre speaker can be altered by pressing the **▲** +/- buttons of the remote control. If you have selected **Off**, the volume of the external equipment can be altered by pressing the **▲** +/- buttons of the remote control. In either case, when the volume buttons are pressed, the  will appear indicating that the volume you are altering is from external equipment.

Phase

The “Phase” option allows you to adjust the phase of sound when using the TV’s speakers as the centre speaker. If sound from the TV’s speaker (as centre speaker) sound unnatural, adjust the “Phase” option.

To do this:

- 1 After selecting this option, press **OK**.
- 2 Press **↓** or **↑** to select **Reverse**. Sound from the TV’s speakers is phase-reversed.



Phase can be adjusted only when the “Speaker” option is set to “Centre in.”

**Screen Saver
(KE-P42M1 only)**

The “Screen Saver” option allows you to reduce image retention.



If the following images are displayed for an extended period time, image retention (afterimage) in areas of the screen may result due to the characteristics of the Plasma Display Panel.

- Black bars at the top and bottom that appear with a wide video source (Letterbox picture).
- Black bars to the left and right that appear with a 4:3 video source (conventional TV broadcasts).
- Video game sources
- DVD on-screen menu displays
- On-screen menus, channel numbers, etc., of connected equipment such as Set top box, Cable modem, VCR, etc.

To do this:

- 1 After selecting this option, press **OK**.
- 2 Press or to select the following option and press **OK**.
Then press or to move the picture position (**Orbit**), or turn the screen to white (**All White**) to reduce image retention.

All White: Select **On** to turn the screen to white.

Orbit: Select **On** to move the position.



- **All White** function finishes automatically after 30 minutes. If image retention is still present, repeat the above.
- To cancel **All White** function halfway, press any buttons (except the sound-related buttons) on the remote.

AV3 Output

The “AV3 Output” option allows you to select the source to be output from the Scart connector 3. You can record from this Scart any signal coming from the TV or from external equipment connected to the other connectors.



If your VCR supports SmartLink, this procedure is not necessary.

To do this:


- 1 After selecting this option, press **OK**.
- 2 Press or to select the desired output signal: **Auto**, **TV**, **AV1**, **AV2** or **AV5**.



- If you select **Auto**, the output signal will always be the same one that is displayed on the screen.
 - If you have connected a decoder to the Scart connector 3 or to a VCR connected to this Scart, please remember to set **AV3 Output** to **TV** for correct unscrambling.
 - Even if **AV3 Output** is set to **Auto**, signals input through Y, Pb/Cb, Pr/Cr jacks of 4 are not output from Scart connector 3.
-

Set Up

The “Set Up” menu allows you to alter various options on the TV.

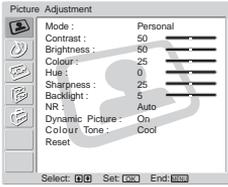

Language

The “Language” option allows you to select the language that the menus are displayed in.

To do this:

- 1 After selecting this option, press **OK**.
- 2 Follow step 3 of “Switching On the TV and Tuning the TV Automatically” on page 30.

Country

The “Country” option allows you to select the country/region in which you want to operate the TV.

To do this:

- 1 After selecting this option, press **OK**.
- 2 Follow step 4 of “Switching On the TV and Tuning the TV Automatically” on page 30.

Auto Tuning

The “Auto Tuning” option allows you to automatically search and store all available channels (TV Broadcast).

To do this:

- 1 After selecting this option, press **OK**.
- 2 Follow steps 5 and 6 of “Switching On the TV and Tuning the TV Automatically” on page 30.

Programme Sorting

The “Programme Sorting” option allows you to change the order in which the channels (TV Broadcast) appear on the screen.

To do this:

- 1 After selecting this option, press **OK**.
 - 2 Follow step 7 B) of “Switching On the TV and Tuning the TV Automatically” on page 31.
-

Programme Labels

The “Programme Labels” option allows you to name a channel using up to five characters (letters or numbers).

To do this:

- 1 After selecting this option, press **OK**.
 - 2 Press \blacktriangledown or \blacktriangle to select the programme number with the channel you want to name, then press **OK**.
 - 3 Press \blacktriangledown / \blacktriangle / \blackleftarrow or \blackrightarrow to select the character, then press **OK**.
 - 4 When you have finished, press \blacktriangledown / \blacktriangle / \blackleftarrow or \blackrightarrow to select the word “End” on the screen and press **OK** to exit the character input screen.
- If you input a wrong character, select the character using \leftarrow or \rightarrow on the screen. Then press \blacktriangledown / \blacktriangle / \blackleftarrow or \blackrightarrow to select the correct character and press **OK**.
 - For a blank, select \square on the screen and press **OK**.
-

AV Preset

The “AV Preset” option (A-B) allows you to:

A) Designate a name for any external equipment you have connected to the TV.

To do this:

- 1 After selecting this option, press **OK**.
 - 2 Press \blacktriangledown or \blacktriangle to select the input source you want to name, then press **OK**.
 - 3 A label automatically appears in the label column.
 - a) If you want to use one of the predefined labels, press \blacktriangledown or \blacktriangle to select the desired label: **AV1/AV2/AV3/AV4/AV5, VIDEO, DVD, CABLE, GAME, CAM or SAT**, then press **OK**.
 - b) If you want to set a different label, select **Edit** and press **OK**. Then with the first element highlighted, press \blacktriangledown / \blacktriangle / \blackleftarrow or \blackrightarrow to select the character, then press **OK**.
When you have finished, press \blacktriangledown / \blacktriangle / \blackleftarrow or \blackrightarrow to select the word “End” on the screen and press **OK** to exit the character input screen.
- If you input a wrong character, select the character using \leftarrow or \rightarrow on the screen. Then press \blacktriangledown / \blacktriangle / \blackleftarrow or \blackrightarrow to select the correct character and press **OK**.
 - For a blank, select \square on the screen and press **OK**.
-

B) Skip any input sources that are not connected to any equipment, when you select the input source with the \leftarrow / \rightarrow buttons.

To do this:

- 1 After selecting this option, press **OK**.
- 2 Press \blacktriangledown or \blacktriangle to select the input source you want to skip, then press **OK**.
- 3 Press \blacktriangledown or \blacktriangle to select **Skip**, then press **OK**.



When an input signal is detected at Scart connectors \leftarrow / \rightarrow 1, \leftarrow / \rightarrow 2 and \leftarrow / \rightarrow 3, the **Skip** setting is automatically cancelled.

Manual Programme Preset The “Manual Programme Preset” option (A–E) allows you to:

A) Preset channels, one by one, in the programme order of your choice.

To do this:

- 1 After selecting this option, press **OK**.
- 2 Highlight the **Programme** option and press **OK**.
- 3 Press **▼** or **▲** to select a programme number for which you want to preset the channel, then press **◀**. If you do not want to preset other options for the channel, press **OK** instead of **◀** and go to step 8.
- 4 After selecting the **System** option, press **OK**.
 Depending on the country/region you have selected in the “Country” option, this option may not be available (see page 40).
- 5 Press **▼** or **▲** to select the TV Broadcast system (**B/G** for western European countries/regions, **D/K** for eastern European countries/regions, **I** for the United Kingdom, or **L** for France), then press **◀**. If you do not want to preset other options for the channel, press **OK** instead of **◀** and go to step 8.
- 6 After selecting the **Channel** option, press **OK**.
- 7 Press **▼** or **▲** to select the type of channel to be tuned (**S** for cable channels or **C** for terrestrial channels), then press **▶**.
After that, press the number buttons to enter the channel number of the TV Broadcast directly. If you do not know the channel number, press **▼** or **▲** to search for it.
When you have tuned the desired channel, press **OK**.
- 8 Highlight the **Confirm** option and press **OK**. Then press **▼** to select **OK** and finally press **OK** to store your channel selection.

Repeat all the above steps to tune and store other channels.

B) Label a channel using up to five characters (letters or numbers).

To do this:

- 1 Press **PROG +/-** to select the programme number with the channel you want to name.
 You cannot select the programme number set to skip in the “Skip” option (see step D on page 43).
- 2 When the programme you want to name appears on the screen, select the **Label** option and press **OK**.
- 3 Press **▼ / ▲ / ◀** or **▶** to select the first character, then press **OK**.
- 4 When you have finished, press **▼ / ▲ / ◀** or **▶** to select the word “End” on the screen and press **OK** to exit the character input screen.
- 5 Highlight the **Confirm** option and press **OK**. Then press **▼** to select **OK** and finally press **OK** to store your choice.
 - *If you input a wrong character, select the character using **◀** or **▶** on the screen. Then press **▼ / ▲ / ◀** or **▶** to select the correct character and press **OK**.*
 - *For a blank, select **□** on the screen and press **OK**.*

-
- C)** Normally the automatic fine tuning (AFT) option will give the best possible picture, however you can manually fine-tune the TV to obtain a better picture if the picture is distorted.

To do this:

- 1 Press **PROG +/-** to select the programme number with the channel you want to fine-tune manually.



You cannot select the programme number set to skip in the “Skip” option (see step D on page 43).

- 2 When the programme you want to fine-tune appears on the screen, select the **AFT** option and press **OK**.
- 3 Press **▼** or **▲** to adjust the fine tuning between -15 and +15 and press **OK**.
- 4 Highlight the **Confirm** option and press **OK**. Then press **▼** to select **OK** and finally press **OK** to store your choice.

*To restore automatic fine tuning, select **On** in step 3 above.*

-
- D)** Skip any unwanted programme numbers when they are selected with the **PROG +/-** buttons.

To do this:

- 1 Highlight the **Programme** option and press **OK**. Then press **▼** or **▲** to select the programme number you want to skip.
- 2 When the programme you want to skip appears on the screen, select the **Skip** option and press **OK**.
- 3 Press **▼** or **▲** to select **Yes** and press **OK**.
- 4 Highlight the **Confirm** option and press **OK**. Then press **▼** to select **OK** and finally press **OK** to store your choice.

*To cancel this function afterwards, select **No** instead of **Yes** in step 3 above.*

-
- E)** View and record scrambled channels when using a decoder connected to the Scart connector /  3 either directly or via a VCR.



Depending on the country/region you have selected in the “Country” option, this option may not be available (see page 40).

To do this:

- 1 Press **PROG +/-** to select the programme number with the scrambled channel you want to view.



You cannot select the programme number set to skip in the “Skip” option (see step D on page 43).

- 2 When the programme you want to view appears on the screen, select the **Decoder** option and press **OK**.
- 3 Press **▼** or **▲** to select **On** and press **OK**.
- 4 Highlight the **Confirm** option and press **OK**. Then press **▼** to select **OK** and finally press **OK** to store your choice.

*To cancel this function afterwards, select **Off** instead of **On** in step 3 above.*

Other Functions

Sleep Timer Function

 The Sleep Timer function allows you to set the TV to switch itself automatically to the standby mode after a specified time period. You can select the time period from among 30 minutes, 60 minutes, 90 minutes, and 120 minutes.

To set the Sleep Timer function

Press  on the remote control repeatedly until the desired time period (“30 min,” “60 min,” “90 min,” or “120 min”) appears on the screen.

When the Sleep Timer function is on, the  (Sleep) indicator on the TV lights up in red.

To cancel the Sleep Timer function

Press  repeatedly until “Off” appears on the screen.

-  • If you switch off the TV and switch it on again, the Sleep Timer function is reset to “Off.”
-  • The message “Sleep timer will end soon. Power will be turned off.” appears on the screen one minute before the TV switches to the standby mode.
- If you press  /  on the remote control, the remaining time in minutes before the TV switches to the standby mode is displayed on the screen.

Picture Off Function (KE-P42M1 only)

 The Picture Off function allows you to listen to the sound from TV or DVDs with the picture on TV screen switched off.

To switch off the picture

Press  on the remote control. The picture is switched off and the sound remains unchanged.

When the Picture Off function is on,  (picture off) indicator on the TV lights up in blue.

To cancel the Picture Off function

Press any button (except the sound related buttons) on the remote control.

Screen Memo Function

 The Screen Memo function allows you to temporarily freeze and review the picture on the screen. This is useful to check and make a note of information displayed on the screen, such as a mail address or a recipe.

To use the Screen Memo function

When the picture you want to freeze appears on the screen, press  on the remote control. Press  again to cancel the Screen Memo function and return to the normal TV picture.

-  • If you change the input source or the channel, the Screen Memo function is cancelled.
- When the Screen Memo function is on, the picture remains still on the screen but the sound continues to play.
- When the Screen Memo function is on, the **MENU**,  (Screen format),  (Picture mode),  (Teletext), and  (NexTView) buttons do not work.
- The Screen Memo function is cancelled after 5 minutes to prevent image retention (KE-P42M1 only).
- The Screen Memo function is cancelled when  (picture off) button is pressed during Screen Memo (KE-P42M1 only).

Teletext

i Teletext is an information service transmitted by most TV stations. The index page of the Teletext service (usually page 100) gives you information on how to use the service. To operate Teletext, use the remote control buttons as indicated below.

A Make sure you use a channel (TV Broadcast) with a strong signal, otherwise Teletext errors may occur.

To switch on Teletext

After selecting the TV channel which carries the Teletext service you want to view, press .

i Each time you press , the screen changes cyclically as follows: Teletext mode → Teletext Superimpose mode → TV mode → Teletext mode → (repeat).



TELETEXT	
Index	_____
Programme	_____ 25
News	_____ 153
Sport	_____ 101
Weather	_____ 98

To select a Teletext page

Input three digits for the page number, using the number buttons.

- If you make a mistake, retype the correct page number.
- If the counter on the screen continues searching, it is because this page is not available. In this case, input another page number.

To access the next or preceding page

Press **PROG +** () or **PROG -** ()

To superimpose Teletext on to the TV

Whilst you are viewing Teletext, press . Press it again to cancel the Teletext mode.

To freeze a Teletext page

Some Teletext pages have sub-pages which follow on automatically. To stop them, press  (). Press it again to cancel the freeze.

To reveal concealed information (e.g. answers to a quiz)

Press  (). Press it again to conceal the information.

To select a sub page

A Teletext page may consist of several sub pages. In this case, the page number that appears on the upper left corner will change from white to green and one or more arrows will appear next to the page number. Repeatedly press  or  on the remote control to watch the desired page.

To switch off Teletext

Press .

Fasttext

i The Fasttext service lets you access pages with one push of a button.

Whilst you are in the Teletext mode and Fasttext is broadcast, a colour coded menu appears at the bottom of the Teletext page. Press the colour button (red, green, yellow or blue) to access the corresponding page.

NexTVView*

* Depending on availability of service.



NexTVView is an on-screen electronic programme guide, providing you with programme information for different broadcasters.

When looking for information, you can search by theme (sports, art, etc.) or date.



When you are viewing the NexTVView service, wrong characters appear on the screen if the language used in the NexTVView service does not match the language set on your TV. To resolve this problem, select the “Language” option in the “Set Up” menu and set the same language as that used in the NexTVView service. Also select the “Country” option in the “Set Up” menu and set the country/region in which the NexTVView service is provided (see page 40).

Displaying NexTVView


- 1 Select a broadcast channel providing the NexTVView service. In this case, the indication “NexTVView” is displayed as soon as data is available.
- 2 To see the NexTVView service, you have two different NexTVView interface types, depending on the percentage of available data.
 - a) **“Programme List” interface**

Whilst you are watching TV, and after the indication “NexTVView” in orange is displayed on the screen, press  on the remote control to see the “Programme List” interface (see fig. 1 on page 48).
 - b) **“Overview” interface**


Whilst you are watching TV, and after more than 50% of NexTVView data is available (100% data may not be available depending on your area), the indication “NexTVView” in black is displayed on the screen. Then press  on the remote control to see the “Overview” interface (see fig. 2 on page 48).
-  As soon as you enter the NexTVView service, the lower left corner of the screen will show the percentage of NexTVView data available. Once you have entered this service, the percentage of data available will not increase.
- 3 To navigate through NexTVView:
 - Moving right or left, press  or .
 - Moving up or down, press  or .
 - Confirming a selection, press **OK**.
- 4 To switch off NexTVView, press  on the remote control.

(continued)

“Programme List” interface (fig. 1)

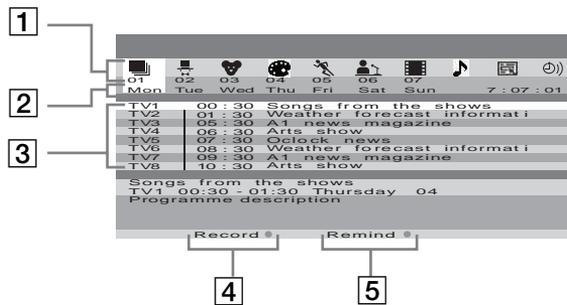

“Overview” interface (fig. 2)

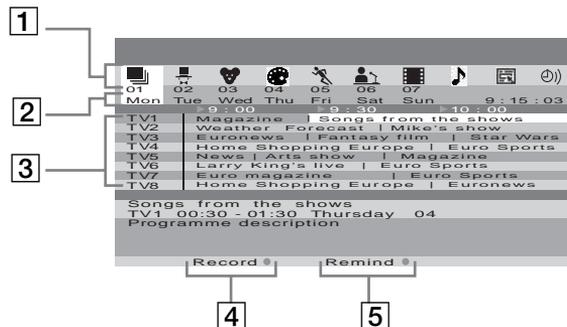

1 Icons for different themes
Refer to “Icon key” on page 49.

2 Date

3 Programme list

4 Record



This function only works if you have connected a VCR which supports SmartLink and Timer Programming features.

If you want to record the selected programme, press the red button on the remote control.

5 Remind

If you want to be reminded when the selected programme is broadcast, press the green button on the remote control. At the time that programme should be broadcast a reminder message is displayed on the TV.



- The “Record” and “Remind” options will be shown on the screen as soon as a programme has been selected, but they will not be shown if you are watching the NextView service on a TV channel which is not a NextView provider.
- The “Record” and “Remind” options will not be available if the programme that you have selected has already started.

Icon key



Full selection list

All the programme information is listed by time and broadcast channels order.



Entertainment



Children



Arts



Sports



News



Movies



Music



Channel selection

If the NexTView provider sends information on more than eight broadcast channels, you can select eight of them to create a personal list.

After you have created your personal list, the default list can be restored. To restore it, select “Auto ▶” by pressing  on the remote control.



Remind list

Shows you a list with all the programmes (maximum of five programmes) that you have selected to be reminded about.



Additional Information


Connecting Optional Equipment

i Using the following instructions, you can connect a wide range of optional equipment to your TV. (Connecting cables are not supplied.)

Connecting to the front of the TV

i To open the drop-down panel of your TV, push up the panel door just under the  mark until you hear a click, then the panel door will open.

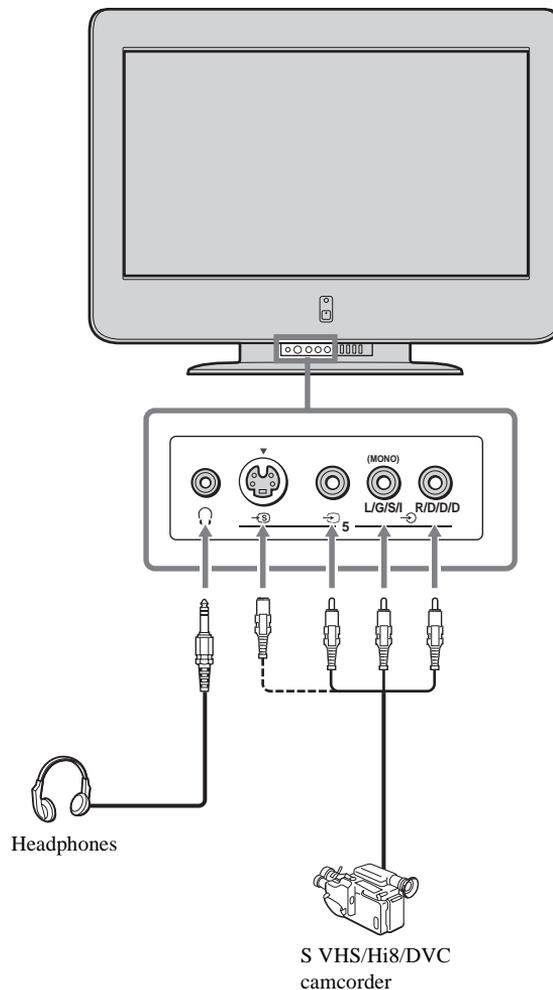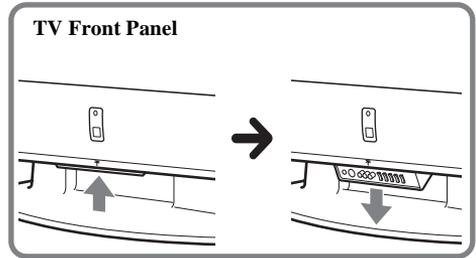

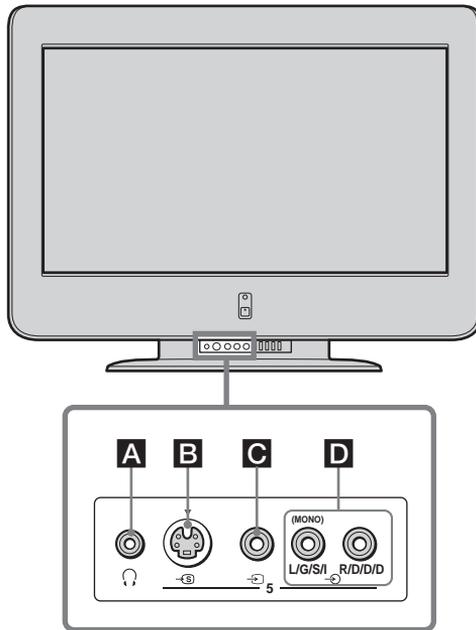

- A** 🎧: Headphones jack
- B** 📺: AV5 S Video input jack


- C** 📺: AV5 Video input jack
- D** 🎧: AV5 Audio input jacks

- i** • To avoid a noisy picture, do not connect external equipment to connectors **B** and **C** at the same time.
- Even if headphones are connected to the TV, you can hear the sound from the TV speakers.

(continued)

Connecting to the rear of the TV

KLVL32M1

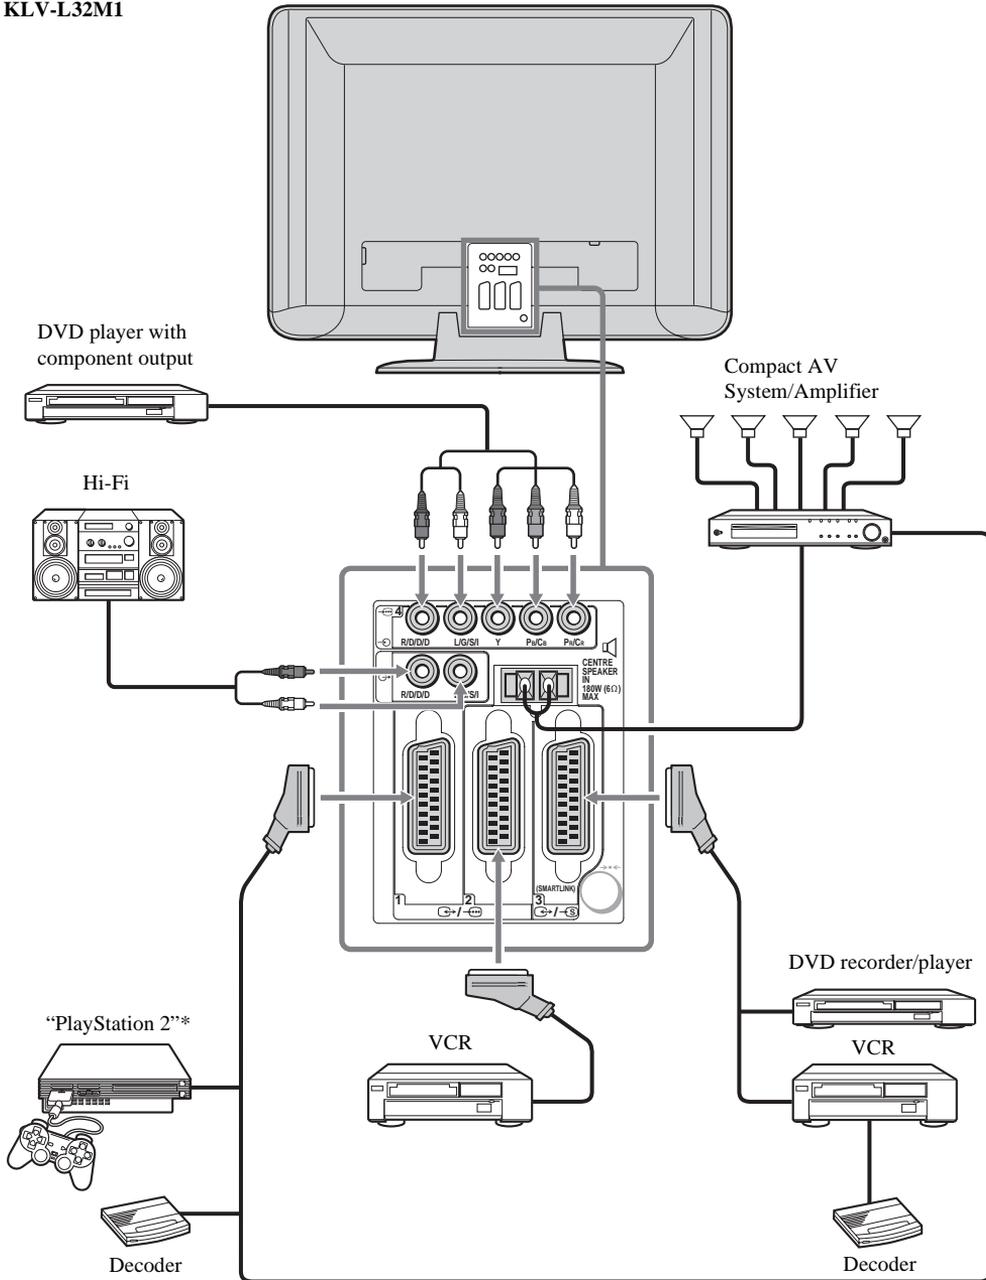


* "PlayStation 2" is a product of Sony Computer Entertainment, Inc.

* "PlayStation" is a trademark of Sony Computer Entertainment, Inc.

i Do not connect a Decoder to the Scart connector  2.

A When you connect or disconnect optional equipment such as an audio amplifier, check that it is switched off before connecting or disconnecting.

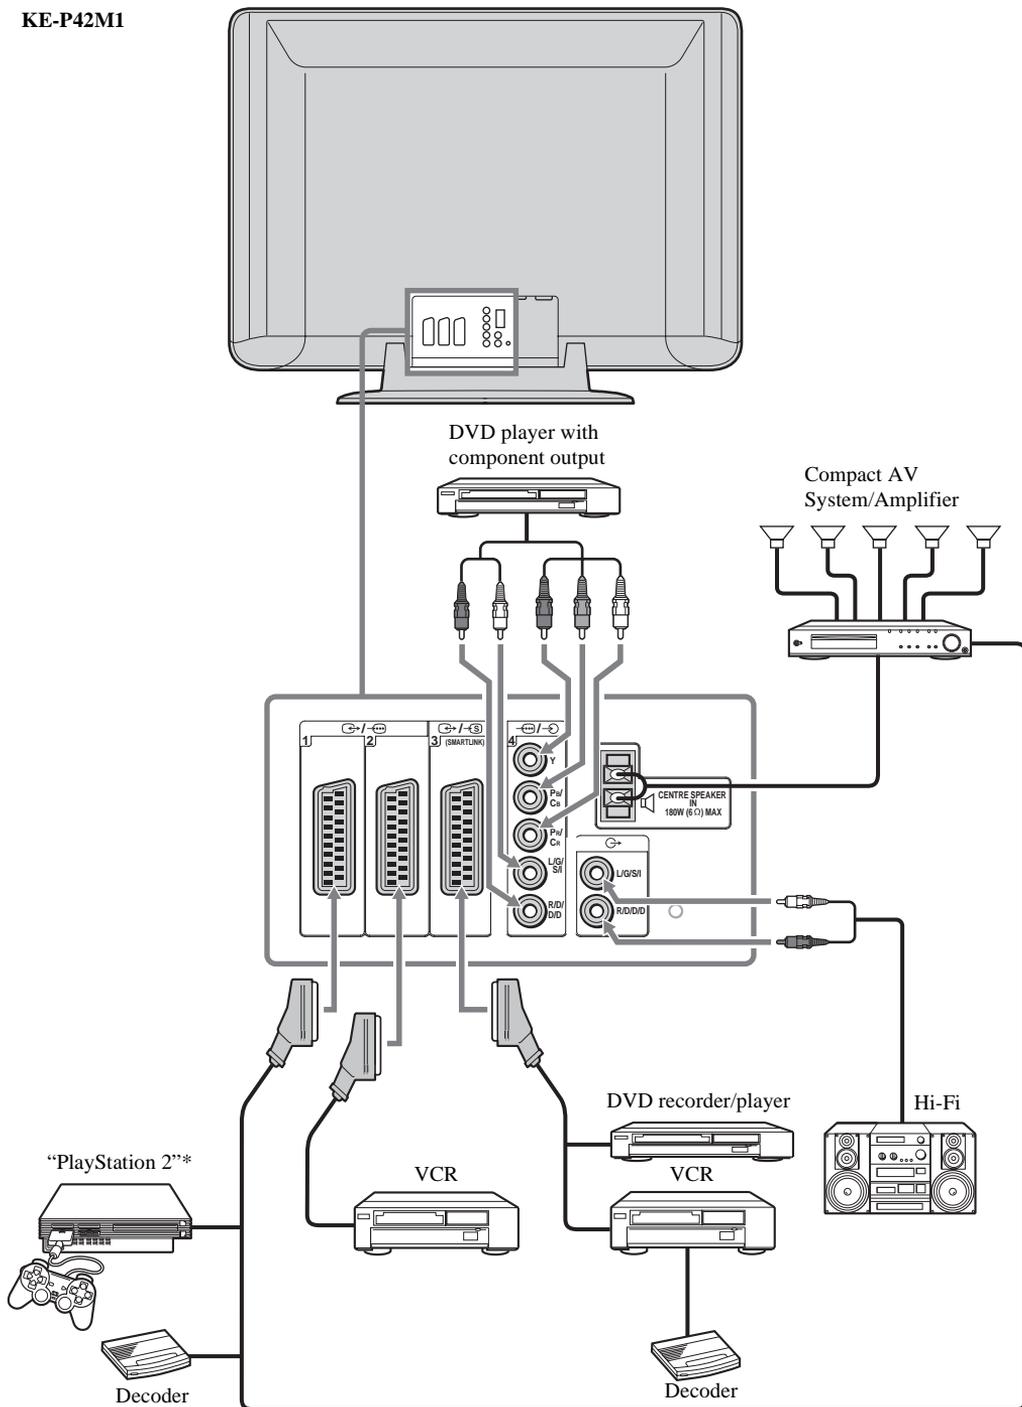


- * "PlayStation 2" is a product of Sony Computer Entertainment, Inc.
- * "PlayStation" is a trademark of Sony Computer Entertainment, Inc.


i Do not connect a Decoder to the Scart connector  2.

A When you connect or disconnect optional equipment such as an audio amplifier, check that it is switched off before connecting or disconnecting.

(continued)

KL V-L32M1

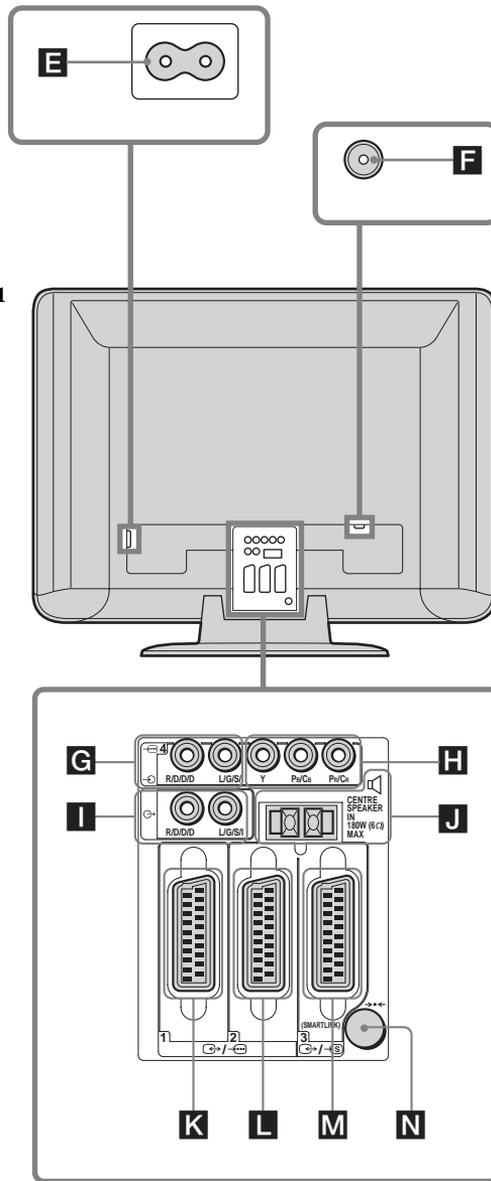

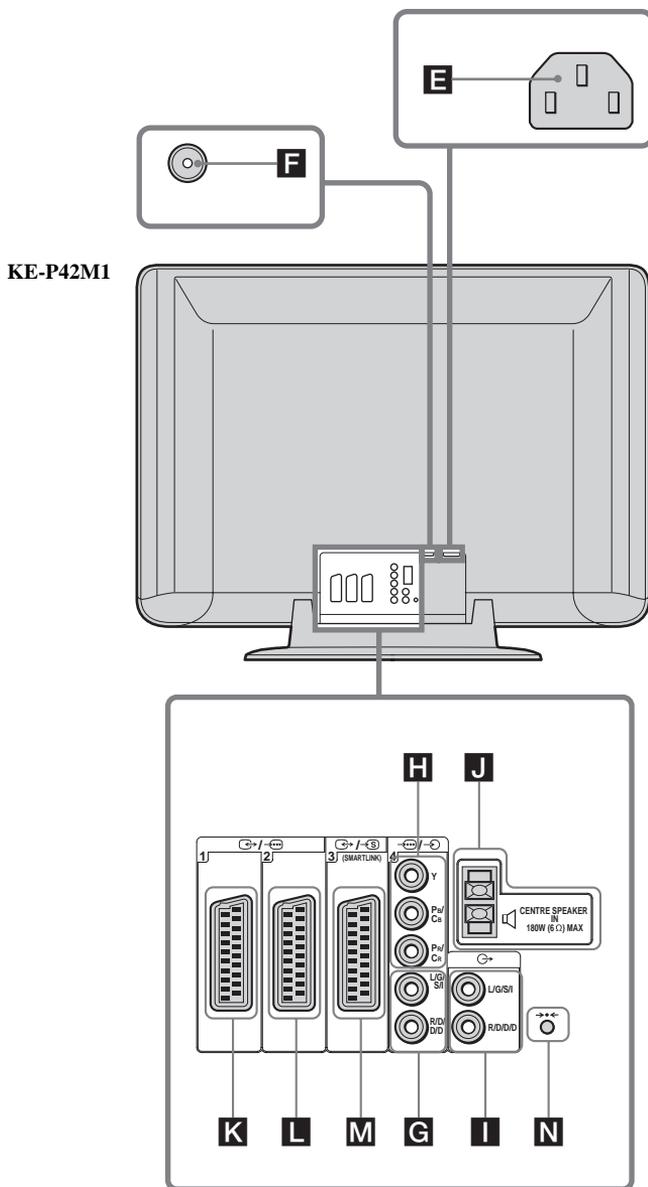

- E** Connect the supplied mains lead.
- F** Connect the supplied coaxial cable.
- G** 4: AV4 Audio input jacks
- H** 4: AV4 Y Pb/Cb Pr/Cr jacks
- I** 4: Audio output jacks

- J** CENTRE SPEAKER IN terminals
- K** 1: AV1 Scart connector
AV1 Scart connector outputs the video signal from the TV tuner.
- L** 2: AV2 Scart connector
AV2 Scart connector outputs all the video signals for the TV (not only from the TV tuner).
- M** 3: AV3 Scart connector (SmartLink)
- N** Auto Startup button

i Note that some Scart leads may not fit into the connector on the TV.

Connecting a VCR

To connect a VCR, refer to “Connecting an Aerial and a VCR” on page 26. We recommend you connect your VCR using a Scart lead. If you do not have a Scart lead, tune in the VCR test signal to the TV programme number “0” by using the “Manual Programme Preset” option. For details on how to manually programme these presets, see page 42, step A. Refer to the instruction manual of your VCR to find out how to find the output channel of your VCR.

Connecting a VCR or a DVD recorder that supports SmartLink

 SmartLink is a direct link between the TV and a VCR or a DVD recorder. For more information on SmartLink, refer to the instruction manual of your VCR or DVD recorder.

If you use a VCR or a DVD recorder that supports SmartLink, please connect the VCR or the DVD recorder using a Scart lead to the Scart connector  3  (M).

If you connect a DVD recorder to Y, PB/CB, PR/CR jacks of  4 (H)

Some DVD recorders may have component signal format. If you wish to input the component signal connect the DVD recorder to Y, PB/CB, PR/CR jacks of  4 (H) and the audio input jacks  4 (G).

Connecting a decoder

If you have connected a decoder to the Scart connector  /  3 (M), or through a VCR connected to this Scart

Select the “Manual Programme Preset” option in the “Set Up” menu and, after entering the “Decoder” option, select “On” (using  or ). Repeat this option for each scrambled signal.

 Depending on the country/region you have selected in the “Country” option, this option may not be available (see page 40).

Connecting external audio equipment

To listen to the sound from the TV on Hi-Fi equipment

Connect your Hi-Fi equipment to the audio output jacks  (I) if you want to amplify the audio output from the TV. Next, using the menu system, select the “Features” menu and set “Speaker” to “Off” (see page 38).

 
 When you switch on or off your TV, turn down the volume of the Hi-Fi equipment connected to the audio output jacks  . If the volume is set too high, it may damage the Hi-Fi equipment.

How to use the CENTRE SPEAKER IN terminals

You can connect an external amplifier’s centre output to the TV’s CENTRE SPEAKER IN terminals  (J). Centre speaker sound, such as 5.1 ch surround, will then play back through the TV’s speakers. Select the “Features” menu using the menu system and set “Speaker” to “Centre in” (see page 38).

Using Optional Equipment

- 1 Connect your equipment to the designated TV socket, as indicated on pages 50 to 56.
- 2 Switch on the connected equipment.
- 3 To watch the picture of the connected equipment, press the  /  button on the remote control repeatedly until the correct input symbol appears on the screen.

Symbol	Input Signals
	• Audio/video input signal through the Scart connector K , L or M .
	• RGB input signal through the Scart connector K or L . This symbol appears only if an RGB source has been connected.
	• S video input signal through the Scart connector M .
	• Component input signal through the Y, Pb/Cb, Pr/Cr jacks H and audio input signal through G .
	• Video input signal through the phono jack C and audio input signal through D .
	• S video input signal through the S video input jack B and audio input signal through D .

- 4 Press the  button on the remote control to return to the normal TV picture.

-  •  1 Scart connector (**K**) outputs the video signal from only the TV tuner.
-  2 Scart connector (**L**) outputs all the video signals for the TV (not only from the TV tuner).

For mono equipment

Connect the phono plug to the L/G/S/I jack and press  /  repeatedly until the input symbol  5 or  5 appears on the screen.

Select the “Sound Adjustment” menu and set “Dual Sound” to “A” (see page 35).

Remote Control Configuration for VCR/DVD

This remote control is set by default to operate the basic functions of this Sony TV, most Sony DVDs and Sony VCRs when batteries are initially installed. To control VCRs and DVDs of other major brands, and certain Sony VCR models, please complete the following steps:

i Before you start, look up the three digit code for your brand of DVD or VCR from the list on page 59. For those brands that have more than one code, enter the first code number.

1 Press the Media Selector button on the remote control repeatedly until the required VCR or DVD green light lights up.



If the Media Selector is in the TV position, code numbers will not be stored.

2 Before the green light goes out, press and hold the yellow button for approximately six seconds until the green light starts flashing.

3 Whilst the green light is flashing, enter all three digits of the code for your brand (see page 59) using the number buttons on the remote control.




If your selected code is entered correctly, all three green lights will be lit momentarily.

4 Turn on your VCR or DVD and check that the main functions work.



- If your equipment is not working or some of the functions do not work, please check to be sure you entered the correct code set or try the next code listed against the brand (see page 59).
- Your brand codes may be lost if weak batteries are not replaced within a few minutes. To reset your DVD or VCR code number, please repeat the above steps. A small label is attached inside the battery cover to allow you to record your brand codes.
- Not all brands are covered and not all models of every brand are covered.

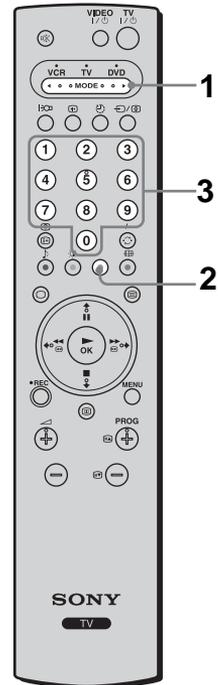

VCR Brand List		DVD Brand List	
Brand	Code	Brand	Code
SONY (VHS)	301, 302, 303, 308, 309, 362	SONY	001
SONY (BETA)	303, 307, 310	AIWA*	021
SONY (DV)	304, 305, 306	DENON	018, 027, 020, 002
AIWA*	325, 331, 351	GRUNDIG	009, 028, 023, 024, 016, 003
AKAI	326, 329, 330	HITACHI	025, 026, 015, 004
DAEWOO	342, 343	JVC	006, 017
GRUNDIG	358, 355, 360, 361, 320, 351	KENWOOD	008
HITACHI	327, 333, 334	LG	015, 014
JVC	314, 315, 322, 344, 352, 353, 354, 348, 349	LOEWE	009, 028, 023, 024, 016, 003
LG	332, 338	MAGNAVOX	009, 028, 023, 024, 016, 003
LOEWE	358, 355, 360, 361, 320, 351	MATSUI	013, 016
MATSUI	356, 357	MICROMEDIA	009
MITSUBISHI	346, 347	MITSUBISHI	010
ORION	328	ONKYO	022
PANASONIC	321, 323	OPTINUS	004
PHILIPS	311, 312, 313, 316, 317, 318, 358, 359	PANASONIC	018, 027, 020, 002
SAMSUNG	339, 340, 341, 345	PHILIPS	009, 028, 023, 024, 016, 003
SANYO	335, 336	PIONEER	004
SHARP	324	RCA	005
THOMSON	319, 350	SAMSUNG	011, 014
TOSHIBA	337	SANYO	007
		SHARP	019, 027
		THOMSON	012
		TOSHIBA	003
		YAMAHA	018, 027, 020, 002

Specifications

Display Unit:

(KLV-L32M1)

Power Requirement:

220–240 V AC, 50 Hz

Screen Size:

32 inches
Approx. 80.0 cm measured diagonally

Display Resolution:

1,366 dots (horizontal) × 768 lines (vertical)

Power Consumption:

145 W

Standby Power Consumption:

0.6 W or less

Dimensions (w × h × d):

Approx. 835 × 670.5 × 287.5 mm
(with stand)

Approx. 835 × 603.5 × 110 mm (without stand)

Weight:

Approx. 19.7 kg (with stand)

Approx. 17.4 kg (without stand)

(KE-P42M1)

Power Requirement:

220–240 V AC, 50 Hz

Screen Size:

42 inches
Approx. 107.4 cm measured diagonally

Display Resolution:

852 dots (horizontal) × 480 lines (vertical)

Power Consumption:

365 W

Standby Power Consumption:

0.6 W or less

Dimensions (w × h × d):

Approx. 1,075 × 826 × 312 mm
(with stand)

Approx. 1,075 × 750 × 110 mm (without stand)

Weight:

Approx. 45 kg (with stand)

Approx. 39.5 kg (without stand)

Panel System:

(KLV-L32M1)

LCD (Liquid Crystal Display) Panel

(KE-P42M1)

Plasma Display Panel

TV System:

Depending on your country/region selection:

B/G/H, D/K, L, I

Colour System:

PAL, SECAM

NTSC 3.58, 4.43 (only Video In)

Aerial:

75 ohm external terminal for VHF/UHF

Channel Coverage:

VHF: E2–E12

UHF: E21–E69

CATV: S1–S20

 
HYPER: S21–S41

D/K: R1–R12, R21–R69

L: F2–F10, B–Q, F21–F69

I: UHF B21–B69


Terminals:



21-pin Scart connector (CENELEC standard) including audio/video input, RGB input, and TV audio/video output.



 21-pin Scart connector (CENELEC standard) including audio/video input, RGB input, and audio/video output.



21-pin Scart connector (CENELEC standard) including audio/video input, S video input, selectable audio/video output, and SmartLink interface.



Y: 1 Vp-p, 75 ohms, 0.3V negative sync

PB: 0.7 Vp-p, 75 ohms

PR: 0.7 Vp-p, 75 ohms



Audio input (phono jacks)

500 mVrms

Impedance: 47 kilo ohms



S video input (4-pin mini DIN)



Video input (phono jack)



Audio input (phono jacks)



Audio output (Left/Right) (phono jacks)



Headphones jack



CENTRE SPEAKER IN:

Max. 180 W (6-ohms)

Sound Output:

10.0 W + 10.0 W

Accessories Supplied:

- Remote control
RM-Y1102 (KLV-L32M1) (1)
RM-Y1002 (KE-P42M1) (1)
- Size AA batteries (R6 type) (2)
- Coaxial cable (1)
- Mains lead (Type BF) (1)
- Cleaning cloth (KE-P42M1 only) (1)
- Clamp screws (2)
- Plug holder (KE-P42M1 only) (1)

Optional Accessory:

- Wall-Mount Bracket SU-LW1 (KLV-L32M1 only)
- Wall-Mount Bracket SU-PW2 (KE-P42M1 only)
- TV stand SU-PG3


Other Features:

- Teletext, Fastext
- Sleep Timer
- SmartLink (Direct link between your TV and a compatible VCR or DVD recorder. For more information on SmartLink, please refer to the instruction manual of your VCR or DVD recorder.)
- TV system autodetection
- Auto Format
- Screen Memo
- NexTView (depending on availability of service)
- Picture Off (KE-P42M1 only)

Troubleshooting

Self-diagnosis function

This TV is equipped with a self-diagnosis function. If there is a problem with your TV, the  (Power/Standby) indicator will flash in red repeatedly. Writing down the duration of flashes and interval between flashes helps you inform your dealer or Sony service centre of the TV's condition.

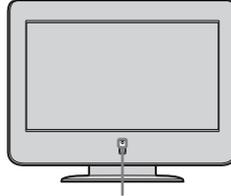

 (Power/Standby) indicator (flashing in red)

- 1 Measure how long the  (Power/Standby) indicator flashes and stops flashing. For example, the indicator flashes for two seconds, stops flashing for one second, and flashes for two seconds.
- 2 Press the  (Power) switch on the TV to switch it off, disconnect the mains lead, and inform your dealer or Sony service centre of how the indicator flashes (duration and interval).

Trouble symptoms and remedies



- Here are some simple solutions to problems which may affect the picture and sound.
- If you continue to experience problems, have your TV serviced by qualified service personnel. Never open the casing yourself.

Problem	Possible remedies
No picture	
No picture (screen is dark) and no sound	<ul style="list-style-type: none">• Check the aerial connection.• Connect the TV to the mains, and press the  (Power) switch on the TV.• If the  (Power/Standby) indicator lights up in red, press TV I/  on the remote control.
The TV turns off automatically (the TV enters the standby mode).	<ul style="list-style-type: none">• Check if the Sleep Timer function is activated (page 44).• If no signal is received or no operation is performed in the TV mode for 10 minutes, the TV automatically switches to the standby mode.
No picture or no menu information from equipment connected to the Scart connector	<ul style="list-style-type: none">• Check that the optional equipment is on and press  /  on the remote control repeatedly until the correct input symbol is displayed on the screen.• Check the connection between the optional equipment and the TV.

(continued)


Problem	Possible remedies
Poor picture/Unstable picture	
Double images or ghosting	<ul style="list-style-type: none"> • Check aerial/cable connections. • Check the aerial location and direction.
Only snow and noise appear on the screen.	<ul style="list-style-type: none"> • Check if the aerial is broken or bent. • Check if the aerial has reached the end of its serviceable life (three to five years in normal use, one to two years at the seaside).
Dotted lines or stripes	<ul style="list-style-type: none"> • Keep the TV away from electrical noise sources such as cars, motorcycles, or hair-dryers.
No colour on colour programmes	<ul style="list-style-type: none"> • Using the menu system, select the “Picture Adjustment” menu and select “Reset” to return to the factory settings (page 33). • If you set the “Power Saving” option to “Reduce,” picture colours may become dimmer (page 38).
No colour or irregular colour when viewing a signal from the Y, Pb/Cb, Pr/Cr jacks of 	<ul style="list-style-type: none"> • Check the connection of the Y, Pb/Cb, Pr/Cr jacks of . • Make sure that the Y, Pb/Cb, Pr/Cr jacks of  are firmly seated in their respective sockets.
Some tiny black points and/or bright points on the screen	<ul style="list-style-type: none"> • The picture of a display unit is composed of pixels. Tiny black points and/or bright points (pixels) on the screen do not indicate a malfunction.
In the screen appears an image retention (afterimage). (KE-P42M1 only)	<ul style="list-style-type: none"> • Using the menu system, select the “Screen Saver” option in the “Features” menu and set the “All White” option to “On” to reduce the image retention.
The screen flickers when turning on the TV (KE-P42M1 only).	<ul style="list-style-type: none"> • This is inherent in the Plasma Display Panel, and does not indicate a malfunction.
The picture is too bright.	<ul style="list-style-type: none"> • Using the menu system, select the “Picture Adjustment” menu and select “Mode.” Then select the desired picture mode (page 33).
Picture (stripe) noise	<ul style="list-style-type: none"> • Make sure that the aerial is connected using the supplied coaxial cable. • Keep the aerial cable away from other connecting cables. • Do not use 300-ohm twin lead cables as interference may occur.
Poor picture (white saturation) when viewing a signal from the Scart connector  3	<ul style="list-style-type: none"> • Make sure that the output signal of the equipment connected to the Scart connector  3 is not an RGB signal. If it is an RGB signal, please connect the equipment to the Scart connector  1 or  2.
Distorted picture and noisy sound	<ul style="list-style-type: none"> • Check if any connected optional equipment is installed in front of the TV or beside the TV. When installing optional equipment, leave some space between the optional equipment and the TV.
Stripe noise during playback/recording of a VCR	<ul style="list-style-type: none"> • Video head interference. Keep your VCR away from the TV. • Leave a space of 30 cm between your VCR and the TV to avoid noise. • Avoid installing your VCR in front of the TV or beside the TV.
Poor or no picture (screen is dark), but good sound	<ul style="list-style-type: none"> • Using the menu system, select the “Picture Adjustment” menu and select “Reset” to return to the factory settings (page 33). • If the  (picture off) indicator lights up in blue, press  (picture off) on the remote control (KE-P42M1 only).
Noisy picture when viewing a TV channel	<ul style="list-style-type: none"> • Using the menu system, select the “Manual Programme Preset” option in the “Set Up” menu and adjust “AFT” (Automatic Fine Tuning) to obtain better picture reception (page 43). • Using the menu system, set the “NR” (Noise Reduction) option in the “Picture Adjustment” menu to reduce the noise in the picture (page 33).

Problem	Possible remedies
Distorted picture when changing programmes or selecting Teletext	<ul style="list-style-type: none"> • Turn off any equipment connected to the Scart connector on the rear of the TV.
Wrong characters appear when viewing Teletext.	<ul style="list-style-type: none"> • Using the menu system, select the “Language” and “Country” options in the “Set Up” menu and set the language and country/region in which you view Teletext (page 40). For Cyrillic languages, we recommend that you select Russia in case your own country/region does not appear in the list.
Wrong characters appear when viewing NexTVView.	<ul style="list-style-type: none"> • Using the menu system, select the “Language” and “Country” options in the “Set Up” menu and set the language and country/region in which NexTVView is provided (page 40).
Some input sources cannot be selected.	<ul style="list-style-type: none"> • Using the menu system, select the “AV Preset” option in the “Set Up” menu and cancel the “Skip” setting of the input source.
No sound/Noisy sound	
Good picture, no sound	<ul style="list-style-type: none"> • Press \triangleleft +/- or Mute on the remote control. • Check that the “Speaker” option is set to “Main” in the “Features” menu (page 38).
Audio noise	<ul style="list-style-type: none"> • Make sure that the aerial is connected using the supplied coaxial cable. • Keep the aerial cable away from other connecting cables. • Do not use 300-ohm twin lead cables as interference may occur.
Menu item is not displayed.	<ul style="list-style-type: none"> • Some items cannot be selected depending on the signal or other settings. Refer to the instructions on each menu item.
Strange sound	
The TV cabinet creaks.	<ul style="list-style-type: none"> • Changes in room temperature sometimes cause the TV cabinet to expand or contract, which can make slight noises. This does not indicate a malfunction.
The TV ticks.	<ul style="list-style-type: none"> • An electrical circuit inside the TV is activated when the TV is turned on. This does not indicate a malfunction.
The TV buzzes.	<ul style="list-style-type: none"> • There might be a surge sound when turning on the TV. This does not indicate a malfunction.
Remote control does not function.	<ul style="list-style-type: none"> • Check that the remote control is set correctly for the device you are using (VCR, TV, or DVD). • If the remote control does not operate the VCR or DVD even when the remote control has been set correctly to VCR or DVD, enter the necessary code set as explained in “Remote Control Configuration for VCR/DVD” (page 58). • Replace the batteries.
The Power/Standby indicator on the TV flashes.	<ul style="list-style-type: none"> • Refer to “Self-diagnosis function” (page 61) and contact your nearest Sony service centre.

Television Channel Number Guide for the United Kingdom

Only the main transmitters are listed. Information regarding the regional sub-relay channel numbers can be obtained by contacting the BBC Engineering Information Dept., Telephone Number 020 7852 5040.

MAIN TRANSMITTERS	BBC1	BBC2	ITV	CH4	CH5
London & South East					
①Bluebell Hill	40	46	43	65	-
②Crystal Palace	26	33	23	30	-
③Dover	50	56	66	53	-
④Heathfield	49	52	64	67	-
⑤Oxford	57	63	60	53	49
South-West					
⑥Beacon Hill	57	63	60	53	-
⑦Caradon Hill	22	28	25	32	-
⑧Huntshaw Cross	55	62	59	65	67
⑨Redruth	51	44	41	47	37
⑩Stockland Hill	33	26	23	29	-
Channel Islands					
⑪Fremont Point	51	44	41	47	-
South					
⑫Hannington	39	45	42	66	-
⑬Midhurst	61	55	58	68	-
⑭Rowridge	31	24	27	21	-
West					
⑮Mendip	58	64	61	54	37
East					
⑯Sandy Heath	31	27	24	21	39
⑰Sudbury	51	44	41	47	-
⑱Tacolneston	62	55	59	65	52
Midlands (West)					
⑲Ridge Hill	22	28	25	32	-
⑳Sutton Coldfield	46	40	43	50	-
㉑The Wrekin	26	33	23	29	-
Midlands (East)					
㉒Walham	58	64	61	54	-
Northern Ireland					
㉓Brougher Mountain	22	28	25	32	-
㉔Divis	31	27	24	21	-
㉕Limavady	55	62	59	65	-
North					
㉖Belmont	22	28	25	32	56
㉗Emley Moor	44	51	47	41	37
North-West					
㉘Winter Hill	55	62	59	65	48
North-East					
㉙Bilsdale West Moor	33	26	29	23	-
㉚Caldbeck	30	34	28	32	56
㉛Chatton	39	45	49	42	-
㉜Pontop Pike	58	64	61	54	-
Scotland					
㉝Angus	57	63	60	53	-
㉞Black Hill	40	46	43	50	37
㉟Sandale	22	67	-	-	-
㊱Caldbeck	-	-	28	32	56
㊲Craigkelly	31	27	24	21	48
㊳Darvel	33	26	23	29	-
㊴Durris	22	28	25	32	67
㊵Eitshal (Lewis)	33	26	23	29	-
㊶Keelyleang Hill	40	46	43	50	-
㊷Knock More	33	26	23	29	-
㊸Rosemarkie	39	45	49	42	-
㊹Rumster Forest	31	27	24	21	-
㊺Selkirk	55	62	59	65	52
Wales					
㊻Blaenplwyf	31	27	24	21	56
㊼Carmel	57	63	60	53	-
㊽Llanddona	57	63	60	53	-
㊾Moel-y-Parc	52	45	49	42	-
㊿Presely	46	40	43	50	37
①Wenvoe	44	51	41	47	-

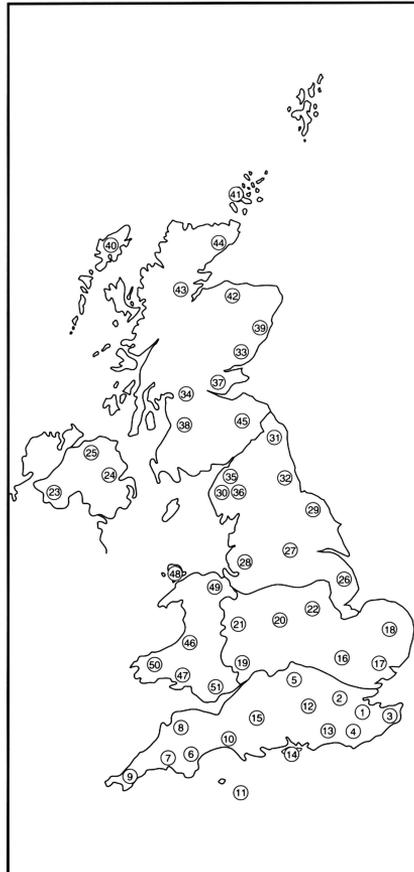

<http://www.sony.net/>

Sony España, S.A.
Printed in Spain