


Contact SAMSUNG WORLDWIDE
If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Country	Customer Care Centre	Web Site
AUSTRALIA	1300 362 603	www.samsung.com/au
CHINA	800-810-5858 400-810-5858 010-6475 1880	www.samsung.com/cn
	HONG KONG:3698 - 4698	www.samsung.com/hk
INDIA	3030 8282 1-800-3000-8282 1800 110011	www.samsung.com/in
INDONESIA	0800-112-8888	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com/jp
MALAYSIA	1800-88-9999	www.samsung.com/my
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
PHILIPPINES	1-800-10-SAMSUNG(726-7864) 1-800-3-SAMSUNG(726-7864) 02-5805777	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th
TAIWAN	0800-329-999	www.samsung.com/tw
VIETNAM	1 800 588 889	www.samsung.com/vn
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com/za
U.A.E	800-SAMSUNG (726-7864) 8000-4726	www.samsung.com/ae



BN68-01983A-00

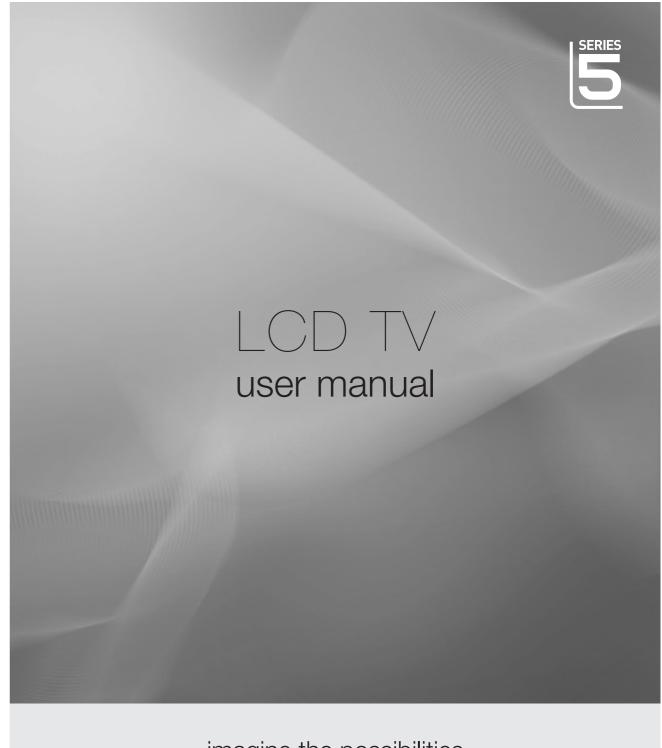

imagine the possibilities

Thank you for purchasing this Samsung product. To receive more complete service, please register your product at

www.samsung.com/register

_ Serial No. _



□ License



TruSurround HD, SRS and **(•)** symbol are trademarks of SRS Labs, Inc. **TruSurround HD** technology is incorporated under license from SRS Labs, Inc.

□ Precautions When Displaying a Still Image

A still image may cause permanent damage to the TV screen

- Do not display still image and partially still on the LCD panel for more than 2 hours as it can cause screen image retention.
 This image retention is also known as screen burn. To avoid such image retention, reduce the degree of brightness and contrast of the screen when displaying a still image.
- Watching the LCD TV in 4:3 format for a long period of time may leave traces of borders displayed on the left, right and centre of the screen caused by the difference of light emission on the screen. Playing a DVD or a game console may cause a similar effect to the screen. Damages caused by the above effect are not covered by the Warranty.
- Displaying still images from Video games and PC for longer than a certain period of time may produce partial after-images. To
 prevent this effect, reduce the 'brightness' and 'contrast' when displaying still images.

CONTENTS

SETTING UP YOUR TV
■ Viewing the Control Panel 2 ■ Accessories 3 ■ Viewing the Connection Panel 4 ■ Viewing the Remote Control 6 ■ Installing Batteries in the Remote Control 7
OPERATION
■ Viewing the menus
CHANNEL
■ Channel Menu
PICTURE
■ Configuring the Picture Menu 11 ■ Viewing Picture-in-Picture 14 ■ Using Your TV as a Computer (PC) Display 15 ■ Setting up the TV with your PC 16
SOUND
SOUND Configuring the Sound Menu
■ Configuring the Sound Menu16
■ Configuring the Sound Menu
■ Configuring the Sound Menu

ANYNET+	
■ Connecting Anynet ⁺ Devices ■ Setting Up Anynet ⁺ ■ Switching between Anynet ⁺ Devices ■ Recording ■ Troubleshooting for Anynet ⁺	22 22 23
RECOMMENDATIONS	
■ Teletext Feature ■ Installing the Stand ■ Disconnecting the Stand ■ Installing the Wall Mount Kit ■ Anti-Theft Kensington Lock ■ Securing the TV to the Wall ■ Troubleshooting: Before Contacting Service Personnel. ■ Specifications	

☐ Symbol


\mathbb{Z}		和
Note	One-Touch Button	TOOL Button

SETTING UP YOUR TV

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice in order to enhance product performance.

Viewing the Control Panel

- The product colour and shape may vary depending on the model.
- You can use a button by pressing the side panel buttons.

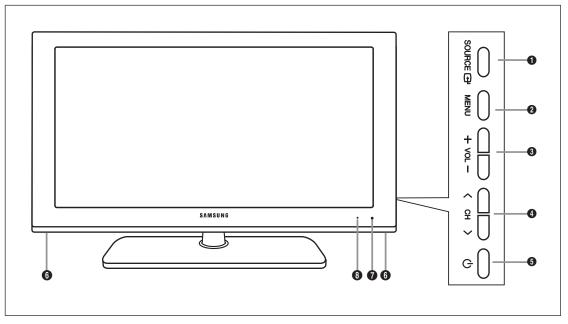


- SOURCE →: Toggles between all the available input sources. In the on-screen menu, use this button as you would use the ENTER → button on the remote control.
- 2 MENU: Press to see an on-screen menu of your TV's features.
- ③ -VoL+: Press to increase or decrease the volume.
 In the on-screen menu, use the -VoL+ buttons as you would use the ◄ and ▶ buttons on the remote control.
- ◆ CH >: Press to change channels. In the on-screen menu, use the

 ◆ CH > buttons as you would use the


 ▼ and

 ▲ buttons on the remote control.
- (POWER): Press to turn the TV on and off.
- 6 SPEAKERS
- **REMOTE CONTROL SENSOR**: Aim the remote control towards this spot on the TV.
- POWER INDICATOR: Blinks and turns off when the power is on and lights up in stand-by mode.

Accessories

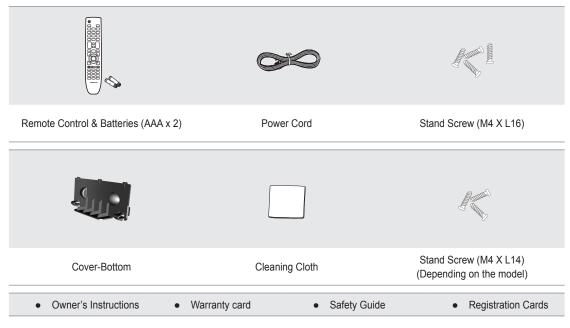

- Please make sure the following items are included with your LCD TV. If any items are missing, contact your dealer.
- Warranty card / Safety Guide / Registration Cards (Not available in all locations)
- $\ensuremath{\mathbb{Z}}$ The items colour and shape may vary depending on the model.

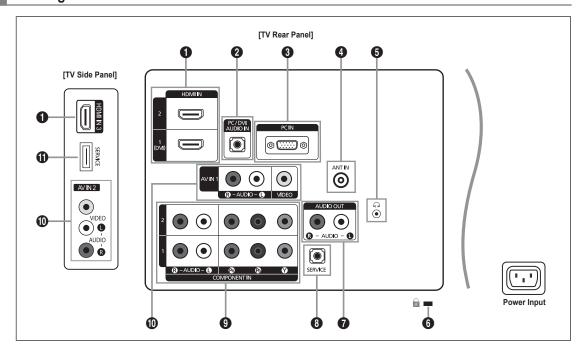

The product colour and shape may vary depending on the model.

● HDMI IN 1(DVI), 2, 3

Connects to the HDMI jack of a device with an HDMI output.

- No additional Audio connection is needed for an HDMI to HDMI connection.
- What is HDMI?
- HDMI(High-Definition Multimedia Interface), is an interface that enables the transmission of digital audio and video signals
 using a single cable.
- The difference between HDMI and DVI is that the HDMI device is smaller in size and has the HDCP (High Bandwidth Digital Copy Protection) coding feature installed.
- The TV may not output sound and pictures may be displayed with abnormal colour when DVD / Blu-ray player / Cable Boxes / Satellite receivers supporting HDMI versions older than 1.3 are connected. When connecting an older HDMI cable and there is no sound, connect the HDMI cable to the HDMI IN 1(DVI) jack and the audio cables to the PC/DVI AUDIO IN jacks on the back of the TV. If this happens, contact the company that provided the DVD / Blu-ray player / Cable Box / Satellite receiver (Set-Top Box) to confirm the HDMI version, then request an upgrade.
- Use the HDMI IN 1(DVI) jack for DVI connection to an external device. Use a DVI to HDMI cable or DVI-HDMI adapter (DVI to HDMI) for video connection and the PC/DVI AUDIO IN jacks for audio. When using an HDMI / DVI cable connection, you must use the HDMI IN 1(DVI) jack.
- HDMI cables that are not 1.3 may cause annoying flicker or no screen display.

PC/DVI AUDIO IN

- Connect to the audio output jack on your PC.
- DVI audio outputs for external devices.

O PC IN

- Connect to the video output jack on your PC.
- If your PC supports an HDMI connection, you can connect this to the HDMI IN 1(DVI), 2 or 3 terminal.
- If your PC supports a DVI connection, you can connect this to the HDMI IN 1(DVI) / PC/DVI AUDIO IN terminal.

ANT IN

- Connects to an antenna or cable TV system.

(HEADPHONE)

- Headphone may be connected to the headphone output on your set. While the head phone is connected, the sound from the built-in speakers will be disabled.
- Using the sound function is restricted when connecting headphones to the TV.
- Prolonged use of headphones at a high volume may damage your hearing.
- You will not hear sound from the speakers when you connect headphones to the TV.
- The headphone volume and TV volume are adjusted separately.

6 KENSINGTON LOCK (depending on the model)

The Kensington Lock (optional) is a device used to physically fix the system when used in a public place. If you want to use a locking device, contact the dealer where you purchased the TV.

The location of the Kensington Lock may be different depending on its model.

AUDIO OUT [R-AUDIO-L]

 Connect RCA audio cables to AUDIO OUT [R-AUDIO-L] on the rear of your set and the other ends to corresponding audio in connectors on the Amplifier or DVD Home Theatre.

SERVICE

- Connector for service only.

COMPONENT IN 1. 2

- Connect component video cables (optional) to component connector (P_R, P_B, Y) on the rear of your set and the other ends to corresponding component video out connectors on the DVD.
- If you wish to connect both the Set-Top Box and DVD, you should connect the Set-Top Box to the DVD and connect the DVD to component connector (P_R, P_B, Y) on your set.
- The P_R, P_B and Y connectors on your component devices DVD are sometimes labeled Y, B-Y and R-Y or Y, Cb and Cr.
- Connect RCA audio cables (optional) to [R-AUDIO-L] on the rear of your set and the other ends to corresponding audio
 out connectors on the DVD.

AV IN 1, 2 [VIDEO] / [R-AUDIO-L]

- Connect RCA cable to an appropriate external A/V device such as VCR, DVD or Camcorder.
- Connect RCA audio cables to [R-AUDIO-L] on your set and the other ends to corresponding audio out connectors on the A/V device.

SERVICE

Connector for software upgrades, etc.

Viewing the Remote Control


- You can use the remote control up to a distance of about 23 feet from the TV.
- The performance of the remote control may be affected by bright light.
- The product colour and shape may vary depending on the model.
- POWER : Turns the TV on and off
- NUMERIC BUTTONS : Press to change the channel.
- ③ □ : Performs the same function as the ENTER □ button of the directional buttons. When switching channels with the numeric buttons, and you press the channel number and then the ENTER □ button, the channel is immediately switched.
- 4 ** : Press to increase or decrease the volume.
- SOURCE: Press to display and select the available video sources.
- **6 CH LIST**: Displays the Channel List on screen.
- **7 TOOLS**: Use to quickly select frequently used functions.
- 8 INFO : Press to display information on the TV screen.
- 1 DUAL : Sound effect selection
- Use these buttons in the DMA and Anynet+ modes. (•: This remote can be used to control recording on Samsung recorders with the Anynet+ feature)
- TV : Selects the TV mode directly.
- PRE-CH: Enables you to return to the previous channel you were watching.
- **⑤ MUTE 戌** : Press to temporarily cut off the sound.

- MENU : Displays the main onscreen menu.
- (B) HDMI: Selects the HDMI mode directly.
- RETURN : Returns to the previous menu
- ② UP ▲ / DOWN ▼ / LEFT ◀ / RIGHT ► / ENTER 글 : Use to select on-screen menu items and change menu values.
- 2 EXIT: Press to exit the menu.
- P.SIZE : Picture size selection
- MEDIA.P: Not available.
- S.MODE : Sound mode selection.
- SRS: Selects SRS TruSurround HD mode.

Teletext Functions


- (LIST / FLOF)

- Teletext reveal
- 9 Fastext topic selection
- Alternately select Teletext. Double, or Mix.
- : Exit from the Teletext display
- 1 : Teletext sub page
- 16 (E1): Teletext next page
 - : Teletext previous page
- Teletext index
- (19) (E): Teletext hold
- (Ex): Teletext cancel

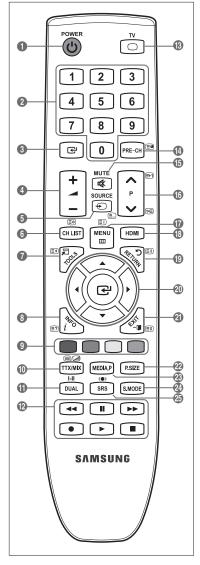

Installing Batteries in the Remote Control


- 1. Lift the cover at the back of the remote control upward as shown in the figure.
- 2. Install two AAA size batteries.
 - Make sure to match the '+' and '-' ends of the batteries with the diagram inside the compartment.
- 3. Replace the cover.
 - P Remove the batteries and store them in a cool, dry place if you won't be using the remote control for a long time.
- If the remote control doesn't work, check the following:
 - Is the TV power on?
 - Are the plus and minus ends of the batteries reversed?
 - Are the batteries drained?
 - Is there a power outage or is the power cord unplugged?
 - Is there a special fluorescent light or neon sign nearby?

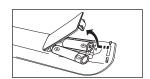

OPERATION

Viewing the menus

Before using the TV, follow the steps below to learn how to navigate the menu in order to select and adjust different functions.

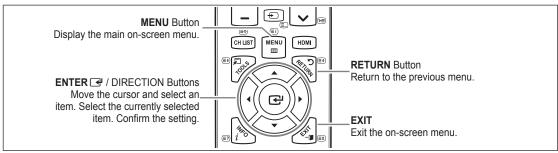

Operation the OSD (On Screen Display)

The access step may differ depending on the selected menu.

- 1. Press the MENU button.
- 2. The main menu appears on the screen. The menu's left side has icons: Picture, Sound, Channel, Setup, Input.

- 3. Press the ▲ or ▼ button to select one of the icons.
- **4.** Then press the **ENTER** button to access the icon's sub-menu.
- Press the ▲ or ▼ button to select the icon's submenu.
- 6. Press the ◀ or ▶ button to decrease or increase the value of a particular item. The adjustment OSD may differ depending on the selected menu.
- 7. Press the ENTER button to complete the configuration. Press the EXIT button to exit.





└ Help icon

Placing Your Television in Standby Mode

Your set can be placed in standby mode in order to reduce the power consumption. The standby mode can be useful when you wish to interrupt viewing temporarily (during a meal, for example).

- 1. Press the **POWER** (b) button on the remote control.
 - The screen is turned off and a red standby indicator appears on your set.
- 2. To switch your set back on, simply press the **POWER** button again.
 - Do not leave your set in standby mode for long periods of time (when you are away on holiday, for example). It is best to unplug the set from the mains and aerial.

Plug & Play Feature

When the TV is initially powered on, basic settings proceed automatically and subsequently.

- 1. Press the **POWER** (b) button on the remote control.
 - You can also use the POWER button on the TV.
- 2. Press the ▲ or ▼ button to select the language, then press the ENTER → button.
- 3. Press the ◀ or ▶ button to select **Store Demo** or **Home Use**, then the **ENTER** ➡ button.
 - We recommend setting the TV to Home Use mode for the best picture in your home environment.
 - Store Demo mode is only intended for use in retail environments.
 - [2] If the unit is accidentally set to **Store Demo** mode and you want to return to **Home Use** (Standard): Press the volume button on the TV. When the volume OSD is displayed, press and hold the **MENU** button on the TV for 5 seconds.
- 4. The message Check antenna input. is displayed with OK selected.
 - Press the **ENTER** button.
 - Please check that the antenna cable is connected correctly.
- 5. Select the appropriate area by pressing the ▲ or ▼ button.
 - Press the ENTER button to confirm your choice.
- 6. The Auto Store menu is displayed with the Start selected. Press the ENTER button.
 - The channel search will start and end automatically.
 - Press the **ENTER** button at any time to interrupt the memorization process.
 - After all the available channels are stored, the **Clock Set** menu appears.
- 7. Press the ENTER button.

Select the Month, Day, Year, Hour, Minute, or am/pm by pressing the ◀ or ▶ button.


Set the Month, Day, Year, Hour, Minute, or am/pm by pressing the ▲ or ▼ button.

- You can also set the Month, Day, Year, Hour and Minute by pressing the number buttons on the remote control.
- Press the ENTER button to confirm your setting. The message Enjoy your TV. is displayed.
 When you have finished, press the ENTER button.
 - Even if the ENTER button is not pressed, the message will automatically disappear after several seconds.

If you want to reset this feature...

- Press the MENU button to display the menu. Press the ▲ or ▼ button to select Setup, then press the ENTER → button.
- Press the ENTER button again to select Plug & Play.
 - The Plug & Play feature is only available in the TV mode.



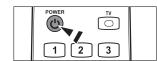

CHANNEL

Channel Menu

□ Area

You can change the area for channels.

□ Auto Store

You can scan for the frequency ranges available to you (and availability depends on your area). Automatically allocated programme numbers may not correspond to actual or desired programme numbers.

- Scans for all channels with active broadcast stations and stores them in the TV's memory.
- If you want to stop Auto Store, press the ENTER button.



■ Manual Store

- Scans for a channel manually and stores it in the TV's memory.
- Programme (Programme number to be assigned to a channel): Sets the programme number using the ▲, ▼ or number (0~9) buttons
- Colour System → Auto / PAL / SECAM / NTSC4.43 / NTSC 3.58: Sets the colour system value using the ▲ or ▼ button.
- Sound System → BG / DK / I / M: Sets the sound system value using the ▲ or ▼ button.
- Channel (When you know the number of the channel to be stored): Press the ▲ or ▼ button to select C (Air channel) or S (Cable channel). Press the ▶ button, then press the ▲, ▼ or number (0~9) buttons to select the required number.

 - If there is abnormal sound or no sound, reselect the sound standard required.
- Search (When you do not know the channel numbers): Press the ▲ or ▼ button to start the search. The tuner scans the frequency range until the first channel or the channel that you selected is received on the screen.
- Store (When you store the channel and associated programme number): Set to **OK** by pressing the **ENTER** button.

Channel mode

- P (Programme mode): When completing tuning, the broadcasting stations in your area have been assigned to position numbers from P00 to P99. You can select a channel by entering the position number in this mode.
- C (Air channel mode): You can select a channel by entering the assigned number to each air broadcasting station in this
 mode.
- S (Cable channel mode): You can select a channel by entering the assigned number for each cable channel in this mode.

□ Channel List

Using the Channel List, you can conveniently lock or add channels.

Adding channels

Using the Channel List, you can add channels.

- Move to the (⊕) field by pressing the ▲, ▼, ◀ or ▶ button, select a channel to be added, and press the ENTER ➡ button to add the channel.
- If you press the ENTER → button again, the ✓ symbol next to the channel disappears and the channel is not added.

Locking channels

This feature allows you to prevent unauthorized users, such as children, from watching unsuitable programmes by muting out video and audio.

- is active when Child Lock is selected to On. (refer to page 18)
- Move to the ☐ field by pressing the ▲, ▼, ◄ or ▶ button, select a channel to be locked, and press the ENTER 🖼 button.
 - The PIN number input screen appears. Enter your 4 digit PIN number.
 - If you press the ENTER

 button again, the

 symbol next to the channel disappears and the channel lock is cancelled.
 - A blue screen is displayed when Child Lock is activated.
 - Select On or Off in Child Lock to easily turn the channels which selected on

 to be active or inactive.
- You can select these options by simply pressing the **CH LIST** button on the remote control.

This operation allows you to change the programme numbers of the stored channels. This operation may be necessary after using the auto store. The channel is moved to its new position and all other channels are shifted accordingly.
Name
Channel names will be assigned automatically when channel information is broadcast. These names can be changed, allowing you to assign new names.
The following characters are available: Letters of the alphabet (A~Z) / Numbers (0~9) / Special characters (+, -, *, /, space)
Fine Tune
If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is weak or distorted, you may have to fine tune the channel manually

- © Fine tuned channels that have been saved are marked with an asterisk "*" on the right-hand side of the channel number in the channel banner.
- ✓ To reset the fine-tuning, select **Reset** by pressing the ▲ or ▼ button and then press the **ENTER** → button.
 ✓ Only TV channels can be fine tuned.

□ Sort

PICTURE

Configuring the Picture Menu

□ Mode

You can select the type of picture which best corresponds to your viewing requirements.

- Press the TOOLS button to display the Tools menu. You can also set the picture mode by selecting Tools → Picture Mode.
- The Picture mode must be adjusted separately for each input source.

Dvnamic

Selects the picture for increased definition in a bright room.

Standard

Selects the picture for the optimum display in a normal environment.

Movie

Selects the picture for viewing movies in a dark room.

□ Backlight / Contrast / Brightness / Sharpness / Colour / Tint (G/R)

Your television has several setting options that allow you to control the picture quality.

Backlight

Adjusts the brightness of LCD back light.

■ Contrast

Adjusts the contrast level of the picture.

Brightness

Adjusts the brightness level of the picture

Sharpness

Adjusts the edge definition of the picture.

Colour

Adjusts colour saturation of the picture.

■ Tint (G/R)

Adjusts the colour tint of the picture.

- In TV, AV1, AV2 modes of the PAL system, you cannot use the Tint (G/R) Function.
- When you make changes to Backlight, Contrast, Brightness, Sharpness, Colour or Tint (G/R), the OSD will be adjusted accordingly.
- In PC mode, you can only make changes to Backlight, Contrast and Brightness.
- Settings can be adjusted and stored for each external device you have connected to an input of the TV.
- The energy consumed during use can be significantly reduced if the brightness level of the picture is lowered, which will reduce the overall running cost.





□ Advanced Settings

Samsung's new TVs allow you to make even more precise picture settings than previous models.

- Advanced Settings is available in Standard or Movie mode.
- In PC mode, you can only make changes to Gamma and White Balance from among the Advanced Settings items.

■ Black Tone → Off / Dark / Darker / Darkest

You can select the black level on the screen to adjust the screen depth.

■ Dynamic Contrast → Off / Low / Medium / High

You can adjust the screen contrast so that the optimal contrast is provided.

Gamma

You can adjust the primary colour (red, green, blue) Intensity.

Colour Space

Colour Space is a colour matrix composed of red, green and blue colours. Select your favourite colour space to experience the most natural colour.

- Auto: Auto Colour Space automatically adjusts to the most natural colour tone based on programme sources.
- Native: Native Colour Space offers deep and rich colour tone.

White Balance

You can adjust the colour temperature for more natural picture colours.

- R-Offset: Adjusts the red colour darkness.
- G-Offset: Adjusts the green colour darkness.
- B-Offset: Adjusts the blue colour darkness.
- R-Gain: Adjusts the red colour brightness.
- G-Gain: Adjusts the green colour brightness.
- B-Gain: Adjusts the blue colour brightness.
- Reset: The previously adjusted white balance will be reset to the factory defaults.

Flesh Tone

You can emphasize the pink 'flesh tone' in the picture.

Changing the adjustment value will refresh the adjusted screen.

■ Edge Enhancement → Off / On

You can emphasize object boundaries in the picture.



□ Picture Options

In PC mode, you can only make changes to the Colour Tone and Size from among the items in Picture Options.

■ Colour Tone → Cool / Normal / Warm1 / Warm2

- Warm1 or Warm2 is only activated when the picture mode is Movie.
- Settings can be adjusted and stored for each external device you have connected to an input of the TV.



Size

Occasionally, you may want to change the size of the image on your screen. Your TV comes with several screen size options, each designed to work best with specific types of video input. Your cable box/satellite receiver may have its own set of screen sizes as well. In general, though, you should view the TV in 16:9 mode as much as possible.

- Alternately, you can press the **P.SIZE** button on the remote control repeatedly to change the picture size.
- **16:9**: Adjusts the picture size to 16:9 appropriate for DVDs or wide broadcasting.
- Wide Zoom: Magnify the size of the picture more than 4:3.
- Zoom: Magnifies the 16:9 wide picture (in the vertical direction) to fit the screen size.
- 4:3: This is the default setting for a video movie or normal broadcasting.
- Screen Fit: Use the function to see the full image without any cut-off when HDMI (720p / 1080i / 1080p) or Component (1080i / 1080p) signals are input.
 - Depending on the input source, the picture size options may vary.
 - The items available may differ depending on the selected mode.
 - In PC Mode, only 16:9 and 4:3 mode can be adjusted.
 - Settings can be adjusted and stored for each external device you have connected to an input of the TV.
 - Temporary image retention may occur when viewing a static image on the set for more than two hours.
 - Wide Zoom: Move the screen up/down using the ▲ or ▼ button after selecting the by pressing the ► or ENTER → button.
 - Zoom: Select

 by pressing the

 or

 button. Use the

 or

 button to move the picture up and down. After selecting

 nuse the

 or

 button to magnify or reduce the picture size in the vertical direction.
 - After selecting **Screen Fit** in HDMI (1080i/1080p) or Component (1080i/1080p) mode:
 - Select

 by pressing the

 or ▶ button. Use the

 , ▼,

 or ▶ button to move the picture.

Reset: Press the ◀ or ▶ button to select **Reset**, then press the **ENTER** ◀ button.

You can initialize the setting.

- If you use the Screen Fit function with HDMI 720p input, 1 line will be cut at the top, bottom, left and right as in the overscan function.
- When Double (■■, ■■) mode has been set in PIP, the Picture Size cannot be set.

■ Digital NR → Off / Low / Medium / High / Auto

If the broadcast signal received by your TV is weak, you can activate the Digital Noise Reduction feature to help reduce any static and ghosting that may appear on the screen.

When the signal is weak, select one of the other options until the best picture is displayed.

■ HDMI Black Level → Normal / Low

You can directly select the black level on the screen to adjust the screen depth.

This function is active only when the external input connects to HDMI (RGB signals).

■ Film Mode → Off / Auto

The TV can be set to automatically sense and process film signals from all sources and adjust the picture for optimum quality.

Film Mode is supported in TV, AV, COMPONENT(480i / 1080i) and HDMI(480i / 1080i).

□ Picture Reset → OK / Cancel

Resets all picture settings to the default values.

Viewing Picture-in-Picture

You can use the PIP feature to simultaneously watch the TV tuner and one external video source. This product has one built-in tuner, which does not allow PIP to function in the same mode. Please see 'PIP Settings' below for details.

Press the TOOLS button to display the Tools menu. You can also configure PIP related settings by selecting Tools → PIP.

PIP Settings

Main picture	Sub picture
Component1, 2	
HDMI1/DVI, HDMI2, HDMI3	TV, AV1, AV2
PC	

- If you turn the TV off while watching in PIP mode and turn it on again, the PIP window will disappear.
- You may notice that the picture in the PIP window becomes slightly unnatural when you use the main screen to view a game or karaoke.

\square PIP \rightarrow Off / On

You can activate or deactivate the PIP function.

□ Source

You can select a source of the sub-picture.

You can select a size of the sub-picture.

If main picture is in HDMI mode, Size is available.

\square Position \rightarrow \square / \square / \square

You can select a position of the sub-picture.

In Double () mode, Position cannot be selected.

□ Programme

You can select the channel for the sub-screen.

Programme is available when the Source is set to TV.





Using Your TV as a Computer (PC) Display

Setting Up Your PC Software (Based on Windows XP)

The Windows display-settings for a typical computer are shown below. The actual screens on your PC will probably be different, depending upon your particular version of Windows and your particular video card. However, even if your actual screens look different, the same basic set-up information will apply in almost all cases. (If not, contact your computer manufacturer or Samsung Dealer.)

- 1. First, click on 'Control Panel' on the Windows start menu.
- When the control panel window appears, click on 'Appearance and Themes' and a display dialog-box will appear.
- When the control panel window appears, click on 'Display' and a display dialogbox will appear.
- 4. Navigate to the 'Settings' tab on the display dialog-box.
 - The correct size setting (resolution) Optimum: 1920 X 1080 pixels
 - If a vertical-frequency option exists on your display settings dialog box, the correct value is '60' or '60 Hz'. Otherwise, just click 'OK' and exit the dialog box.



Display Modes

Both screen position and size will vary depending on the type of PC monitor and its resolution. The resolutions in the table are recommended.

D-Sub and HDMI/DVI Input

Mode	Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Pixel Clock Frequency (MHz)	Sync Polarity (H / V)
IBM	640 x 350	31.469	70.086	25.175	+/-
	720 x 400	31.469	70.087	28.322	-/+
MAC	640 x 480	35.000	66.667	30.240	-/-
	832 x 624	49.726	74.551	57.284	-/-
	1152 x 870	68.681	75.062	100.000	-/-
VESA CVT	720 x 576	35.910	59.950	32.750	-/+
	1152 x 864	53.783	59.959	81.750	-/+
	1280 x 720	44.772	59.855	74.500	-/+
	1280 x 720	56.456	74.777	95.750	-/+
	1280 x 960	75.231	74.857	130.000	-/+
VESA DMT	640 x 480 640 x 480 640 x 480 800 x 600 800 x 600 1024 x 768 1024 x 768 1024 x 768 1152 x 864 1280 x 1024 1280 x 800 1280 x 800 1280 x 800 1280 x 960 1360 x 768 1440 x 900 1440 x 900 1680 x 1050	31.469 37.861 37.500 37.879 48.077 46.875 48.363 56.476 60.023 67.500 63.981 79.976 49.702 62.795 60.000 47.712 55.935 70.635 65.290	59.940 72.809 75.000 60.317 72.188 75.000 60.004 70.069 75.029 75.000 60.020 75.025 59.810 74.934 60.000 60.015 59.887 74.984 59.954	25.175 31.500 31.500 40.000 50.000 49.500 65.000 75.000 78.750 108.000 108.000 83.500 106.500 106.500 106.500 106.500 136.750 146.250	-///- +/+ +/+ +/+ -///- +/+ +/+
VESA GTF	1280 x 720	52.500	70.000	89.040	-/+
	1280 x 1024	74.620	70.000	128.943	-/-
VESA DMT / DTV CEA	1920 x 1080p	67.500	60.000	148.500	+/+

- When using an HDMI / DVI cable connection, you must use the HDMI IN 1(DVI) jack.
- The interlace mode is not supported.
- The set might operate abnormally if a non-standard video format is selected.
- Separate and Composite modes are supported. SOG is not supported.
- Too long or low quality VGA cable can cause picture noise at high resolution modes (1920x1080).

Setting up the TV with your PC

Preset: Press the **SOURCE** button to select PC mode.

□ Auto Adjustment

Use the Auto Adjust function to have the TV automatically adjust the video signals it receives. The function also automatically fine-tunes the settings and adjusts the frequency values and

- Press the **TOOLS** button to display the **Tools** menu. You can also set the Auto Adjustment by selecting **Tools** \rightarrow **Auto Adjustment**.
- This function does not work in DVI-HDMI mode.

□ Screen

Coarse / Fine

The purpose of picture quality adjustment is to remove or reduce picture noise. If the noise is not removed by Fine-tuning alone, then adjust the frequency as best as possible (Coarse) and Fine-tune again. After the noise has been reduced, readjust the picture so that it is aligned on the centre of screen.

PC Position

Adjust the PC's screen positioning if it does not fit the TV screen.

Press the ▲ or ▼ button to adjusting the Vertical-Position. Press the ◀ or ▶ button to adjust the Horizontal-Position.

Image Reset

You can replace all image settings with the factory default values.

SOUND

Configuring the Sound Menu

□ Mode → Standard / Music / Movie / Clear Voice / Custom

- You can select these options by simply pressing the **S.MODE** button on the remote control.
- Standard: Selects the normal sound mode.
- Music: Emphasizes music over voices.
- Movie: Provides the best sound for movies.
- Clear Voice: Emphasizes voice over other sounds.
- Custom: Recalls your customized sound settings.

Equalizer

The sound settings can be adjusted to suit your personal preferences.

- Balance L/R: Adjusts the balance between the right and left speaker.
- 100Hz / 300Hz / 1KHz / 3KHz / 10KHz (Bandwidth Adjustment): To adjust the level of different bandwidth frequencies.
- If you make any changes to these settings, the sound mode is automatically switched to Custom.

\square SRS TruSurround HD \rightarrow Off / On

SRS TruSurround HD is a patented SRS technology that solves the problem of playing 5.1 multichannel content over two speakers. TruSurround delivers a compelling, virtual surround sound experience through any two-speaker playback system, including internal television speakers. It is fully compatible with all multichannel formats.

You can select these options by simply pressing the SRS button on the remote control.





\square Auto Volume \rightarrow Off / On

Each broadcasting station has its own signal conditions, and so it is not easy to adjust the volume every time the channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

Auto Volume is not available in Component and HDMI mode.

□ Speaker Select

When you watch TV with it connecting to a Home theatre, turn the TV speakers off so you can listen to sound from the Home theatre's (external) speakers.

- External Speaker: Used to listen to the sound of the External (Home Theatre) Speakers.
- TV Speaker: Used to listen to the sound of the TV Speakers.
 - The volume and MUTE buttons do not operate when the Speaker Select is set to External Speaker.
 - If you select External Speaker in the Speaker Select menu, the sound settings will be limited.

TV's Internal Speakers		Audio Out (L/R Out) to Sound System
RF / AV / Component / PC / HDMI		RF / AV / Component / PC / HDMI
TV Speaker	Sound Output	Sound Output
External Speaker	Mute	Sound Output
Video No Signal	Mute	Mute

\square Sound Select \rightarrow Main / Sub

When the PIP feature is activated, you can listen to the sound of the sub (PIP) picture.

- You can select this option when PIP is set to On.
- Press the TOOLS button to display the Tools menu. You can also set the sound of the sub picture by selecting Tools → PIP → Sound Select.

Selecting the Sound Mode

You can set the sound mode by pressing the DUAL button. When you press it, the current sound mode is displayed on the screen.

	Audio Type	Dual 1 / 2	Default
	Mono	MONO	Automatic change
A2 Stereo	Stereo	STEREO ↔ MONO	Automatic change
	Dual	DUAL 1 ↔ DUAL 2	DUAL 1
	Mono	MONO	Automatic change
NICAM	Stereo	$\textbf{MONO} \leftrightarrow \textbf{STEREO}$	Automatic change
Stereo	Dual	MONO ↔ DUAL 1 DUAL 2 ←	DUAL 1

- If the stereo signal is weak and an automatic switching occurs, then switch to the mono.
- This function is only activated in stereo sound signal. It is deactivated in mono sound signal.
- This function is only available in TV mode.

SETUP

Configuring the Setup Menu

□ Language

You can set the menu language.

□ Time

Clock

Setting the clock is necessary in order to use the various timer features of the TV.

- The current time will appear every time you press the **INFO** button.
- If you disconnect the power cord, you have to set the clock again.
 You can set the day, month, year, hour and minute directly by pressing the number buttons on the remote control.

Sleep Timer

The sleep timer automatically shuts off the TV after a preset time (30, 60, 90, 120, 150 and 180 minutes).

- Press the TOOLS button to display the Tools menu. You can also set the sleep timer by selecting Tools → Sleep Timer.
- To cancel the **Sleep Timer** function, select **Off**.

■ Timer 1 / Timer 2 / Timer 3

Three different on / off timer settings can be made.

You must set the clock first.

On Time

Set the hour, minute, am/pm and activate / inactivate.

(To activate timer with the setting you've chosen, set to Activated.)

Off Time

Set the hour, minute, am/pm and activate / inactivate.

(To activate timer with the setting you've chosen, set to Activated.)

Repeat

Select Once, Everyday, Mon~Fri, Mon~Sat or Sat~Sun.

Volume

Select the desired turn on volume level.

Programme

When the On Timer is active, you can turn on a specific channel.

You can set the hour, minute and channel by pressing the number buttons on the remote control.

Auto Power Off

When you set the timer On, the television will eventually turn off, if no controls are operated for 3 hours after the TV was turned on by the timer. This function is only available in timer On mode and prevents overheating, which may occur if a TV is on for too long time.

□ Child Lock → Off / On

This feature allows you to prevent unauthorized users, such as children, from watching unsuitable programme by muting out video and audio.

- Before the setup screen appears, the PIN number input screen appears. Enter your 4 digit PIN number.
- The default PIN number of a new TV set is 0-0-0-0. You can change the PIN by selecting Change PIN from the menu.
- You can lock some channels in Channel List. (refer to page 9)
- Child Lock is available only in TV mode.



Change PIN You can change your personal ID number that is required to set up the TV. Ø Before the setup screen appears, the PIN number input screen appears. Enter your 4 digit PIN number. Ø The default PIN number of a new TV set is 0-0-0-0. Ø If you forget the PIN code, press the remote control buttons in the following sequence, which resets the PIN to 0-0-0-0: POWER (Off) → MUTE → 8 → 2 → 4 → POWER (On).
Game Mode \rightarrow Off / On
When connecting to a game console such as PlayStation™ or Xbox™, you can enjoy a more realistic gaming experience by selecting game menu. ② Restrictions on game mode (Caution) — To disconnect the game console and connect another external device, set Game Mode to Off in the setup menu. — If you display the TV menu in Game Mode , the screen shakes slightly. ② If the picture is poor when external device is connected to TV, check if Game Mode is On . Set Game Mode to Off and connect external devices. ② If Game Mode is On: — Picture mode is automatically changed to Standard and cannot be changed.
 Melody → Off / Low / Medium / High A melody sound can be set to come on when the TV is powered On or Off. The Melody does not play When no sound is output from the TV because the MUTE button has been pressed. When no sound is output from the TV because the volume has been reduced to minimum with the VOL – button. When the TV is turned off by Sleep Timer function.
Energy Saving → Off / Low / Medium / High / Auto This feature adjusts the brightness of the TV in order to reduce power consumption. When watching TV at night, set the Energy Saving mode option to High to reduce eye fatigue as well as power consumption. Press the TOOLS button to display the Tools menu. You can also set the Energy Saving option by selecting Tools → Energy Saving.
PIP
For detailed procedures on setting up options, refer to page 14.

INPUT

Input Menu

□ Source List

Use to select TV or other external input sources such as DVD / Blu-ray players / Cable Box / Satellite receivers (Set-Top Box) connected to the TV. Use to select the input source of your choice

- Press the SOURCE button on the remote control to view an external signal source. TV mode can be selected by pressing the TV button.
- You can also watch HDMI mode simply by pressing the HDMI button on the remote control.
- TV / AV1 / AV2 / Component1 / Component2 / PC / HDMI1/DVI / HDMI2 / HDMI3





□ Edit Name

VCR / DVD / Cable STB / Satellite STB / PVR STB / AV Receiver / Game / Camcorder / PC / DVI / DVI PC / TV / IPTV / Blu-ray / HD DVD / DMA

Name the device connected to the input jacks to make your input source selection easier.


- When a PC with a resolution of 1920 x 1080@60Hz is connected to the HDMI IN 1(DVI) port, you should set the HDMI1/DVI mode to DVI PC in the Edit Name of the Input mode.
- When connecting an HDMI/DVI cable to the **HDMI IN 1(DVI)** port, you should set the **HDMI1/DVI** mode to **DVI** or **DVI PC** in the **Edit Name** of the **Input** mode. In this case, a separate sound connection is required.

Connecting Anynet+ Devices

What is Anynet+?


Anynet⁺ is a function that enables you to control all connected Samsung devices that support Anynet⁺ with your Samsung TV's remote. The Anynet⁺ system can be used only with Samsung devices that have the Anynet⁺ feature. To be sure your Samsung device has this feature, check if there is an Anynet⁺ logo on it.

To connect to a TV

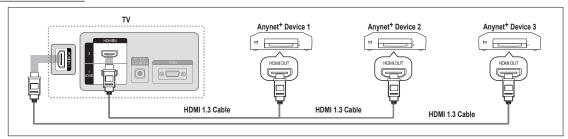

 Connect the HDMI IN (1(DVI), 2 or 3) jack on the TV and the HDMI OUT jack of the corresponding Anynet⁺ device using an HDMI cable.

To connect to Home Theatre

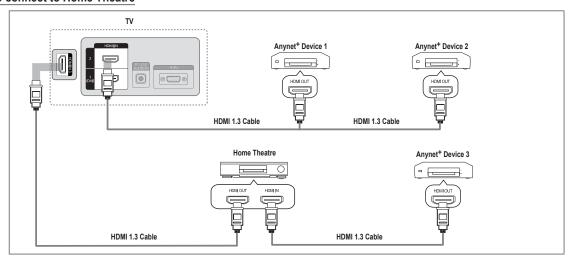

- Connect the HDMI IN (1(DVI), 2 or 3) jack on the TV and the HDMI OUT jack of the corresponding Anynet+ device using an HDMI cable.
- Connect the HDMI IN jack of the home theatre and the HDMI OUT jack of the corresponding Anynet+ device using an HDMI cable.
 - Connect only one Home Theatre.
 - You can connect an Anynet⁺ device using the HDMI 1.3 cable. Some HDMI cables may not support Anynet⁺ functions.
 - Anynet⁺ works when the AV device supporting Anynet⁺ is in the Standby or On status.
 - Anynet+ supports up to 12 AV devices in total. Note that you can connect up to 3 devices of the same type.

Setting Up Anynet+

Press the TOOLS button to display the Tools menu. You can also display Anynet⁺ menu by selecting Tools → Anynet⁺ (HDMI-CEC).

□ Setup

■ Anynet⁺ (HDMI-CEC) → Off / On

To use the Anynet⁺ Function, **Anynet**⁺ (**HDMI-CEC**) must be set to **On**.

When the Anynet+ (HDMI-CEC) function is disabled, all the Anynet+ related operations are deactivated.

■ Auto Turn Off → No / Yes

Setting an Anynet⁺ Device to turn Off automatically when the TV is turned Off.

- The active source on the TV remote must be set to TV to use the Anynet+ function.
- If you set Auto Turn Off to Yes, connected external devices are also turned off when the TV is turned off. If an external device is still recording, it may or may not turn off.

Searching Connections







Switching between Anynet+ Devices

1. Press the TOOLS button.

Then press the ENTER button to select Anynet+(HDMICEC).

- 2. Press the ▲ or ▼ button to select Select Device, then press the ENTER → button.
- 3. Press the ▲ or ▼ button to select to a particular device and press the ENTER → button. It is switched to the selected device.
- **4.** If you cannot find a device you want, press the ▲ or ▼ button to select **Setup**, then press the **ENTER** → button.
- **5.** Press the ▲ or \blacktriangledown button to select **Searching Connections**, then press the **ENTER** Ⅎ button.

The message Configuring Anynet+ connection is displayed.

When searching devices completes, the connected devices are listed in the Anynet+ menu.

- Switching to the selected devices may take up to 2 minutes. You cannot cancel the operation during the switching operation.
- The time required to scan for devices is determined by the number of connected devices.
- When the device scan is complete, the number of devices found are not displayed.
- Although the TV automatically scans devices when it is turned on using the POWER button, devices connected when the TV is on or under a specific circumstance are not displayed in the device list. Therefore select Searching Connections menu to search devices.
- If you have selected external input mode by pressing the SOURCE button, you cannot use the Anynet+ function. Make sure to switch to an Anynet+ device by using the TOOLS button.

Anynet+ Menu

The Anynet⁺ menu changes depending on the type and status of the Anynet⁺ devices connected to the TV.

Anynet+ Menu	Description	
View TV	v TV Anynet ⁺ mode changes to TV broadcast mode.	
Select Device	elect Device Shows the Anynet ⁺ device list.	
Menu on Device Shows the connected device menus. E.g. If a DVD recorder is connected, the di menu of the DVD recorder will appear.		
Device Operation Shows the play menu of the connected device. E.g. If a DVD recorder is connected the play menu of the DVD recorder will appear. Starts recording immediately using the recorder. (This is only available for devalue) support the recording function.)		
		Receiver

TV Remote Control Buttons Available in Anynet+ Mode

Device Type	Operating Status	Available Buttons
Anynet ⁺ Device	After switching to the device, when the menu of the corresponding device is displayed on the screen.	Numeric buttons ▲/▼/◀/▶/wheel/ ENTER ◄ buttons Colour buttons / EXIT button
	After switching to the device, while playing a file	(Backward search) / ► (Forward search) / (Stop) / ► (Play) / Ⅲ (Pause)
Device with built-in Tuner	After switching to the device, when you are watching a TV program	P V / P ^ button
Audio Device	When Receiver is activated	Volume / MUTE button

- The Anynet⁺ function only works when the active source on the TV remote control is set to TV.
- The button works only while in the recordable state.
- You cannot control Anynet⁺ devices using the buttons on the TV. You can control Anynet⁺ devices only using the TV remote control.
- The TV remote control may not work under certain conditions. If this occurs, reselect the Anynet⁺ device.
- The Anynet+ functions do not operate with other manufacturers' products.

Recording

You can make a recording of a TV programme using a recorder.

Press the
button.

Recording begins. (Only when the Anynet+ enabled recording device is connected.)

- The current TV programme is recorded in the Watching TV status. If you are watching video from another device, the video from the device is recorded.
- You can also record the source streams by selecting Record after pressing the TOOLS button.
- Before recording, check whether the antenna jack is properly connected to the recording device.
- For the antenna connection to the recording device, refer to its user manual.

Troubleshooting for Anynet+

Problem	Possible Solution	
Anynet ⁺ does not work.	 Check if the device is an Anynet⁺ device. The Anynet⁺ system supports Anynet⁺ devices only. Connect only one receiver (home theatre). Check if the Anynet⁺ device power cord is properly connected. Check the Anynet⁺ device's Video/Audio/HDMI 1.3 cable connections. Check whether Anynet⁺ (HDMI-CEC) is set to On in the Anynet⁺ setup menu. Check whether the TV remote control is in TV mode. Check whether it is Anynet⁺ exclusive remote control. Anynet⁺ doesn't work in certain situations. (Searching channels, Operating Plug & Play, etc.) When connecting or removing the HDMI 1.3 cable, please make sure to search devices again or turn your TV off and on again. Check if the Anynet⁺ Function of Anynet⁺ device is set on. 	
want to start Anynet ⁺ .	 Check if the Anynet+ device is properly connected to the TV and check if the Anynet+ (HDMI-CEC) is set to On in the Anynet+ Setup menu. Press the TV button on the TV remote control to switch to TV. Then press the TOOLS button to show the Anynet+ menu and select a menu you want. 	
want to exit Anynet+.	 Select View TV in the Anynet⁺ menu. Press the SOURCE button on the TV remote control and select a device other than Anynet⁺ devices. Press P V/A, PRE-CH to change the TV mode. (Note that the channel button operates only when a tuner-embedded Anynet⁺ device is not connected.) 	
The message Connecting to Anynet ⁺ levice' appears on the creen.	 You cannot use the remote control when you are configuring Anynet⁺ or switching to a view mode. Use the remote control when the Anynet⁺ setting or switching to view mode is complete. 	
The Anynet ⁺ device does not play.	You cannot use the play function when Plug & Play is in progress.	
The connected device is not displayed.	 Check whether or not the device supports Anynet⁺ functions. Check whether or not the HDMI 1.3 cable is properly connected. Check whether Anynet⁺ (HDMI-CEC) is set to On in the Anynet⁺ setup menu. Search Anynet⁺ devices again. You can connect an Anynet⁺ device using the HDMI 1.3 cable only. Some HDMI cables may not support Anynet⁺ functions. If it is terminated by an abnormal situation such as disconnecting the HDMI cable or power cord or a power failure, please repeat the device scan. 	
The TV programme cannot be recorded.	Check whether the antenna jack on the recording device is properly connected.	

RECOMMENDATIONS


Teletext Feature

Most television stations provide written information services via Teletext. The index page of the Teletext service gives you information on how to use the service. In addition, you can select various options to suit your requirements by using the remote control buttons.

- For Teletext information to be displayed correctly, channel reception must be stable. Otherwise, information may be missing or some pages may not be displayed.
- (index)
 Used to display the index (contents) page at any time while you are viewing Teletext.
- ② (store)
 Used to store the Teletext pages.
- (size)
 Press to display the double-size letters in the upper half of the screen. For lower half of the screen, press it again. To display normal screen, press it once again.
- Used to display the hidden text (answers to quiz games, for example). To display normal screen, press it again.
- Colour buttons (red/green/yellow/blue) If the FASTEXT system is used by a broadcasting company, the different topics covered on a Teletext page are colour-coded and can be selected by pressing the coloured buttons. Press one of them corresponding to the required. The page is displayed with other coloured information that can be selected in the same way. To display the previous or next page, press the corresponding coloured button.
- (Teletext on/mix)

 Press to activate Teletext mode after selecting the channel providing the Teletext service. Press it twice to overlap the Teletext with the current broadcasting screen.
- (exit)
 Exit from the Teletext display.
- (sub-page)
 Used to display the available sub-page.
- (page up)
 Used to display the next Teletext page.
- Used to display the next Teletext page.

 (mode)
 - Press to select the Teletext mode (LIST/ FLOF). If you press it in the LIST mode, it switches into the List save mode. In the List save mode, you can save Teletext page into list using the (store) button.
- (page down)
 Used to display the previous Teletext page.
- (hold)
 Used to hold the display on a given page if the selected page is linked with several secondary pages which follow on automatically. To resume, press it again.
- (cancel)
 Used to display the broadcast when searching for a page.
- You can change Teletext pages by pressing the numeric buttons on the remote control.

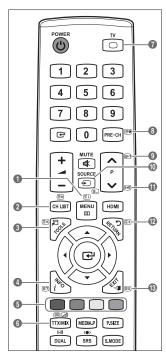

The Teletext pages are organized according to six categories:

Part	Contents	
Α	Selected page number.	
В	Broadcasting channel identity.	
С	Current page number or search indications.	
D	Date and time.	
E	Text.	
F	Status information.	
	FASTEXT information.	




- Teletext information is often divided between several pages displayed in sequence, which can be accessed by:
 - Entering the page number
 - Selecting a title in a list
 - Selecting a coloured heading (FASTEXT system)
- Teletext level supported by the TV is version 2.5 which is capable of displaying additional graphics or text.
- Depending upon the transmission, blank side panels can occur when displaying Teletext.
- In these cases, additional graphics or text is not transmitted.
- Older TV's which do not support version 2.5 are not capable of displaying any additional graphics or text, regardless of the Teletext transmission.
- Press the **TV** button to exit from the Teletext display.




Installing the Stand


Preset: Place the Guide Stand and Cover Neck onto the stand and fasten it using the screws. Applicable to 32inch models only.

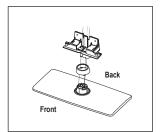

- 1. Attach your LCD TV to the stand.
 - Two or more people should carry the TV.
 - Make sure to distinguish between the front and back of the stand when assembling them.
 - To make sure the TV is installed on the stand at a proper level, do not apply excess downward pressure to the upper left of right sides of the TV.
- 2. Fasten screws at position 1 and then fasten screws at position 2.
 - Stand the product up and fasten the screws. If you fasten the screws with the LCD TV placed down, it may lean to one side.
 - The stand is installed for models with the screen size of 37 inch and above.

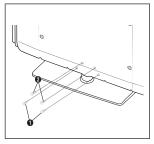

Disconnecting the Stand

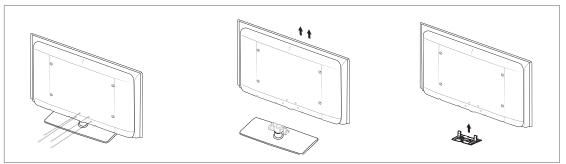

- 1. Remove four screws from the back of the TV.
- 2. Separate the stand from the TV. Two or more people should carry the TV.
- 3. Cover the bottom hole with the cover.

Installing the Wall Mount Kit


Wall mount items (sold separately) allow you to mount the TV on the wall.

For detailed information on installing the wall mount, see the instructions provided with the Wall Mount items. Contact a technician for assistance when installing the wall mounted

Samsung Electronics is not responsible for any damage to the product or injury to yourself or others if you elect to install the TV on your own.

Do not install your Wall Mount Kit while your TV is turned on. It may result in personal injury due to electric shock.

Premove the stand and cover the bottom hole with a cap and fasten with two screws.

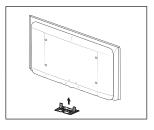


Anti-Theft Kensington Lock

The Kensington Lock is a device used to physically fix the system when using it in a public place. The appearance and locking method may differ from the illustration depending on the manufacturer.

Refer to the manual provided with the Kensington Lock for proper use.

- The locking device has to be purchased separately.
- The location of the Kensington Lock may be different depending on its model.
- Insert the locking device into the Kensington slot on the LCD TV (1) and turn it in the locking direction (2).
- 2. Connect the Kensington Lock cable (3).
- 3. Fix the Kensington Lock to a desk or a heavy stationary object.

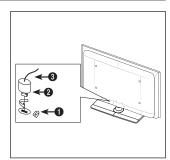

Securing the TV to the Wall




Caution: Pulling, pushing, or climbing on the TV may cause the TV to fall. In particular, ensure your children do not hang over or destabilize the TV; doing so may cause the TV to tip over, causing serious injuries or death. Follow all safety precautions provided on the included Safety Flyer. For added stability, install the anti-fall device for safety purposes, as follows.

To avoid the TV from falling:


- Put the screws into the clamps and firmly fasten them onto the wall. Confirm that the screws have been firmly installed onto the wall.
 - You may need additional material such as an anchor depending on the type of wall
 - Since the necessary clamps, screws, and string are not supplied, please purchase these additionally.



- Remove the screws from the centre back of the TV, put the screws into the clamps, and then fasten the screws onto the TV again.
 - Screws may not be supplied with the product. In this case, please purchase the screws of the following specifications.
 - Screw Specifications
 - For a 17 ~ 29 Inch LCD TV: M4 X 15 / For a 32 ~ 40 Inch LCD TV: M6 X 15

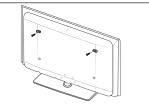

- Connect the clamps fixed onto the TV and the clamps fixed onto the wall with a strong string and then tie the string tightly.
 - Install the TV near to the wall so that it does not fall backwards.
 - It is safe to connect the string so that the clamps fixed on the wall are equal to or lower than the clamps fixed on the TV.
 - Until the string before moving the TV.
- 4. Verify all connections are properly secured. Periodically check connections for any sign of fatigue for failure. If you have any doubt about the security of your connections, contact a professional installer.

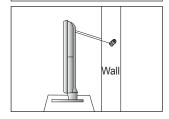

Troubleshooting: Before Contacting Service Personnel

Before contacting service personnel

Problem	Possible Solution	
No sound or picture	Check that the mains lead has been connected to a wall socket. Check that you have pressed the button on your set. Check the picture contrast and brightness settings. Check the volume.	
Normal picture but no sound	Check the volume. Check whether the MUTE≰ button has been pressed on the remote control. Check the Speaker Select settings.	
Screen is black and power indicator light blinks steadily	On your computer check; Power, Signal Cable. The TV is using its power management system. Move the computer's mouse or press any key on the keyboard.	
No picture or black and white picture	Adjust the colour settings. Check that the broadcast system selected is correct.	
Sound and picture interference	Try to identify the electrical appliance that is affecting the set and move it further away. Plug your set into a different mains socket.	
Blurred or snowy picture, distorted sound	Check the direction, location and connections of your aerial. This interference is often due to the use of an indoor aerial.	
Remote control malfunctions	Replace the remote control batteries. Clean the upper edge of the remote control (transmission window). Check the battery terminals.	
'Check signal cable.' message is displayed	Check that the signal cable is firmly connected to the PC or video sources. Check that the PC or video sources are turned on.	
On PC mode, 'Not Supported Mode.' message is displayed	Check the maximum resolution and the frequency of the video adaptor. Compare these values with the data in the Display Modes.	
The damaged picture appears in the corner of the screen	If Screen Fit is selected in some external devices, the damaged picture may appear in the corner of the screen. This symptom is caused by external devices, not TV.	
The 'Resets all settings to the default values.' message appears.	This appears when you press and hold the EXIT button for a while. The product settings are reset to the factory defaults.	
You may see small particles if you look closely at the edge of the bezel surrounding the TV screen.	This is part of the product's design and is not a defect.	

This TFT LCD panel uses a panel consisting of sub pixels (6 220 800) which require sophisticated technology to produce. However, there may be few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

Specifications

Model Name	LA32B530	LA37B530
Screen Size		
(Diagonal)	32 inch	37 inch
PC Resolution		
(Optimum)	1920 x 1080 @ 60 Hz	1920 x 1080 @ 60 Hz
Sound		_
(Output)	10W X 2	10W X 2
Dimensions (WxDxH)		
Without Stand	801 X 77 X 518 mm	918 X 77 X 597 mm
With stand	801 X 220 X 563 mm	918 X 234 X 650 mm
Weight		
With Stand	12 kg	15 kg
Environmental Considerations	-	-
Operating Temperature	10°C to 40°C (50°F to 104°F)	
Operating Humidity	10% to 80%, non-condensing	
Storage Temperature	-20°C to 45°C (-4°F to 113°F)	
Storage Humidity	5% to 95%, non-condensing	
Stand Swivel		
(Left / Right)	-20° ~ 20°	

Model Name	LA40B530	LA46B530
Screen Size		
(Diagonal)	40 inch	46 inch
PC Resolution		
(Optimum)	1920 x 1080 @ 60 Hz	1920 x 1080 @ 60 Hz
Sound	-	
(Output)	10W X 2	10W X 2
Dimensions (WxDxH)		
Without Stand	998 X 78 X 621 mm	1127 X 78 X 712 mm
With stand	998 X 240 X 686 mm	1127 X 260 X 766 mm
Weight		
With Stand	18 kg	24 kg
Environmental Considerations		
Operating Temperature	10°C to 40°C (50°F to 104°F)	
Operating Humidity	10% to 80%, non-condensing	
Storage Temperature	-20°C to 45°C (-4°F to 113°F)	
Storage Humidity	5% to 95%, non-condensing	
Stand Swivel		
(Left / Right)	-20° ~ 20°	

 $[\]ensuremath{\cancel{\square}}$ Design and specifications are subject to change without prior notice.

This device is a Class B digital apparatus.

For the power supply and Power Consumption, refer to the label attached to the product.