


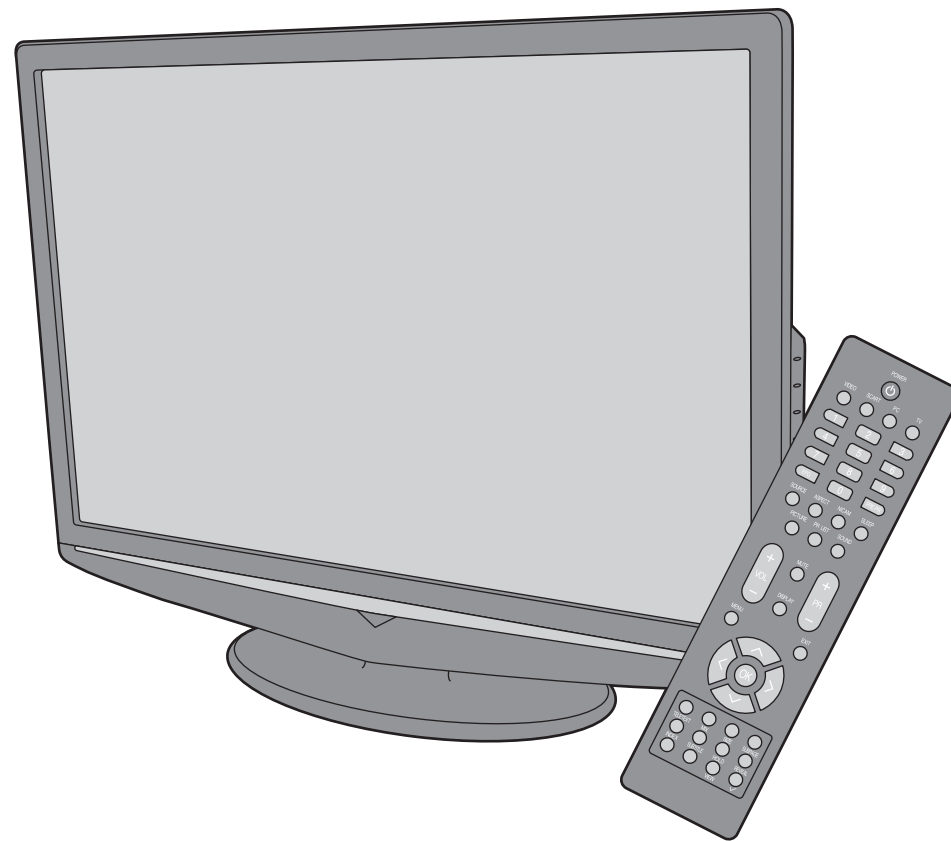

Instruction Manual - Please keep for future reference

Bush 19/22/26in LCD TV



4-08

IMPORTANT SAFETY INSTRUCTIONS



Read all instruction before use and keep for future reference.



WARNING

- Misuse or modification of this appliance may result in breakdown or injury.
- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.



IMPORTANT INFORMATION

- The appliance is intended for household use only.
- The appliance should always be turned to OFF before plugging or unplugging from socket. Never yank cord to disconnect from socket; instead, grasp plug and pull to disconnect.
- Check that the voltage on the rating plate of your product corresponds with your local electricity supply which must be A.C. (Alternating Current).
- If the mains sockets in your home are not suitable for the plug supplied with this product, check with a qualified electrician for replacement.



FOR OPTIMUM PERFORMANCE

- Do not use in environments which are extremely hot, cold, dusty or humid.
- Keep the unit free from dust and clean with a dry cloth.
- Do not use in areas exposed to direct sunlight or where it can become extremely hot.
- Keep away from sources of strong magnetism - such as speakers.
- Avoid placement where there is a lot of movement, vibration or on an unstable surface.
- To reduce the risk of fire or electric shock, the equipment shall not be exposed to rain or moisture and objects filled with liquids, such as vases, shall be placed on the apparatus.
- The equipment shall not be exposed to dripping or splashing.
- To avoid fire, no naked flame source, such as lit candles, should be placed on or around the unit.
- For ventilation, leave at least 10 cm free all around the TV. Do not place the TV on a carpet.
- The ventilation holes must be kept clear from obstructions.
- In case of smoke, or unusual noises or smells coming from the unit, switch it off, unplug it from the wall socket and contact your dealer or service center.
- Place the TV in such a position that the screen is not exposed to direct sunlight. It is best to have soft indirect lighting whilst watching TV. Avoid dark environments and screen reflection as these may cause eye fatigue.
- When the TV has been moved from a cold place, it will need time for the moisture from inside to evaporate.
- The appliance coupler is used as the disconnect device of this apparatus, the disconnect device shall remain readily operable.
- The apparatus must be connected to a mains socket outlet with a protected earthed connection.

IMPORTANT SAFETY INSTRUCTIONS



Read all instruction before use and keep for future reference.



FOR SAFETY

DO NOT:

- Attempt to disassemble this unit or carry out repairs.
- Attempt to modify the unit in any way.
- Make sure that foreign objects do not get inside the unit.
- Place naked flame sources - such as lit candles on or near the unit.
- Place objects filled with liquids - such as vases, on or next to the unit.
- Cover the unit - allow the unit to be well ventilated.
- Drop the unit or subject it to strong shocks.
- Attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



CHILDREN

- Children do not always understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.



POWER SUPPLY

- If the unit uses a mains supply, ensure that the plug is securely inserted into the mains socket, and it is easily accessible.
- Protect the power lead from sharp objects, excessive heat and damp or wet locations. Check the power lead periodically, and replace if damaged.
- If the unit uses batteries, please ensure that they are inserted correctly - observing the polarity (+/-).
- Do not mix new and used batteries.
- Please make sure that used batteries are disposed of correctly. Do not burn or incinerate.
- Check that the voltage on the rating plate of your product corresponds with your local electricity supply which must be A.C. (Alternating Current).
- Any repairs should only be carried out by a fully qualified electrician or an authorised service agent.



LISTENING WITH EARPHONES

- Listen at moderate volumes to avoid hearing damage.
- If you hear no sound during playback, do not turn the volume up as the music may suddenly begin at a high volume. Excessive sound pressure from earphones and headphones can cause hearing loss.
- To avoid damaging your ears, adjust the volume to the lowest level before playback, and turn up to the desired level when playback has started.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), THERE ARE NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.


CONTENTS

Know Your Machine	3
Remote Control	6
Wall Mounting.....	8
Antenna Connection	10
Tuning Menu Options	11
Other Connections	13
Basic Operation	18
Menu Operation	22
Teletext	32
Common Interface Module	34
Troubleshooting	36
Specifications	37
Product Guarantee	39

KNOW YOUR MACHINE

- A** POWER
- B** VIDEO
- C** SCART
- D** TV
- E** PC
- F** Numerical Buttons
- G** EPG
- H** PRE PR
- J** ASPECT
- K** SOURCE
- L** NICAM
- M** SLEEP
- N** PICTURE
- O** PR LIST
- P** SOUND
- Q** VOL
- R** MUTE
- S** PR
- T** DISPLAY
- U** MENU
- V** EXIT
- X** OK
- Y** Navigation Buttons
- a** Green Button
- b** Yellow Button
- d** Blue Button
- e** Red Button
- f** MIX
- g** TELETEXT
- h** SIZE
- k** SUBPAGE
- m** INDEX
- n** SUBTITLE
- p** REVEL/Tick
- q** HOLD/VIEW

1 x Remote Control

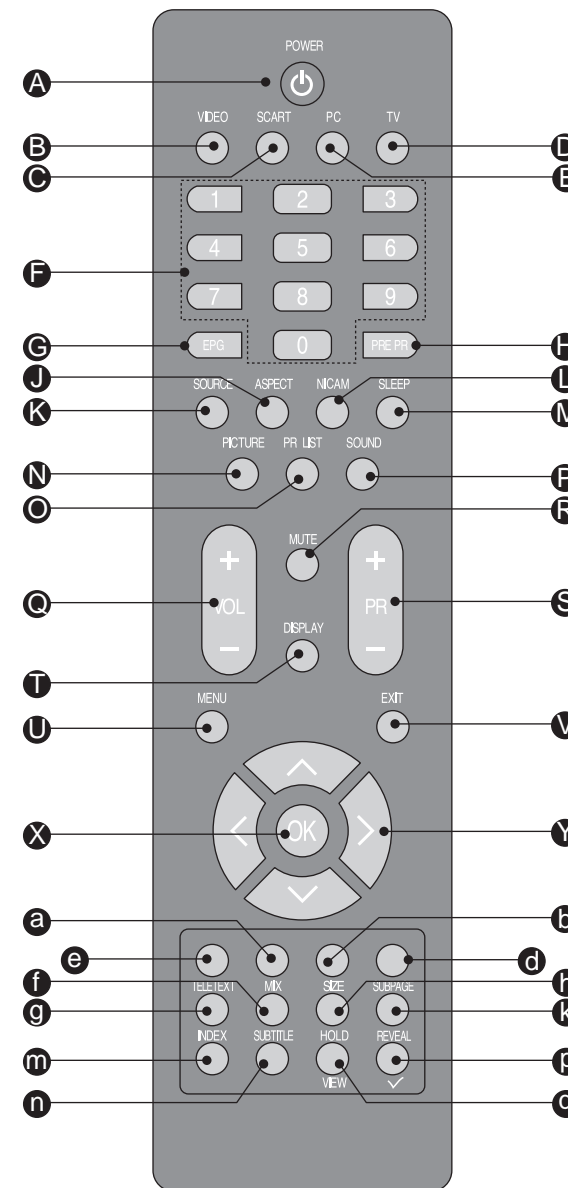

REMOTE CONTROL



NOTES:


- Please read the important safety instructions before use.

REMOTE CONTROL

1. Unclip the Battery Cover from the Remote Control.
See fig. 1.
2. Insert two new 1.5V size AAA Batteries with the ⊕ and ⊖ marks correctly aligned.
See fig. 2.

NOTE ON BATTERIES:

- Do not mix different types of batteries or an old battery with a new one.
- To prevent the risk of leakage or explosions, never recharge the batteries, apply heat or take them apart.
- When not using batteries, remove them to prevent battery drain.
- If liquid leaks from the batteries, throw them away. Thoroughly clean the battery compartment with a dry cloth.

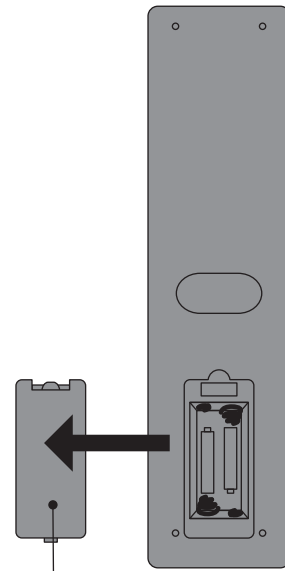

Battery
Compartment
Cover

fig. 1

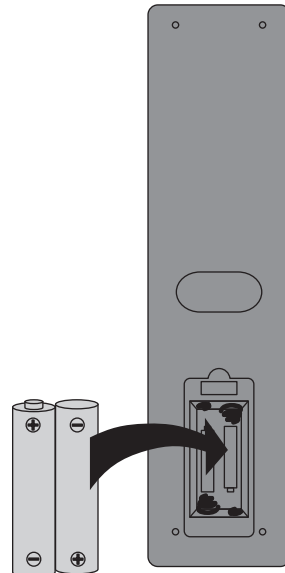


fig. 2

REMOTE CONTROL

3. Carefully close the Battery Cover.
See fig. 3.

PRECAUTIONS:

To obtain the best performance from your remote control, please consider the following:

- Ensure there is no obstruction between remote control and TV set.
- Bright sunlight may affect the remote control performance.
- Always ensure that both batteries are replaced at the same time.

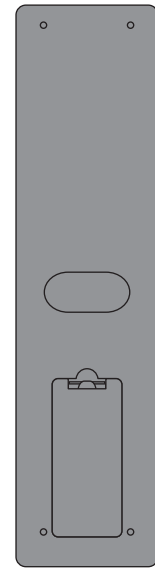


fig. 3

WALL MOUNTING



NOTES:

- Please read the important safety instructions before use.



WALL MOUNTING (Optional)

IMPORTANT: When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs supplied are suitable for supporting the unit. Consult a qualified tradesperson if you are not sure.

NOTE: It would be useful to ask someone to help you at this stage.


1. Put the unit face down on a safe, flat surface that is covered by a smooth cloth. See fig. 4 and 5.

2. Unscrew the screws of the stand. Then remove the Stand. See fig. 4 - 6.

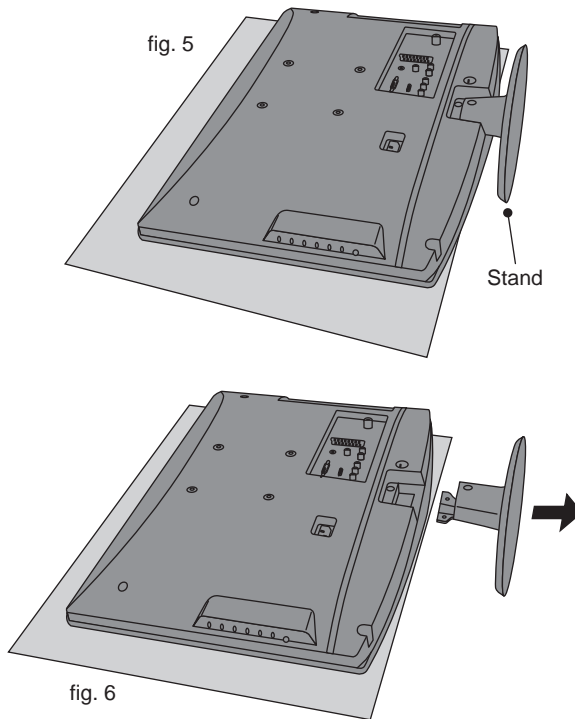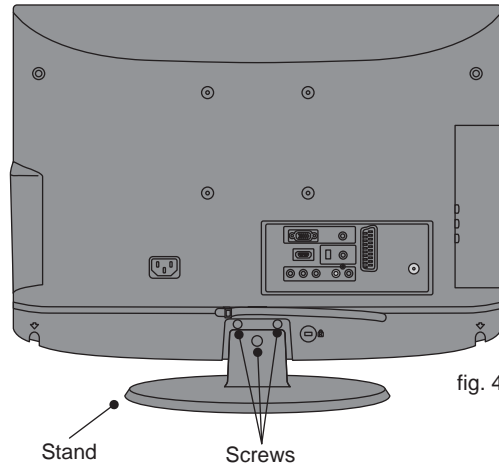

WALL MOUNTING

3. Use 4 Wall Mount Holes (B) and Screws (not included) to mount the TV on the Bracket (not included). See fig. 7.

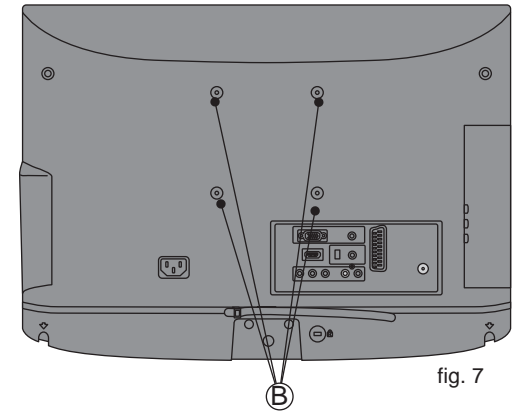

4. For the Wall Bracket - Refer to the user instructions supplied with the wall bracket (not included). See fig. 8.

	TV Screen Size (inches)	VESA-Compatible Wall bracket (W x H mm)	Screw Type
	19"	100 x 100 mm	Metric 4 x 10 mm
	22"	100 x 100 mm	Metric 4 x 10 mm
	26"	200 x 100 mm	Metric 4 x 10 mm

fig. 8

ANTENNA CONNECTION



WARNING:

- Switch off the TV before connecting any external device.

CONNECTING THE ANTENNA

1. Connect the Antenna Plug to the Antenna Input **Q** located at the rear of the TV.
See fig. 9.
2. For optimum picture quality, adjust the direction of the antenna.
3. To improve picture quality where the signal is poor use a signal amplifier (not included).

AC POWER CORD CONNECTION

NOTE: Make sure your local voltage is 230V/240V~, 50Hz.

1. Connect the AC Power Cord **Z** to the Power Connector **X**.
See fig. 9.
2. Connect the AC Power Cord **Z** to the mains socket.
See fig. 9.

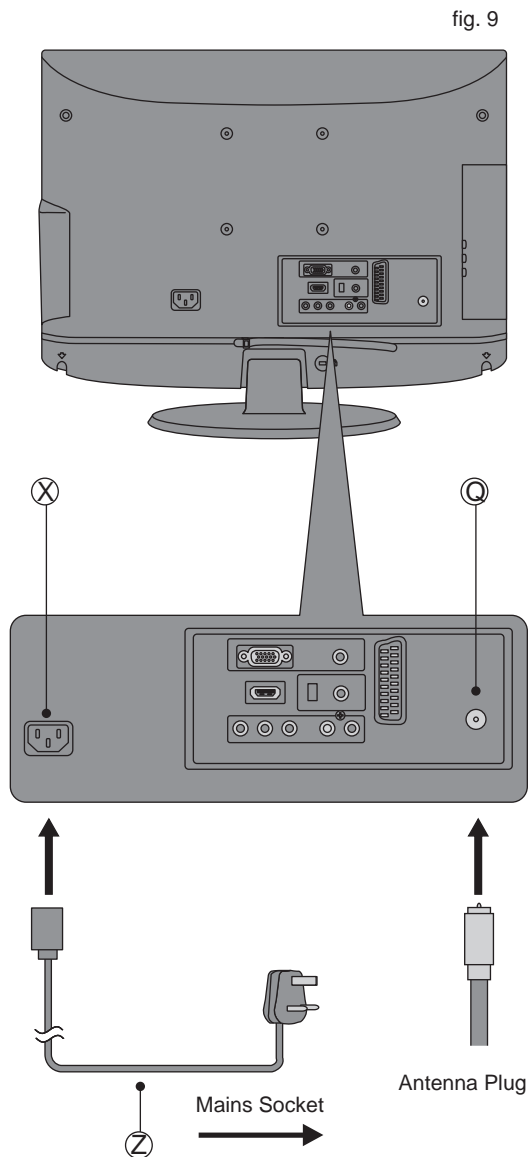


fig. 9

TUNING MENU OPTIONS

TURN ON THE LCD-TV

1. When the POWER **J** or **A** is pressed the TV will turn on and the Power LED **A** on the front of the TV will change from red to blue
See fig. 10 and 11.
2. When the LCD-TV is turned off using the POWER **J** or **A**, the LCD-TV will go into standby mode and the Power LED **A** will turn red.
See fig. 10 and 11.

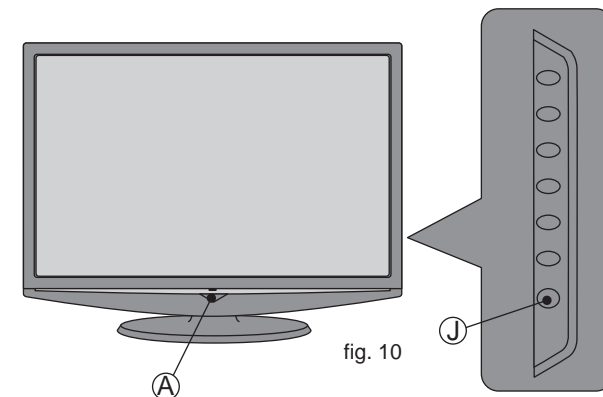


fig. 10

FIRST TIME INSTALLATION

1. This display will appear on the screen when the TV is turned on for the first time.
See fig. 12.

NOTE: If you can not find this screen press MENU **U. Then use the Navigation Keys **Y** to select the TV menu.
See fig. 11.**

2. Press the Green Button **a** to proceed with the installation.
See fig. 11.

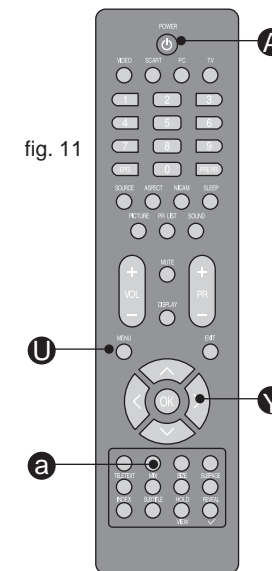


fig. 11

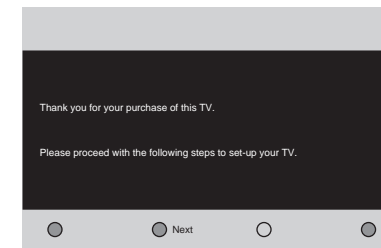


fig. 12





TUNING MENU OPTIONS

3. Use Navigation Keys **Y** to select your language. Then press Green Button **a** to continue. See fig. 13 and 14.

4. Use Navigation Keys **Y** to select your country. Then press Green Button **a** to continue or press Yellow **b** to go back. See fig. 13 and 15.

5. System searching may take few minutes to complete. See fig. 16.

6. A message will be displayed when the search is complete. Press Red Button **e** to finish system searching. The LCD TV will automatically display the first channel found automatically. See fig. 13.

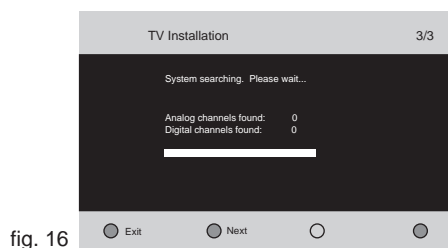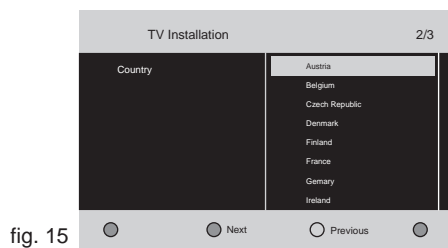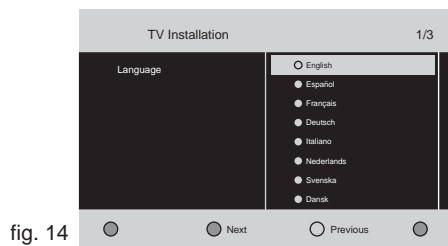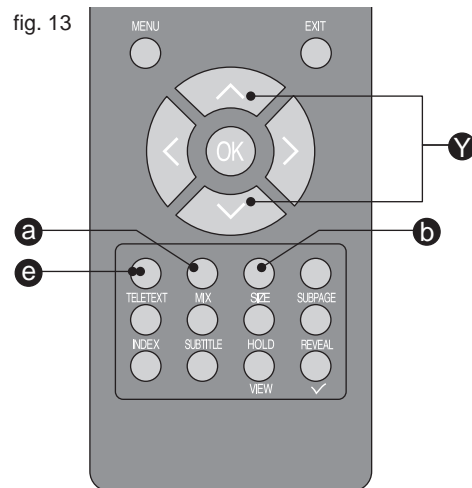

OTHER CONNECTIONS



WARNING:

- Switch off the TV before connecting any external device.

SCART INPUT

- To connect external devices such as DVD players, set top boxes or games consoles.

1. Plug the scart lead from the external device into TV SCART Socket **R**. See fig. 17.
2. SCART 1 - Full SCART, which transmits RGB, S-Video and CVBS in and CVBS tuner out (Analog).
3. Press SCART **C** or SOURCE **K** to select the SCART. See fig. 18.

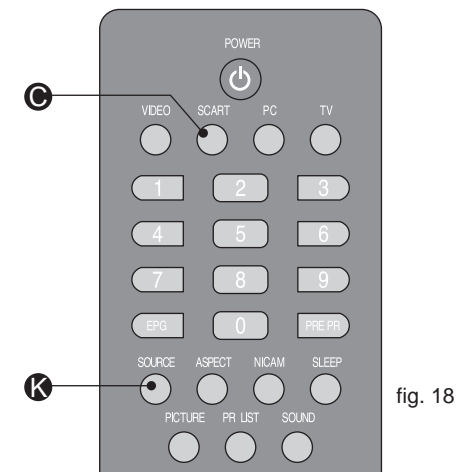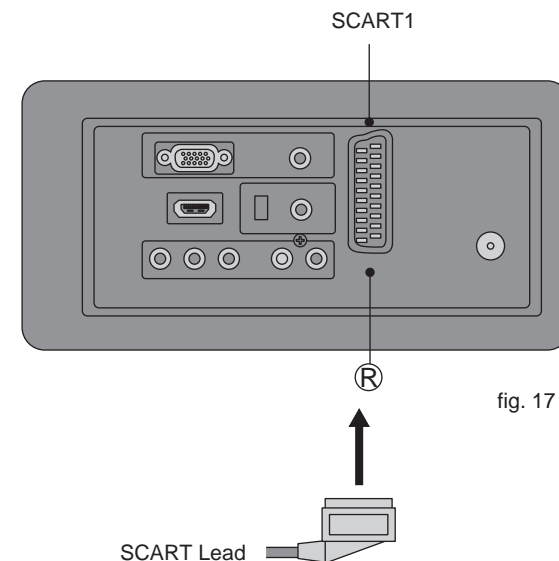

OTHER CONNECTIONS

YPbPr INPUT

- For connecting devices such as video cameras.

1. Make sure that the power of the LCD-TV and the AV device are off.



2. Connect the (Y, Pb, Pr) cables and audio cables to the Component and Audio Input on the TV.

See fig. 19.


3. Turn on the power of the LCD-TV first and then turn on the power of the AV device.

4. Press VIDEO **B** or SOURCE **K** to select the YPbPr input.

See fig. 20.

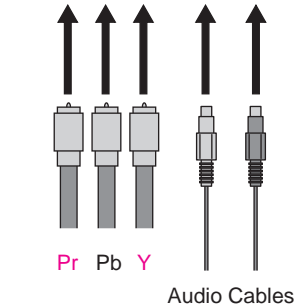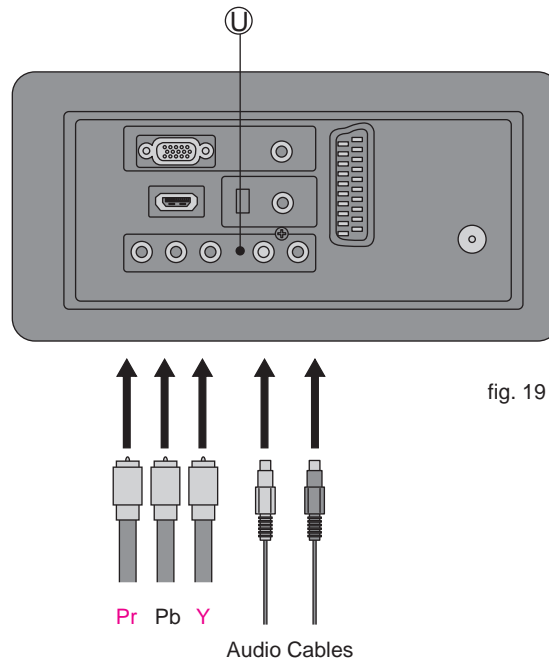

Pr Pb Y
Audio Cables

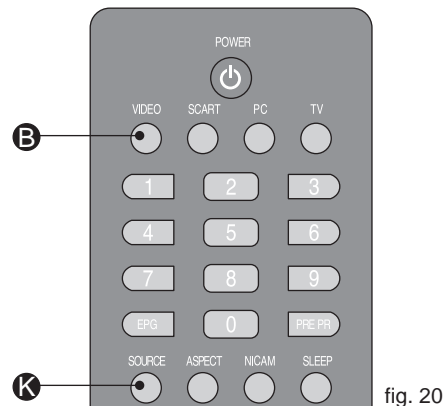

OTHER CONNECTIONS

VGA INPUT

- You can use your LCD-TV as a monitor for your personal computer.

1. Connect the D type 15-pin VGA interface cable (not supplied) to VGA Input **Y** on the LCD-TV.



See fig. 21.

2. Connect the audio cable (not supplied) to Audio Input **S** on the back of the LCD-TV (if necessary).

See fig. 21.

3. Press PC **E** or SOURCE **K** to select the PC input.

See fig. 22.

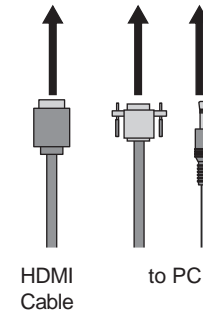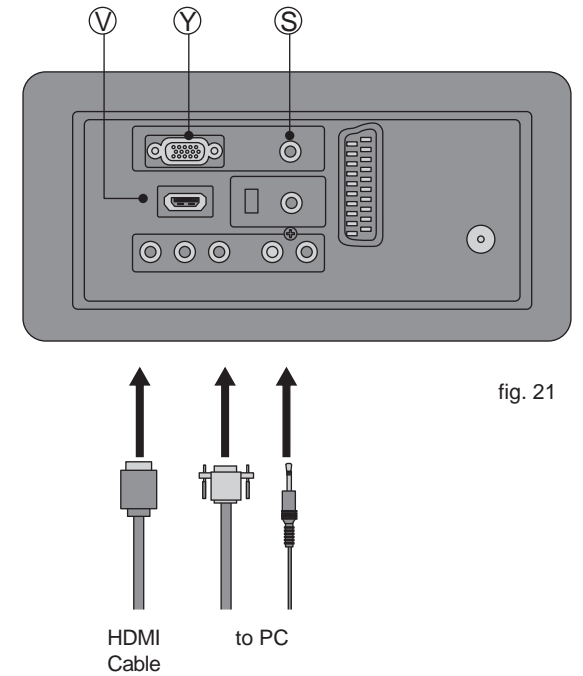

HDMI 1 INPUT

CAUTION: You must ensure both devices are switched off before connection.


1. Connect the cable from the HDMI devices to the TV HDMI Input **V**.

See fig. 21.

2. Press VIDEO **B** or SOURCE **K** to select the HDMI input.

See fig. 22.


3. Operate the corresponding external equipment. (Refer to external equipment operating guide.)

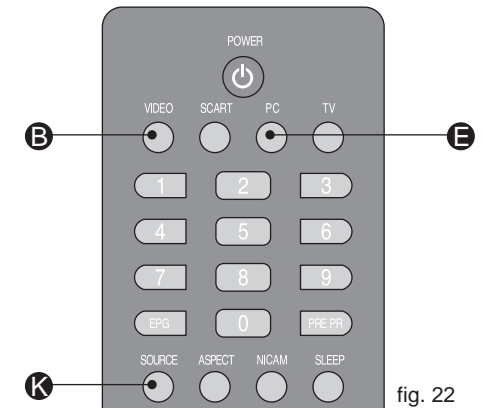

OTHER CONNECTIONS


AV INPUT

- For connecting an AV device.
1. Make sure that the power of the LCD-TV and the AV device are off.
 2. Connect the **Video** cables from the AV device's output jacks to the **Video Input** (M).
See fig. 23.
 3. Connect the **Audio** cables from the AV device's output jacks to the **Audio Input** (N).
See fig. 23.
 3. Turn on the LCD-TV first ; and then turn on the AV device.
 4. Press **VIDEO** (B) or **SOURCE** (K) to select the AV input.
See fig. 24.

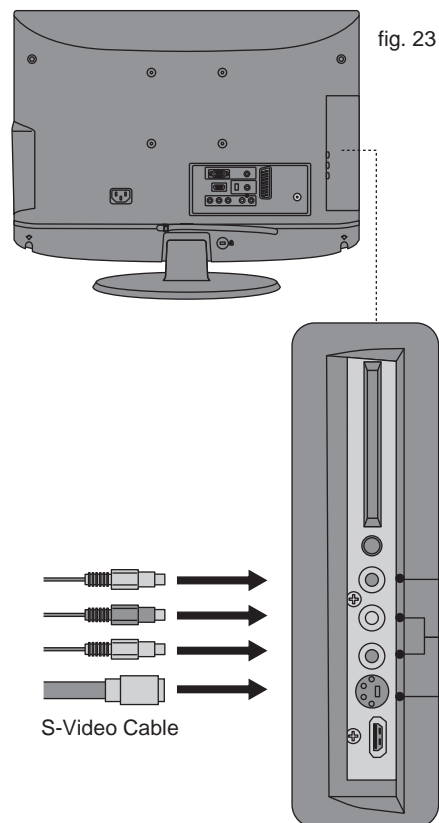

S-VIDEO INPUT


- For connecting video recorders.
1. Make sure that the power of the LCD-TV and the AV device are off.
 2. Connect the audio and S-Video cables from the VCR's output jacks to the S-Video Input (O) and Audio Input (N).
See fig. 23.
 3. Turn on the LCD-TV first and then turn on the VCR.
 4. Press **VIDEO** (B) or **SOURCE** (K) to select the S-VIDEO input.
See fig. 24.

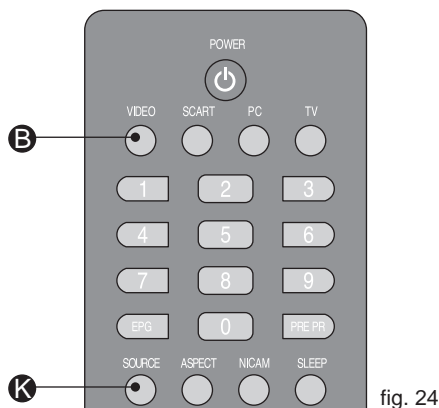

OTHER CONNECTIONS

COMMON INTERFACE SLOT

- You can use a Conditional Access Module (CAM) card to view Pay TV.
1. Insert the CAM card (not included) in Common Interface Slot (K).
See fig. 25.
 2. Please refer to the COMMON INTERFACE section for more detailed information.

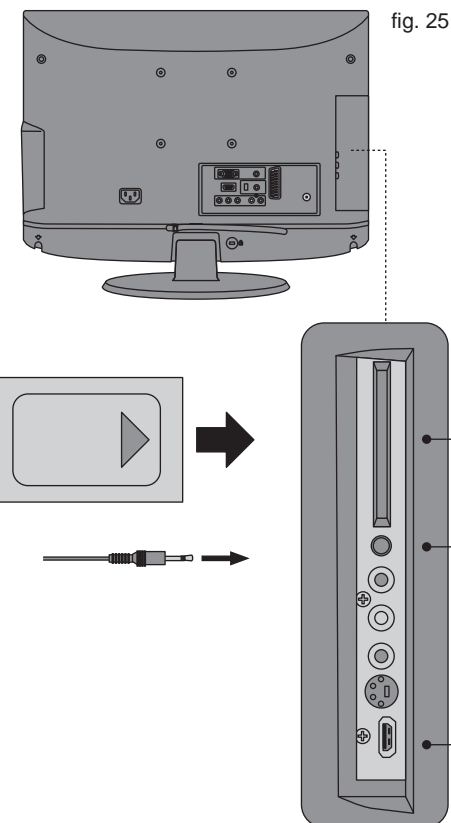

HEADPHONE OUTPUT

1. Connect a set of stereo headphones (not included) to the Headphone Output (L) for private listening. When headphones are in use, the speakers will be automatically disconnected.
See fig. 25.

IMPORTANT: When using headphones always set the volume control to a low level before you put the headphones on, then put the headphones on and gradually increase the volume to a comfortable listening level.

HDMI 2 INPUT

- Same as HDMI 1.

BASIC OPERATION

SELECT SOURCE

1. Press POWER **A** to turn on the LCD-TV. Then press TV **D**, PC **E**, SCART **C**, VIDEO **B** or SOURCE **K** to select the source. See fig. 26.

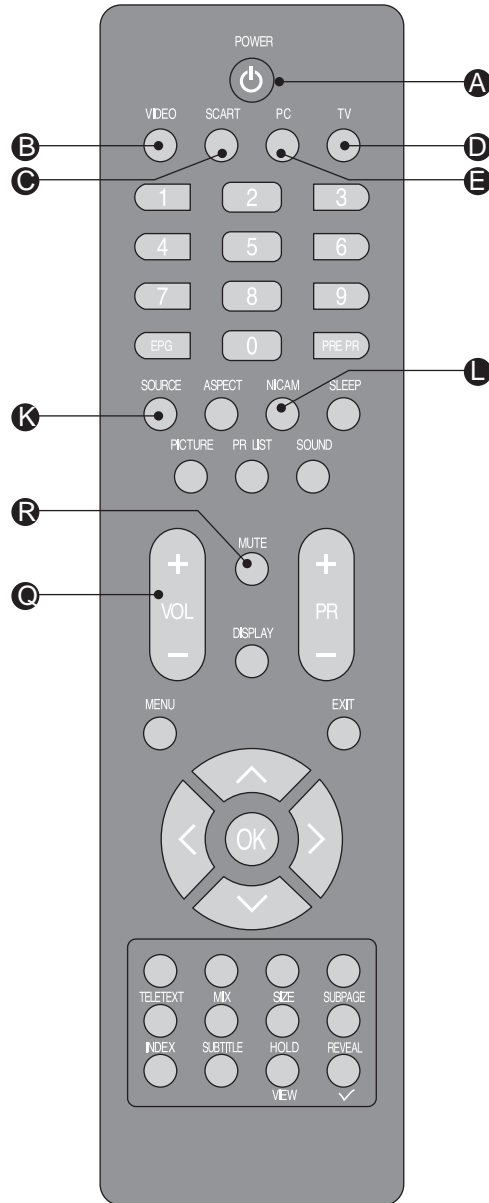


fig. 26

AUDIO CONTROL

1. Press VOL+ **Q** to increase the volume or VOL- **R** to decrease the volume. A number will appear on screen indicating the volume level. See fig. 26.

MUTE

1. Press MUTE **R** to mute the sound. A mute icon will appear on the screen. See fig. 26.
2. Press MUTE **R** again or VOL+/VOL- to restore the sound. The mute icon will disappear. See fig. 26.

NICAM

1. Press NICAM **L** to select MONO, STEREO, DUAL 1 and DUAL 2 for ATV channel. Select Audio language for DTV channel. See fig. 26.

BASIC OPERATION

SOUND

1. Press SOUND **P** to set the LCD TV to a predefined sound setting. Off / Rock / Pop / Live / Dance / Techno / Classic / Soft. See fig. 27.

SELECT TV CHANNEL

1. You can use the Number Keys **F** on the remote control to directly select TV channels. Enter the channel number you want to watch, the keys must be pressed within 3 seconds of each other. See fig. 27.
2. Press PR +/- **S** to select the previous or next TV channel. See fig. 27.
3. Press PRE PR **H** to display the TV channel previously selected. See fig. 27.

PICTURE

1. Press PICTURE **N** to set the LCD TV to a predefined picture setting. User / Cinema / Sport / Vivid / Hi-bright. See fig. 27.

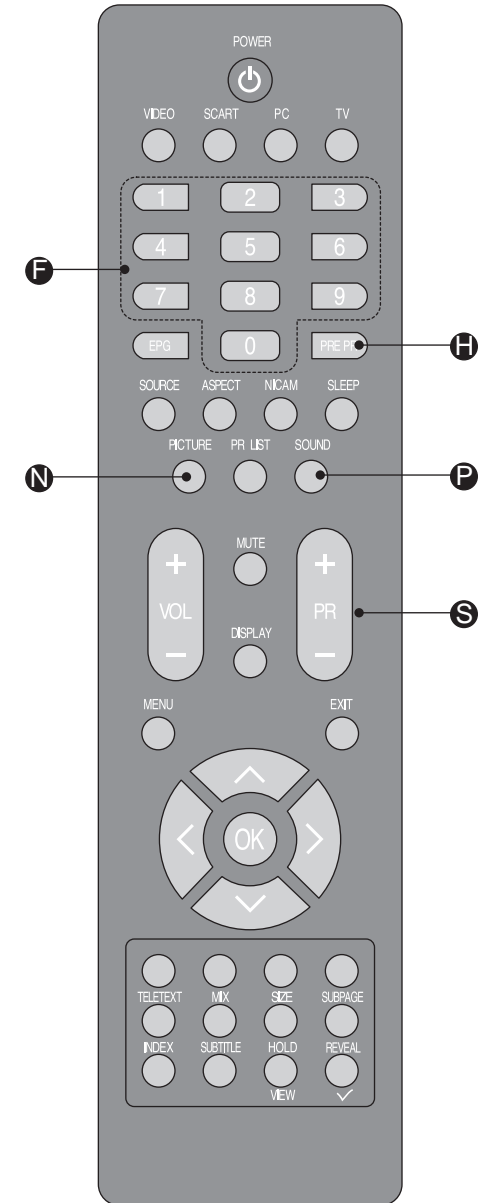


fig. 27

BASIC OPERATION

EPG

- Press EPG **G** to display electronic program guide in TV mode.
See fig. 28.

PR LIST

- Press PR LIST **O** to display a list of channels and input sources.
See fig. 28.

DISPLAY

- Press DISPLAY **T** to display the current signal status, including input source/channel audio mode.
See fig. 28.

SLEEP

1. Press SLEEP **M** to turn the LCD TV off after a preset time.
See fig. 28.
2. Use Navigation Keys **Y** to set the time (5-180 minutes.)
See fig. 28.
3. Press OK **X** to confirm.
See fig. 28.

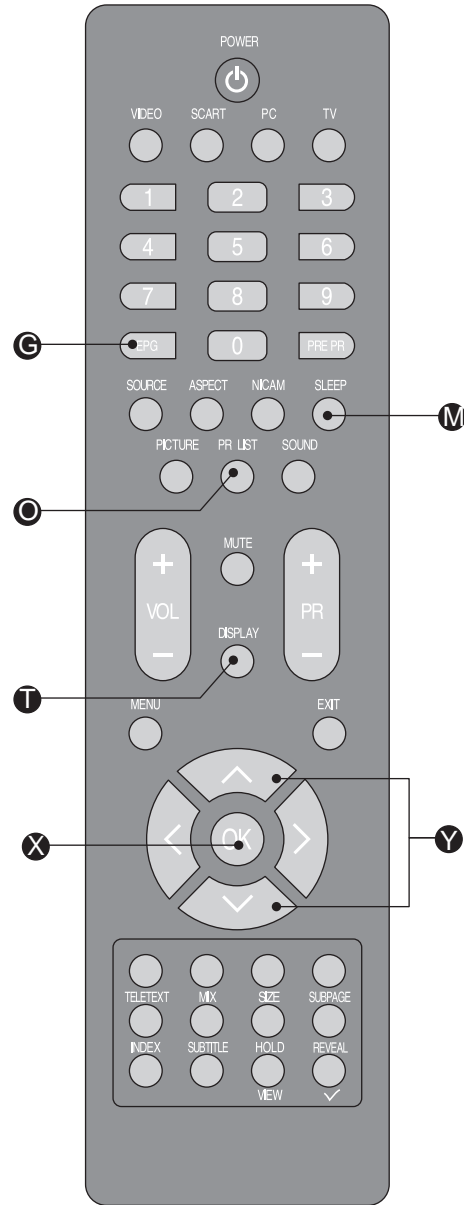


fig. 28

BASIC OPERATION

PICTURE FORMAT

1. Press ASPECT **J** on the remote control to enter the picture format menu.
See fig. 29.
2. Use the Navigation Keys **Y** to select a picture format and press OK **X** to confirm your choice.
See fig. 29.

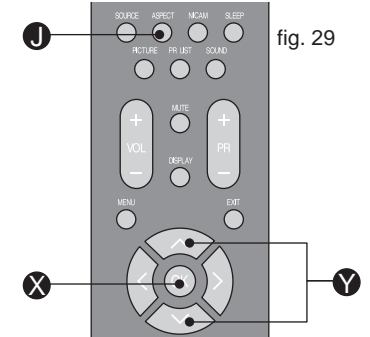


fig. 29

- **Automatic:** DTV and HDMI input will automatically display the correct format, while ATV and SCART will need to be set.
- **Panorama:** Removes the black bars on the side of 4:3 broadcasts with minimal distortion.
- **4:3:** Displays the classic 4:3 format.
- **Movie expand 14:9:** Scales the classic 4:3 format to 14:9.
- **Movie expand 16:9:** Scales the classic 4:3 format to 16:9.
- **16:9 subtitle:** Display 4:3 pictures using the full surface of the screen leaving the subtitles visible.
- **Wide screen:** Stretches the classic 4:3 format to 16:9.
See fig. 30.

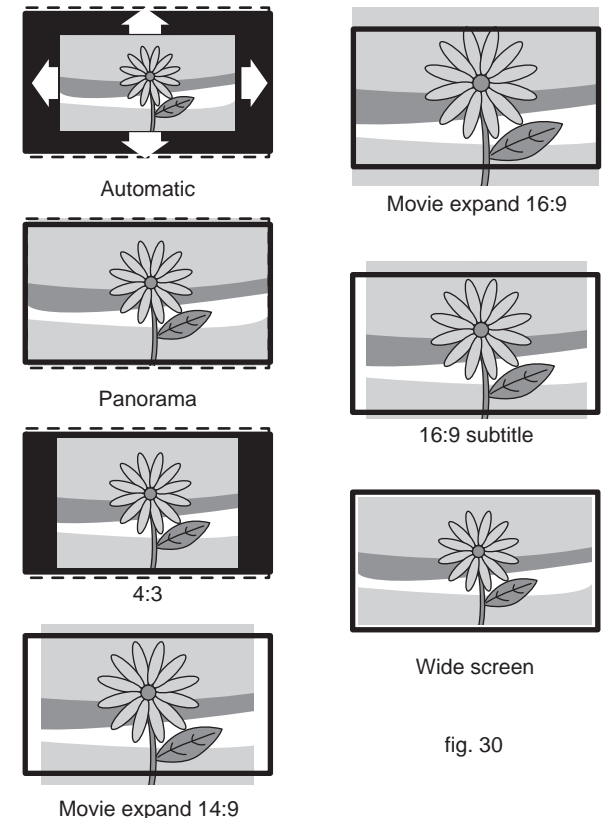


fig. 30

MENU OPERATION

OSD SETTING

1. Press MENU **G** or **U** to enter the OSD setting. There are five items in the list: Picture, Sound, TV, Installation and Parental. See fig. 31 and 32.
2. Use Navigation Keys **Y** to select and press OK **X** to confirm your choice. See fig. 31 and 32.
3. Press EXIT **V** to exit the screen. See fig. 31 and 32.

fig. 31


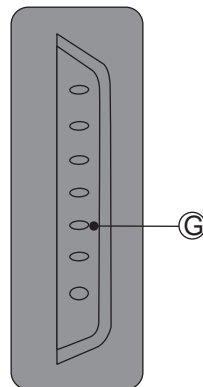


fig. 32

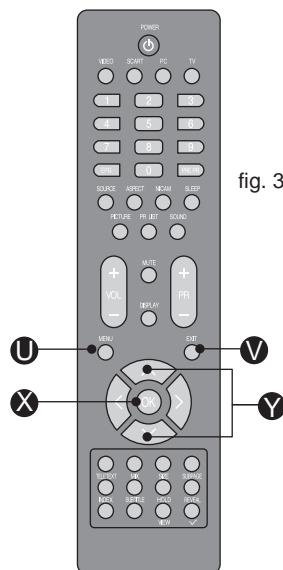

Picture

- Shows more picture modes and functions based on your favourite channels and enables you to adjust the colour and brightness setup.

Sound

- Provides more audio selections. You can also set the audio environment of the LCD TV.

TV

- Enables you to adjust special functions for country, audio language and the TV channels.

Installation

- Enables you to adjust settings related to the installation of the TV channels and language.

Parental

- Enables you to control special functions for the TV channels.

Settings	5	Picture	9
Picture		Picture mode	
Sound		Brightness	
TV		Contrast	
Installation		Sharpness	
Parental		Colour temperature	
		Noise Reduction	
		Back light	

fig. 33

MENU OPERATION

Picture

Picture mode

- To set the LCD TV to a predefined picture settings. Use Navigation Keys **Y** to toggle between User, Cinema, Sport, Vivid, and Hi-bright. See fig. 34 and 35.

Brightness

- To brighten the dark parts of the picture.

Contrast

- To sharpen the picture quality.

Colour

- To add or reduce colour.

Sharpness

- To improve detail.

Colour temperature

- To choose between Normal (neutral), Warm (redder), and Cool (bluer).

Noise reduction

- To filter out and reduce the image noise and improve picture quality. Use Navigation Keys **Y** to toggle between Off, Low, Medium, and Strong.

Back light

- To make the background brighter or darker.


Picture format

- To display a list of available display formats. Use Navigation Keys **Y** to toggle between Automatic, Panorama, 4:3, Movie expand 14:9, Movie expand 16:9, 16:9 subtitle and Wide screen.

Settings	5	Picture	9
Picture		Picture mode	
Sound		Brightness	
TV		Contrast	
Installation		Sharpness	
Parental		Colour temperature	
		Noise Reduction	
		Back light	

fig. 34

fig. 35

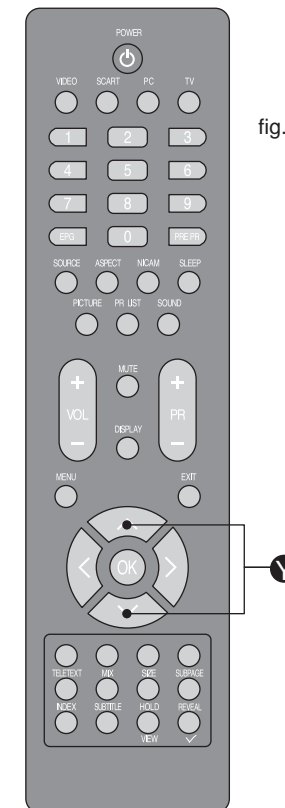

MENU OPERATION

Sound

Balance

- To adjust the balance between left/right channels.
See fig. 36 and 37.

Bass

- To adjust the amount of bass.

Treble

- To adjust the amount of treble.

Virtual surround

- To add greater depth and dimension to the TV sound. Use Navigation Keys **Y** to toggle between On or Off.

Sound mode

- To set the LCD TV to a predefined sound setting. Use Navigation Keys **Y** to toggle between Off, Rock, Pop, Live, Dance, Techno, Classic, and Soft.

AVL

- To eliminate the volume differences between channels and programs and also reduce the dynamics of the sound.

Digital audio out

- To select the Digital audio out. Use Navigation Keys **Y** to toggle between Off, Bit stream and PCM.

Tip: When Bit stream is selected, make sure the amplifier supports digital audio.

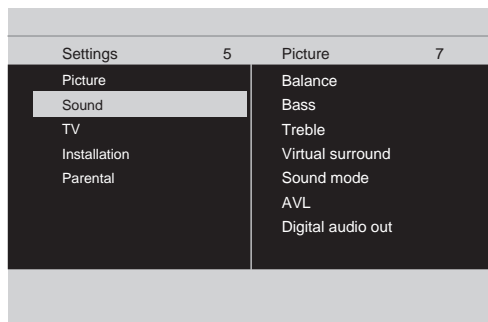


fig. 36

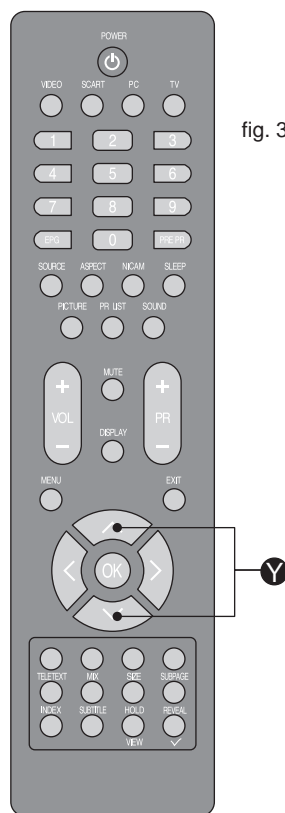


fig. 37

MENU OPERATION

- The following functions are only available for digital channels with audio signals.

Volume-visually impaired

- To increase or decrease the volume for the visual impaired. Use Navigation Keys **Y** to adjust the volume.

Tip: Before you adjust the volume, please make sure Audio description is On. See fig. 38 and 39.

Hearing impaired

- To transmit an audio-frequency for the hearing impaired. Use Navigation Keys **Y** to toggle between On or Off.

Audio description

- To enable or disable the volume-visually impaired function. Use Navigation Keys **Y** to toggle between On or Off.

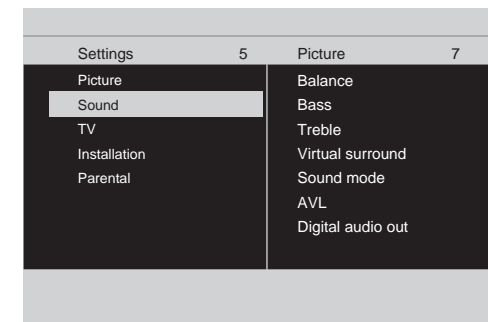


fig. 38

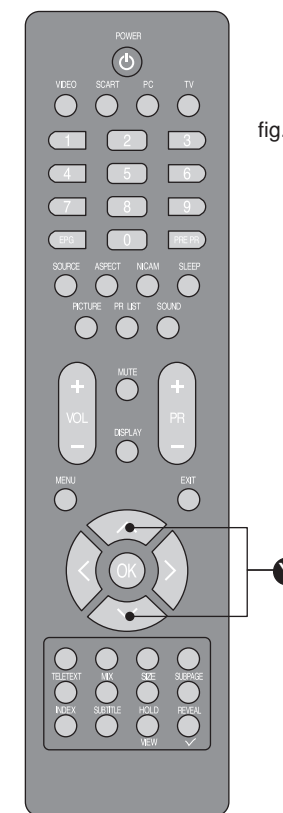


fig. 39

MENU OPERATION

TV

Country

- To select the relevant country. This is the country you are in, or the country whose channels you want to receive if you live near its borders.

See fig. 40 and 41.

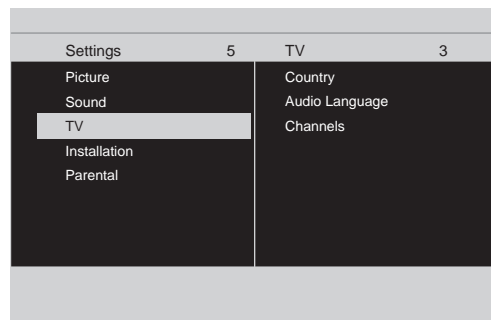


fig. 40

Audio language (Digital TV only)

- To display a dialogue enabling the preferred language to be set. This is the language to be used for all channels if it is available.

Channels

- Use the Navigation Keys **Y** to toggle between Channel scan, Update scan, Analog manual store, Channel skip, Channel sort and Channel name edit.

Channel scan

1. Use the Navigation Keys **Y** to select Channel scan in the Channels menu.
2. Press the Right Navigation Key **Y** to enter it and press OK **X** to start searching the local program automatically.

Update scan

1. Use Navigation Keys **Y** to select Channel scan in the Channels menu.
2. Press the Right Navigation Key **Y** to enter it and press OK **X** to start searching the local program automatically.

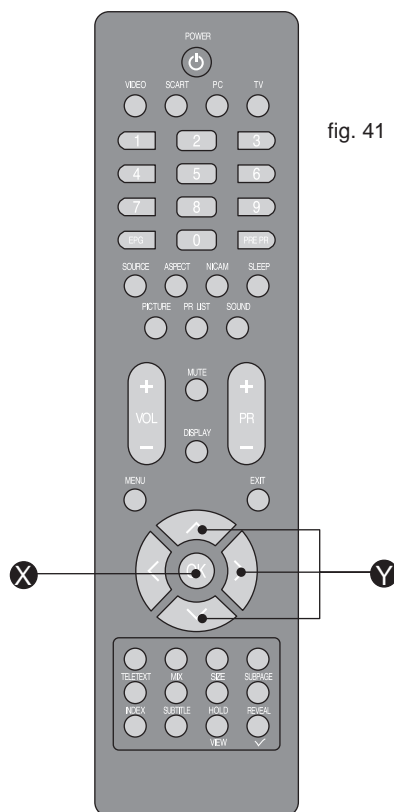


fig. 41

MENU OPERATION

Analog manual store

1. Use Navigation Keys **Y** to select Channel scan in the Channels menu.
2. Press the Right Navigation Key **Y** to enter it and press Navigation Keys **Y** to toggle between Search or Fine tune.

- **Search:** to start manual scanning from the specified frequency.
- **Fine tune:** to fine tune the program.

See fig. 42 and 43.

Channel skip

1. Use Navigation Keys **Y** to select Channel skip in the Channels menu.
2. Press the Right Navigation Key **Y** to enter it and use Navigation Keys **Y** to highlight the program you want to skip and press OK **X** to confirm.

Tip: The skipped program may not be found by pressing Navigation Keys **Y but can be accessed by pressing number buttons directly.**

- Programs with this are active
- Programs with this are skipped

Channel sort

1. Use Navigation Keys **Y** to select Channel sort in the Channels menu.
2. Press the Right Navigation Key **Y** to enter it and use Navigation Keys **Y** to highlight a program you want to sort and press OK **X** to select.
3. Use Navigation Keys **Y** to highlight the second program you want to exchange with and press OK **X** to switch.

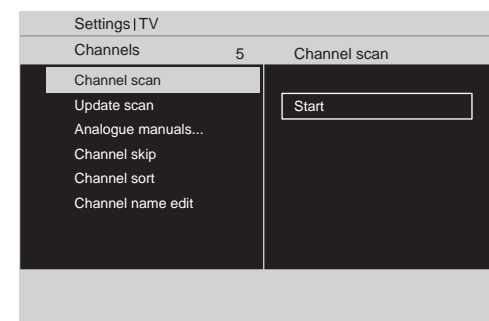


fig. 42

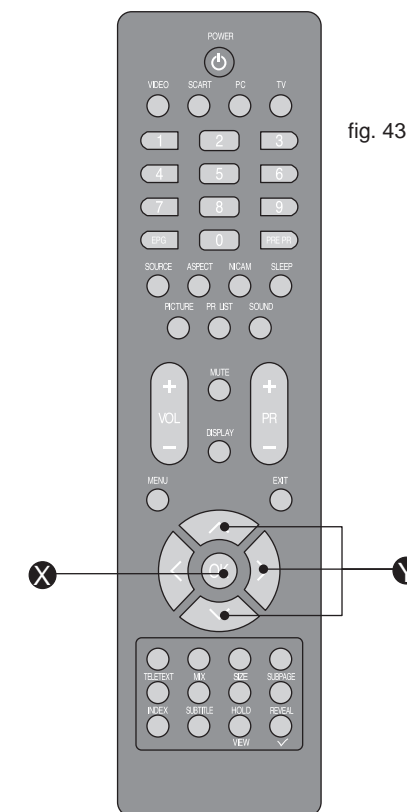


fig. 43

MENU OPERATION

Channel name edit

1. Use Navigation Keys **Y** to select Channel name edit in the Channels menu.
 2. Press the Right Navigation Key **Y** to enter it and press Navigation Keys **Y** to highlight the program you want to edit.
 3. Press the Red Button **e** to start editing program name.
 4. Use Navigation Keys **Y** to edit name and use the Right Navigation Keys **Y** to move to the next character. Please refer to the table below for available characters.
 5. Press the Green Button **a** to confirm.
- See fig. 44 and 45.

Tip: When functions attached to the Colour Buttons are active or selected, the Colour Buttons are shown on screen.

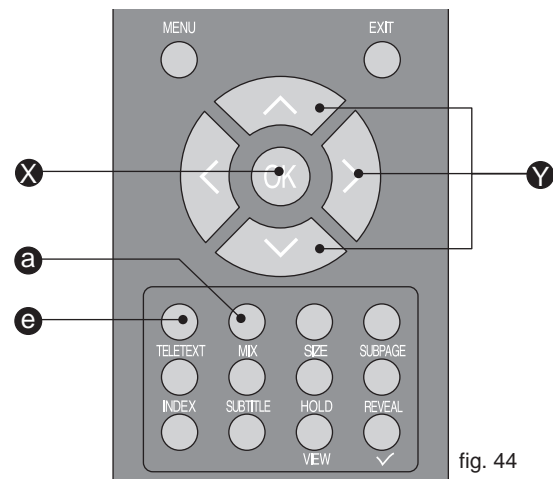



fig. 44

Available characters



-	.	@	0	1	2	3	4		
5	6	7	8	9	A	B	C	D	E
F	G	H	I	J	K	L	M	N	O
P	Q	R	S	T	U	V	W	X	Y
Z	a	b	c	d	e	f	g	h	i
j	k	l	m	n	o	p	q	r	s
t	u	v	w	x	y	z			

Available characters

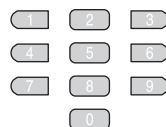

0	.	@	0						
1	-	-	1						
2	A	B	C	a	b	c	2		
3	D	E	F	d	e	f	3		
4	G	H	I	g	H	i	4		
5	J	K	L	j	k	l	5		
6	M	N	O	m	n	o	6		
7	P	Q	R	S	p	q	r	s	7
8	T	U	V	t	u	v	8		
9	W	X	Y	Z	w	x	y	z	9

fig. 45

MENU OPERATION

Installation

Language

- To select the interface language. See fig. 46 and 47.

Source

- To identify the accessory devices you have connected to the external inputs/outputs.

Time setup

- Use Navigation Keys **Y** to toggle between :

- **Time zone:** to select the time zone you are in.

- **Time:** to set the time and date or select auto synchronisation.

Tip: Before setting the time and date manually, make sure Auto synchronisation is Off.

- **Sleep timer:** to set the TV to turn itself off after a set period of time.

Subtitle

- Use Navigation Keys **Y** to toggle between :

- **Analog subtitle:** to display the transmitted subtitle on the screen. This text can either be permanently displayed (assuming that the service is available with the broadcast) or only when mute is active.

- **Digital subtitle language:** to select the teletext language.

- **Subtitle type:** to choose the normal type or hearing impaired type of subtitle.

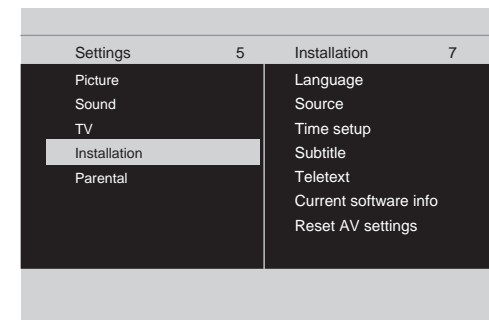


fig. 46

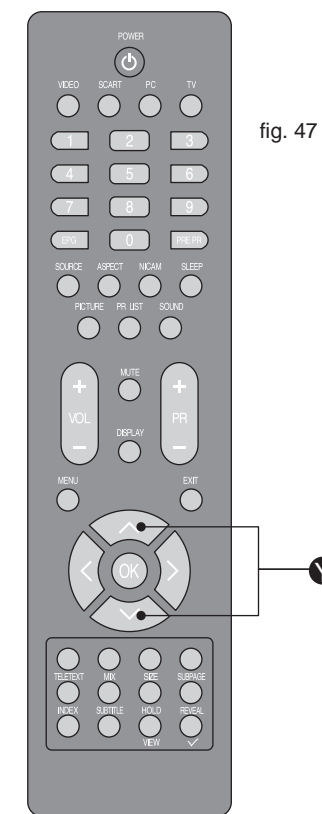



fig. 47

MENU OPERATION

Teletext

- Use Navigation Keys  to toggle between :
 - Digital teletext language: to select the teletext language.
 - Decoding page language: to set the teletext language to the regional location.
- See fig. 48 and 49.**

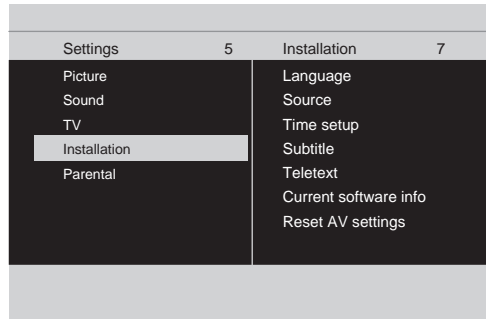



fig. 48

Current software info

- This menu appears with your TV software information.

Reset AV settings

- To reset most of the picture and sound settings to their default factory levels.

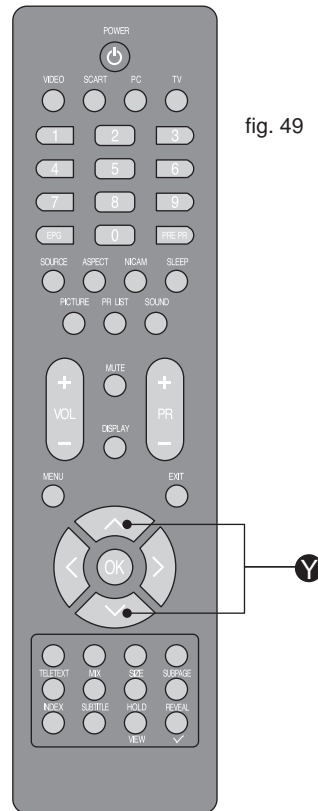

MENU OPERATION

Parental

Channel lock

- To lock a certain TV channel or external source completely.
- See fig. 50.**

Program lock

- To control access to programs based on their age ratings. All settings apply to digital channels.

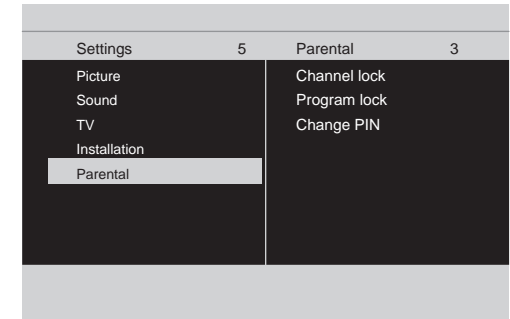


fig. 50

Change PIN

- To change your access code. If no PIN-code exists, the menu item is set to Set PIN. Please follow the instructions to set it. If a PIN-code has been entered previously, the menu item is set to Change PIN. Please follow the instructions to change it. All number combinations from 0000 to 9999 are valid.

Tip: Remember that 0711 is the default Change PIN code. If your access code has been changed or you have forgotten the code, you can always get in by entering the default code.

TELETEXT

TELETEXT

- (Designed for Europe PAL/SECAM/DVB-T systems only)

TELETEXT

- Press TELETEXT **g** to activate Teletext. Press again to turn off Teletext.
See fig. 51.

MIX

- Press MIX **f** to activate Teletext overlaying the TV picture.

SIZE

- Press SIZE **h** to change the screen size: Full screen, Top half and Bottom half.

SUBPAGE

- Press SUBPAGE **k** to display the sub page (when available)

INDEX

- Press INDEX **m** to return to page 100 or the index page; and then press 0 to 9. The teletext page will be numbered and added to the page you select or the secondary item.

SUBTITLE

- Press SUBTITLE **n** to select the next page marked as a subtitle page.

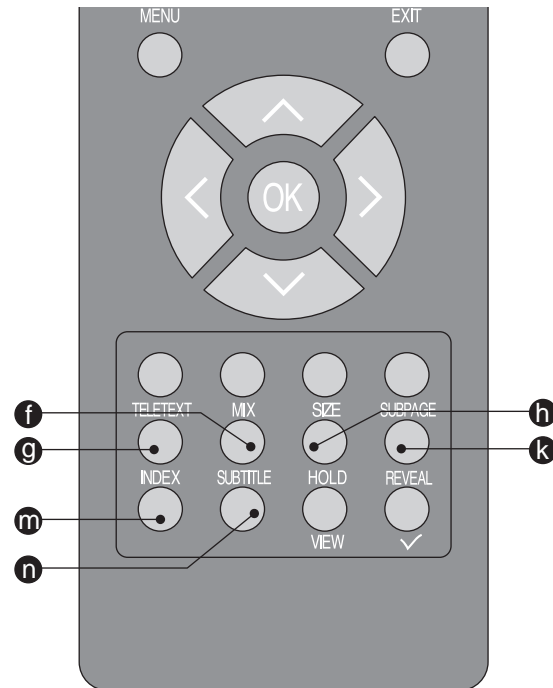


fig. 51

TELETEXT

HOLD

- Press HOLD **q** to stop the scrolling of pages, press again to continue.
See fig. 52.

REVEAL

- Press REVEAL **p** to display hidden information such as answers to a quiz.

R/G/Y/B (Colour button)

- Press Colour Buttons **a, e, b,** and **d** to select from on screen options, which have the same coloured text.



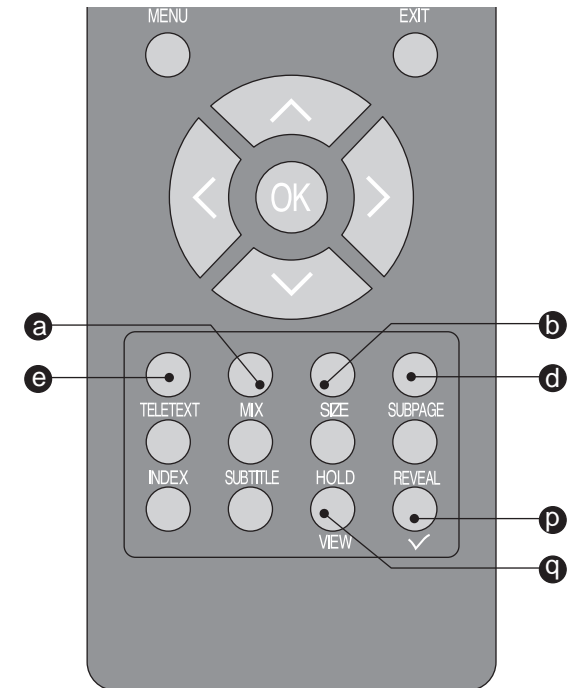


fig. 52

Common Interface Module



- The Common Interface CI Slot (K), is designed to accept the Conditional Access CA Module coupled with a Smart card, in order to view pay TV programmes and additional services. Contact your Common Interface service provider for further information about modules and subscription options. Please note that CA modules and smart cards are not included, or supplied as optional extras by us. See fig. 53.

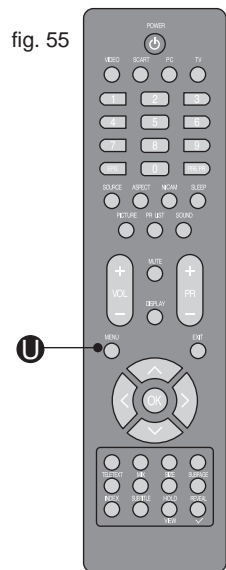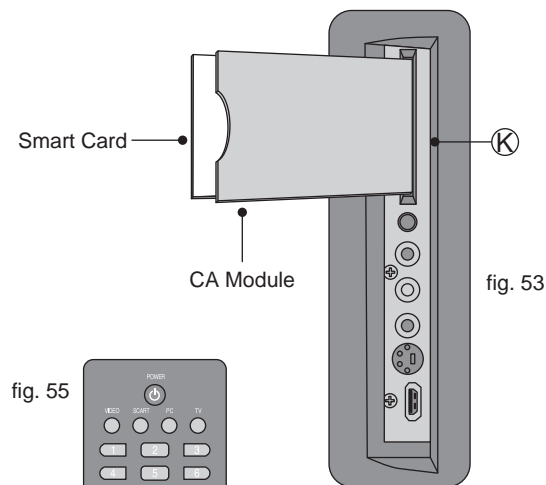


WARNING: Switch off your TV before any module is inserted into the Common Interface slot.

1. Correctly insert the CA Module and then the Smart Card into the CI slot located at the side of the TV. See fig. 53.



2. Turn on the TV and press MENU (G) or (U) and select the TV sub-menu. "Common interface" will be displayed if the CA module is detected. Wait for few moments until the card is activated. See fig. 54 - 56.

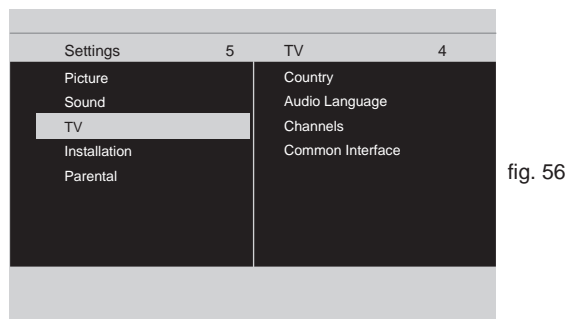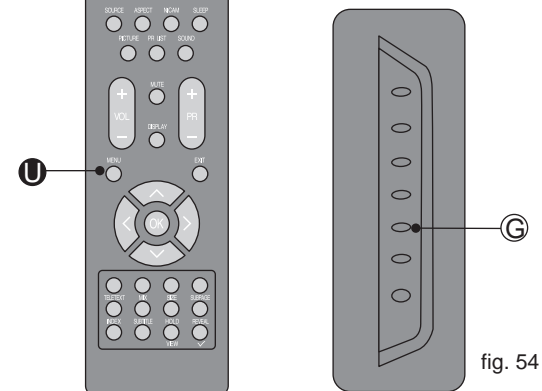


3. Select Common Interface to view the menu options and information on the inserted CI card. See fig. 57.

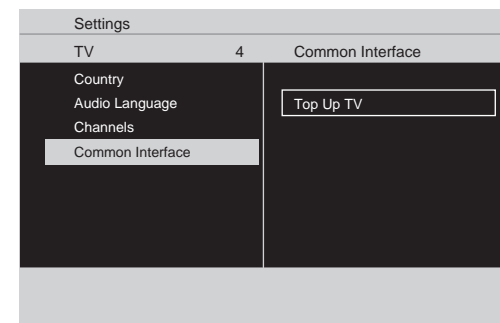

4. Press OK (X) to access the card menu, for more details refer to the module's instruction manual. See fig. 58 - 59.

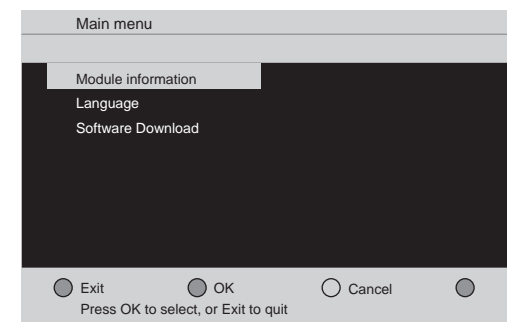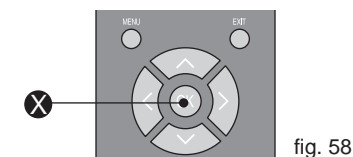

5. When module is removed, the "Common Interface" menu will disappear from the screen. See fig. 60.

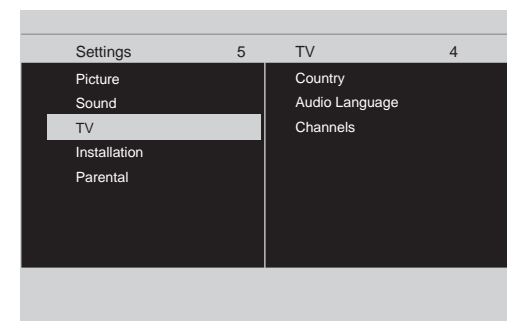

TROUBLESHOOTING

The following table contains common problems and the solutions to these problems. Please check this list before you contact technicians.

Problems	Solutions
No picture	<ol style="list-style-type: none"> 1. Connect power cord correctly. 2. Turn on power. 3. Connect signal cable correctly. 4. Press any button on the LCD TV.
Abnormal colours	Connect signal cable correctly.
Twisted picture	<ol style="list-style-type: none"> 1. Connect signal cable correctly. 2. Please use compatible signal.
Picture too dark	Adjust brightness and contrast. Audio only, no images
Audio only, no images	<ol style="list-style-type: none"> 1. Please check if input signal is connected correctly. 2. TV-RF signal must not be lower than 50dB.
Picture only, no audio	<ol style="list-style-type: none"> 1. Connect signal cable correctly. 2. Adjust volume to proper level. 3. Connect audio signal cable correctly. 4. TV-RF signal must not be lower than 50dB.
Cannot use remote control	<ol style="list-style-type: none"> 1. Please change battery. 2. Turn off power for 10 seconds; and then restart power.
Cannot receive sufficient channels through antenna	Please use the Channel scan function to increase the number of channels not included in memory.
No colours	Please adjust the colour setup.
Blinking picture accompanied by ghost image	<ol style="list-style-type: none"> 1. Check the connection of antenna/signal cable. 2. Check if channel is in play mode. 3. Press signal source and change input mode.
Broken lines or segments	Adjust antenna. Keep the TV away from noise sources, such as vehicles, neon lights, and hair dryers.
Certain TV channels are blocked (Hope to acquire some channels)	Please use the Update scan method to add the channels not included in memory.
Overlapping images or ghost images	Please use multi-directional outdoor antenna. (If your TV is subject to the influence of nearby mountains or buildings).
Cannot use a function	If the item you choose turns grey, that item cannot be selected.
Cannot receive programs	Please use the Update scan method to add the channels not included in memory.

SPECIFICATIONS

Screen Size	19"	22"	26"
DISPLAY			
Aspect Ratio	16:9	16:9	16:9
Resolution	1440 x 900	1680 x 1050	1366 x 768
OSD Language	English, German, French, Italian, Spanish, Portuguese, Dutch, Danish, Finnish, Swedish, Norwegian, Polish, Russian, Greek		
ENHANCEMENT			
Sound Output (RMS Watts)	3 W	3 W	5 W
Sound Mode	Rock, Pop, Live, Dance, Techno, Classic, Soft		
Picture Formats	Automatic, Panorama, 4:3, Movie expand 14:9, Movie expand 16:9, 16:9 subtitle, Wide screen		
Picture Mode	User, Cinema, Sport, Vivid, Hi-bright		
CONNECTIONS			
Rear Connectors	Tuner input (75Ω) SCART 1 PC IN :VGA and Audio cable Component Video and L/R Audio input SPDIF Output (Digital audio out) AV L/R Audio Output HDMI 1		
Side Connectors	Earphone Output AV In (Composite Audio/ Video) S-Video HDMI 2 Common Interface		
WEIGHT & DIMENSION			
Product Dimension (WxDxH)	446 mm 359 mm 145 mm	512 mm 400 mm 145 mm	652 mm 480 mm 220 mm
Net Weight	4.0 kg	5.0 kg	8.8 kg
POWER			
Operation (Max.)	< 50 W	< 55 W	< 110 W
Standby	< 1W		
Mains Power	AC100-240V 1.5A 50-60Hz	AC100-240V 1.5A 50-60Hz	AC100-240V 1.5A 50-60Hz

SPECIFICATIONS

Connecting to Power

Check that the voltage marked on the product corresponds with your supply voltage. This product is fitted with a 13A plug complying with BS1363. If this plug is unsuitable or needs to be replaced, please note the following :

Plug Replacement

If you need to replace the fitted plug.



WARNING :

Never connect live or neutral wires to the earth terminal of the plug.
Only fit an approved 13 Amp BS1363/A plug and the correct rated fuse.
If in doubt, consult a qualified electrician.


IMPORTANT

This unit is a Class 1 Appliance and must be fitted with an Earthed Plug fitted with a 13A fuse.

The wires in this mains lead are coloured as follows:
Yellow & Green-Earth
Blue-Neutral
Brown-Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is Coloured Yellow & Green must be connected to the terminal which is marked E or the earth symbol (⏏). The wire which is coloured blue must be connected to the terminal which is marked with N or coloured blue. The wire which is coloured brown must be connected to the terminal which is marked L or coloured brown. Always ensure that the plug cord grip is fastened correctly. If a 13A (BS1363) fused plug is used it must be fitted with a **5A fuse** conforming to BS1362 and be ASTA approved. If in doubt contact a qualified electrician.

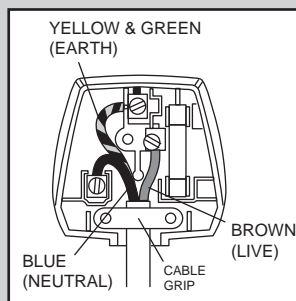

WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:


- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.
- In the event of a problem with the product within the guarantee period call the customer helpline on 0845 604 0105

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW

CAUTION: We recommend you read the Full Instructions before using the Quick Start Guide to ensure the correct set up of your LCD TV. Incorrect settings or fitting could cause problems or be dangerous. If you encounter a problem when setting up, please refer to the user manual before calling the Customer Helpline 0845 604 0105.


1 - INSERT BATTERIES INTO YOUR REMOTE CONTROL

1. Insert two new 1.5V size AAA batteries with the ⊕ and ⊖ marks correctly aligned into the Remote Control.
See fig. 1.

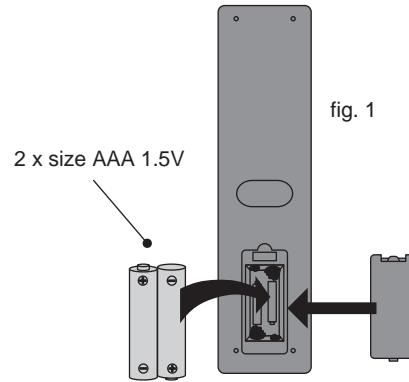

2 - CONNECTING THE ANTENNA


1. Connect the Antenna Plug to the Antenna Socket located at the rear of the TV.
See fig. 2.

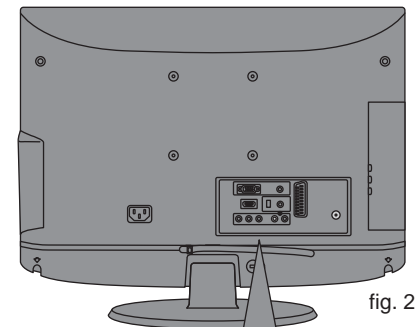

3 - AC POWER CORD CONNECTION

NOTE: Make sure your local voltage is 230V, 50Hz.






1. Connect the AC Power Cord to the mains socket.
See fig. 2.
2. Press the Power Button to turn on the TV.
See fig. 3.

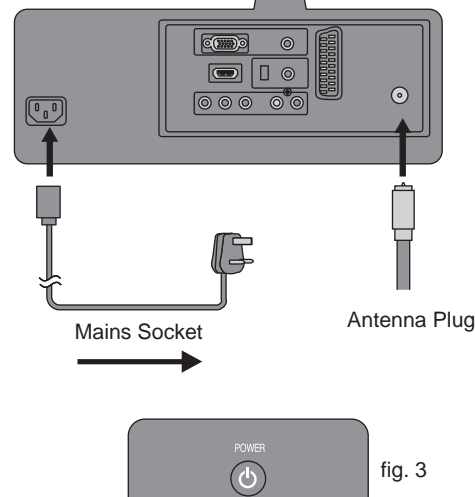

4 - FIRST TIME INSTALLATION

1. This display will appear on the screen when the TV is turned on for the first time.
See fig. 4.
2. Press the Green Button on the remote control to proceed with the installation.
See fig. 5.
3. Use the Up or Down Navigation Buttons to select your language. Then press the Green Button to continue.
See fig. 5 and 6.
4. Use the Up or Down Navigation Buttons to select your country. Then press the Green Button to continue or the Yellow Button to go back.
See fig. 7.
5. System searching may take few minutes to complete.
See fig. 8.

NOTE: If you can not find this screen, press MENU on the remote control. Then use the Navigation Buttons to select the TV menu.
See fig. 5.

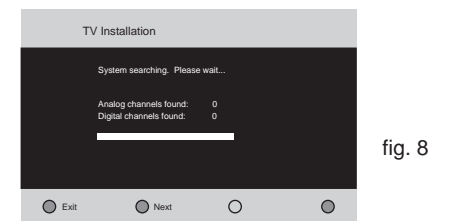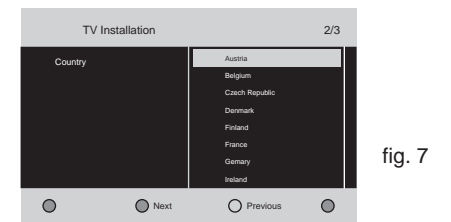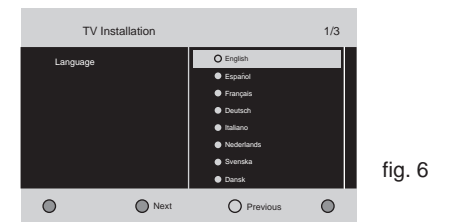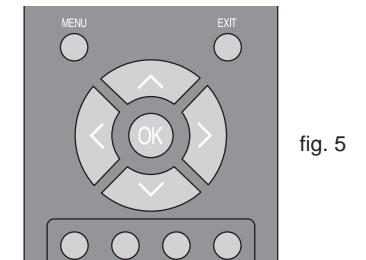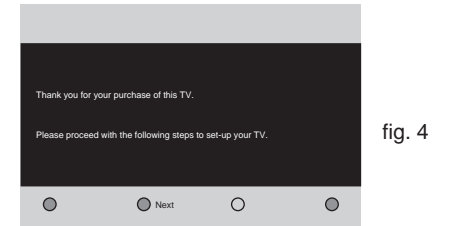

5 - CONNECTING OTHER DEVICES



WARNING:

- Switch off the TV before connecting any external device.

SCART INPUT

- To connect external devices such as DVD players, set top boxes or games consoles.

See fig. 9.

YPbPr INPUT

- For connecting devices such as video cameras.

See fig. 9.

VGA INPUT

- You can use your LCD-TV as a monitor for your personal computer.




See fig. 9.

HDMI INPUT

- To connect external devices such as Blu-ray disc players or HD games consoles.

See fig. 9.

- CAUTION: You must ensure both devices are switched off before connection.**

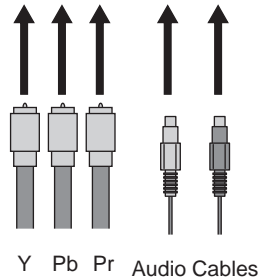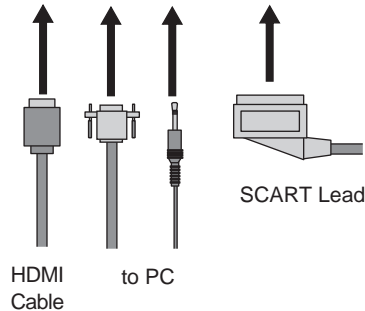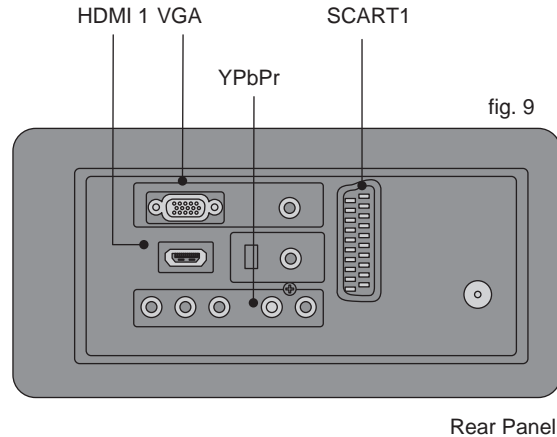

COMMON INTERFACE SLOT

- You can use a Conditional Access Module (CAM) card to view Pay TV.

See fig. 10.

HEADPHONE OUTPUT

- Connect a set of stereo headphones (not included) to the Headphone Output for private listening.

See fig. 10.

AV INPUT

- For connecting an AV device.

See fig. 10.

S-VIDEO INPUT

- For connecting video recorders.

See fig. 10.

HDMI INPUT

- To connect external devices such as Blu-ray disc players or HD games consoles.

See fig. 10.

Wall Mounting (Optional)

1. Unscrew the stand screws. Then remove the Stand.

See fig. 11.

2. Fix the TV to the wall mounting bracket (not supplied), using the stand fixing holes.

See fig. 12.

