



**LCDVD152UK**



**USER'S GUIDE**

# LCD TV Safety Warnings

## **Damage**

Never use your TV if it is damaged in any way. Always place your TV on a flat level surface avoiding anywhere which may be subject to strong vibration.

## **Weather**

It is advisable to unplug the aerial during an electrical storm.

## **Temperature**

Avoid extremes of temperature, either hot or cold, place your TV well away from heat sources such as radiators or gas/electric fires.

## **Naked Flames**

Naked flames such as candles and night lights should not be placed on or near your TV.

## **Ornaments**

Vases and other water containers or lamps should not be put on top of your TV set.

## **Moisture**

Do not allow your TV to be exposed to rain, moisture, dust. If any liquid is spilt into your TV it can cause serious damage. If you spill any liquid into your TV unplug the power cord immediately. Contact your store.

## **Ventilation**

The TV must be well ventilated. Do not cover your TV or place it inside a small confined space. Make sure that there is a gap of at least 10cm on both sides and 20 cms at the top.

## **Interference**

Do not place your TV on or near appliances which may cause electromagnetic interference (TV or Hi-Fi speakers). If you do, it may adversely affect the working of the unit, and cause a distorted picture or sound.

## **Batteries**

Batteries are easily swallowed by young children. Do not allow young children to play with the remote control unit.

## **Covers**

Do not remove any fixed covers as this may expose dangerous voltages.

## **Standby**

The power button on the remote control doesn't switch off the TV completely and the TV will continue to draw electricity from the mains supply. Therefore in the interests of safety and to avoid unnecessary energy consumption, never leave your TV in standby while unattended for long periods of time, eg. while on holiday. We recommend that you unplug at the mains power supply.

## **Power Cord**

 
Make sure your TV or TV stand is not resting on top of the power cord, as the weight of the TV may damage the cord and create a safety hazard.

**Packaging**

If you can store the packaging it will prove useful should you need to transport the TV to protect it while it is in transit. Try to reuse packaging wherever you can. If you cannot store it, contact your local authority for details of your nearest recycling facilities.

**Installation**

We strongly recommend that this product is installed by qualified personnel with enough skill and competence. The seller cannot assume liabilities for damage caused by mistake in installation, mounting, misuse or modification.

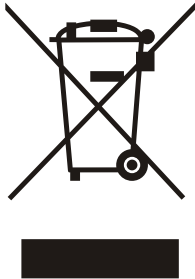

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.

The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

# CONTENT

<b>ACCESSORIES</b>	<b>1</b>
<b>FRONT PANEL BUTTONS</b>	<b>2</b>
<b>BACK PANEL OVERVIEW</b>	<b>3</b>
BRIEF FOR BACK TERMINALS	4
<b>REMOTE CONTROL</b>	<b>5</b>
REMOTE CONTROL BUTTON FUNCTIONS	6
<b>CONFIGURATION OF THE LCD</b>	<b>7</b>
POWER ON/OFF	7
INSTALLATION GUIDE	7
CHANNEL MENU	8
AUTO TUNING	8
DTV MANUAL TUNING	9
ATV MANUAL TUNING	10
PROGRAM EDIT	11
PICTURE MENU	12
SOUND MENU	13
TIME MENU	14
OPTION MENU	15
LOCK MENU	16
EPG MENU	17
FAST CHANNEL LIST	17
INPUT SOURCE	18
FAVORITE LIST	18
SUBTITLE LANGUAGE	19
<b>TECHNICAL SPECIFICATION LCD TV</b>	<b>20</b>
<b>DVD OPERATION</b>	<b>21</b>
<b>SAFETY PRECAUTIONS</b>	<b>28</b>
<b>CARE AND MAINTENANCE</b>	<b>29</b>

# ACCESSORIES

## ACCESSORIES

Thank you for purchasing this LCD-TV.  
This LCD-TV package comes with:

- User's Guide book
- Remote control
- Battery AAA x 2
- Adapter
- Power Cord/External Power Supply
- Warranty Card x 1

 
## OPTIONAL ACCESSORIES

You can purchase these optional accessories for your LCD TV:

- HDMI Cable
- AV Cable
- SCART Cable
- VGA Cable
- Audio Cable


Please save your packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.

## FRONT PANEL BUTTONS

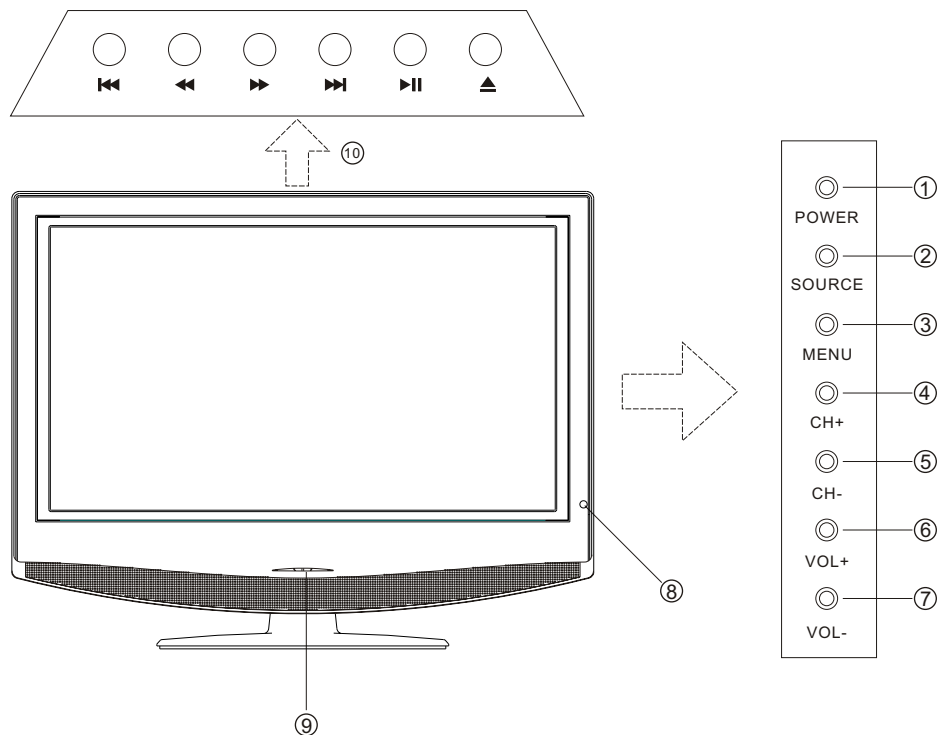


①	Power ON/OFF
②	Select the input source:DTV/TV/SCART/YPBPR/DVD/PC-RGB/HDMI/AV
③	OSD (ON Screen Display) Menu
④	Channel Up/Scroll up
⑤	Channel Down/Scroll down
⑥	Volume Up/Right orientation
⑦	Volume Down/Left orientation
⑧	Remote Sensor
⑨	Indicator Light
⑩	DVD Button

# BACK PANEL OVERVIEW

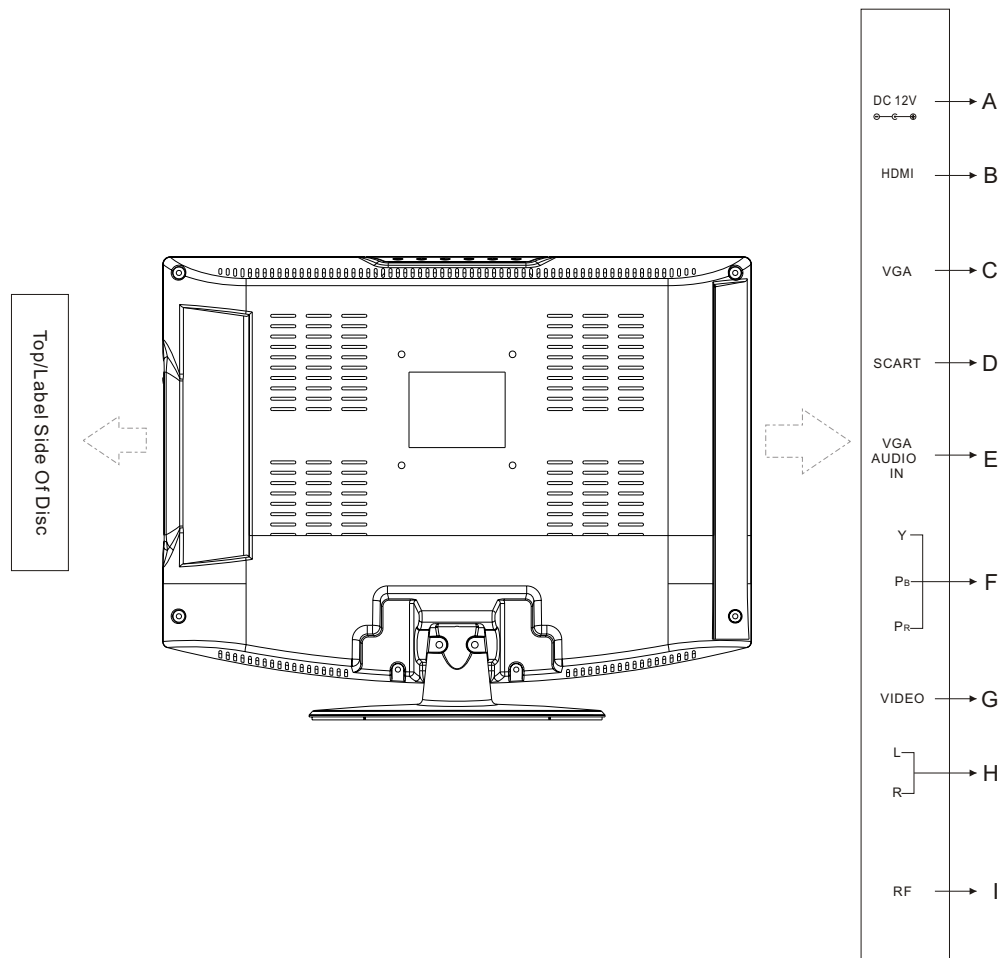 


A	DC 12V	Power input
B	HDMI	HDMI input
C	VGA	VGA input
D	SCART	SCART input
E	VGA AUDIO IN	Audio input
F	YPbPr	YPbPr input
G	VIDEO	VIDEO input
H	L/R	Audio input for Video and Y/Pb/Pr
I	RF	Antenna input

# BRIEF FOR BACK TERMINALS

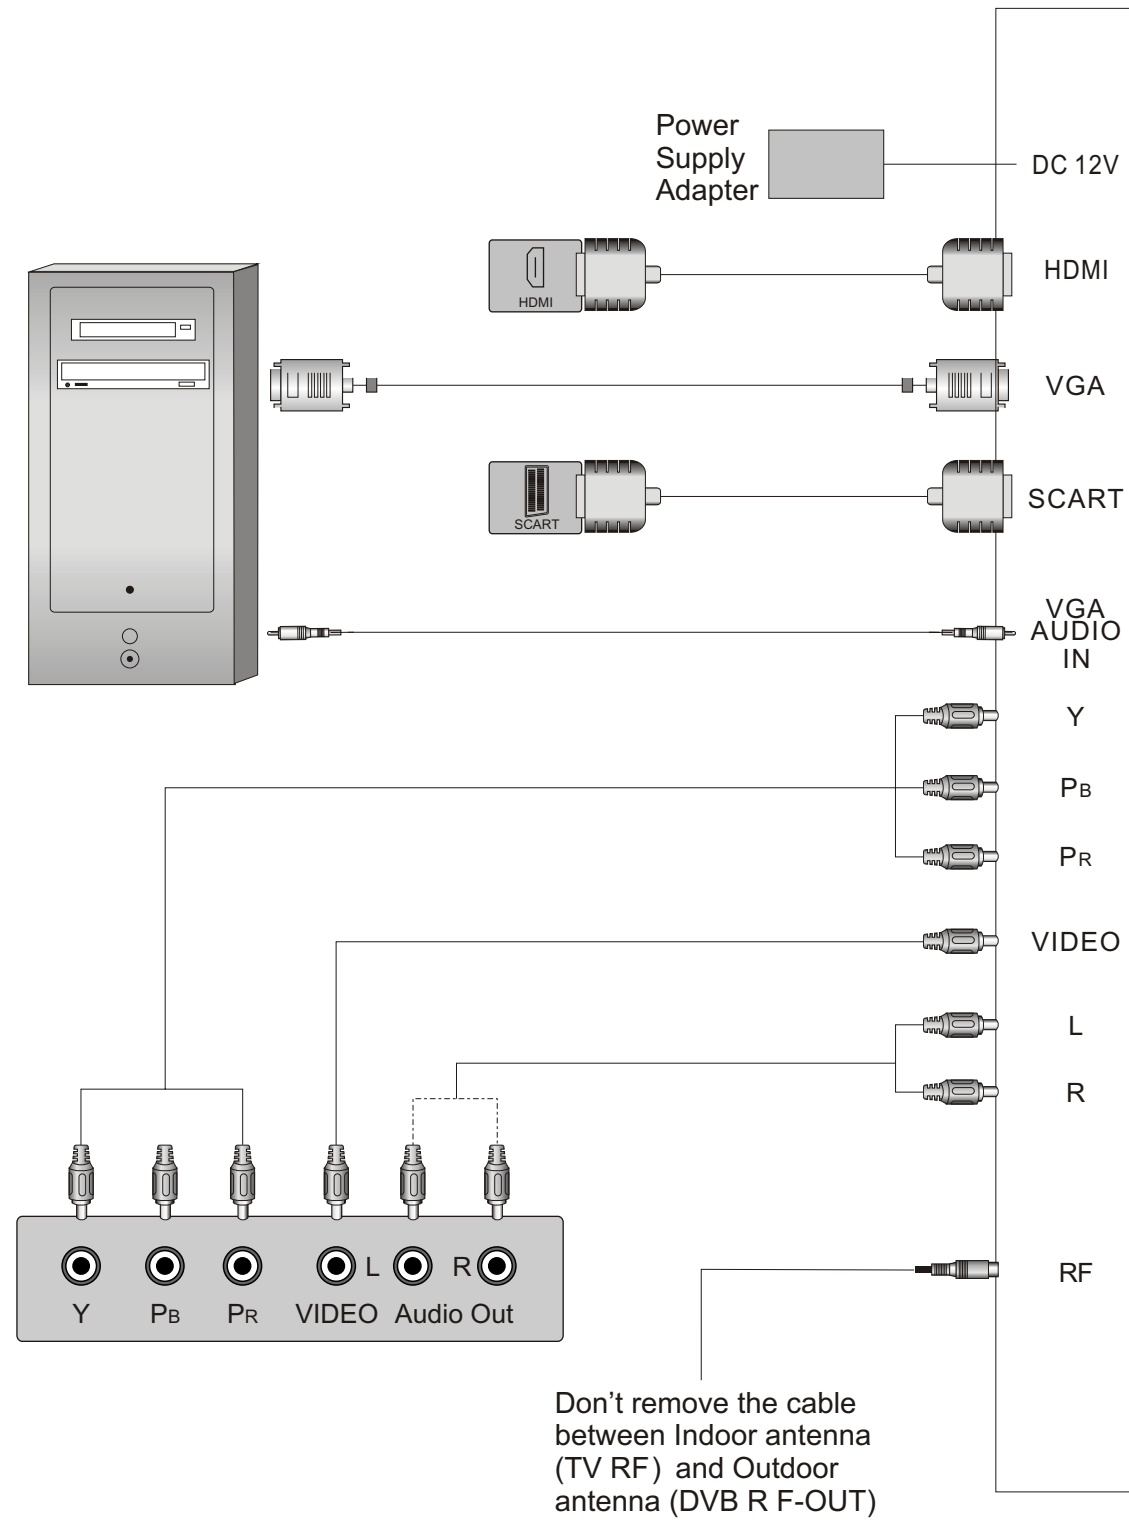 



# REMOTE CONTROL

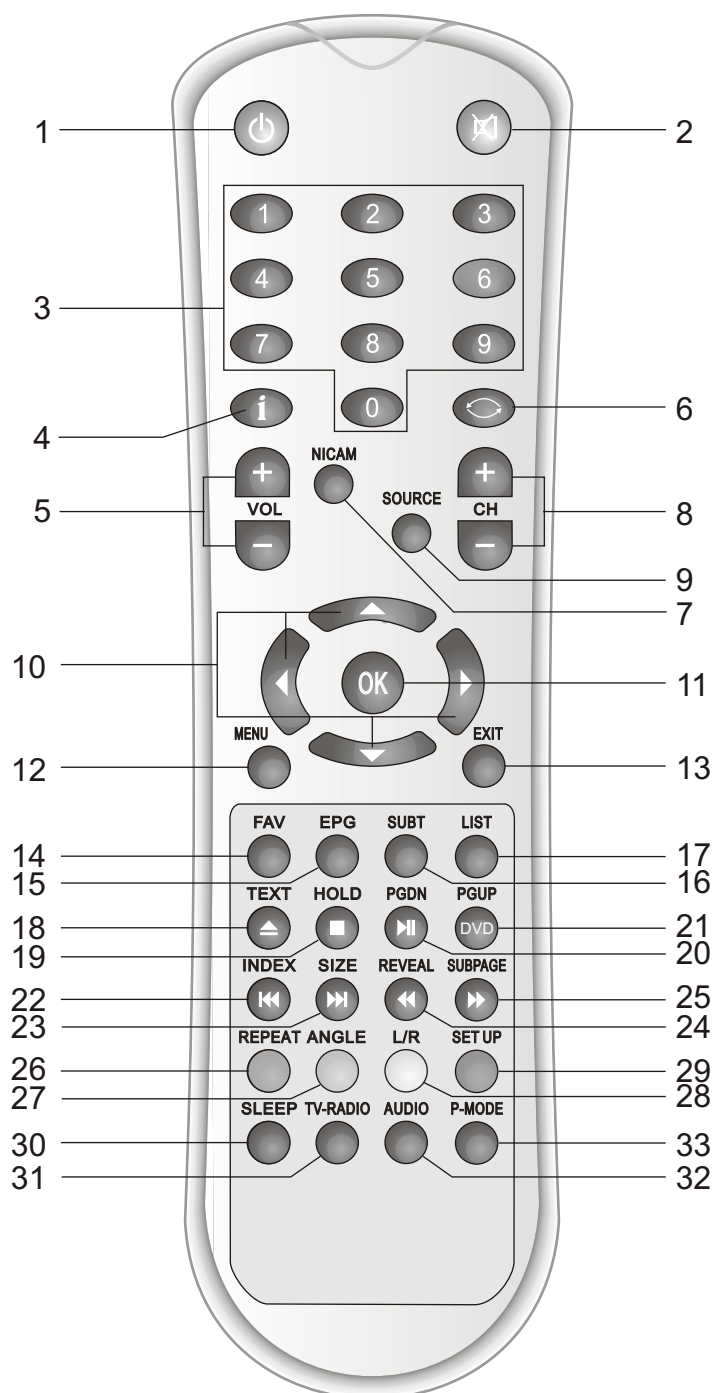 

# REMOTE CONTROL BUTTON FUNCTIONS

1	POWER	The power key to switch On and Off of the power
2	MUTE	Press once to turn off the sound, once again to restore the sound
3	0-9	Select TV channels in TV mode
4	i	To display system information
5	VOL+/-	To adjust the sound volume
6	↺	In TV mode, press this key to come back to the previous TV channel
7	NICAM	To select sound modes
8	CH+/-	To select the previous or next TV channel
9	SOURCE	To cycle through the input source:DTV/TV/SCART/YPBPR/DVD/PC-RGB/HDMI/AV
10	▲▼◀▶	To move the cursor and select the option needed
11	OK	To confirm the selected option
12	MENU	To open the system setting menu of the LCD Display
13	EXIT	In the TV menu mode, press this key to return to the upper menu
14	FAV	To select and store channels of favorite program
15	EPG	To open EPG menu
16	SUBT	To open and close subtitles on DVB
17	LIST	To display the TV program list
18	TEXT/▲	To open the function of TELETEXT or remove the disc
19	HOLD/■	To select the lock-on function of TEXT/Stop the DVD disc
20	PGDN/⏮	To select TEXT for viewing the next page/play or pause the DVD disc
21	PGUP/DVD	To select TEXT for viewing the previous page/return to the DVD main menu
22	INDEX/⏮	To select and return to the main directory of TEXT/skip to the previous chapter or track
23	SIZE/⏮	To zoom in and out for the display of the TEXT/skip to the next chapter or track
24	REVEAL/⏮	To select the hidden TEXT function/backward scene with faster speed
25	SUBPAGE/⏮	To open the TEXT function of sub-page/forward scene with faster speed
26	RED/REPEAT	To select the corresponsive TELETEXT page after entering the homepage of TELETEXT/cycle through the options: Chapter, Title, All and nothing
27	GREEN/ANGLE	To select the corresponsive TELETEXT page after entering the homepage of TELETEXT/select multiple angles
28	YELLOW/AUDIO	To select the corresponsive TELETEXT page after entering the homepage of TELETEXT/select desired audio track
29	CYAN/SETUP	To select the corresponsive TELETEXT page after entering the homepage of TELETEXT/open and close the DVD OSD menu
30	SLEEP	Select sleep time
31	TV-RADIO	When watching a channel, allows you to switch between TV and Radio modes.
32	AUDIO	To display audio language.
33	P-MODE	Select picture mode

## CONFIGURATION OF THE LCD

**Note:** generally, you can press **MENU** to return to previous menu, and **EXIT** to exit the menu, it is a default option.

### POWER On/Off

- Plug the TV into a standard outlet, making sure the output voltage and frequency corresponds to the requirement of your machine.
- When the power supply is connected, the red indicator on the front panel will be on and the machine turns into standby state.
- Push the POWER button on your remote control, the indicator on the front panel will change from red to green. And after several seconds, the system will enter the state previously selected when it was used last time.
- When finish watching, push the POWER button on your remote control to return the TV to standby mode, The green light will change to red.
- Unplug the power.

### Installation Guide



- Press ◀▶ to select the OSD language, then press ▼ to select Auto Tuning. Refer page 8 "Auto Tuning".

# CONFIGURATION OF THE LCD

## Channel Menu



- Press **MENU** to display the OSD menu to select the menu Channel.
- Press **▲▼** to select the selection, **▶** or **OK** to confirm.
- Press **MENU** to return to previous menu.
- Press **EXIT** to exit the menu.

## Auto Tuning



 
 
- Press **◀▶** to select the country, then **OK** to confirm.

## CONFIGURATION OF THE LCD

- Press ▼ to select start highlight. Press **OK** key to start Auto Tuning.



- Press <Menu> to skip the current tuning (ATV or DTV).
- Press <Exit> to return to the previous menu.

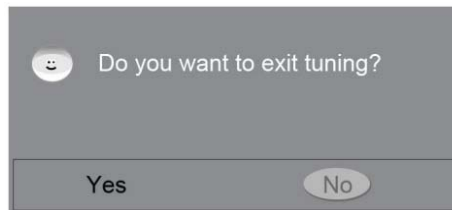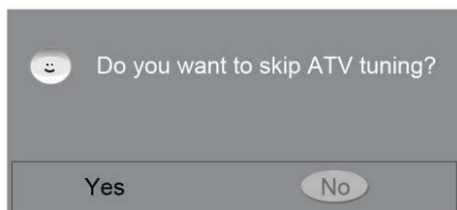

### DTV Manual Tuning



- Press ◀▶ to select the channel, then **OK** to search.

# CONFIGURATION OF THE LCD

## ATV Manual Tuning



- Press ▲▼ to select the selection, ◀▶ to adjust the option as requirement. See details in the following suboptions.
- Press **SAVE** (RED) to save the channel.

### Storage To

- Press ◀▶ to select the channel number you want to save to.

### System

- Press ◀▶ to select the system.

### Current CH

- Press ◀▶ to select the current channel.

### Search

- Press ◀▶ to search backward/forward, MENU or EXIT to stop the searching.

### Fine-Tune

- Press ◀▶ to fine tuning when the signal of the current channel is weak.

### Skip

- Press ◀▶ to turn on/off the switch of skip. When the switch is turned on, the current channel will be skipped when you scan channels with P+/P- button.

# CONFIGURATION OF THE LCD

## Program Edit



### Delete

- Press ▲▼ to select the channel you want to delete, then press **DELETE** (RED), and the channel will be marked **DELETE**, press **DELETE** (RED) again to delete, or **MENU** to cancel.

### Rename(only for ATV)

- Press ▲▼ to select the channel you want to rename, press **RENAME** (GREEN), the channel will be marked **RENAME**, then press ◀▶ to select the position of word, press ▲▼ to select the letter you want.

### Move

- Press ▲▼ to select the channel you want to move, then press **MOVE** (YELLOW), and the channel will be marked **MOVE**, press **MOVE** (YELLOW) again to move, or **MENU** to cancel.

### Skip

 
- Press ▲▼ to select the channel you want to skip, then press **SKIP** (CYAN) to mark or disarm the channel. The channel marked **SKIP** will be skipped when you scan channels with CH+/CH- button.

### Favorite

- Press ▲▼ to select your favorite channel, then press **FAV** to mark or disarm the channel. The channel marked **FAV** will be storage to the favorite list.

# CONFIGURATION OF THE LCD

## Picture Menu

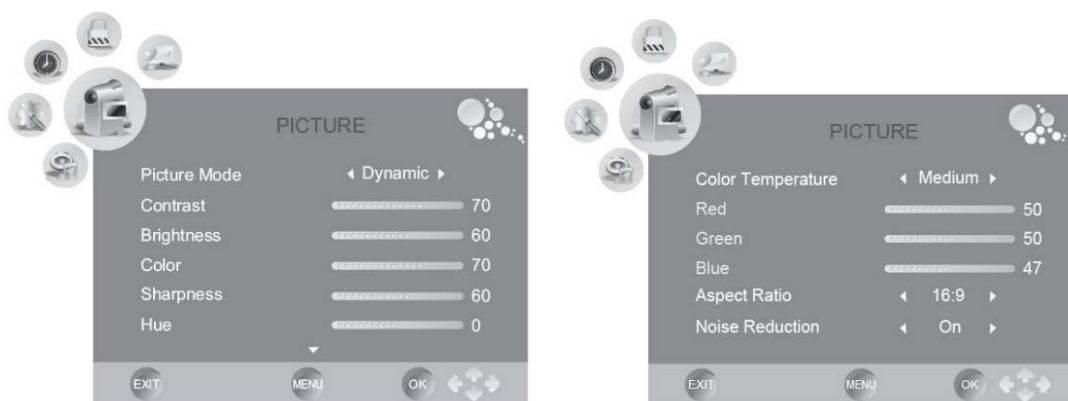

- Press **MENU** to display the OSD menu ◀▶ to select the menu PICTURE, ▼ to enter the submenu.
- Press **MENU** to return to the main menu from the submenu.

### Picture Mode

- Press ◀▶ to select Picture Mode. Dynamic, Standard, Mild, User.

### Contrast

- Press ◀▶ to adjust the contrast.

### Brightness

- Press ◀▶ to adjust the brightness.

### Color

- Press ◀▶ to adjust the color.

### Sharpness

- Press ◀▶ to adjust the sharpness.

### Color Temperature

- Press ◀▶ to select Color Temperature. Cool, User, Warm, Medium.

### Aspect Ratio

- Press ◀▶ to select Aspect Ratio. Zoom1, Zoom2, Auto, 4:3, 16:9.

 
### Noise Reduction

- Press ◀▶ to open or close Noise Reduction.



# CONFIGURATION OF THE LCD

## Sound Menu

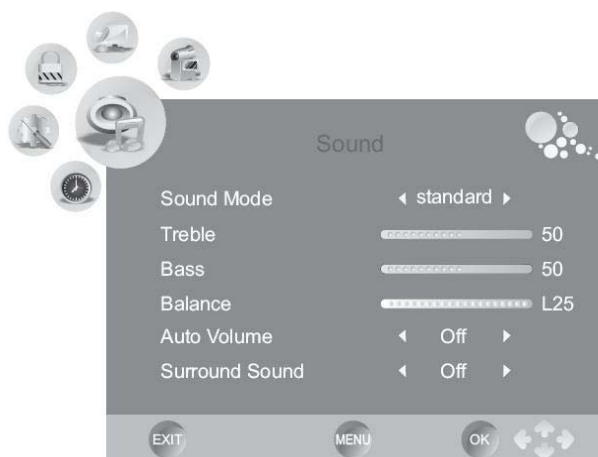

- Press **MENU** to display the OSD menu ◀▶ to select the menu SOUND, ▼ to enter the submenu.
- Press **MENU** to return to the main menu from the submenu.

### Sound Mode

- Press ◀▶ to select sound mode. Standard, Music, Movie, Sports, User. Press **MENU** to confirm and return to preview menu.

### Treble

- Press ◀▶ to adjust the treble.

### Bass

- Press ◀▶ to adjust the bass.

### Balance

- Press ◀▶ to adjust the balance.

### Auto Volume

 
- Press ◀▶ to select off or on.

### Surround Sound

- Press ◀▶ to select off or on.

# CONFIGURATION OF THE LCD

## Time Menu

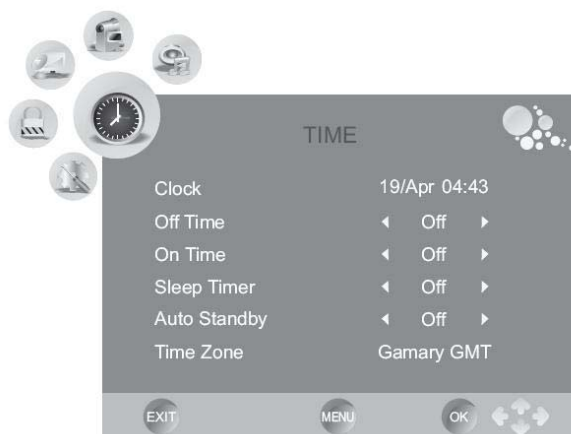

- Press **MENU** to display the OSD menu, ◀▶ to select the menu TIMER, ▲▼ to enter the submenu.
- Press **MENU** to return to the main menu from the submenu.


### Clock

 - Press ▲▼ to select hour or minute, press ◀▶ to setup the time.



### Off Time

- Press ◀▶ to select on, ▶ to enter the setup item, use ▲▼◀▶ to setup the time you want the TV to be turn off.

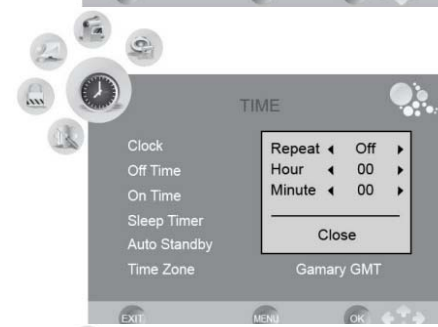

### OnTime

- Press ◀▶ to select on, ▶ to enter the setup item, use ▲▼◀▶ to setup the time you want the TV to be turn on.



# CONFIGURATION OF THE LCD

 
## Sleep Timer

- Press ◀▶ to select timer.

## Auto Standby

- Press ◀▶ to select standby on or off.

## Option Menu

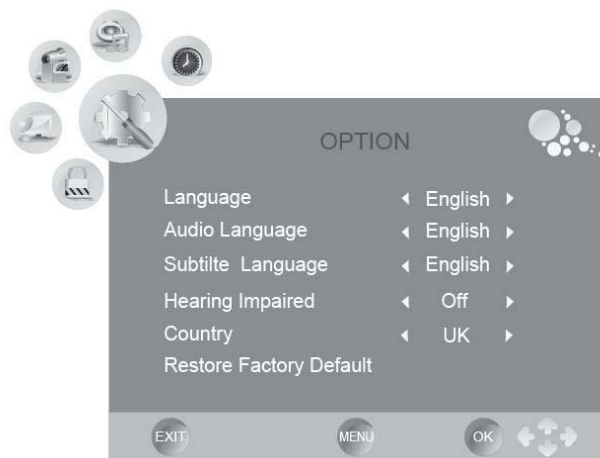

- Press MENU to display the OSD menu, ◀▶ to select the menu OPTION, ▼ to enter the submenu.
- Press MENU to return to the main menu from the submenu.

## Language

- Press ◀▶ to select the OSD language.

## Hearing Impaired

- Press ◀▶ to On/Off the OSD Hearing Impaired.

 
## Restore Factory Default

- Press ▶ restore factory default.



# CONFIGURATION OF THE LCD

## Lock Menu

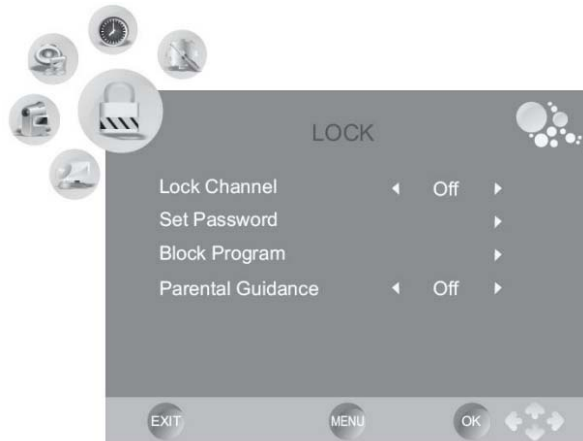

- Press MENU to display the OSD menu, ◀▶ to select the menu Lock, ▼ to enter the submenu.
- Press MENU to return to the main menu from the submenu.
- Press ▼ enter Password is "0000".

### Lock Channel

- Press ◀▶ to select off or on.

### Set password

- Press ▶ display please enter password new password and confirm.



 
### Block Program

- Press ▶ display to enter Block Program, press Lock (GREEN).

# CONFIGURATION OF THE LCD

## EPG Menu

- Use EPG button on the remote control to display the EPG menu directly as below:

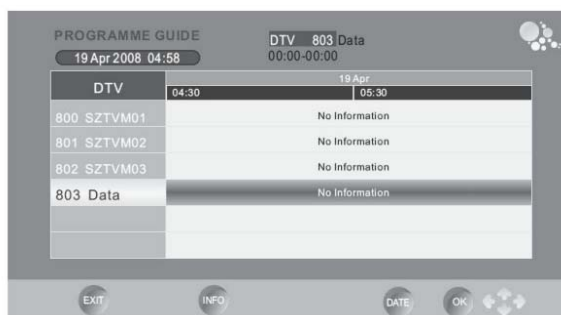

-Press DATE (YELLOW) to enter Date Option, press ◀▶ to select Date.

## Fast Channel List

 


- Press **LIST** button on the remote control to display the channel List.

# CONFIGURATION OF THE LCD

## Input Source

- Press **SOURCE** to display the OSD input source, ▲▼ to select the menu source.

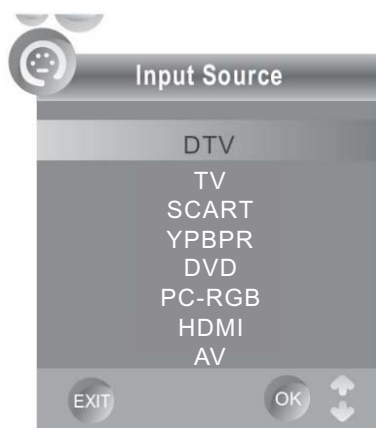

## Favorite List



- Press **FAV** button on the remote control to display the Favorite List.

# CONFIGURATION OF THE LCD

## Subtitle Language




- Press **SUBT** button on the remote control to display the Subtitle Language.

## Audio Language



- Press NICAM button on the remote control to display Audio Language. If there are several language, you can use ▲▼ button to select the language.

## TECHNICAL SPECIFICATION LCD TV

<b>LCD</b>	<b>Type</b>	<b>15.6''</b>
<b>Input Signal</b>	<b>PC-RGB</b>	<b>Horizontal frequency:20-70KHz Vertical frequency:60Hz</b>
	<b>RF</b>	<b>75 ohm Antenna/PAL-SECAM/DVB-T</b>
	<b>Video</b>	<b>1 AV/Composite RCA,1 YPBPR 1 SCART</b>
	<b>Audio</b>	<b>1 pair 3.5mm Phone Jack for PC 1 pair RCA for AV</b>
	<b>HDMI</b>	<b>1 HDMI</b>
<b>Resolution</b>	<b>Recommended</b>	<b>1366X768</b>
<b>Speaker Output</b>		<b>2X2W</b>
<b>Power Adapter Output</b>	<b>Voltage</b>	<b>12V DC  4.0A</b>
<b>Power Adapter Input</b>	<b>Voltage</b>	<b>AC 100-240V 50/60Hz 1.0A</b>
<b>Brightness</b>		<b>250 cd/m<sup>2</sup></b>
<b>Contrast</b>		<b>500:1</b>
<b>Dimensions</b>	<b>Physical</b>	<b>400mm(W)X142mm(D)X315mm(H)</b>
<b>Weight</b>	<b>Net</b>	<b>3.3Kg</b>



# DVD Operation

## Basic operation

### 1. Turn ON and OFF the DVD function

- Turn on the LCD TV and then press **INPUT** repeatedly to select DVD mode.

### 2. Insert Disc to DVD

- Insert the Disc to the Disc slot (printed side of the disc has to face towards front of the unit), the player will load the disc automatically. There will have an on screen indication "**CLOSE**" then "**READ**". After loading the disc content, it will switch to play mode automatically. If the disc is already placed inside, the disc will be read automatically.

**NOTE:** - For some discs, after loading the content of the disc, need to press **▶||** or select from the disc menu to start.  
- Please make sure when inserting the Disc, the printed side of the disc should be facing you. When inserting the Disc incorrectly, you may damage the DVD mechanism.

### 3. Play the DVD

- According to the disc content, the disc menu will display for your selection. When playing the disc, you may use **▶||** button to toggle between Play and Pause mode. This product also supports Menu, Title, Sequential and Program playback.

### 4. Menu playback (for DVD/ super VCD and VCD 2.0 discs)

- Press DVD button
  - For DVD discs, the screen will display the DVD Disc Menu (Root Menu)
  - For Super VCD & VCD2.0 discs, the screen will display the Super VCD, VCD2.0 Disc Menu (PBC: [OFF]) (Press the DVD button to display the PBC status).
  - Playback the Super VCD & VCD2.0 discs, the default PBC status is ON.
- For DVD discs, use the navigation buttons to select and Play the highlighted contents; For Super VCD & VCD2.0 discs, use the numeric buttons to play your favorite content directly.  
**NOTE:** PBC should be OFF.
- Press **OK** or **▶||** button to start from the highlighted content.
- Return to the Root Menu when playing the disc
  - For DVD discs, press DVD button to display the Disc Menu.
  - For Super VCD & VCD2.0 discs, when PBC is ON, press DVD button to display the Disc Menu.
- STOP
  - Press **■** button once to stop. Press **▶||** button to resume from where you stopped.
  - Press **■** button Twice to stop. Press **▶||** button to start from beginning.  
In order to protect the disc, press **■** button then press EJECT button to take the disc out. When the disc is ejected, hold the disc edge slightly and take it from the eject direction to prevent scratches.
  - When not using the DVD function (in stand-by mode or using others modes for a long time), please take out the disc to protect the DVD loader and the disc.

## DVD/ MP3/JPEG discs

PROG			
T	C	T	C
1---	---	5---	---
2---	---	6---	---
3---	---	7---	---
4---	---	8---	---
9---	---	10---	---
11---	---	12---	---
13---	---	14---	---
15---	---	16---	---
PLAY		CLEAR	

## Super VCD/ VCD/ CD /CD-G/ D-CD discs

PROG			
1----	5----	9----	12----
2----	6----	10----	14----
3----	7----	11----	15----
4----	8----	13----	16----
PLAY		CLEAR	

- If it is in PBC ON status, using program playback will turn to PBC OFF automatically.

- According to the highlight area input the title and chapter number by numeric buttons, press **▶** button to start; or move to the **<PLAY>** by navigation buttons, press **OK** button to start.

## Supporting DVD format

This products can play the following format of DVD disc.

Disc Type	Disc Size (Diameter)	Recorded Time	Recorded Content	Remarks
DVD	12cm	Single side:120mins. Approx	DVD format: Compressed digital audio and video	
		Double side:240mins. Approx		
Super VCD	12cm	45mins. Approx	MPEG2 Compressed digital audio and video	Include SVCD
VCD	12cm	74mins. Approx	MPEG1 Compressed digital audio and video	Include: VCD2.0/ VCD1.1 VCD1.0/ DVCD
CD	12cm	74mins. Approx	CD-DA: Digital audio	
HD-CD	12cm	74mins. Approx	HD-DA: Digital audio	
MP3/JPEG	12cm	600mins. Approx	Digital audio	

**NOTE:** Also support DVD-R, CD-R, CD-RW playback.

Card reader module support SD and MMC card and has a USB 1.1 connection.



**WARNING! DO NOT INSERT OR PLAY 8CM DISC, THEY WILL GET STUCK.**

## Region Code 2

As it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and discs can have an optional region code. If you load a disc of a different region code into your player you will see the region code notice on the screen. The disc will not playback and should be unloaded. The region code for this player is 2 (refer to the symbols below).



## DVD Functions operating instructions

### 1. Play (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- For DVD disc, press **▶** button from root or title menu; while playing the DVD, you may play your favorite title directly with title selection by pressing the 0~9 number or **i** button.
- For Super VCD & VCD discs, while playing the disc, you may play your favorite tracks by numeric buttons.  
**(NOTE: When using the Program playback or when it is PCB ON status, you can only use ◀◀ or ▶▶ buttons to change the track)**
- For CD, CD-G & HD-CD discs, while playing the disc, you may play your favorite tracks by numeric buttons.
- For MP3 / JPEG disc, you may play your favorite tracks by numeric buttons from the content menu.
- If input track number is not valid, it will not function.

**NOTE:** From track 1~10, use numeric buttons directly; For tracks over 10, press **i** button first. (E.g. Track 15, press **i** then 5)

### 2. Previous/Next (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- While playing the disc;
  - Press **◀◀** button to play to the last Title / Chapter / track.
  - Press **▶▶** button to play to the next Title / Chapter / track
- For super VCD & VCD discs, in PBC OFF status;
  - If the current track is the first one, press **◀◀** button will stop the playback.
  - If the current track is the last one, press **▶▶** button will stop the playback.
- For DVD discs, the above functions may vary due to different DVD disc's structure.

### 3. Forward/ Backward (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- While playing the disc, you may use forward or backward function.
- There are 4 speeds for forward. Press **▶▶** button to toggle between different speeds in sequent. (FORWARDx2 / FORWARDx4 / FORWARDx8 / FORWARDx20 / Play).
  - While in backward, you may press **▶** to resume normal speed.
  - For CD, HD-CD, MP3, backward also has audio output.
  - For DVD discs, if backward to first title / chapter, it will start from the beginning.
  - For Super VCD & VCD discs, in PBC ON status, if backward to the first track, it will start from the beginning.

**NOTE:** During Forward or Backward, the sound will be off.

### 4. Pause (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- FOR CD, CD-G, HD-CD & MP3/JPEG discs, press **⏸** button to pause; press **▶** button to resume.
- FOR DVD, Super VCD, VCD discs, press **⏸** button to pause; press **▶** button to playback frame by frame; press **▶** button to resume.

### 5. Repeat (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- Press **REPEAT** button once to display the current repeat mode.
  - For Super VCD, VCD, CD, CD-G, HD-CD, discs, while playing in sequent, you may use the repeat playback. There are 3 repeat modes, press REPEAT to toggle between different modes in sequent. (REPEAT (OFF)/ REPEAT (1) / REPEAT (ALL)).
  - For DVD discs, you may setup the repeat playback mode. There are 4 repeat modes, press REPEAT to toggle between different modes in sequent. (REP: (OFF) / REP: (CHAPTER) / REP: (TITLE) / REP: (ALL)).
  - For MP3 / JPEG discs, while playing the disc, you may use the repeat playback. There are 4 repeat modes, press **REPEAT** to toggle between different modes in sequent. (REPEAT (OFF) / REPEAT (1) / REPEAT (DIR) / REPEAT (ALL)).

### 6. LIST (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- Press **LIST** button to activate the on screen roll-down menu for the current Title, Chapter, time and other information

### 7. Subtitle (for DVD and Super VCD discs)

- Press **SUBT** button once to display current sub-title.
- Press again to toggle between different subtitle modes in sequent.

**NOTE:** For Multi-languages subtitle DVD & Super VCD discs, press **SUBTITLE** button to select your favorite subtitle language.

### 8. Angle (for DVD disc)

- Press **ANGLE** button once to display current playback angle.
- Press again to toggle between different playback angle codes in sequent. (E.g. Angle -/- (Current/Full) or OFF)

**NOTE:** Only for DVD with multi-angle, press ANGLE button to select your favorite playback angle. Selectable playback angle depends on the availability of the DVD contents.

### 9. Mute (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- Press **MUTE** button to mute the audio output. There will have an on screen symbol indicate "MUTE".
- Press again to cancel, or Press VOL + to cancel and adjust the volume.
- In case there is no audio output, try to press MUTE button to cancel mute.

 
### 10. Volume (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- Press - VOL / VOL + buttons to adjust the output volume.

**NOTE:** Playback DVD discs in original code, is not adjustable

## MP3/JPEG Playback

After loading the MP3 / JPEG disc, it wil start to scan for the stored MP3 /JPEG folders. Then will firstly display the MP3 contents automatically and start to play the first file (highlighted file). Screen as follow:

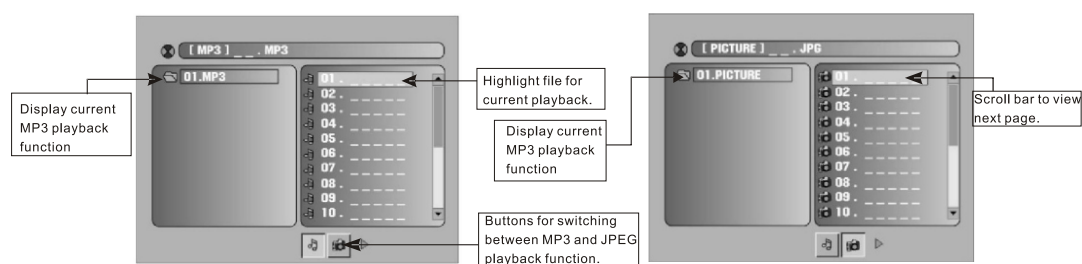

- Using the navigation buttons to check you favorite folder and playback the first file or move to the your favorite file.

**NOTE:**

- Press ◀ / ▶ buttons to move the highlight to folders, documents or mode selection.
- Press numeric buttons to select the contents directly. For number over 10, press **i** button first. (e.g. File number 15, press **i** then 5.)
- When playback MP3 files, there is no picture display, only audio output.
- When play or pause with picture playback, you may use navigation buttons to flip / rotate the picture.
  - . button to flip horizontally.
  - . button to flip vertically.
  - . button to rotate left 90°.
  - . button to rotate right 90°.
- When play or pause with picture playback, you may use DVD button to enter preview mode to display 12 pictures. Press ◀◀ / ▶▶ button to select next / previous page or press numeric buttons to view the corresponding pictures.
- The maximum JPEG image size that can be displayed is 1280 x 1024.

## Function Settings

### DVD Function General setup

- Press **SETUP** button to activate the DVD player OSD menu;
- Press ◀ / ▶ button to move and highlight between different sub-menu. Press ▲ / ▼ button to enter the highlighted sub-menu.
- Press **SETUP** button to exit the OSD menu, or move the highlight to **EXIT SETUP** then press **SETUP** button to exit.

**NOTE:** In Setup mode, the following functions will be cancel or pause :

**TITLE, SUBT, LIST, PLAY/PAUSE, SETUP, STOP, AUDIO, L/R, FF, FR, PREV, NEXT, ANGLE, REPEAT, OPEN/CLOSE**

### SYSTEM SETUP

#### TV SYSTEM

This menu enables you to set the picture format for your TV/DVD.

##### NTSC

This format is used by some other countries, e.g. USA

##### PAL

This is the format used in the UK and the default setting.

##### AUTO

This format can be used if your TV/DVD is capable of both PAL and NTSC formats.

#### MEMORY

- Press ▶ button to enter and then choose **ON/OFF**.
- Press **OK** button to confirm.

#### TV TYPE

##### 4:3LB (Normal)

Normal Letter Box will show the DVD in its original aspect ratio so depending on the size of your television screen, you may see black borders above and below the picture.

##### 16:9 (Wide)

Choose this setting if you have a widescreen television.

#### NOTE:

- Playback screen size may vary according to the discs contents.
- For discs with 4:3 contents, using any mode would only display a 4:3 screen
- Screen ratio selection should be according to the connected TV / Display aspect ratio.

#### PASSWORD

- The default setting is locked. No Rating selection or change password could be done. To edit the Rating setting, please enter default password "0000" by numeric buttons, then press **OK** button to confirm.
- To change password, input any 4 digit number when the lock is unlocked. Once the 4 digit number is entered, that will be your new password.

#### RATING

- Playback for some discs with rating, you can select the rating setting according to your preference. Rating restriction divided in eight different category from KID SAFE to ADULT.

NOTE: Only editable when password is unlocked. And only can function when password is locked. It does not, however, reset either the Password or the Rating setting.

#### DEFAULT

- Press **OK** button to restore factory default.
- Press **SETUP** button to enter the DVD OSD menu.

## LANGUAGE SETUP

#### OSD Language

Use navigation buttons to select the OSD LANGUAGE setup icon, press **OK** button to confirm. There are 6 languages for your selection, press **▲** / **▼** buttons to toggle between different languages ENGLISH / GERMAN / SPANISH / FRENCH / PORTUGUESE / ITALIAN. Press **OK** button to confirm.

**NOTE:** If the selected language is not included in you DVD disc content, it will select the default language of the disc automatically. The default language setting is English.

#### Audio Language

Use navigation buttons to select the **AUDIO LANG** setup icon, press **OK** button to confirm. There are 6 languages for you selection, press **▲** / **▼** buttons to toggle between different languages. (ENGLISH / GERMAN / SPANISH / FRENCH / PORTUGUESE / ITALIAN). Press **OK** button to confirm.

## AUDIO SETUP

### KEY

- Press **▶** button to enter the **sub-menu**.
- Press **▲/▼** button to select: #,+4,+2,0,-2,-4, **⏏**
- Press **OK** button to confirm.

## VIDEO SETUP

### BRIGHTNESS

- Press **▶** button to enter the **sub-menu**.
- Press **▲/▼** button to select: 0,2,4,6,8,10,12
- Press **OK** button to confirm.

### CONTRAST

- Press **▶** button to enter the **sub-menu**.
- Press **▲/▼** button to select: 0,2,4,6,8,10,12
- Press **OK** button to confirm.

### HUE

- Press **▶** button to enter the **sub-menu**.
- Press **▲/▼** button to select: -6,-4,-2,0,+2,+4,+6
- Press **OK** button to confirm.

### SATURATION

- Press **▶** button to enter the **sub-menu**.
- Press **▲/▼** button to select: 0,2,4,6,8,10,12
- Press **OK** button to confirm.

### SHARPNESS

- Press **▶** button to enter the **sub-menu**.
- Press **▲/▼** button to select: 0,2,4,6,8
- Press **OK** button to confirm.

## SPEAKER SETUP

### DOWNMIX

- Press **▶** button to enter the **sub-menu**.
- Press **▲/▼** button to select: LT/RT, STEREO, VSS, OFF
- Press **OK** button to confirm.

## DIGITAL SETUP

### DYNAMIC RANGE

- Press **▶** button to enter the **sub-menu**.
- Press **▲/▼** button to select: FULL, 6/8, 4/8, 2/8 OFF
- Press **OK** button to confirm.

### DUAL MONO

- Press **▶** button to enter the **sub-menu**.
- Press **▲/▼** button to select: STEREO, MONO L, MONO R, MIX MONO
- Press **OK** button to confirm.

# SAFETY PRECAUTIONS

This LCD TV is manufactured and tested to ensure the user's safety. Improper use or installation may result in danger to the LCD TV as well as to the user. Carefully adhere to the following warnings and keep this user guide to hand for future reference.

## WARNINGS

- This LCD TV should be operated only at the correct power sources indicated in the label. If you're unsure of the power supply in your residence, consult your local dealer or service center.
- Do not try to repair the LCD TV yourself as it contains no user-serviceable parts. The LCD TV should only be repaired by a qualified technician.
- Do not remove the LCD TV cabinet. There are high-voltage parts inside that may cause electric shock. Even when the power cord is disconnected.
- Stop using the LCD TV if the cabinet is damaged. Have it checked by a service technician.
- Put your LCD TV only in a clean, dry environment. Unplug the LCD TV immediately if gets wet and consult your service technician.
- Always unplug the LCD TV before cleaning it. Clean the cabinet with a clean, dry cloth. Apply non-ammonia based cleaner onto the cloth, not directly onto the glass screen.
- Keep the LCD TV away from magnetic objects, motors, TV sets, and transformer.
- Do not place heavy objects on the cable or power cord.
- For PLUG CABLE EQUIPMENT, the Socket-outlet shall be installed near the equipment and shall be easily accessible.



# CARE AND MAINTENANCE

## Care

- Avoid exposing your LCD TV directly to sunlight or other heat source.
- Place your LCD TV away from the sun to reduce glare.
- Put your LCD TV in a well ventilated area. Do not place anything heavy on top of your LCD TV.
- Make certain your LCD TV is installed in a clean and moisture-free area.
- Keep your LCD TV away from magnets, motors, transformers, speakers, and other TV sets.

## Safety Tips

- In the event of smoke, abnormal noise or odor coming from your LCD TV, remove the power cord immediately and consult your service center.
- CAUTION- Never remove the rear cover of your LCD TV cabinet.
- Never try to repair your LCD TV yourself. Always call your service center or a qualified technician to carry out repairs.

# TROUBLESHOOTING

## No power

- Make sure A/C power cord is securely connected.
- Plug another electrical device into the power outlet to verify that the outlet is supplying proper voltage.

## Power on but no screen image

- Make sure the video cable supplied with the TV is tightly secured to the video output port on back of video source (DVD,VCR) If not, tightly secure it.
- Adjust brightness.
- Make sure all signal cables are installed.

## Wrong or abnormal colors

- If any colors (red,green,blue) are missing, check the video cable to make sure it is securely connected. Loose or broken pins in the cable connector could cause an improper connection.
- Connect the TV unit to another video source or use another TVs to make sure the video source was not causing the problem.

## Pixel Guarantee

- The pixel guarantee applicable for this device is ISO 134062 Class 2 Standard.

## Accessories Guarantee

- Accessories are not guaranteed.

