

 
40" LCD HDTV QUICK SETUP GUIDE DX-40L150A11



Remote control and 2 AAA batteries




AC power cord




L/R audio cable



Component video cable

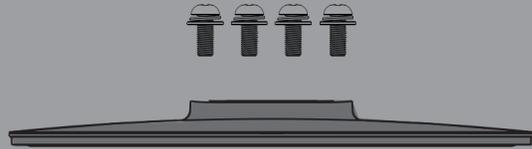


TV stand and screws (4)

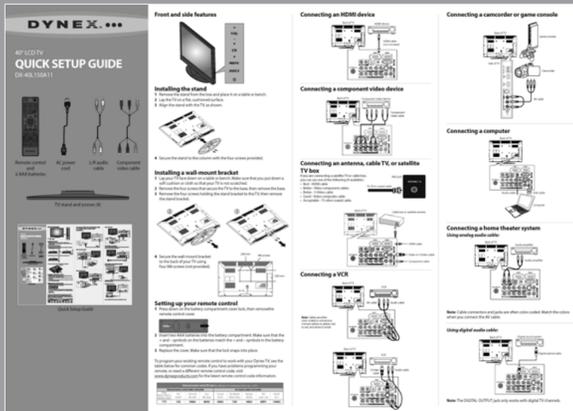


Quick Setup Guide

Side buttons

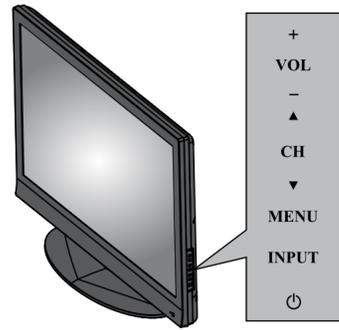

Installing the stand


- 1 Remove the stand from the box and place it on a table or bench.
- 2 Lay the TV on a flat, cushioned surface.
- 3 Align the stand with the TV, as shown.

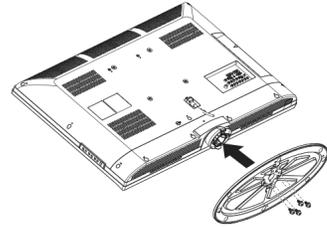


- 4 Secure the stand to the column with the four screws provided.

Installing a wall-mount bracket

- 1 Lay your TV face down on a table or bench. Make sure that you put down a soft cushion or cloth so that your TV is not scratched.
- 2 Remove the four screws that secure the TV to the base, then remove the base.
- 3 Remove the four screws holding the stand bracket to the TV, then remove the stand bracket.

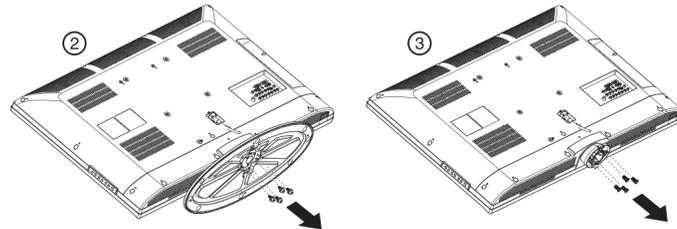

- 4 Secure the wall-mount bracket to the back of your TV using the screws provided with the wall-mount bracket.

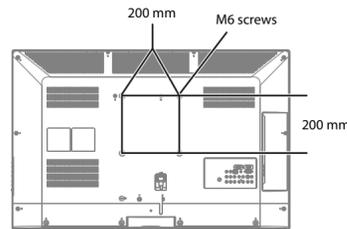

Setting up your remote control

- 1 Press down on the battery compartment cover lock, then remove the remote control cover.




- 2 Insert two AAA batteries into the battery compartment. Make sure that the + and - symbols on the batteries match the + and - symbols in the battery compartment.
- 3 Replace the cover. Make sure that the lock snaps into place.


To program your existing remote control to work with your Dynex TV, see the table below for common codes. If you have problems programming your remote, or need a different remote control code, visit www.dynexproducts.com for the latest remote control code information.

Universal remote control TV codes (for all Dynex TVs manufactured after Jan. 1, 2007)										
Universal remote control makers and models					Set-top box makers and models					
Philips PHD105, PHD555, PMD105B, PD105B	RCA RCU807	One for All URC-6690	Sony RM-VL600	Comcast M1057	Dish Network VIP508, VIP622	Motorola DRC800	TIVO Series 3, HD	DirectTV RC23		
115	135	0464	8043	0463	720	0463	0091	10463		

Connecting a DVD or Blu-ray DVD player, cable box, satellite receiver, or game station Using HDMI (best)

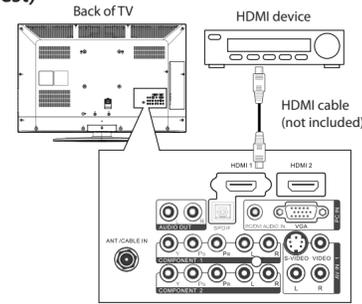


Using component (better)

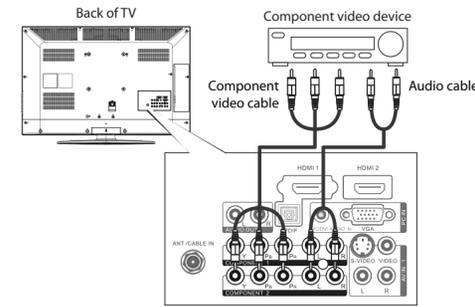


Note: Cables are often color-coded to connectors. Connect yellow to yellow, red to red, and white to white.


Using S-video (fair)

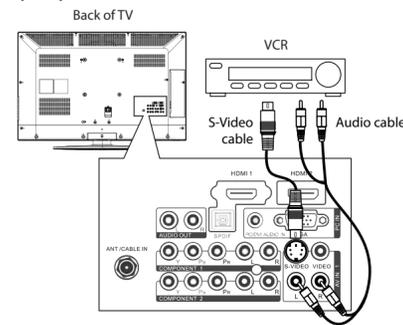

Using composite (fair)

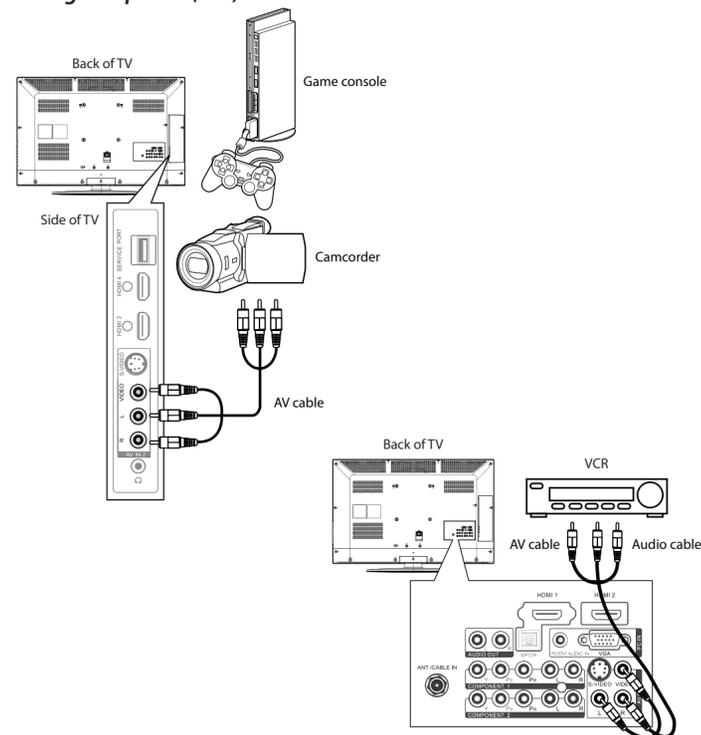


Connecting an antenna

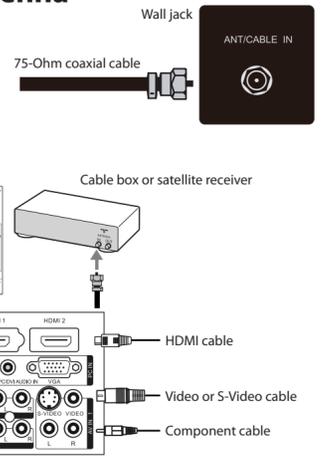


Connecting a home theater system

Using an analog audio cable:

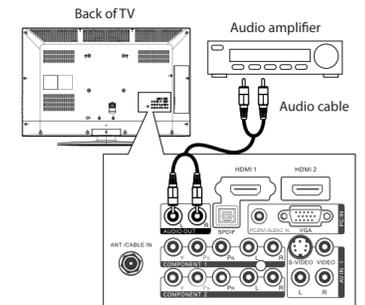


Note: Cable connectors and jacks are often color-coded. Match the colors when you connect the AV cable.

Using a digital audio cable:

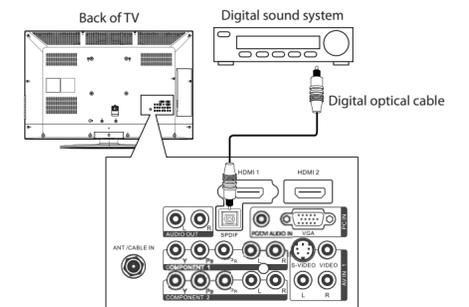


Note: The DIGITAL OUTPUT jack only works with digital TV channels.

Connecting a computer

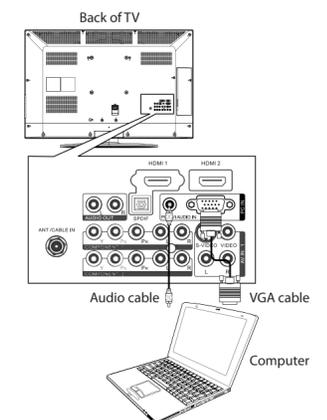

Connecting power

Connect the power cable to the **AC IN** jack on the back of the TV, then connect the other end to a power outlet.

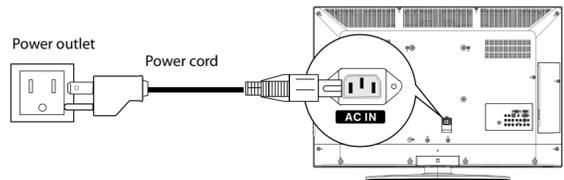

Turning on your TV for the first time


- 1 Make sure that you have inserted the batteries in the remote control, connected your devices to the TV, and connected the AC power.
- 2 Press **⏻** (Power), then wait several seconds. The initial *Setup Wizard* screen opens (only the first time you turn on your TV) to the *Choose your menu Language* screen.



- 3 Press **▲** or **▼** to select the menu language you want, then press **ENTER**. The *Time* screen opens with **Mode** highlighted.



- 4 Press **◀** or **▶** to highlight **Auto** (the date/time are automatically set by the TV signal source, based on the time zone you selected) or **Manual** (to set the date/time manually) mode, then press **ENTER**. The *Choose your Picture Mode* screen opens.

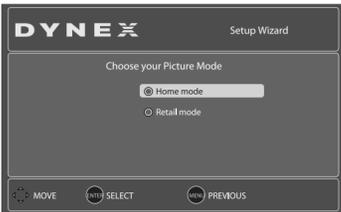

- 5 Press **▲** or **▼** to select **Home Mode** or **Retail Mode**, then press **ENTER**. If you select **Home Mode** (default - has the same settings as the **Energy Savings** picture mode), the *Choose your TV source* screen opens. -OR- If you select **Retail Mode** (has the same settings as the **Vivid** picture mode), a message stating "Are you sure you want Retail mode? Since in this mode Energy saving is not realized." appears. Select **Yes** to proceed or **No** to exit.




- 6 Press **▲** or **▼** to select **Antenna**, **Cable**, or **Cable/Satellite Box**, depending on the type of connection you have.
 - If you are using an antenna for a standard or HD TV signal, select **Antenna**.
 - If your cable is connected directly to the TV (without a tuner box), select **Cable**.
 - If your cable is connected to your TV through a tuner box, select **Cable/Satellite Box**.

- 7 Press **▶** when you have made your selection. The channel scan screen opens. If you selected **Antenna** or **Cable**, your TV automatically scans for available channels in your area and stores the channel information in the channel list. This may take several minutes. While scanning, the TV displays a progress report. - OR - If you selected **Cable/Satellite Box**, the auto scan is not necessary and the screen will ask you to select the correct input source for your set top box. Press **EXIT** to close the menu.
- 8 Select the corresponding video input source through the *INPUT SOURCE* menu.

Selecting the video input source

- 1 Turn on your TV, then press the **INPUT** key on the remote, or the **INPUT** button on the TV. The *INPUT SOURCE* menu opens.

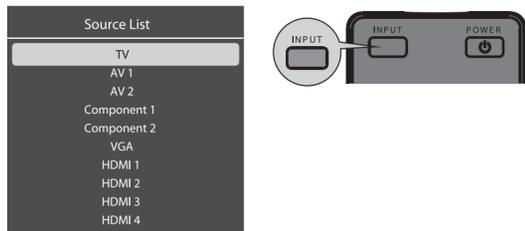


- 2 Press **▲** or **▼** to highlight the video source, then press **ENTER**. You can also select the input source using the following remote control buttons:
 - **TV**—Press to switch to **TV** mode.
 - **VIDEO**—Press once to select **AV1** and twice to select **AV2**.
 - **COMP**—Press once to select **Component 1** and twice to select **Component 2**.
 - **HDMI**—Press repeatedly to cycle between the **HDMI** inputs.
 - **VGA**—Press to view a computer connected to the TV.

Selecting a channel

- Press **CH▲** or **CH▼** to go to the next or previous channel.
- Press the number buttons to enter the channel number you want, then wait for the channel to change, or press **ENTER** to change the channel immediately.

Adjusting the volume

- Press **VOL+** or **VOL-** to increase or decrease the volume.
- Press **MUTE** to temporarily turn off all sound. Press **MUTE** again to restore the sound.

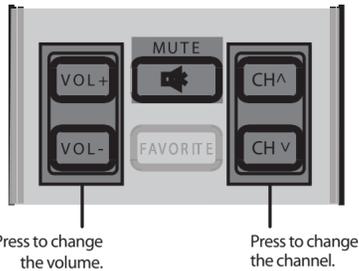


Viewing channel information

- Press **INFO** to show an information banner. The information banner shows current program information such as channel number, video input source, and resolution.
- **Digital signal information**—Displays channel number, station name, channel label (if preset), broadcast program name, TV rating, signal type, audio information, resolution, CC mode, current time, and current program start and end times when watching a digital channel.
- **Analog signal information**—Displays channel number, channel label (if preset), signal type, audio information, and resolution when watching an analog channel.
- Press **GUIDE** to show the digital program guide, which may show a list of available programs, program times, and program summaries, depending on the information provided by the broadcaster.



On-screen menu overview

PICTURE menu

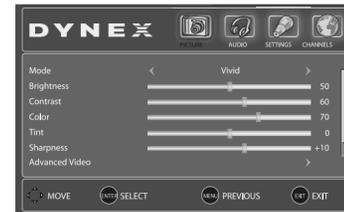

AUDIO menu




SETTINGS menu



CHANNEL menu



Navigating menus with your remote control

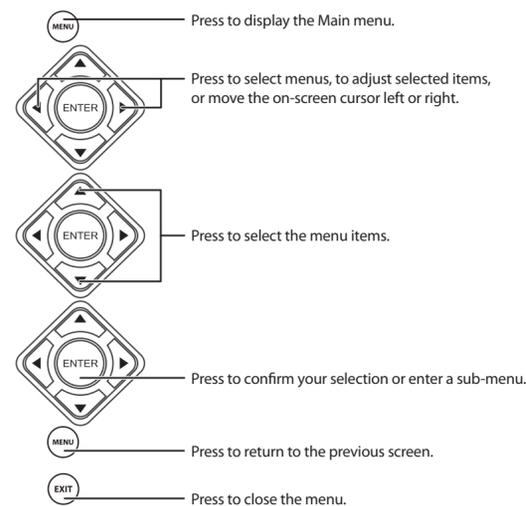

One-year limited warranty

Visit www.dynexproducts.com for details.

Need additional help?

See your **User Guide**! This comprehensive guide includes everything from basic how-to steps to more advanced features.

We're here for you

www.dynexproducts.com

For customer service, call:

800-305-2204 (U.S./Canada markets)

01 800-926-3020 (Mexico market)

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, MN USA 55423-3645

Best Buy Imports, S. de R.L. de C.V. Av. Santa Fe 485, Segundo Piso, Colonia Cruz Manca, Programa Parcial de Desarrollo Santa Fe, Delegación Cuajimalpa, Distrito Federal, México 05349

RFC#BBI0802114Q2

© 2010 BBY Solutions, Inc., All Rights Reserved.

DYNEX is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.