



24" LCD TV

DX-L24-10A

USER GUIDE

Dynex DX-L24-10A

24" LCD TV

Contents

Important safety instructions	2
Warnings	2
Cautions	2
Installing and removing the stand	3
Installing the stand	3
Adjusting the viewing angle of the TV	4
Removing the stand	4
Installing a wall-mount bracket	5
TV components	5
Front	5
Side	6
Back and side	6
Remote control	7
Using the remote control	8
Installing remote control batteries	8
Aiming the remote control	8
Programming a universal remote control to work with your TV	9
Making connections	9
Connecting the power	9
Connecting an antenna, cable TV, or satellite TV box	9
Connecting a VCR	10
Connecting a camcorder or game	10
Connecting an HDMI device	10
Connecting a component video device	11
Connecting a computer	11
Connecting an audio receiver or Dolby Digital 5.1 sound system	11
Connecting headphones	11
Scanning for TV channels	12
Understanding the basics	12
Turning your TV on or off	12
Selecting the video input source	12
Setting the sleep timer	12
On-screen menu overview	13
Navigating the menus	13
Selecting a channel	13
Adjusting the volume	14
Displaying additional information	14
Adjusting the picture	14
Adjusting the TV picture	14
Adjusting the computer image	14
Changing channel settings	15
Selecting the signal source	15
Hiding channels	15
Adding channels	16
Checking the DTV signal strength	16
Setting parental controls	16
Setting or changing the password	16
Setting parental control levels	17

Using closed captioning	18
Selecting the closed captioning mode	18
Selecting the closed captioning type	19
Adjusting the sound	19
Adjusting the sound	19
Adjusting TV settings	20
Setting the time zone	20
Selecting the menu language	20
Turning the side panel lock on or off	21
Setting the auto shut-off function	21
Setting the optical audio output format	22
Playing TV audio only	22
Turning overscan on or off	23
Troubleshooting	23
Video and audio	23
Remote control	23
General	24
Maintenance	24
Cleaning	24
Specifications	24
Legal notices	24
One-year limited warranty	25

CHILD SAFETY

It makes a difference how and where you use your flat panel display

As you enjoy your new product, keep these safety tips in mind

The issue

The home theater entertainment experience is a growing trend, and larger TVs are popular purchases. However, TVs are not always supported on the proper stands or installed according to the manufacturer's recommendations. We and the consumer electronics industry are committed to making home entertainment enjoyable and safe.

TVs that are inappropriately placed on dressers, bookcases, shelves, desks, speakers, chests, or carts may fall over and cause injury.

Tune into safety

- One size of TV stand does not fit all. Use only a TV stand rated for the weight of your TV.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't let children climb on or play with entertainment system furniture and TVs.
- Don't place TVs on furniture that can easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger-than-life" TV. Make sure that you place or install the TV where it cannot be pushed, pulled over, or knocked down.
- Make sure that you route all cords and cables so that they cannot be pulled or grabbed by curious children.




Wall mounting

If you decide to wall mount your TV, always:

- Use only a wall mount rated for the weight of your TV and that has been recommended by this TV manufacturer, listed in this manual, or otherwise listed by an independent laboratory as suitable for your TV. One size of wall mount does not fit all.
- Follow all instructions supplied by the TV and wall mount manufacturers.
- If you have any doubts about your ability to safely wall mount your TV, get help from a professional installer.
- Make sure that the wall where you are mounting the TV is appropriate. Some wall mounts are not designed to be mounted to walls backed with steel studs or cinder blocks. If you are unsure, ask a professional installer.
- TVs can be heavy. At least two people are required for safe wall mount installation.




Important safety instructions

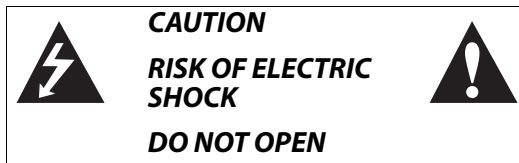

This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your TV. This label is located on the back of your TV.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your TV.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15 The *mains plug* is the disconnecting device. The plug must remain readily operable.
- 16 The apparatus with grounding-type plug is a class I apparatus. Class I apparatus need to be connected to earth ground wire to prevent possible electric shock. Make sure that you connect the class I apparatus to a mains socket outlet with a protective earthing connection.
- 17 Remote control batteries should not be exposed to excessive heat such as sunshine, fire, or the like.

- 18 The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Warnings

Electric shock hazard

To reduce the risk of fire or electric shock, do not remove any cover or expose the device to rain or moisture. No user-serviceable parts are inside. Refer servicing to qualified service technicians.

Lightning

For added protection for your device receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the power outlet and disconnect any antenna or cable system. This helps prevent property damage and personal injury from lightning and power line surges.

Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

Handling the LCD panel

- Your TV's screen is made of glass. Do not drop your TV or hit, jolt, or press hard against the LCD panel. If the screen breaks, be careful of broken glass.
- If the LCD panel is broken, make absolutely sure that you do not touch the liquid in the panel. This may cause skin inflammation.
- If the liquid gets in your mouth, immediately gargle, rinse, and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer in clean water.

Replacement parts

When replacement parts are required, make sure that the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, personal injury, or other hazards.

Safety check

After completing any service or repair to this device, ask the service technician to perform routine safety checks to determine that your TV is in correct operating condition.

Power source

Operate your TV only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult an electrician or your local power company.

Cautions

Damage requiring service


Unplug this TV from the power outlet and refer servicing to qualified service personnel under the following conditions:

- When the power supply cord or plug is damaged or frayed.
- If liquid has been spilled or objects have fallen into your TV.
- If your TV has been exposed to rain or water.

- If your TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because incorrect adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore your TV to its normal operation.
- If your TV has been dropped or damaged in any way.
- When your TV exhibits a distinct change in performance.

Outdoor antenna grounding

If an outside antenna or cable system is connected to your TV, make sure that the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to correct grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of the antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

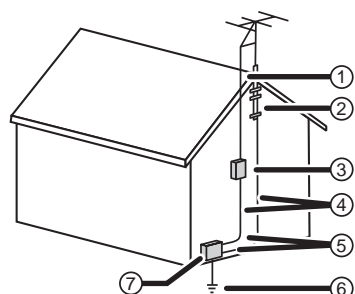

- ① Antenna lead-in wire
- ② Grounding clamp
- ③ Antenna discharge unit
- ④ Grounding conductors
- ⑤ Ground clamps
- ⑥ Power service grounding electrode system
- ⑦ Electric service equipment

Note to CATV system installer

Article 820 of the National Electrical Code, ANSI/NFPA No. 40 provides guidance for correct grounding. Specifically, it states that the cable ground must be connected to the grounding system of the building as close to the point of cable entry as practical.

Condensation

Moisture will form on the TV if the TV is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens, the TV's performance may be impaired. To prevent this, let the TV stand in its new surroundings for about an hour before switching it on, or make sure that the room temperature rises gradually. Condensation may also form during the summer if the TV is exposed to the breeze from an air conditioner. In such cases, change the location of the TV.

Mobile telephone warning

To avoid interference with your TV picture and sound, operating problems, or even damage, keep your cordless and cellular telephones away from the TV.

End of life directives

Your TV contains tin-lead solder and a fluorescent lamp containing a small amount of mercury. Disposal of these materials may be regulated for environmental reasons. Your TV also contains material that can be recycled and reused. For disposal or recycling information, contact your local authorities or the Electronic Industries Alliance at www.eia.org to find a recycler in your area.

Non-active pixels

The LCD panel contains almost 3 million thin film transistors, which provide exceptionally sharp video quality. Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green, or red point. These non-active pixels do not adversely affect the performance of your TV, and are not considered defects.

Installing and removing the stand

You must install your TV into the stand for it to stand upright on a cabinet or other flat surface. If you intend to mount your TV on a wall or other vertical surface, you must remove the stand column.

Warning: Before attempting assembly or removal of the stand, unplug the AC power cord.

Cautions:

Read these instructions thoroughly before attempting this installation.

Make sure that you handle your TV very carefully when attempting assembly or removal of the stand. If you are not sure of your ability to do this, or to use the tools necessary to complete this job, refer to a professional installer or service personnel. The manufacturer is not responsible for any damages or injuries that occur due to mishandling or improper assembly.


When using a table or bench as an aid to assembly, make sure that you place the TV on a soft cushion or covering to prevent accidental scratching or damage to your TV's finish.

The speaker is not intended to support the weight of your TV. Do not move or handle your TV by the speaker. This can cause damage to your TV that is not covered by the manufacturer's warranty.


Installing the stand

To install the stand:


- 1 Remove the stand from the box and place it on a table or bench.
- 2 Lay a soft, dry and lint-free cloth on a table and place the TV face down on the cloth so that your TV is not scratched. Align the bottom side of the TV with one edge of the table.

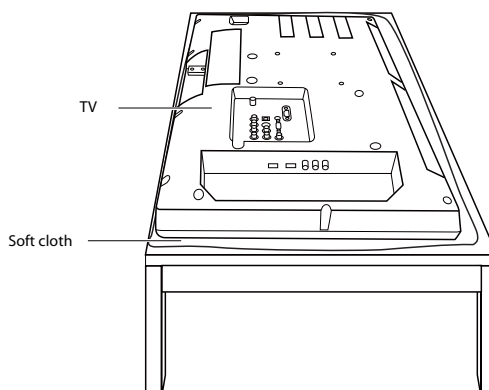


- 3 Insert the stand column into the TV stand and secure it with the stand column screws.

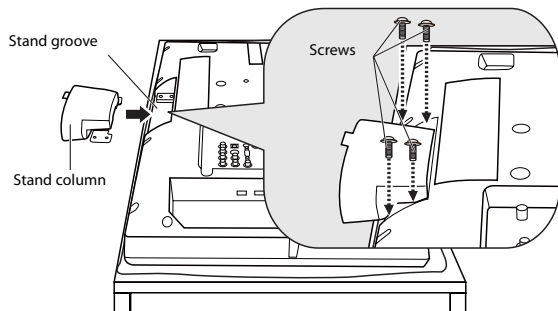

- 4 With the wider side of the stand facing down, align the tabs on the stand column with the holes on the stand, then gently push the stand toward the stand column until it clicks into place.

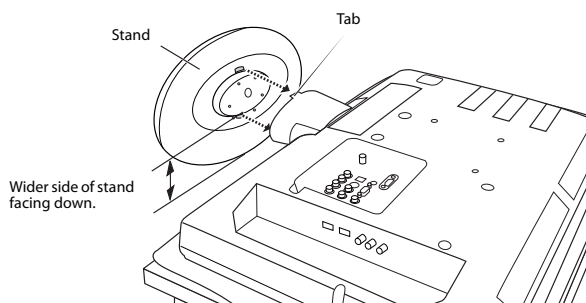

- 5 Secure the stand with the four stand screws.

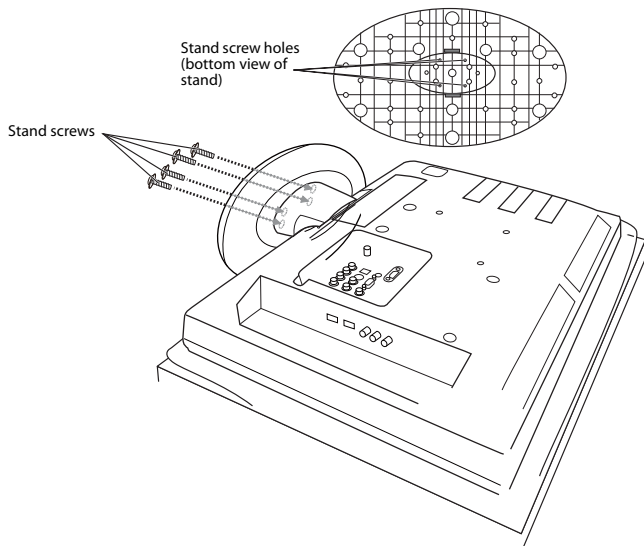


Adjusting the viewing angle of the TV

To adjust the viewing angle:

- Adjust the angle forward up to 3° and backward up to 10°.


Caution: When adjusting the angle, use caution to avoid slipping or tipping the TV.

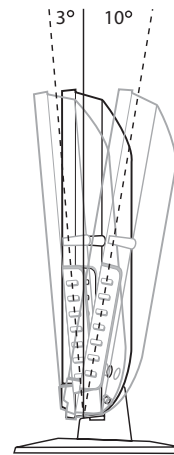


Removing the stand

To remove the stand from the stand column:

- Lay your TV face down on a table or bench. Make sure that you put down a soft cushion or cloth so that your TV is not scratched).
- Adjust the stand so that the angle between the stand and the TV is 90°.

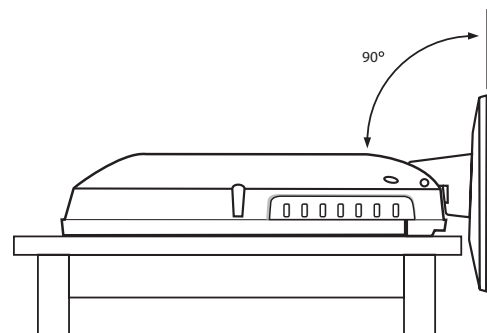

- Remove the four stand screws, then press the two black tabs on the bottom of the stand together and push them into the stand column and pull the stand off the stand column.

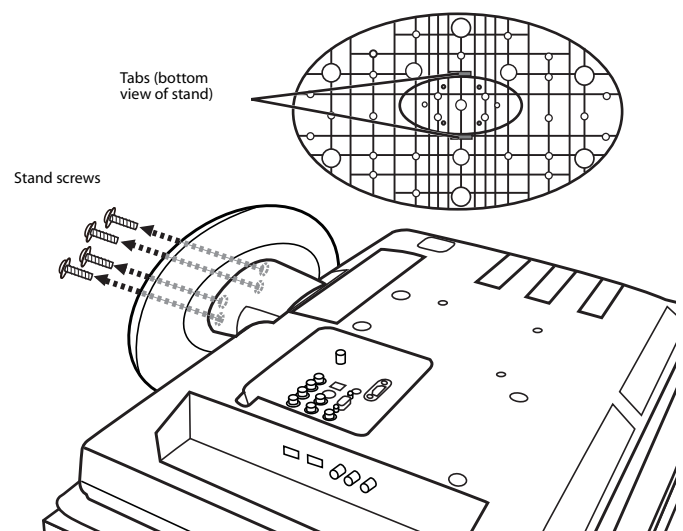


Installing a wall-mount bracket

If you want to attach the TV to a wall-mount bracket (not provided), you should first remove the stand pedestal if it is pre-attached.

To remove the stand column:

1 Lay your TV face down on a table or bench. Make sure that you put down a soft cushion or cloth so that your TV is not scratched.

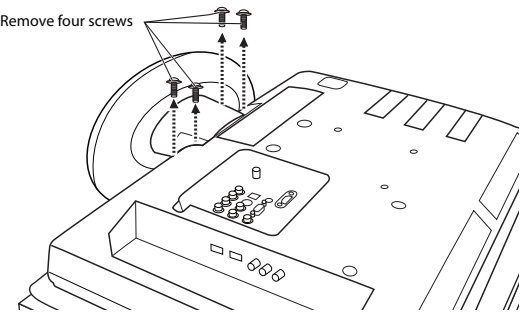

2 Remove the four screws holding the stand column to your TV, then remove the stand and the stand column.

Note: The appearance of this product in these illustrations may differ from your actual product, and is for comparative purposes only.

To attach your TV to a wall-mount bracket:


Warning: These servicing instructions are for use by qualified service personnel only. To reduce the risk of hazards, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

1 Remove the four screws holding the TV to its base, as described above.

2 Secure the wall-mount bracket to the back of your TV using the four M4*10 screws provided with the bracket.


TV components

Front

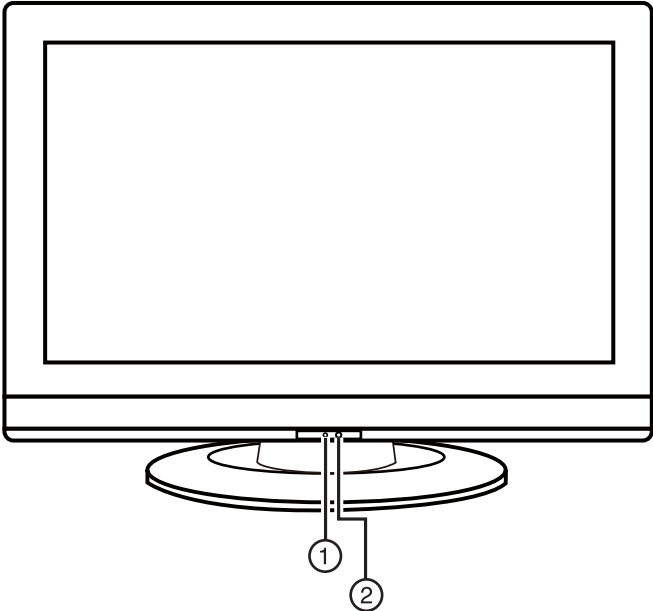


#	Component	Description
1	Power indicator	Lights blue when your TV is turned on. Lights red when your TV is in standby mode. Flashes blue when your TV receives no signal from VGA and enters DPMS (Display Power Management System) mode. No lights when power cord is unplugged. For more information, see "Turning your TV on or off" on page 12.
2	Remote sensor	Receives signals from the remote control. Do not block.

Side

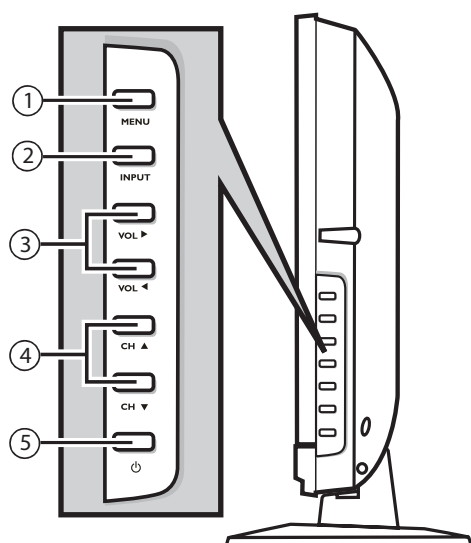

#	Component	Description
1	MENU	Press to open the on-screen menu.
2	INPUT	Press to select the video input source.
3	VOL► / VOL◄	Press to increase or decrease the volume.
4	CH▲ / CH▼	Press to go to the next or previous channel in the channel list.
5	⏻ (Power) button	Press to turn on your TV, or wake the TV up from DPMS mode. Press again to put your TV in standby mode. For more information, see "Turning your TV on or off" on page 12.

Back and side

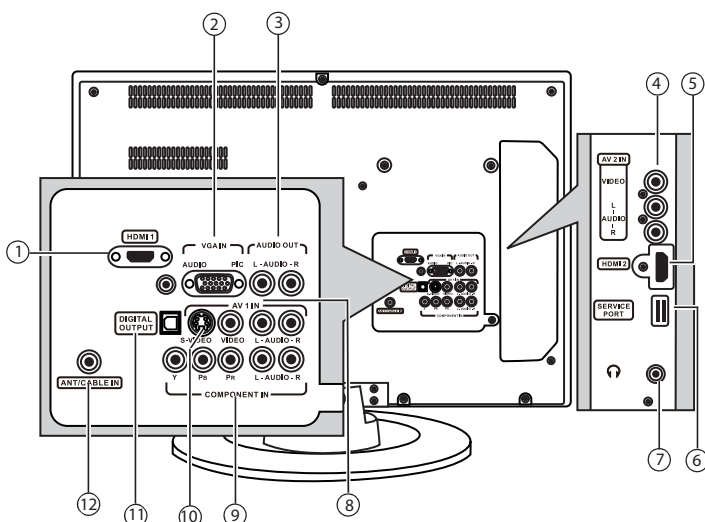


##	Component	Description
1	HDMI1 jack	Connect an HDMI device, such as a cable box or DVD player, to this jack. An HDMI cable carries both video and audio, so you do not need to make an audio connection. For more information, see "Connecting an HDMI device" on page 10.
2	VGA IN AUDIO / VGA IN PIC jacks	Connect a computer to these jacks. For more information, see "Connecting a computer" on page 11.
3	Audio out jacks	Connect an analog sound system, such as an analog audio amplifier, to these jacks. See "Connecting an audio receiver or Dolby Digital 5.1 sound system" on page 11.
4	AV2 IN jack	Connect an AV device (video and audio) to these jacks. Match the color of the connectors to the color of the jacks (yellow for video, red for audio right, and white for audio left). For more information, see "Connecting a camcorder or game" on page 10.
5	HDMI2 jack	Connect an HDMI device, such as a cable box or DVD player, to this jack. An HDMI cable carries both video and audio, so you do not need to make an audio connection. For more information, see "Connecting an HDMI device" on page 10.
6	Service port	For software update only. Do not use.
7	Headphone jack	Plug headphones into this jack.
8	AV1 IN jacks	Connect an AV device (video and audio) to these jacks. Match the color of the connectors to the color of the jacks (yellow for video, red for audio right, and white for audio left). For more information, see "Connecting a camcorder or game" on page 10.
9	COMPONENT IN jacks	Connect a component video device to these jacks. For more information, see "Connecting a component video device" on page 11.
10	S-VIDEO jack	Connect an S-Video device to this jack. S-Video does not carry an audio signal, so you will need to connect audio cables from the device to the AV1 audio jacks.

#	Component	Description
11	DIGITAL OUTPUT jack	Connect a digital sound system, such as a digital audio amplifier, to this jack. See "Connecting an audio receiver or Dolby Digital 5.1 sound system" on page 11.
12	ANT/CABLE IN jack	Connect an antenna, cable TV, or a satellite box to this jack. For more information, see "Connecting an antenna, cable TV, or satellite TV box" on page 9.

#	Button	Description
4	MUTE	Press to turn off the sound. Press again to turn on the sound.
5	VOL+/VOL-	Press to increase or decrease the volume.
6	▲ ▼ ► ◀ / ENTER	Press direction buttons to navigate in the on-screen menus. Press ENTER to confirm selections in an on-screen menu or to open a submenu.
7	MENU	Press to open the on-screen menu.
8	CCD	Press to select a closed captioning mode. For more information, see "Selecting the closed captioning mode" on page 18.
9	SLEEP	Press to set the sleep timer. For more information, see "Setting the sleep timer" on page 12.
10	TV	Press to toggle between AIR and CABLE TV input sources.
11	HDMI	Press to toggle between HDMI1 and HDMI2 as the input source.
12	INFO	Press to display the information banner. For more information, see "Displaying additional information" on page 14.
13	(.) dot	Press to select a digital sub-channel. For more information, see "Selecting a channel" on page 13.
14	CH+/CH-	Press to go to the next or previous channel in the channel list. For more information, see "Selecting a channel" on page 13.
15	MTS/SAP	Press to select the audio mode. For analog channels, you can select STEREO , SAP (secondary audio program), or MONO . For digital channels, you can select the audio track (if more than one track is available). For more information, see "Adjusting the sound" on page 19.
16	EXIT	Press to return to the previous on-screen menu layer or close the menu.
17	ZOOM	Press to select the aspect ratio. You can select Auto (TV sources only), Normal , Wide , Zoom , or Cinema .
18	INPUT	Press to open the <i>SOURCE LIST</i> menu to select the video input source, then press ENTER to confirm. You can select AIR TV , CABLE TV , Composite1 , Composite2 , S-Video , Component , HDMI1 , HDMI2 , or VGA .
19	COMP	Press to select the Component as the input source.
20	VIDEO	Press to toggle between Composite1, S-Video, and Composite2 input sources.

Remote control

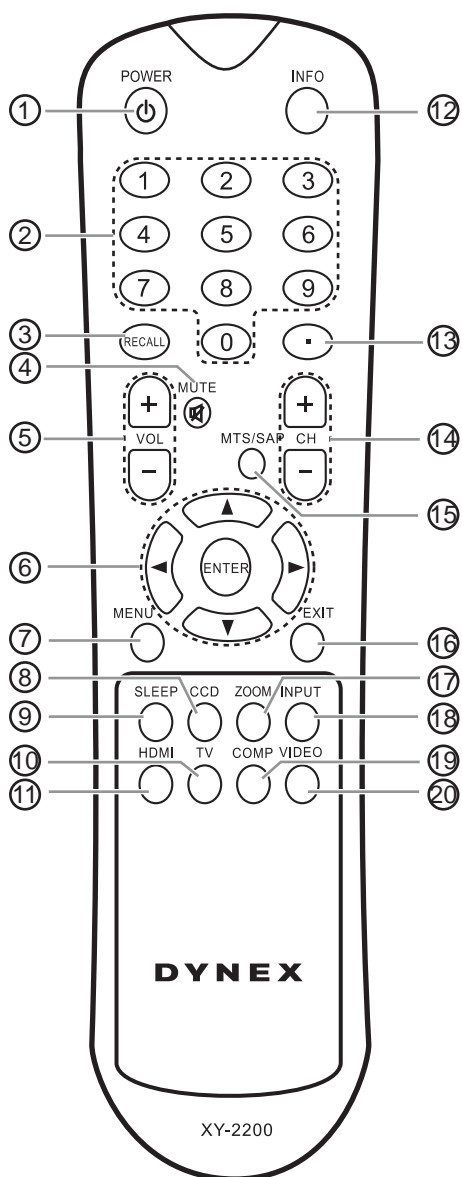


#	Button	Description
1	⏻ (Power)	Press to turn on your TV, or wake the TV up from DPMS mode. Press again to put your TV in standby mode. For more information, see "Turning your TV on or off" on page 12.
2	Numbers	Press to enter channel numbers or the parental control password.
3	RECALL	Press to go to the last viewed channel.

Using the remote control


Installing remote control batteries

To install remote control batteries:


- 1 Open the battery compartment cover by lifting it off when you press the release button.

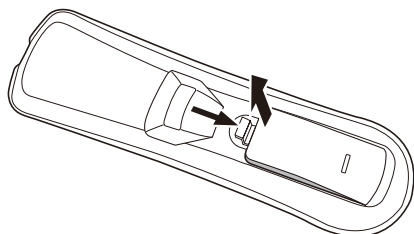

- 2 Insert two AAA batteries into the battery compartment. Make sure that the + and – symbols on the batteries match the + and – symbols in the battery compartment.

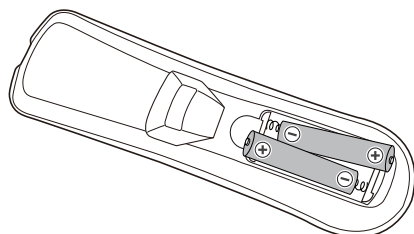

- 3 Replace the cover.

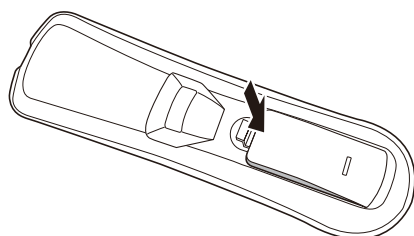

Notes:

Do not mix different types of batteries.

Do not mix old and new batteries.

Remove batteries when they no longer have a charge. Chemicals may leak into the battery compartment. Battery chemicals can cause a rash. If chemicals leak, clean the battery compartment with a cloth.


Remove the batteries if you do not intend to use the remote control for an extended amount of time.

Do not dispose of batteries in a fire. Dispose of them as hazardous waste.

Aiming the remote control

To use the remote control:

- Point the remote control towards the remote sensor on the front of your TV.

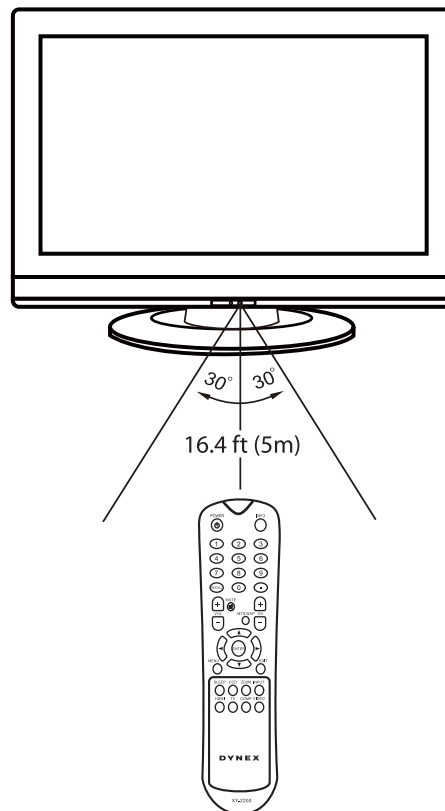

Notes:

Do not expose the remote control to shock or liquids.

Do not use the remote control in an area with high humidity.

Do not place the remote control in direct sunlight.

Do not place objects, such as furniture, between the remote control and the remote sensor.

The remote control may not work if direct sunlight or bright light shines on the remote sensor. Either move your TV or change the angle at which you use the remote control.

Programming a universal remote control to work with your TV

You can operate your TV with a new or existing universal remote control.

To program a universal remote control:

- 1 Find the code for your universal remote control by identifying its model (or your set-top box's remote control manufacturer and model) on the charts below, then make note of the numbered code below it. You will use the numbered code to program your remote control to work with your TV.

Dynex TV codes for universal remote controls (for all Dynex TVs manufactured after Jan. 1, 2007)				
Universal remote control manufacturer and model				
Philips PHDVD5, PH5DSS, PMDVR8, PDVR8	RCA RCU807	One for All URC-6690	Sony RM-VL600	
115	135	0464	8043	
Set-top box manufacturer and model				
Comcast M1057	Dish Network VIP508, VIP622	Motorola DRC800	TIVO Series 3, HD	DirectTV RC23
0463	720	0463	0091	10463

Codes for other remote controls are available online at:
www.dynexproducts.com/t-customer_support.aspx

Tips:

- The brand name is often visible on the front of the universal remote control, and the model number is often visible on the back.
 - If your universal remote control isn't listed on the chart, refer to your universal remote control's instructions and try codes for the brands Orion, Emerson, Memorex, Sansui, Sylvania, or Zenith. You may need to try several codes before finding a match.
- 2 Follow your universal remote control's instructions to enter the code you found in Step 1.

Tips:

- If your universal remote control has a code search feature, run a code search to identify a code that matches your TV. See your universal remote control's instructions for details.
- If your universal remote control has a "Learn" feature, you can manually program it using your TV remote to "teach" the commands one at a time. See your universal remote control's instructions for details.

- 3 If all else fails, you must use a different universal remote control that can operate both your set-top box and your TV. Five such remotes are listed on the chart, but many other compatible models are available in the market.

For more help, call technical support for your universal remote control or set-top box manufacturer, or call the Dynex Customer Care Center at 1-800-305-2204.

Making connections

Cautions:

Check the terminals for position and type before making any connections.

Loose connections can result in image or color problems. Make sure that all connections are tight and secure.

The external audio/video equipment shown in these illustrations may be different from your equipment. If you have questions, refer to the user manual that came with your equipment.

Always turn the power off when connecting external equipment.

Connecting the power

To connect the power:

- Plug the AC cord into an AC power outlet.

Notes:


Your TV should only be operated from the power source indicated on the label.

Always unplug the AC power cord from the AC power outlet when you will not be using your TV for an extended period of time.

Connecting an antenna, cable TV, or satellite TV box

To connect an antenna, cable TV, or satellite TV box:

- 1 Connect one end of a 75 ohm cable (not included) to the **RF OUT** jack on the antenna or on the cable or satellite TV box.

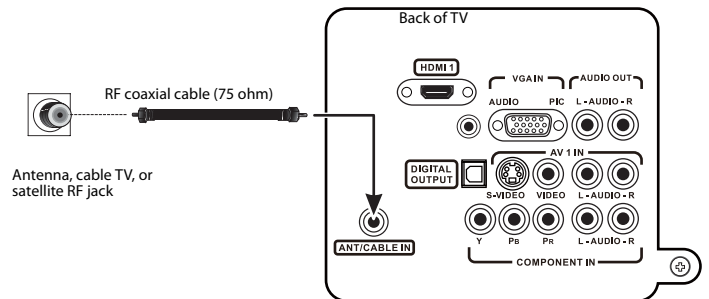

- 2 Connect the other end of the cable to the **ANT/CABLE IN** jack on the back of your TV.

Notes:

Use a 75 ohm cable to eliminate interference and noise from radio waves.


Do not bundle the 75 ohm cable with the power cord or other cables.

If the antenna is not installed correctly, contact qualified service personnel to correct the problem.

Connecting a VCR

To connect a VCR:

- 1 Make sure that your TV's power cord is unplugged and the VCR is turned off.
- 2 Connect an AV cable to the **AV VIDEO OUT** jack on the VCR. You can connect an S-Video cable to the **S-VIDEO OUT** jack instead of the **AV VIDEO OUT** jack.

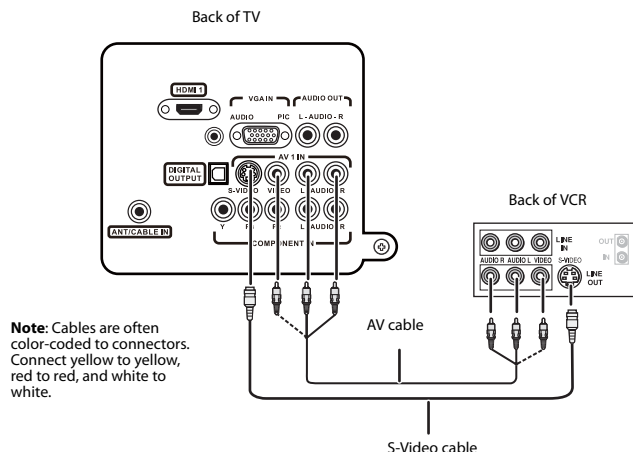

- 3 Connect the other end of the cable to the **AV1 IN VIDEO** jack on the back of your TV. For a better picture, you can connect an S-Video cable to the **S-Video** jack instead of using an AV cable with the **AV1 IN VIDEO** jack.
- 4 Connect an audio cable to the **AV AUDIO OUT** jacks on the VCR.
- 5 Connect the other end of the cable to the **AV1 IN AUDIO-L** and **AUDIO-R** jacks on the back of your TV.

To play from the VCR:

- 1 Turn on your TV, then press **INPUT**. The *Source List* menu opens.
- 2 Press **▲** or **▼** to select **Composite1** or **S-VIDEO**, then press **ENTER**.

Note: You can also press **INPUT** or **VIDEO** several times to select **Composite1** or **S-Video**.


- 3 Turn on the VCR, insert a videotape, then press **PLAY** on the VCR.

Connecting a camcorder or game

Tip: Some game consoles have an HDMI connector, which can be used for a better picture.

To connect a camcorder or game:

- 1 Make sure that your TV's power cord is unplugged and the camcorder or game is turned off.
- 2 Connect an AV cable to the **AV OUT VIDEO**, **AUDIO-L**, and **AUDIO-R** jacks on the camcorder or game.

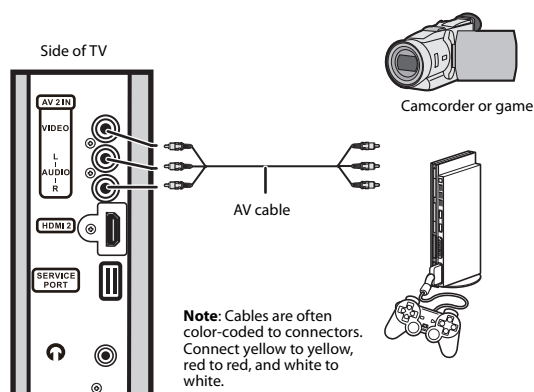

- 3 Connect the other end of the cable to the **AV2 IN VIDEO**, **AUDIO-L**, and **AUDIO-R** jacks on the side of your TV.

To play from a camcorder or game:

- 1 Turn on your TV, then press **INPUT**. The *Source List* menu opens.
- 2 Press **▲** or **▼** to select **Composite2**, then press **ENTER**.


Note: You can also press **INPUT** or **VIDEO** several times to select **Composite2**.

- 3 Turn on the camcorder or game, and set it to the correct output mode. See the camcorder's or game's user guides for more information.

Connecting an HDMI device

To connect an HDMI device:

- 1 Make sure that your TV's power cord is unplugged and the HDMI device is turned off.
- 2 Connect an HDMI cable to the **HDMI OUT** jack on the HDMI device.

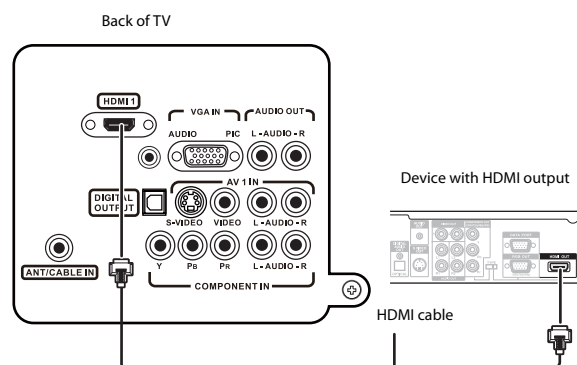

- 3 Connect the other end of the cable to the **HDMI1** or **HDMI2** jack on the back of your TV.

To play from the HDMI device:

- 1 Turn on your TV, then press **INPUT**. The *Source List* menu opens.
- 2 Press **▲** or **▼** to select **HDMI1** or **HDMI2**, then press **ENTER**.

Note: You can also press **INPUT** or **HDMI** several times to select **HDMI1** or **HDMI2**.


- 3 Turn on the HDMI device, and set it to the correct output mode. See the HDMI device's user guide for more information.

Note: If the external device has DVI output only, use a DVI-to-HDMI adapter to connect to the **HDMI** jack, then connect an audio cable to the **VGA AUDIO** jack.

Connecting a component video device

To connect a component video device:

- 1 Make sure that your TV's power cord is unplugged and the component video device is turned off.
- 2 Connect a component video cable to the **COMPONENT OUT** jacks on the component video device.

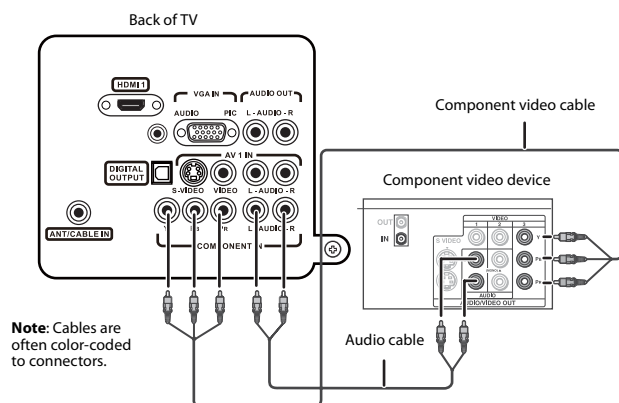

- 3 Connect the other end of the component video cable to the **COMPONENT IN** jacks on the back of your TV.
- 4 Connect an audio cable to the **AUDIO OUT** jacks (L/R) on the component device.
- 5 Connect the other end of the audio cable to the **COMPONENT IN AUDIO-R** and **AUDIO-L** jacks on the back of your TV.

To play from a component device:

- 1 Turn on your TV, then press **INPUT**. The *Source List* menu opens.
- 2 Press **▲** or **▼** to select **Component**, then press **ENTER**.

*Note: You can also press **INPUT** or **COMP** several times to select Component.*

- 3 Turn on the component video device and set it to the correct output mode. See the component video device's user guide for more information.


Connecting a computer

Tip: Some computers have an HDMI connector, which can be used for a better picture.

To connect a computer:

- 1 Make sure that your TV's power cord is unplugged and the computer is turned off.
- 2 Connect a VGA cable to the **VGA** jack on the computer, then connect the other end of the cable to the **VGA IN PIC** jack on the back of your TV.

Note: The VGA cable should be a 15-pin D-Sub (analog RGB) cable.

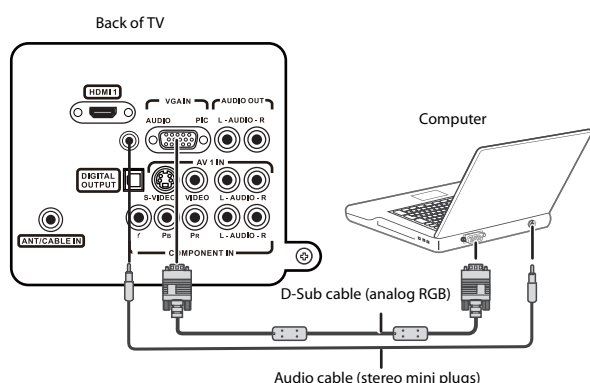

- 3 Connect an audio cable to the **AUDIO OUT** jack on the computer, then connect the other end of the cable to the **VGA IN AUDIO** jack on the back of your TV.

Note: The audio cable should have a stereo mini plug.

To play video from a computer:

- 1 Turn on your TV, then press **INPUT**. The *Source List* menu opens.
- 2 Press **▲** or **▼** to select **VGA**, then press **ENTER**.

*Note: You can also press **INPUT** several times to select **VGA**.*

- 3 Turn on the computer, then adjust the display properties, if necessary.

Connecting an audio receiver or Dolby Digital 5.1 sound system


You can connect your TV's audio output to a digital amplifier or home theater system.

To connect an audio receiver or Dolby Digital 5.1 sound system:

- 1 Make sure that your TV's power cord is unplugged and the audio device is turned off.
- 2 Connect RCA audio cables to the **AUDIO OUT AUDIO-L** (white) and **AUDIO-R** (red) jacks on the back of your TV, then plug the cables into the Audio In jacks of your audio receiver.

-OR-

Plug a digital optical (toslink) cable into the **DIGITAL OUTPUT** jack on the back of your TV, then plug it into the optical input jack on your Dolby Digital 5.1 sound system.

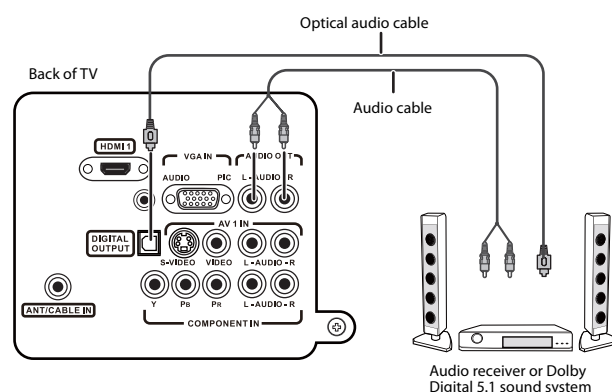


Note: The DIGITAL OUTPUT jack only works with digital sources.

Connecting headphones

To connect headphones:

- Connect the headphones to the headphone jack on the side of your TV.

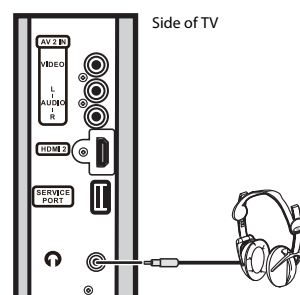


Note: Loud noise can damage your hearing. When using headphones, use the lowest volume setting that still lets you hear the sound.

Scanning for TV channels


Before you can watch TV channels in your area, you need to let the TV scan for available TV channels and store them in the TV channel list.

To scan for channels:


- 1 Make sure that you have inserted the batteries in the remote control, connected the antenna to the TV, and connect the AC power.
- 2 Press **⏻** (Power), then wait several seconds.
- 3 Press **MENU**. The initial on-screen menu opens.

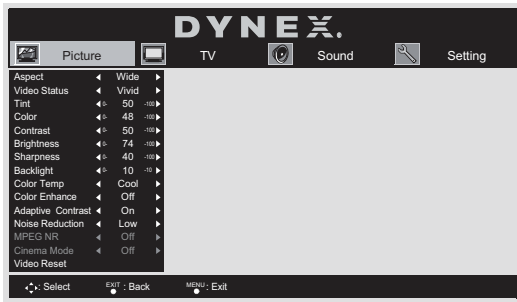


- 4 Press **◀** or **▶** to highlight TV. The TV menu opens.

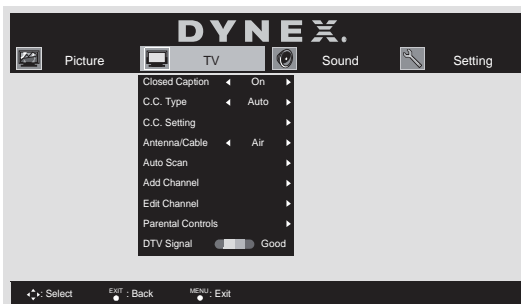

- 5 Press **▼** to highlight **Antenna/Cable**, then press **◀** or **▶** to select **Air** or **Cable**, depending on the type of antenna connection you have.

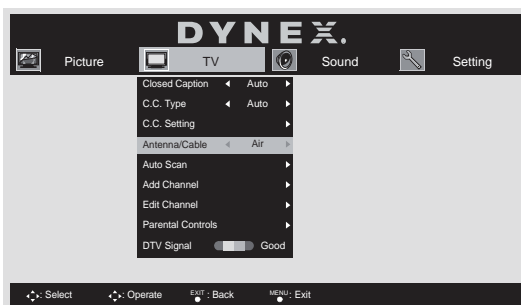

- 6 Press **▼** to highlight **Auto Scan**, then press **▶** to open the **Channel Scan** submenu.

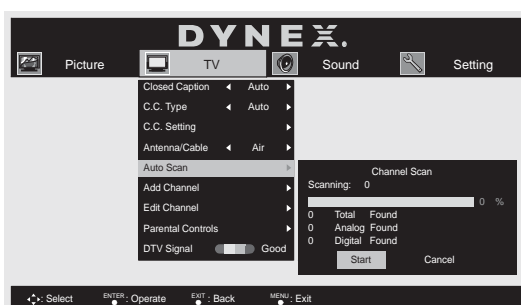

- 7 Press **◀** or **▶** to select **Start**, then press **ENTER** to automatically scan for available channels.

Auto Scan may take a while to complete. A progress report is displayed while your TV is scanning for available channels. You can press **ENTER** or **EXIT** to exit Auto Scan prior to completion, but you will need to run Auto Scan later to complete the process. Auto Scan creates a list of available/receivable channels for the selected signal input.

Understanding the basics

Turning your TV on or off

To turn your TV on or off (standby mode):

- 1 Plug the power cord into an AC power outlet.
- 2 Press **⏻** (power). Your TV turns on.
- 3 Press **⏻** again to turn off your TV. When you turn off your TV, it goes into standby mode.


Warning: When your TV is in standby mode, it is still receiving power. To completely disconnect power, unplug the power cord.

Note: If the Auto Shut Off function is turned on (see "Setting the auto shut-off function" on page 21), and your TV does not receive an input signal for several minutes, it automatically goes into standby mode. If your TV is connected to a computer and the TV receives no VGA signal, the TV will enter DPMS (Display Power Management System) mode automatically. You can press **⏻** (Power) to wake up your TV.

Selecting the video input source

To select the video input source:

- 1 Turn on your TV, then press the **INPUT** key on the remote, or the **INPUT** button on the TV. The **Source List** menu opens.

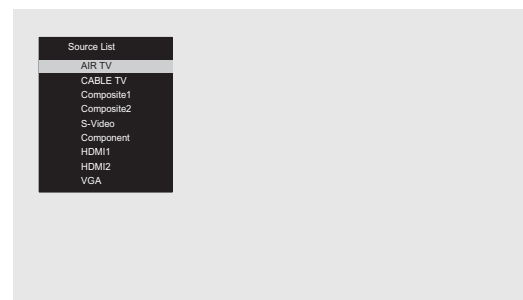

- 2 Press **▲** or **▼** to highlight the video source, then press **ENTER**. You can also select the input source using the following remote control buttons:
 - **COMP**—Press to select **Component**.
 - **HDMI**—Press to toggle between **HDMI1** and **HDMI2**.
 - **VIDEO**—Press to toggle between **Composite1**, **Composite2**, and **S-Video**.
 - **TV**—Press to toggle between **AIR TV** and **CABLE TV** sources.

Setting the sleep timer

You can specify the amount of time you want your TV to wait before it automatically turns off.


To set the sleep timer:

- Press **SLEEP** repeatedly to select the amount of time you want your TV to wait before it automatically turns off. Each time you press the button, the amount of time increases.


Note: To turn off the sleep timer, select **0**.

On-screen menu overview


Picture menu

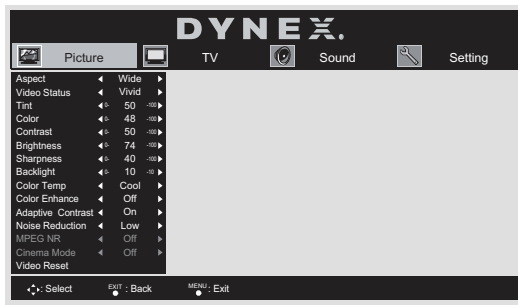


VGA menu

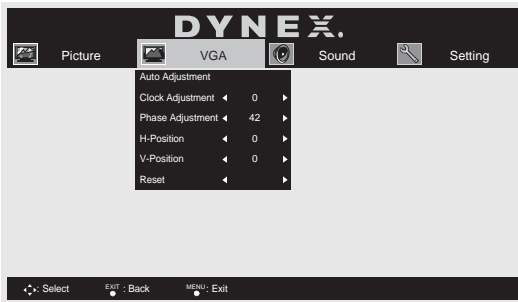

TV menu

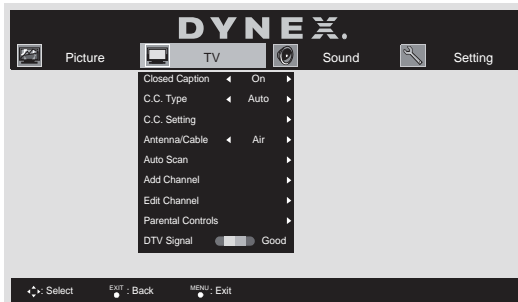

Sound menu

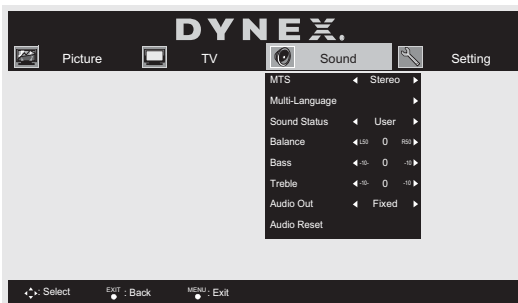

Setting menu




Notes:

Depending on the signal source selected, you may see different options on your screen. The above menus are shown in TV mode.

Menu items that are not selectable are grayed out. Menus in this manual are described in TV mode, unless otherwise indicated.

The illustrations and screens shown in the manual are for explanation purposes and may vary from the actual screens on your TV.

Navigating the menus

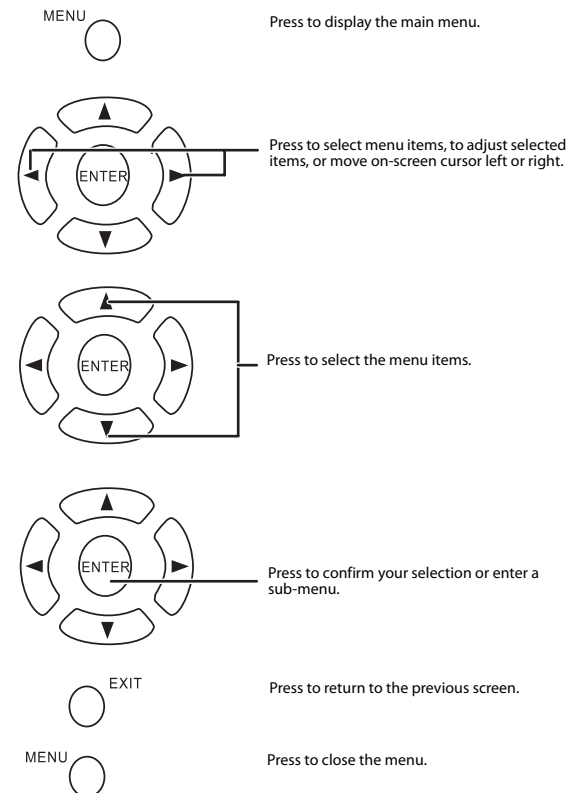

Selecting a channel

To select a channel:

- Press **CH+** or **CH-** to go to the next or previous channel on the memorized channel list.
- Press the number buttons to enter the analog or digital (main) channel number you want, then wait for the channel to change, or press **ENTER** to change the channel immediately.
 - To select a digital sub-channel, press the number buttons to select the main digital channel, then press the dot (.) button to select the sub-channel. Wait for the channel to change, or press **ENTER** to change the channel immediately.

Note: Button presses must be within three seconds of each other.

- Press **RECALL** to go to the last channel viewed.

Digital sub-channels

A digital TV signal transmits more data than an analog signal. This increase in data provides a better picture and sound with less static and interference. The increased data capacity also lets broadcasters fit several channels into the same bandwidth as an analog signal. Broadcasters may use these sub-channels to transmit a variety of information, such as weather forecasts, foreign languages, and commercials. A digital sub-channel is indicated by the main channel number, followed by a dot, then the sub-channel number. For example, 5.1 indicates sub-channel 1 of main channel 5.

Adjusting the volume

To adjust the volume:

- Press **VOL+** or **VOL-** to increase or decrease the volume.
- Press **MUTE** to temporarily turn off all sound. Press **MUTE** again to restore the sound.

Displaying additional information

To display additional information:


- Press **INFO** to show an information banner. The information banner shows current program information such as channel number, video input source, and resolution.
 - Digital mode information—Displays program name, time, signal type, channel number, channel label, TV rating, resolution, and current signal strength.
 - Analog mode information—Displays signal type, channel number, audio information, and TV rating.

Adjusting the picture

Adjusting the TV picture

To adjust the TV picture:

- 1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

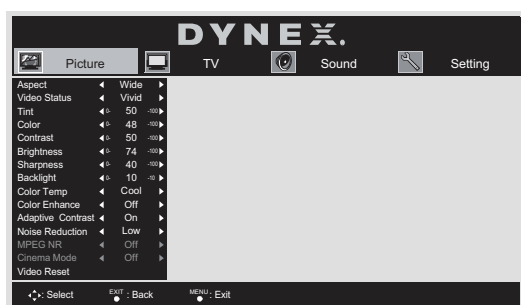

- 2 Press **▲** or **▼** to highlight an option, then press **◀** or **▶** to adjust the option. You can select:
 - **Aspect**—Selects the aspect ratio of the picture. You can select Auto (selects the correct aspect ratio automatically, for TV source only), Normal (selects the correct aspect ratio to match the source image), Wide (shows a full-screen picture), Zoom (enlarges the picture but may crop the top and bottom), or Cinema (stretches the picture at the edges, but maintains a good aspect ratio at the center of the screen).

- **Video Status**—Selects the picture mode. You can select Vivid (a bright and vivid picture), Standard (a standard picture), Sport (a dynamic picture), Theater (a finely detailed picture), or User (customized picture).
- **Tint**—Adjusts the image tint.
- **Color**—Adjusts the color saturation.
- **Contrast**—Adjusts the contrast.
- **Brightness**—Adjusts the brightness.
- **Sharpness**—Adjusts the sharpness.
- **Backlight**—Adjusts the backlight level of the screen.
- **Color Temp**—Selects the color temperature. You can select **Warm** (to enhance the reds), **Cool** (to enhance the blues), or **Normal**.
- **Color Enhance**—Automatically optimizes the skin tone (not available for the VGA source).
- **Adaptive Contrast**—Automatically optimizes the picture contrast between bright and dark portions (not available for the VGA source).
- **Noise Reduction**—Selects the noise reduction mode to reduce picture noise (snow). You can select **Low**, **High**, or **Off**. (Not available for the VGA source.)
- **MPEG NR**—Reduces block noises and improves picture quality (only available for the DTV and HDMI sources).
- **Cinema Mode**—Turns on or off the 3:2 pull-down feature which realizes smoother picture movement for cinema video (not available for the VGA source).
- **Video Reset**—Resets all settings in the Picture menu to their default values.

- 3 Press **EXIT** to return to the previous menu, or press **MENU** to close the menu.

Adjusting the computer image

Note: Make sure that your TV is in VGA mode. For more information, see "Selecting the video input source" on page 12.

To adjust the computer image:

- 1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.



- 2 Press **◀** or **▶** to highlight **VGA**. The *VGA* menu opens.




- Press **▲** or **▼** to highlight an option, then press **◀** or **▶** to adjust the option. You can adjust:
 - Auto Adjustment**—Automatically adjusts the image settings such as position and phase
 - Clock Adjustment**—Adjusts the sample frequency
 - Phase Adjustment**—Adjusts the focus of stable images
 - H-Position**—Moves the image right or left
 - V-Position**—Moves the image up or down
 - Reset**—Resets all settings in the VGA menu to their default values.
- Press **EXIT** to return to the previous menu, or press **MENU** to close the menu.

Changing channel settings

Selecting the signal source

To select the signal source:


- Press **MENU**. The on-screen menu opens.

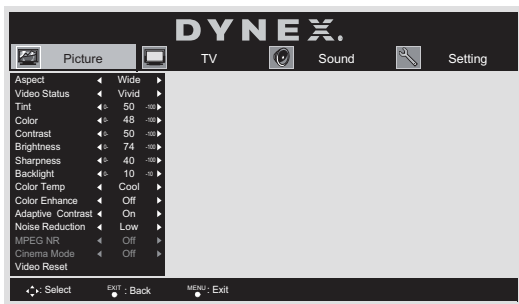

- Press **◀** or **▶** to highlight **TV**. The TV menu opens.



- Press **▼** to highlight **Antenna/Cable**, then press **◀** or **▶** to select **Air** or **Cable**.

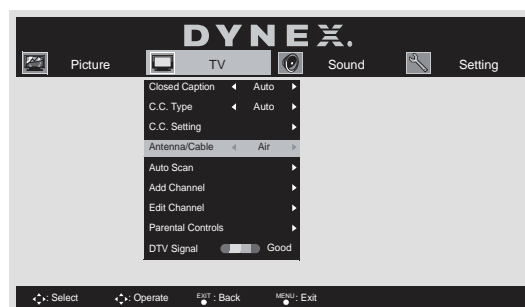


- Press **MENU** to close the menu.

Hiding channels


You can delete channels from the channel list so that your TV skips the channels when you press **CH+ / CH-**. You can still tune to the hidden channel by using the number buttons.

To hide a channel:


- Press **MENU**. The on-screen menu opens.

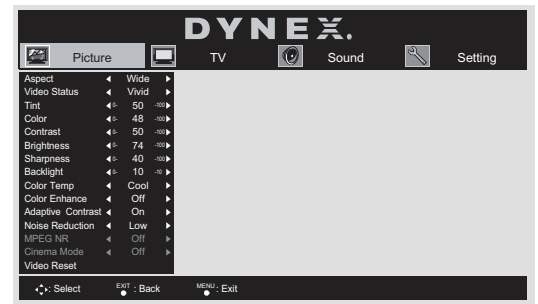

- Press **◀** or **▶** to highlight **TV**. The TV menu opens.

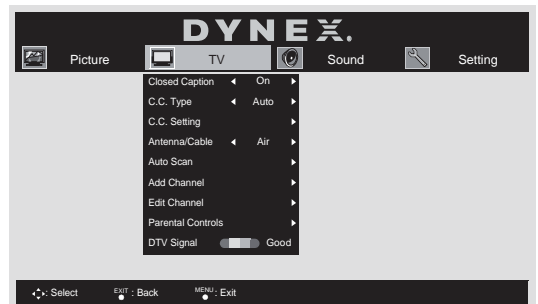

- Press **▼** to highlight **Edit Channel**, then press **▶**. The Main Channel List opens.

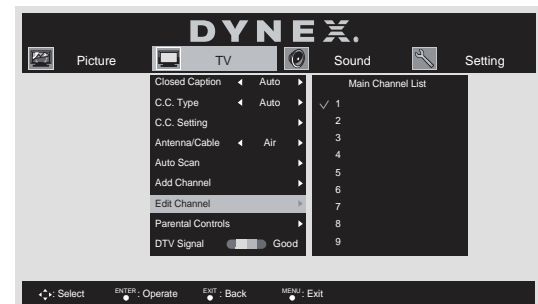

- Press **▲** or **▼** to highlight the channel you want to hide (the default is to show the channel), then press **ENTER** to remove the checkmark from the channel.

Note: If the list has more than one page, press **▲** or **▼** to scroll through the pages.


- Press **MENU** to close the menu.

Adding channels


If there are new channels in your area, you can use this function to add the channels to your Main Channel list.

To add a channel:


- 1 Press **MENU**. The on-screen menu opens.

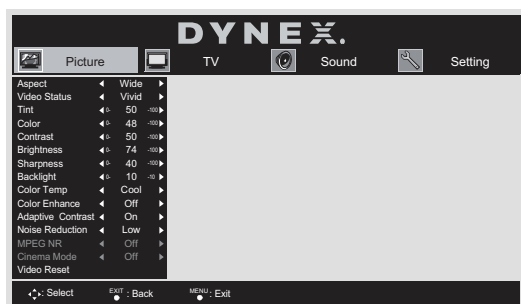

- 2 Press ◀ or ▶ to highlight **TV**. The TV menu opens.

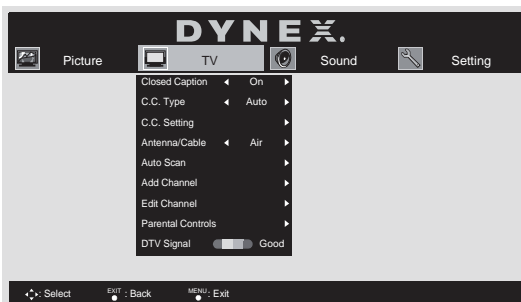

- 3 Press ▼ to highlight **Add Channel**, then press ▶. The *Add Channel* submenu opens.

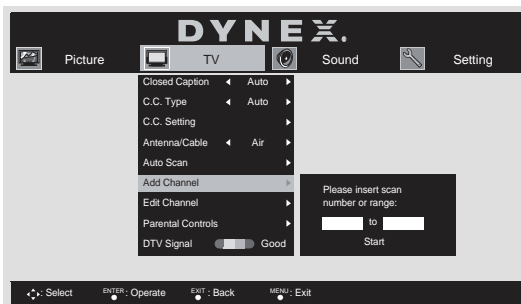


- 4 Press the numbers on the remote control to enter the new channel number twice. If you do not know the new channel number, press the number buttons on the remote control to enter the range that covers the new channel you want to add.
- 5 Press ▼ to highlight **Start**, then press **ENTER** to begin scanning and storing the new channel.
- 6 Press **MENU** to close the menu.

Checking the DTV signal strength


You can check the DTV signal strength to determine if you need to adjust your antenna or digital cable input. The higher the signal strength, the less likely you are to experience picture degradation.

To check the DTV signal strength:

- 1 Press **MENU**. The on-screen menu opens.

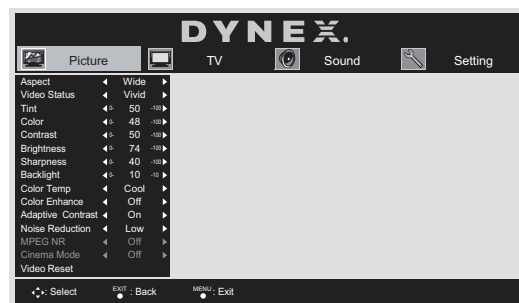

- 2 Press ◀ or ▶ to highlight **TV**. The TV menu opens.

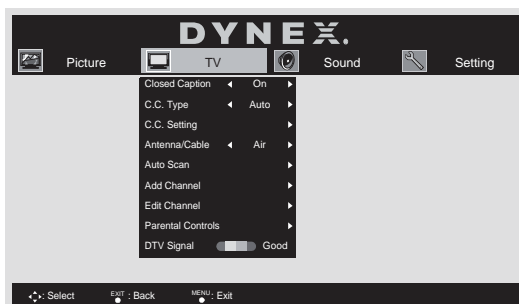

- 3 The DTV signal strength is indicated by the color bar beside the **DTV Signal** menu item:



- 4 Press **MENU** to close the menu.

Setting parental controls

Parental controls let you prevent your children from watching inappropriate material on TV. When set, parental controls read the rating of the program (with some exceptions, such as news and sports) and deny access to programs that exceed the ratings level you select. To watch programs that exceed the selected rating, you must enter a password.


Note: Parental controls are only effective for a TV source.

Setting or changing the password

When you enter the *Parental Controls* menu for the first time, the password is not required so that you can specify your own password. We suggest that you specify your own password as soon as possible.

To set the parental password:


- 1 Press **MENU**. The on-screen menu opens.

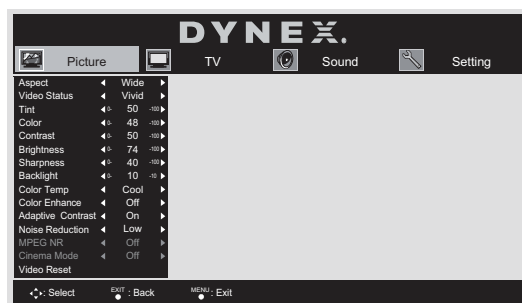

- 2 Press **◀** or **▶** to highlight **TV**. The TV menu opens.



- 3 Press **▼** to highlight **Parental Controls**, then press **▶**. The Parental Controls submenu opens.

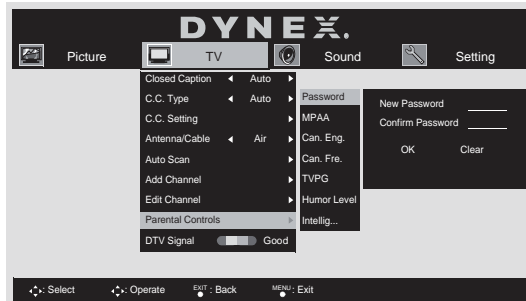


- 4 Press **▶**, then press the number buttons to input a new password.
- 5 Press **▼**, then enter the new password again. (If you have entered the wrong password, press **▼** to select Clear, then press **ENTER** to clear all passwords entered.)
- 6 Press **▼** to select **OK**, then press **ENTER**.
- 7 Press **MENU** to close the menu.

Setting parental control levels


You can set parental controls for the U.S. and Canada. The following procedure shows how to set controls for U.S. TV ratings. You use similar steps for controlling U.S. movie and Canadian TV ratings.

To set parental controls:

- 1 Press **MENU**. The on-screen menu opens.

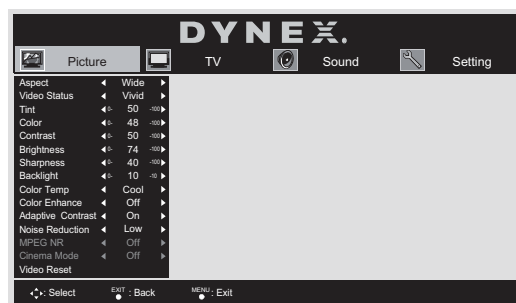


- 2 Press **◀** or **▶** to highlight **TV**. The TV menu opens.

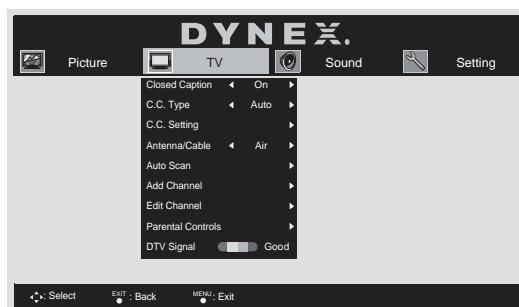


- 3 Press **▼** to highlight **Parental Controls**, then press **▶**. You will be requested to enter the password. Press the number buttons on the remote control to enter the four-digit password.

Note: If you forget the password, enter 9999.

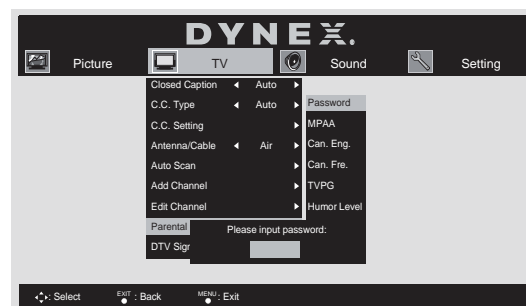

- 4 Press **▲** or **▼** to highlight a rating, then press **▶**:

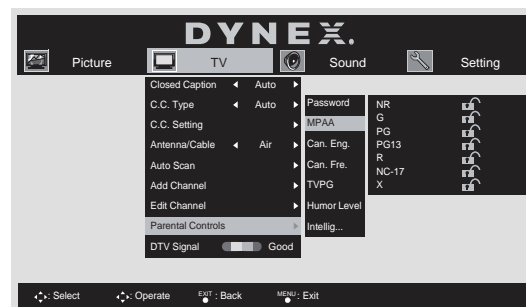

- Select **MPAA** to set U.S. movie (MPAA) ratings
- Select **Can. Eng.** to set Canadian English ratings
- Select **Can. Fre.** to set Canadian French ratings
- Select **TVPG** to set U.S. TV (age-based and content-based) ratings

Note: For DTV channels, if downloadable ratings (RRT, Rating Region Tables) are available from the broadcasting stations, they will be downloaded automatically, and additional ratings will appear below the TVPG menu item for your selection. The rating names may differ depending on the downloaded information.

- 5 Press **▲ ▼ ◀ ▶** to highlight the rating you want to block, then press **ENTER**. A lock symbol appears when a rating is blocked.

Note: When a rating is blocked, that rating and all other higher ratings are blocked.

- 6 Press **MENU** to close the menu.

U.S. movie (MPAA) ratings	
NR	Movie is not rated.
G	General audiences.
PG	Parental guidance suggested.
PG-13	Suitable for children 13 and older.
R	Parental guidance suggested for children under 17.
NC-17	Not suitable for children under 17.
X	Adults only.

Canadian English ratings	
E	Exempt programming.
C	Suitable for all children.
C8+	Suitable for children 8 and older.
G	General audiences.
PG	Parental guidance suggested.
14+	Suitable for children 14 and older.
18+	Adults only.

Canadian French ratings	
E	Exempt programming.
G	General audiences.
8 Ans+	Suitable for children 8 and older.
13 Ans+	Suitable for children 13 and older.
16 Ans+	Suitable for children 16 and older.
18 Ans+	Adults only.

U.S. TV ratings (age-based)	
TV-Y	All children.
TV-Y7	Suitable for children 7 and older.
TV-G	General audiences.
TV-PG	Parental guidance suggested.
TV-14	Parental guidance strongly suggested.
TV-MA	Mature audiences only.


U. S. TV ratings (content-based)	
ALL	All content based ratings.
FV	Fantasy violence.
V	Violence.
S	Sexual situations.
L	Strong language.
D	Suggestive dialog.

Using closed captioning


Selecting the closed captioning mode

To select the closed captioning mode:

- 1 Press **MENU**. The on-screen menu opens.

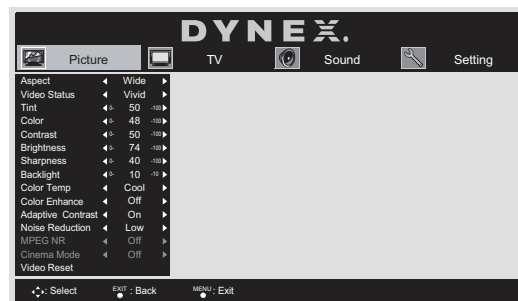


- 2 Press **◀ ▶** to highlight **TV**. The TV menu opens.

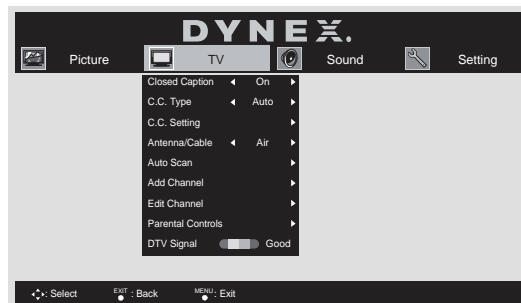

- 3 Press **▼** to highlight **Closed Caption**, then press **◀ ▶** to select the CC Mode. You can select:

- **On**—Turns on closed captioning
- **Auto**—Turns on closed captioning when the sound is muted.
- **Off**—Turns off closed captioning.

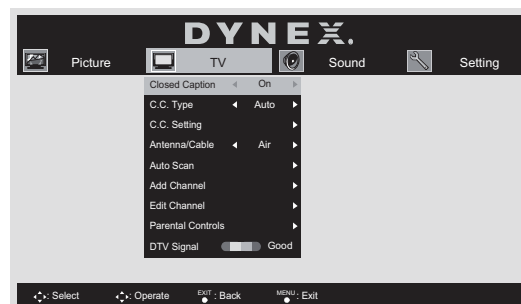


- 4 Press **MENU** to close the menu.

Selecting the closed captioning type

To select the closed captioning type:


- 1 Press **MENU**. The on-screen menu opens.

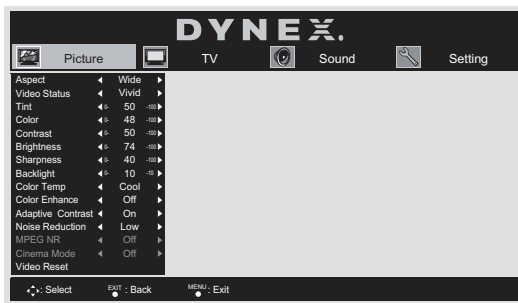

- 2 Press **◀** or **▶** to highlight **TV**. The TV menu opens.



- 3 Press **▼** to highlight **Closed Caption**, then press **◀** or **▶** to select **On** or **Auto**.

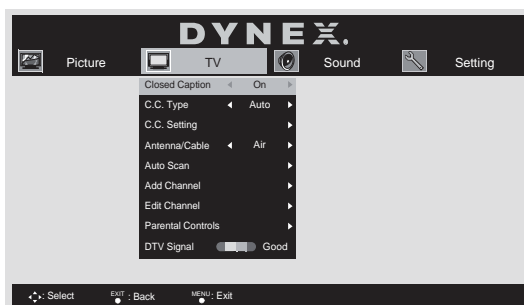


- 4 Press **▼** to highlight **C.C. Type**, then press **◀** or **▶** to select **Auto**.



Note: For Closed Caption type, you can select: **Basic** (only displays closed captioning when viewing analog TV source), **Advanced** (only displays closed captioning when viewing digital TV source), or **Auto** (automatically detects the source and displays corresponding closed captioning).

- 5 Press **▲** or **▼** to highlight C.C. Setting, then press **▶**. The C.C. Setting submenu opens.

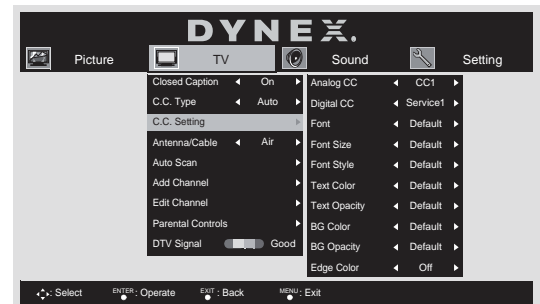


- 6 Press **▲** or **▼** to select a closed captioning option, then press **◀** or **▶** to adjust the setting. You can select:
 - **Analog CC**—CC1 through CC4: Closed captioning appears in a small banner across the bottom of the screen. CC1 is usually the "printed" version of the audio. CC2 through CC4 display content provided by the broadcaster. Text1 through Text4: Closed captioning that covers half or all of the screen. Text1 through Text4 display content provided by the broadcaster.
 - **Digital CC**—Service1 through Service6: display content provided by the broadcaster.
 - **Font**—Selects the font style
 - **Font Size**—Selects the font size
 - **Font Style**—Selects the edge style
 - **Text Color**—Selects the color for the words
 - **Text Opacity**—Selects the opacity level for the words
 - **BG Color**—Selects the color for the background
 - **BG Opacity**—Selects the opacity level for the background
 - **Edge Color**—Selects the edge color
- 7 Press **EXIT** to return to the previous menu, or press **MENU** to close the menu.

Adjusting the sound


Adjusting the sound

To adjust the sound:

- 1 Press **MENU**. The on-screen menu opens.

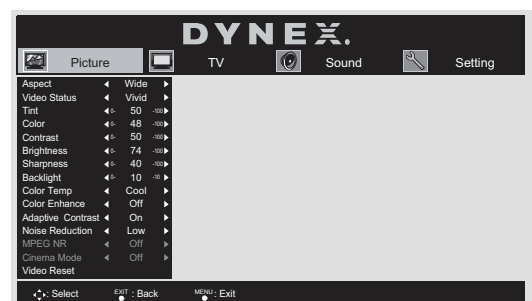

- 2 Press ◀ or ▶ to highlight **Sound**. The *Sound* menu opens.

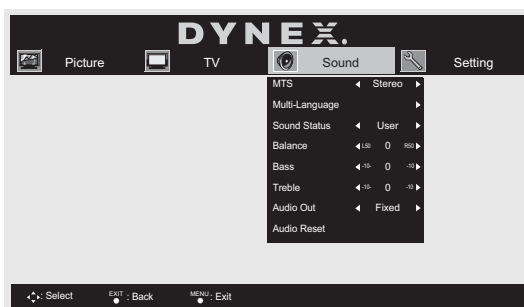

- 3 Press ▲ or ▼ to highlight an option, then press ◀ or ▶ to adjust the option. You can select:

- **MTS**—(analog TV channels only) You can select: **Mono** (if there is noise or static on weak stereo broadcasts), **Stereo** (for programs broadcast in stereo), or **Sap** (to listen to a secondary audio program, if available).

Note: Mono is automatically selected if the program is broadcast in mono.

- **Multi-Language**—(DTV channels only) Selects an alternate audio language, if available.

Tip: You can also press **MTS/SAP** on the remote control to select an audio language, if available.

- **Sound Status**—Selects the sound mode. You can select **Classic** (for classical music), **Speech** (for news programs), **Jazz** (for jazz music), **Rock** (for rock music), or **User** (for a customized sound mode).
- **Balance**—Adjusts the balance between the left and right audio channels.
- **Bass**—Adjusts the low sounds.
- **Treble**—Adjusts the high sounds.
- **Audio Out**—Sets the audio output to **Fixed** (the volume output to an external audio system can only be controlled by the audio system's remote control), or **Variable** (the volume output to the external audio system can be controlled by the TV's remote control).
- **Audio Reset**—Resets all settings in the *Sound* menu to their default values.

- 4 Press **EXIT** to return to the previous menu, or press **MENU** to close the menu.

- 2 Press ◀ or ▶ to highlight **Setting**. The *Setting* menu opens.



- 3 Press ▼ to highlight **Time Zone**, then press ◀ or ▶ to select your time zone.



You can select **Pacific, Alaska, Hawaii, Atlantic, Eastern, Central, or Mountain**.

- 4 If your viewing area observes Daylight Savings time, press ▲ or ▼ to highlight **D.S.T.**, then press ◀ or ▶ to select **On**.




- 5 Press **MENU** to close the menu.

Adjusting TV settings

Setting the time zone

To set the time zone:


- 1 Press **MENU**. The on-screen menu opens.

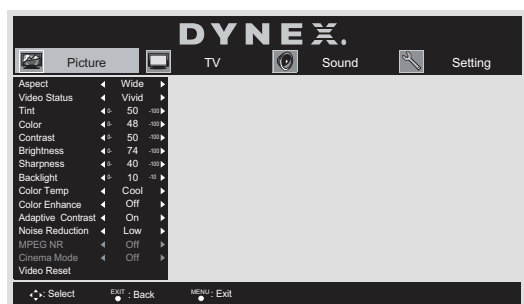

Selecting the menu language

To select the on-screen menu language:


- 1 Press **MENU**. The on-screen menu opens.

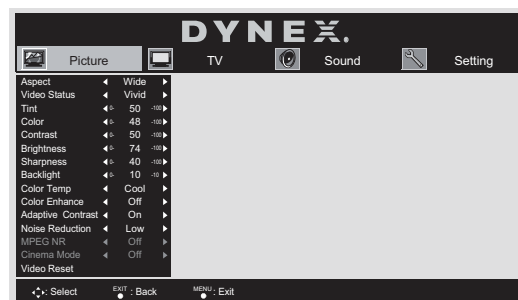

- 2 Press ◀ or ▶ to highlight **Setting**. The *Setting* menu opens.



- 3 Press ▼ to highlight **Language**, then press ◀ or ▶ to select the menu language you want. Options include **English**, **French**, and **Spanish**.

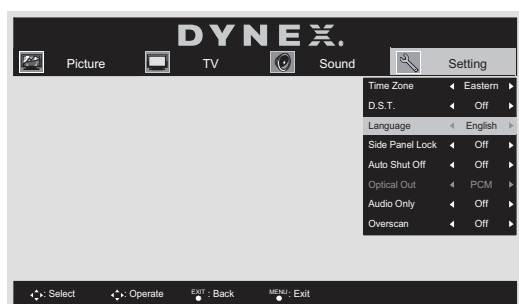


- 4 Press **MENU** to close the menu.

Turning the side panel lock on or off


The side panel lock is used to prevent unwanted operations of the control buttons on the TV. When locked, the TV can only be operated using the remote control.

To turn the side panel lock on or off:


- 1 Press **MENU**. The on-screen menu opens.

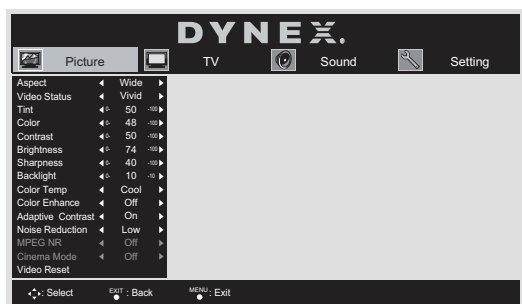

- 2 Press ◀ or ▶ to highlight **Setting**. The *Setting* menu opens.

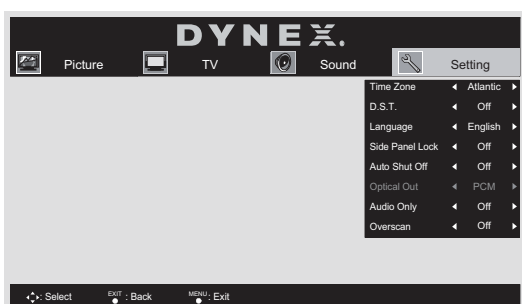

- 3 Press ▼ to highlight **Side Panel Lock**, then press ◀ or ▶ to select **On** or **Off**.

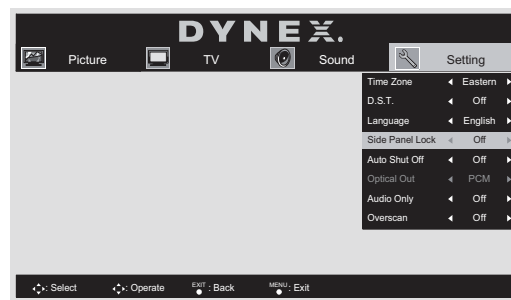

- 4 Press **MENU** to close the menu.


Setting the auto shut-off function

You can set the Auto Shut Off function to On to let the TV automatically go into standby mode when no signal is received after several minutes. Once the function is set and the countdown starts, the time before shut-off appears on the screen.

Note: The Auto Shut Off function is not available for the VGA source. For VGA source, the DPMS mode will work to automatically shut off the TV instead.

To set the auto shut-off function:


- 1 Press **MENU**. The on-screen menu opens.

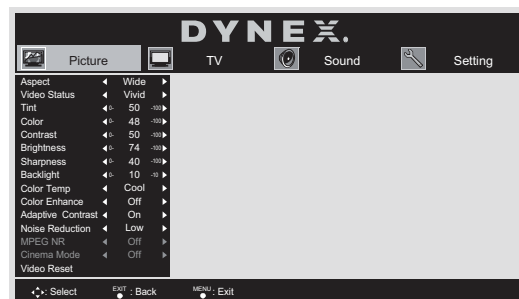

- 2 Press ◀ or ▶ to highlight **Setting**. The *Setting* menu opens.



- 3 Press ▼ to highlight **Auto Shut Off**, then press ◀ or ▶ to select **On** or **Off**.

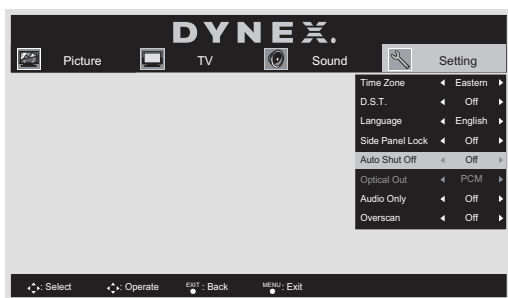

- 4 Press **MENU** to close the menu.


Setting the optical audio output format

You can use this option to select the output format of digital optical audio.


Note: Digital audio output is only available in DTV mode.

To set the optical audio output format:


- 1 Press **MENU**. The on-screen menu opens.

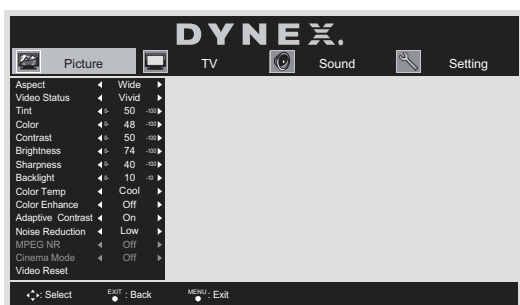

- 2 Press ◀ or ▶ to highlight **Setting**. The **Setting** menu opens.

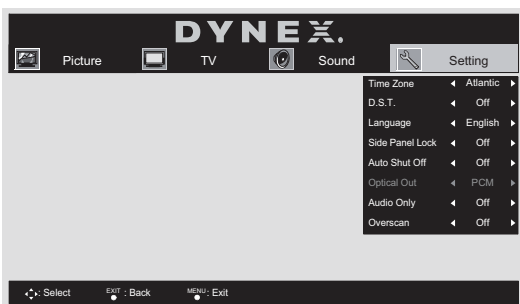

- 3 Press ▼ to highlight **Optical Out**, then press ◀ or ▶ to select a format. You can select **PCM** or **DOLBY DIGITAL**.

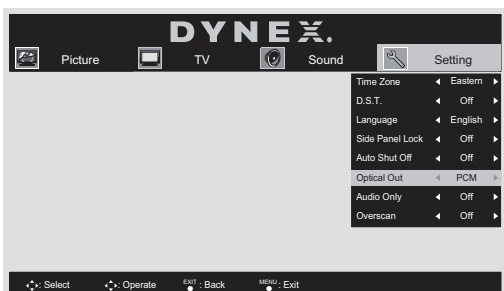


- 4 Press **MENU** to close the menu.

Playing TV audio only

You can turn off the picture on your TV and only listen to the program audio.

To play TV audio only:


- 1 Press **MENU**. The on-screen menu opens.

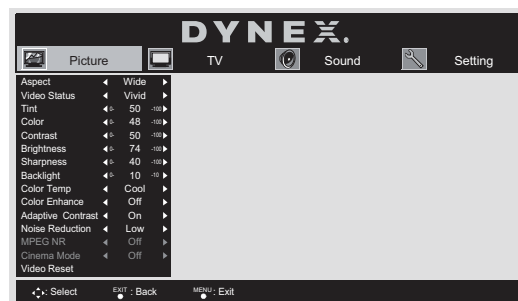

- 2 Press ◀ or ▶ to highlight **Setting**. The **Setting** menu opens.



- 3 Press ▼ to highlight **Audio Only**, then press ◀ or ▶ to select **On**.

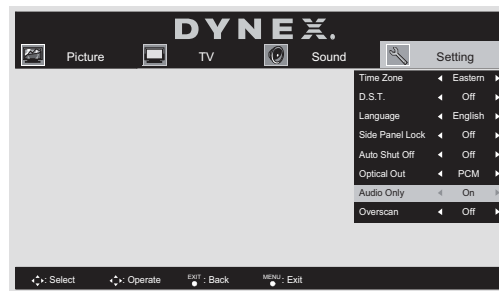

- 4 Press **MENU** to close the menu.

Notes:

Audio Only works only when the input source is TV and your TV is receiving a broadcast signal.


*To exit Audio Only mode, press any button except the power button. When you exit Audio Only mode, the Audio Only option is automatically reset to **Off**.*

Turning overscan on or off

The overscan function is used to adjust the picture's reproduction rate when receiving DVI and HDMI signals in VIDEO format.

To turn overscan on or off:


- 1 Press **MENU**. The on-screen menu opens.

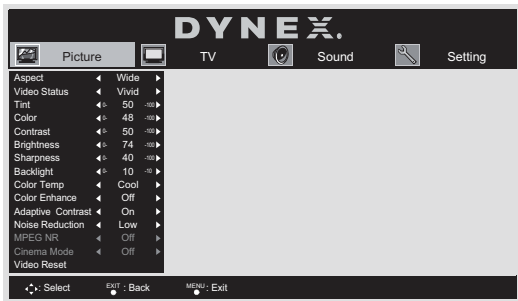

- 2 Press **◀** or **▶** to highlight **Setting**. The *Setting* menu opens.



- 3 Press **▼** to highlight **Overscan**, then press **◀** or **▶** to select **On** or **Off**.

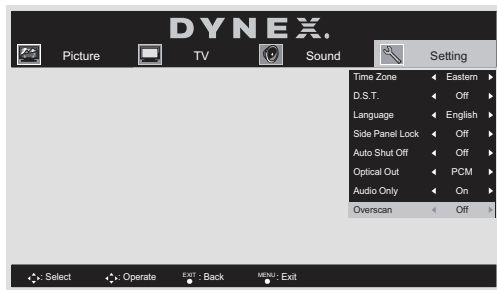

- 4 Press **MENU** to close the menu.

Troubleshooting

Warning: Do not try to repair your TV yourself. Contact authorized service personnel.

Video and audio

Problem	Solution
No picture or sound (the screen is not lit)	<ul style="list-style-type: none"> • Make sure that the power cord is plugged into a power outlet. • Press ⏻ (power) on your TV or the remote control. • Try another channel. The problem could be with the TV station.
Dark, poor, or no picture (the screen is lit), but sound is good	<ul style="list-style-type: none"> • Select the correct video status. For more information, see "Adjusting the TV picture" on page 14. • Adjust the brightness. For more information, see "Adjusting the TV picture" on page 14. • Make sure that the antenna or cable TV is connected correctly. For more information, see "Connecting an antenna, cable TV, or satellite TV box" on page 9.
No color, picture is dark, or color is not correct	<ul style="list-style-type: none"> • Adjust the color saturation. For more information, see "Adjusting the TV picture" on page 14.
Only noise (snow) appears on the screen	<ul style="list-style-type: none"> • Make sure that the antenna or cable TV is connected correctly. For more information, see "Connecting an antenna, cable TV, or satellite TV box" on page 9. • Try another channel. The problem could be with the TV station.
Picture has dotted lines or stripes	<ul style="list-style-type: none"> • Adjust the antenna. • Move your TV away from noise sources, such as cars, neon signs, or hair dryers.
Picture has double images	<ul style="list-style-type: none"> • Use a highly directional outdoor antenna or change to cable or satellite TV.
Picture has a few bright or dark dots	<ul style="list-style-type: none"> • A few bright or dark dots on an LCD screen is normal. It does not affect the operation of this TV.
Good picture, no sound	<ul style="list-style-type: none"> • Increase the volume. • Press MUTE to make sure that the sound is not muted. • Make sure that the audio mode is set to Stereo or Mono. For more information, see "Adjusting the sound" on page 19.
Audio noise or static	<ul style="list-style-type: none"> • Move radio frequency communication equipment, such as a cordless phone, away from your TV.

Remote control

Problem	Solution
Remote control does not work	<ul style="list-style-type: none"> • Replace the batteries. For more information, see "Installing remote control batteries" on page 8. • Make sure that the batteries are inserted correctly. For more information, see "Installing remote control batteries" on page 8. • Make sure that the power cord is plugged into an AC power outlet.

General

Problem	Solution
Cannot tune to one or more channels	<ul style="list-style-type: none"> The program you want to watch may be blocked through the parental controls. For more information, see "Setting parental control levels" on page 17. The channel may have been deleted from the channel list. You can tune to the channel by pressing the number buttons or you can add the channel back to the channel list. For more information, see "Changing channel settings" on page 15.
Cannot access some items	<ul style="list-style-type: none"> If a setting or option is grayed out, it is not available in the current input mode.
Password is lost	<ul style="list-style-type: none"> On the <i>Parental Controls</i> menu, enter 9999 for the password, then set a new password. For more information, see "Setting parental controls" on page 16.
TV cabinet creaks	<ul style="list-style-type: none"> When you are using your TV, the temperature inside the cabinet increases. This causes the cabinet to expand or contract, which produces the creaking noise. This is not a malfunction.
Buttons do not work	<ul style="list-style-type: none"> Unplug the power cord for a few seconds, then plug it back in and turn on your TV.

Note: If the problem is not solved by using these troubleshooting instructions, turn off your TV, then turn it on again.

Maintenance

Cleaning

- Clean your TV with a soft, dry cloth. If surfaces are extremely dirty, use a soft cloth dampened with a weak detergent solution.
- Use an eyeglass cleaner to clean the screen. Never use alcohol, paint thinner, or benzene.
- Before using a chemically treated cloth, read the instructions that came with the cloth.

Specifications

Design and specifications are subject to change without notice.
Dimensions and weight are approximate.

TV type	LCD
TV panel	24-inch TFT LCD
TV system	NTSC-M, ATSC
Channels	VHF: 2 - 13 UHF: 14 - 69 CATV: 1 - 125 CADTV: 1-135 DTV: 2 - 69
Audio multiplex	BTSC system
Audio output	3W × 2
Power requirement	AC 120 V, 60 Hz
Power consumption	65 W
Dimensions	24.04 x 18.11 x 8.27 inches (611 x 460 x 210 mm)
Weight	13.7 lbs. (6.2 kg)

Input terminals	Composite video/left and right audio (2) S-Video (1) Component video/left and right audio (1) HDMI (2) VGA/audio (1) Antenna (1)
Output terminals	Headphone jack (1) Left and right audio (1) Digital audio (1)
Control terminals	Service Port (1)

Legal notices

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Canada ICES-003 statement

This Class B digital apparatus complies with Canadian ICES-003.
Standard Television Receiving Apparatus — Appareil de réception télévision ordinaire, Canada BETS-7 / NTMR-7

Notices

Specifications and features are subject to change without notice or obligation.

For service and support call (800) 305-2204.

One-year limited warranty

US and Canada Markets

Definitions:

Dynex Products ("Dynex") warrants to you, the original purchaser of this new Dynex-branded television ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period"). For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy or Future Shop authorized dealer of Dynex brand products only that are packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Dynex repair center or store personnel, Dynex will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Dynex and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Dynex Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy or Future Shop retail store location and your television Product has a screen size of less than 37 inches, please take your original receipt and the Product to any Best Buy or Future Shop store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy or Future Shop online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. To obtain in-home warranty service for a television with a screen 37 inches or larger, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY for Future Shop call 1-800-663-2275. Call agents will diagnose and correct the issue over the phone or will have a Dynex-approved repair technician dispatched to your home.

Where is the warranty valid?

This warranty is valid only to the original purchaser of the product in the United States and Canada at Best Buy or Future Shop branded retail stores or websites.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as power surges
- Accident(s)
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Plasma display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Dynex to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. DYNEX SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. DYNEX PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Dynex:

For customer service please call 1-800-305-2204

www.Dynexproducts.com

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645

© 2010 BBY Solutions, Inc.

All rights reserved. DYNEX is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

Mexico Market

{RETAILER SEAL}

PLACE STICKER OF PRODUCT MAKE & MODEL HERE

DATE OF PURCHASE: _____

Definitions:

Dynex Products ("Dynex") warrants to you, the original purchaser of this new Dynex-branded television ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period"). For this warranty to apply, your Product must be purchased in Mexico from a Best Buy authorized dealer of Dynex brand products only that are packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Dynex repair center or store personnel, Dynex will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Dynex and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Dynex Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location and your television Product has a screen size of less than 37 inches, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain in-home warranty service for a television with a screen 37 inches or larger, in Mexico call 01 800-433-5778. Call agents will diagnose and correct the issue over the phone or will have a Dynex-approved repair technician dispatched to your home.

Where is the warranty valid?

This warranty is valid only to the original purchaser of the product in Mexico at a Best Buy branded retail stores or website.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as power surges
- Accident(s)
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Plasma display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Dynex to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. DYNEX SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. DYNEX PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Dynex:

For service, please call 01 800-926-3020

www.dynexproducts.com

Distributed by Best Buy Imports, S. de R.L. de C.V.

Av. Santa Fe 485, Segundo Piso,

Colonia Cruz Manca,

Programa Parcial de Desarrollo Santa Fe,

Delegación Cuajimalpa, Distrito

Federal, México 05349

RFC#BBIO802114Q2

© 2010 BBY Solutions, Inc.

All rights reserved. DYNEX is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.



If the power cord has been damaged, it should be replaced by the manufacturer, your service provider or qualified personnel to avoid risks.

Si el cordón de alimentación es dañado, este debe ser remplazado por el fabricante o su agente de servicio o por personal calificado para evitar el riesgo.

www.dynexproducts.com

US and Canada Market - (800) 305-2204

Mexico Market - 01 800-926-3020

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave. South, Richfield, MN 55423 U.S.A.

© 2010 BBY Solutions, Inc. All rights reserved.

DYNEX is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

Best Buy Imports, S. de R.L. de C.V. Av. Santa Fe 485, Segundo Piso, Colonia Cruz Manca, Programa Parcial de Desarrollo Santa Fe, Delegación Cuajimalpa, Distrito Federal, México 05349

RFC#BBI0802114Q2

10-0348
ENGLISH

Se incluye el manual. Favor de leer este manual antes de usar el producto.

Para el Soporte técnico de Dynex en México,

favor llame al: 01 800-926-3020 <http://www.dynexproducts.com>