

**ENVISION**  
by **AOC**

# User's Manual

— LCD TV





**L32W761**

**ENVISION**  
by **AOC**

Owner's Manual

TABLE OF CONTENTS .....	2
FOR YOUR SAFETY .....	3
PRECAUTIONS AND REMINDERS .....	4
IMPORTANT SAFETY INSTRUCTIONS .....	6
PREPARATION .....	8
PERIPHERAL CONNECTION GUIDE .....	10
OPERATING INSTRUCTIONS .....	12
TO USE THE FRONT PANEL CONTROL .....	12
TO USE THE REMOTE CONTROL .....	13
TO USE THE MENUS .....	14
SETUP MENU .....	14
VIDEO MENU .....	15
AUDIO MENU .....	16
FEATURE MENU .....	17
TIPS .....	21
PRODUCT SPECIFICATION .....	22
BEFORE CALLING SERVICE .....	23
GLOSSARY .....	24

SYMBOL	SYMBOL DEFINITION
 SA 1965	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.
 SA 1966	: The exclamation point within on equilateral triangle to alert the User to the presence of important operating and maintenance (servicing) instruction In the literature accompanying the appliance.


Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, Such as vases, Shall be placed on the apparatus.


Caution - Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.


Before operating the TV please read this manual thoroughly. This manual should be retained for future reference.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

- 
1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
  2. Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.
  3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.

  
To prevent fire or shock hazard, do not expose the TV to rain or moisture. Dangerously high voltages are present inside the TV. Do not open the cabinet. Refer servicing to qualified personnel only.

 LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS. FOR MORE INFORMATION, CONTACT THE ELECTRONIC INDUSTRIES ALLIANCE AT [WWW.EIAE.ORG](http://WWW.EIAE.ORG).

Place unit on even surfaces.




Don't place the TV in confined spaces or in a box when using it.


Unplug immediately if is malfunction like no picture, no video/audio, smoke and bad odor from TV.

Unplug immediately if other foreign materials are put inside TV box or if the TV fell down.

Don't throw any object inside the TV box like metals or other flammable materials.

Prohibit/Avoid opening TV cabinet
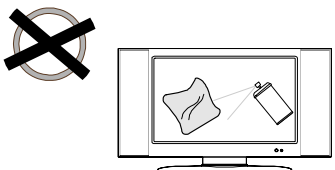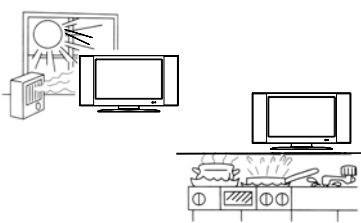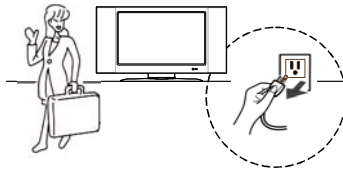
<p>Remember to unplug the AC cord from the AC outlet before cleaning. Do not use liquid cleaners or aerosol cleaners to clean the display.</p> 	<p>Avoid direct sunlight, dusty, high humidity and smoky areas.</p> 
<p>Make sure to unplug the unit when not in use for a long period of time (days).</p> 	<p>Call service personnel to clean the internal part of the TV once a year.</p>
<p>Do not cover or block any vents and openings. Inadequate ventilation may shorten the life of the display unit and cause overheating.</p>	<p>Do not place the display near water, such as bathtub, washbasin, kitchen sink laundry tub, swimming pool or in a damp basement.</p>

 Notice for Remote Controller

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. The TV should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
16. This product may contain lead or mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org)
17. – The appliance should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been damaged; or
  - B. Objects have fallen, or liquid has been spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.

18. – All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinets design.
- Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet, which could ultimately overturn the product.
  - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
19. – The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
20. – An outdoor antenna should be located away from power lines.
21. – If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mats and supporting structure grounding of the lead-in wire to an antenna-discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See Figure below.



#### EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

Note to the CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

 
Please, make sure to connect the power plug to the wall outlet socket after connecting the TV to the adapter!

22. – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.




Please, make sure to connect the power plug to the wall outlet socket after connecting the TV to the power cord!

1.

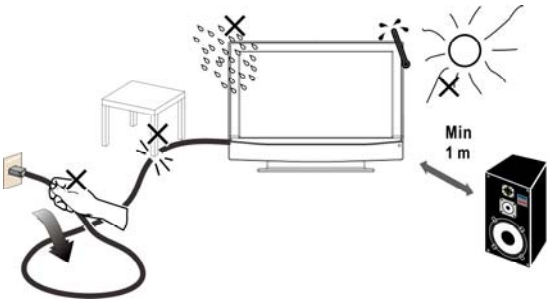


Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover. To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed on or in the vicinity. Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing.

 
2. Connect the antenna cable or CATV cable to the aerial socket at the back of the TV set.


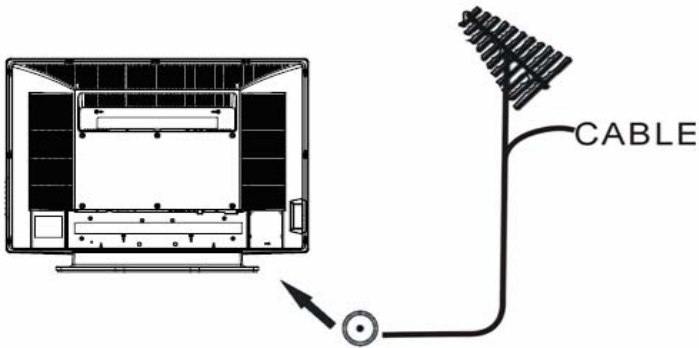


 3. Remove the cover of the battery compartment. Insert the 2 batteries supplied (Type AAA 1.5V).

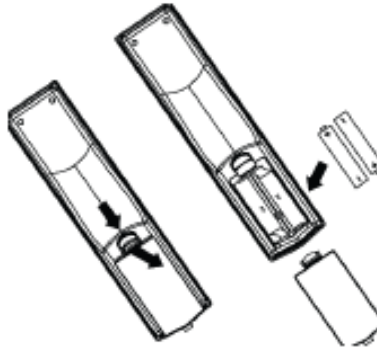

   
4. Insert the power cord in the wall socket having an AC power supply. You can see LED states at the front panel. If the LED color is Green, means the TV set is power on. If the LED color is Orange, which means this TV set is in standby state.
5. Push the POWER key on the Remote control or the Front panel control knobs. Wait a minute, the TV will power on and can see the display on the screen

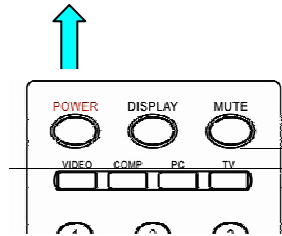

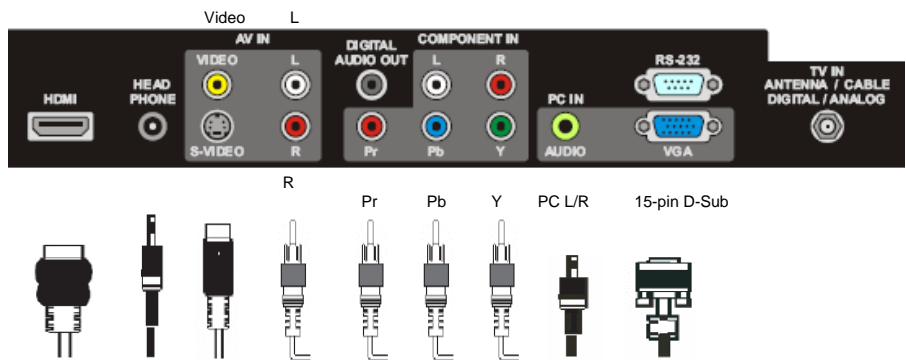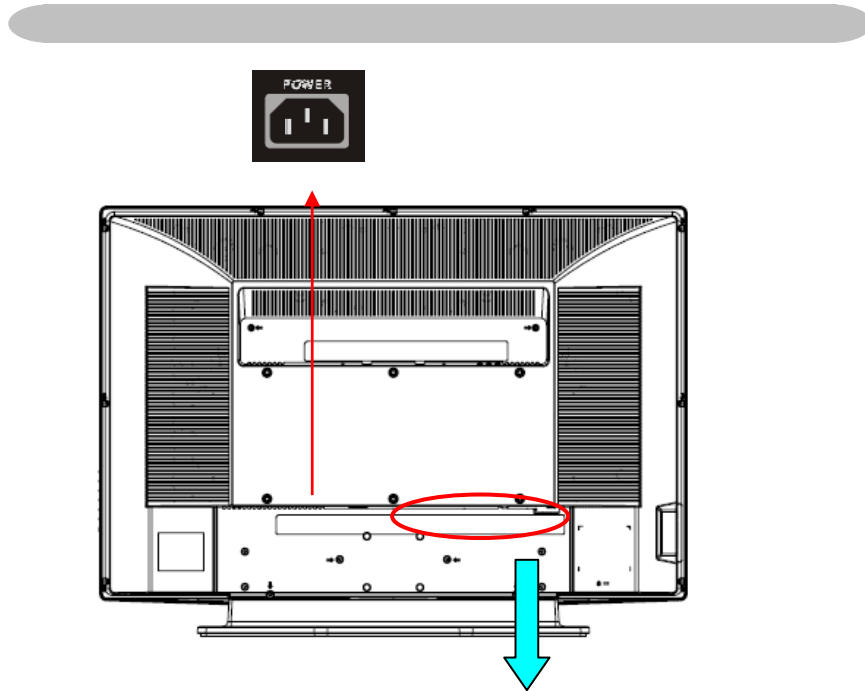

Once your equipment is connected, use the following procedure to view the input signal:  
 Press the source button on the remote controller to select the relevant source to view. (ex: Press VIDEO button to select "Composite Rear" if you have connected a video recorder to Composite Rear socket.)

 Note: The MUTE key on the remote control works on both TV internal speaker and the earphone output.

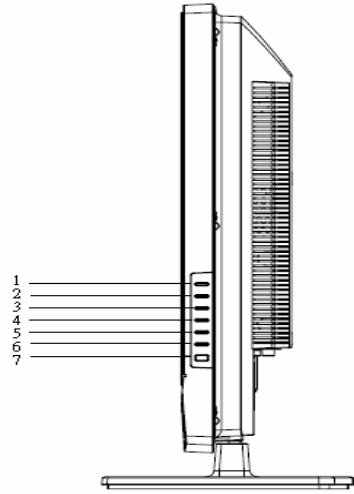

1	▲	
2		
3	▲	
4		
5		
6	INPUT	
7	POWER	

Press to power ON/OFF (standby) TV. (Note: 1. TV is never completely power off, unless physically unplugged. 2. Press to turn on TV after the power on status LED had changed to the amber color and stopped flashing. )

Press repeatedly to choose S-Video/ Composite source mode (Video 1 ~ 4)

Press repeatedly to choose Component source mode (Video 5 ~ 6).

Press repeatedly to choose VGA or HDMI source mode (Video 7 ~ 9).

Press to choose ATSC/NTSC TV source mode.

Press to enter TV channel number to select channel (Press  $\uparrow$  to indicate choosing the sub-channel).

Press to set a time period (off/30min/60min/90min) after which the TV should switch itself to standby mode.

 
Press to freeze the displayed picture

Press + or - to adjust the volume.

Press to open or exit menu.

< >

Press to adjust the various function items on the menu.

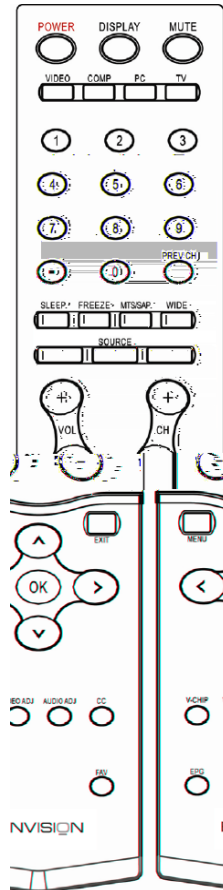

Press to show the information about the input source, TV channel, display resolution and current time.

Press to set TV sound mute ON/OFF

Press to display the previous TV .

Press to activate the NTSC TV sounds, such as: Stereo, SAP or Mono tone.

Press to choose the display aspect as: Normal, Wide, Zoom or Cinema mode.

Press repeatedly to choose the various input sources (Video 1 ~ 9).

Press + or - to browse through the TV channels.

Press to exit menu or OSD.

Press to choose the Brightness or Contrast adjustment.

Press to switch the ATSC multi-channel TV sounds.

Press repeatedly to change the closed caption type as CC1/CC2/CC3/CC4/TEXT1/TEXT2/TEXT3/TEXT4/Off.

Press to show the information the same as "DISPLAY" key.

 
Press to lock / unlock Parental Control temporarily. (After setting the restricted table of MPAA or TV Rating.)

1. Press the  button to display the main menu
2. Use the  /  to select a menu item.
3. Use the  /  to enter a submenu.
4. Press the  button to enable/disable the function.
5. Press the  or  button to exit the menu.


Press the MENU button to enter the main OSD (On Screen Display). Adjust the items including  ,  ,  and  . However, some function items in the menus may only be enabled in the particular source modes.



The Setup menu in TV mode shows as below. In others source modes, the Setup menu only shows  and  items.

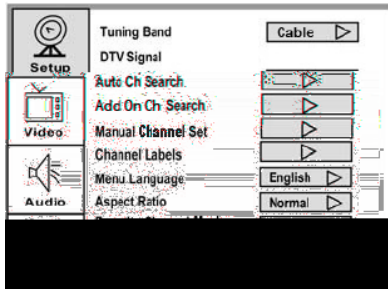

 1.  : Select TV source signal from the Air (antenna) or Cable (CATV).
2.  : Show the intensity of the received DTV signal.




3.  : Automatically scan all NTSC / ATSC TV channels and then store in the channel table. In channel scan process, the OSD can display the number of channels which had been found.
4.  Add channels which are new found.
5.  : Show the channel setup table. User can choose to display the ATSC or NTSC TV channels and then edit (add/delete) the channel numbers.
6.  : Show the NTSC / ATSC TV channel label menu for user modifying channel labels specifically.

7. : Select the menu display language. (English / Espanol / Francais)
8. : Select the display aspect ratio. (Normal/Zoom/Wide/Cinema)
9. : When favorite channel mode on user can edit favorite channel table in favorite channel set option.




 The Video menu in most source modes shows as below. It provides several video adjustment items for user fine tuning the video display. Only in VGA source modes, the Video menu simply provides , , and items.

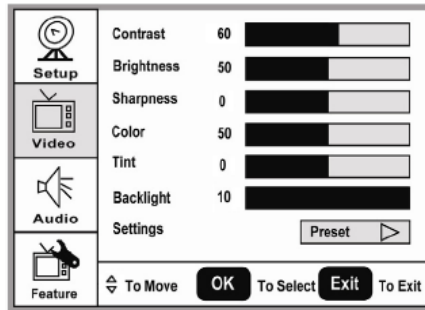

1. : Video contrast adjustment, the tuning range is 0 ~ 100.
2. : Video brightness adjustment, the tuning range is 0 ~ 100.
3. : Video sharpness adjustment, the tuning range is -50 ~ 50.
4. : Video color chroma adjustment, the tuning range is 0 ~ 100.
5. : Video tint adjustment, the tuning range is R50 ~ G50.
6. : Backlight strength adjustment, the tuning range is 0 ~ 10.
7. : Restore the default video settings.

 The Audio menu in TV mode shows as below. It provides audio adjustment for user to modify the audio setting. Except in ATSC TV mode, some audio adjustment items for user to modify the audio setting. Excepting in ATSC TV mode, the option is disable in others source modes. The audio language setting is only available in ATSC TV source.

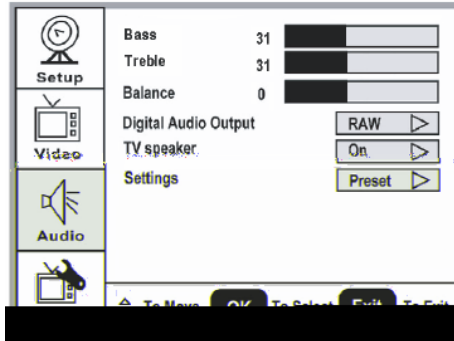


1. Bass : Bass tone adjustment, the tuning range is 0 ~ 63. (The default state is enabled)
2. Treble : Treble tone adjustment, the tuning range is 0 ~ 63. (The default state is enabled)
3. Balance : Audio balance adjustment, the tuning range is L31 ~ R31.)
4. Digital Audio Output : Digital audio output format selection, user can choose RAW (default) or PCM format or off.
5. TV speaker : Choose to turn on / off the TV internal speaker. The digital audio output signals \ earphone output signals will not be turn-off even though the TV speaker is off. The default setting is On.
6. Settings : Restore the default audio settings.






 The Feature menu in TV mode shows as below. It provides certain optional control functions such as time set, sleep timer, advanced video menu, Password Set, parental control (V-chip) and Digital closed caption setting. This menu gives users the most flexibilities to satisfy their generally demands. According to the various requirements in different source modes, certain features should be hidden (disable) on the menu. The details footnotes will be described clearly below.

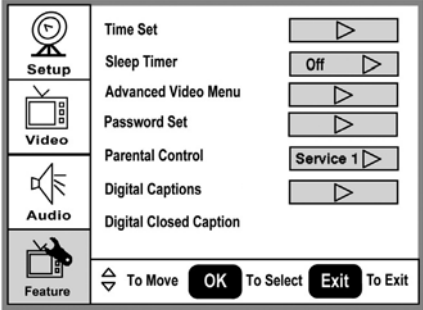

 1. **Time Set** : Set current time. This sub-menu includes Time Set Mode , Time Set Mode and Time Zone items. 【Time Set Mode】 user can choose Auto or Manual, 【Time Zone】 item provides user to set current time zone, such as: Pacific 、Alaska 、Hawaii 、Eastern 、Central and Mountain. 【Time】 item provides user to set the time clock.

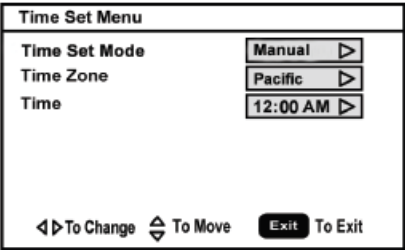

2. **Sleep Timer** : Enable or disable the TV standby timer. User can set the TV standby timer as off / 5 min / 10 min / 15 min/ 30 min / 45 min / 60 min/ 90 min / 120 min / 180min/ 240min. Timer starts to count down after cursor leaving the sub-menu. (At the moment, the item shows 『 \*\* min Left 』 and the cursor highlights on the Feature icon.)
3. **Advanced Video Menu** : Provide the Noise Reduction 、Color Temperature and 3D Y/C. Dynamic Contrast options for enhancing video quality.

【Noise Reduction】 gives four NR effect degrees, such as: Low 、 Mid 、 High and Off. The default setting is Mid.

 
【Colour Temp】 gives three color temperature modes as: Normal 、 Warm and Cool. The default mode is Warm.

【3D Y/C】 provides On / Off switches. The default setting is On.


【 】 user can choose On or Off.


【Setting】 restores the default advanced video option settings.

4. : Change the 4-numeral parental control password. Three steps are required for changing the password: Enter Old Password -> Enter New Password -> Confirm New Password. Note: This item is only available in TV, Composite and S-Video source modes. The default password is 『0 0 0 0』 .

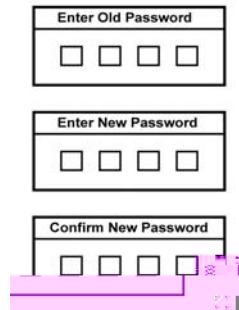


  5. : provide the parental Control (V-chip) function setting. Before entering the Parental Control sub-menu, user has to key in the password first. Then enter the Parental Lock item, User can modify the restricted table about MPAA or TV Rating respectively. While exiting the sub-menu, the parental control function is working. The inhibitive channels or source signals can be un-lock through pressing the V-CHIP key on the remote control and then key in the correct password. Note: This feature is only available in TV, Composite and S-Video source modes. (The default password is: 0 0 0 0.)

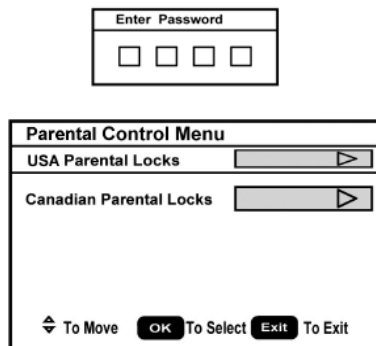

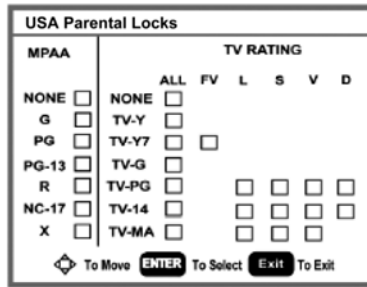

 6. s: Select the close caption options ( Service 1-6, Text 1-4 and CC 1-4) in digital TV mode. When select service 1 to service 6 you can modulate parameters in the Digital Close Caption.
7. : Provide numerous options for setting the digital close caption style. In the sub-menu. **【Style】** item can be set as Automatic or Custom mode. If Custom mode is selected, user can modify the detail styles described below. The setting result will be shown immediately on the bottom side of the sub-menu OSD. Note: This feature is only available in Digital TV(ATSC) mode.

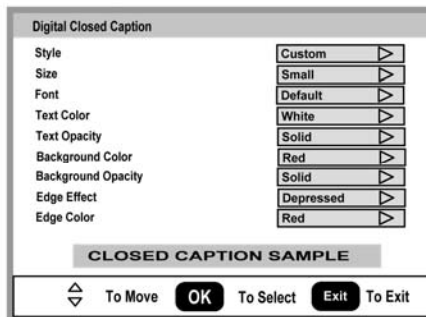


- 【Size】** : Digital close caption font size, which can be set as Small · Normal or Large.
- 【Font】** : Digital close caption font style, which can be chosen as Default or Font 1 ~ 7.
- 【Text Color】** : Giving Red / Green / Blue/ Yellow / Magenta / Cyan / Black / White Colors.
- 【Text Opacity】** : Giving Transparent / Translucent / Solid / Flashing modes.
- 【Background Color】** : Giving Red / Green / Blue / Yellow / Magenta / Cyan / Black / White Colors.
- 【Background Opacity】** : Giving Transparent / Translucent / Solid / Flashing modes.


【Edge Effect】 : The text edge effects, which gives None / Raised / Depressed / Uniform / Left Shadow / Right Shadow modes.

【Edge Color】 : The colors of text edge effects, which provides Red / Green / Blue / Yellow / Magenta / Cyan / Black / White Colors.

 8. : This option only shows and is available in component mode, which provides fine tuning component display, such as: 【H-Position】、【V-Position】、【Clock】、【Phase】 and 【Auto Adjust】. All these items are giving the tuning range from 0 to 100. 【Setting】 item provides the default component setting values restoring.

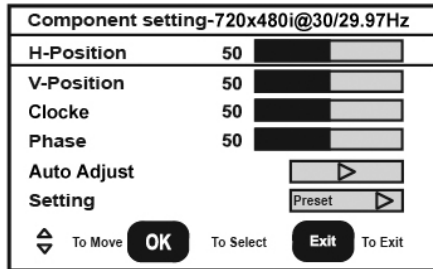

 9. : This option only shows and is available in VGA mode, which provides several items for the VGA display fine tuning, such as : 【H-Position】、【V-Position】、【Clock】 and 【Phase】. All these items giving the tuning range from 0 to 100. 【Setting】 item provides the default VGA setting values restoring.

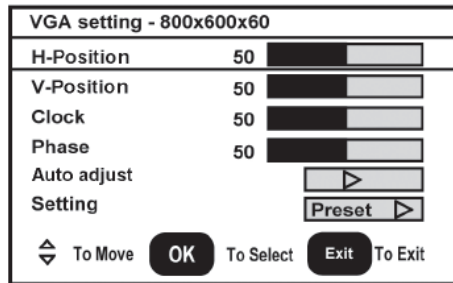

Do not rub or strike the screen with anything hard as this may scratch, mar, or damage the screen permanently.

Unplug the power cord before cleaning the screen. Dust the TV by wiping the screen and the cabinet with a soft, clean cloth. If the screen requires additional cleaning, use a clean, damp cloth. Do not use liquid cleaners or aerosol cleaners.

To avoid disturbances in picture and sound, malfunctioning of your TV or even damage to the TV, keep away your mobile telephone from the TV.

We are paying a lot of attention to produce environmentally friendly in green focal areas. Your new receiver contains materials, which can be recycled and reused.

At the end of its life specialized companies can dismantle the discarded receiver to concentrate the reusable materials and to minimize the amount of materials to be disposed of.

Please ensure you dispose of your old receiver according to local regulations.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the TV.
- Connect the equipment into wall power outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Norcent Technology Inc. may void the user's authority to operate the equipment.

Connections to this device must be made with shielded cables with metallic RF/EMI connector hoods to maintain compliance with FCC Rules and Regulations.

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du règlement sur le matériel brouilleur du Canada.

NOTE:

\*This model complies with the specifications listed below.

\*Designs and specifications are subject to change without notice.

\*This model may not be compatible with features and/or specifications that may be added in the future.


\*32" LCD TV (31.5" viewable) Viewable image size: diagonal 800mm

NTSC standard ATSC standard (8-VSB, Clear-QAM)	HDMI INPUT: Rear HDMI x1 HDCP compliant E-EDID compliant Supported scan rates: 1080i, 720p, 480p, 480i
VHF: 2 through 13 UHF: 14 through 69 Cable TV: Mild band (A-8 through A-1, A through I) Super band (J through W) Hyper band (AA through ZZ, AAA, BBB) Ultra band (65 through 94, 100 through 125)	VGA INPUT: Rear VGA (D-SUB 15 Pin) Input x1 E-EDID compliant Supported scan rates: 640X480 /60Hz 800x600 /60Hz 1024X768 /60Hz 1360X768 /60Hz Recommended: 1360X768 /60Hz Audio INPUT: Headphone Mini-jack for stereo (3.5Φ)
AC power supply: 100V~240 V, 50/60 Hz	AUDIO: 150 mV(rms)
≤ 180 W 1 W in standby mode (power cord plugged in and power OFF)	Include Stand: 805.9 mm(W) x 604.95 mm(H) x 239.27mm(L)
5 W + 5 W, Internal Speaker	13.9 kg(With Stand)
Rear AV x1: S-Video/Video/Audio Input	400x200mm (Wall mount kit is not included)
Y : 1 V(p-p), 75 ohm, negative sync. C : 0.286 V(p-p) (burst signal), 75 ohm	1pcs Power cord 1pcs Remote control (with two size AA alkaline batteries)
VIDEO: 1 V(p-p), 75 ohm, negative sync. AUDIO: 150 mV(rms)	1pcs User manual 1pcs Audio cable 1pcs signal cable
Rear Component x1: Y : 1V(p-p), 75 ohm, including sync. Pr/Cr: ±0.35V(p-p), 75 ohm Pb/Cb: ±0.35V(p-p), 75 ohm AUDIO: 150 mV(rms) Supported resolutions:1080i, 720p, 480p, 480i	

Please make these simple checks before calling service. These tips may save you time and money since charges for receiver installation and adjustments of customer controls are not covered under your warranty.

Symptoms	Items to Check and Actions to follow
"Ghost " or double image	*This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.
No power	*Check that the TV's AC power cord is plugged into the mains socket. *Unplug the TV, wait for 60 seconds. Then re-insert plug into the mains socket and turn on the TV again.
No picture	*Check antenna connections at the rear of the TV to see if it is properly connected to the TV. *Possible broadcast station trouble. Try another channel. *Adjust the contrast and brightness settings. *Check the Closed Captions control. Some TEXT modes could block the screen,
Good picture but no sound	*Increase the VOLUME. *Check that the TV is not muted; press the MUTE button on the remote control.
Good sound but poor color	*Adjust the contrast, color and brightness settings.
Poor picture	*Sometimes, poor picture quality occurs when having activated an S-VHS camera or camcorder connected and having connected another peripheral at the same time. In this case switch off one of the other peripherals
Snowy picture and noise	*Check the antenna connection
Horizontal dotted line	*This may be caused by electrical interference (e.g. hairdryer, nearby neon lights, etc.) *Turn off the equipment.
Television not responding to remote control	*Check whether the batteries are working. Replace if necessary *Clean the remote control sensor lens on the TV. *You can still use the buttons at the front of your TV. *Select the TV mode to be sure your remote control is in the TV mode.





Located on the rear and the front of the receiver these connectors (RCA phono type plug) are used for the input of audio and video signals. Designed for use with VCRs (or other accessories) in order to receive higher picture resolution and offer sound connection options.

An on-screen listing of features shown on the TV screen is made available for user adjustments.

Motion Picture Association of America

The broadcasting standard, which allows stereo sounds to be transmitted with the TV picture.

 
The procedure of adding or deleting channel numbers into the TV's memory. In this way the TV remembers only the locally available or desired channel numbers and skips over any unwanted channel numbers.

Radio Frequency or modulated signal design used as the carrier for television broadcasts.

Another or additional audio channel provided for in the Multichannel Television Sound (MTS) broadcast standard. A monaural soundtrack included within the recorded or video signal (usually containing a second language translation for the displayed program).

You can set a time period for which the TV will automatically turn itself off.

You can connect your TV set to a high-resolution video source (such as Super VHS video-cassette recorder, Laser Disc player and DVD Home Theater Set) in order to provide maximum consumer viewing satisfaction.

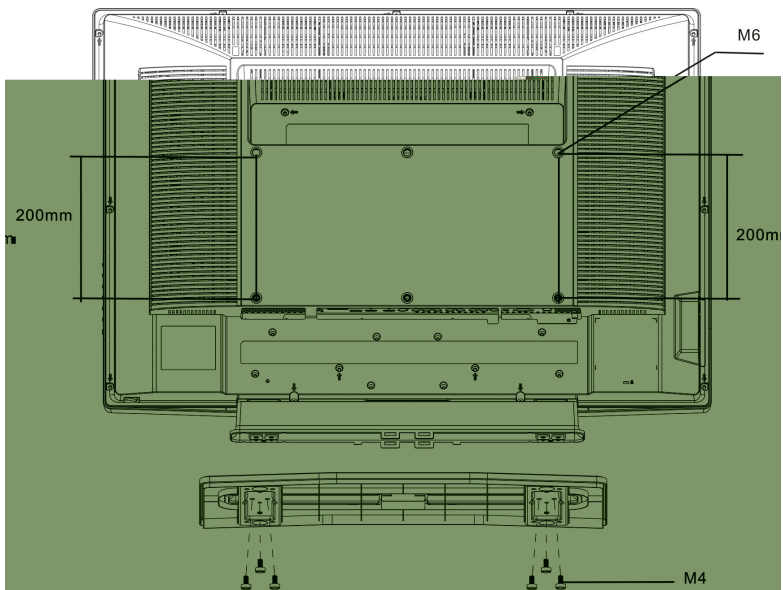

### Use of Wall Mount Bracket

1. Remove the M4 screws from the base.
2. Fasten M6 screws to secure the wall mount bracket.

## MOUNTING THE TV BASE

The TV base will be separated with the TV unit. You should install the base before you use the TV unit.

1. Place the TV on its face on a soft blanket.
2. Install the base stand with three screws.
3. Place the TV on the table.

