 



# **USER'S MANUAL**

## **Full HD ATSC LCD TV**

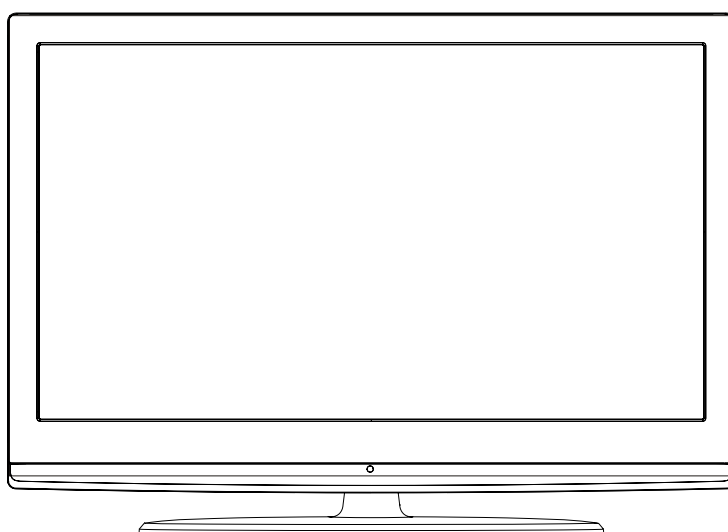

Please read this manual carefully before using this TV set and keep it for future reference.

 	<b>CAUTION</b> RISK ELECTRIC SHOCK DO NOT OPEN	
<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

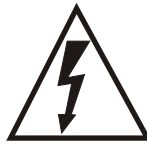

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**CAUTION:** TO PREVENT ELECTRIC SHOCK DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

**CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

## Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ Apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 16) The mains plug or appliance inlet is used as the disconnect device, remain it readily operable during the apparatus normal use.



Class I apparatus shall be connected to a mains socket outlet with a protective earthing connection.

# SAVE THESE INSTRUCTIONS

Thank you for purchasing the product. This easy-to-use manual will guide you in getting the best use of your product. Remember to record the model and serial number. They are on label in back of the unit.

---

Model number

---

serial number

---

Date of purchase

Staple your receipt to your manual. **You will need it to obtain warranty service.**

 
# Contents

Warning . . . . .	2	<b>Video Menu</b>	
Safety Instructions . . . . .	3	How to select picture mode . . . . .	21
<b>Introduction</b>		How to customize your own picture status . . . . .	21
Controls . . . . .	6	VGA Set . . . . .	22
Connection Options . . . . .	7	<b>Audio Menu</b>	
Universal Remote control . . . . .	8	How to select audio mode . . . . .	23
<b>Installation</b>		How to customize your own audio status . . . . .	23
Accessories . . . . .	9	SAP Broadcasts Setup . . . . .	23
Antenna Connection . . . . .	9	<b>Function Menu</b>	
Connecting a VCR . . . . .	10	Menu Language . . . . .	24
External A/V Source Setup . . . . .	11	OSD Timeout . . . . .	24
Connecting a DVD player . . . . .	11	OSD Transparency . . . . .	24
Connecting a Digital Set-up Box . . . . .	12	Screen Mode . . . . .	24
Connecting digital audio output . . . . .	12	Blue Screen . . . . .	25
Connecting a computer . . . . .	13	DPMS . . . . .	25
Monitor Out Setup . . . . .	14	Time zone setting . . . . .	25
HDMI and DVI input . . . . .	14	Date /Time setting . . . . .	25
Cable sample . . . . .	15	Sleep Timer setting . . . . .	26
Connecting Headphones . . . . .	16	DTV Caption Style . . . . .	26
Power source . . . . .	16	<b>Lock Menu</b>	
Removing the tablestand and installing a wall mount bracket . . . . .	17	Parental Control rating and categories . . . . .	27
<b>Operation</b>		Lock setup . . . . .	28
Switching On/Off the TV set . . . . .	18	<b>Other Functions</b>	
Choose the Menu Language . . . . .	18	Brief Info . . . . .	30
Choose the input source . . . . .	18	Using the Guide . . . . .	30
<b>Channel Menu</b>		Quick program view . . . . .	31
Channel Scan . . . . .	19	CC (Closed Caption Display) . . . . .	31
Channel Skip . . . . .	19	<b>Remote Control</b>	
Adding your favorite channels to the favorite channels list . . . . .	20	Setting up your remote control . . . . .	32
Select the desired program . . . . .	20	Remote Control Codes . . . . .	34
Select the desired sound . . . . .	20	<b>Maintenance</b> . . . . .	38
Mute . . . . .	20	<b>Product Specification</b> . . . . .	39
		<b>Troubleshooting</b> . . . . .	40
		<b>Warranty</b> . . . . .	41

# Controls

This is a simplified representation of front panel.  
Here shown may be somewhat different from your TV.


## Front panel controls

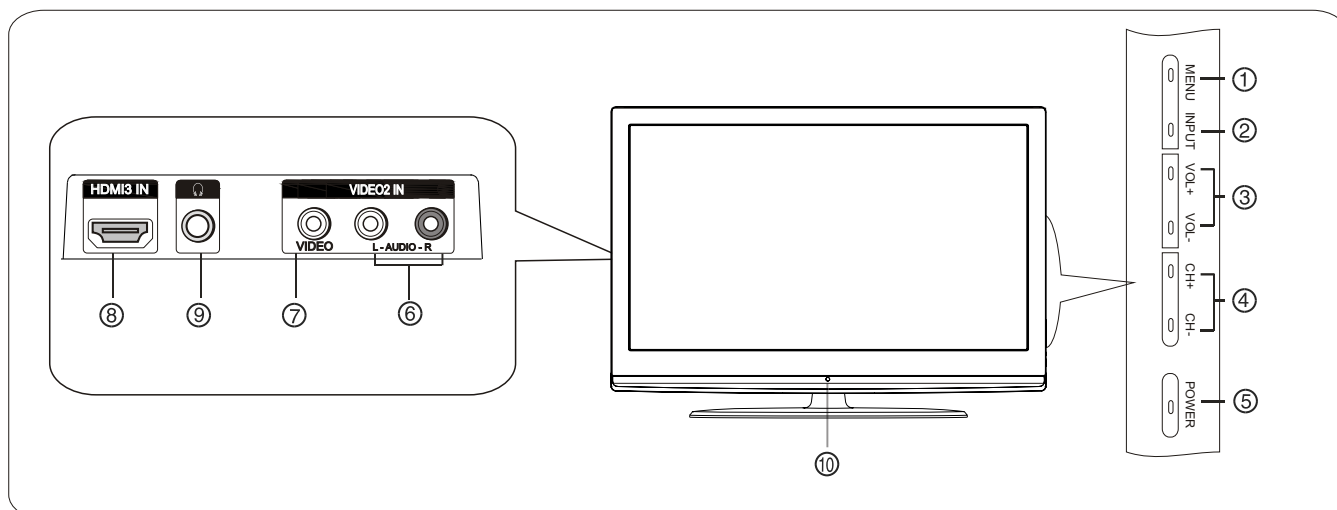

1. **MENU**: Menu display.
2. **INPUT**: Press to open the input source mode. In the **MENU/INPUT** screen, these buttons serve as **OK** button.
3. **VOL +/-**: Press to adjust the volume. In the **MENU** screen, these buttons serve as left/right buttons.
4. **CH +/-**: Press to scan through channels. To scan quickly through channels, press and hold down either +/- . In the **MENU** screen, these buttons serve as up/down buttons.
5. **POWER**: Press to turn on and off the TV.
6. **AV2 AUDIO IN**: Connect the audio L/R cables from the video signal source to these jacks.
7. **AV2 VIDEO IN**: Connects the composite video cable from an external signal source to this jack.
8. **HDMI3 IN**: Connect a signal from an external device to HDMI.
9. **Headphone jack** : Headphone audio output terminal.
10. **Remote Sensor** : Receivers Ir signals from the remote control.  
Do not put anything near the sensor ,as its function may be affected.

# Connection Options
 
## Back panel controls

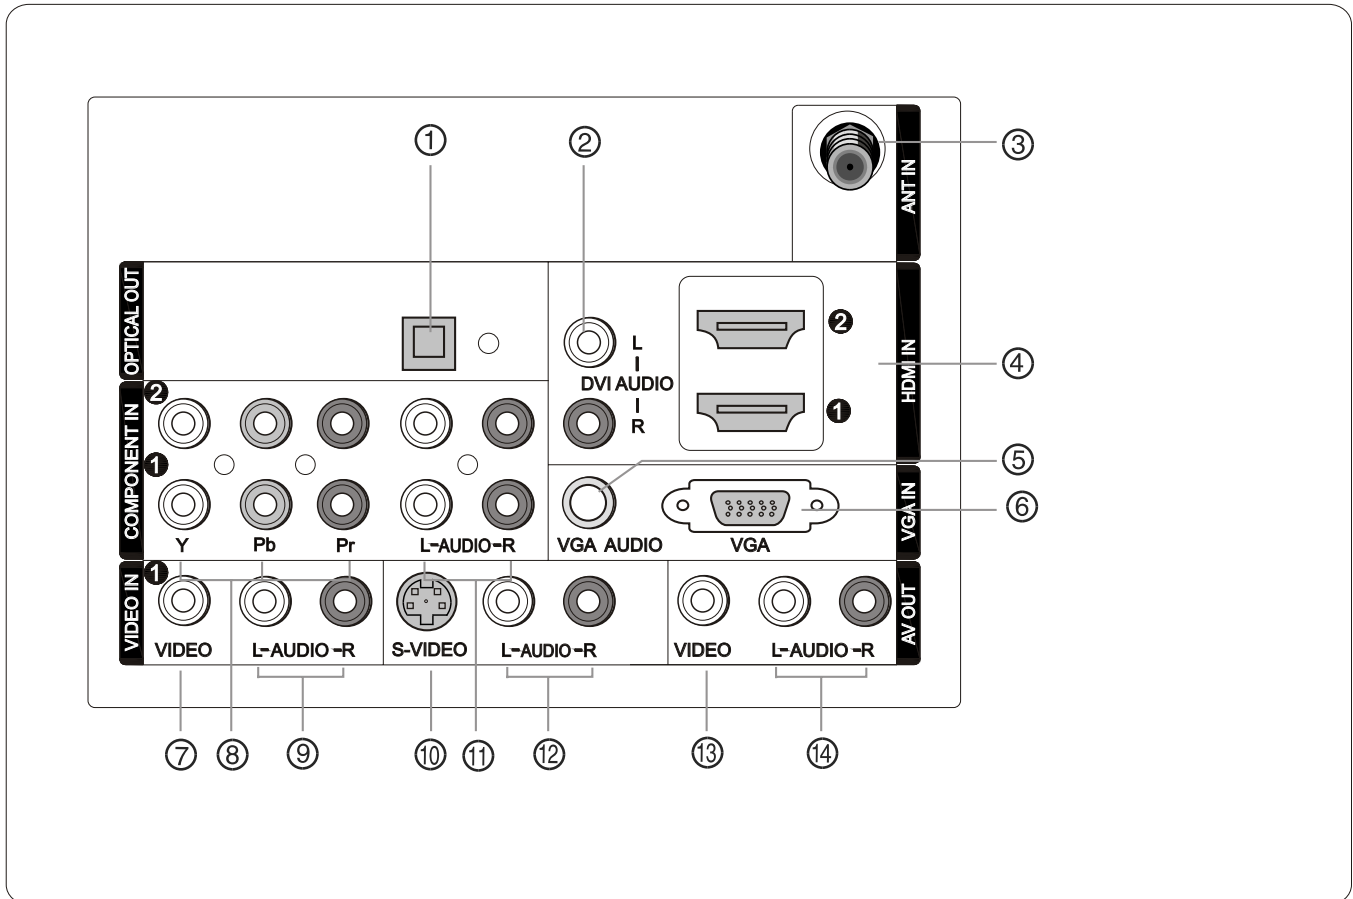


1. **Digital Audio Output:** Connect digital audio from various types of equipment.  
**NOTE:** In standby mode, these ports will not work.
2. **DVI Audio In:** Connect a component video device to these jacks.
3. **Antenna Input:** Connect cable or antenna signals to the TV, either directly or through your cable box.
4. **HDMI In:** Connect a signal to HDMI.
5. **VGA Audio In:** Connect the audio L/R cables from a computer to this jack.
6. **VGA Video In:** Connect a video cable from a computer to this jack.
7. **VIDEO In:** Connects the video signal from a video device.
8. **DVD/DTV In(Component):** Connect a component video device to these jacks.
9. **AUDIO In:** Connect the audio L/R cables from the video signal source to these jacks.
10. **S-VIDEO In:** Connect the S-Video cable from an external signal source to this jacks.
11. **COMPONENT AUDIO In:** Connect the audio L/R cables from the component video signal source to these jacks.
12. **AUDIO In:** Connect the audio L/R cables from the S-Video signal source to these jacks.
13. **VIDEO Out:** Connect the second TV or monitor to the TV's AV OUT.
14. **AUDIO Out:** Connect the audio L/R cables to the second TV's AV IN.

# Universal Remote control

 The remote control cannot be operated unless the batteries are properly loaded.  
When using the remote control, aim it at the remote sensor on the TV.

## Function introduction

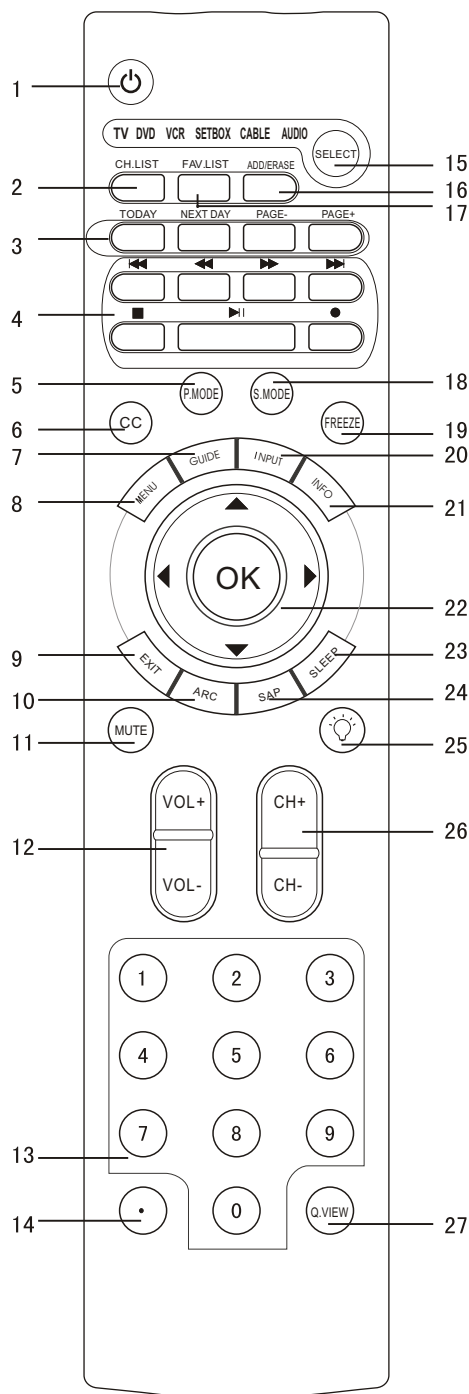

1. **POWER**  
Press to turn on and off the TV.
2. **CH.LIST**  
Open the channel list.
3. **Shortcut Button of Input**
  - **TODAY**: Press to enter TODAY signal;
  - **NEXT DAY**: Press to enter NEXT DAY signal;
  - **PAGE-**: Press to enter PAGE- signal;
  - **PAGE+**: Press to enter PAGE+ signal.
4. **VCR/DVD Functions**  
Control some video cassette recorders or DVD players.  
◀◀◀ Rewind / Fast ◀◀◀ backward / Forward  
■ Stop ▶▶▶ Play/Pause ● REC
5. **P.MODE**  
Press repeatedly to cycle through the available picture modes.
6. **CC(closed caption)**  
Select a closed caption.
7. **GUIDE**  
Press to display the guide when you are watching analog or digital channels.
8. **MENU**  
Press to open the on-screen menu.
9. **EXIT**  
Clears all on-screen displays and returns to TV viewing from any menu.
10. **ARC(Aspect Ratio Control)**  
Press to change the aspect ratio.
11. **MUTE**  
Switches the sound on or off.
12. **VOLUME UP/DOWN**  
Press to adjust the volume.
13. **Number buttons**  
Press to change a channel.
14. **. button**  
Press to select digital channels. For example, to enter "54-3", press "54", "." and "3".
15. **TV DVD VCR SETBOX CABLE AUDIO**  
Press the **SELECT** button repeatedly to select one of the system modes in which the remote control can be used. When the desired device is selected, the corresponding LED lights on 5 seconds.
16. **ADD/ERASE**  
Press to add or erase a favorite program.
17. **FAV.LIST**  
Press to open the favorite channel list.
18. **S.MODE**  
Press to cycle through different sound settings.
19. **FREEZE**  
Press once to display a frozen image of the current program, but audio continues. Press again to return to the program.
20. **INPUT**  
Show the input source mode.
21. **INFO**  
When you watch the TV, press the key, the information display on top of the screen.
22. **THUMBSTICK (Up/Down/Left/Right/OK)**  
Allows you to navigate the on-screen menus and adjust the system settings to your preference.
23. **SLEEP button**  
Press to display the sleep timer option.
24. **SAP**  
Selects MTS sound: Mono, Stereo, and SAP in Analog mode. Change the audio language in DTV mode.
25. **LIGHT**  
Press the light button, white LED will be ON, release this key, white LED will be OFF.
26. **CHANNEL UP/DOWN**  
Press to scan through channels. To scan quickly through channels, press and hold down either +/- .
27. **Q.VIEW**  
Press to jump back and forth between two channels.




# External Equipment Connections

 
## Accessories



Remote control

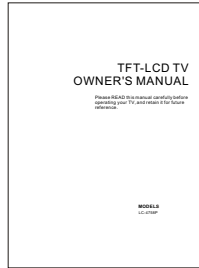



Owner`s manual

 

Alkaline battery(AAA)×2

## Antenna Connection

  Generally speaking, to enjoy a clearer picture, we recommend that you use a CATV system or an outdoor antenna .Over-the-air TV reception quality will depend on your antenna type, antenna location and antenna positioning.

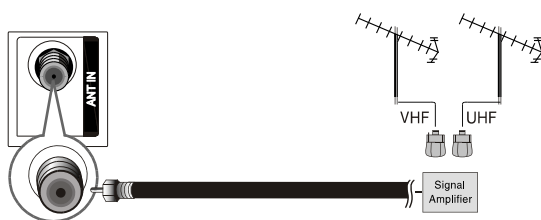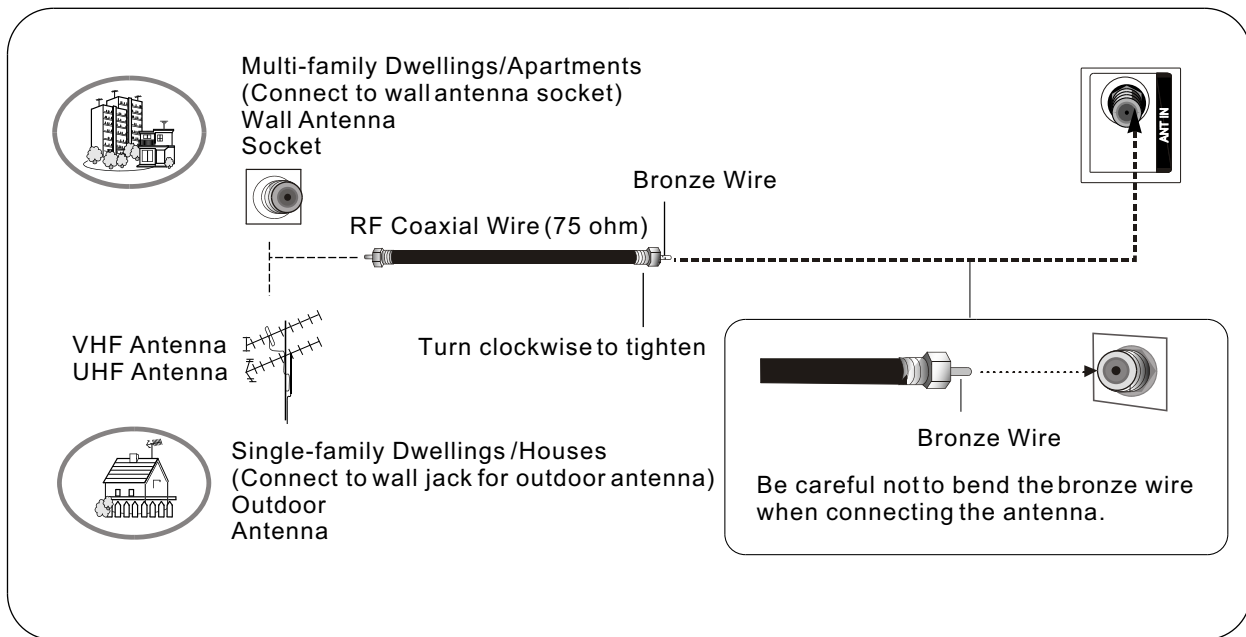

- To improve the picture quality in a poor signal area, please purchase a signal amplifier and install properly.
- If the antenna needs to be split for two TV`s, install a “2-Way Signal Splitter” in the connections.
- To install the antenna properly please contact a professional in your area.

# External Equipment Connections

**NOTE:** All cables shown are not included with the TV.

## Choose Your Connection

There are several ways to connect your television, depending on the components you want to connect and the quality of the signal you want to achieve. The following are examples of some different ways to connect your TV with different input sources.

### Connecting a VCR

To avoid picture noise (interference), leave an adequate distance between the VCR and TV.

#### Connection Option 1

 
Set VCR output switch to channel 3 or 4 and then tune the TV to the same channel number.

#### Connection Option 2

1. Connect the audio and video cables from the VCR's output jacks to the TV input jacks, as shown in the figure. When connecting the TV to VCR, match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red). If you connect a S-VIDEO output from VCR to the S-VIDEO input, the picture quality is improved; compared to connecting a regular VCR to the Video input.

2. Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.)

3. Select the input source with using the INPUT button on the remote control, and then press ▲ / ▼ button to select the source, press OK button to confirm.

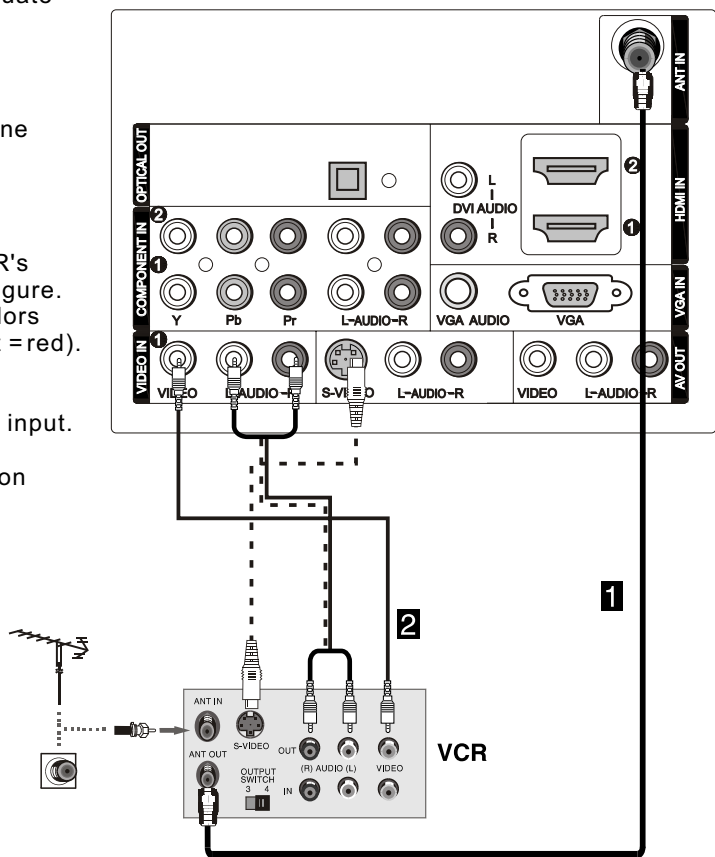

# External Equipment Connections

## External A/V Source Setup

 
### How to connect

Connect the audio and video cables from the external equipment's output jacks to the TV input jacks, as shown in the figure.

When connecting the TV to external equipment, match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red).

### How to use

1. Select the input source with using the INPUT button on the remote control.
2. Press ▲ / ▼ button to select the desired source.
3. Press OK button to confirm.
4. Operate the corresponding external equipment.

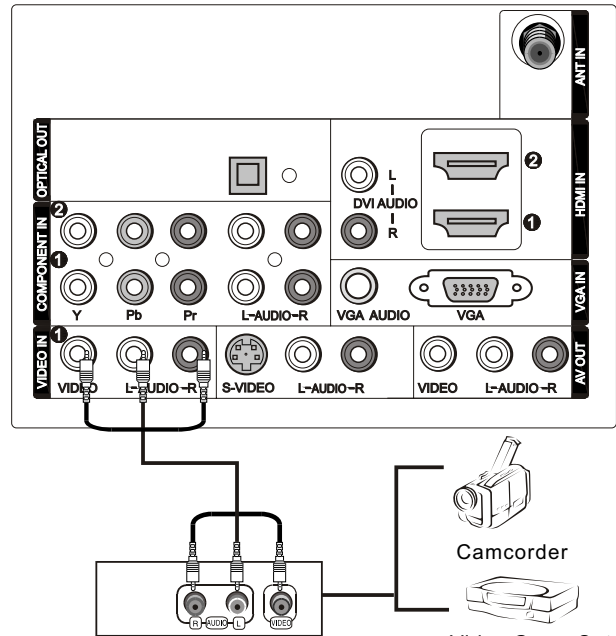

## Connecting a DVD player

### How to connect

1. Connect the DVD video outputs (COMPONENT) to the YPbPr jacks on the TV and connect the DVD audio outputs to the YPbPr Audio IN jacks on the TV, as shown in the figure.
2. If your DVD only has an S-VIDEO output jack, connect this to the S-VIDEO input on the TV, as shown in the figure.

### Note

If your DVD player does not have component video output, use S-Video.

 
### How to use

1. Turn on the DVD player, insert a DVD.
2. Use INPUT button on the remote control to select component mode.
3. Press Play button on external equipment for program play.
4. Refer to the DVD player's manual for operating instructions.

### ■ Component Input ports

To get better picture quality, connect a DVD player to the component input ports as shown below.

Component ports on the TV	Y	Pb	Pr
Video output ports on DVD player	Y	Pb	Pr
	Y	B-Y	R-Y
	Y	Cb	Cr
	Y	P <sub>B</sub>	P <sub>R</sub>

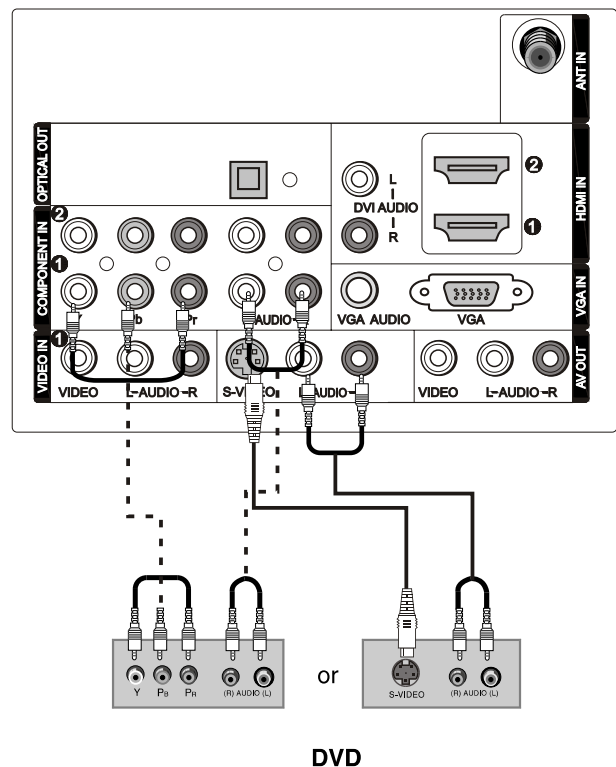

# External Equipment Connections

## Connecting a Digital Set-up Box

This TV can receive Digital Over-the-air/Cable signals without an external digital set-top box. However, if you do receive Digital signals from a digital set-top box or other digital external device, refer to the figure as shown below. This TV supports HDCP (High-bandwidth Digital Contents Protection) protocol for Digital Contents (480p, 720p, 1080i).

 
### How to connect

Use the TV's COMPONENT, VGA or HDMI jack for video connections, depending on your set-top box connector. Then, make the corresponding audio connections.

### How to use

1. Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)
2. Use INPUT on the remote control to select COMPONENT, VGA or HDMI source.

Signal	COMPONENT	HDMI
480i	Yes	Yes
480p	Yes	Yes
720p	Yes	Yes
1080i	Yes	Yes
1080p	Yes	Yes

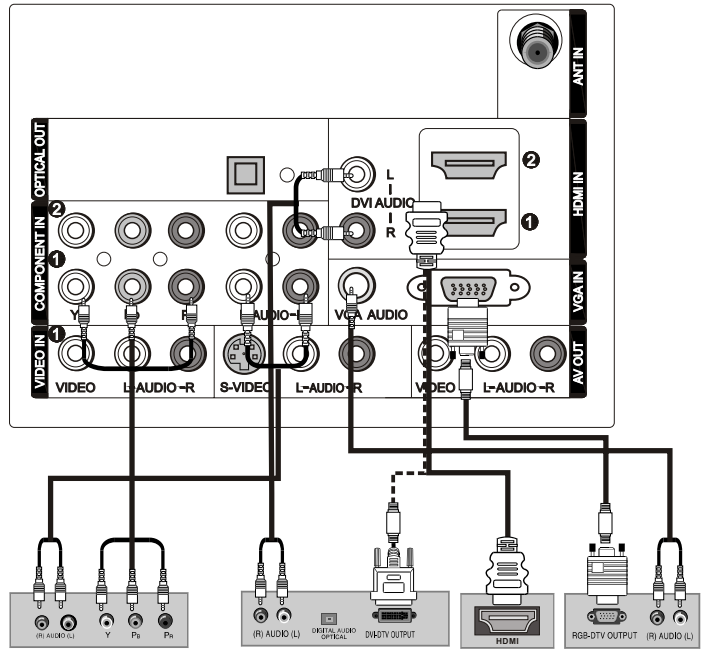

Digital Set-top Box

## Connecting a digital audio output

 
Send the TV's audio to external audio equipment (stereo system) via the Digital Audio Output (Optical) port.

### How to connect

1. Connect one end of an optical cable to the TV Digital Audio (Optical) Output port.
2. Connect the other end of the optical cable to the digital audio (optical) input on the audio equipment. See the external audio equipment instruction manual for operation.

### Note

When connecting with external audio equipments, such as amplifiers or speakers, please turn the TV speakers off.

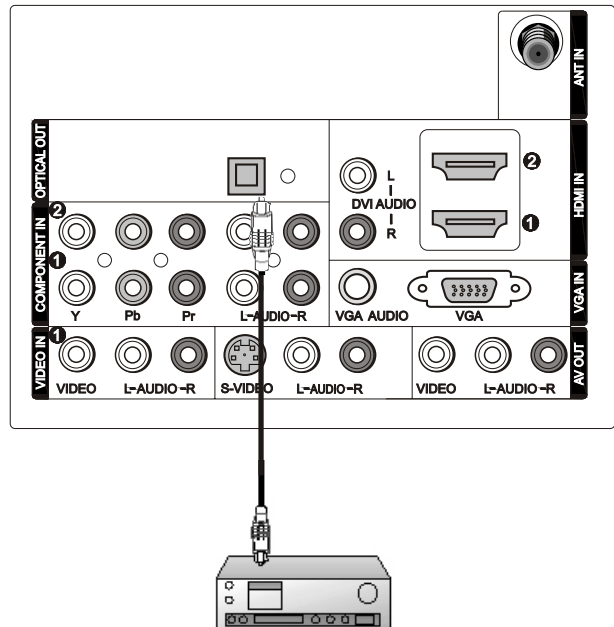

**Caution:** Do not look into the optical output port. Looking at the laser beam may damage your vision.

# External Equipment Connections

## Connecting a computer

### How to connect

1. To get the best picture quality, adjust the VGA graphics card to 1024x768.
2. Use the TV's VGA or DVI (Digital Visual Interface) Audio IN port for audio connections, depending on your computer connector.

■ If the graphic card on the computer does not output analog and digital RGB simultaneously, connect only one of either VGA IN or HDMI IN to display the VGA on the TV.

■ If the graphic card on the computer does output analog and digital RGB simultaneously, set the TV to either VGA or HDMI; (the other mode is set to Plug and Play automatically by the TV.)

3. Then, make the corresponding audio connection. If using a sound card, adjust the VGA sound as required.

### How to use

 
1. Turn on the computer and the TV.
2. Use INPUT on the remote control to select VGA or HDMI source.
3. Check the image on your TV. There may be noise associated with the resolution, vertical pattern, contrast or brightness in VGA mode. If noise is present, change the VGA mode to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the menu until the picture is clear. If the refresh rate of the VGA graphic card cannot be changed, change the VGA graphic card or consult the manufacturer of the VGA graphic card.

### Note

1. Use a DVI cable.
2. Avoid keeping a fixed image on the TV's screen for a long period of time. The fixed image may become permanently imprinted on the screen.
3. The synchronization input form for Horizontal and Vertical frequencies is separate.

### Resolution

Mode	Resolution	Frame frequency (Hz)
VGA	640x480	60Hz
SVGA	800x600	60Hz
		75Hz
XGA	1024x768	60Hz
		75Hz

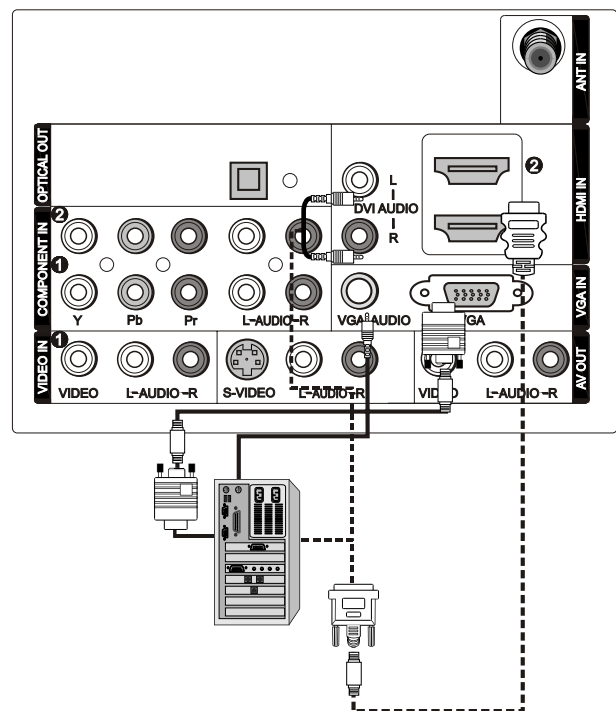

# External Equipment Connections

 
## Monitor Out Setup

Connect the second TV or monitor to the TV's AV OUT. See the Operating Manual of the second TV or monitor for further details regarding that device's input settings.

### Note

YPbPr, PC, HDMI, DTV input sources cannot be used for Monitor out.

When connecting with external audio equipments, such as amplifiers or speakers, please turn the TV speakers off.

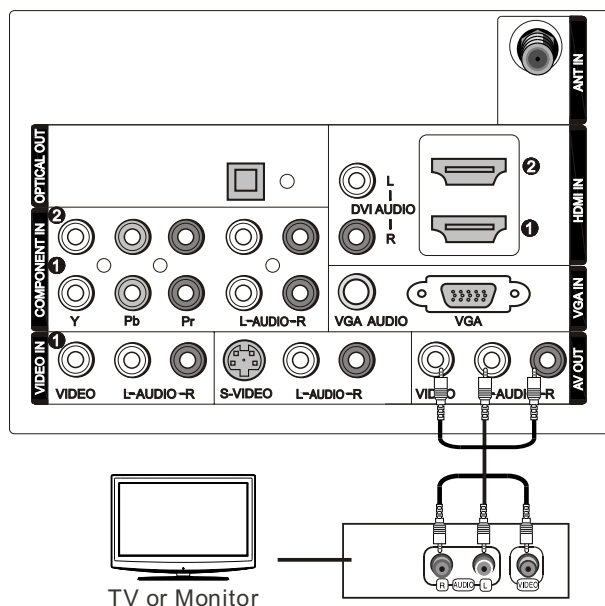

## HDMI and DVI input

### When the source device(DVD player or Set Top Box) supports HDMI

#### How To Connect

1. Connect the source device to HDMI port of this TV with an HDMI cable(not supplied with this product).
2. No separated audio connection is necessary.

#### How To Use

If the source device supports Auto HDMI function, the output resolution of the source device will be automatically set to 1280x720p.

If the source device does not support Auto HDMI, you need to set the output resolution appropriately.

To get the best picture quality, adjust the output resolution of the source device to 1280x720p.

Select HDMI input source in input source option of Select Main source menu.

### When the source device(DVD player or Set Top Box) supports DVI

#### How To Connect

1. Connect the source device to HDMI port of this TV with a HDMI-to-DVI cable(not supplied with this product).
2. A separated audio connection is necessary.
3. If the source device has an analog audio output connector, connect the source device audio output to DVI Audio In port located on the left side of HDMI port.

#### How To Use


If the source device supports Auto DVI function, the output resolution of the source device will be automatically set to 1280x720p.

If the source device does not support Auto DVI, you need to set the output resolution appropriately.


To get the best picture quality, adjust the output resolution of the source device to 1280x720p.

Press the INPUT button to select HDMI input source in input source option of Select Main source menu.
 
## Cable sample

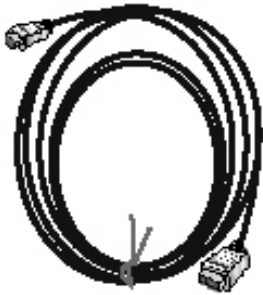

 HDMI Cable  
(not supplied with the product)

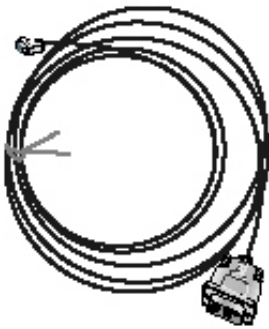

HDMI to DVI Cable  
(not supplied with the product)




Analog Audio Cable  
(Stereo to RCA type)  
(not supplied with the product)

# External Equipment Connections
 
## Connecting Headphones

You can connect a set of headphones to your set if you wish to watch a TV programme without disturbing the other people in the room.

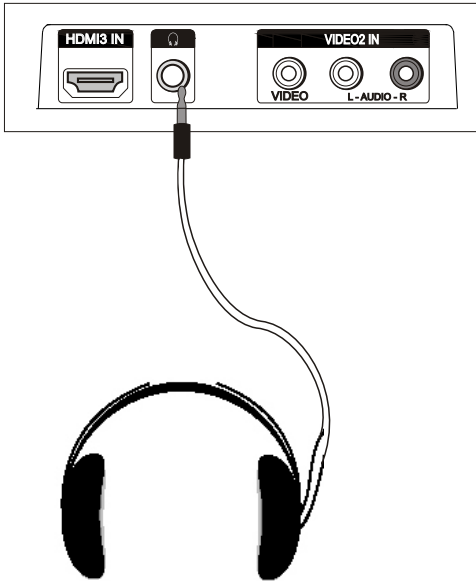


Plug a set of headphones into the 3.5mm mini-jack socket on the side panel of the set.

### Note

 - Prolonged use of headphones at a high volume may damage your hearing.
- You will not receive sound from the speakers when you connect headphones to the system.

## Power source

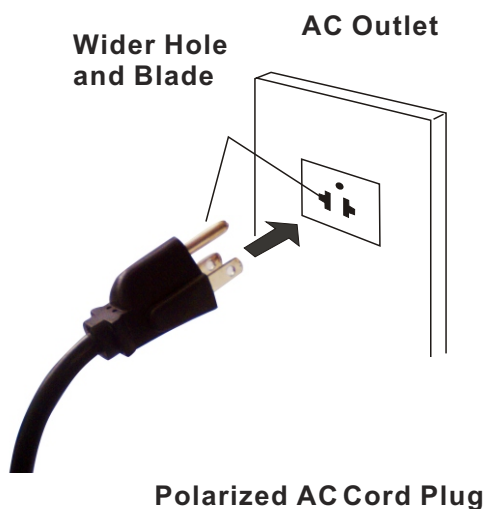

### TO USE AC POWER SOURCE

 
Use the AC polarized line cord provided for operation on AC. Insert the AC cord plug into a standard polarized AC outlet.

### Note


- Never connect the AC line cord plug to other than the specified voltage. Use the attached power cord only.
- If the polarized AC cord does not fit into a non-polarized AC outlet, do not attempt to file or cut the blade. It is the user's responsibility to have an electrician replace the obsolete outlet.
- If you cause a static discharge when touching the unit and the unit fails to function, simply unplug the unit from the AC outlet and plug it back in. The unit should return to normal operation.



## Removing the table stand and installing a wall mount bracket

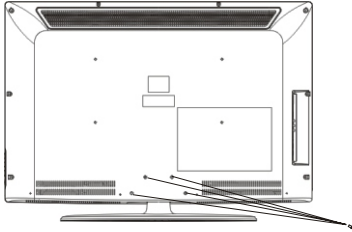

 Remove 4X M4 screws securing the stand to the TV, then remove the stand.

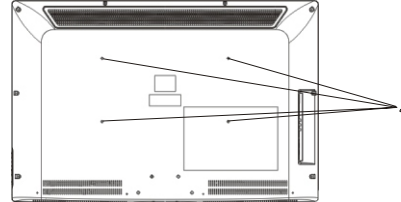

Use 4X M6 screws to secure the wall bracket (not supplied) to the back of your TV.

# Operation

In the manual, the OSD (on screen display) may be different from your TV's, because it is just an example to help you with the TV operation.

There are several options you might need to set up in order for your TV to work properly. Read the instructions that follow.

Initial Setup: Set according to the screen display.

## Switching On/Off the TV set

1. First, connect power cord correctly.
2. Select the viewing source by using **INPUT** button on the remote control.
3. When finished using the TV, press **POWER** button on the remote control. The TV reverts to standby mode.
4. If you intend to be away on vacation, disconnect the power plug from the wall power outlet.

 
### Note

If the TV is in power on, the screen shows information according to the type of input signal. The information will disappear if there is no signal, "No Signal" will display on the screen.

## Choose the Menu Language

When you start using your set for the first time, you must select the language which will be used for displaying menus and indications.


1. Choose **TV** Input and then press **MENU** button.
2. Press **▲/▼** button to select **Function** menu.
3. Press **▶** or **OK** button and then use **▲/▼** button to select **Language**.
4. Press **◀/▶** button to select language.  
(English, Spanish or French)

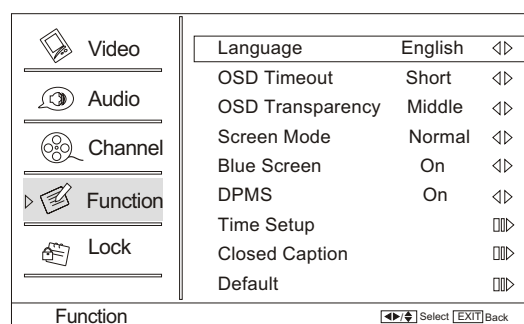

## Choose the Input source

Change the picture source so you can watch your TV, VCR, DVD, Cable, or any other devices that are connected to your TV.

 1. Press **INPUT** button to enter the Select Source menu and then use **▲/▼** button to select the desired items (TV, Video1, Video2, S-Video, Component1, Component2, VGA, HDMI1, HDMI2, HDMI3).
2. Press **OK** button to confirm.

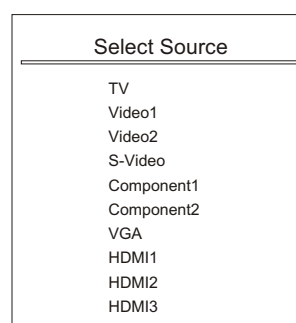

# Channel menu

■ This TV set has two methods to set channels, which are respectively Channel Scan, Channel Skip.

■ In this section, how to use the remote control to set channel is explained. You can also use buttons on the TV to set channel.

### Note

The Channel menu will be only operated in normal TV mode.

 
 
## Channel Scan

1. Press **MENU** button and then use **▲/▼** button to select **Channel** menu.
2. Press **▶** or **OK** button to select **Tuner**.
3. Press **◀/▶** button to select **Cable** or **Antenna** mode.
4. Press **▲/▼** button to select **Channel Scan**.
5. Press **▶** or **OK** button to start searching.
6. To cancel searching, press **EXIT** button.

### Note

When **Antenna** is selected, the TV will detect antenna signals and will search for antenna TV (NTSC and ATSC) channels available in your local area.

When **Cable** is selected, the TV will detect cable company supplied signals and will search for cable TV (NTSC, QAM modulated) channels available in your Area.

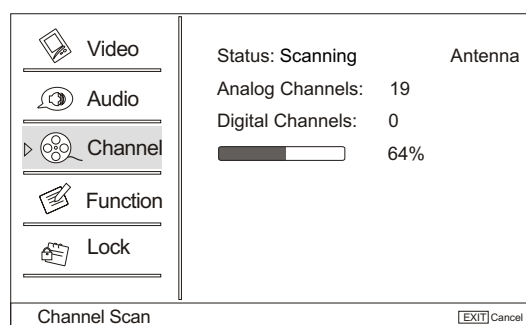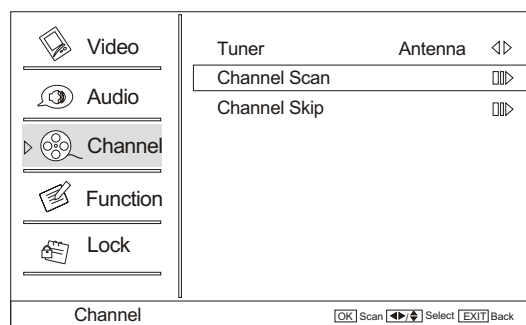



## Channel Skip

A skip channel is skipped when using **CH+** and **CH-** button to browse the channels. A skip channel can be watch by key-in the channel number or select by list.

Default un-scanned analog channels are skip.

Channel with a check icon  is a skipped channel.

  1. Press **MENU** button and then use **▲/▼** button to select **Channel** menu.
2. Press **▶** or **OK** button and then use **▲/▼** button to select **Channel Skip**.
3. Press **▲/▼** button to select a channel, then press **OK** button to toggle between  and .

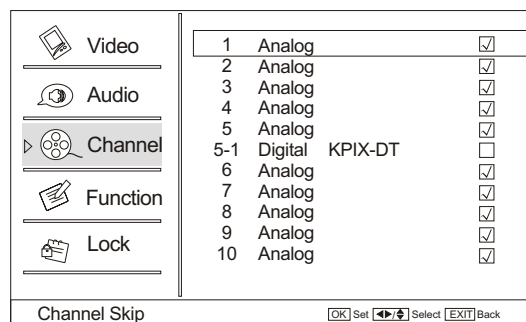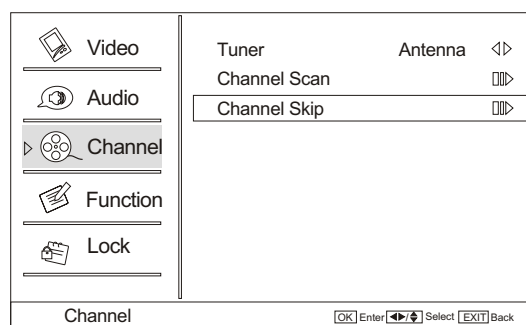

## Adding your favorite channels to the favorite channels list

To add your favorite channels to the favorite channels list:

1. Press **CH+/-** buttons to select a channel.
2. Press **ADD/ERASE** button to add the channel to your favorite channels list.
3. Press **ADD/ERASE** button again to delete the channel.

To tune to a favorite channel:

1. Press **FAV.LIST** to open your favorite channels list.
2. Press **▲ / ▼** button to select a channel on the list.
3. Press **OK**. Your TV tunes to that channel.

## Select the desired program

1. Using **CH+/-** buttons.

- Press **CH+** button to select a channel number in number increasing direction.
- Press **CH-** button to select a channel number in number decreasing direction.

 
### Note

If skip is ON on one channel, press **CH+/-** button, the channel will not appear.

2. Also can enter channel number directly, eg: 2-0.


## Select the desired sound

Press **VOL-/+** buttons on the remote or the front of the TV set to adjust the volume level. The range is 0~100. When the volume buttons are pressed the volume level is displayed automatically on the TV screen.



## Mute

When you need to pay attention to a conversation, or there is a telephone calling you or there are some guests visiting you, the sound elimination (mute) function is very convenient.

1. Press **MUTE** button on the remote control and “” type face will display on the screen. At this time, the sound of the TV set is turned off.

2. If you want to recover the sound, press **MUTE** button again or directly press **VOL+** button.



## Video menu

The TV menu gives you an overview of the menus you can select.

### Note

 
Depending on the input signal, one or more menu items may not be selectable.

### How to select picture mode

The picture mode provides the pre-defined images settings: Standard, Vivid, Custom and Mild .

1. Press **MENU** button and then use **▲ / ▼** button to select **Video** menu.
2. Press **▶** or **OK** button and then use **▲ / ▼** button to select **Mode**.
3. Press **◀ / ▶** button to select the option Standard, Vivid, Custom and Mild.

You can also press **P.MODE** button on the remote control to select the option Standard, Vivid, Custom and Mild.

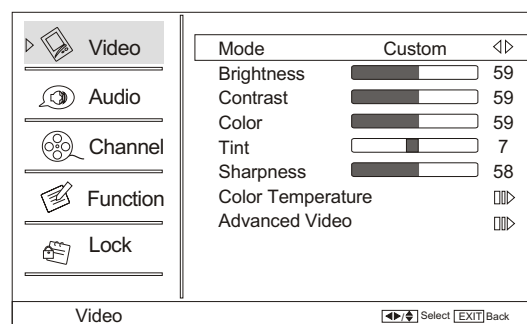

### How to customize your own picture status

1. Press **MENU** button and then use **▲ / ▼** button to select **Video** menu.
2. Press **▶** or **OK** button and then use **▲ / ▼** button to select the desired items.
3. Press **▶** or **OK** button and then use **◀ / ▶** button to adjust the setting.

#### ■ Mode

Select the mode of picture(Standard/ Vivid/ Custom/ Mild).

#### ■ Brightness

This will adjust the light output of the complete picture, which will mainly affect the darker areas of the picture.

#### ■ Contrast

This will adjust the intensity of bright parts in the picture but keep the dark parts unchanged.

#### ■ Color

This will adjust the saturation level of the colors to suit your personal preference.

#### ■ Tint

Allows you to select the color mix (Tint) of the picture.

#### ■ Sharpness

This will adjust the sharpness of fine details in the picture.

### Note

Only when the item of mode is custom , the Brightness, Contrast, Color, Tint, Sharpness and Color Temperature can be set by user . In other mode the value of them are preset by program .

## Video menu

### ■ Color temperature

This will increase or decrease Warm (red) and Cool (blue) colors to suit personal preferences.

Select Cool to give the white colors a blue tint, Standard to give the white colors a neutral tint, Warm to give the white colors a red tint.

### ■ Advanced Video

To adjust the picture in advanced: DNR, Black Level Extender, White Peak Limiter, CTI, Flesh Tone, Adaptive Luma Control.

#### ■ DNR

To adjust reduce the appearance of digitizing error by the compression: Off, Weak, Medium, Strong, Auto.

#### ■ Black Level Extender

To adjust the ability in the black areas detail of the picture: On and Off.

#### ■ White Peak Limiter

To adjust the ability in the white areas detail of the picture: On and Off.

#### ■ CTI

 
To adjust the picture for color errors: Off, Weak, Medium and Strong.

#### ■ Flesh Tone

To adjust the flesh color: On and Off.

#### ■ Adaptive Luma Control

To adjust changes in the luminance of the picture: On and Off.

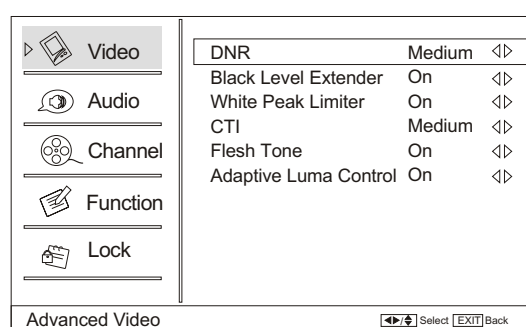

## VGA Set

When you select the VGA input, this function is used.

### Adjustment for screen Position, Clock, Phase, Setting

Display adjust menu by pressing **INPUT** button then use **▲/▼** button to select the the source of VGA item.

 
 
■ Auto sync: Automatically adjust display of the picture (Only available in VGA source).

■ Position : Adjust the screen position.

■ Phase : Adjust the phase of Pixel clock.

■ Clock : Adjust the clock of input signal.

1. Press **MENU** button and then use **▲/▼** button to select **Video** menu.
2. Press **▶** or **OK** button and then use **▲/▼** button to select **VGA**.
3. Press **▶** or **OK** button and then use **◀/▶** button to adjust the setting.

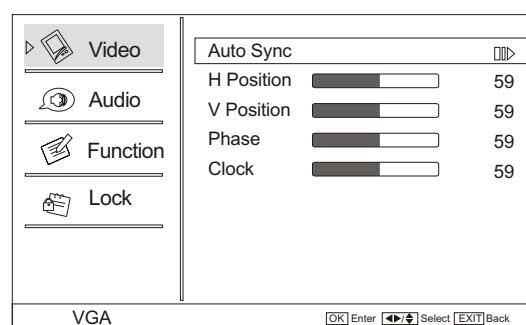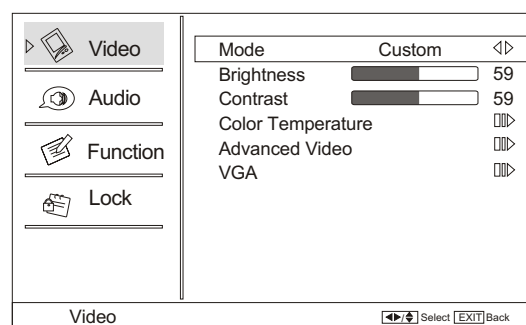

## Audio menu

### How to select audio mode

1. Press **MENU** button and then use ▲ / ▼ button to select **Audio** menu.
2. Press ► or **OK** button and then use ▲ / ▼ button to select **Mode**.
3. Press ► or **OK** button to select the option Off, Concert, Living Room, Hall, Bathroom, Cave, Arena and Church. You can also press **S.MODE** button on the remote control to select the Audio Mode Off, Concert, Living Room, Hall, Bathroom, Cave, Arena and Church.

### How to Customize your own audio status

1. Press **MENU** button and then use ▲ / ▼ button to select **Audio** menu.
2. Press ► or **OK** button and then use ▲ / ▼ button to select desired items.
3. Press ► or **OK** button and then use ◀ / ▶ button to adjust the setting.

#### ■ Balance

Adjust to emphasize left or right speaker balance.

#### ■ Bass

Adjust to increase or decrease lower-pitched sounds.

#### ■ Treble

Adjust to increase or decrease higher-pitched sounds.

#### ■ Sound Surround

To turn the simulated surround sound on and off.

#### ■ Mode

To adjust the audio mode: Off, Concert, Living Room, Hall, Bathroom, Cave, Arena and Church.

#### ■ Equalizer

To adjust the equalizer: Off, Rock, Pop, Live, Dance, Techno, Classic and Soft.

#### ■ SPDIF Type

To Adjust the SPDIF output: Off, Dolby Digital and PCM.

#### ■ AVL(Automatic Volume Control)

This will reduce the differences in volume level among broadcasters.

### SAP Broadcasts Setup

This TV can receive MTS stereo programs and SAP (Secondary Audio Program) that accompanies the stereo program; if the station transmits an additional sound signal as well as the original one.

When having selected SAP button on the remote control, this TV can only receive the signal when the TV station transmits the proper signals.

Mono sound is automatically received if the broadcast is only in Mono; even though Stereo or SAP has been selected.

 
Select Mono if you want to listen to mono sound during stereo/SAP broadcasting. Stereo or SAP can be received in a Analog channel.

1. Use **SAP** button to select your desired MTS mode in a analog signal.

Each time you press **SAP** button, Mono, Stereo or SAP appear.

If other languages are available on the digital signal, select them with the SAP button.

2. Press **EXIT** button to save and return to TV viewing.

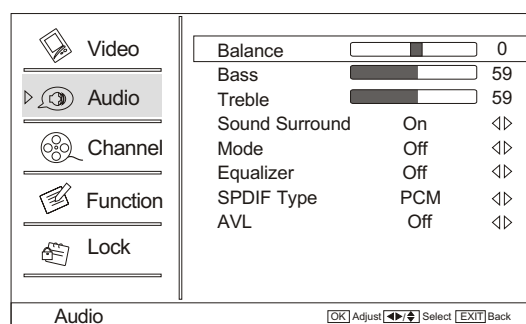


## Function menu

### Menu Language

When you start using your set for the first time, you must select the language which will be used for displaying menus and indications.

 1. Press **MENU** button and then use **▲ / ▼** button to select **Function** menu.
2. Press **▶** or **OK** button and then use **▲ / ▼** button to select **Language**.
3. Press **◀ / ▶** button to select language.  
(**English, Spanish or French**)

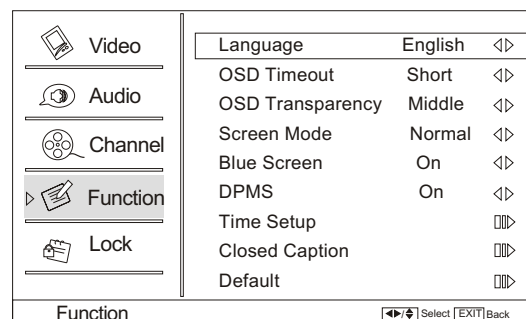

### OSD Timeout

1. Press **MENU** button and then use **▲ / ▼** button to select **Function** menu.
2. Press **▶** or **OK** button and then use **▲ / ▼** button to select **OSD Timeout**.
3. Press **◀ / ▶** button to select **Short, Middle or Long**.  
(Short is for 5 seconds; Middle is for 10 seconds; Long is for 15seconds)

### OSD Transparency

1. Press **MENU** button and then use **▲ / ▼** button to select the **Function** menu.
2. Press **▶** or **OK** button and then use **▲ / ▼** button to select **OSD transparency**.
3. Press **◀ / ▶** button to select **Low, Middle or High**.

### Screen Mode

Lets you choose the way an analog picture with a 4:3 aspect ratio is displayed on your TV with a 16:9 ratio picture format.

#### Note

If a fixed image is displayed on the screen for a long time, the image may become permanently burned on the screen and remain visible.

 
1. Press **MENU** button and then use **▲ / ▼** button to select **Function** menu.
2. Press **▶** or **OK** button and then use **▲ / ▼** button to select **Screen Mode**.
3. Press **◀ / ▶** button to select **Normal, Zoom, Wide or Cinema**.

#### ■ Normal

Choose normal when you want to view the picture with 4:3 mode .

#### ■ Zoom

Choose Zoom when you want to view the picture without any alteration. However, the top and bottom portions of the picture will be cropped.

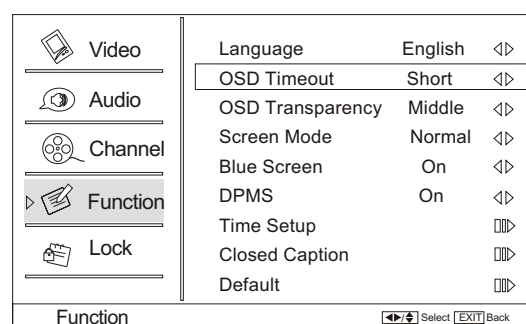



## Function menu

### ■ Wide

Choose wide when you want to adjust the picture horizontally, in a linear proportion to fill the entire screen.

### ■ Cinema

For letterbox pictures, bars may appear on the top and bottom on some programs.

You can also press **ARC** button on the remote control to select the desired picture format: **Normal**, **Zoom**, **Wide** or **Cinema**.

## Blue Screen

1. Press **MENU** button and then use **▲ / ▼** button to select **Function** menu.
2. Press **▶** or **OK** button and then use **▲ / ▼** button to select **Blue Screen**.
3. Press **◀ / ▶** button to select **On** or **Off**.

## DPMS

 
PC Power Management. To set On, the set will be in standby mode automatically if no signal in 2 minutes; if signal input, the set will be on again automatically.

Note: DPMS is useful only in VGA source.

## Time zone setting

This function allows you to select your local time zone. Broadcasted time information will correct the clock display for your local time.


1. Press **MENU** button and then use **▲ / ▼** button to select **Function** menu.
2. Press **▶** or **OK** button and then use **▲ / ▼** button to select **Time Setup**.
3. Press **▶** or **OK** button and then use **▲ / ▼** button to select **Time Zone**.
4. Press **◀ / ▶** button to select your viewing area time zone: **Eastern**, **Central**, **Mountain**, **Pacific**, **Alaska** or **Hawaii**.

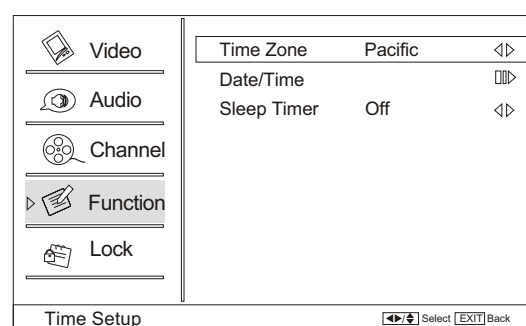

## Date /Time setting

Setting the clock is necessary in order to use the various timer features of the TV. Also, you can check the time while watching the TV.

 1. Press **MENU** button and then use **▲ / ▼** button to select **Function** menu.
2. Press **▶** or **OK** button and then use **▲ / ▼** button to select **Time Setup**.
3. Press **▶** or **OK** button and then use **▲ / ▼** button to select **Date/Time**.
4. Press **▶** or **OK** button and then use **◀ / ▶** button to select **On** or **Off**.

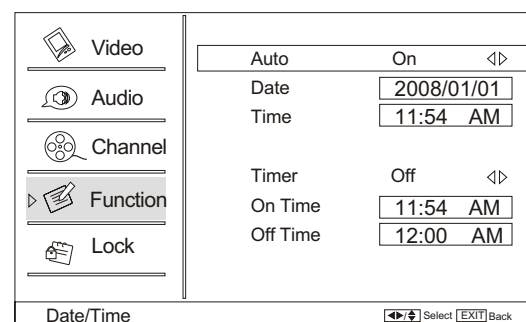

# Function menu

## Sleep Timer setting

 
The sleep timer automatically shuts off the TV after a preset time (from 5 to 240 minutes).

1. Press **MENU** button and then use ▲ / ▼ button to select **Function** menu.
2. Press ► or **OK** button and then use ▲ / ▼ button to select **Time Setup**
3. Press ► or **OK** button and then use ▲ / ▼ button to select **Sleep Timer**.
4. Press ◀ / ▶ button to select the number of minutes. Select **Off**, **5Min**, **10Min**, **15Min**, **30Min**, **45Min**, **60Min**, **90Min**, **120Min**, **180Min** or **240Min**.

The time begins to count down from the number of minutes selected.

5. To cancel the set sleep timer: Press ► button to select **Off**.

You can also press **SLEEP** button to select quickly the sleep timer.

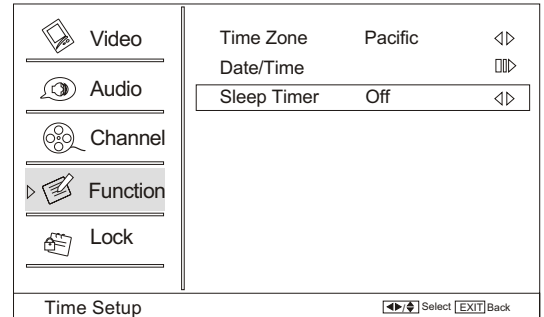

## DTV Caption Style (In DTV mode)

This allows you to modify how digital captions are displayed on your TV. Select from the following options to change the visual characteristics of your TV's digital captioning.

Customize the DTV/CADTV captions that appear on your screen.

1. Press **MENU** button and then use ▲ / ▼ button to select **Function** menu.
2. Press ► or **OK** button and then use ▲ / ▼ button to select **Closed Caption**.
3. Press ► or **OK** button and then use ▲ / ▼ button to select **DTV Caption Style**.
4. Press ► or **OK** button and then use ▲ / ▼ button to select the Style, Size, etc., press ◀ / ▶ button to customize to your preference.

### ■ Style

Select this option to select the font style of caption display according to your own preference.

Press ◀ / ▶ button to select **Default** or **Custom**.

### ■ Size

Select this option to select the size of caption display according to your own preference.

Press ◀ / ▶ button to select **Small**, **Normal** or **Large**.

### ■ Text color

Select this option to select the text color or the opacity of the text box of caption display according to your own preference.

Select a color and one of the opacity options.

### ■ Text Opacity

Specify the opacity for the text color.

### ■ BG Color

Select a background color.

### ■ BG Opacity

 
 
 
Select the opacity for the background color.

### ■ Window Color

Select a window color.

### ■ Window Opacity

Select the opacity for the window color.

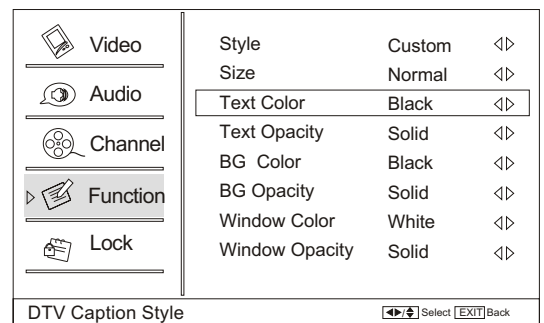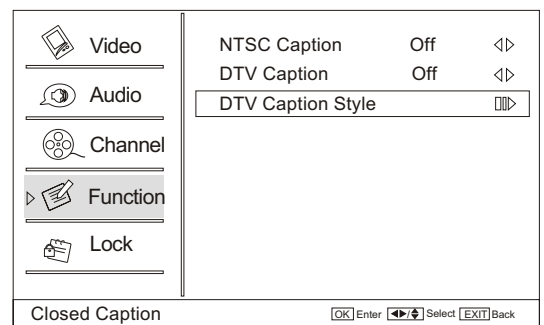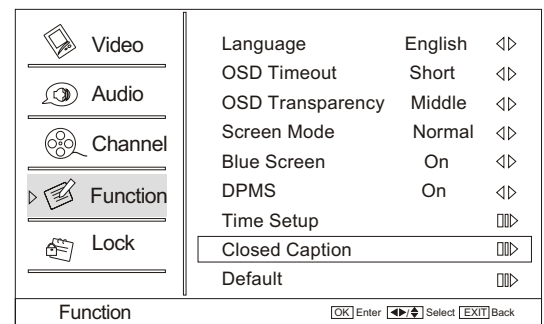

# Lock Menu

Parental Control can be used to block specific channels, ratings and other viewing sources.

The parental control function is used to block program viewing based on the ratings sent by the broadcasting station. The default setting is to allow all programs to be viewed. Viewing can be blocked by choosing the type of the program and the categories.

## Parental Control rating and categories

Rating guidelines are provided by broadcasting stations. Most television programs and television movies can be blocked by TV Rating or Individual Categories. Movies that have been shown at the theaters or direct-to-video movies use the Movie Rating System (MPAA) only.

### Ratings for Television programs :

#### Parental Guide

- TV-Y (All children)
- TV-Y7 (Children 7 years older)
- TV-G (General audience)
- TV-PG (Parental guidance suggested)
- TV-14 (Parents strongly cautioned)
- TV-MA (Mature audience only)

### Ratings for Movies previously shown in theaters:

#### MPAA Rating :

- G (General audience)
- PG (Parental guidance suggested)
- PG-13 (Parents strongly cautioned)
- R (Restricted)
- NC-17 (No one 17 and under admitted)
- X (Adult only)

If you set PG-13 : G and PG movies will be available , PG-13, R, NC-17 and X will be blocked.

### CA Eng Rating

- C Children
- C8+ Children eight years and older
- G General Programming, suitable for all audiences
- PG Parental Guidance
- 14+ Viewers 14 years and older
- 18+ Adult Programming

### CA Fren Rating

- G General
- 8 ans+ Not recommended for young children
- 13 ans+ Programming may not be suitable for children under the age of 13
- 16 ans+ Programming is not suitable for children under the age of 16
- 18 ans+ Programming restricted to adults

### TV Rating :

- A (Age) (applies to TV-Y, TV-Y7, TV-G, TV-PG, TV-14, TV-MA)
- D (Dialogue - sexual dialogue) (applies to TV-PG, TV-14)
- L (Language - adult language) (applies to TV-PG, TV-14, TV-MA)
- S (Sex - sexual situations) (applies to TV-PG, TV-14, TV-MA)
- V (Violence) (applies to TV-PG, TV-14, TV-MA)
- FV (Fantasy Violence) (applies to TV-Y7)

# Lock Menu

## Lock setup

Set up blocking schemes to block specific channels, ratings, and external viewing sources.

A password is required to gain access to this menu.

1. Press **MENU** button and then use **▲ / ▼** button to select **Lock** menu. Then, press **▶** button.

The TV is set up with the initial password “0-0-0-0” and security default password is 9-4-4-3.

2. Use **▲ / ▼** button to select the desired items, and press **▶** or **OK** button to enter the next menu. Once the option is selected, change the settings to your preference.

### Password

Change the password by inputting a new password twice.

### Channel Block

1. Press **MENU** button and then use **▲ / ▼** button to select **Lock** menu.
2. Press **▶** or **OK** button and then use **▲ / ▼** button to select **Channel Block**.
3. Press **▲ / ▼** button to select the item, Press **OK** button to set.

### Parental Lock

1. Press **▲ / ▼** button to select **Parental Lock** item.
2. Press **◀ / ▶** button to select **On** or **Off**.

#### Note

If the Parental Lock is setting as Off, the change of the Parental Guide, MPAA Rating, CA Eng Rating and CA Fren Rating will be no useful.

### Parental Guide

 
 
 
 
#### Note

The Parental control will automatically block certain categories that are “more restrictive”. For example, if you block “TV-Y” category, then all the categories in the “young adult” group will be blocked (TV-Y, TV-Y7, TV-G, TV-PG, TV-14 and TV-MA).

The sub-ratings (D, L, S, V, FV) work together similarly.

### How to set the D, L, S, V and FV sub-ratings.

First, press **▲ / ▼** button select one of these Ratings: TV-Y, TV-Y7, TV-G, TV-PG, TV-14, or TV-MA, and press **◀ / ▶** button.

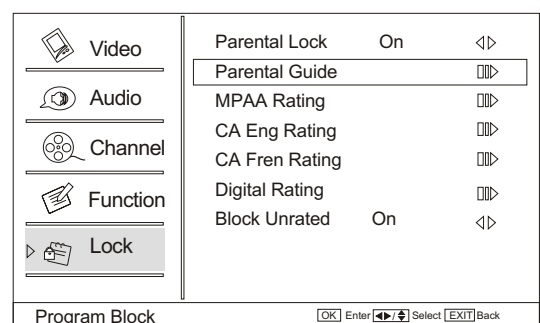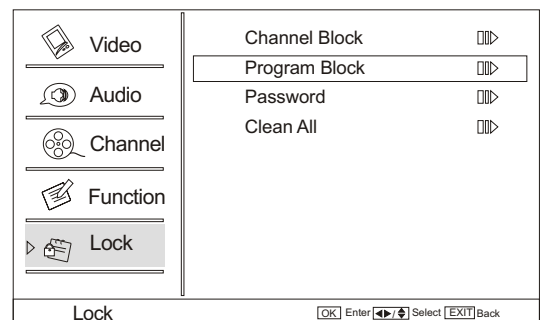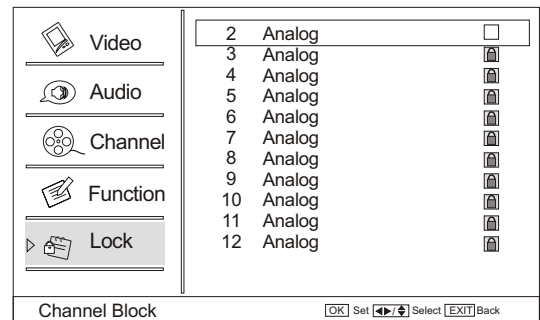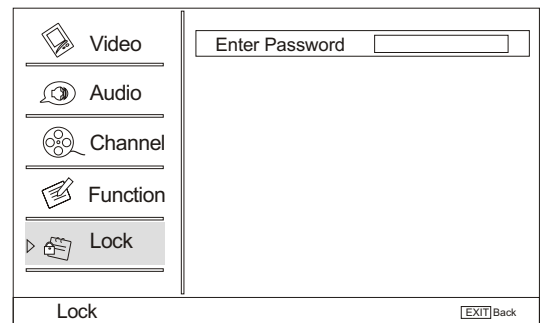

# Lock Menu

## Lock setup

A symbol “□” will be displayed for each sub-rating. While “□” is selected, press **OK** button to go to a sub rating. To select a different Rating, press ▲/▼ buttons and then repeat the process.



### Note

The V-chip will automatically block certain categories that are “More restrictive”. For example, if you block “⏏” sub-rating in TV-PG, then the “⏏” sub-ratings in TV-14 and TV-MA will automatically be blocked.

### MPAA Rating

Blocks movies according to the movie ratings limits specified, so children cannot view certain movies. You can set the ratings limit by blocking out all the movies with the ratings above a specified level. Keep in mind that the movie ratings limit only applies to movies shown on TV, not TV programs, such as soap operas.

  
1. Press ▲/▼ button to select **MPAA Rating** item.
2. Press ► or **OK** button and then use ▲/▼ button to select the rating.
3. Press **OK** button to set block or unblock.

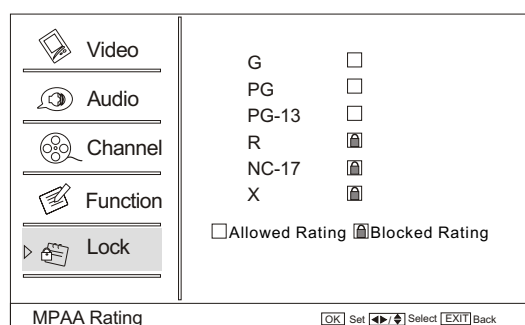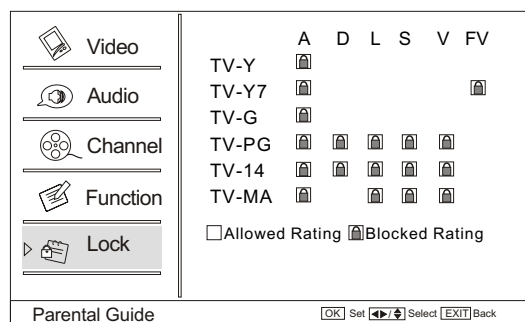

### CA Eng Rating

#### Canadian English Language Rating

 
1. Press ▲/▼ button to select **CA Eng Rating** item.
2. Press ► or **OK** button and then use ▲/▼ button to select the rating.
3. Press **OK** button to confirm.

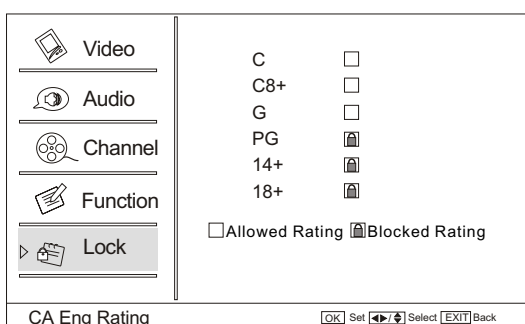

### CA Fren Rating

#### Canadian French Language Rating

 1. Press ▲/▼ button to select **CA Fren Rating** item.
2. Press ► or **OK** button and then use ▲/▼ button to select the rating.
3. Press **OK** button to confirm.

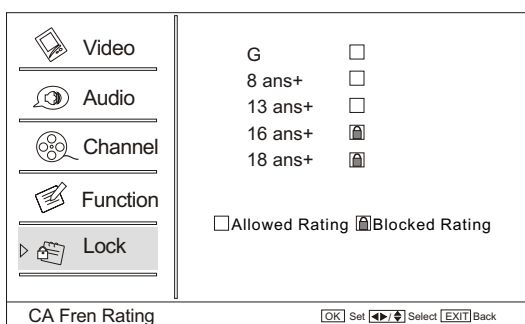

# Other Functions

 
## Brief Info

Brief Info shows the present screen information.  
 Press **INFO** button to show the Brief Info on the screen.  
 Press **INFO** button or **EXIT** button to exit.

### Function:

- Show the present screen information.
- Press **INFO** button or **EXIT** button to exit.

- A: Video resolution
- B: Program name
- C: Program rating categories
- D: program showtime
- E: Program title
- F: Channel Lable
- G:Tuner mode
- H:Program details

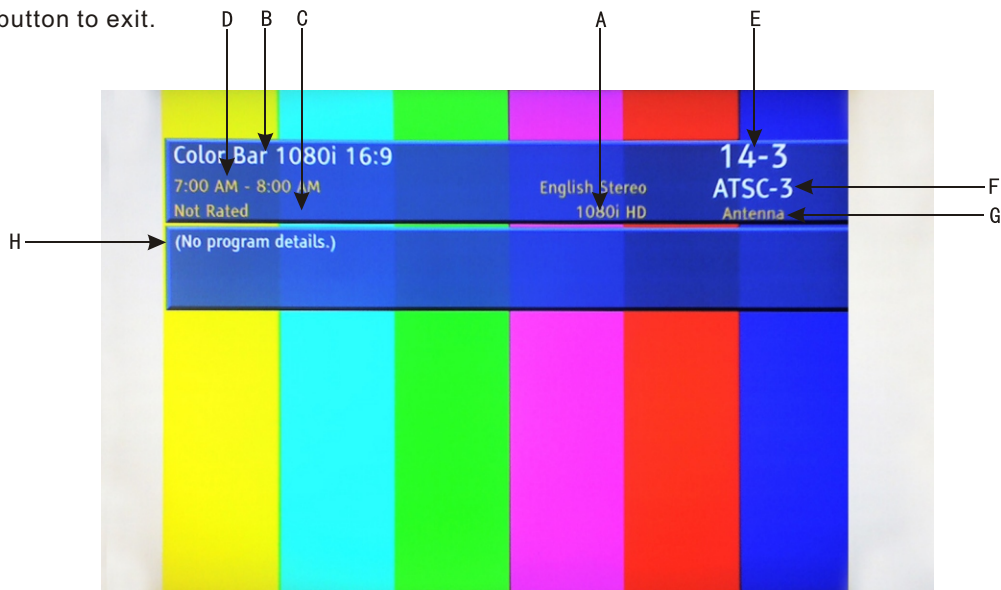


## Using the Guide

The guide allows you to select the channels from a channel list.  
 The guide allows provides information about the current program being shown on each channel(if information is available from the station).

**Note**  
 Program information in the guide is provided by the broadcasters. As a result, it may sometimes include only the channel number, without a program title or description.

 - A: Program title
- B: program options
- C: program show time
- D: Program details
- E: Program rating categories

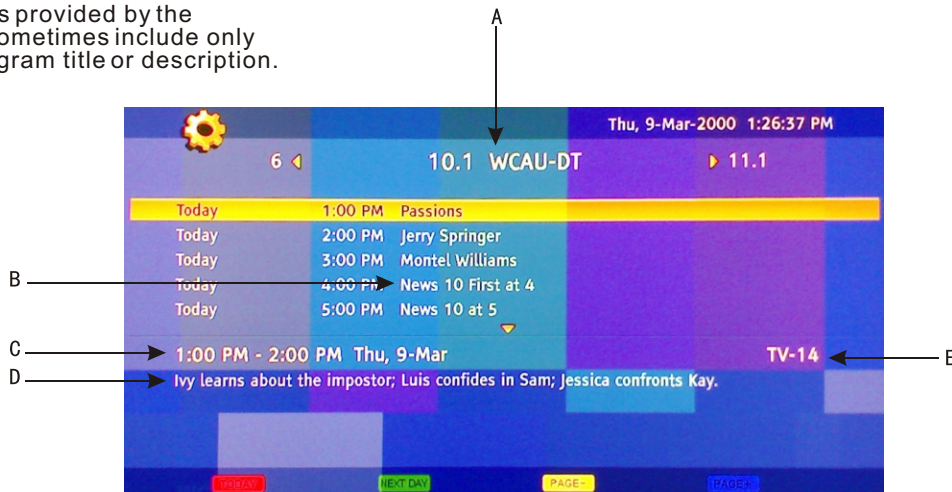


## Other Functions

### Quick program view

Press to jump back and forth between two channels. The TV alternates between the current channel and the last channel that was selected.

 1. Suppose the channel number you used just now is 8 and the channel number you are using is 18 (as shown in the figure).
2. If you want to return to the last watched program channel 8, you can simply press **Q.VIEW** button.
3. If you want to return to channel 18, press the button again.

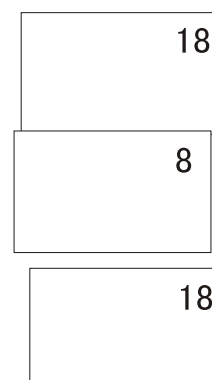

### CC (Closed Caption Display)

#### Closed Captions

Closed captioning is a process which converts the audio portion of a television program into written words which then appear as subtitles on the television screen. Closed captions allow viewers to read the dialogue and narration of television programs.

#### Using Closed Captions

Captions are the subtitles of the dialogue and narration of television programs. For prerecorded programs, program dialogue can be arranged into captions in advance. Its possible to caption a live program by using a process called real-time captioning, which creates captions instantly. Real-time captioning is normally done by professional reporters using a machine shorthand system and computer for translation into English. Captioning is an effective system for the hearing-impaired, and it can also aid in teaching language skills.

In ATV mode CCD function allows you to configure the way you choose to view the digital captioning (Off, CC1, CC2, CC3, CC4, Text1, Text2, Text3 or Text4).

#### ■ CAPTION

The term for the words that scroll across the bottom of the TV screen; usually the audio portion of the program provided for the hearing impaired.

#### ■ TEXT

The term for the words that appear in a large black frame and almost cover the entire screen; usually messages provided by the broadcaster.

 
In DTV mode allows you to configure the way you choose to view the digital captioning (Off, service1, service2, service3, service4, service5 or service6).

Select one of the digital service channels made available by the caption provider.

There are 6 standard services. Service 1 is designated as the Primary Caption Service. This service contains the verbatim, or near-verbatim captions for the primary language being spoken in the accompanying program audio. Service 2 is designated as the Secondary Language Service. This service contains captions in a secondary language which are translations of the captions in the primary Caption Service. The other service subchannels are not pre-assigned. It is up to the discretion of the individual caption provider to utilize the remaining service channels.

#### Note

The captions do not always use correct spelling and grammar. Not all TV programs and product commercials are made for broadcast with Closed Caption information included. Refer to your area's TV program listings for the TV channels and times of Closed Caption shows. The captioned programs are usually noted in the TV listings with service marks such as "CC".

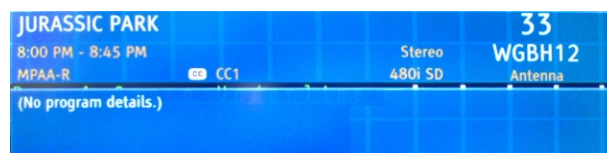


# Remote Control

## Setting Up Your Remote Control

After it has been set up properly, your remote control can operate in six different modes: TV, DVD, VCR, SETBOX, CABLE or AUDIO. Pressing the corresponding button on the remote control allows you to switch between these modes, and control whichever piece of equipment you choose.

### Note

 The remote control might not be compatible with all DVD Players, VCRs and Cable boxes.

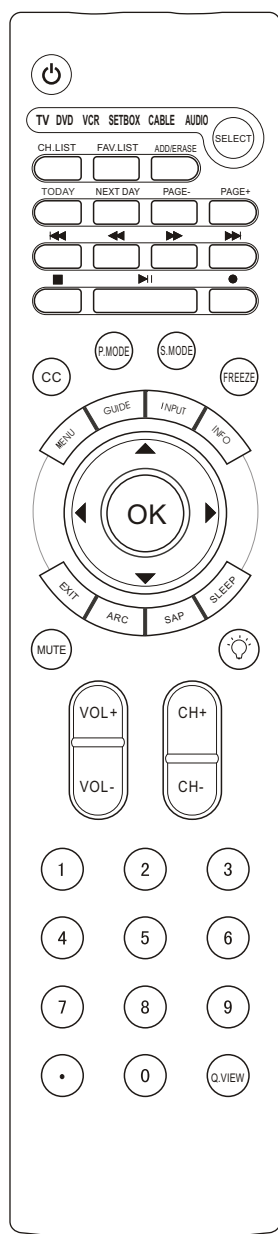

### Control Operation

#### To control a device using the Control

1. Program the Control to work with your device.
2. Changing device mode by pressing **SELECT** key. Default device is TV. When press **SELECT** key, current device led will be on. Keep pressing **SELECT** key to choose a device, the loop is: TV DVD VCR STB Cable Audio- TV. When device is set, related device LED will be on for 5 seconds and then be off.
3. Aim the remote at the device.
4. Press **POWER** button to turn the device on.
5. Use the other Control buttons to operate the device. Device LED will blink if user presses any key (if the key has data in current mode.). If the key has no data, then LED will not blink.
6. Default init status: TV/Prima 001 code.
7. Bulb key to control the flash light.

### Programming the Control

The Control is factory-programmed to support up to 600 code sets.

There are two ways to program the Control:

- ◆ Selecting a brand code for the device you wish to operate, and then entering that code manually into the Control.
  - ◆ Using the Power Scan feature to find device codes automatically.
- The two programming methods are described in the following sections.

#### Manually Programming the Control

1. Using **SELECT** key to choose the device you want to program.
2. While Press and holding **OK** key, press **SELECT** key, and device LED will be ON. Keep the status for about 5 seconds, release both keys and then LED will blink twice per second, indicating that the control is ready for programming.
3. Led will blink once when you enter a digit key, indicating the digit key is programmed. If 3 digits are programmed successfully, device LED will be ON for about 3 seconds and then blink twice per second. Then User now can:
  - a. Try to operate the device by using **POWER** or **PLAY** keys. If operation can be done, press **OK** to save current 3-digits code and exiting manually programming mode.
  - b. Return to beginning of step 3. Reprogram the control.
4. If user's input is incorrect, LED will blink 12 times in 3 seconds. And then kept twice per second blink, user now can return to step 3 and re-program the device.
5. Within 10 seconds, user should enter the 3-digit brand code corresponding to your device. If time out or any key other than **POWER**, **PLAY** and digits is pressed, LED will be off and manually programming process is exit.
6. Fast Programming Prima default TV code set. Press and holding **EXIT** key and then press **SELECT** key for 5 seconds, default Prima code set (001) will be programmed to the control.

#### Manually scan mode

With manually scan programming, the control tests all the codes available in the code set data base and assign the correct one for the selected device.

To manually-scan program the control:

1. Manually turn OFF the device for manually scan mode. (TV, DVD, VCR, STB, cable box or audio equipment).
2. Press **SELECT** key to choose the device you wish to program. While Press and holding **OK** key, press **SELECT** key and device LED will be ON. Keep the status for about 5 seconds, release both keys and then LED will blink twice per second, indicating that the control is ready for programming.
3. Press and release **CH+/CH-** key. The LED blinks 10 times per seconds, indicating that the Remote is in manually scan mode.
4. Press **CH+/CH-** key repeatedly until the device switches ON (**CH+** key conducts a upward search while **CH-** key conducts a downward search in the code set database).



# Remote Control

- When the device turns ON, press and release **OK** key to program the control with the new code, saving the code and exit. To exit without programming, press any key other except **CH+/CH-** and **OK**. LED will be off after manually scan mode is exit.
- If the device responds, no further programming is required. If the device does not respond, repeat step 1 through 5. And searching will start from current code set. If no key was pressed in 30 seconds, manually scan mode will be automatically exit.
- After searching the entire data base, this mode will be automatically exited and led will blink for 3 times.

## Automatic Scan Programming the Control

To automatic scan program the Control:

- Manually turn OFF the device you wish to power scan. (TV, DVD, VCR, STB, cable box or audio equipment).
- Press **SELECT** key to choose the device you wish to program.  
While Press and holding **OK** key, press **SELECT** key and device LED will be ON. Keep the status for about 5 seconds, release both keys and then LED will blink twice per second, indicating that the Control is ready for programming.
- Press and release **MUTE** key to enter automatic scan mode. And the remote will automatically sending power codes to the device.
- When the device turns ON, press **OK** key to program the control with the new code, saving it and exit. To exit without programming, press any key other except **OK** key.
- If the device responds, no further programming is required. If the device does not respond, repeat steps 1 through 4. And search will start from current code set.
- After searching the entire data base, this mode will be automatically exited and led will blink for 3 times.

## Punch-Through Features

The Control provides two punch-through features that allow users to control TV volume and DVD or VCR operation while the control is in another device mode control certain features of another device.

### Volume Punch-Through:

The TV Volume/Mute punch-through feature allows you to control the volume and mute function of your TV while the control is in another device mode. The feature is applicable for all devices and brands that do not use the volume control buttons for other purposes.

### Transport Key Punch-Through:

 
The DVD or VCR transport key punch through feature lets you control the PLAY, STOP, PAUSE, REWIND, FF and RECORD functions of your DVD or VCR while the control operates in other modes. The feature is applicable for all devices and brands that do not use the transport keys for other purposes.

## Protection mode

- While press and holding **OK**, press **FREEZE** key for 5 seconds to enter protection mode. In this mode, all the above programming methods will be invalid.
- To exit protection: While press and holding **OK**, press **FREEZE** key. Current device related LED remains ON and then release **OK** and **FREEZE**. Input three digit password "8 8 8", LED turns off and protection mode is ended. If error password is input or no password input in 10 seconds, LED blinks three times and then turns off. Protection mode will remain.

## Display mode

- To enter display mode, while press and holding **OK** key, press **SELECT** key and device LED will be ON, keep the status for about 5 seconds. Release both keys and then LED will blink 2 times per second, indicating control is ready for programming.
- Sequence press 9, 8, 0 to enter display mode. And LED is off now.
- Press digit 1 key to get the first digit of current code set. For example, if the first digit of code set is 1, so then led will blink once and remains OFF. Digit 0 in code set will not be displayed. Blink twice per second.
- Press digit 2 key to get the second digit of current code set. For example, if the second digit of code set is 3, so then led will blink three times and remains OFF. Blink twice per second.
- Press digit 3 key to get the third digit of current code set. Blink twice per second.
- Only digit 1, 2, 3 are valid in this mode. And the sequence is not fixed. You can repeat, if you don't remember clearly.
- Control will not send out data in this mode if user presses any keys other than digit 1, 2, 3. And this can be regarded as no key pressed.
- If no key was pressed in 10 seconds or any key other than digit 1, 2, 3 is pressed, display mode is ended.

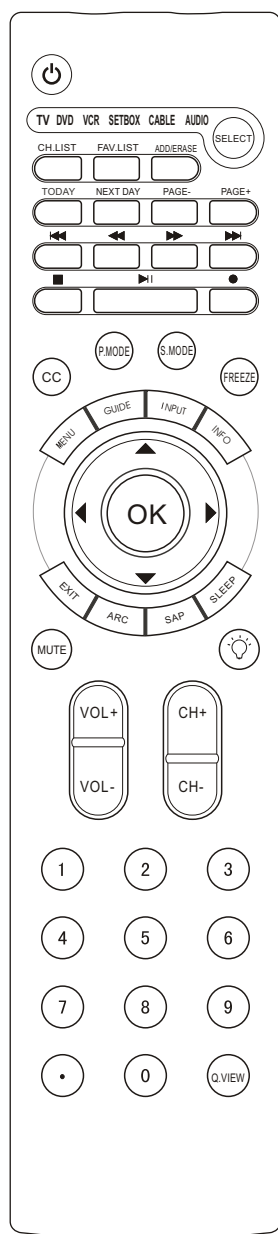

# Remote Control

## Remote Control Codes

### TV

NO.	Brand	Code
1	Prima	001
2	A Mark	134
3	Action	108
4	Admiral	071 093 099 118 127 130 131
5	Advent	147
6	Aiko	079
7	Aiwa	047
8	Akai	104 105 123
9	Amtron	082
10	Anam	106
11	Anam National	072 082 110
12	AOC	073 074 075 104 112 117 134 140
13	Apex	000 157 015 016
14	Audiovox	082 108 140 144
15	Bell & Howell	071 084 118 131
16	Benq	051
17	Broksonic	037 038 104 106 118 138 146
18	Carver	153
19	CCE	118
20	Centurion	077
21	Citek	143
22	Citizen	073 075 079 082 089 092 138
23	Classic	104 123
24	Colortyme	073 075 105 116 118 125 127 139
25	Contec Cony	106 108
26	Contec/Cony	078 082
27	Craig	082 106 108 114 119 125 138
28	Crosley	118 153
29	Crown	082 087 119 134
30	CTX	056
31	Curtis	104
32	Curtis Mathes	070 073 075 084 089 092 102 105 112 117 118 125 127 134 135 148 153 155
33	Daewoo	073 074 075 079 092 104 110 112 117 134 135 140 144
34	Daytron	073 075 092 114 117 134 140
35	Denon	145
36	Dimensia	070 155
37	Dumont	073 091
38	Electrohome	072 073 075 080 104 105 117 134
39	Emerson	073 075 078 081 082 083 084 092 096 103 104 105 106 108 114 117 119 125 129 130 131 134 139 144 146
40	Envision	073 075 105 112
41	Fisher	052 084 115 123 124 133
42	Fujitsu	083
43	Funai	082 083 106 108
44	GE	165 066 067 070 072 073 075 168 086 104 106 110 113 116 117 125 126 127 128 134 144 149 154 155
45	Goldstar	073 074 075 078 080 092 104 105 109 112 117 134 135 137
46	Gradiente	105 122 123
47	Granada	134
48	Grundig	126 134
49	Haier	001 002 003 004 005 006 007 008 009 010 011 085
50	Hallmark	073 075 104
51	Harman Kardon	104
52	Hisense	151
53	Hitachi	041 042 058 059 068 073 075 078 101 117 126 127 131 134 140 145
54	Infinity	087 153
55	Janeil	094
56	JBL	087 153
57	JC Penney	070 073 074 075 168 086 089 092 104 112 113 125 126 127 134 149 155
58	Jensen	073 075 105 129
59	JVC	163 166 012 031 036 078 086 103 122 125 126
60	Kawasho	073 075 112 123
61	Kenwood	073 075 080 104 105 112 116 139
62	Kloss Novabeam	082 094 110
63	KTV	082 092 106 108 112 117 134
64	LG	074
65	Lloyds	137 139
66	Loewe	087
67	Logik	071 142
68	Luxman	073 075
69	LXI	070 075 084 087 104 118 127 149 153 155
70	Magnasonic	104 105 131 140
71	Magnavox	017 073 075 080 087 104 105 112 114 117 118 119 126 131 153
72	Majestic	071
73	Marantz	073 075 087 105 112 116 117 118 153
74	Megatron	075

NO.	Brand	Code
75	Memorex	071 074 075 084 104
76	MGA	073 074 075 080 105
77	Mitsubishi	049 073 074 075 080 104 105 112 117 134
78	Montgomery Ward	071
79	Motorola	072 093
80	MTC	073 074 075 089 104 112 118 125 140
81	Multitech	082
82	Multivision	088
83	NAD	075 101
84	NEC	072 073 074 075 105 112 116 117 139
85	Nikko	075 079 140
86	Noblex	137
87	Onwa	082 106
88	Optimus	101
89	Optonica	093
90	Orion	096 130 146
91	Panasonic	159 167 023 032 033 034 072 086 087 108 110 113 126 127 128 140 072 073 074 075 078 080 087 104 105 112 114 117 118 119 131 140 145 153
92	Philco	145 153
93	Philips	160 161 029 030 072 073 078 080 087 118 153
94	Pioneer	045 073 075 101 110 111 116 117
95	Portland	073 074 075 079 092 104 112 117 134 135
96	Price Club	089
97	Prima	135 142 152
98	Prism	086
99	Proscan	070 127 149 154 155
100	Proton	073 075 078 104 105 117 119 127 134 138
101	Quasar	053 063 064 072 086 110 114 126 128
102	Radio Shack	084 106 108 110 118 120 124 127 132 134 155
103	Radio Shack/Realistic	070 073 075 078 082 084 092
104	RCA	164 060 065 070 072 073 074 075 080 102 106 110 111 113 116 117 125 127 128 134 148 149 154 155
105	Realistic	084 155
106	Runco	091
107	Sampo	039 073 075 092 110 112 117
108	Samsung	043 048 054 057 062 073 074 075 078 080 089 092 097 104 112 117 118 125 131 134 139
109	Sansui	022 096 120
110	Sanyo	073 084 115 124
111	Scott	073 075 078 082 083 106 108 117 130 134
112	Sears	070 073 075 080 083 084 095 104 106 115 118 124 127 133 134 149 153 155
113	Sharp	013 028 035 073 075 078 092 093 120 131 132 134 139 141
114	Signature	071
115	Signature 2000	115 132
116	Sony	158 018 026 098 100 121 123 134
117	Soundesign	073 075 082 083 104 106 117 119 129
118	Starlite	082
119	Supre-Macy	094
120	Sylvania	044 046 069 073 075 080 087 104 105 112 114 117 118 119 140 153
121	Symphonic	081 082 095 108
122	Tandy	093 118
123	Tatung	072 110 138
124	Technics	086 126 128
125	Techwood	073 075 086 105 118
126	Teknika	071 073 074 075 078 079 082 083 089 092 106 108 112 116 117 119 134 137 140 143 153
127	Telecaption	090
128	Telefunken	139
129	Toshiba	162 019 021 024 025 027 084 089 090 115 125 133 150
130	Totevision	092 127
131	Ultra	140
132	Uniden	121
133	Universal	168
134	Video Concepts	106
135	Vidikron	118 153
136	Wards	070 071 073 074 075 080 081 083 168 087 104 112 113 117 118 119 120 125 127 131 153 155
137	Wallmart	055 051 107
138	White Westinghouse	104 112 134 135 140 144
139	Yamaha	073 074 075 080 112 119 139 140
140	Zenith	050 055 061 071 073 091 109 121 140
141	RePlay	156

# Remote Control

## Remote Control Codes

### DVD

NO.	Brand	Code
1	Aiwa	073 044
2	Apex	000 001 003 004 016 028 029 030
3	Audiovox	074
4	Blaupunkt	078
5	BOSE	062 071
6	Broksonic	045
7	Clarion	046
8	Classic	047
9	Daewoo	079 080
10	Denon	075 095 096
11	Emerson	048 049
12	Fisher	050 076
13	Funai	049 064
14	GE	005 051 102
15	Go Video	068 070
16	GPX	052
17	Harman Kardon	066
18	Hitachi	065 067
19	Irradio	092
20	JVC	007 010 011 012 013
21	Kenwood	097 100
22	Koss	093
23	Magnavox	020 035
24	Marantz	085
25	Memorex	087
26	Mintek	053
27	Mitsubishi	088 089 090 091
28	NAD	048 081
29	Nakamichi	054
30	Norcent	055 056
31	Onkyo	082 086
32	Oritron	057
33	Panasonic	008 036 037
34	Philips	002 009 021 022 023 043
35	Pioneer	027 032
36	Proscan	005 099
37	Qwestar	057
38	RCA	005 024 038
39	Sampo	058
40	Samsung	006 017 033 041
41	Sansui	060
42	Sanyo	059 063
43	Sharp	014 031
44	Sherwood	061
45	Sony	015 018 034 039
46	Sylvania	049 072 077
47	Techwood	083
48	Toshiba	019 026 040 042
49	Yamaha	084 098
50	Zenith	069 094

### VCR

NO.	Brand	Code 1	2	3	4	5	6	7	8	9	10	11	12		
1	Admiral	073	074	101											
2	Aiko	056													
3	Aiwa	055													
4	Akai	044	045	068	069	080	093								
5	Audiovox	051													
6	Bell & Howell	048													
7	Broksonic	023	049	106											
8	Calix	051													
9	Canon	053	054												
10	Capehart	067	083												
11	Carver	060	110												
12	CCE	056	059												
13	Citizen	050	051	052	056	095									
14	Colortyme	046	096												
15	Craig	050	051	059	085	090	105								
16	Curtis Mathes	043	046	050	053	054	077	079	112						
17	Daewoo	014	052	055	056	067	083	102							
18	Daytron	067	083	102											
19	Denon	088													
20	Dimensia	043	112												
21	Electrohome	051	090												
22	Emerson	044	049	051	052	053	055	061	069	087	090	106			
23	Fisher	048	089	105											
24	Fuji	045	053												
25	Funai	055	095												
26	Garrard	055													
27	GE	040	043	050	053	054	070	079	081	087	112				
28	Go Video	021	024	026	028	034	079	081	085	086					
29	Goldstar	046	051	079	090	092									
30	Gradiente	055	090												
31	Harman Kardon	046	110												
32	Harwood	059													
33	Hitachi	025	036	037	057	058	065	068	070	088					
34	JBL	098													
35	JC Penney	046	047	048	049	050	051	053	054	057	058	059	060	065	079
		085	088	090											
36	Jensen	057	058	068											
37	JVC	000	019	046	047	048	068	071	087	088					
38	Kenwood	046	047	048	068	071	077								
39	KLH	059													
40	Kodak	051	053												
41	LG	051													
42	Lloyds	077	095	105											
43	Logik	059	085												
44	LXI	051													
45	Magnasonic	085	090	102											
46	Magnavox	008	053	054	060	064	085	110							
47	Marantz	046	047	048	053	060	077	092	110						
48	Matsushita	053													
49	Memorex	033	048	050	051	053	055	064	073	074	088	090	091	097	105
50	MGA	061	069												
51	MGN	079													
52	Minolta	057	058	065	088										
53	Mitsubishi	003	005	006	057	058	061	069	071	090					
54	Montgomery Ward	073	074												
55	Motorola	053	073	074											
56	MTC	050	085												
57	Multitech	050	055	059											
58	NEC	046	047	048	068	071	077	092							
59	Nikko	051													
60	Noblex	050													
61	Olympus	053													
62	Optimus	051	073	074	090	094									
63	Optonica	062													
64	Orion	087	090	106											
65	Panasonic	002	004	009	020	053	054	066	085	090	105				
66	Pentax	057	058	065	070	077	088								
67	Philco	053	054	060	088	106									
68	Philips	017	018	053	042	060	062	110							
69	Pioneer	047	057	071	075	078	104								
70	Portland	067	083												
71	Proscan	043	112												
72	Precision	102													
73	Proton	085													
74	Quasar	053	054	090											
75	Radio Shack	051	062	074	090										

# Remote Control

## Remote Control Codes

NO.	Brand	Code
76	Radio Shack/Realistic	048 050 051 053 054 055 062 073
77	Radix	051
78	RCA	012 016 043 044 050 053 057 058 065 070 078 079 088 107 108 112
79	Realistic	048 050 051 052 053 054 055 062 073 074 079 090 094 097 105
80	Ricoh	072 076
81	Runco	064
82	Samsung	029 031 035 039 050 052 079 095
83	Sansui	047 068 071 085
84	Sanyo	022 048 050 089 097 105
85	Scott	049 052 061 090
86	Sears	048 051 053 057 058 065 077 088 089 090 097 105
87	Sharp	015 062 073 074 091 094 101
88	Shintom	045 058 059 085
89	Signature	073 074
90	Signature 2000	097 101
91	Singer	053 059 072 076 085
92	Sony	007 041 045 063 080 082 084 098 099
93	STS	053 065
94	Sylvania	030 032 053 054 055 060 061 110
95	Symphonic	055 077 095 105
96	Tandy	048
97	Tashiko	051
98	Tatung	068
99	Teac	055 068 107
100	Technics	053 066
101	Teknika	051 053 055 090
102	Toshiba	010 011 052 057 061 069 100 102 105 109
103	Totevision	050 051 090
104	Tivo	111
105	Unitec	095
106	Unitech	050
107	Vector Research	046 047 052 077
108	Video Concepts	046 047 052 069 077
109	Wards	050 051 052 053 055 057 058 059 062 065 073 074 079 090 091 094 105 108 110
110	White Westinghouse	095
111	XR-1000	053 055 059
112	Yamaha	046 047 048 068 077
113	Zenith	027 038 045 064 072 076 090 093
114	Action	102

## SETBOX

NO.	Brand	Code
1	Alphastar	028
2	Chaparral	024
3	DIRECTV	001 039
4	DISH NETWORK	001 026 030
5	Drake	027
6	Echostar	026
7	Express Vu	030
8	Fujitsu	022
9	GE	004 032 033
10	General Instruments	018 019
11	Hitachi	023
12	Hughes	023 036
13	Janeil	022
14	JVC	015
15	Mitsubishi	002 040
16	Panasonic	005 011
17	Philips	000 012
18	Proscan	032 033
19	Radio Shack	018 019
20	RCA	010 032 033
21	Realistic	014
22	Samsung	006 028
23	Sony	007 034 035 037 038
24	Star Choice	031
25	Star Trak	021
26	STS	020
27	Toshiba	008 029
28	Uniden	016 017
29	Zenith	009 013 022

## CABLE

NO.	Brand	Code
1	ABC	000 001 002 030
2	Archer	006 007
3	Cableview	003
4	Contec	034
5	Eastern	035
6	GE	000
7	Gemini	012 013
8	General Instruments	000 032
9	Hamlin	036 037 038 040 044
10	Hitachi	000
11	Jerrold	000 012 015 016 026 030 032
12	Magnavox	017
13	Motorola	031
14	Movie Time	039
15	NEC	033
16	NSC	039
17	Oak	034 041
18	Panasonic	027 029
19	Philips	008 009 010 011 013 017 018 019 020
20	Pioneer	021 022
21	Proscan	000
22	RCA	003 029 032
23	Realistic	006
24	Samsung	022
25	Scientific Atlanta	002 023 024 025
26	Signature	000
27	Sprucer	029
28	Standard Component	042 043
29	Starcom	012 030
30	Stargate	012
31	Tocom	001 015
32	United Cable	030
33	Universal	004 006 007
34	View Star	017 034 039
35	Zenith	028

# Remote Control

## Remote Control Codes

### AUDIO

#### Receiver/Tuner

NO.	Brand	Code
1	Aiwa	017 036 039
2	BOSE	010
3	Carver	051
4	Curtis Mathes	041
5	Denon	006 026 027 052
6	Fisher	042 044 049
7	Gradiente	062
8	Harman Kardon	008 038 046
9	Hitachi	059
10	JBL	038
11	Jensen	061
12	JVC	007 030
13	Kenwood	005 028 048 056
14	Luxman	064
15	Marantz	019
16	McIntosh	058
17	NAD	040
18	Nakamichi	054
19	NEC	040
20	Nikko	063
21	Onkyo	003 021 055
22	Optimus	041 047
23	Panasonic	009 012 016 029 050
24	Philips	014
25	Pioneer	004 023 041 045
26	Quasar	050
27	Radio Shack	047
28	RCA	071 072
29	Sansui	057
30	Sanyo	042 044
31	Sharp	060
32	Sherwood	047
33	Sony	000 024 043
34	Technics	002 020 050
35	Toshiba	025
36	Yamaha	048 053
37	Zenith	065

#### Audio Cassette

NO.	Brand	Code
1	Aiwa	039
2	Curtis Mathes	041
3	Denon	052
4	Fisher	042 049
5	GE	070
6	Kenwood	048 056
7	NAD	040
8	Nakamichi	054
9	Onkyo	055
10	Optimus	041 047
11	Panasonic	015 050
12	Philips	013
13	Pioneer	018 041 045
14	Proscan	070
15	Quasar	050
16	Radio Shack	047
17	RCA	070
18	Sansui	057
19	Sanyo	044
20	Sherwood	047
21	Sony	043
22	Technics	050
23	Yamaha	053

#### Audio System

NO.	Brand	Code
1	Aiwa	039
2	Carver	051
3	Curtis Mathes	041
4	Denon	052
5	Harman Kardon	046
6	Jerrold	066 068
7	Kenwood	048 056
8	Nakamichi	054
9	Panasonic	015 016
10	Philips	013 014
11	Pioneer	018 041
12	RCA & Dimensia	031 032 033 034 035
13	Sansui	057
14	Sanyo	044
15	Scientific Atlanta	067
16	Sony	043
17	Starcom	066
18	Technics	050
19	Yamaha	053

#### Amplifier

NO.	Brand	Code
1	Kenwood	048
2	Pioneer	041
3	RCA	069
4	Yamaha	001 053

#### Phono

NO.	Brand	Code
1	Kenwood	048
2	Pioneer	041
3	Sony	043
4	Yamaha	053

#### HTIB

NO.	Brand	Code
1	BOSE	010
2	Philips	022
3	Toshiba	025

## Maintenance

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

### Cleaning the Screen

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

### Cleaning the Cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

### Extended Absence

If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

## Product Specification

<b>Resolution</b>	1920X1080(Dot)
<b>Power requirement</b>	120V~ , 60Hz
<b>Color system</b>	NTSC, ATSC, Clear QAM
<b>External Antenna Impedance</b>	75 ohm
<b>Color</b>	16,770,000(256 steps of each R, G and B)
<b>Operating Temperature Range</b>	32~104°F(0~40°C)
<b>Operating Humidity Range</b>	Less than 80%
<b>Maximum Elevation</b>	6561 feet (2000m)
<b>Dimensen(WXDXH) Unit:inches/mm (Including stand)</b>	44.7X13.0 X31.5inches 1135X330X800 mm
<b>Weight(pounds/kg)</b>	76.5/34.7

■ The specifications shown above may be changed without prior notice for quality improvement.

# Troubleshooting

For the sake of time and cost, it is strongly recommended that you check out the problem by yourself according to the instructions listed hereunder before contacting the after-sales service for technical assistance.

No picture, no sound	Verify if the television is properly plugged. Verify if the television is properly supplied power. Verify if electricity is available.
Blank screen	Verify if correct signals are input. Press INPUT button to change signal input to TV input. Restart the television if power supply is interrupted.
No sound	Press Mute button and verify if Mute mode is set. Switch to other channel and verify if the same problem happens. Press VOL+ button to see if the problem can be solved.
Poor sound	Verify if sound system is correct. Refer to Page 22 for adjustments.
No picture in some channel	Verify if correct channel is selected. Adjust the antenna. Make adjustments by Fine Tune and Manual Scan.
No color for some channel program (black and white)	Verify if the same problem exists in other channels. Check out of picture and sound systems. Refer to relative instructions in the Manual for color adjust.
Spots with some or all pictures	Verify if the antenna is correctly connected. Verify if the antenna is in good condition. Make fine adjustment of channel.
Horizontal/vertical bars or picture shaking	Check for local interference such as an electrical appliance or power tool.
Television out of control	Disconnect the television from power supply and, 10 seconds later, connect the television to the power supply. If the problem still exists, contact authorized after-sales service for technical assistance.

**Note:** Do not leave the television with static picture in an extended period as the image may become permanently burned.

**Note:** Production of the LCD screen requires high and precision technologies. However, there might be some dark or bright (red, blue or green) spots, or some anomalistic stripes or spots. This is not defect. If the TV set is used in an area 2,400 meters above the sea level where the air pressure is below 750hpa, the picture on the LCD screen may be affected and a muffled sound might be produced. These phenomena might happen in the area 1,500 meters above the sea level. This is resulted from difference between air pressures inside and outside the display. This is not a defect covered by the limited warranty.





## LIMITED WARRANTY - LCD

PWW Service Inc. warrants to you, the original purchaser of this Product, that this product shall be free of defects in material or workmanship for a period of one year (365 days) from the date of purchase as follows:

1. **LABOR:** During the Warranty Period if this Product is determined to be defective, PWW Service Inc. will repair or replace the Product, at its option at no charge, or pay the labor charges to any authorized service facility. After the Warranty Period, you must pay for all labor charges.
2. **PARTS:** In addition, PWW Service Inc. will supply, at no charge, new or rebuilt replacement parts in exchange for defective parts for the Warranty Period. The LCD Panel contains pixels which are picture elements that make up the image seen on the TV display. PWW Service Inc. warrants the LCD panel will contain no more "dead or stuck" pixels that what is specified by the LCD module maker for the warranty period. After the Warranty Period, you must pay all parts costs. To determine what the dead/bright pixel specification for the panel maker in this product, please contact our service center for more information.

To obtain warranty service, you must take the Product with your original receipt or other proof of purchase, either in its original packaging or packaging affording an equal degree of protection, to your original place of purchase, or the location specified by PWW Service Inc. from which you purchased the Product.

This warranty does not cover customer instruction, installation, non-service related adjustments, removing / installing the TV from/to a mounting bracket and/or wall and resolving signal reception problems. Please note that this product's screen is made using high-precision technology. However, the screen may display multiple black or bright points of light (red, blue or green) constantly on the screen. Irregular colored stripes or varying brightness may also appear on the screen, and this is not a defect in material or workmanship that is covered by this warranty.

This warranty does not cover cosmetic damage or damage due to acts of God, lightning strikes, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of the Product, including the antenna. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by PWW Service Inc. to service the Product. This warranty does not cover Products sold AS IS or AS REFURBISHED, or consumables (such as fuses or batteries). This warranty is valid only in Canada.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. PWW Service Inc. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY, REPRESENTATION OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some provinces do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from province to province.

For customer service please call 1-866-447-7462

[www.pwwservice.com](http://www.pwwservice.com)

PWW Service Inc. 13200 Delf Place, Unit 180, Richmond, BC. V6V 2A2, Canada

