
9896090600

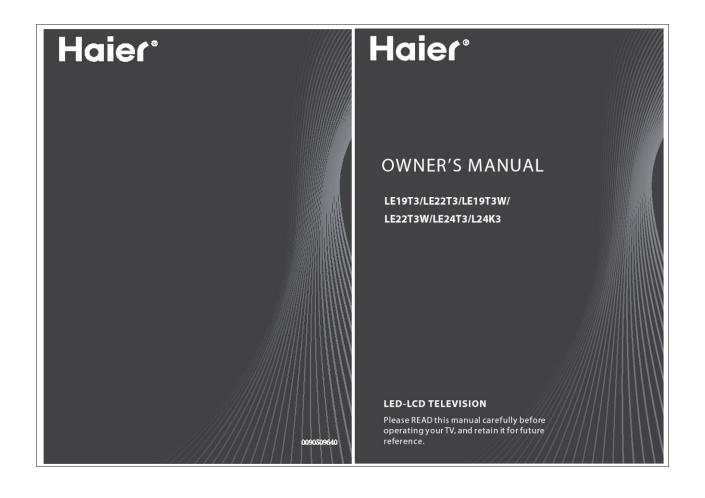

媒体编号 00000321366

旧底图总号

底图总号

签名 日期

## 技术要求

- 1. 图中版面按照182\*257尺寸; 合计30页。 2. 材质要求: 70g双胶 3. 符合集团绿色环保标准Q/HR 091 054。 4. 按照集团说明书的标准Q/HR 0903 002执行。

镀涂

签名 日期 孔繁荔 徐冬 设 计 审 核 工艺 崔志龙 标准化

A版 (01版)

LE19T3/L24K3 0090509636 (印度) 使用说明书 1: 1 共 38 张

背部がた、电子有限公司

商品开发部 结构所

格式 (5)

制图:

描图:

陈莹 幅面: A4

批准



## **OWNER'S MANUAL**

LE19T3/LE22T3/LE19T3W/ LE22T3W/LE24T3/L24K3

## **LED-LCD TELEVISION**

Please READ this manual carefully before operating your TV, and retain it for future reference.

## **Contents**

| Warning                                  | <u>3</u> |
|--|----------|
| Important Safety Instructions            | <u>4</u> |
| Panel Control and Rear Terminals Control | 6        |
| Panel Control                            | 6        |
| Rear Terminals Control                   | 6        |
| Remote Control                           | 7        |
| Battery loading                          | 7        |
| Precautions                              | 7        |
| Remote Control Function                  | 8        |
| Function introduction                    | 8        |
| External Equipment Connections           | 9        |
| Antenna Connection                       | 9        |
| Choose Your Connection1                  | 0        |
| VCR Connection1                          |          |
| DVD Setup                                |          |
| PC Setup1                                |          |
| Monitor Out Setup1                       |          |
| Connecting Headphones1                   | 2        |
| Power source1                            | 2        |
| Basic Receiving and Playing              |          |
| Onewations 1                             | 2        |
|  | _        |
| Switching ON/OFF the TV set1             | 2        |
| Switching ON/OFF the TV set1             |          |
| Choose the Menu Language1                |          |
| Choose the Input source                  |          |
| Searching Channel1                       |          |
| Channel Edit                             | 4        |
| Exchange1 Watching TV Program1           |          |
| How to select the desired program        |          |
| How to select the desired program        |          |
| Mute Setting1                            | 5        |
| Quick program view1                      | 5        |

| Picture Control Functions                 | 15 |
|---|----|
| How to select the picture mode            | 15 |
| How to customize your own picture status  |    |
| Sound Control Functions                   | 16 |
| How to choose audio mode                  | 16 |
| How to customize your own audio status    | 17 |
| Timer Functions                           | 17 |
| Setting of Current Time                   | 17 |
| Setting of ON/OFF Time                    | 18 |
| Setting of On Channel                     |    |
| Setting of Remind Time and Remind Channel |    |
| Function Menu                             | 19 |
| Function Menu Set                         | 19 |
| Adjust Menu                               | 20 |
| Lock Setup                                | 20 |
| How to use the password function          | 20 |
| Streaming Media Playing System            | 21 |
| Start/Exit Streaming Media Playing system | 21 |
| Operating Method of Streaming Media Menu  | 22 |
| Playing a Picture                         |    |
| Playing a Movie                           |    |
| Playing Music                             |    |
| Text                                      |    |
| Settings                                  | 23 |
| Maintenance                               | 23 |
| Tuoublachoatina                           | 24 |
| Troubleshooting                           | 24 |
| Specification                             | 24 |
| Format                                    | 25 |

## Warning



#### WARNING:

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

- \*To avoid electric hazards, it is strongly suggested that the back cover not be opened, as there is no any accessory inside the casing.
- \* If necessary, please contact authorized after-sales services.
- \* A lighting flash mark in a triangle: A potentially hazardous situation, which, if not avoided, could result in serious injury by high voltage.
- \* An exclamation mark in a triangle: Major part or accessory of which technical specifications must be followed if it is to be replaced.

| WARNING: | To avoid fire or electric hazards, never place your television receiver in an area with heavy moisture. Attention should be paid to avoid accidental scratches or impacts onto the screen.   |
|----------|--|
| CAUTION: | <ul> <li>Please read this manual carefully before using your television and keep this manual in a good place for future reference.</li> <li>To achieve the best performance of your television, read this User's Manual carefully and properly store it for future reference.</li> <li>Information of screen displays and figures in the User's Manual may vary due to technical innovations.</li> </ul> |
| CAUTION: | ☐ Unauthorized disassembly of this product is prohibited.  |

## **Important Safety Instructions**

The product should be tightly fixed to avoid drop damages and even fire.



Do not locate the product close to water or oil, which may cause fire hazards.



Do not use damaged or worn electric plugs, and keep electric cord away from heat sources to avoid electric shocks or fire hazards.



The product must be placed on a solid and stable surface to avoid collapse.



Keep the product away from a transformer or heat source to avoid fire hazards.



 
To avoid fire hazards, do not use this product under direct sunlight or closely to heat sources.

Unplug the power supply and antenna of the product when there is a rainstorm, especially

Thunderstorm.



Do not connect excessive sockets in parallel or share the same socket by multiple plugs to avoid fire beyonds.



Unauthorized disassembly of the television is prohibited to avoid electric shocks or fire hazards. Contact


authorized after-sales service if technical service is needed.



Disconnect the product from power supply and contact authorized after-sales service if abnormal sound is heard in the product. Don't use or store inflammable materials near the product to avoid explosion or fire hazards.



The antenna of the product should be away from electric cable to avoid electric shocks.

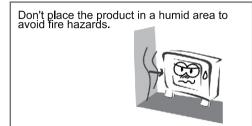

Never touch the plug when your hand is wet as this might cause electric shocks.



Always make sure that the televisionis well plugged as poor electric connection might cause fire.



Unplug the television, use soft fabric, never chemicals, if you are going to make cleaning of the product.

Make sure that no water drops in the product.




Disconnect the television from power supply and antenna when there is a

rainstorm or thunderstorm to avoid electric shocks or fire hazards.



When antenna is used, measures should be taken to prevent water

from flowing down along the cable into the television.

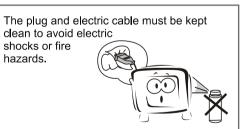

Disconnect the television from power supply to avoid electric shocks or fire hazards in a long


vocation.




## **Panel Control and Rear Terminals Control**

- This is a simplified representation of front panel.
- Here shown may be somewhat different from your TV.

## **Panel Control**

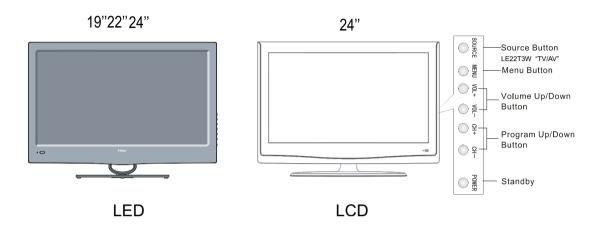

## **Rear Terminals Control**

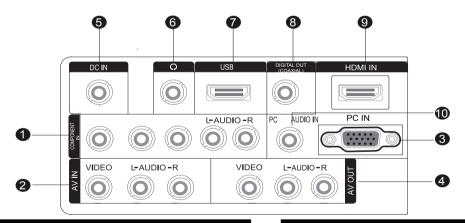


| _ | COMPONENT In           | Connect a component Video/Audio device to                  | 6   | Headphone    | Headphone audio output terminal.             |
|---|------------------------|--|-----|--------------|--|
|   |                        | these jacks  |     | uen          | Connect a USB flash drive to view PPEG2      |
| ( | 2) AV IN               | Connect Video/Audio out from an Video/Audio                | (/  | USB          | videos, JPEG images or listen to MP3 songs.  |
| ` | 5                      | device to these jacks                                      | _   | DIGITAL      |  |
| ( | 3 PC IN                | Connect the monitor output connector from a PC to the jack | 8   | OUT(COAXIAL) | Digital/Coaxial output terminal              |
|   |                        | ·  | (9) | HDMI         | Connect a signal to HDMI                     |
| ( | AV OUT                 | Video/Audio output terminal                                | · · | IIDINII      | Connect a signal to Holvii                   |
| ( | 5) DCIN                | Connect the monitor output connector from a DC             | 10  | PC/DVI AUDIO | Connect a PC/DVI Audio device to these jacks |
|   | <i>y</i> <b>DC</b> III | to the jack(not available for the L24K3 model)             |     |              |  |

## **Remote Control**
 
## **Battery loading**

- 1. Slide open the cover of the battery compartment on the back of the remote controller.
- 2. Load two 7# (AAA) alkaline batteries in the compartment, (plus and minus poles to respective mark)
- 3. Replace the cover of the battery compartment.



## **Precautions**

As strong light may interfere the signals, change your position to operate the remote controller if the television cannot be turned on or off as you expect.



 
Keep the remote controller away from heat source or humid area to ensure effective performance of the remote controller.




Make sure that two AAA alkaline batteries are loaded. The batteries must be of the same type. The batteries must be located properly. The batteries are not rechargeable.








Make sure that there is no obstacle between the remote controller and television set.

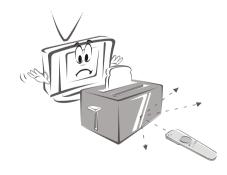

## Remote Control Function

- The remote control cannot be operated unless the batteries are properly loaded.
- When using the remote control, aim it at the remote control sensor on the TV.

## **Function introduction**

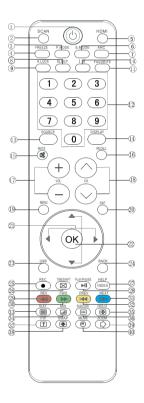



| POWER Press this key to start TV from standby mode, press it again to return to standby mode.  SCAN It is only available in TV mode.  Picture Mode Press this key continuously to select the picture mode.  Press this key continuously to select the picture mode.  Press this key continuously to select the picture mode.  Press to select a device connected to the HDMI input.  Sound Mode Press this key to select the sound mode.  ARC Press this key to select the sreen display proportion.  SLEEP Displaying the sleep time.  H. LOCK Refer to the Functional Description on Page 20  I/II No available  FAVORITE Press to open the favorite channel list in TV.  O-9 These keys are used to select a channel.  SOURCE Press this key to open/close signal source options menu.  Press this key to mute the sound, press it again to activate the sound, may be activated by turning the TV on again or increasing the volume.  Press this key to mute the sound, press it again to activate the sound. The sound may be activated by turning the TV on again or increasing the volume.  Press this key to display the Special Function Menu (it functions when special modules are inserted).  VOL+/- Used to adjust the volume when the screen menu is closed, specifically, press CH- to decrease the channel and press CH+ to increase the channel.  Press this key to display or exit the main menu.  EXIT THUMBSTICK (Up/ Down/Left/Right/OK)  OK Press this key to onfirm the selection.  Press this key to onavigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  Press this key to quick switching of streaming media.  BACK BACK BACK BACK BACK BACK BACK BAC  |        |                  |   |  |
|--|--------|------------------|---|--|
| SCAN It is only available in TV mode.  Picture Mode Press this key continuously to select the picture mode.  Press once to display a frozen image of the current program, but audio continues. Press again to return to the program.  HDMI Press to select a device connructed to the HDMI input.  Sound Mode Press this key continuously to select the sound mode.  Press this key to select the screen display proportion.  SLEEP Displaying the sleep time.  HLOCK Refer to the Functional Description on Page 20  I/II No available  FAVORITE Press to open the favorite channel list in TV.  O-9 These keys are used to select a channel.  SOURCE Press this key to open/close signal source options menu.  MUTE Press this key to open/close signal source options menu.  MUTE Press this key to tisplay the TV status information on the top of the TV screen.  Press this key to turning the TV on again or increasing the volume. Press this key to display the Special Function Menu (it functions when special modules are inserted).  VOL+/- Used to adjust the volume when the screen menu is closed.  Used to select a TV channel when the screen options menu is closed, specifically, press CH+ to decrease the channel and press CH+ to increase the channel. Press this key to display or exit the main menu.  EKIT THUMBSTICK (Up/D) Down/Left/Right/OK)  OK Press this key to display or exit the main menu.  PAllows you to navigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  PAllows you to navigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  PAllows you to navigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  PALS TAS Reverse (only for USB).  PLAY/PAUSE Fast Reverse (only for USB).  PAT No available.  PREV Fast Reverse (only for USB).  PREV Fast Reverse (only for USB).  PREV Fervious(only for USB).  PREV Fervious(only for USB).  NEXT No available.  No available. |        | -                | Press this key to start TV from standby mode, press it again to return to standby |  |
| SCAN   | 1      | POWER            |   |  |
| FREEZE Press once to display a frozen image of the current program, but audio continues. Press again to return to the program.  HDMI Press to select a device connected to the HDMI input.  ARC Press this key continuously to select the sound mode.  ARC Press this key to select the screen display proportion.  SILEEP Displaying the sleep time.  H. LOCK Refer to the Functional Description on Page 20  I/II No available Press to spen the favorite channel list in TV.  O-9 These keys are used to select a channel.  SOURCE Press this key to open/close signal source options menu.  BISPLAY Press to display the TV status information on the top of the TV screen.  Press this key to mute the sound, press it again to activate the sound. The sound may be activated by turning the TV on again or increasing the volume. Press this key to display the Special Function Menu (it functions when special modules are inserted).  USC CH+/- Used to adjust the volume when the screen menu is closed, specifically, press CH- to decrease the channel and press CH+ to increase the channel.  EXIT Clead to select a TV channel when the screen menus and adjust the system setting to your preference. Press Ok buuton to confirm the selection.  ARC CH+/-  Down/Left/Right/OK)  OK Press this key to onavigate the on-screen menus and adjust the system setting to your preference. Press Ok buuton to confirm the selection.  Press this key to confirm the selection  BACK BaCK Back button(only for USB).  FESS this key to confirm the selection  Press this key to confirm the selection  TIMESHIFT No available.  Press this key to confirm the selection  FESS this key to confirm the selection  Press this key to available.  PREV Fast Reverse (only for USB).  FEV Fast Reverse (only for USB).  FEXT No available.  MIX No available.  BACK Press this key to available.  SUBCODE No available.  SUBCODE No available.  SUBCODE No available.  SUBCODE No available.  SUBCODE Fast Reverse(only for USB).  | (2)    | SCAN             |   |  |
| ## FREEZE    Press once to display a frozen image of the current program, but audio continues. Press again to return to the program.   HDMI  | $\sim$ |                  |   |  |
| continues. Press again to return to the program.  (i) HDMI Press to select a device connrcted to the HDMI input. (ii) Sound Mode Press this key to select the screen display proportion.  (iii) SLEEP Displaying the sleep time. (iii) H. LOCK Refer to the Functional Description on Page 20 (iv) I/II No available. (iv) FAVORITE Press to open the favorite channel list in TV. (iv) O-9 These keys are used to select a channel. (iv) SOURCE Press this key to open/close signal source options menu. (iv) DISPLAY Press to display the TV status information on the top of the TV screen. (iv) DISPLAY Press this key to mute the sound, press it again to activate the sound. The sound may be activated by turning the TV on again or increasing the volume. (iv) RECALL Press this key to display the Special Function Menu (it functions when special modules are inserted). (iv) VOL+/- Used to adjust the volume when the screen menu is closed. (iv) CH+/- Used to select a TV channel when the screen options menu is closed, specifically, press CH- to decrease the channel and press CH+ to increase the channel. (iv) Press this key to display or exit the main menu. (iv) EXIT Clears all on-screen displays and returns to TV viewing from any menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press this key to display or exit the main menu. (iv) Press  |        | FAFFTF           |   |  |
| Good Mode Press this key to select the screen display proportion.  SLEEP Displaying the sleep time. H. LOCK Refer to the Functional Description on Page 20 I/II No available Press to open the favorite channel list in TV. O-9 These keys are used to select a channel. SOURCE Press this key to open/close signal source options menu. DISPLAY Press to display the TV status information on the top of the TV screen. Press this key to mute the sound, press it again to activate the sound. The sound may be activated by turning the TV on again or increasing the volume. Press this key to display the Special Function Menu (it functions when special modules are inserted).  VOL+/- Used to adjust the volume when the screen menu is closed. Press this key to display or exit the main menu. CH+/- press CH-/- Down/Left/Right/OK) Nown/Left/Right/OK) RECAL BACK BACK BACK BACK BACK BACK BACK BACK  | 4)     | FKEEZE           | continues. Press again to return to the program.                                  |  |
| ARC Press this key to select the screen display proportion.  SLEEP Displaying the sleep time.  H. LOCK Refer to the Functional Description on Page 20  IVII No available FAVORITE Press to open the favorite channel list in TV.  Degree Press this key to open/close signal source options menu.  DISPLAY Press to display the TV status information on the top of the TV screen.  Press this key to mute the sound, press it again to activate the sound. The sound may be activated by turning the TV on again or increasing the volume.  Press this key to display the Special Function Menu (it functions when special modules are inserted).  VOL+/- Used to adjust the volume when the screen menu is closed.  Used to select a TV channel when the screen options menu is closed, specifically, press CH- to decrease the channel and press CH+ to increase the channel.  MENU Press this key to display or exit the main menu.  EXIT Clears all on-screen displays and returns to TV viewing from any menu.  PAllows you to navigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  PAllows you to navigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  PRESS this key for quick switching of streaming media.  BACK Back Back Back Back Back button(only for USB).  REC No available.  TIMESHIFT No available.  PLAY/PAUSE Fast Reverse (only for USB).  PLAY/PAUSE Fast Reverse (only for USB).  PREV Fast Reverse (only for USB).  PREV Previous(only for USB).  PREV Previ | (5)    | HDMI             | Press to select a device connrcted to the HDMI input.                             |  |
| SLEEP Displaying the sleep time.  H. LOCK Refer to the Functional Description on Page 20  IVII No available FAVORITE Press to open the favorite channel list in TV.  Degree These keys are used to select a channel.  SOURCE Press this key to open/close signal source options menu.  DISPLAY Press to display the TV status information on the top of the TV screen.  Press this key to mute the sound, press it again to activate the sound. The sound may be activated by turning the TV on again or increasing the volume.  Press this key to display the Special Function Menu (it functions when special modules are inserted).  VOL+/- Used to adjust the volume when the screen menu is closed, specifically, press CH- to decrease the channel and press CH+ to increase the channel.  MENU Press this key to display or exit the main menu.  EXIT Clears all on-screen displays and returns to TV viewing from any menu. THUMBSTICK (Up/Down/Left/Right/OK)  Down/Left/Right/OK)  OK Press this key for onfirm the selection  Press this key to confirm the selection  WSB Press this key to confirm the selection  TIMESHIFT No available.  TIMESHIFT No available.  HELP Fast Reverse (only for USB).  PLAY/PAUSE Fast Reverse (only for USB).  REV Fast Reverse (only for USB).  PREV Fast Reverse (only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  MEXT No available.  MIX No available.  MIX No available.  MIX No available.  MIX No available.  SUBCODE No available.  MIX No available.  SUBCODE SUBCODE No available.  | 6      | Sound Mode       | Press this key continuously to select the sound mode.                             |  |
| ## H.LOCK Refer to the Functional Description on Page 20    Will No available  | 7      | ARC              | Press this key to select the screen display proportion.                           |  |
| Ivil   No available   Press to open the favorite channel list in TV.   O-9   These keys are used to select a channel.     SOURCE   Press this key to open/close signal source options menu.     DISPLAY   Press to display the TV status information on the top of the TV screen.     MUTE   Press this key to mute the sound, press it again to activate the sound. The sound may be activated by turning the TV on again or increasing the volume.     Press this key to display the Special Function Menu (it functions when special modules are inserted).     VOL+/-   Used to adjust the volume when the screen menu is closed.     Used to adjust the volume when the screen potions menu is closed, specifically, press CH- to decrease the channel and press CH+ to increase the channel.     MENU   Press this key to display or exit the main menu.     Clears all on-screen displays and returns to TV viewing from any menu.     PAllows you to navigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.     OK   Press this key to confirm the selection   Visa   Press this key for quick switching of streaming media.     BACK   Back button(only for USB).   | 8      | SLEEP            | Displaying the sleep time.  |  |
| I/II   | 9      | H. LOCK          | Refer to the Functional Description on Page 20                                    |  |
| FAVORITE  Press to open the favorite channel list in TV.  Degree of the press this key to open/close signal source options menu.  DISPLAY  Press this key to open/close signal source options menu.  Press this key to mute the sound, press it again to activate the sound. The sound may be activated by turning the TV on again or increasing the volume.  Press this key to display the Special Function Menu (it functions when special modules are inserted).  VOL+/-  Used to adjust the volume when the screen menu is closed.  Used to select a TV channel when the screen options menu is closed, specifically, press CH+ to decrease the channel and press CH+ to increase the channel.  Press this key to display or exit the main menu.  EXIIT  THUMBSTICK (Up/Down/Left/Right/OK)  OK  Press this key to onigre the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  Wallows you to navigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  BACK  BA | (10)   | 1/11             |   |  |
| SOURCE Press this key to open/close signal source options menu.    DISPLAY   | _      |                  | Press to open the favorite channel list in TV.                                    |  |
| SOURCE   | (12)   | 0-9              | These keys are used to select a channel.  |  |
| DISPLAY Press to display the TV status information on the top of the TV screen.  MUTE Press this key to mute the sound, press it again to activate the sound. The sound may be activated by turning the TV on again or increasing the volume.  Press this key to display the Special Function Menu (it functions when special modules are inserted).  VOL+ /- Used to adjust the volume when the screen menu is closed. Used to select a TV channel when the screen options menu is closed, specifically, press CH- to decrease the channel and press CH+ to increase the channel.  EXIT THUMBSTICK (Up/Down/Left/Right/OK)  OK Press this key to display or exit the main menu.  PAllows you to navigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  Press this key for quick switching of streaming media. Back Back Back Back button(only for USB).  REC No available.  TIMESHIFT No available.  PLAY/PAUSE Fast Reverse (only for USB)  PLAY/PAUSE Fast Reverse (only for USB).  PREV Fast Reverse (only for USB).  PREV Fast Reverse (only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  MIX No available.  MIX No available.  MIX No available.  MIX No available.  SUBCODE No available.  SUBCODE No available.  SWAP No available.  SWAP No available.  SWAP No available.  SWAP No available.   | _      |                  |   |  |
| MUTE Press this key to mute the sound, press it again to activate the sound. The sound may be activated by turning the TV on again or increasing the volume.  Press this key to display the Special Function Menu (it functions when special modules are inserted).  VOL+/- Used to adjust the volume when the screen menu is closed.  Used to select a TV channel when the screen options menu is closed, specifically, press CH- to decrease the channel and press CH+ to increase the channel.  Press this key to display or exit the main menu.  EXIT Clears all on-screen displays and returns to TV viewing from any menu.  THUMBSTICK (Up/ Down/Left/Right/ OK)  OK Press this key to confirm the selection  VSB Press this key to confirm the selection  SACK BACK BACK BACK BACK BACK BACK BACK B   | _      |                  | · · · · ·   |  |
| may be activated by turning the TV on again or increasing the volume .  Press this key to display the Special Function Menu (it functions when special modules are inserted).  VOL+/- Used to adjust the volume when the screen menu is closed. Used to select a TV channel when the screen options menu is closed, specifically, press CH- to decrease the channel and press CH+ to increase the channel.  MENU Press this key to display or exit the main menu.  EXIT Clears all on-screen displays and returns to TV viewing from any menu.  THUMBSTICK (Up/ Down/Left/Right/ OK)  OK Press this key to confirm the selection  VSB Press this key for quick switching of streaming media.  BACK Back Back button(only for USB).  REC No available.  TIMESHIFT No available.  THUMBSTICK PREV Fast Reverse (only for USB).  FWD FAST Reverse (only for USB).  TEXT No available.  MIX No available.  MIX No available.  MIX No available.  SUBCODE No available.  SUBCODE No available.  SWAP No available.  SWAP No available.  SWAP No available.  SWAP No available.  | (14)   | DISPLAY          |   |  |
| modules are inserted).  VOL+/- Used to adjust the volume when the screen menu is closed.  Used to select a TV channel when the screen options menu is closed, specifically, press CH+ to decrease the channel and press CH+ to increase the channel.  EXIT  THUMBSTICK (Up/ Down/Left/Right/ OK)  OK  Press this key to display or exit the main menu.  PAllows you to navigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  USB  Press this key to confirm the selection  BACK BACK BACK BACK BACK BACK BACK BAC  | 15     | MUTE             | may be activated by turning the TV on again or increasing the volume .            |  |
| Used to select a TV channel when the screen options menu is closed, specifically, press CH- to decrease the channel and press CH+ to increase the channel.  MENU Press this key to display or exit the main menu.  Clears all on-screen displays and returns to TV viewing from any menu.  THUMBSTICK (Up/ Down/Left/Right/ OK)  OK PAllows you to navigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  Value Back Back Back Back button(only for USB). REC No available.  TIMESHIFT No available.  PLAY/PAUSE Fast Reverse (only for USB)  REV Fast Reverse (only for USB).  REV Fast Reverse (only for USB).  FWD Fast Forward(only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  TEXT No available.  MIX No available.  MIX No available.  SUBCODE No available.  SUBCODE No available.  SUBCODE No available.  SWAP No available.  | 16     |                  |   |  |
| menu press CH- to decrease the channel and press CH+ to increase the channel.  menu press this key to display or exit the main menu.  lear all on-screen displays and returns to TV viewing from any menu.  THUMBSTICK (Up/Down/Left/Right/OK)  OK Pallows you to navigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  Thumbstick (Up/Down/Left/Right/OK)  OK Press this key to confirm the selection  Rec Nos available.  TIMESHIFT No available.  PLAY/PAUSE Fast Reverse (only for USB)  REV Fast Reverse (only for USB).  FWD Fast Reverse (only for USB).  FWD Fast Forward(only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  MIX No available.  MIX No available.  MIX No available.  SUBCODE No available.  SUBCODE No available.  SUBCODE No available.  SWAP No available.  SWAP No available.   | 17     | VOL+ /-          | ,   |  |
| EXIT Clears all on-screen displays and returns to TV viewing from any menu.  THUMBSTICK (Up/ Down/Left/Right/ OK)  OK  PAllows you to navigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  Very USB  Press this key to confirm the selection  Press this key for quick switching of streaming media.  BACK  BAC | 18     | CH+/-            |   |  |
| THUMBSTICK (Up/ Down/Left/Right/ OK)  OK Press this key to confirm the selection  USB Press this key for quick switching of streaming media.  BACK BACK BACK BACK BACK BACK BACK BAC   | 19     | MENU             |   |  |
| PAllows you to navigate the on-screen menus and adjust the system setting to your preference. Press OK buuton to confirm the selection.  Press this key to confirm the selection  Press this key for quick switching of streaming media.  BACK BACK BACK BACK BACK BACK BACK BAC   | 20     | EXIT             | Clears all on-screen displays and returns to TV viewing from any menu.            |  |
| OK Press this key to confirm the selection  USB Press this key for quick switching of streaming media.  BACK Back button(only for USB).  TIMESHIFT No available.  TIMESHIFT No available.  Fast Reverse (only for USB)  PLAY/PAUSE Fast Reverse (only for USB).  FEV Fast Forward(only for USB).  FEV Previous(only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  TEXT No available  MIX No available  MIX No available  SUBCODE No available  SUBCODE No available  SWAP No available  SWAP No available  SOMAP Fast Reverse(only for USB).  |        | THUMBSTICK (Up/  | PAllows you to navigate the on-screen menus and adjust the system setting to      |  |
| OK)  OK Press this key to confirm the selection  USB Press this key for quick switching of streaming media.  BACK Back button(only for USB).  REC No available.  TIMESHIFT No available.  PLAY/PAUSE Fast Reverse (only for USB)  REV Fast Reverse (only for USB).  FWD Fast Forward(only for USB).  FWD Fast Forward(only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  MIX No available  MIX No available  MIX No available  SUBCODE No available  SUBCODE No available  SWAP No available  SWAP No available  SWAP No available  SOMAP Fast Reverse(only for USB).   | 21     | Down/Left/Right/ | ,   |  |
| USB Press this key for quick switching of streaming media.  BACK Back button(only for USB).  TIMESHIFT No available.  HELP Fast Reverse (only for USB)  PLAY/PAUSE Fast Reverse (only for USB).  FWD Fast Reverse (only for USB).  FWD Fast Forward(only for USB).  FWD Fast Forward(only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  MIX No available  MIX No available  SUBCODE No available  SUBCODE No available  SWAP No available  SWAP No available  SWAP No available   |        |                  | , ·   |  |
| BACK Back button(only for USB).  REC No available.  TIMESHIFT No available.  PLAY/PAUSE Fast Reverse (only for USB)  REV Fast Reverse (only for USB).  FWD Fast Forward(only for USB).  NEXT Next(only for USB).  PREV Previous(only for USB).  PREV Previous(only for USB).  TEXT No available  MIX No available  MIX No available  SUBCODE No available  SUBCODE No available  SWAP No available  SWAP No available  SOMAP RECEIVED  |        |                  |   |  |
| REC No available. TIMESHIFT No available. HELP Fast Reverse (only for USB) PLAY/PAUSE Fast Reverse (only for USB). REV Fast Reverse (only for USB). FWD Fast Forward(only for USB). FWD Fast Forward(only for USB). PREV Previous(only for USB). TEXT No available. MIX No available. MIX No available. SUBCODE No available. SUBCODE No available. SWAP No available. SWAP No available. SWAP No available.   |        |                  |   |  |
| TIMESHIFT No available.  HELP Fast Reverse (only for USB)  PLAY/PAUSE Fast Reverse (only for USB).  FEV Fast Reverse (only for USB).  FWD Fast Forward(only for USB).  NEXT Next(only for USB).  PREV Previous(only for USB).  TEXT No available  MIX No available  MIX No available  SUBCODE No available  SUBCODE No available  SUBCODE No available  SWAP No available  | (24)   |                  |   |  |
| ### Past Reverse (only for USB)    PLAY/PAUSE   Fast Reverse (only for USB)  |        |                  |   |  |
| PLAY/PAUSE Fast Reverse (only for USB) Fast Reverse (only for USB). Fast Forward (only for USB).  NEXT Next(only for USB). PREV Previous (only for USB)  TEXT No available MIX No available. SHOLD No available. SUBCODE No available. PIP No available. SWAP No available.   |        |                  |   |  |
| REV Fast Reverse(only for USB). FWD Fast Forward(only for USB). NEXT Next(only for USB). PREV Previous(only for USB) TEXT No available MIX No available. SHOLD No available. SUBCODE No available. PIP No available. SWAP No available. SWAP No available. SOMAP Fast Reverse(only for USB).   | _      |                  | · ·   |  |
| <ul> <li>NEXT Next(only for USB).</li> <li>PREV Previous(only for USB)</li> <li>TEXT No available</li> <li>MIX No available.</li> <li>HOLD No available.</li> <li>SUBCODE No available.</li> <li>PIP No available.</li> <li>SWAP No available.</li> <li>ZOOM Fast Reverse(only for USB).</li> </ul>  | _      |                  | • • •   |  |
| Previous(only for USB)  TEXT No available  MIX No available.  HOLD No available.  SUBCODE No available.  PIP No available.  SWAP No available.  SWAP No available.  SOMAP Fast Reverse(only for USB).  |        | FWD              |   |  |
| TEXT No available.  MIX No available.  HOLD No available.  SUBCODE No available.  PIP No available.  SWAP No available.  ZOOM Fast Reverse(only for USB).  | 31)    | NEXT             | Next(only for USB).   |  |
| MIX No available.  SHOLD No available.  SUBCODE No available.  PIP No available.  SWAP No available.  SWAP No available.  SOMAP Fast Reverse(only for USB).  | 32     | PREV             | Previous(only for USB)  |  |
| ## HOLD No available.    SUBCODE No available.    PIP No available.    SWAP No available.    SWAP No available.    SOM Fast Reverse(only for USB).   | (33)   | TEXT             | No available  |  |
| SUBCODE No available.  PIP No available.  SWAP No available.  ZOOM Fast Reverse(only for USB).   | 34     | MIX              | No available.   |  |
| <ul> <li>③ PIP No available.</li> <li>③ SWAP No available.</li> <li>③ ZOOM Fast Reverse(only for USB).</li> </ul>  | 35     | HOLD             | No available.   |  |
| \$\text{39} \text{ SWAP} \text{No available.} \$\text{39} \text{ ZOOM} \text{Fast Reverse(only for USB).}  | 36     | SUBCODE          | No available.   |  |
| 39 ZOOM Fast Reverse(only for USB).  | 37)    | PIP              | No available.   |  |
|  | 38     | SWAP             | No available.   |  |
| MOVE No available.   | 39     | ZOOM             | Fast Reverse(only for USB).   |  |
|  | 40     | MOVE             | No available.   |  |

## **External Equipment Connections**
 
## **Antenna Connection**

- Antenna or Cable Service without a Cable Box Connections.
- For optimum picture quality, adjust antenna direction if needed.

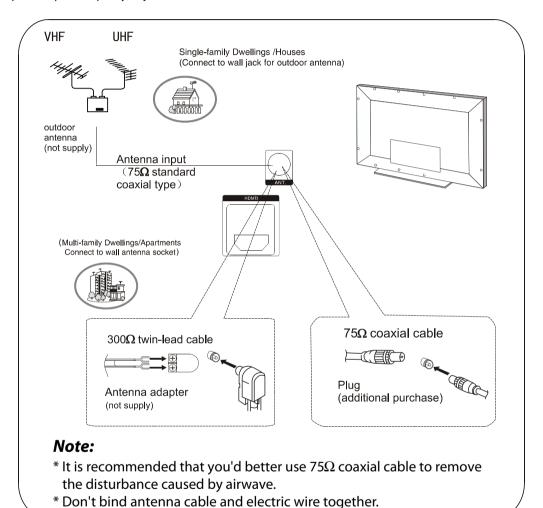



- To improve picture quality in a poor signal area, purchase and install a signal amplifier.
- If the antenna needs to be split for two Tv's, install a "2-WaySignal Splitter" in the connections.
- If the antenna is not installed properly, contact your dealer for assistance.

### **𝒯** Note

☐ All cables shown are not included with the TV.


## **Choose Your Connection**

There are several ways to connect your television, depending on the components you want to connect and the quality of the signal you want to achieve.

The following are examples of someways to connect your TV. Choose the connection which is best for you.

#### **VCR Connection**

To avoid picture noise (interference), leave an adequate distance between the VCR and TV.

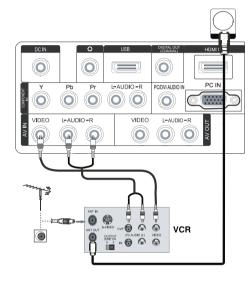

#### **Connection Option 1**

Set VCR output switch to channel 3 or 4 and then tune the TV to the same channel number.


#### **Connection Option 2**

- Connect the audio and video cables from the VCR's output jacks to the TV input jacks, as shown in the figure. When connecting the TV to VCR, match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red).
- Insert a video tape into the VCR and press **PLAY** on the VCR. (Refer to the VCR owner's manual.)
- Select the input source with using the **SOURCE** button on the remote control, and then press ▲ / ▼ button to select the source, press the ▶ button to confirm.

### **DVD Setup**

#### How to connect

Connect the DVD video outputs (Y, P<sub>b</sub>/C<sub>b</sub>, P<sub>r</sub>/C<sub>r</sub>) to the COMPONENT (Y, P<sub>b</sub>/C<sub>b</sub>, P<sub>r</sub>/C<sub>r</sub>) input jacks on the TV and connect the DVD audio outputs to the AUDIO jacks on the TV' as shown in the figure.

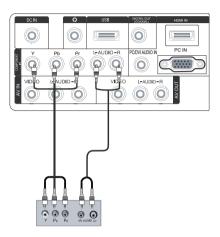

#### How to use

- 1 Turn on the DVD player, insert a DVD.
- Use the **SOURCE** button on the remote control,and then press ▲ / ▼ button to to select COMPONENT mode, press the ▶ button to confirm.
- Press **Play** button on external equipment for program play.
- A Refer to the DVD player's manual for operating instructions.

## **HDMI or DVI Setup**


To watch digitally broadcast programs, purchase and connect a digital set-top box.

#### How to connect

 Use the TV's COMPONENT (Y, Pb/Cb, Pr/Cr) INPUT jacks, VGA or HDMI port for video connections, depending on your set-top box connections available. Then, make the corresponding audio connections.

#### How to use

- Turn on the digital set-top box.
  (Refer to the owner's manual for the digital set-top box.)
- Use SOURCE on the remote contralto select PC or HDMI  $(Y, P_b/C_b, P_r/C_r)$  mode.
- Press **Play** button on external equipment for program play.

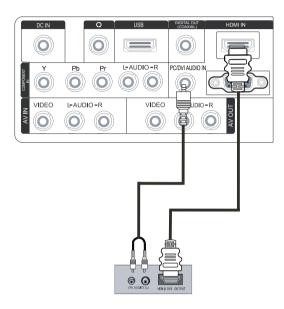

## **PC Setup**


#### **How to connect**

- **1** Use the TV's PC IN port for video connections.
- Then, make the corresponding audio connection. If using a sound card, adjust the PC sound as required.

#### How to use

- 1 Turn on the PC and the TV.
- **2** Turn on the display by pressing the **POWER** button on the TV's remote control.
- Use SOURCE on the remote control to select PC source.
- Check the image on your TV. There may be noise associated with the resolution, vertical pattern, contrast or brightness in PC mode. If noise is present, change the PC mode to another resolution,

change the refresh rate to another rate or adjust the brightness and contrast on the menu until the picture is clear. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult the manufacturer of the PC graphic card.

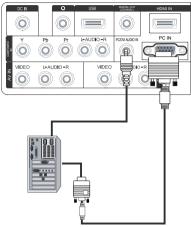




- ☐ Avoid keeping a fixed image on the TV's screen for along period of Time. The fixed image may become permanently imprinted on the screen.
- ☐ The synchronization input form for Horizontal and Vertical frequencies is separate.
- ☐ To obtain the best picture, do not play the USB, YP<sub>b</sub>P<sub>r</sub>, HDMI or PC source at the same time.

### **Monitor Out Setup**

The TV has a special signal output capability which allows you to hook up a second TV or monitor.

Connect the second TV or monitor to the TV's AV OUT. See the Operating Manual of the second TV or monitor for further details regarding that device's input settings.

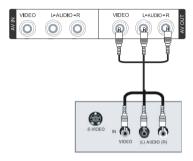



- Component, PC, HDMI input sources cannot be used for Monitor out.
- When connecting with external audio equipments, such as amplifiers or speakers, please turn the TV speakers off.

## **Connecting Headphones**

You can connect a set of headphones to your set if you wish to watch a TV program without disturbing the other people in the room.






- Prolonged use of headphones at a high volume may damage your hearing.
- You will not receive sound from the speakers when you connect headphones to the system.

### **Power source**

#### TO USE AC POWER SOURCE

Use the AC polarized line cord provided for operation on AC. Insert the AC cord plug into a standard polarized AC outlet.

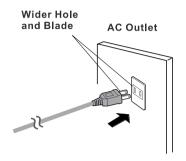

Polarized AC Cord Plug



- Never connect the AC line cord plug to other than the specified voltage. Use the attached power cord only.
- ☐ If the polarized AC cord does not fit into a non polarized AC outlet, do not attempt to file or cut the blade. It is the user's responsibility to have an electrician replace the obsolete outlet.
- ☐ If you cause a static discharge when touching the unit and the unit fails to function, simply unplug the unit from the AC outlet and plug it back in. The unit should return to normal operation. Polarized AC Cord Plug.

# **Basic Receiving and Playing Operations**

## Switching ON/OFF the TV set

In the manual, the OSD (on screen display) may be different from your TV's because it is just an example to help you with the TV operation.

## Switching ON/OFF the TV set

- **1** First, connect power cord correctly and the power indicator will light.
- Press **POWER** on the remote control again.
- If you want to exchange to standing by status, please press down **POWER** on the remote control
- Disconnect the power supply or unplug the television if it is intended to completely cease the television performance.

### Choose the Menu Language

When you satisfied with your set for the first time, you must select the language which will be used for displaying menus and indications.

- **1** Press **MENU** and **4** / **▶** to select **Function** menu.
- Press ▲ / ▼ button to select **Function** menu.
- **3** Select a particular language by pressing ▶ repeatedly.
- When you satisfied with your choice, press **MENU** to return to normal viewing.



## **Choose the Input source**

If the TV is not in TV mode, press **SOURCE** on the remote control unit, and signal source menu will be displayed on the TV screen (as shown in the below figure). Press

▲ / ▼ to select the TV option, and press ▶ or **OK** to confirm the switching to TV input terminal. After switching, the signal source menu disappears, and at the upper right corner of screen displays the information of current signal source.

Pressing this key repeatedly can exit from the signal

source menu.

In case of no other operation, the signal source menu will automatically disappear upon reaching the OSD disappearance time preset in the main menu.



## **Searching Channel**

In this section, how to use the remote control to set channel is explained. You can also use buttons on the TV set to set channel.

#### **Channel Edit**

Press **MENU** on the remote control unit or **MENU** on the TV's front panel to display main menu, and then press **4** / **b** to select Tuning menu.



Press ▲ / ▼ to select the Channel Edit option, and then press OK to enter submenu.



#### □ Search

Press ▲ / ▼ to select the Search option, and finally press ◀ / ▶ to start manual search. Upon finding a program, the search will automatically stop, and the program will be stored onto the current channel. You may stop the search by pressing **OK** or **MENU**.

#### ☐ Fine Tune

Press ▲ / ▼ to select the Fine Tune option, and then press ◀ / ▶ to start UP or DOWN fine tuning until obtaining a relatively good picture effect. The fine tuning function is for the purpose of improving picture effect through fine tuning when that of a certain program is not good enough. Normally, the optimal picture effect can be obtained without fine tuning when watching TV programs, and fine tuning is to meet the need of adjusting a certain program.

#### ☐ Color system

Press  $\blacktriangle/\blacktriangledown$  to select the Color Systems option, and then press  $\blacktriangleleft/\blacktriangleright$  to select correct color system.

The TV is designed with three systems for your choice, i.e. Auto, PAL, SECAM and NTSC. Generally, the system is set as Auto and it is not necessary to make an adjustment. The system is normally set as Auto during auto search.

#### ☐ Sound system

The TV is designed with four systems for your choice, i.e. D/K, M, B/G and I. Generally, it is not necessary to adjust the system. The system is normally set as DK during auto search.

#### ☐ Skip

When the skip is set ON, the channel will be skipped when pressing  $\mathbf{CH} \wedge \text{or } \mathbf{CH} \vee \text{and only can}$  be selected by pressing 0-9 numerical keys.

#### If you want to recover the skipped channel

- 1. Use Direct-digit Choosing button to select the number of the channel to be recovered.
- 2. Do the above steps again.
- 3. Press **4** / **▶** to set **Skip** as Off.

#### **Automatic search**

Press MENU on the remote control to display main menu, and then press ◀ / ▶ to select Tuning menu. (Note: Only when Tuning Lock in the H. Lock menu is Off can the Channel menu be selected.)



press ▲ / ▼ to select the Auto Search option, press
 oK to enter the auto search menu, afterwards press
 ↓ / ▶ to select the Confirm option, and finally press
 oK to confirm the starting of auto search.



During auto search, the scale value on the progress bar is continually increasing, indicating the auto search is in progress. After finishing the auto search, the TV will play the channel starting the auto search. To stop the search in halfway, just press **MENU/OK**, and the TV will play the first searched channel.



## Exchange

- Press **MENU** on the remote control unit or **MENU** on the TV's front panel to display main menu, and then press **4** / **b** to select Tuning menu.
- Press ▲ / ▼ to select the Prog. Exchange option, and then press **OK** to enter its submenu.
- Press ▲ / ▼ to select the To Channel option, and

then press ◀ / ▶ to set the found to be exchanged to.



After adjusting the current channel and the found to be exchanged to, press ▲ / ▼ to move the cursor to the Exchange option, and then press **OK** to start exchange and exchange the program on current channel to the channel you set for exchange.

## **Watching TV Program**

You can watch TV program in a presetting channel.

## How to select the desired program

- Using Program number buttons Directly enter the channel number with the numeric keypad on the remote control. If to select channel numbers of double-digital or three-figure, press continuously the numeric buttons in three second.
- 2 Using  $CH \land /CH \lor buttons$

Press **CH** \( \) to select a channel number in number increasing direction. Press **CH**  $\vee$  to select a channel number in number decreasing direction.

#### How to select the desired sound

Press VOL-/+ buttons on the remote or the front of the TV set to adjust the volume level. The range is 0~100. When the volume buttons are pressed the volume level is displayed automatically on the TV screen.

 
## **Mute Setting**

Press **MUTE** button on the remote control and a icon will display on the screen. At this time, the sound of the TV set is turned off.

If you want to recover the sound, press **MUTE** button again or directly press **VOL+** button.

### Quick program view

Suppose that you previously watched a TV program on Channel 8, but now you are watching a TV program on Channel 18 (as shown in the below figure).



- If you want to return to Channel 8, just press "RECALL (Flashback)" once.
- If you want to return to Channel 18 again, just press "RECALL (Flashback)" once again.
- **𝒜** Note
  - ☐ This function is only available in TV mode.

## **Picture Control Functions**

This means the adjustment of specific contents in the picture, if already in normal condition, it is not necessary to make any adjustment.

Due to different TV signal inputs, some items may need to be adjusted. The following makes a description by only taking TV signal as an example.

## How to select the picture mode

- Press **MENU** to display main menu on the screen, and then press ◀ / ▶ to select the Picture menu, afterwards press ▲ / ▼ to enter the option to be adjusted.
- Press ▲ / ▼ to move the cursor to the option to be adjusted, and then press ◀ / ▶ to select Standard/ Vivid/Soft/User.

You can also press **P.MODE** on the remote control to

select Standard/Vivid/Soft/ User mode.

#### □ Standard

The picture brightness and hue are moderate.

#### **□** Vivid

The picture is vivid, bright and dynamic.

#### □ Soft

The picture is soft and in light color.

#### □ User

The picture effect is set by yourself to your preference.

### How to customize your own picture status

- Press MENU to display main menu on the screen, and then press ◀ / ▶ to select the Picture menu, afterwards press ▲ / ▼ to enter the option to be adjusted.
- Press ▲ / ▼ to move the cursor to the option to be adjusted, and then press ◀ / ▶ to adjust it to your desired effect.



#### ☐ Contrast

This will adjust the intensity of bright parts in the picture but keep the dark parts unchanged.

#### □ Brightness

This will adjust the light output of the complete picture, which will mainly affect the darker areas of the picture.

#### ☐ Color

This will adjust the saturation level of the colors to suit your personal preference.

#### ☐ Sharpness

This will adjust the sharpness of fine details in the picture.

#### **∏** Tine

Allows you to select the color mix (Tine) of the picture.

#### ☐ Picture Mode


Select the mode of picture(Standard/Vivid/Soft/User).

#### ☐ Aspect Ratio

Select the mode of Aspect Ratio(Full screen/4:3/Zoom/Cinema/Panorama).

#### ☐ Palette:

Press ▲ / ▼ to select the Palette option, and then press ▶ to enter its submenu, and finally press ▲ / ▼ to select a toner pattern from six patterns (User, Standard, 6500K, 7300K, 8500K and 9300K) to your color preference. Normally, the Standard mode is selected. If the User mode is selected, press ◀ / ▶ to enter the palette menu, (as shown in the below figure), and then press ◀ / ▶ to select a benchmark in the range of 2500K~15000K from warm color to cold color, afterwards press ▲ / ▼ to adjust; if a different benchmark is selected for adjustment, the original adjustment data will be automatically cleared.

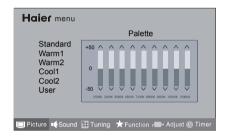

#### □ Reset

Return to factory default settings.

## **Sound Control Functions**

#### How to choose audio mode

- Press **MENU** to display main menu on the screen, and then press ◀ / ▶ to select the Sound menu, afterwards press ▲ / ▼ to enter the option to be adjusted.
- Press ▲ / ▼ to move the cursor to the option to be adjusted, and then press ◀ / ▶ to select User/ Standard/Music/Theater mode.

#### ☐ User

A spare setting that can be adjusted to personal tastes.

#### □ Standard

Normal sound with moderate bass and treble setting.

#### 

Designed the sound to best suit music programs.

#### □ Theater

Enables extra bass and treble to enhance the movie experience.

You can also press **S.MODE** button on the remote control to select User / Standard / Music / Theater mode.

## How to customize your own audio status

- Press **MENU** to display main menu on the screen, and then press ◀ / ▶ to select the Audio icon, afterwards press ▲ / ▼ to enter the option to be adjusted.
- Press **4** / **▶** to adjust.



#### □ Volume

Press ◀ / ▶ to adjust the volume of a TV program.

#### **□** Balance

This will adjust the output of the right and left speakers to obtain the best stereo reproduction for your listening position.

The intermediate value is 0. When indication value of Balance increases toward 50, sound of the right and left speakers becomes stronger and weaker, respectively. When indication value of Balance decreases toward -50, sound of the right and left speakers becomes weaker and stronger.

#### ☐ Digital tone

This select the modes for sound reproduction dependent on the broadcast signals or signals from external inputs received.

Select the mode of sound (User/Standard/Music/Theater). If the User mode is selected, press OK to enter the digital tone menu,(as shown in the below figure), and then press ◀ / ▶ to select a benchmark in the range of 50~15K from bass to treble, afterwards press

▲ / ▼ to adjust, if a different benchmark is selected for adjustment, the original adjustment data will be automatically cleared.



#### ☐ SRS TS XT

The surround sound feature expands the audio listening field wider and deeper to create exceptional sound quality from the TV's speakers.

#### □ AVL (Automatic Volume Limit)

This will reduces the differences in volume level among broadcasters.

#### 

To adjust the super bass. Press ◀ / ▶ to select super bass off, low or high Medium.

#### □ Reset

Return to factory default settings.

## **Timer Functions**

## **Setting of Current Time**

The current time is calculated from the moment upon turning the TV on. At first, check whether the time indicated on the TV's clock is consistent with the standard time of your time zone; if not, adjust the clock as follows:

- Press MENU on the remote control unit or MENU on the TV's front panel to display the main menu, and then press ◀ / ▶ to select the Timer menu, afterwards press ▲ / ▼ to select the Current Time option.
- Press **4** / **▶** to set hour and minute.
- Press ▲ / ▼ to adjust the time.
- After finishing time setting, press **OK** or **MENU** to confirm.




### **Setting of ON/OFF Time**

This function allows the TV to automatically turn on or enter standby mode upon reaching the preset time.

- Press MENU on the remote control unit or MENU on the TV's front panel to display the main menu, and then press ◀ / ▶ to select the Timer menu, afterwards press ▲ / ▼ to select the On Time or Off Time option.
- Press OK to enter the setting screen, and then press

  ▲ / ▼ to select ON or OFF, if you select ON, press

  ∢ / ▶ to set hour and minute. ON indicates the On/
  Off Time function is enabled while OFF indicates the function is disabled.

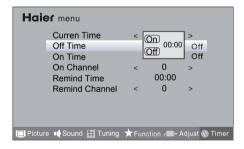

After finishing time setting, press **OK** or **MENU** to confirm.




□ After setting the On/Off Time function, if the TV is AC off or forcible DC off, the function will be automatically cleared.

## **Setting of On Channel**

This function is used in combination with the On/Off Time function. When the TV turns on upon reaching the On time, it automatically enters the preset channel.

- Press MENU on the remote control unit or MENU on the TV's front panel to display the main menu, and then press ◀ / ▶ to select the Timer menu, afterwards press ▲ / ▼ to select the On Channel option.
- Press ◀ / ▶ to set the On Channel or OFF.

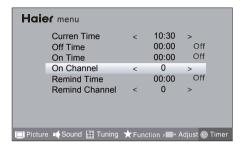

## Setting of Remind Time and Remind Channel

The remind time and remind channel functions allow the TV to automatically enter the preset channel at preset time. If the TV is AC off or forcible DC off, the preset time will be cleared.

Press MENU on the remote control unit or MENU on the TV's front panel to display the main menu, and then press ◀/▶ to select the Timer menu, afterwards press ▲/▼ to select the Remind Time option.



- Press OK to enter the setting screen, and then press
  - ▲ / ▼ to select ON or OFF, if you select ON, press
  - ◀ / ▶ to set hour and minute, and then press
  - ▲ / ▼ to adjust time.
- After finishing time setting, press **OK** or **MENU** to confirm.
- Press ▲ / ▼ to select the Remind Channel option, and press ◀ / ▶ to set the found.

### **Function Menu**

#### **Function Menu Set**

- Press **MENU** on the remote control unit or **MENU** on the TV's front panel to display the main menu, and then press  $\P$  b to select the Time menu.
- Press ▲ / ▼ to select the option to be adjusted, and then press ◀ / ▶ to adjust it.

#### Language

Two languages (i.e. Simplified Chinese and English) are available for your choice.


#### ☐ Menu timeout

The option is for adjusting the menu display time. Press  $\blacktriangleleft$  /  $\blacktriangleright$  to set the desired time (5-15s).



#### ☐ Picture Optimize

- Press ▲ / ▼ to select the Picture Optimize option.
- Press > to enter the submenu.
- Press ▲ / ▼ to select theDCDI/DNR/3D Comb Filter to be adjusted, and then press ◀ / ▶ to select ON or OFF.
- Press ▲ / ▼ to select the Color Management to be adjusted, and then press ◀ / ▶ to select Low/ Medium/High/ Off.

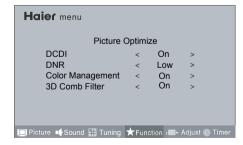

#### □ Blackground


Press ◀ / ▶ to set ON or OFF, if you select ON, the TV screen will be black if no signals are available.

#### □ Black Stretch

## **Adjust Menu**

The TV can be used as a display, and you may adjust relevant settings. Press **SOURCE** to switch the signal input to PC mode.

Press **MENU** to display the screen main menu, and then press **4** / **b** to select the Adjust menu as shown in the below figure.

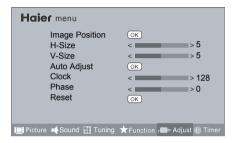

- Press ▲ / ▼ to select the option to be adjusted.
- **3** Press **4** / **▶** to adjust it.

#### ☐ Image Position

This is used to adjusting H-Position and V-Position.

#### □ H-Size

Urtical and Horizontal position of picture can be adjusted in this item.

#### □ V-Size

☐ Vertical and Horizontal position of picture can be adjusted in this item.

#### □ Auto Adjust

Vertical and Horizontal position of picture can be adjusted in this item.

#### ☐ Clock

This is used for adjusting the phase of pixel clock in PC mode.

#### ☐ Phase

This is used for adjusting H Position and V Position as well as relative parameters in PC modes.

#### □ Reset

Return to factory default settings.

## **Lock Setup**


The television has the function of security default lock. Password needs to be entered when the program lock mode is to be set.

## How to use the password function

Press **H. LOCK**, the TV screen will display Enter Password to prompt the user to enter a correct password by pressing corresponding numerical keys; if the password is correct, the user enters the Lock Set menu; if incorrect, the user is required to enter a password again.

If there is no operation for a few seconds, the display will automatically disappear.

#### The Lock Set menu is as follows:

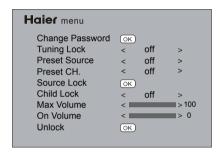

#### ☐ To set new password

After entering the Lock Set menu, press ▲ / ▼ to select the Change Password option, and then press ◀ / ▶ to display the Change Password menu, afterwards enter a new 4-digit password by pressing numerical keys and repeat entering this password once, and finally select the option to be confirmed and press **MENU** to confirm, indicating the successful change of password.

If the user does not want to change the password in halfway, he may press **MENU** to exit from this menu.

#### **𝒯** Note

The initial password is 0000, and the password setting will not be changed after executing the Unlock option.

#### ☐ Tuning Lock

Press ▲ / ▼ to select the Tuning Lock option, and then press ◀ / ▶ to set ON or OFF.

(If set ON, the Tuning Menu is not available in TV mode. To make any operation related to the Tuning Menu, it is necessary to enter the Lock Set menu to set

Tuning Lock OFF or execute the Unlock option.)

#### ☐ Preset Source Setting

Preset Source may be set as Off, TV, AV,Component, HDMI, PC and USB. When the Preset Source is set as TV, after entering the Preset Channel menu, press  $\P$  /  $\P$  to select the preset channel, and the channel will be forcibly switched to the preset one upon turning the TV on; when the Preset Source is set as other signal sources, the TV will be forcibly switched to the preset source upon turning on. For example, when the Preset Source is set as  $YP_bP_r/YC_bC_r$ , the TV will be switched to  $YP_bP_r/YC_bC_r$  upon turning on; when set as OFF, the preset function will be closed.

#### □ Preset Channel Setting

Only when the Preset Source is set as TV can the Preset Channel option be available. Press ◀ / ▶ to select preset channels from 0-254.

#### ☐ Source Lock

This function is used to prohibit watching a program from various external inputs, e.g. AV and PC, etc. Press ▲ / ▼ to select a certain option, and then press ◀ / ▶ to set an external input lock ON or OFF. If an external input lock is set ON, after entering this mode, the screen will display blue background with muting and a prompt Source Lock; during Source Lock prompt, Source Lock will remain if there is no other display on the screen. To watch a program from a locked external input, just enter Source Lock submenu to set corresponding status as OFF or execute the Unlock option in the Lock Set menu.

#### ☐ Child Lock Setting

Press ▲ / ▼ to select the Child Lock option, and then press ◀ / ▶ to set ON or OFF. If set ON, this control key will not respond, and the screen will display Child Lock when the key is pressed; if no other operation is made, the display will automatically disappear later. To resume Child Lock function, just enter the Lock Set menu to set Child Lock OFF or execute the Unlock option.

#### ☐ Max Volume Setting

Press ▲ / ▼ to select the Max Volume option, and then press ◀ / ▶ to freely adjust the max volume within the range of 0~100. After finishing the setting, the max volume in the Volume menu will not exceed the preset max volume; for example, if the preset max volume is 30, the volume in the Volume menu can not be increased any longer upon reaching 30; if the preset max volume is less than the value in the Volume menu, the latter will decrease along with the decrease of preset max volume.

#### □ On Volume

Press ▲ / ▼ to select the Power on Volume option. and then press ◀ / ▶ to freely adjust the volume within the range of 0~100.

#### ☐ Unlock Setting

Press ▲ / ▼ to select the Unlock option, and then press b to clear all the lock settings, namely set all the lock setting options as OFF; the Preset Channel is set as OFF and max volume returns to 100 (except password).

## **Streaming Media Playing** System

#### Note

- ☐ The diagrams in the following section are schematic and only for your reference. Please see the actual product if necessary.
- **1** Supported file formats:
  - Picture: \*. JPEG;
  - Music: \*. Mp3(8-320kbps; WMA(32-192kbps); AAC(16-576kbps)
  - Movie:

MPEG4: \*. avi files in accordance with Div\*4. x/5. x Protocol:

MPEG2: some \*. mpea files:

MPEG1: \*. dat and some \*. mpeg files;

RealVideo

• Text: \*. Txt.

#### **Note**


- ☐ Due to the particularity of file coding, some files may be unable to be read.
- **2** Supported equipment: Support the equipment that supports Mass Storage Protocol and whose file system is FAT/NTFS/FAT16/ FAT32, such as some USB disks, mobile hard disks, card readers, MP3 players and digital cameras. If USB equipment could not be identified due to unsupported file system, please format the equipment to the above-mentioned file system;
- The external card reader supports most of the digital cards in the current market; the types of digital cards that can be read are relevant to the performance of selected card reader; you may attach standard mobile hard disks (working voltage 5.0V, working

current not higher than 500mA); during media playing, do not pull out storage media, otherwise it may cause system halt, damage the files in storage media or damage USB equipment; sometimes, the TV may halt due to overhigh information error rate, in which case you should restart the system; there are a lot of nonstandard USB mobile equipment in the market, they may not be identified when connected to the streaming media playing system; the above phenomena may also occur on computers and are not the TV's fault.

- To achieve smooth playing, ensure the following:
  - The file code rate should be lower than 300KB/S:
  - Due to the limitation of USB signal transmission distance, it is recommended not to use USB patch cord, in case of using the cord, make sure that its length is not over 1m;
  - Use high-speed USB equipment in conformity with USB2.0 Interface Standard; if USB equipment in conformity with USB1.1 Interface Standard is used, the playing may be unsmooth.
- Although many movie files are with such postfixes as avi and mpeg, actually there are several formats in the files; however, the TV can only play some files in avi and mpeg formats. Some files with the postfix "dat" are not movie files, but data files commonly used in computers, and they can not be played as movies.

## Start/Exit Streaming Media Playing System

- Press **USB** on the remote control unit to select the streaming media function.
- Insert USB equipment into corresponding USB interface 2s after starting the system.
- **1** After entering the system menu, press **4** / **▶** on the remote control unit to select the required USB equipment, and then press ▲ / ▼ on the remote control unit to select the required file.
- Press **OK** to enter the selected file.
- 5 To exit the streaming media playing system and watch a TV program, you must return to the streaming media main menu at first (to protect equipment), and then press SOURCE to select TV or directly press **USB** to return to the TV mode.

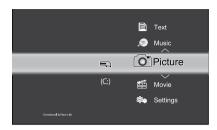

## Operating Method of Streaming Media Menu


- Press ▲ / ▼ to scroll through main menu or submenu and select your desired option.
- **2** Press **OK** to confirm your selection.
- Press **REV/FWD** to achieve the FF (fast forward) and FB (fast back) of the movie or music being played.
- Press **PLAY/PAUSE** to pause playing, and press it again or press **OK** to continue playing.
- Press **ZOOM** to magnify pictures; in zoom mode, press **◄** / **▶** and **▲** / **▼** to move the picture.
- Press **HELP** to display or exit the screen display information while playing.
- Press **BACK** to stop playing, or return to the previous menu, and press **BACK** repeatedly to return to the main menu.

## **Playing a Picture**

After entering USB main interface, press 

√ to select a harddisk partition, and then press 

√ to select the Picture option.

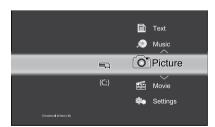

- Press **OK** to confirm the selection and enter the picture playing interface.
- Press ◀ / ▶ to change page, and press ▲ / ▼ to select the picture you want to play, and then press

**OK** to enter the playing display interface.


- Press ZOOM to magnify the picture, and then press ◀ / ▶ / ▲ / ▼ T to move the picture.
- Press ◀ / ▶ to select the last or next picture.
- Press ▲ / ▼ to rotate the picture.



To exit playing, just press **BACK** repeatedly.

### **Playing a Movie**

After entering USB main interface, press ◀ / ▶ to select a harddisk partition, and then press ▲ / ▼ to select the "Movie" option.

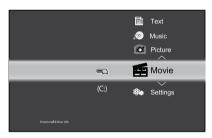

- Press **OK** to confirm the selection and enter the movie playing interface.
- Press ◀ / ▶ to change page, and press ▲ / ▼ to select the movie you want to play, and then press OK to enter the playing display interface.
  - Press ◀ / ▶ to select the last or next movie.



To exit playing, just press **BACK** repeatedly.

#### **Note**

☐ The menu display varies with the number and names of files in your equipment.

### **Playing Music**

After entering USB main interface, press ◀ / ▶ to select a harddisk partition, and then press ▲ / ▼ to select the Music option.



- Press **OK** to confirm the selection and enter the music playing interface.
- Press ◀/▶ to change page, and press ▲/▼ to select the music you want to play, and then press **OK** to play the music.



1 To exit music playing, just press **BACK** repeatedly.

#### Text

- After entering USB main interface, press ◀ / ▶ to select a harddisk partition, and then press ▲ / ▼ to select the Text option.
- Press **OK** to confirm the selection and enter the text playing interface.
- Press ▲/▼/ ◀/ ▶ to select the text you want to read, and then press **OK** to play the text reading interface. Press ◀/ ▶ to change page, and press **BACK** to exit the reading interface.



To exit the Text mode, just press **BACK** repeatedly.

## **Settings**

- After entering USB main interface, press ▲ / ▼ to select the Settings option.
- Press **OK** to confirm the selection and enter the settings selection interface, and then press ▲ / ▼ to select the required options.



#### ☐ BGM Auto Play

Select "on" or "off".

#### ☐ Bubtitle Auto Play

Select "on" or "off".

#### □ Photo Slide Time

Set the scan speed of pictures to be scanned in slide form.

There are three options (Short/Long). Press ◀ / ▶ to select the desired option.

## Maintenance

## **Maintenance**

Early malfunctions can be prevented. Careful and regular

cleaning can extend the amount of time you will have your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

### Cleaning the Screen

- Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
- Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

### Cleaning the Cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

#### **Extended Absence**

If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

## Troubleshooting

For the sake of time and cost, it is strongly recommended that you checkout the problem by yourself according to the instructions listed hereunder before contacting the after-sales service for technical assistance.

| Problem                      | Possible remedies  |  |  |
|------------------------------|--|--|--|
| No<br>picture,<br>no sound   | Turn onthe power supply; Properly plug theTV setto the powersocket; Check to see if the power cable of other appliance is plugged in the TV set. Make sure that the power cable of the TV set is properly connected. |  |  |
| Problem                      | Possible remedies  |  |  |
| Good<br>picture,<br>no sound | Depress the volume button;<br>Check out theaudio frequency input signals   |  |  |

| Failure of remote controller                  | Check to see if the remote controller display receiving window are blocked by other objects and if batteries are properly loaded.   |  |
|---|---|--|
| No color,<br>weak color<br>or poor<br>picture | Designate the item of color from the Picture menu and depress the volume button; Keep the display and VCR separate a reasonable space; Activate some functions to store picture brightness; Make sure that the display and signal source are available and turned on. |  |
| Excessive<br>brightness<br>or darkness        | Adjust brightness or contrast.  |  |
| Picture<br>too big or<br>small                | Adjust the setup of sizes.  |  |
| One<br>speaker<br>failure                     | Balance the sound in the menu.  |  |
| Slight<br>sound<br>from<br>display            | It is a normal phenomenon.  |  |

#### **∅** Note

Do not leave the television with static picture in an extended period as it may result in residual image on your television screen.

#### **∅** Note

☐ Production of the screen requires high and precision technologies. However, there might be some dank or bright (red, blue or green) spots, or some anomalistic stripes or spots. This is not defect. If the TV set is used in an area 2,400 meters above the sea level where the air pressure is below 750hpa, the picture on the screen maybe affected and a muffled sound might be produced. These phenomena might happen in the area 1,500 meters above the sea level. This is resulted from difference between air pressures inside and outside the display. This is not a defect covered by the limited warranty.

## **Specification**

## Basic specification and parameter

| Power                   | ~ 100-240V 50/60Hz  |  |  |
|-------------------------|---|--|--|
| Color System            | PAL, NTSC, SECAM  |  |  |
| Stand-by<br>Consumption | D/K, B/G, I, M  |  |  |
| Video Input             | USB,AV, Component, HDMI or PC,  |  |  |
| Environmental condition | USB,AV, Component, HDMI or PC,  Operating temperature range: +5°C - +35°C Operating humidity range: 20%-80% Storage Temperature: -15°C~+45°C Storage Humidity: 5%-90%, non-condensing  If the storage temperature is lower than 0 °C, please first lays the machine aside after in the operating temperature environment carries on restores 2 hours, then electrifies the use again, protects your television not to receive the damage. |  |  |
| Accessories             | Owner's manual x1 Remote Control x1 Alkaline battery x2 (This is only available for certain models, please refer to actual products.)   |  |  |

## Product main size (contain stand)

| MODEL   | Power<br>Consumption | Net Size(LxWxH) | Net Weight |
|---------|----------------------|-----------------|------------|
| LE19T3  | 30W                  | 460x160x350mm   | 3.2Kg      |
| LE19T3W | 30W                  | 460x160x350mm   | 3.2Kg      |
| LE22T3  | 35W                  | 528x160x388mm   | 3.8Kg      |
| LE22T3W | 35W                  | 528x160x388mm   | 3.8Kg      |
| LE24T3  | 45W                  | 572x170x413mm   | 4.2Kg      |
| L24K3   | 65W                  | 585x190x434mm   | 5.3Kg      |



☐ Design and specifications are subject to change without notice. The dimension in this manual is a approximation.

## Format

## **Recommendatory HDTV/** SDTV(YPbPr/YCbCr) format

| Sequence<br>Number | Format      | Refresh<br>Frequency (Hz) |
|--------------------|-------------|---------------------------|
| 1                  | 480i/480p   | 60                        |
| 2                  | 576i/576p   | 50                        |
| 3                  | 720p        | 50/60                     |
| 4                  | 1080i/1080p | 50/60                     |

## **Recommendation PC connection** input format

| sequence<br>number | Format                            | H-Frequency<br>(KHz) | V-Frequency<br>(Hz) |
|--------------------|-----------------------------------|----------------------|---------------------|
| 1                  | 640*480@60Hz                      | 31.5                 | 60                  |
| 2                  | 800*600@60Hz                      | 37.88                | 60                  |
| 3                  | 1024*768@60Hz<br>(Recommendatory) | 48.36                | 60                  |

## **Recommendation DVI connection** input format

| Sequence<br>Number | Resolution | Refresh Frequency (Hz) |
|--------------------|------------|------------------------|
| 1                  | 640*480    | 60                     |
| 2                  | 800*600    | 60                     |
| 3                  | 1024*768   | 60                     |

## **Recommendation HDMI** connection input format

| Sequence<br>Number | Format    | Refresh Frequency (Hz) |
|--------------------|-----------|------------------------|
| 1                  | 480i/480p | 60                     |
| 2                  | 576i/576p | 50                     |
| 3                  | 720p      | 50/60                  |
| 4                  | 1080i     | 50/60                  |