

# Start Here!

Quick Start Guide - next page ...



# QUICK START GUIDE

# DA 069

Digital  
Answering  
Machine

## Uniden



 
Please do not attempt to unplug any appliance during an electrical storm.

## INSTALLATION & SAFETY


### Choosing the best location for your Answer Machine

When choosing a location for your Answer Machine there are a number of appliances the Answer Machine should not be near, and area's you should avoid.


**DON T -**  
overload the  
power outlet.

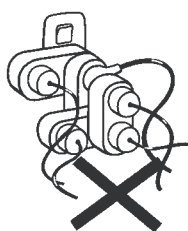

**AVOID -**  
multi power  
boards

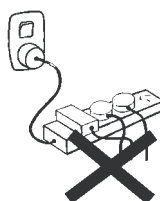 

**AVOID -**  
Moisture

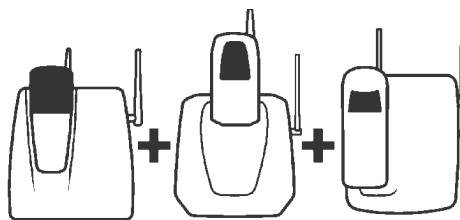 

**AVOID -**  
connecting  
more than

**3**

phones as ringing  
may be impaired

## FEATURES

### Your Answer Machine's Features Include:

- Superb Digital Record Quality
- 10 Minutes Digital Record Time
- Day & Time Stamp (default off)
- Programmable Remote Operation Security Code
- Call Screening
- Memory Backup
- Adjustable Ring Number / Volume
- Toll Saver
- Room Monitor
- Answer
- Call / Message Counter
- Delete
- Remote Access
- Phone Pick-Up Detection
- Fast Message Playback



*This page is a very condensed version of your owners manual. It is designed to allow you to get your Answer Machine installed and operating as quickly as possible - however it does not attempt to explain any of the advanced features of your Answer Machine.*

# Start Here!

## 1 2

*Quick Reference Guide*



 
Use only the Uniden AC Adaptor supplied with this unit and make sure it is switched on at all times

### Step 1 Installation

- 1 Plug the AC Adaptor cord into the Answer Machine and then into a 240v AC Outlet.

#### Connecting the Answer Machine to the telephone line

Plug one end of the supplied Telephone cord into the jack on the back of the Answer Machine labelled "line". Then plug the cords other end into a telephone socket.

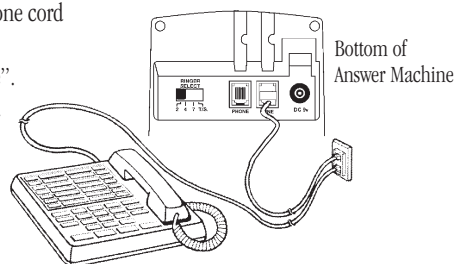

### Step 2 Using Your Answer Machine

- 1 **Setting the Answer Machine to answer calls**

 
To turn on the Answer Machine press **ans on** once. The red "Answer-on" indicator lights up.

- 2 **Playing Messages**

To play all the messages (old and new), press **▶**.

- 3 **Deleting Messages**

To delete a specific message, press **delete** once while the message is playing.

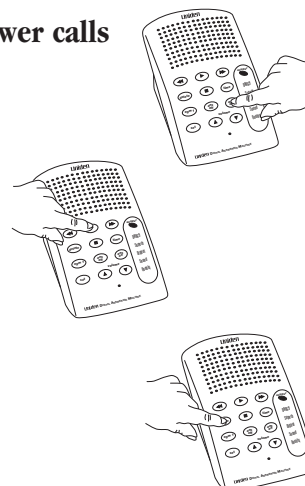


## CONTENTS


<b>Installation &amp; Safety, Features</b> .....	i
<b>QuickStart Guide</b> .....	ii
<b>Contents, Parts Checklist</b> .....	iii
<b>Functions</b> .....	1
<b>Installation</b> .....	2
<b>Preparation</b> .....	2-3
Recording the Outgoing Message.....	2
Setting the Day and Time.....	3
Setting the Number of Rings.....	3
Adjusting the Volume .....	3
<b>Basic Operation</b> .....	4
Turning the Answer Machine on .....	4
Playing Messages .....	4
Deleting Messages .....	5
<b>Remote Operation</b> .....	5
Remote Commands .....	6
<b>Trouble Shooting</b> .....	7
<b>Warranty</b> .....	Back Cover

## PARTS CHECKLIST

 If any of these items are missing or damaged, please contact the place of purchase.

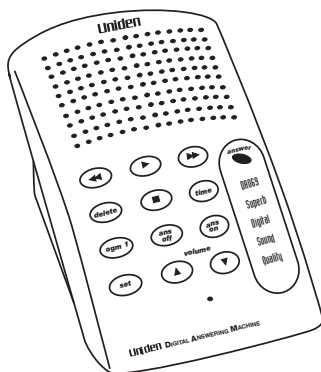


DA069 Answer machine

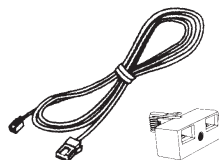 


Telephone Cord and  
Splitter for New Zealand

 OR

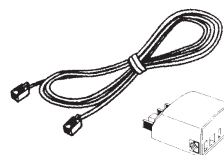

 Telephone Cord and  
Splitter for Australia

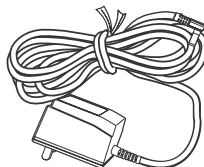


AC Adapter



Operating Guide  
Other printed materials

## FUNCTIONS

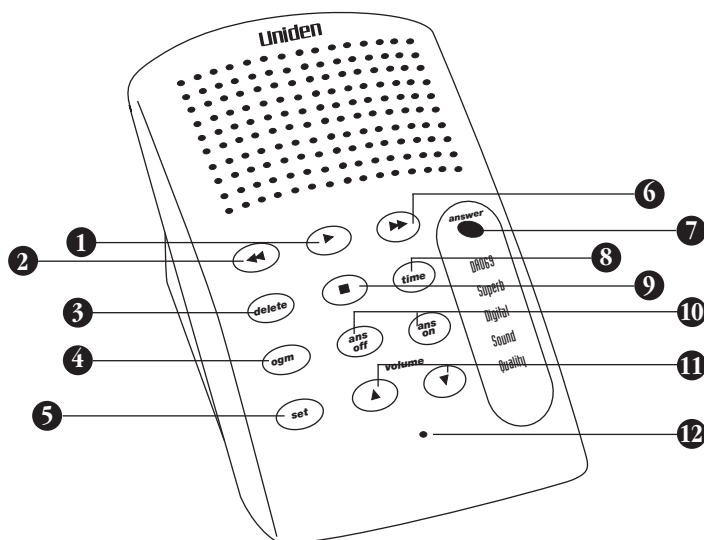 

- 1. Play:** Plays messages.
- 2. Repeat:** Repeat the current message.
- 3. Delete:** Used to delete one or all messages.
- 4. Outgoing Message:** Used to record the outgoing message (OGM).
- 5. Set:** Confirms requested settings.
- 6. Skip:** Skips to next message or if held down speeds up during playback.
- 7. Message Light:** The Red light lets you know if you have new messages and whether your Answer Machine is on or off.
- 8. Time:** Sets the time/date.
- 9. Stop:** Stops message playback.
- 10. Answer on/off:** Switches Answer Machine between answer on and answer off.
- 11. Volume:** Used to adjust the volume up or down.
- 12. Microphone:** Used for recording outgoing message (OGM).




Use only the Uniden AC Adaptor supplied with this Uniden DA069 Digital Telephone Answering Machine.



Do not tell the callers that you are not at home. Instead say that you cannot come to the phone right now.

## INSTALLATION
 
### Connecting Power

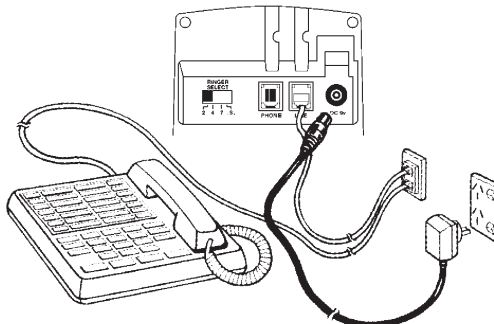

1. Plug the AC Adaptor into the power socket at the rear of the Answer Machine.
2. Then plug the other end into your mains socket.

## PREPARATION

### Recording the Outgoing Message

To record the outgoing message (OGM) the caller hears when the Answer Machine answers a call.

1. To record the OGM message, hold down **ogm** until the Answer Machine beeps.
2. Speak in a normal voice about 20cm (8 inches) away from the microphone (located on the front of the Answer Machine).

3. When you finish recording, press **■**.

 
 
The Answer Machine automatically plays back the outgoing message.

If no outgoing OGM is recorded when you press **ogm**, "You have no announcement one" is announced.

To play back your outgoing OGM message at any time, press **ogm**, the Answer Machine beeps and the outgoing message plays.

To record a new outgoing message simply follow the above instructions.


Your old message will instantly be deleted.

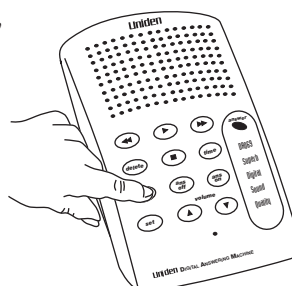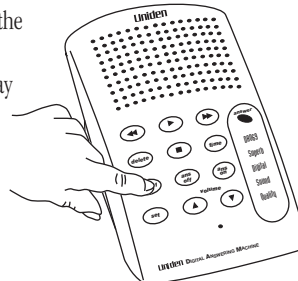

## Setting the Day and Time

1. Press and hold down **(time)** button until the Answer Machine announces the day of the week.
2. Press **(▶▶)** or **(◀◀)** repeatedly until the day of the week is announced.
3. Press **(time)**. The preset hour is announced.
4. Press **(▶▶)** or **(◀◀)** repeatedly until the desired hour is announced.
5. Press **(time)**. The preset minute is announced.
6. Press **(▶▶)** or **(◀◀)** repeatedly until the desired minute is announced.
7. Press **(time)** to store the the settings. The Answer Machine announces the day and time then beeps.

 
To check the current day/time at any time, press **(time)** once.

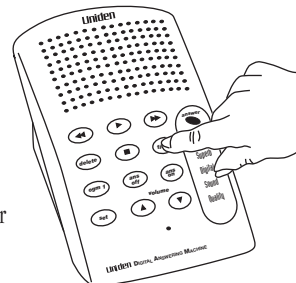

## Setting the Number of Rings

The ring select switch on the bottom of the Answer Machine controls how long the Answer Machine waits before it answers a call. Slide the switch to the desired position.

 - 2 The Answer Machine answers after two rings.
- 4 The Answer Machine answers after four rings.
- 7 The Answer Machine answers after seven rings.

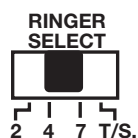

**T.S. (Toll Saver)** - When you call your Answer Machine from a remote location to check messages, if there are new messages, the Answer Machine answers after two rings. Otherwise, the Answer Machine answers after four rings. This helps you avoid unnecessary toll charges when calling by long distance to check your messages. If you hear more than two rings, you know you can hang up because the Answer Machine has no new messages.

## Adjusting the Volume

- Use the **(▲)** and **(▼)** to adjust the speaker volume up or down.
- Hold down **(set)** until it beeps then use **(▲)** or **(▼)** to adjust the ring volume.
- Press **(■)** to store the new setting.



When a message is being left, the message is heard through the speaker. This cannot be turned off.



 
The Day and Time will only be announced if it has been set. Refer pg.3 for setting instructions

## SETTING THE ANSWER MACHINE TO ANSWER CALLS

### To Turn the Answer Machine On

To turn on the Answer Machine and set it to answer calls and record messages, press **ans on** once. “Answer-on”, is announced, then beeps once and plays the outgoing message.

The red “Answer-on” indicator lights up. The Answer Machine is now set to answer calls

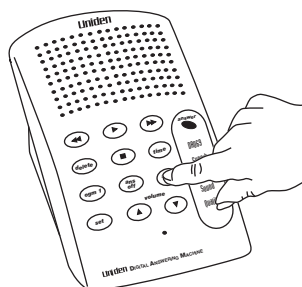

### To Turn The Answer Machine Off

To turn off the Answer Machine press **ans off** again.

“Answer off”, is announced, then beeps and the red “Answer-on” indicator turns off.

### Screening Calls

To screen calls, let the Answer Machine answer them, then listen to the caller's message through the Answer Machine speaker. If you decide to answer the call, pick up any phone on the same line and talk.

### Playing Messages

 
If there are new messages, the red “answer on” indicator flashes, the number of flashes equals the number of messages.

To play all the messages (old and new), press **▶**. The number of messages recorded is announced, each message number and the day and time the message was recorded and then plays the message.

### Playing New Messages Only

To play only new messages, hold down **▶** for 2 seconds.

(If there are no new messages stored, the Answer Machine announces “You have no new messages:”).

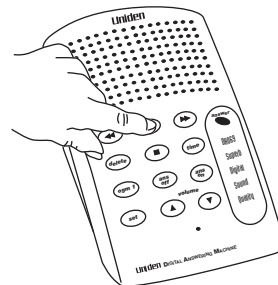





The Answer Machine does not delete messages that have not been played to the end. If you have messages that have not been played, the Answer Machine sounds four beeps.

After all messages have played, "End of message(s)" is announced.

To replay a message while you are listening to it, press **⏮** once. The current message starts again from the beginning.

To return to a previous message hold down **⏮** until it beeps. Release button to play the message.


To play the message at a faster speed, hold down **⏭**. Release button to resume play at normal speed.

To skip to the next message during playback, press **⏭** once. The next recorded message plays.

### Deleting Messages

 To delete a specific message, press **delete** once while the message is playing.

The Answer Machine beeps once while the message is playing and deletes the current message, then plays the next.

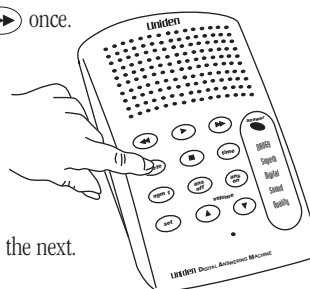

To delete all messages, hold down **delete** when playback has finished.

The Answer Machine announces "Erase message(s)", then sounds a long beep.



Be sure to set each digit within 8 seconds. Otherwise, you must start over from Step 1.

## REMOTE OPERATION

### Call Your Telephone From Any Remote Location Using A Touchtone Phone

When you hear the OGM, enter your security code (915- factory default).

After the Answer Machine beeps once to verify you entered the code correctly, enter the number(s) for the function(s) you want the Answer Machine to perform.

(Functions list on page 6)

### Changing The Remote Operation Security Code

The remote operation security code is preset to 915, but you can change it by following these steps.

1. Hold down **set** until the Answer Machine beeps once.
2. Press **⏭** and the security code "915" is announced, then it announces the first digit "9".
3. Repeatedly press **⏭** or **⏮** to set the first digit, then press **set**.  
The Answer Machine announces the second digit "1".
4. Press **⏭** or **⏮** to set the second digit, then press **set**.
5. Press **⏭** or **⏮** to set the third digit, then press **set**.

The Answer Machine sounds a long beep and announces the new security code.



If the Answer Machine is turned off, Remote Access Features are not available.



Be sure to set each digit within 8 seconds. Otherwise, you must start over from Step 1.

## REMOTE COMMANDS

Press	To
(0) (0)	Turn the Answer Machine off. The Answer Machine beeps and announces "Answer Off".
(2)	Play all messages. If no message is recorded, "You have no messages" is announced.
(3)	Play new messages. When new messages are recorded, the Answer Machine announces the number of new messages before playback. If no new message is recorded, "You have no new messages" is announced.
(4)	Monitor the room where the Answer Machine is installed. The room is monitored for 20 seconds. Press (4) again for another 20 seconds. You can repeat this for as long as you like.
(5)	Delete all messages (except new messages). Press (1) after the Answer Machine announce "Erase messages", then the Answer Machine beeps.
(6)	Stop playback and message recording.
(7)	Record a memo.
(8) (1)	Change OGM. After the Answer Machine beeps, begin your new OGM. When you finish, press (6). The Answer Machine beeps and replays.
(8) (2)	Play OGM. If no OGM is recorded, "You have no announcement one" is announced.
(*)	Disconnect Line
(#)	Skip the OGM Message

### After you press 2 or 3 to play messages:

Press	To
(1)	Replay the previous message
(3)	Skip to the next message
(4)	Replay the current message
(5)	Delete the current message
(6)	Stop message playback.

## TROUBLE SHOOTING

If your Answer Machine is not performing to your expectations, please try these simple steps first before calling Uniden customer service.

PROBLEM	SUGGESTION
<b>Answering system does not work</b>	<ul style="list-style-type: none"><li>• Make sure the telephone line cord is plugged in.</li><li>• Make sure that the AC Adaptor is plugged in.</li><li>• Make sure the Answer Machine is turned on.</li><li>• There has been a power failure.</li></ul>
<b>Answering System does not answer after 3 rings</b>	<ul style="list-style-type: none"><li>• The memory may be full. Delete some or all of the saved messages.</li></ul>
<b>Messages are incomplete</b>	<ul style="list-style-type: none"><li>• The incoming messages may be too long.</li><li>• The memory may be full.</li><li>• Delete some or all of the saved messages</li></ul>
<b>No sound on the base unit speaker during call monitoring or message playback</b>	<ul style="list-style-type: none"><li>• Adjust the volume control. Refer page 3</li></ul>
<b>Cannot record outgoing message (OGM)</b>	<ul style="list-style-type: none"><li>• The memory may be full. Delete some or all of the saved messages.</li></ul>
<b>Cannot access remote call-in features from another touch-tone phone</b>	<ul style="list-style-type: none"><li>• Make sure you're using the correct PIN number.</li><li>• Remote features cannot be accessed if Answer Machine is turned off.</li></ul>

THANK YOU

FOR PURCHASING A UNIDEN PHONE!

## WARRANTY

### One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.  
 Warrantor: Uniden Australia Pty Limited A.B.N. 58 001 865 498  
 Uniden New Zealand Limited

**ELEMENT OF WARRANTY:** Uniden warrants to the original retail owner for the duration of this warranty, its DA069 (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**WARRANTY DURATION:** This warranty to the original retail owner only, shall terminate and be of no further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the product is; (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorised Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, (F) Warranty is only valid in original country of purchase.

**PARTS COVERED:** This warranty covers for one (1) year, the Answer Machine only. All accessories (AC Adaptor etc) are covered for 90 days only.

**STATEMENT OF REMEDY:** In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts or service. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEE ACT.

**PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY:** In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (eg. a copy of the sales docket), to the warrantor at:

UNIDEN AUSTRALIA PTY LIMITED  
 SERVICE DIVISION  
 345 Princes Highway,  
 Rockdale NSW 2216  
 Ph (02) 9599 3355 Fx (02) 9599 3278  
 Toll Free 1300 366 895

UNIDEN NEW ZEALAND LIMITED  
 SERVICE DIVISION  
 150 Harris Road,  
 East Tamaki, Auckland  
 Ph (9) 273 8383 Fx (9) 274 4253  
 Toll Free 0800 4 UNIDEN  
 4 864 336

[www.uniden.com.au](http://www.uniden.com.au)

[www.uniden.co.nz](http://www.uniden.co.nz)

Customers in other States should ship or deliver the Product freight pre-paid to their nearest Uniden Authorised Repair Centre (Contact Uniden for the nearest Warranty Agent to you).

# Uniden

© 2002 Uniden Australia Pty Limited  
 Uniden New Zealand Limited