HANNSpree Quick Start Guide

DT06-10H1 9.6" Liquid Crystal Display TV

This guide is designed as a reference to help you start using your LCD TV quickly. Please refer to the User's Manual for more detailed installation and safety instructions.





A/V and Channel Setup

Selecting A/V Sources

- Make sure your TV is turned on and a device such as a DVD player is connected.
- Press the SOURCE button on the control panel to select different source signals.
 TV channel number, AV1, AV2 or AV2s appear on the screen.





Auto Channel Catur



ÖÖÖ

Connecting the Power Adapter

connect your TV to a

VCR, VCD, DVD player

or video game console.



1. Connect the power cord to the power adapter as illustrated.

VCD

DVD

red, white, yellow).

coded cable to

the appropriate

connector on your

Connect each color-

- 2. Plug the power adapter connector into the DC-IN input jack on the rear panel of the TV.
- 3. Insert the three-pronged plug at the other end of the power cord into a power outlet

Note : Images are for illustration only and may vary by model or region.

Auto Channel Setup

Please follow the instructions by using the control panel.

1. Press the **MENU** button to enter the OSD menu.

2. Use the CH▼ button to select "TV".

3. Press the **VOL▲** button to enter the TV setting.

4. Press the CH ▼ button until the "Auto Program" feature is selected.

5. Press the VOL ▲ button to begin "Auto Program".

6. Your television will begin automatically memorizing the available channels.

Auto Program



© Copyright 2005, Hannspree, Inc. All rights reserved.

© Disney Based on the "Winnie the Pooh" works by A.A. Milne and E.H. Shepard.