



iVIEW-1501DTV

# USER'S MANUAL



**15.6 INCH LCD TV WITH MULTI-MEDIA FUNCTIONS**

## TABLE OF CONTENTS

INTRODUCTION .....	2
REMOTE CONTROL .....	4
SETUP .....	5
TELEVISION SETUP .....	5
TELEVISION .....	7
DVD AND CD .....	8
USB PORT AND MEMORY CARD READER .....	9
15.6" HDTV WITH DVD .....	10

## INTRODUCTION

### POWER

Press to power the television off or on.

### SOURCE

Press to adjust the television source.

### MENU

 
 
 
Press to access the television menu.

### CHANNEL

Press to adjust the television channel.

### VOLUME

Press to adjust the television source.

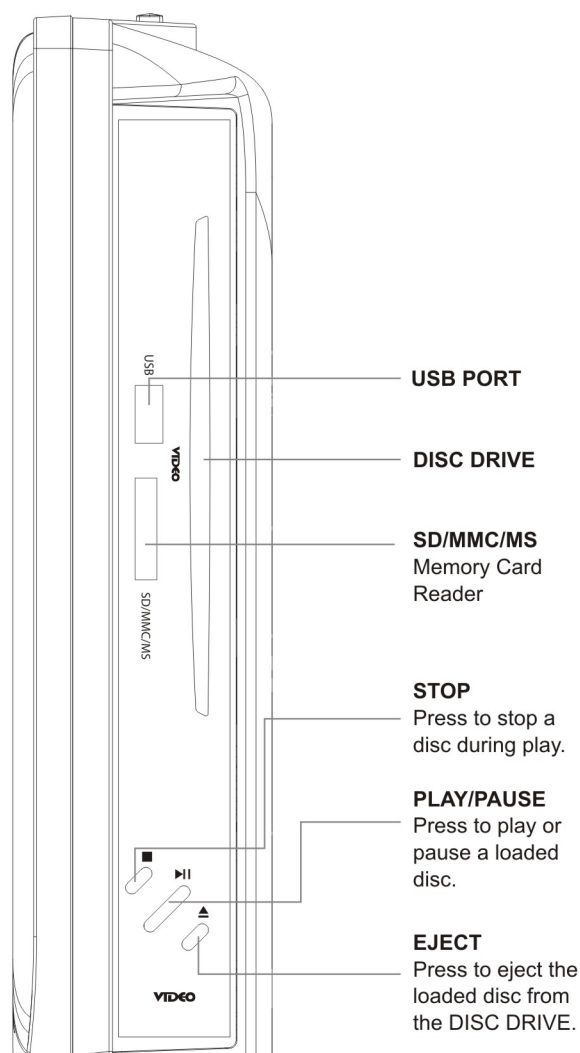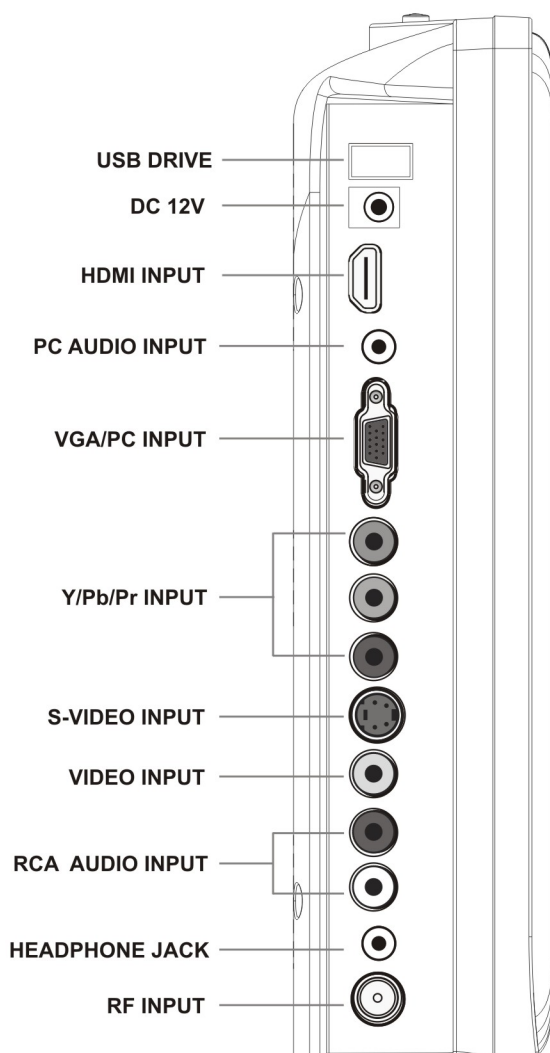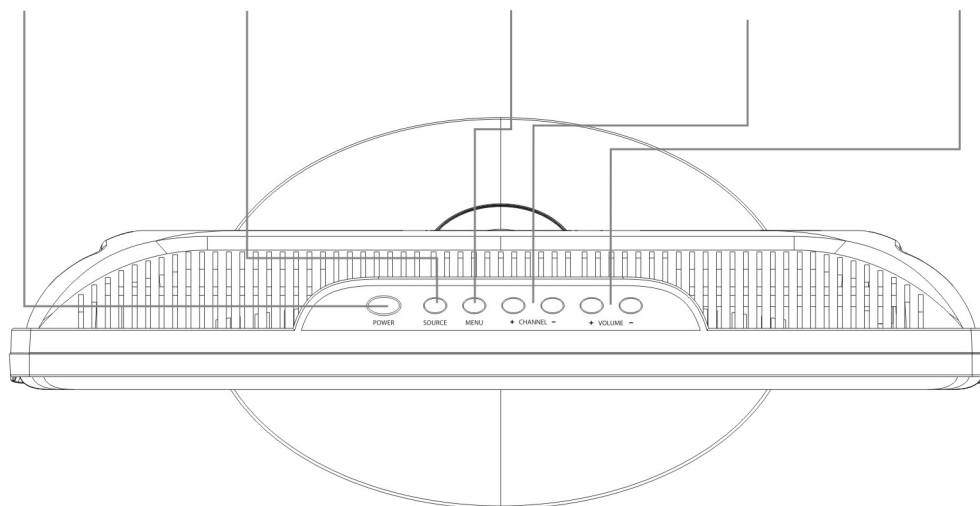

## REMOTE CONTROL

### 1. POWER

Press to power the television of or on.

### 2. NUMBER KEYPAD

### 3. SLEEP

Press repeatedly to set the sleep timer. After the set time has expired the television will automatically power of.

### 4. ASPECT

Press to adjust the aspect ratio between FULL, NORMAL, WATERGLASS and CINEMA.

### 5. VOLUME

Press to adjust the volume.

### 6. PICTURE

Press to adjust the picture between STANDARD, MOVIE, USER, and DYNAMIC. The user mode can be customized by accessing Picture Settings in the menu.

### 7. MENU

Press to view the television setup menu.

### 8. AUDIO/SAP

Press to cycle through the available audio settings in DVD mode. In TV mode, press to switch to an alternate audio option when supported.

### 9. ARROW KEYS

### 10. ENTER

### 11. DISPLAY

Press to view the on-screen display.

### 12. FAV LIST/PLAY/PAUSE

In TV mode, press to view your favorites list. In DVD mode, press to play or pause the loaded disc.

### 13. ADD/ERASE/STOP

In TV mode, press to add or erase the current channel as a favorite. In DVD mode, press to stop the current disc during play.

### 14. CH LIST/SKIP

In TV mode, press to view a list of available channels. In DVD mode, press to skip between chapters.

### 15. AUTO/SKIP

 
In PC mode, press to fine tune the position of the screen automatically. In DVD mode, press to skip between chapters.

### 16. SLOW

During DVD play, press to slow motion playback, press play to resume normal playback

### 17. DVD SETUP

In DVD mode, press to access the DVD setup menu.

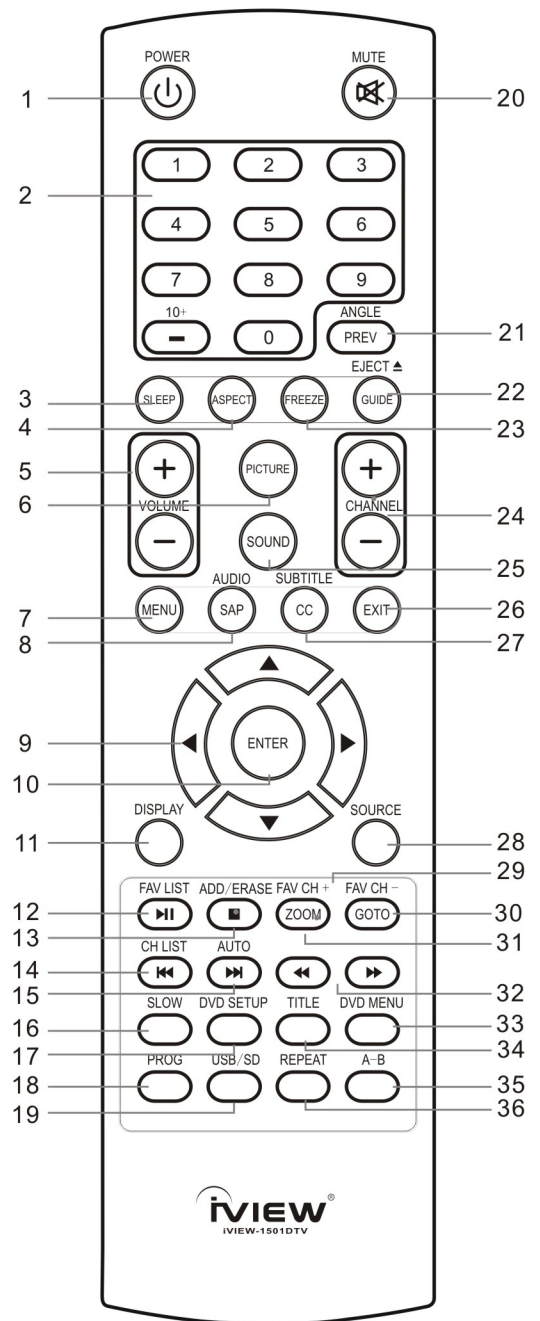

## REMOTE CONTROL

### 18. PROGRAM

Press to program the loaded disc to play chapters or tracks in a specified order.

### 19. USB/SD

In DVD mode, press to switch between USB and SD card mode.

### 20. MUTE

Press to mute the volume.

### 21. ANGLE/PREV

Press to view alternate angles on supported DVDs. In TV mode, press to switch to the previous channel.

### 22. EJECT/GUIDE

In DVD mode, press to eject the loaded disc. In TV mode, press to view the on screen television guide.

### 23. FREEZE

Press to freeze or unfreeze the current frame in DVD mode or TV mode.

### 24. CHANNEL

Press to adjust the television channel.

### 25. SOUND

Press to adjust the sound between STANDARD, SOFT, USER, and DYNAMIC. The user mode can be customized by accessing Sound Settings in the menu.

### 26. EXIT

Press to exit the current menu.

### 27. SUBTITLE/CC

Press to cycle through available subtitle settings in DVD mode. Press to view the closed captioning in TV mode.

### 28. SOURCE

Press to view the available television sources. Press the ARROW and ENTER buttons to adjust the current television source.

### 29. FAV CH +/-

Press to cycle through saved favorite channels in TV mode.

### 30. GOTO

In DVD mode, press to go to a specified title, chapter, and time.

### 30. SEARCH

Press to search through the current chapter or track.

### 31. ZOOM

In DVD mode, press to zoom in or out on the current screen.

### 32. DVD MENU

Press to access the DVD menu on a loaded DVD.

### 33. TITLE

Press to access the title menu on a loaded DVD.

### 34. A-B

While playing a DVD, press to set a specified section of DVD to repeat.

 
### 35. REPEAT

Press to repeat the current chapter or track or the entire disc.

## SETUP


### Power

Plug the attached AC cord into a standard AC power outlet to power the LCD television.

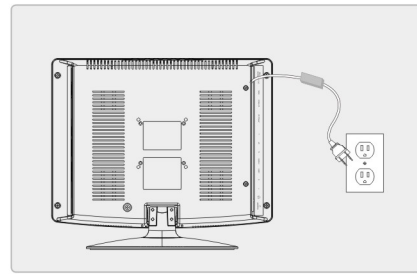

### Remote Power

 Requires 2 AAA batteries, included.  
Insert the included AAA batteries into the remote control to power the remote.

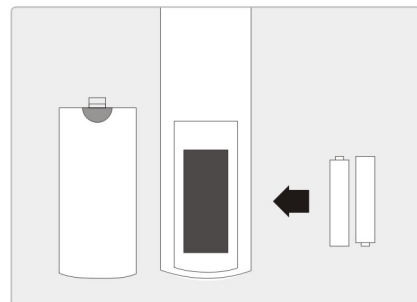

## TELEVISION SETUP

### Connecting a TV Antenna

Requires a TV antenna, not included.

1. Connect a VHF, UHF, or HDTV antenna to the TV ANTENNA on the LCD television.
2. Press the SOURCE button and adjust the INPUT SOURCE to "TV".
3. Press the MENU button to access the Setup Menu.
4. Press the DIRECTION (◀ ▶) buttons to select the CHANNEL tab.
5. Press the DIRECTION (▲ ▼) buttons to select AIR/CABLE. Press the DIRECTION (◀ ▶) buttons to select AIR.
6. Press the DIRECTION (▲ ▼) buttons to select AUTO SCAN. Press the ENTER button.
7. Press the DIRECTION (▲ ▼) buttons to select START TO SCAN. Press the ENTER button to scan.

### Scanning for Channels

After connecting your TV Antenna or Basic Cable you need to scan for channels before you'll be able to watch any television.

1. Connect a TV Antenna or Basic Cable to the LCD television.
  2. Press the SOURCE button and adjust the INPUT SOURCE to "TV".
  3. Press the MENU button to access the Setup Menu.
  4. Press the DIRECTION (◀ ▶) buttons to select the CHANNEL tab.
  5. Press the DIRECTION (▲ ▼) buttons to select AUTO SCAN. Press the ENTER button.
  6. Press the DIRECTION (▲ ▼) buttons to select START TO SCAN. Press the ENTER button.
- Your LCD television will automatically begin scanning for available channels.



## TELEVISION

### Channel List View

1. Press the SOURCE button and adjust the INPUT SOURCE to "TV".
2. Press the LIST button, on the remote, to view a list of available channels. Unless you are using a Set-Top Box, you must auto scan for channels before being able to view channels in list view.

### Adding Favorites

1. Press the SOURCE button and adjust the INPUT SOURCE to "TV".
2. Press the MENU button to access the Setup Menu.
3. Press the DIRECTION (◀ ▶) buttons to select the CHANNEL tab.
4. Press the DIRECTION (▲ ▼) buttons to select FAVORITES. Press the ENTER button to enjoy your favorite program.
5. Press the CHANNEL (+ -) buttons to select available channels and press the ADD/ERASE button to save those channels as favorites. Channels added to the Favorites list will show a check next to their name.

### Viewing Favorites

1. Press the SOURCE button and adjust the INPUT SOURCE to "TV".
2. Press the FAV button, on the remote, to view a list of channels saved as favorites.
3. Press the DIRECTION (▲ ▼) and ENTER buttons on the remote to highlight and select a channel to go to.

### Parental Controls (V-Chip)

1. Press the SOURCE button and adjust the INPUT SOURCE to "TV".
2. Press the MENU button.
3. Press the DIRECTION (◀ ▶) buttons, select LOCK, and press the ENTER button.
4. The default password for the parental lock is: 0000
5. Enter the password to access the LOCK preferences.
6. From this menu, you can lock specific ratings from the United States rating system or the Canadian rating system by turning the SYSTEM LOCK to ON.
7. Press the V-CHIP button on the remote and enter the passcode to unlock the current channel when browsing television channels.

## TELEVISION

### Television Menu

Press the MENU button to access the TV menu.

Press the EXIT button to exit the TV menu.

#### Picture

Picture Settings

Screen Settings

PC Settings

Color Temperature

Advanced Picture Settings

#### Sound

Sound Settings

Surround Mode

Analog Sound

Digital Sound

Other Settings

Equalizer settings

#### Channel

Channel List

Favorite List

Channel Setting

Signal Type

Auto Channel Search

#### Parental

Lock Parental Control

V-Chip

Change Password

Front Panel Lock

Source Lock

#### Setup

Closed Caption

Menu Language

Clock

#### Others

Blue Back

No Signal Power Off

No Operation Power Off

All Reset

Audio Only



## **DVD AND CD**

### **Loading a DVD or CD**

1. Gently insert a DVD or CD into the slot- load disc drive, with the label side of the DVD or CD facing the front of the television. Once a DVD or CD is loaded into the television, the TV will automatically switch to DVD mode.

### **Playing a DVD or CD**

1. Follow the instructions for Loading a DVD or CD.
2. After the DVD or CD is loaded, it will begin playing automatically.  
If the DVD or CD does not begin playing automatically, press the PLAY/PAUSE button to begin playing the loaded disc.

### **Programming a DVD or CD**

1. While a DVD or CD is playing, press the PROGRAM button on the remote.
2. Using the NUMBER KEYPAD enter in the title (T) and chapters (C), or tracks in the order you want them to play.
3. Highlight the on-screen START button using the ARROW buttons and press the ENTER button.
4. The programmed titles and chapters, or tracks will now play in the designated order.
5. To cancel a program, press the PROGRAM button, highlight the on-screen STOP button using the ARROW buttons, and press the ENTER button.

### **DVD Setup Menu**

In DVD mode, press the DVD SETUP button to access the DVD setup menu. Press the DVD SETUP button to exit the DVD setup menu.

 
#### **General Setup page**

TV Display  
OSD Lang  
Screen Saver  
Last Memory

#### **Preference pages**

TV Type  
Audio  
Subtitle  
Disc Menu  
Parental  
Password  
Default

## USB PORT AND MEMORY CARD READER

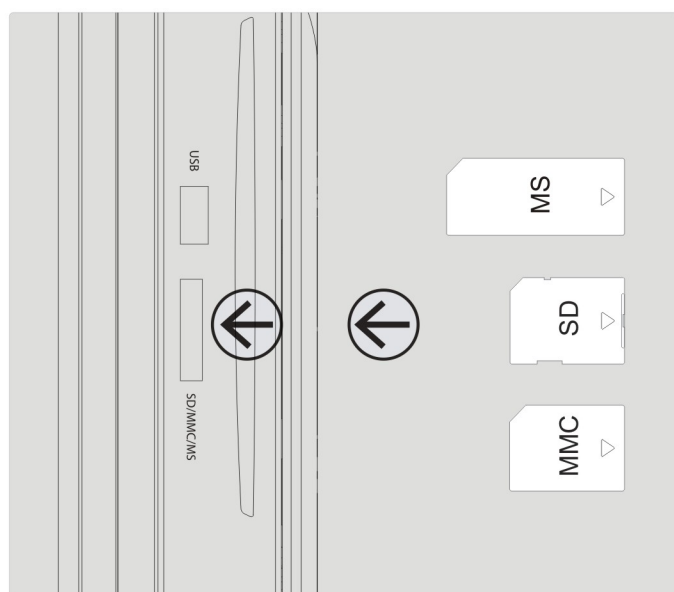


### Connecting a Memory Card

1. Load an SD, MS, or MMC memory card into the MEMORY CARD READER as shown in the image to the right.

### Using a Connected Memory Card

 1. Follow the instructions for Connecting an SD or MMC card.
2. Press the SOURCE button to switch to DVD mode.
3. Press the USB/SD button on the remote to switch to the connected memory card.
4. Use the ARROW and ENTER buttons to select and play content from the connected memory card.

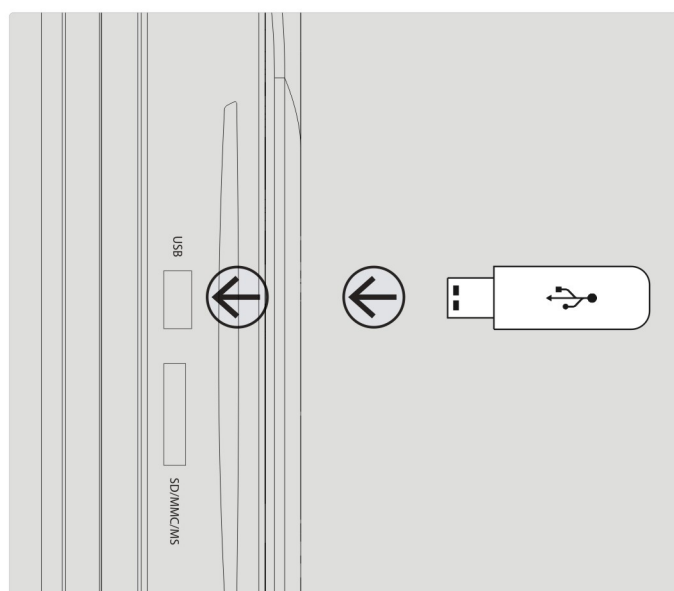

### Connecting a USB Thumb Drive

1. Load a USB thumb drive into the USB PORT as shown in the image to the right.

### Using a Connected USB Thumb Drive

1. Follow the instructions for Connecting a USB thumb drive.
2. Press the SOURCE button to switch to DVD mode.
3. Press the USB/SD button on the remote to switch to the connected USB thumb drive.
4. Use the ARROW and ENTER buttons to select and play content from the connected USB thumb drive.

## 15.6" HDTV WITH DVD

### Panel

Size: 15.6 inch wide screen  
Max. Resolution: 1366 x 768  
Aspect Ratio: 16:9, Wide XGA  
Brightness (TYPE): 250cd/m2

### TV System Spec

TV System: NTSC-M, ATSC (8VSB/64QAM/256QAM(J.83B))  
Receive Channe: CH2-CH69 AIR, CH1-CH135 CABLE  
Picture Mode: Standard/Movie/User/Dynamic  
Audio Effective: Soft / Dynamic / Standard / User

### TV Performance

Comb Filter: 3D  
Child Lock: YES  
Card Reader  
DVD Function  
USB Reader

### ATSC Spec

Support SCAN, EPG, Closed Caption for ATSC  
Demodulation: 8VSB/64QAM/256QAM(J.83B)  
Receiving Modulated Signal: Digital Reception VHF & UHF Band  
Input RF Signal AV Format: MPEG-2 MP @ ML MP@HL  
Audio Output: L/R Channel, Stereo

### Main Features

Supports 1080P De-interlace  
Amplifier: YES  
Speakers: 2x3W

### Connector

RF Input (ATSC): X1  
CVBS Input: X1  
S-VIDEO Input: X1  
Hand Phone Output: X1  
Y/Pb/Pr Input: X1  
PC Audio Input: X1  
PC Analog Port (VGA): X1  
HDMI Input: X1  
USB Driver: X1 (Upgrade)  
USB Reader: X1

### Power Supply

Power Input: AC-DC Adapter 12V  $\equiv$  4A  
Max. Power Consumption: <48W  
Standby Power Consumption: <3W