






32" 1080p LED-LCD HDTV

# QUICK SETUP GUIDE


NS-32E570A11

## Thank You

for purchasing this fine Insignia television.  
We hope you enjoy the quality and reliability  
of this product for years to come.

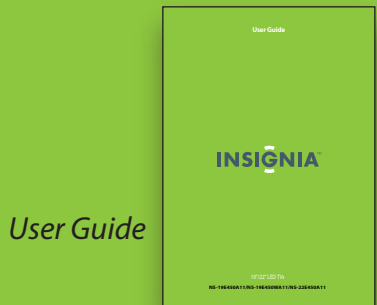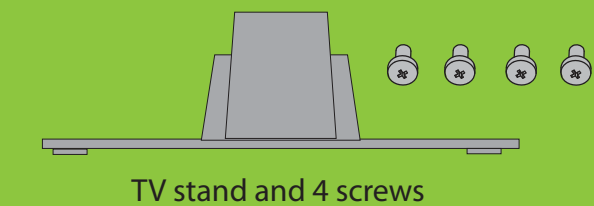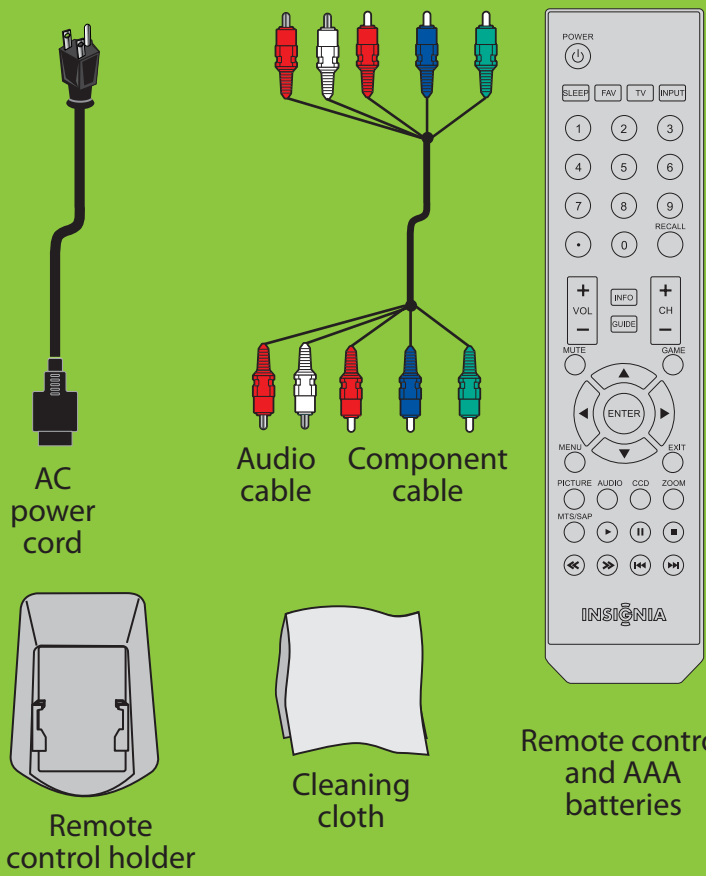


## Front features

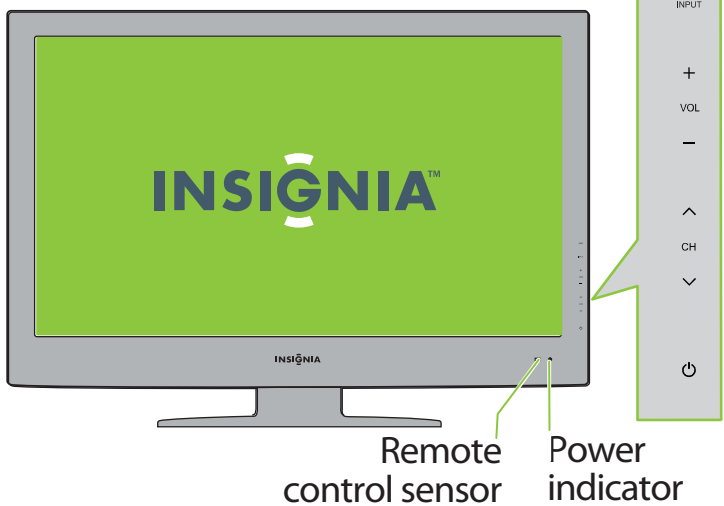

## Installing the stand

- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 Slide the stand into the stand groove, then secure the stand to the screen with the four provided screws.

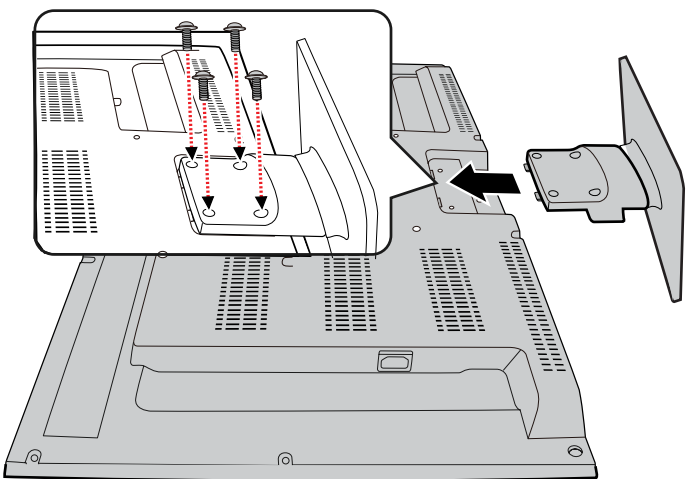


## Installing a wall-mount bracket

- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 Remove the four screws holding the TV to its stand, then remove the stand.
- 3 Secure the wall-mount bracket to the back of your TV using the screws provided with the bracket.

## Setting up your remote control

- 1 While pressing the release button on the battery compartment cover on the back of the remote, lift the cover off the remote.

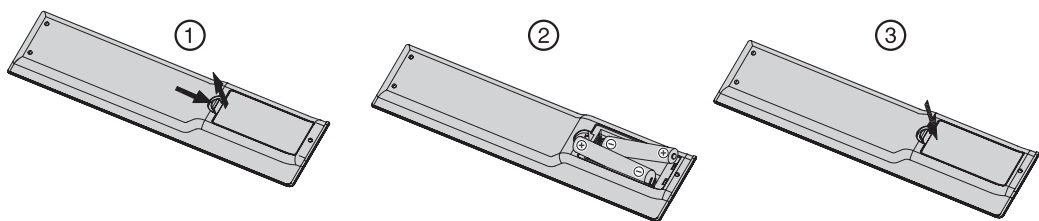

- 2 Insert two AAA batteries into the battery compartment. Make sure that the + and - symbols on the batteries align with the + and - symbols in the battery compartment.
- 3 Replace the cover.


## Programming your existing universal remote control

To program your existing universal remote control to work with your new Insignia TV, see the table below for common codes. If you have problems programming your remote or need a different remote control code, visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for the latest remote control code information. See your manual to program your universal insignia remote to control other devices.


Universal remote control TV codes (for all Insignia TVs manufactured after Jan. 1, 2007)								
Universal remote control makers and models				Set-top box makers and models				
Philips PHV05, PH505, PMDVR8, PDMR8	RCA RCU807	One for All URC-6690	Sony RM-VL600	Comcast M1057	Dish Network VIP508, VIP622	Motorola DRC800	TIVO Series 3, HD	DirectTV RC23
115	135	0464	8043	0463	720	0463	0091	10463

## Connecting a DVD or Blu-ray DVD player, cable box, satellite receiver, or game station

Using HDMI (best)


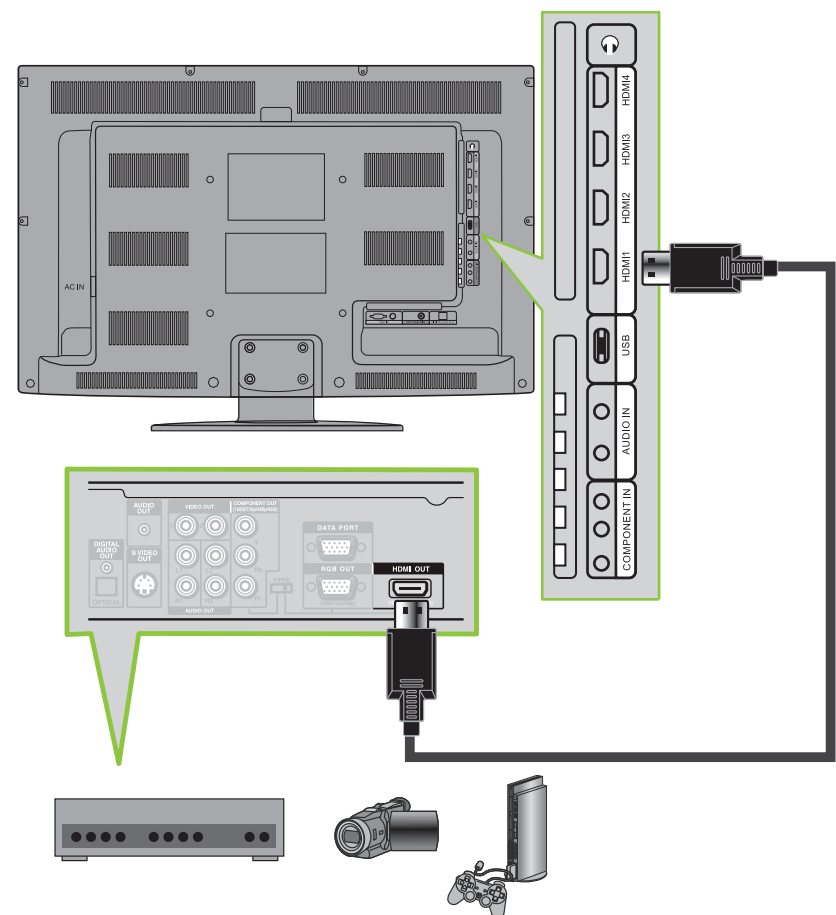


Using component (good)

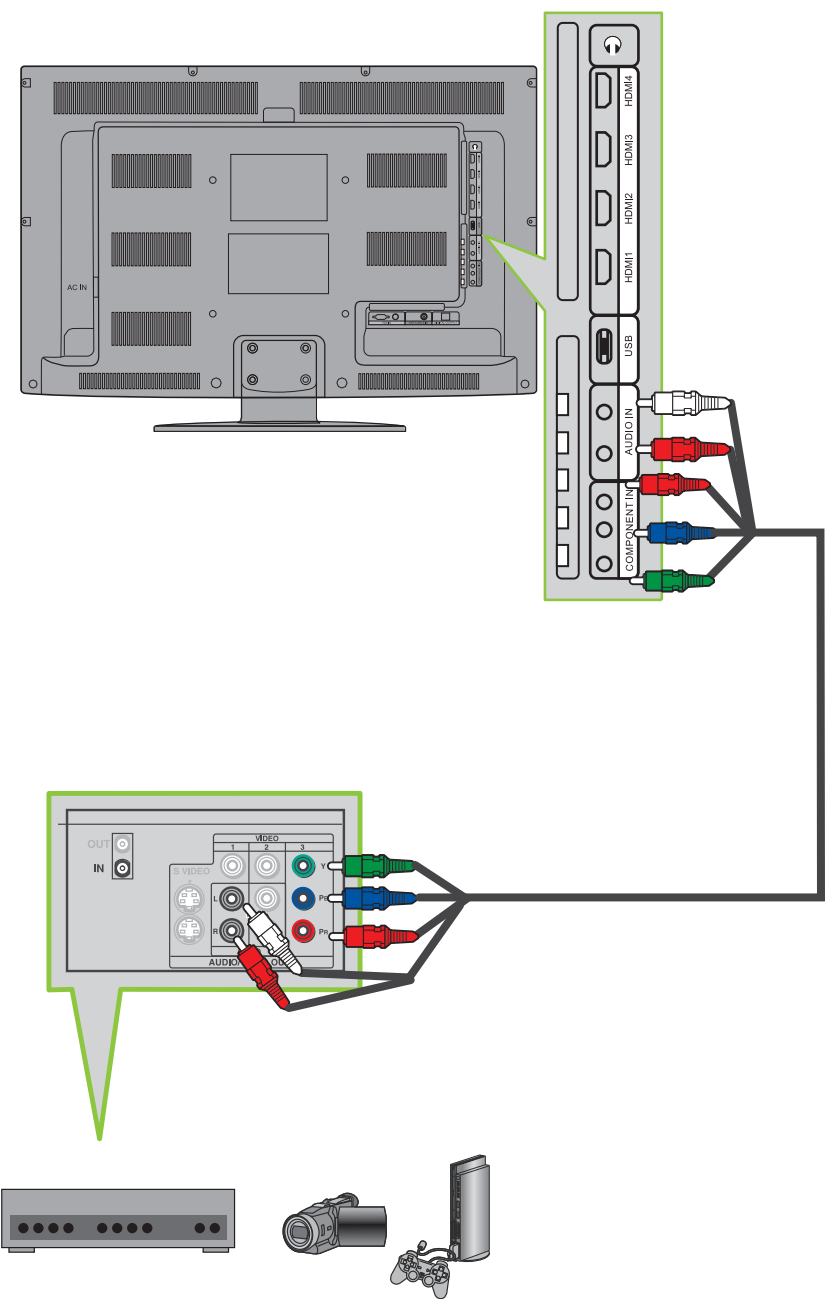

## Connecting an antenna


Connect a coaxial cable (not included) to the **ANT/CABLE IN** jack on the back of your TV and the RF OUT jack on the antenna.

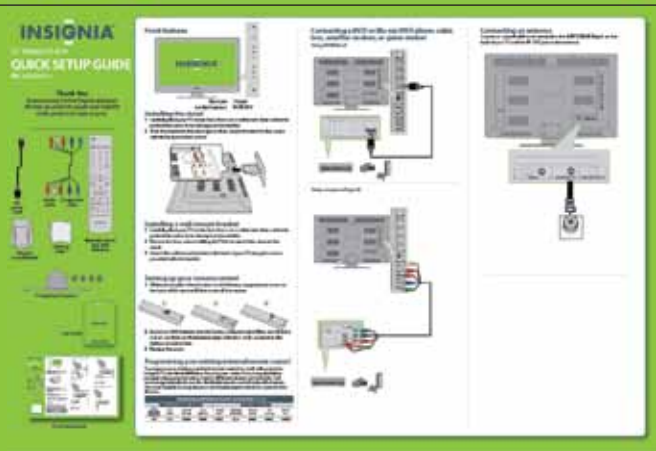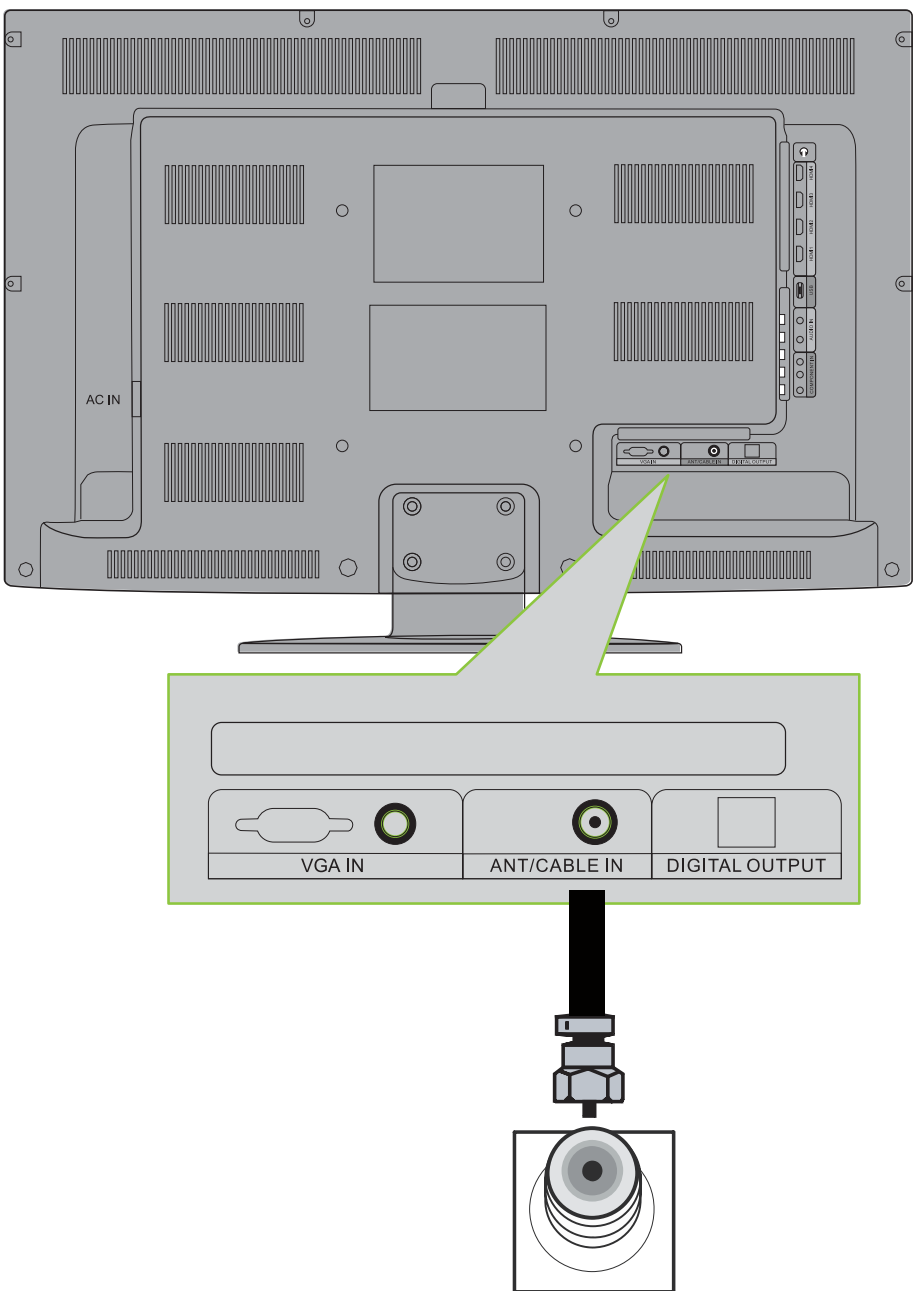

Quick Setup Guide


## Connecting a Home Theater System

Using Digital audio

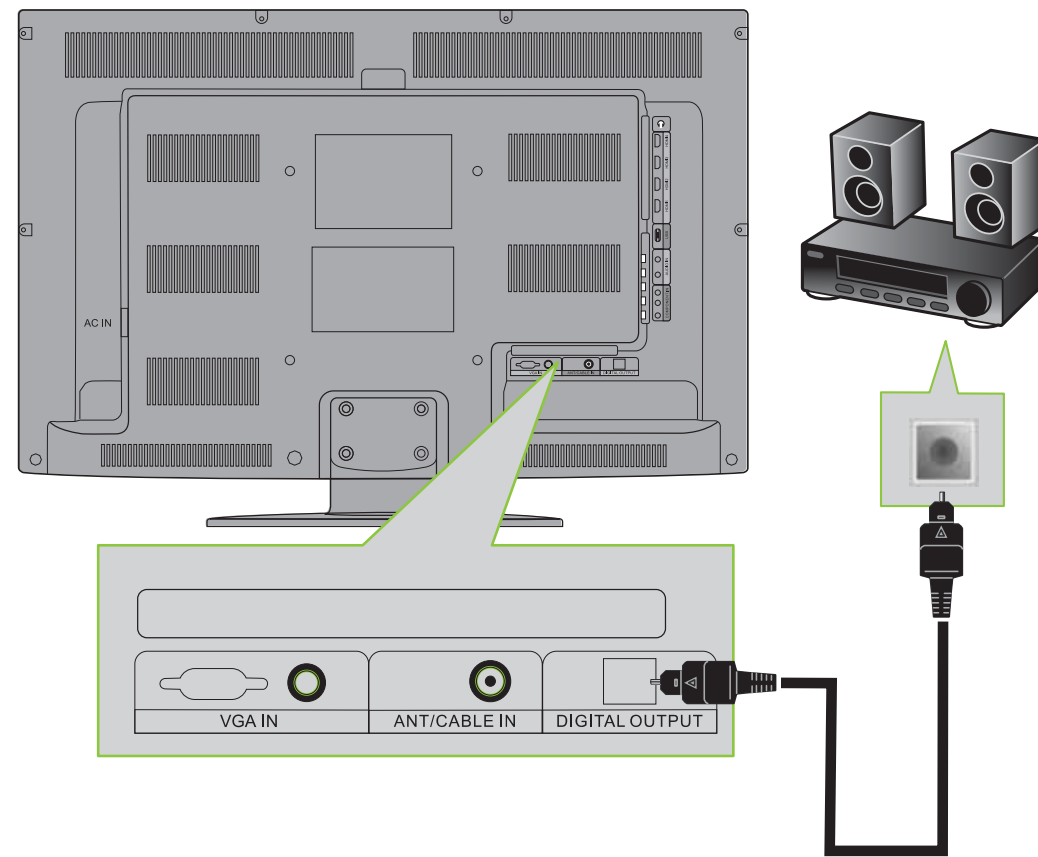




## Connecting power

Plug the AC power cord into the **AC IN** jack on the back of your TV, then plug the other end of the cord into a power outlet.

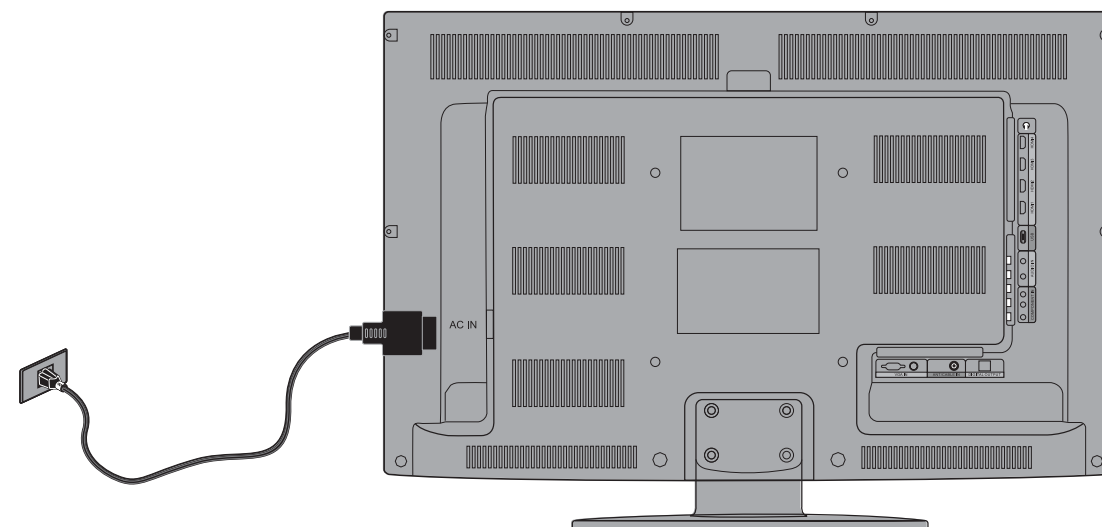



## Turning on your TV for the first time

- 1 Make sure that you have installed the remote control batteries.
- 2 Press **POWER** to turn on your TV. The *Choose your menu language* screen opens.
- 3 Press **▲** or **▼** to highlight the language you want, then press **ENTER**. The *Choose your Time Setting* screen opens.
- 4 Press **▲** or **▼** to highlight Mode, then press **◀** or **▶** to select **Custom** (to set the date and time manually) or **Auto** (to set the date and time automatically from a TV signal source based on the time zone you select). Press **▲** or **▼** to highlight **Time Zone**, then press **◀** or **▶** to select your time zone.
- 5 Press **▲** or **▼** to highlight **Daylight Savings**, then press **◀** or **▶** to select **On**.
- 6 Press **ENTER**. The *Choose your Picture Mode* screen opens.
- 7 Press **▲** or **▼** to highlight **Home Mode** or **Retail Mode**, then press **ENTER**. If you selected **Retail Mode**, select **Yes** to continue.
- 8 Press **▲** or **▼** to highlight the TV signal source you want, then press **ENTER**. If you chose **Antenna** or **Cable**, your TV automatically scans for channels. To stop the auto channel search press **EXIT**.
- 9 To watch TV, press the **TV** input source button on your remote control.

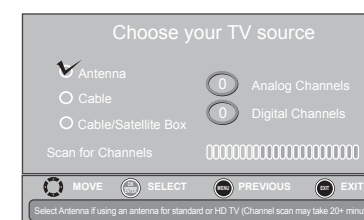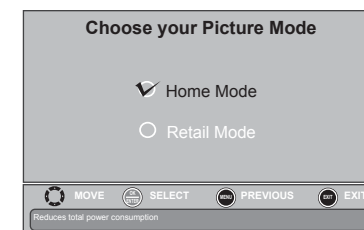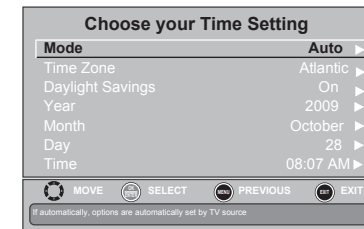

## Selecting the video input source

- Press **INPUT**, press **▲** or **▼** to highlight a source, then press **ENTER**.

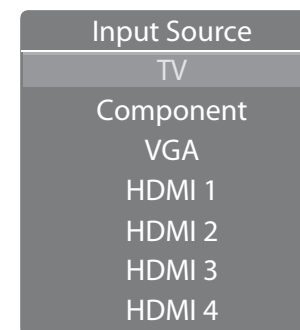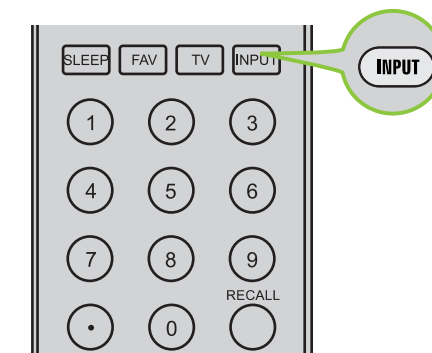

## Adjusting the volume

- Press **VOL+** or **VOL-** to change the volume.
- Press **MUTE** to turn off the sound.


## Selecting a channel

- To move to a different channel in the channel list, press **CH +** or **CH -**. OR
- Enter the channel number directly using the number buttons.



## Viewing additional information

- Press **INFO** to see status information such as channel number, channel name (if available), signal source, program description, and DTV signal strength.
- Press **GUIDE** to show the digital program guide, which may show current channel name, program name, time, rating, and summaries, depending on information provided by the broadcaster.

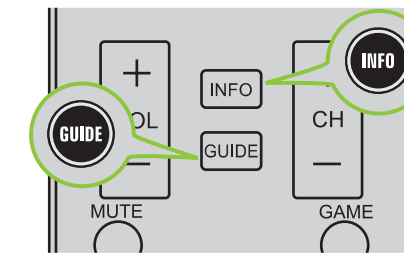

## On-screen menu overview

### PICTURE menu



### AUDIO menu



### CHANNELS menu




### SETTINGS menu



### Photo menu



## Navigating menus with your remote control

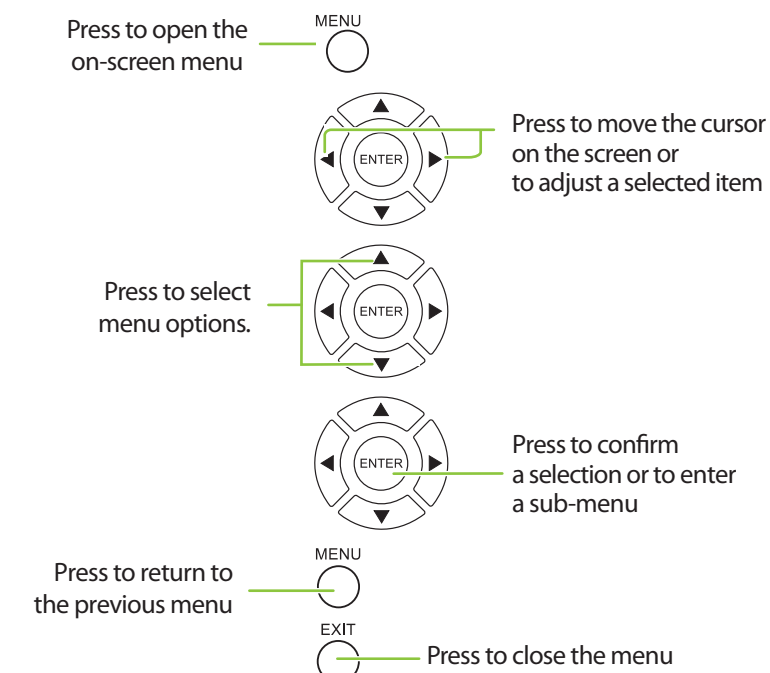

# INSIGNIA™

## Two-year limited warranty

See your *User Guide* or visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## Need additional help?

See your *User Guide*! This comprehensive guide includes everything from basic how-to steps to more advanced features.

Check out our **online community forum** at [www.insigniaproducts.com](http://www.insigniaproducts.com) for helpful information from other Insignia TV owners.

## We're here for you

[www.insigniaproducts.com](http://www.insigniaproducts.com)

For customer service, call:

**877-467-4289 (U.S./Canada markets)**

**01 800-926-3000 (Mexico market)**

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, MN USA  
55423-3645

Best Buy Imports, S. de R.L. de C.V. Av. Santa Fe 485,  
Segundo Piso, Colonia Cruz Manca, Programa Parcial de  
Desarrollo Santa Fe, Delegación Cuajimalpa, Distrito  
Federal, México 05349

RFC#BBI0802114Q2

© 2010 BBY Solutions, Inc.

All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.