

Chooses to connect subwoofer. (Off / On) • When Subwoofer Out set to On, you can adjust Subwoofer Level. Subwoofer to be used must have a built-in amplifier.

 You cannot save or export the snapshot Freeze function is not available for HDMI, PC and Component signal. 4

still picture

or change the

channel.

Check subwoofer cable connected correctly. If movement appears unnatural when receiving a signal from a DVD Feedback sound symptoms player, etc. with 625p (progressive-scanning), change the output setting of Keep the microphone away from the TV's speakers. the external device to 625i (interlace-scanning). Echo

V-Scroll

1. Select

•

16:9 Zoon



Lower the sound level in "Microphone Volume" in order to prevent the echo 6

Screw x 8