




High Definition Television Receiver

OWNER'S MANUAL

MODEL : LST-3100A



Before connecting, operating or adjusting this product,
please read this owner's manual carefully and completely.

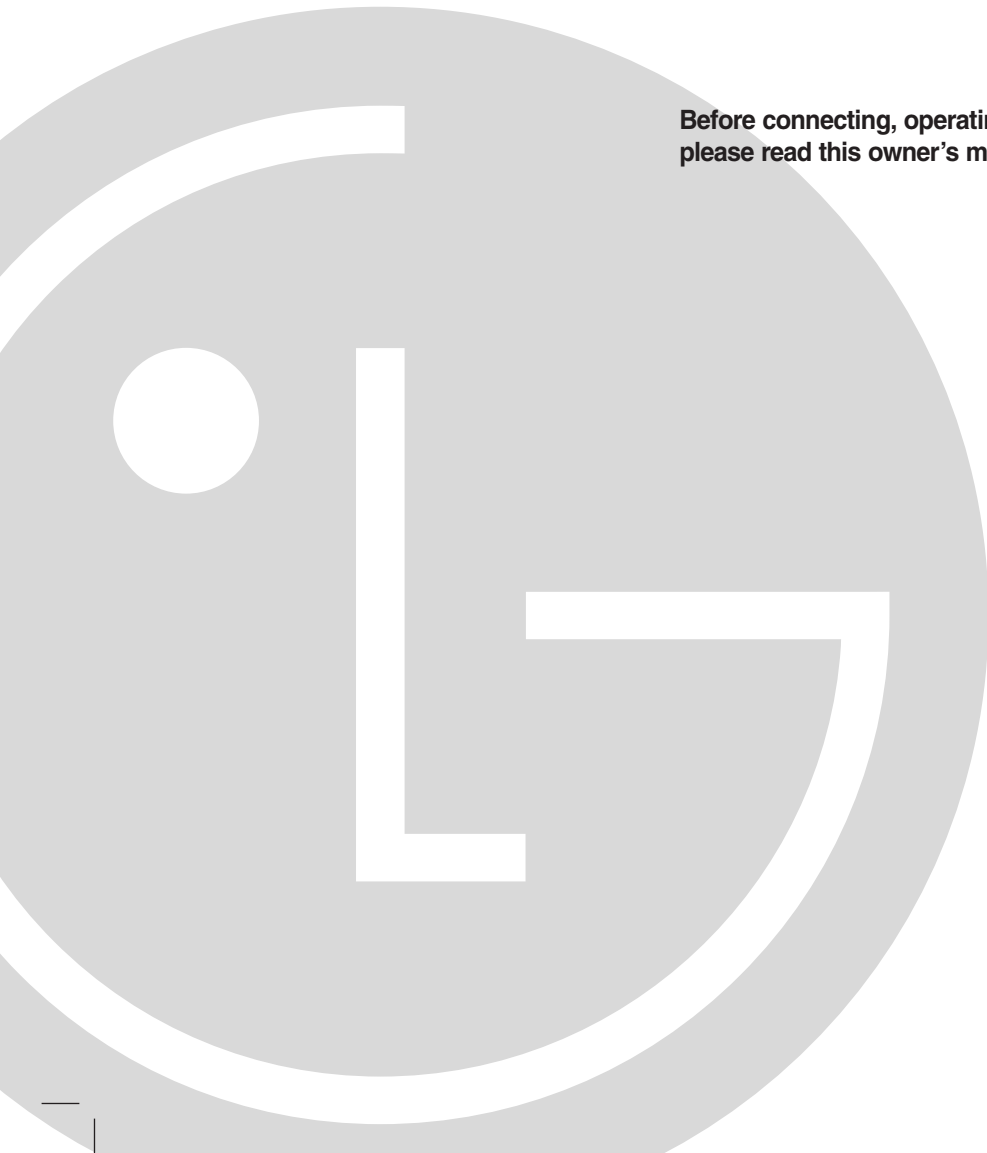

Safety Precautions



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.

WARNING

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

NOTE TO CABLE/TV INSTALLER

This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

REGULATORY INFORMATION: FCC Part 15

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the product is operated in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

COMPLIANCE: The responsible party for this product's compliance is:

Zenith Electronics Corporation, 2000 Millbrook Drive, Lincolnshire, IL, 60069, USA Phone: 1-847-941-8000

CAUTION

DO NOT ATTEMPT TO MODIFY THIS PRODUCT IN ANY WAY WITHOUT WRITTEN AUTHORIZATION FROM LG ELECTRONICS CORPORATION. UNAUTHORIZED MODIFICATION COULD VOID THE USER'S AUTHORITY TO OPERATE THIS PRODUCT. THIS EQUIPMENT IS INTENDED TO RECEIVE AND DECODE SIGNALS TRANSMITTED ACCORDING TO ATSC DIGITAL TELEVISION STANDARD A/53, SPECIFICATION AND IS INTENDED TO BE USED WITH AN APPROPRIATE ANTENNA AND DISPLAY DEVICE THAT YOU MUST PROVIDE.



As an ENERGY STAR® Partner, LG has determined that this product or product models meets the ENERGY STAR® guidelines for energy efficiency.

ENERGY STAR® is a U.S. registered mark.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS INSTALLATION AND OPERATING GUIDE AND THOSE MARKED ON THE UNIT. RETAIN THIS GUIDE FOR FUTURE REFERENCE.

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use, and servicing.

This unit does not contain any parts that can be repaired by the user.

DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

- 1. Read these instructions.** - All these safety and operating instructions should be read before the product is operated.
- 2. Keep these instructions.** - The safety, operating and use instructions should be retained for future reference.
- 3. Heed all warnings.** - All warnings on the product and in the operating instructions should be adhered to.
- 4. Follow all instructions.** - All operating and use instructions should be followed.
- 5. Do not use this apparatus near water.** - For example: near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement; near a swimming pool; etc.
- 6. Clean only with dry cloth.** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.** - Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the product, and to protect it from over-heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided and the manufacturer's instructions have been adhered to.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
- 11. Only use attachments/accessories specified by the manufacturer.**
- 12. Use only the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.**
- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.**
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.**



Table of Contents

Introduction

Safety Precautions	2
IMPORTANT SAFETY INSTRUCTIONS	3
Table of Contents	4
Front Panel Controls and Display Window	5
Remote Control Key Functions	6
Unpacking HDTV Receiver and Accessories/Connection Overview	7
Connection Panel	8

INSTALLATION

Connections	9-16
Antenna Connections	9
Analog Monitor Connections	10
HD Monitor Component (YPbPr) Connections ..	11
HD Monitor RGB Connections	12
HD Monitor DVI-HDTV Connections	13
VCR Connections	14
Amplifier (Receiver) Connections	15
Setting the Display Format	16

MENU OPERATION

Initial Settings	17
General Operation	17
Help Function	17
Setup Menu Options	18-20
EZ Scan (Channel Search)	18
EZ Add	18
Ch. Edit (Channel Edit)	19
Manual Add	20
EZ Demo	20
Option Menu Options	21-24
Clock	21
Menu Language	21
Audio Language	21
Aspect Ratio	22
Choosing the Aspect Ratio using RATIO button ..	23
Audio Output	24
Audio Variable	24
Caption Menu Options	25-27
DTV Caption	25
DTV Caption Style	26
Analog Caption	27
Lock (Parental Control) Menu Options	28-32
Lock System	28
Set Password	28
Block Ch. (Channel)	29
Movie Rating	30
TV Rating-Children	31
TV Rating-General	32
GUIDE Options	33-35
Program Guide	33
Station Guide	33
Information Displays	34
Channel Banner Display	34
Program Information Display	35




NORMAL OPERATION

Program and Station Guide	36-37
Normal Operation	38
Channel Selection	38
Volume Adjustment	38
Signal	38
Freeze	38

REFERENCE

Programming the Remote Control to Operate Other Devices	39
Remote Control Codes for Other Devices	40-41
Troubleshooting	42
Specifications	43
Warranty	Back Cover

About the symbols for instructions

-  Indicates hazards likely to cause harm to the unit itself or other material damage.
-  Indicates special operating features of this unit.
-  Indicates tips and hints for making the task easier.

Manufactured under license from Dolby Laboratories. Dolby, and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992-1997 Dolby Laboratories. All rights reserved.

Front Panel Controls and Display Window

Arrow Buttons (▲/▼/◀/▶)


Allow you to navigate on-screen menus and to adjust the system settings and preferences. Use the arrow keys to move to a menu option and then use the SELECT button to access it. If no menu is displayed, the LEFT/RIGHT arrows control the volume setting and the UP/DOWN arrows select channels.

Remote Control Sensor

Receives signals from the remote control.

Power

Turns the HDTV Receiver on or off.

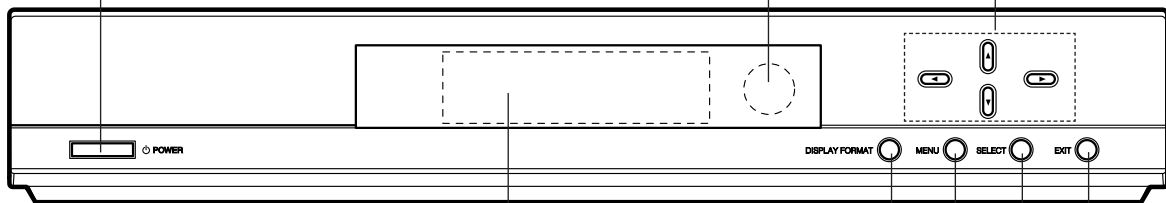

Display Window

DISPLAY FORMAT

Sets the output resolution to 1080i, 720p, 480p, or 480i formats and chooses the correct display format for your TV. (Refer to page 16)

MENU

Shows the main menu on the screen. You can return to normal viewing by pressing the EXIT button.

SELECT

If the main menu is displayed, pressing the SELECT button will activate the selected MENU option. If the SELECT button is pressed while you are in normal viewing, the channel banner will be displayed.

EXIT

Clears all on-screen displays and returns to normal viewing from any menu.

Resolution indicator


Indicates output resolution.

Connection indicator

Indicates output connection.

Standby indicator


Lights when the HDTV Receiver is turned off.

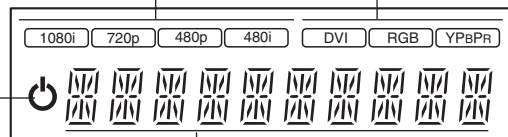

Character indicators

Indicates channel number, volume level, etc.

Remote Control Key Functions

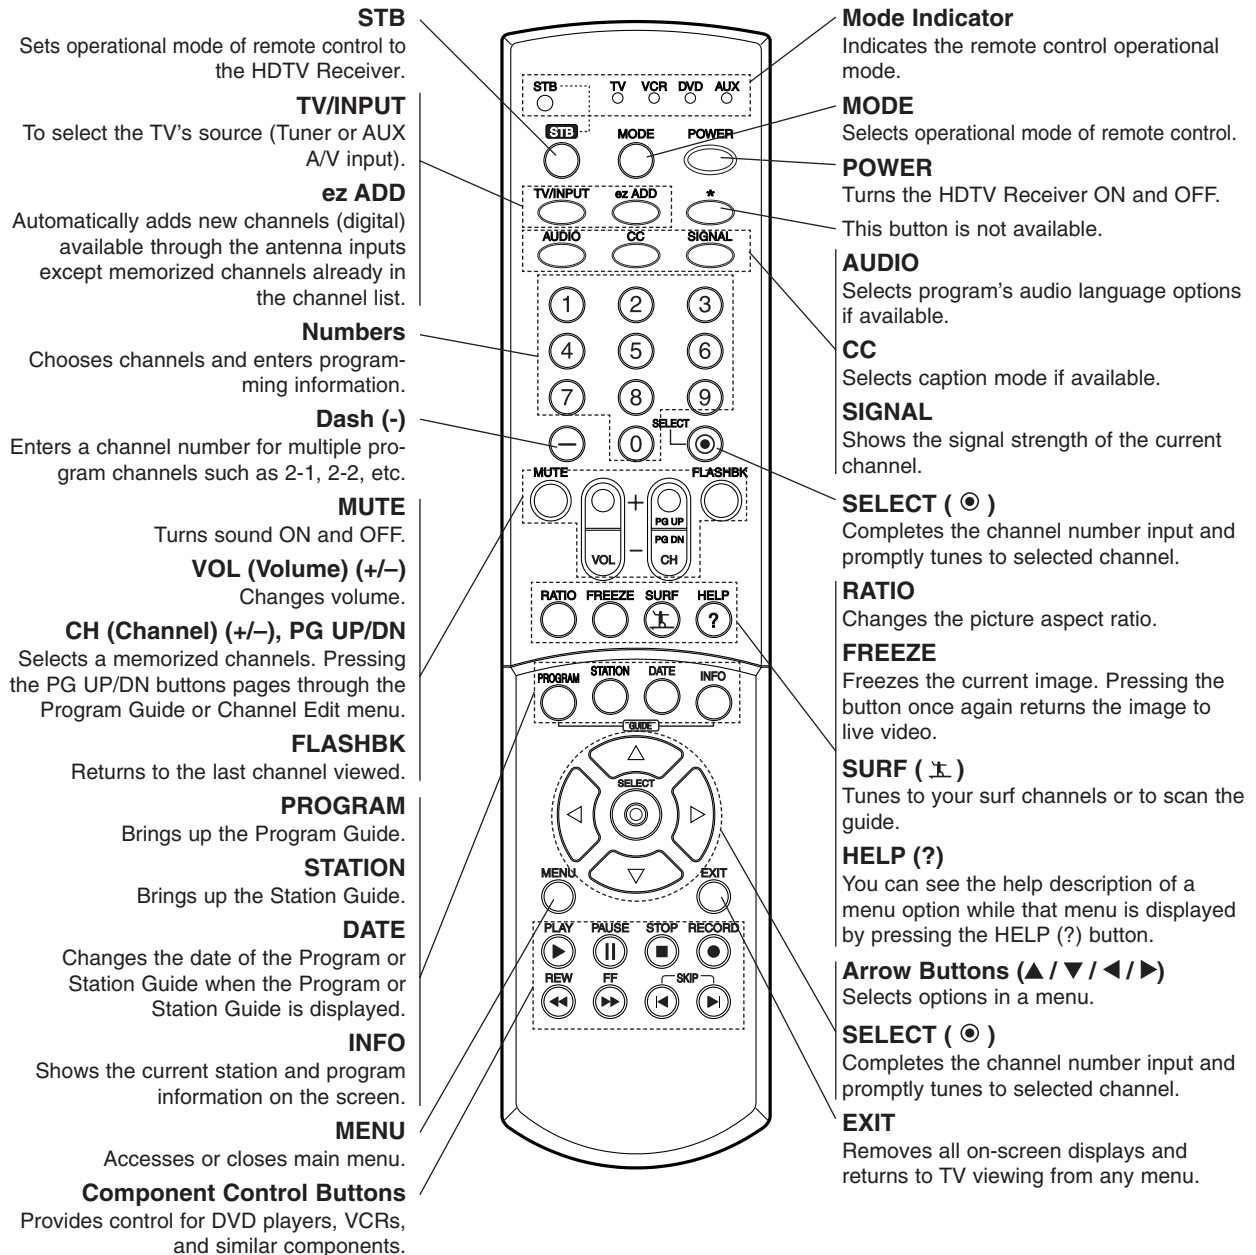

Remote Control Operation Range

Point the remote control at the remote sensor and press the buttons.

- **Distance:** About 23 ft (7 m) from the front of the remote sensor.
- **Angle:** About 30° in each direction of the front of the remote sensor.

Remote Control Battery Installation


Remove the battery cover on the rear of the remote control, and insert two batteries (size AA) with **+** and **-** aligned correctly. Reinstall cover.

⚠ Caution

Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).

Unpacking HDTV Receiver and Accessories/Connection Overview

Make sure you have received all the accessories listed below with the High Definition Television Receiver.

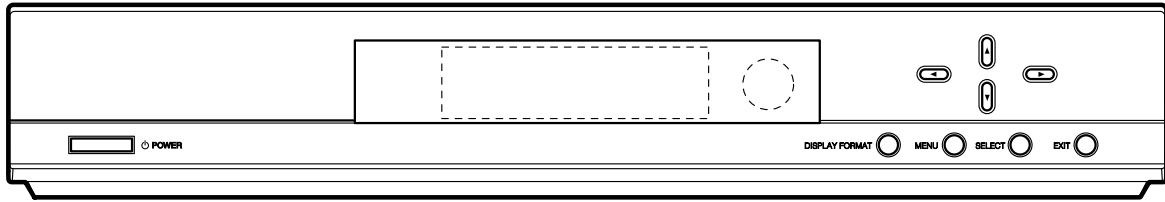


High Definition Television Receiver

The HDTV Receiver is capable of receiving signals from cable and/or over-the-air antenna sources and sending the signals to your TV.


Included with the Receiver are the following accessories.

- | | |
|------------------------|----------------|
| Audio Cable | Video Cable |
| Component(YPbPr) Cable | RF Cable |
| Remote Control | 2 AA Batteries |

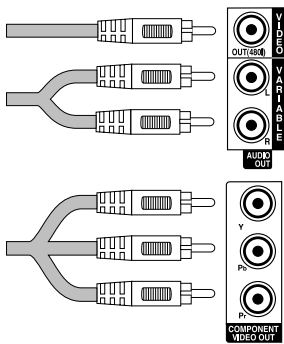

Audio/Video Jacks and Cables

The Audio/Video jacks provide excellent picture and sound quality. They are used for making most Audio/Video connections between components. The Audio/Video jacks may be color coded (yellow for video, red for right audio, and white for left audio). If your component has only one input for audio (mono), connect it to the left (white L/mono) audio jack on the HDTV Receiver.

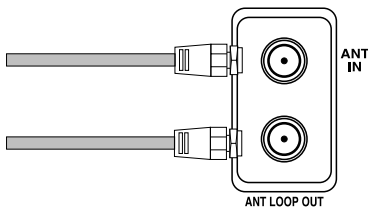

Component Out Jacks and Cables

Component Cables are used to connect the HDTV Receiver to an industry standard YPbPr compatible HD Monitor (green for Y, blue for Pb, and red for Pr). Remember to connect the left and right audio cables. The YPbPr Component jacks carry only the picture signals, not the sound.

ANT LOOP OUT Jack, and RF Cable

 

ANT LOOP OUT provides an RF connection between the HDTV Receiver and the TV and provides the signal of ANT IN jack to TV.

Remote Control


In addition to the HDTV Receiver, the remote control can be programmed to control many other devices.

Batteries

To install the batteries, slide open the battery compartment and insert the two AA batteries provided.

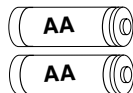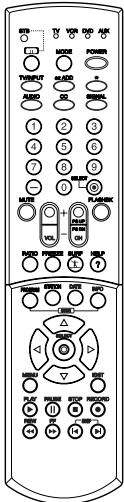

Connection Panel Overview

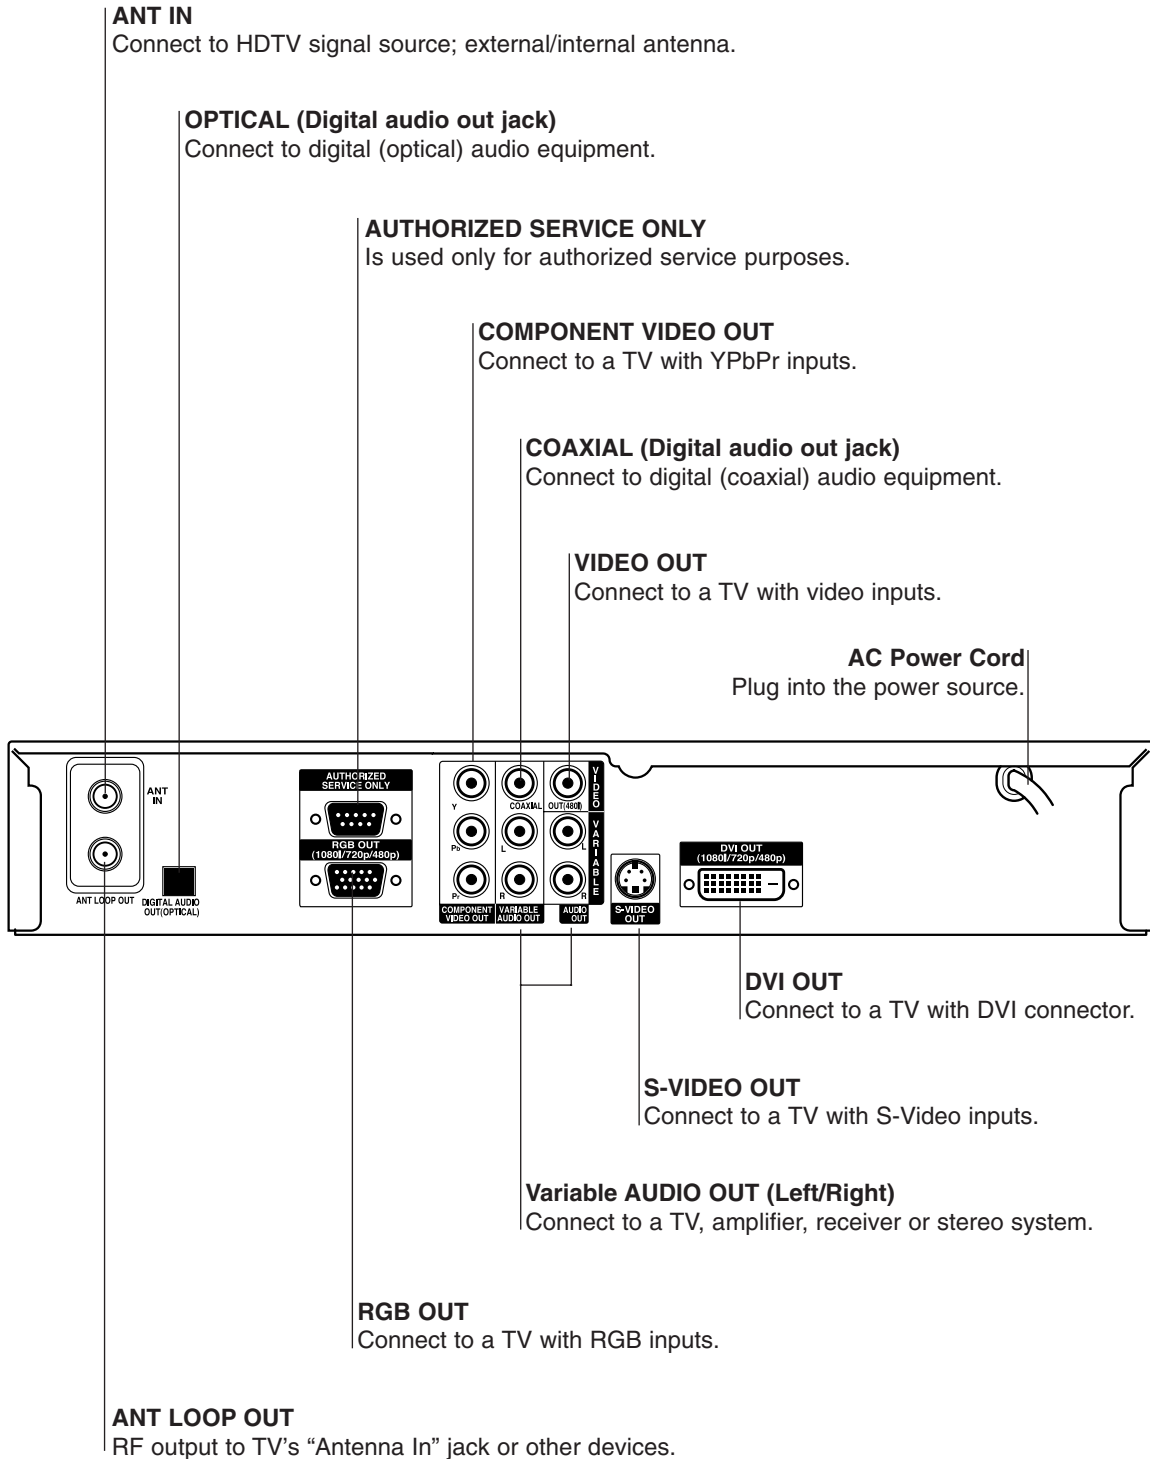

Do not touch the inner pins of the jacks on the rear panel.
Electrostatic discharge may cause permanent damage to the unit.

Connections


Antenna Connections

- 1 Connect the “Antenna” to the “ANT IN” jack on the HDTV Receiver using a coaxial RF cable.

Note

There might be some areas where the signal strength could be too high. If so, you may need to connect the antenna to an attenuator. Screw the attenuator onto the “ANT IN” jack.

- 2 Connect the “ANT LOOP OUT” jack on the HDTV Receiver to the “Antenna In” jack on your TV using a coaxial RF cable.

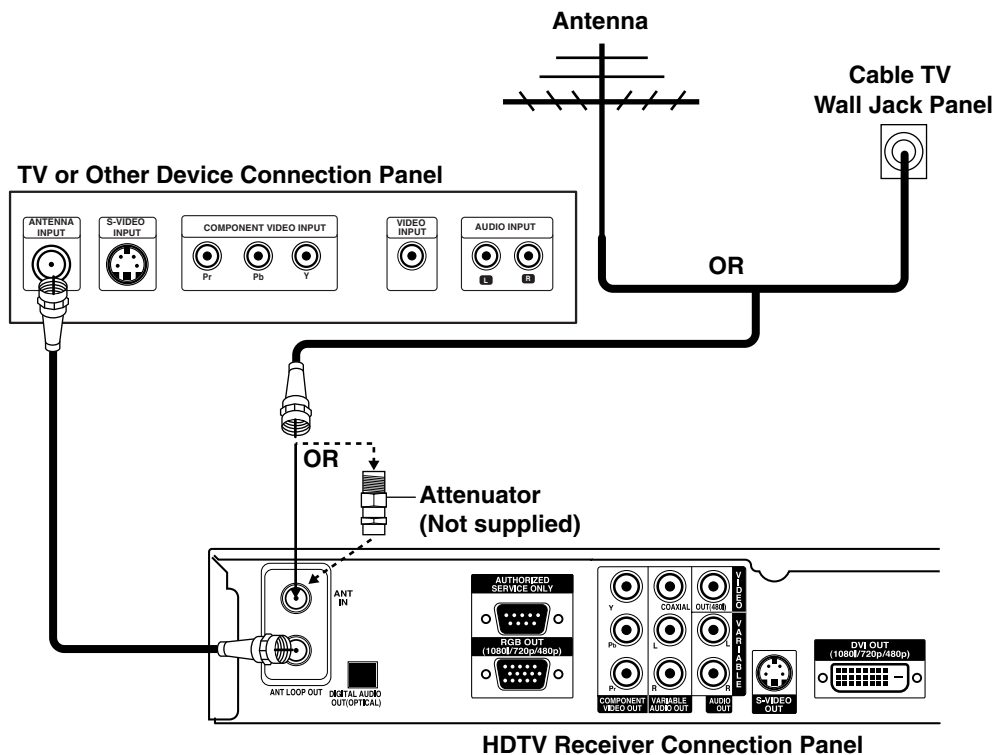

Tip

Before Connecting Your Antenna


During initial installation and setup of your HDTV Receiver, you may need to install a 10 dB attenuator to the Antenna input “ANT IN” on the LST-3100A. The LST-3100A is a high performance, high-gain system intended for operation under normal and weak signal conditions, providing the best reception with its optimum gain. However, there might be some reception areas where the signal strength is too high (e.g. due to close proximity to an undesirable signal or transmitter), so you need an attenuator that lowers the incoming signal strength (from the undesirable transmitter) to more normal levels. This 10 dB attenuator should be used only in a reception area where the undesired signal strength is too high. One of the possible symptoms would be that after your program/channel search, your HDTV receiver does not find all the local digital terrestrial channels available in your area. (You can find HDTV channels/content information for your local broadcast area by going to [Zenith website](http://www.zenith.com) “WWW.ZENITH.COM” and clicking on “HDTV Program Schedule” under HDTV.) Please make sure that before deciding to use an optional attenuator device, you are using an appropriate and properly aligned UHF/VHF RF terrestrial antenna.

Connections (Continued)

Display Formats Overview

- The HDTV Tuner offers various display formats and multiple video outputs. When the HDTV Tuner is connected to A/V systems, the HDTV Tuner can provide video signal formats 1080i, 720p, 480p, and 480i.
- 1080i, 720p, 480p, and 480i modes are available for component video (YPbPr) outputs.
- 1080i, 720p, and 480p modes are available for RGB and DVI outputs.
- 480i mode is available for VIDEO, S-VIDEO, and COMPONENT VIDEO outputs.
- The HDTV Tuner has two digital audio outputs; Dolby Digital 5.1 and PCM. The HDTV Tuner sends out a digital audio signal to OPTICAL and COAXIAL audio outputs when digital broadcasts are being received by the HDTV Tuner.

Analog Monitor Connections

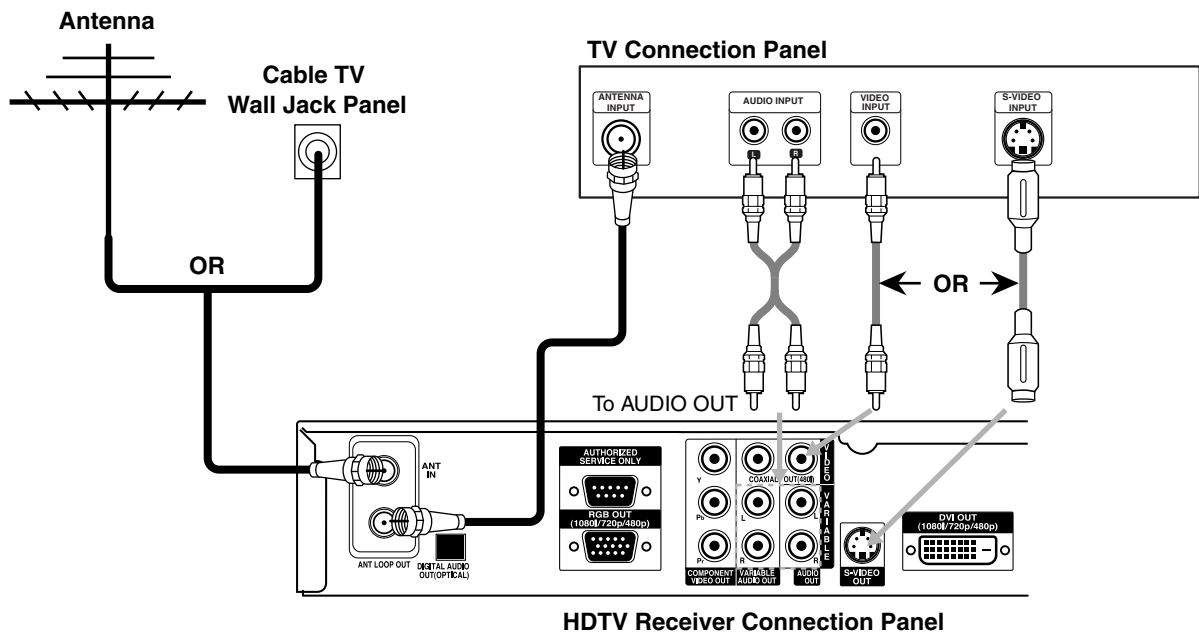

1 Connect the “Antenna/Cable” to the “ANT IN” jack on the HDTV Receiver using a coaxial RF cable.

Note

There might be some areas where the signal strength could be too high. If so, you may need to connect the antenna to an attenuator. Screw the attenuator onto the “ANT IN” jack. (Refer to page 9.)

2 Connect the “ANT LOOP OUT” jack on the HDTV Receiver to the “Antenna In” jack on your TV using a coaxial RF cable.


3 Connect the “AUDIO OUT” and “VIDEO OUT” jacks on the HDTV Receiver to the “A/V IN” jacks on your TV using RCA-type cables. If your TV is equipped with an S-Video jack, use the S-VIDEO OUT jack. (The Output Selection must be set to YPbPr, refer to Setting the Display Format on page 16)

Note

These connections are only useable if the display format settings are set to 480i and YPbPr. (Refer to page 16.)

Connections (Continued)

HD Monitor Component (YPbPr) Connections

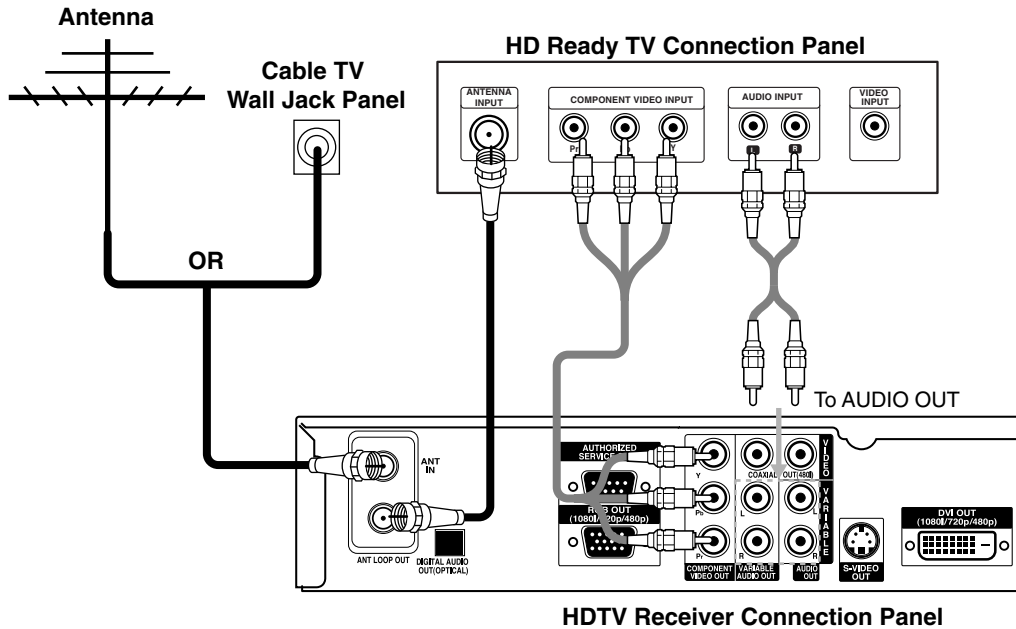

- 1 Connect the “Antenna/Cable” to the “ANT IN” jack on the HDTV Receiver using a coaxial RF cable.

Note

There might be some areas where the signal strength could be too high. If so, you may need to connect the antenna to an attenuator. Screw the attenuator onto the “ANT IN” jack. (Refer to page 9.)


- 2 Connect the “ANT LOOP OUT” jack on the HDTV Receiver to the “Antenna In” jack on your TV using a coaxial RF cable.
- 3 Connect the “COMPONENT OUT” jacks on the HDTV Receiver to the “COMPONENT IN” jacks of your TV using RCA-type cables. (The Output Selection must be set to YPbPr, refer to Setting the Display Format on page 16)
- 4 Connect the L/R “AUDIO OUT” jacks on the HDTV Receiver to the L/R “AUDIO IN” jacks on your TV using RCA-type cables.

Note

1080i, 720p, 480p, and 480i modes are available for component video (YPbPr) outputs.

Connections (Continued)

HD Monitor RGB Connections

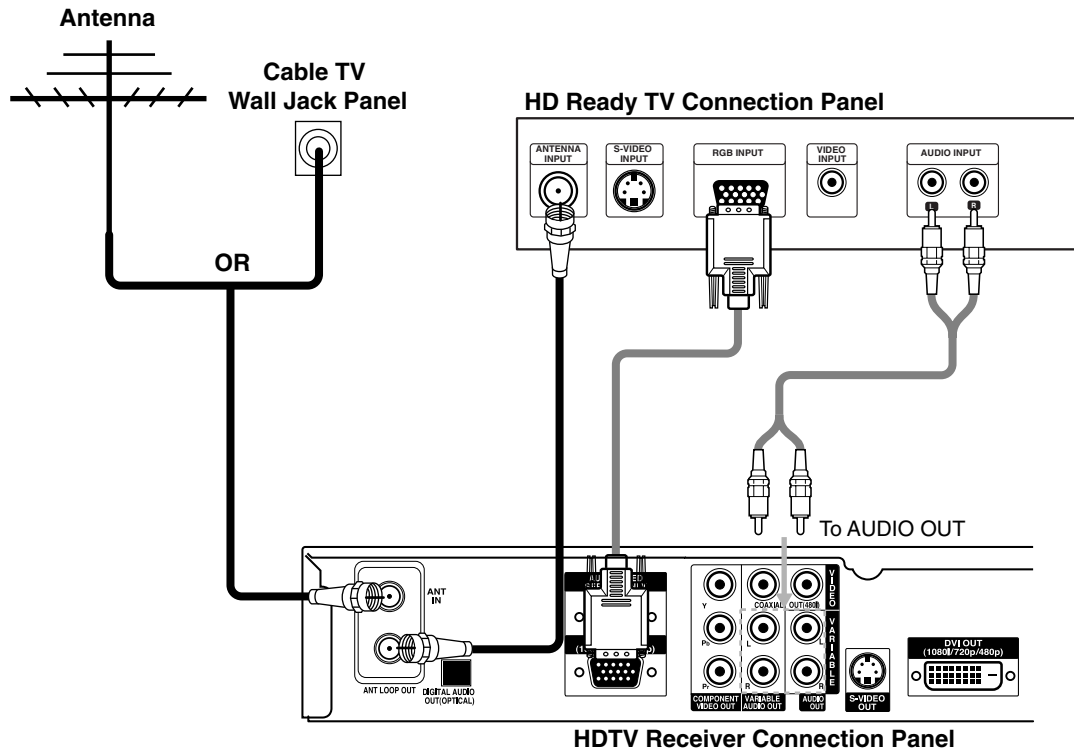

1 Connect the “Antenna/Cable” to the “ANT IN” jack on the HDTV Receiver using a coaxial RF cable.

Note

There might be some areas where the signal strength could be too high. If so, you may need to connect the antenna to an attenuator. Screw the attenuator onto the “ANT IN” jack. (Refer to page 9.)

2 Connect the “ANT LOOP OUT” jack on the HDTV Receiver to the “Antenna In” jack on your TV using a coaxial RF cable.

3 Connect the “RGB OUT” jack on the HDTV Receiver to the “RGB IN” jack of your TV using VGA-type connector. (The Output Selection must be set to RGB, refer to Setting the Display Format on page 16)


4 Connect the L/R “AUDIO OUT” jacks on the HDTV Receiver to the L/R “AUDIO IN” jacks on your TV using RCA-type cables.

Note

1080i, 720p, and 480p modes are available for RGB outputs.

Connections (Continued)

HD Monitor DVI-HDTV Connections

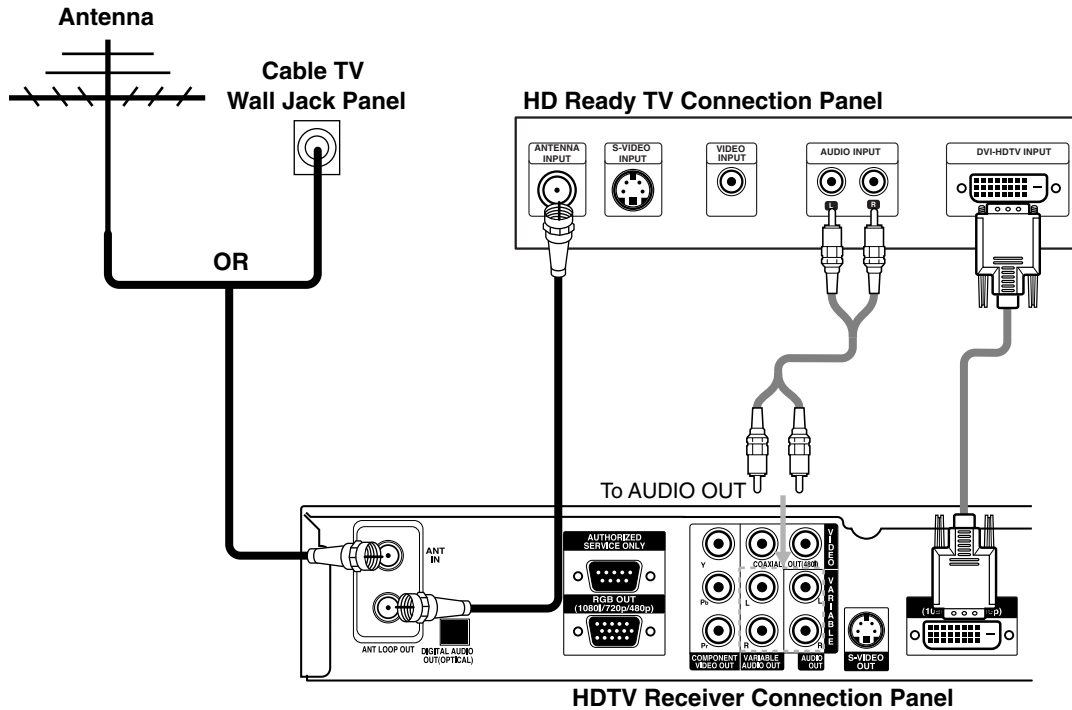

1 Connect the “Antenna/Cable” to the “ANT IN” jack on the HDTV Receiver using a coaxial RF cable.

Note

There might be some areas where the signal strength could be too high. If so, you may need to connect the antenna to an attenuator. Screw the attenuator onto the “ANT IN” jack. (Refer to page 9.)

2 Connect the “ANT LOOP OUT” jack on the HDTV Receiver to the “Antenna In” jack on your TV using a coaxial RF cable.

3 Connect the “DVI OUT” jack on the HDTV Receiver to the “DVI IN” jack of your TV using DVI-D type connector. (The Output Selection must be set to DVI, refer to Setting the Display Format on page 16)


4 Connect the L/R “AUDIO OUT” jacks on the HDTV Receiver to the L/R “AUDIO IN” jacks on your TV using RCA-type cables.

Note

- 1080i, 720p, and 480p modes are available for DVI outputs.
- A DVI-HDTV input is one that is compliant with EIA-861 and HDCP specifications. Check your TV or monitor's user manual to find out if the TV or monitor's DVI input is compliant with these specifications.
- Some HD Monitors designed for PC applications using DVI-D may not work with this connection.

Connections (Continued)

VCR Connections

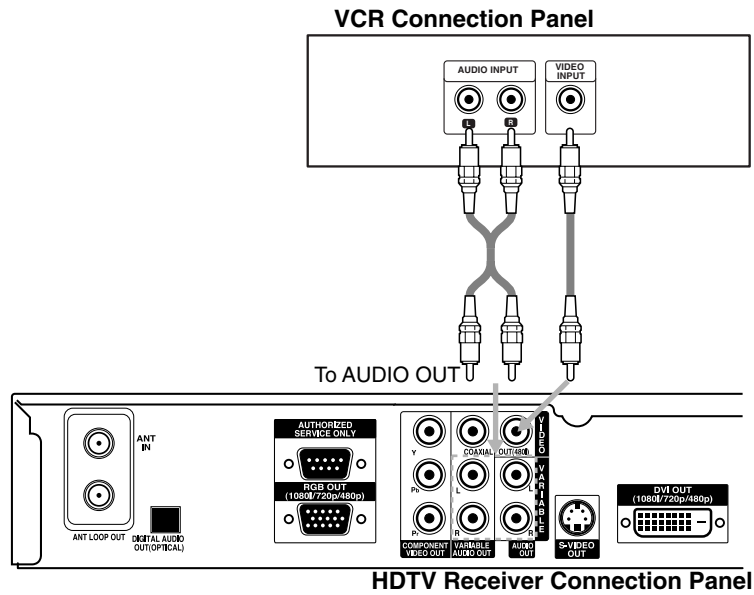

Connect the L/R “AUDIO OUT” jacks and “VIDEO OUT” jack on the HDTV Receiver to the “A/V in” jacks on your VCR using RCA-type cables. (If your VCR is equipped with an S-Video jack, use the “S-Video” jack.)




Caution

If 480i display format is selected, the VCR will record an onscreen display onto the tape during recording if:
the channel is changed with CH (+/-)
the sound level is adjusted with VOL (+/-)
or by pressing the SELECT button, etc.

Connections (Continued)

Amplifier (Receiver) Connections

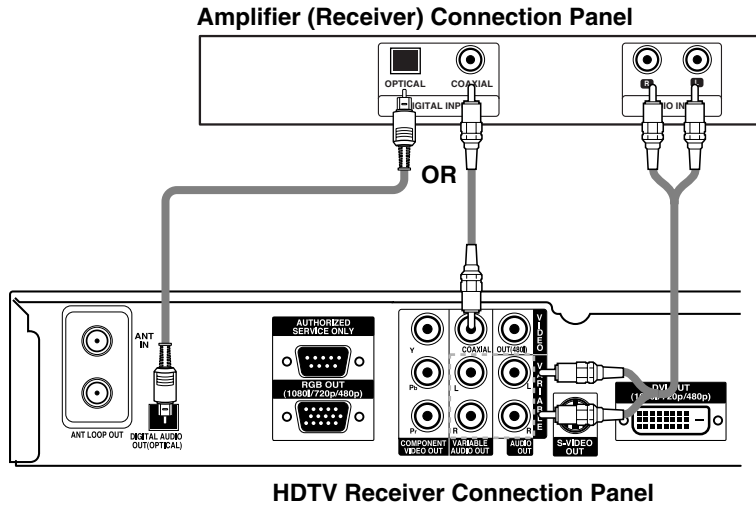

Connecting to an amplifier equipped with two channel analog stereo or Dolby Surround

Connect the Left and Right AUDIO OUT jacks on the HDTV Receiver to the audio left and right in jacks on your amplifier, receiver, or stereo system, using the supplied audio cables.

Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/ Video receiver equipped with a multi-channel decoder (Dolby Digital™)


Connect one of the HDTV Receiver's DIGITAL AUDIO OUT jacks (OPTICAL or COAXIAL) to the corresponding input jack on your amplifier. Use an optional digital (optical or coaxial) audio cable.

Digital Multi-channel sound

A digital multi-channel connection provides the best sound quality. For this you need a multi-channel Audio/Video receiver that supports one or more of the audio formats supported by your HDTV Receiver (Dolby Digital). Check the receiver manual and the logos on the front of the receiver.

Setting the Display Format

The HDTV Receiver provides several display formats. The DISPLAY FORMAT button on the front panel changes the output connector and resolution. The output resolution may be converted from the original broadcast format.

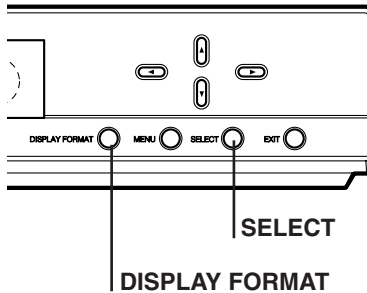

Display Format Setting

- 1** Press **DISPLAY FORMAT** once on the front panel.
The current output signal will appear in the display window.
- 2** Depending on the type of monitor that the HDTV Receiver is connected to, press **DISPLAY FORMAT** repeatedly on the front panel to select desired output connector. (YPbPr, RGB, or DVI)
- 3** Press **SELECT** on the front panel to confirm your selection of the output connector.
The current output resolution will appear in the display window.
- 4** Depending on the type of monitor that the HDTV Receiver is connected to, press **DISPLAY FORMAT** repeatedly on the front panel to select desired output resolution. (1080i, 720p, 480p, 480i, native, variable 1, variable 2, or variable 3)
- 5** Press **SELECT** on the front panel to confirm your selection of the output resolution.
Display Format setting is finished

Note

You can exit Display Format Setting mode by pressing EXIT on the front panel.

Display Format modes	Input Signal format	Output Signal format
1080i	all formats	1080i
720p	all formats	720p
480p	all formats	480p
480i	all formats	480i
native	1080i	1080i
	720p	720p
	480p	480p
	480i	480i(Component), 480p (RGB, DVI)
variable 1	1080i	1080i
	720p	720p
	480p/480i	480p
variable 2	1080i/720p	1080i
	480p/480i	480p
variable 3	1080i/720p	720p
	480p/480i	480p

OUTPUT CONNECTION	AVAILABLE FORMATS
COMPONENT OUT	1080i/720p/480p/480i/native/variable 1/variable 2/variable 3
RGB OUT	1080i/720p/480p/native/variable 1/variable 2/variable 3
DVI OUT	1080i/720p/480p/native/variable 1/variable 2/variable 3
VIDEO OUT	All formats converted to 480i
S-VIDEO OUT	All formats converted to 480i

Initial Settings

In this menu system, there are several ways to customize the settings provided. Most menus consist of three levels to set up the options, but some require greater depth for the variety of settings. If you press the MENU button, only the first and second level of the menu system will appear on the TV screen. The third level can be displayed by pressing **SELECT** (SELECT). If a menu has more than three levels, the pop-up dialogue box will be displayed as the fourth or fifth level. For navigating the menu levels, you will see “▶” on the right side of the menu label to help you go to the next level.



To show and remove the Menu:

Press the MENU button on the remote control to display the menu. A second press of the MENU button or a press of the EXIT button will take you back to TV viewing.

To go to the next level:


Press “**SELECT**” (or “▶”) on the remote control.

To go back to the previous level:

Press MENU (or “◀”) on the remote control.


General Operation

- 1 Press MENU.**
The main menu will appear.
- 2 Use ▲ / ▼ to select the desired menu option.**
- 3 While the desired menu option is selected, press ▶ or **SELECT** to move to the second level.**
- 4 Use ▲ / ▼ to select the second menu option.**
- 5 Press ▶ or **SELECT** to move to the third level.**
Some menu options require additional steps.
- 6 Press MENU to exit the Setup menu.**

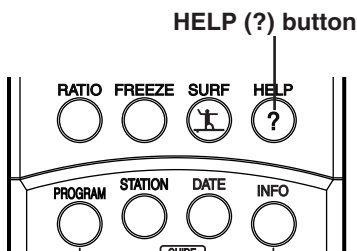


Help Function

The Help feature is designed to let you understand each function of the Menu in an easy and convenient way. As you navigate through the Menu, press **HELP (?)** button on your remote control if you want information about the highlighted option. The information will be displayed on the right side of the highlighted option.

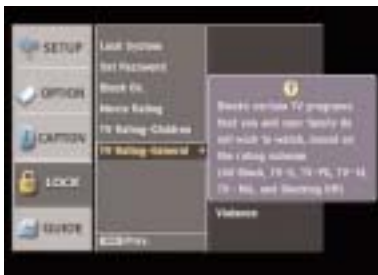

Setup Menu Options

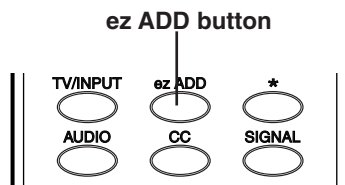

EZ Scan (Channel Search)

Automatically finds all channels (digital) available using the 'Ant In' source, and stores all the active channels found on the channel list. Inactive or weak channels may not appear on the list. In that case, add missing channels manually with the Manual Add menu. The channel list created here can be seen in the Ch. Edit menu.

- 1 Press MENU to display the on-screen menu.
- 2 Select the SETUP menu using ▲ / ▼ then press Ⓞ (SELECT) or ► to move to the second level.
- 3 Select the EZ Scan using ▲ / ▼ then press Ⓞ (SELECT) or ►.

Note

If the Lock System is set to On, a password is required to gain access to the EZ Scan menu. Follow step 2 as shown for the Lock System on page 28.

- 4 Select the signal source (DTV or CADTV).

DTV is for over-the-air antenna reception.
CADTV is for cable subscribers.

Notes

- If you select CADTV, select a cable band (STD, HRC, or IRC). Ask your cable service provider about cable band.
- In most cases you can search channels correctly by selecting STD cable band. Try the other bands if you cannot find any channels.
- Some scrambled channels may not be stored.

- 5 Press Ⓞ (SELECT).

The channel search process begins. You can stop the process by pressing Ⓞ (SELECT), MENU or EXIT.

- 6 When channel search is complete, the lowest channel number found appears on the TV screen.

EZ Add

Automatically adds new channels (digital) available through the antenna inputs except memorized channels already in the channel list.

- 1 Press MENU to display the on-screen menu.
- 2 Select the SETUP menu using ▲ / ▼ then press Ⓞ (SELECT) or ► to move to the second level.
- 3 Select the EZ Add using ▲ / ▼ then press Ⓞ (SELECT) or ►. EZ Add channel search process begins. You can stop the process by pressing Ⓞ (SELECT), MENU or EXIT.
- 4 When EZ Add channel search is complete, the lowest channel number found appears on the TV screen.

Tip

You can also start EZ Add channel search by pressing ez ADD then Ⓞ (SELECT) button on the remote control.

Setup Menu Options (Continued)



Ch. Edit (Channel Edit)

Channel Edit allows you to add or delete channels from the channel list in memory manually and create your own surf list of favorite channels. Press SURF (\pm) on the remote control when a channel is highlighted.

- 1** Press MENU to display the on-screen menu.
- 2** Select the SETUP menu using \blacktriangle / \blacktriangledown then press \odot (SELECT) or \blacktriangleright to move to the second level.
- 3** Select the Ch. Edit using \blacktriangle / \blacktriangledown then press \odot (SELECT) or \blacktriangleright . Channel Edit menu appears.

To move one by one:

Use \blacktriangle / \blacktriangledown to move by one step on the channel editing menu.

To move page by page:

Use PG UP or PG DN button to move to the next or previous page on the channel editing menu.

To add or delete a channel:

Press \odot (SELECT) to add or delete the channel on the channel editing menu.

To create a surf list:

Press SURF (\pm) to add the channel a Surf channel.

- 4** Press MENU to return to the previous menu or press EXIT on the remote control to return to TV viewing.

Note

Deleted channels can not be selected using the CH (+/-) buttons.



Setup Menu Options (Continued)

Manual Channel Add/Delete

This feature allows you to add or delete channels manually while monitoring signal strength.



- 1** Press MENU to display the on-screen menu.
- 2** Select the SETUP menu using ▲ / ▼ then press Ⓞ (SELECT) or ► to move to the second level.
- 3** Select the Manual Add using ▲ / ▼ then press Ⓞ (SELECT) or ►. Manual Add menu appears.
- 4** Select a channel to add or delete using ▲ / ▼ or the numbered buttons with the Manual Add menu.
- 5** Press Ⓞ (SELECT) to confirm your selection.
- 6** Repeat steps 4-5 to add or delete additional channels with the Manual Add menu.

Note

You can only add the selected channel if the signal strength is shown.

- 7** Press MENU to return to the previous menu or press EXIT on the remote control to return to TV viewing.


EZ Demo

Shows you how to navigate through the on-screen menus available on the HDTV Receiver.



- 1** Press MENU to display the on-screen menu.
- 2** Select the SETUP menu using ▲ / ▼ then press Ⓞ (SELECT) or ► to move to the second level.
- 3** Select EZ Demo using ▲ / ▼ then press Ⓞ (SELECT) or ► to start EZ Demo.
- 4** Press any button on the remote control to return to TV viewing.

Option Menu Options

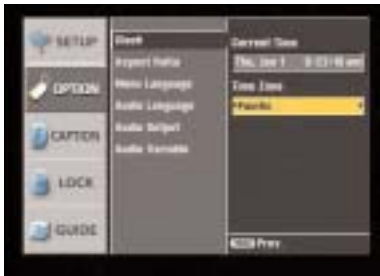

Clock

Enables the user to adjust the time zone. Normally, your clock is set using signals transmitted by DTV stations. Choosing your time zone sets the current time automatically.

- 1** Press MENU to display the on-screen menu.
- 2** Select the OPTION menu using ▲ / ▼ then press Ⓞ (SELECT) or ▶.
- 3** Use ▲ / ▼ to select the Clock option then press ▶ or Ⓞ (SELECT) to move to the third level.
- 4** Use ◀ / ▶ to set Time Zone: (Atlantic, Eastern, Central, Mountain, Pacific, Alaska, Hawaii, New F.land)
- 5** Press MENU to return to the previous menu or press EXIT on the remote control to return to TV viewing.

Note

- The clock can not be set in cable DTV band.
- There are cases where the TV station does not send, or sends wrong date and/or time information causing the HDTV Receiver to set an incorrect time.
- You have no way to manually set the clock.



Menu Language

Select a language for the menu.

- 1** Follow Steps 1-2 as above (Clock).
- 2** Select the Menu Language option using ▲ / ▼ then press Ⓞ (SELECT) or ▶.
- 3** Select the desired language using ▲ / ▼ then press Ⓞ (SELECT).
- 4** Press MENU to return to the previous menu or press EXIT on the remote control to return to TV viewing.



Audio Language


Digital channels sometimes provide multiple audio tracks, often in a different language. You can set default audio language with the Audio Language menu.

- 1** Follow Steps 1-2 as above (Clock).
- 2** Select the Audio Language option using ▲ / ▼ then press Ⓞ (SELECT) or ▶.
- 3** Select the desired language using ▲ / ▼ then press Ⓞ (SELECT).
- 4** Press MENU to return to the previous menu or press EXIT on the remote control to return to TV viewing.

Tip

- If provided by broadcaster, you can also select a different audio language while viewing TV by pressing AUDIO repeatedly.
- When multiple audio tracks are available, the audio icon (Ⓜ) appears on the program information display or Program guide. You can select one of the other languages with the AUDIO button.

AUDIO button

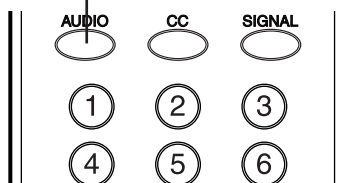

Option Menu Options (Continued)



Options to view a picture with a wide (16:9) aspect ratio at 480i or 480p mode output format.



Options to view a picture with a normal (4:3) aspect ratio at 720p or 1080i mode output format.

 
Aspect Ratio

Lets you choose the screen format. To view a picture with a wide (16:9) aspect ratio at 480i or 480p mode output format, you can choose Letter Box, Cropped, or Squeezed. To view a picture with a normal (4:3) aspect ratio at 720p or 1080i mode output format, you can choose Normal, Wide, Horizon, Zoom, or Cinema Zoom.

- 1** Press **MENU**.
The main menu appears.
- 2** Use **▲ / ▼** to select the **OPTION** menu then press **▶** or **⊙** (**SELECT**) to move to the second level.
- 3** Use **▲ / ▼** to select the **Aspect Ratio** option.
- 4** Press **▶** or **⊙** (**SELECT**) to move to the third level.
- 5** Use **▲ / ▼** to select an option then press **⊙** (**SELECT**) to confirm your selection.
- 6** Press **MENU** to return to the previous menu or press **EXIT** on the remote control to return to TV viewing.



Letter Box Cropped Squeezed

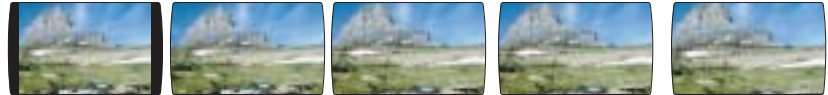

Normal Wide Horizon Zoom Cinema Zoom

Notes

 

- If program format is High Definition (16:9) and the display format selected is 1080i or 720p, the Aspect Ratio is set to Wide .
- If program format is Standard Definition (4:3) and the display format selected is 480p or 480i, the Aspect Ratio is set to Squeezed.

Tip

While watching TV, you can change the picture aspect ratio using **RATIO** on the remote control. To view a high definition picture with 480i or 480p format setting, use the **RATIO** button on the remote control to change the wide mode in the following cycle: Letterbox, Cropped, to Squeezed.

To view a standard definition picture with 720p or 1080i format setting, use the **RATIO** button on the remote control to change the wide mode in the following cycle: Normal, Wide, Horizon, Zoom, to Cinema Zoom. (Refer to Choosing the Aspect Ratio on next page).

RATIO button

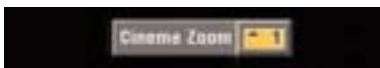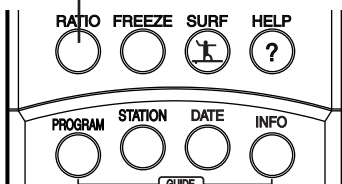

Cinema Zoom mode

Use to adjust zooming. The picture will be enlarged like the cinema screen.

Option Menu Options (Continued)

Choosing the Aspect Ratio using **RATIO** button

Modes for viewing high definition content (16:9) when output format is 480i or 480p Mode:

Letter Box

Use for a picture with an original 16:9 aspect ratio (in a wide format). Letterbox mode will shrink the picture to fill the screen, with black/gray (or blank) bars appearing at the top and bottom of the screen.

Cropped

Use for a picture filling the entire screen by cropping (removing) the left and right portions of the picture.

Squeezed

Use for a full picture filling the entire screen with no black/gray bars. The picture in a 16:9 format will be horizontally adjusted or squeezed to fit the 4:3 ratio monitor. This setting can also be useful when used with 16:9 aspect ratio monitors or with 4:3 aspect ratio monitors that have a "16:9 enhancement" feature.

Modes for viewing standard definition content (4:3) when output format is 720p or 1080i Mode:

Normal

Use for a picture with an original 4:3 aspect ratio on your 16:9 monitor, with black/gray bars appearing at the left and right sides.

Wide

Use for a picture adjusted horizontally (in a linear proportion) to fill the entire screen.

Horizon

Use to adjust a picture in a non-linear proportion (more at both sides) to create a spectacular view.

Zoom

Use when you want to fill the entire screen with no black/gray bars appearing. The image will be altered both horizontally (stretched) and vertically (cropped). The top and bottom portions of the picture will be cut.

Cinema Zoom

Use to adjust zooming. The picture will be enlarged like the cinema screen.

Modes for temporarily viewing high definition content (16:9) when output format is 720p or 1080i Mode:

Standard

Choose when you want to view a picture with no adjustment.

Expand

Choose when you want to view a picture in the 16:9 ratio size. The picture will be horizontally adjusted or extended to fit 16:9 ratio. Left and right portions of the picture will not be shown.

Shrink

Choose when you want to view a picture in the 4:3 ratio size. The picture will be horizontally adjusted or squeezed to fit 4:3 ratio. Black or gray bars will show at the left and right side.

Aspect Ratio Summary

Program Format	Output Format	Available Aspect Ratios
HD(720p/1080i) 16:9	HD(720p/1080i) 16:9	Three temporary Aspect Ratio controls (Standard, Expanded, Shrink)
HD(720p/1080i) 16:9	SD(480i/p) 4:3	Letter Box, Cropped, Squeezed
SD(480i/p) 4:3	HD(720p/1080i) 16:9	Five Aspect Ratio controls (Normal, Wide, Horizon, Zoom, Cinema Zoom)
SD(480i/p) 4:3	SD(480i/p) 4:3	No Adjustment Options

Option Menu Options (Continued)



Audio Output

Sets the HDTV Receiver's digital Audio Output according to the type of audio system you use.

- 1** Press MENU to display the on-screen menu.
- 2** Select the OPTION menu using ▲ / ▼ then press Ⓞ (SELECT) or ►.
- 3** Select the Audio Output option using ▲ / ▼ then press Ⓞ (SELECT) or ►.
- 4** Select the desired audio output using ▲ / ▼ then press Ⓞ (SELECT).

Dolby Digital: Select "Dolby Digital" if you connected the HDTV Receiver's DIGITAL OUT jack to a Dolby Digital decoder (or an amplifier or other equipment with a Dolby Digital decoder).

PCM: Select when the HDTV Receiver's DIGITAL OUT jack is connected to a 2-channel digital stereo amplifier.

- 5** Press MENU to return to the previous menu or press EXIT on the remote control to return to TV viewing.



Audio Variable

If the audio variable menu is set to On, audio volume can be increased/decreased with by pressing VOL (+/-) on the remote control or ◀/▶ on the front panel. If set to off, audio volume can not be controlled by HDTV receiver.

- 1** Press MENU to display the on-screen menu.
- 2** Select the OPTION menu using ▲ / ▼ then press Ⓞ (SELECT) or ►.
- 3** Select Audio Variable using ▲ / ▼ then press Ⓞ (SELECT) or ►.
- 4** Select an Audio Variable option (On or Off) using ▲ / ▼ then press Ⓞ (SELECT).
- 5** Press MENU to return to the previous menu or press EXIT on the remote control to return to TV viewing.

Note

Before setting the Audio Variable to Off, make sure that you have turned down the TV's volume to the minimum. Otherwise, sudden high volume sound may cause hearing or speaker damage.

Caption Menu Options

DTV Caption

Selects a default Caption language.

The caption language options are English, French, and Spanish. Use the menu to select a language. If the selected language is not available on the current program, the caption language for the program is not displayed.

Options are:

Off: DTV Caption is not displayed.

English: English is selected for DTV captions.


French: French is selected for DTV captions.

Spanish: Spanish is selected for DTV captions.

Notes

- DTV Caption (Standard EIA /CEA 708) will appear only if provided by the broadcaster.
- If DTV and Analog Captions are received simultaneously, you can only select DTV Caption.

Tip

- If available, you can also select a caption language while viewing TV, press **CC** repeatedly.
- If captions are available, the DTV caption icon () appears on the program information display, Program guide, or Station guide to indicate that you can select one of those caption options with the **CC** button. The caption icon will not appear on the program information display or Program guide for analog caption.



Caption Menu Options (Continued)

DTV Caption Style

Selects DTV Captions appearance menu options.

Style

Use caption feature defaults as provided by the program or customize caption appearance with the Custom menu options.

Set By Program: Default text provided by a broadcaster is shown when captions appear.

Custom: Customized text is shown when captions appear.

Size

Selects the font size for captions.

Standard: The standard text size is used for the caption display (15 pixels).

Large: The large text size is used for the caption display (21 pixels).

Small: The small text size is used for the caption display (11 pixels).



Font

Selects the font type for caption.

Txt. (Text) Color

Selects the font color for caption.

Txt. (Text) Opacity

Selects the font opacity for caption.

Solid: The text is solid (without any transparency).

Flash: The text blinks twice a second.

Translucent: The text is translucent.

Transparent: The text is transparent (In this case, whatever the color is, the color does not affect the caption display).

Edge Color

Selects the edge color for caption (If the edge type is selected as None, the edge color does not have any effect on the caption display).

Edge Type

Selects the edge type for caption.

None: The text has no edge.

Raised: The text is raised.

Depressed: The text is depressed.

Uniform: The text has a uniform edge.

Left Shadow: The text has a left-shadow edge.

Right Shadow: The text has a right-shadow edge.

Bg. (Background) Color

Selects the background color for caption.

Bg. (Background) Opacity

Selects the background opacity for caption.

Solid: The text background color is solid (without any transparency).

Flash: The text background color blinks twice a second.

Translucent: The text background color is translucent.

Transparent: The text background color is transparent (In this case, whatever the background color is, the color does not affect the caption).

Caption Menu Options (Continued)



Analog Caption

Allows you to select a mode for displaying Analog Caption Data. In the Analog Caption Service, Caption 1-4 display program's dialog, and Text 1-4 display data service information.

Note

Analog Captions will appear if they are provided by the broadcaster.

Off

Analog Caption is not displayed.

Caption 1

Caption 1 is the primary caption service that synchronizes the captioning language with the sound, used by most broadcasters. Captioning is displayed in the same language as the program's dialog.

Caption 2

Caption 2 is the special non-synchronous caption service that does not need to be in sync with the sound and may provide simplified captioning, which is usually delayed.

Caption 3

Caption 3 serves as an alternate captioning service channel. Captioning is often a secondary language translation such as French, Spanish, simplified English or displayed at a slower rate.

Caption 4

Caption 4 is another special non-synchronous caption service that does not need to be in sync with the sound and may provide simplified captioning, usually delayed.

Text 1 - 4

Text 1-4 usually displays information on the lower portion of the screen and is used for a data service, generally not program related.

Tip


If available, press **CC** repeatedly to select a caption language while viewing TV.

Note

If DTV and Analog Caption are received simultaneously, you can only select DTV Captions, analog captions will not appear.

Lock (Parental Control) Menu Options

Lock System

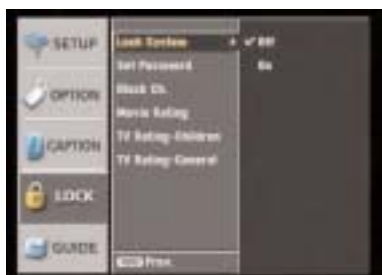

Allows you to set up specific channels and ratings through blocking schemes. Also allows you to activate or disable all of the lock schemes previously set up. A password is required to gain access to the LOCK menus. When the Lock System is set to Off, the Channel and Program Rating are not effective.

- 1 Press MENU.**
The main menu appears.
- 2 Use ▲ / ▼ to select the LOCK then press ► or Ⓞ (SELECT) to move to the second level.**

When you have not entered a password yet;

Enter "0000" password using the numbered buttons to create a personal 4-digit security password.

When you have already entered a password;

Enter the 4-digit password using the numbered buttons to confirm the personal 4-digit security password.

- 3 Use ▲ / ▼ to select the Lock System option.**
- 4 Press ► or Ⓞ (SELECT) to move to the third level.**
- 5 Use ▲ / ▼ to select an option (On or Off) then press Ⓞ (SELECT) to confirm your selection.**
- 6 Press MENU to return to the previous menu or press EXIT on the remote control to return to TV viewing.**

Set Password

Changes the password.



- 1 Follow steps 1-2 as shown above (Lock System).**
- 2 Use ▲ / ▼ to select the Set Password option.**
- 3 Press ► or Ⓞ (SELECT) to move to the third level.**
- 4 Enter the new 4-digit code.**
- 5 Enter the same code again.**
- 6 Press MENU to return to the previous menu or press EXIT on the remote control to return to TV viewing.**

Lock (Parental Control) Menu Options (Continued)



Block Ch. (Channel)

Blocks any channel that you do not want to view or that you do not want your kids to watch. If you tune in a blocked channel, a black screen with a pop-up box will appear. This menu can override Channel Edit menu settings (page 19).

- 1** Follow Steps 1-2 as shown for the Lock System on page 28.
- 2** Use ▲ / ▼ to select the Block Ch. (channel).
The channel list screen appears.

To move one-by-one:

Use ▲ / ▼ to move by one step on the block channel menu.

To move page-by-page:

Use PG UP or PG DN button to move to the next or previous page on the block channel menu.

To lock or unlock a channel:

Press Ⓞ (SELECT) to block or unblock the channel on the block channel menu.

The 🔒 mark will appear to the right of the station name to indicate the blocked channel.

- 3** Repeat step 2 to block or unblock additional channels in the channel list menu.
- 4** Press MENU to return to the previous menu or press EXIT on the remote control to return to TV viewing.

Lock (Parental Control) Menu Options (Continued)



Movie Rating

Blocks movies according to the movie ratings so children cannot view certain movies. You can set the ratings to block out all the movies with ratings above a specified level. Keep in mind that the movie ratings apply only to movies shown on TV, not TV programs such as soap operas.

- 1** Follow Steps 1-2 as shown for the Lock System on page 28.
- 2** Use ▲ / ▼ to select the Movie Rating option.
- 3** Press ► or ● (SELECT) to move to the third level.
- 4** Use ▲ / ▼ to select a rating then press ● (SELECT) to confirm your selection.
 - All Block:** All programs with a rating are blocked.
 - G (General Audiences):** Content is not offensive to most viewers.
 - PG (Parental Guidance Suggested):** Content is such that parents may not want their children to view the program.
 - PG-13 (Parental Guidance Suggested):** Program is inappropriate for preteens, with a greater degree of offensive material than a PG rated program.
 - R (Restricted viewing):** Not for children under age 17. Strong elements of sex and/or violence.
 - NC-17 (Restricted Viewing):** Not for children under age 17 under any circumstances. Strong sexual content.
 - X (Hard Core Films):** Same as NC-17 rating.
- 5** Press MENU to return to the previous menu or press EXIT on the remote control to return to TV viewing.

Lock (Parental Control) Menu Options (Continued)



TV Rating-Children

Keeps children from watching certain children's TV programs according to the ratings limit set. This rating applies only to TV programs for children. Unless you block TV programs intended for mature audiences in the TV Rating – General menu, your children could view those programs.

1 Follow Steps 1-2 as shown for the Lock System on page 28.

2 Use ▲ / ▼ to select the TV Rating-Children option.

3 Press ► or ● (SELECT) to move to the third level.

4 Use ▲ / ▼ to select the Age or Fantasy Violence option then press ► or ● (SELECT).

Age: Selection applies regardless of content category of rating.

Fantasy Violence: Selection applies if TV programs include rating for Fantasy Violence.

5 Use ▲ / ▼ to select a rating then press ● (SELECT) to confirm your selection.

All Block: All programs with a rating are blocked.

TV-Y: All Children. This program is designed to be appropriate for all children.

TV-Y7: Directed to Older Children. This program is designed for children age 7 and above.

6 Press MENU to return to the previous menu or press EXIT on the remote control to return to TV viewing.

Lock (Parental Control) Menu Options (Continued)

TV Rating-General

Blocks TV programs that you or your family may not wish to watch, based on the rating scheme set.



1 Follow Steps 1-2 as shown for the Lock System on page 28.

2 Use ▲ / ▼ to select the TV Rating-General option.

3 Press ► or ⊙ (SELECT) to move to the third level.

4 Use ▲ / ▼ to select the Age, Dialogue, Language, Sex, or Violence then press ► or ⊙ (SELECT).


Age: Selection applies regardless of content category of rating.

Dialogue: Selection applies if TV programs have rating for Dialogue.

Language: Selection applies if TV programs have rating for Language.

Sex: Selection applies if TV programs have rating for Sex.

Violence: Selection applies if TV programs have rating for Violence.

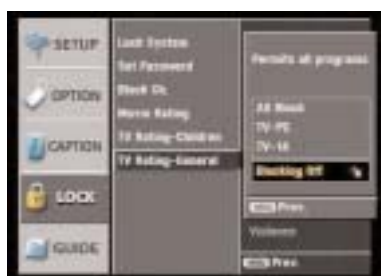

5 Use ▲ / ▼ to select a rating then press ⊙ (SELECT) to confirm your selection.

All Block: All programs with a ratings are blocked.

TV-G: General Audience. Most parents would find this program suitable for all ages.

TV-PG: Parental Guidance Suggested. This program contains material that parents may find unsuitable for younger children.

TV-14: Parents Strongly Cautioned. This program contains some materials that many parents would find unsuitable for children under 14 years of age.

TV-MA: Mature Audience Only. This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.



6 Press MENU to return to the previous menu or press EXIT on the remote control to return to TV viewing.

GUIDE Options



Program Guide

The Program Guide contains schedule and program information for all channels. It also provides local over-the-air channels information including conventional digital channels.

Use the Program Guide to find programs easily and conveniently and view schedule and descriptive program information by Time and General classifications.

Tip

You can also display the Program Guide by pressing **PROGRAM** button on the remote control. Refer to Program and Station Guide on pages 36-37 for detailed information.

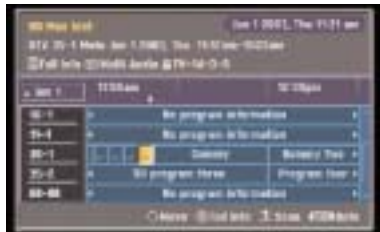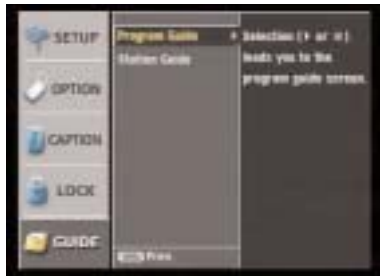

- 1 Press MENU.**
The main menu appears.
- 2 Use ▲ / ▼ to select the GUIDE menu then press ► or ● (SELECT) to move to the second level.**
- 3 Use ▲ / ▼ to select the Program Guide option.**
- 4 Press ► or ● (SELECT) to display the Program Guide.**
- 5 Use ◀ / ▶ / ▲ / ▼ to select a program then press ● (SELECT) to get more information for the program.**
- 6 Press EXIT to return to TV viewing.**

Note


The information for program guide and time may differ depending on the TV station.

Station Guide

Use the Station Guide to find programs easily and conveniently and view schedule and descriptive program information with channel number.


Tip

You can also display the Station Guide by pressing the **STATION** button on the remote control. Refer to Program and Station Guide on pages 36-37 for detailed information.

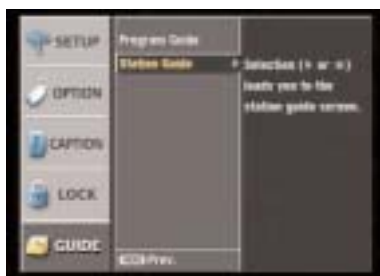

- 1 Follow Steps 1-2 as shown as above.**
- 2 Use ▲ / ▼ to select the Station Guide option.**
- 3 Press ► or ● (SELECT) to display the Station Guide.**
- 4 Use ◀ / ▶ / ▲ / ▼ to select a program then press ● (SELECT) to get more information for the program.**
- 5 Press EXIT to return to TV viewing.**

Information Displays

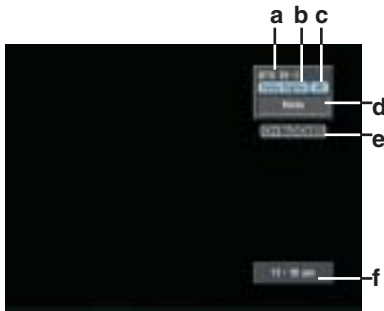

Channel Banner Display

The Channel Banner appears whenever you tune to a new channel or press the **⊙** (SELECT) button on the remote control while viewing a program.

1 Press **⊙** (SELECT) while watching a program

The Channel Banner appears on the TV screen (Channel number, audio, station name, and current time).

- The Channel Banner can be displayed on the TV screen for a moment.

- a) Channel Number
Displays the current channel number.
- b) Dolby Digital
Indicates audio track is Dolby Digital.
- c) Digital picture grade
Displays the digital picture grade such as HD (High Definition) or SD (Standard Definition).
- d) Station name
Displays the station name of the current channel.
- e) Block information
Displays the block information such as no signal, rating blocked, channel blocked, audio only or scrambled.
- f) Time
Displays the current time.


2 Press **⊙** (SELECT) again while the Channel Banner is displayed.

The Channel Banner disappears from the TV screen.

Notes

- Station name and clock are displayed only if they are set up by broadcast.
- The scrambled channel may not be able to see the program.

Information Displays (Continued)

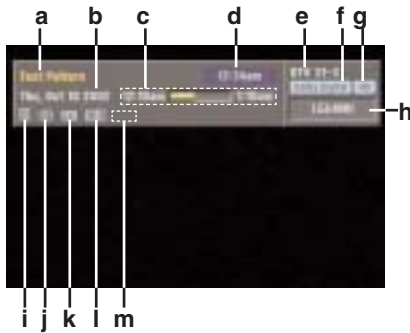

Program Information Display

The Program Information appears whenever you press the INFO button on the remote control while viewing a program.

1 Press INFO while watching a program

Program Information appears on the TV screen.

- a) Program title
Indicates title of current program.
(see page 37).
- b) Date
Displays the current date.
- c) Start Time, End Time and elapsed indication
Displays the start time, end time and the elapsed time indicator bar for the current program.
- d) Time
Shows current time.
- e) Channel Number
Displays the current channel number.
- f) Dolby Digital
Indicates audio track is Dolby Digital.
- g) Digital Picture Grade
Displays the digital picture grade such as HD (High Definition) or SD (Standard Definition).
- h) Station Name
Displays the station name of the current channel.
- i) Extended text message Icon (☐)
Indicates that there is an Extended Text Message available to provide detailed descriptions of the program (see page 37).
- j) Multiple Audio icon (⊕)
Channels sometimes provide multiple audio tracks, often in a different language. When multiple audio tracks are available, the Alternate Audio icon changes its appearance to indicate that you can select one of those other audio tracks with the AUDIO button.
- k) DTV Caption Icon (CC)
Indicates that the current program contains digital closed caption data service.
- l) Wide Icon (16:9)
Indicates that the current program is shown in wide picture format.
- m) Content Advisory Icon (⚠)
Content Advisory data is used for the parental guide control to block programs that are beyond predefined rating criteria set by users. This icon means that the current program contains content advisory data, and displays rating value of program.

2 Press INFO or EXIT while the Program Information is displayed.

The Program Information disappears from the TV screen.

Note

Station name and clock are displayed only if they are set up by broadcast.


Program and Station Guide



Program Guide



Station Guide

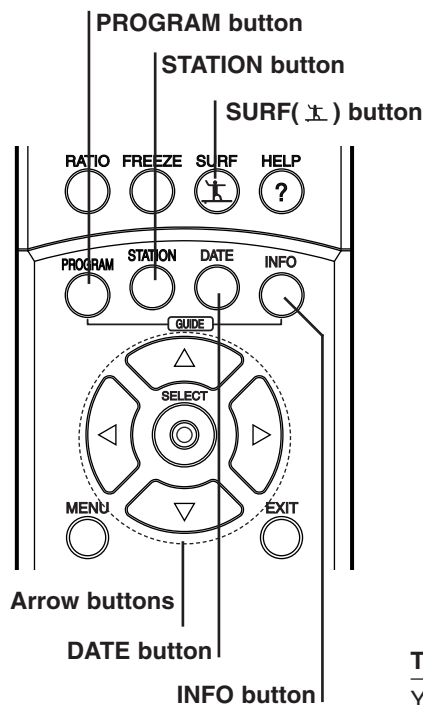

Guide Scan

The Program and Station Guide contains schedule and program information for all channels. They also provide local over-the-air channels information including conventional digital channels. Use the Program and Station Guide to find programs easily and conveniently and to view schedule and descriptive program information for the channels.

To Display the Program or Station Guide

- Press the PROGRAM or STATION button on your remote control.
- or
- Press the MENU button on the remote control and select the GUIDE menu. Guide options will appear. Choose the Program or Station Guide option [MENU → GUIDE → Program Guide (or Station Guide)]

To Exit the Program or Station Guide

Press the EXIT button to return to the last channel you tuned to.

To Navigate through programs on the Guides

The Program and Station Guide are operated based on a simple straightforward “Highlight and Select” process.

1. Use ◀/▶/▲/▼ on your remote control to navigate the guide screen.
2. Press SELECT to select or execute the highlighted menu or function (see page 37).

The on-screen guide shows you program listings for five channels within one and a half hour time slot. For example: 6:00-7:30. In order to view a list of future programs or other channels, you may continuously press ◀/▶/▲/▼ to scroll horizontally or vertically. This may take a while to reach a specific channel or program, if the channel or program is listed far from the currently highlighted program. The Program and Station Guide thus offers you shortcuts to minimize your effort in navigating channels and time slots.

Line Scrolling

You can reach other time slots or channels that are currently hidden from the screen using the arrow buttons “◀/▶/▲/▼”. Move horizontally to reach other channels and move vertically to reach other time slots on the Station Guide.

Date Scrolling

When the Program or Station Guide is displayed, you can also change the date of the Program Guide by pressing the DATE button then use ▲/▼ to select date.

Page Scrolling (Program Guide only)

You can move faster through channels by scrolling page-by-page with the PG UP or PG DN buttons on the remote control. Each button stroke scrolls one page up or down.

To update the guide information (Guide Scan)

You can update the guide information by pressing SURF (±). The Guide Scan will update the guide information through all available channels; this may take a few minutes.

Program and Station Guide (Continued)



To show all Information available on the Extended Text Message

Pressing the SELECT button will display the full information window about the highlighted program with Extended Text Message Icon (see page 35). Depending on the broadcaster and service provider, the Extended Text Message may include actor and role relationships, original material, production studio, the date on which the program was first shown, and so on.

Tips

- If you select a TV program currently being broadcast, "Confirm" appears on the bottom of the full information window. Press **⊙** (SELECT) to disappear the full information window.
- If you select a past or future TV program on currently tuned channel, "OK" appears on the bottom of the full information window. Press **⊙** (SELECT) to remove the full information window.
- You can view hidden information on the full information window. Use **▲** / **▼** to scroll vertically.






To Tune to another channel on the Full Information window

You can also tune in other channels on the Full Information window.

If you select a TV program that is not on the currently tuned channel, "Do you want to watch this Channel" message appears on the bottom of the full information window. Select "YES" then **⊙** (SELECT) to tune to the channel of the selected program. Select "NO" then **⊙** (SELECT) to remove the full information window.

Normal Operation

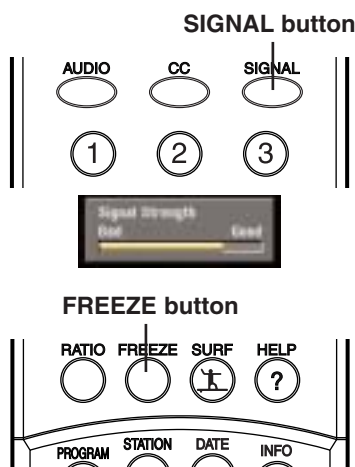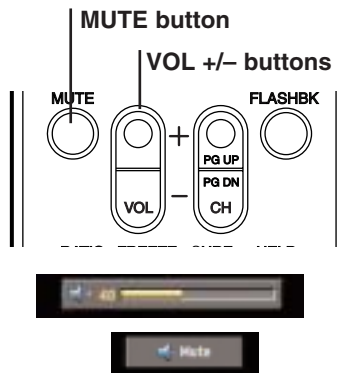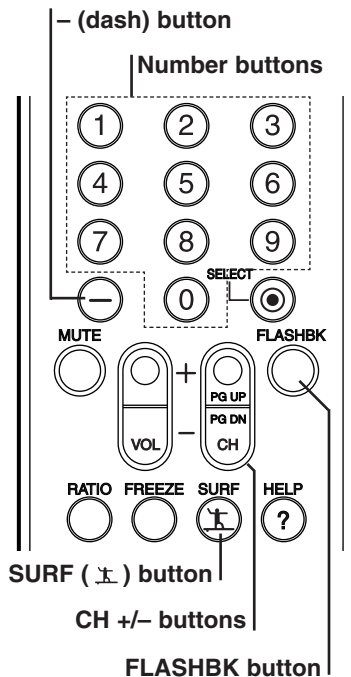

Channel Selection

You can select a channel as shown below.

Number and – (dash) buttons (on the remote control)

Use **Number (0-9)** and **– (dash)** buttons to select a channel directly.

FLASHBK button (on the remote control)

Press to return to the previous channel you viewed. For example, if the DTV Receiver is tuned to channel 55 and then you change to channel 56, pressing FLASHBK will return to channel 55.

SURF (↔) button (on the remote control)

Press to scroll through your favorite channels.

CH +/- buttons (on the remote control) or ▲ / ▼ (on the front panel)

Use CH +/- on the remote control or ▲ / ▼ on the front panel to cycle the HDTV Receiver through the channels in memory.

Volume Adjustment

Adjusts the volume of analog audio out on HDTV Receiver. You must set Audio Variable to On in the OPTION menu to use the Volume Adjustment. See page 24.

VOL +/- buttons (on the remote control) or ◀ / ▶ (on the front panel)

Use **VOL +/-** on the remote control or ◀ / ▶ on the front panel to adjust the volume for analog audio out on the HDTV Receiver.

MUTE (on the remote control)

Press **MUTE** to turn off the volume for analog audio out on the HDTV Receiver.

Notes

- Before setting Audio Variable to Off, make sure that you have turned down the TV's volume to the minimum. Otherwise, sudden high volume sound may cause hearing or speaker damage.
- The volume of digital audio out on HDTV Receiver can not be adjusted on the HDTV Receiver front panel.

Signal

Shows the signal strength bar for incoming signal to help you adjust the antenna to the correct position for your location. You can view the signal strength bar by pressing SIGNAL on the remote control.

Tip

Refer to www.antennaweb.org for antenna position.

AntennaWeb.org, will help you determine the proper outdoor antenna to use in order to receive television channels that are broadcast locally.


Freeze

Pressing the FREEZE button freezes the current image. Pressing the FREEZE button once again returns the image to live video.

Note

The frozen image returns to live video after 5 minutes.

Programming the Remote Control to Operate Other Devices

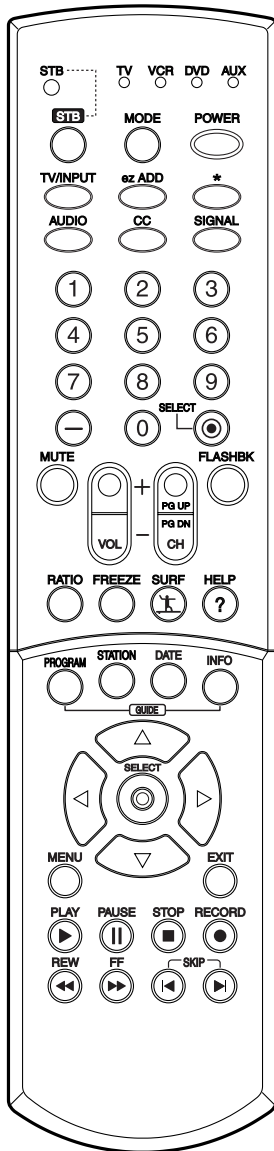

The HDTV Receiver remote control is a multi-brand or universal remote control that can be programmed to operate most remote-controllable devices from other manufacturers.

Note

The remote control may not be able to control all models of other brands.

1 Test your remote control.

To find out whether your remote control can operate a device without programming, turn on the device such as a VCR and select the corresponding mode (VCR) by pressing MODE on the remote control while pointing at the device. Use the POWER and CH +/- buttons to see if the device responds properly. If not, the remote control requires programming.

2 Turn on the device to be programmed. Then select the corresponding mode (VCR, AUX, TV, DVD or STB) by pressing MODE on the remote control.

3 Press the POWER button and the MUTE button simultaneously.

The remote control is now ready to program the code for the device.

4 There are two ways to find the correct code for the device.

First, if you press the CH + buttons repeatedly, the codes will change one at-a-time. If the right code is found, the device will turn off.

Second, enter the code number using the number buttons on the remote control. The right code numbers for the corresponding device can be found on the following pages. If the code is correct, the device will turn off.

5 Press the EXIT button to store the programming code.

6 Test the remote control functions to see if the device responds properly. If not, repeat from step 2.

Remote Control Codes for Other Devices

TV Codes

Brands	Codes
Akai	146 006
Amark	112 143
Ampro	167 073
Blaupunkt	088
Candle	002 003 004 006
Capehart	058
Citizen	002 003 004 043 101 103 006 143
Classic	043
Concerto	004
Contec	039 043 050 051
Coronado	143
Craig	043 054
Crown	043 143
Daewoo	004 016 017 043 044 055 071 076 103 107 111 114 117 120 123 125 127 128 136 143
Daytron	116 143 004
Dynasty	043
Electrohome	077 143 024
Emerson	028 048 043 155 005 096 047 116 153 151 050 004 006 051 143 154
Fisher	007 057
Funai	028 043
Futuretech	043
General Electric	160 144 165 073 130 008 009 034 056 074 116 155 091 004 006 161
Hall Mark	116 004
Hitachi	011 163 166 158 143 004 010 012 023 075 006 009 041
Inifinity	164
Inkel	129
JBL	164
J.C Penny	008 030 065 160 004 024 143 009 156 006 101
Jensen	013
JVC	038 083 145 034 070
KEC	043
Kloss	002 059
KMC	143
KTV	043 006 143 154
LG (Goldstar)	102 106 110 112 113 116 119 122 127 137 143 001 004
Lodgenet	072
Logik	072
Luxman	004
LXI	166 007 015 164 160 081 052
Magnavox	164 059 003 060 061 063 064 160 004 143 127 006 022

Brands	Codes
Marantz	006 164 077
Matsui	004 164
Memorex	007 072 116 004
Metz	088
MGA	004 028 042 006 049 077 116 024
Minerva	088
Mitsubishi	109 024 124 006 004 040 116 146 028 042
MTC	101 002 004 006
Nikei	043
OnKing	043
Onwa	043
Optonica	019 081
Panasonic	034 080 092 056 164
Philco	003 024 056 059 060 063 064 164 004 143 006 127 143
Philips	164 038 070 093 003 004 143 059 160 005 006
Pioneer	135 025 023 006 018 116 027 176
Portand	004 143
Proscan	144 160 161 165 167
Proton	116 131 143 058 171 004 173
Quasar	034 092 056
Radio Shack	019 043 047 116 127 143
RCA	160 161 165 065 156 144 006 004 023 024 056 074 152
Realistic	007 019 043 047
Runco	168 169
Sampo	058 116 004 006
Samsung	050 089 101 105 113 116 127 133 137 143 160 004
Sanyo	166 007 057 082 020 053 021 033 039
Scott	028 043 116 004 048 143
Sears	015 030 004 007 028 057 143 094 160 116 082 101
Siemens	088
Singnature	072
Sony	070 147 126 085 139 041 079 185
Soundesign	028 003 043 116 004
Spectricon	112
SSS	004 043
Super Macy	002
Sylvania	003 059 060 063 064 164 044 160 116 127 140 004 006
Tandy	081
Tatung	056 062

Brands	Codes
Technics	084 034 080
Techwood	004
Teknika	002 003 004 024 028 043 072 101 143 031 077 103 006
Telefunken	037 046 086 087
Telerent	072
TMK	004 116
Toshiba	015 138 030 007 040 062 101 051
Totevision	143
Universal	008 009
Video Concepts	146
Vidtech	004 116
Wards	004 008 009 019 028 060 061 063 064 072 074 116 143 164
Yamaha	004 006
York	116 004
Yupiteru	043
Zenith	001 072 073 095 157 103 102 106 110 112 113 116 119 122 127 137 143 001 004
Zonda	112

VCR Codes

Brands	Codes
Aiwa	034
Akai	146 043 046 124 125 016
Ampro	072
Audio dynamics	012 023 039 043
Broksonic	035 037 129
Canon	028 031 033
Capehart	108
Craig	003 040 135
Curtis Mathes	031 033 041
Daewoo	005 007 010 064 065 108 110 111 112 116 117 119
Daytron	108
DBX	012 023 039 043
Dynatech	034 053
Electrohome	059
Emerson	006 029 035 025 027 034 036 037 046 101 129 131 138 017 031 153
Fisher	003 008 009 010
Funai	034
General Electric	031 072 144 147 033 063 107 109
Go Video	132 136
Harman Kardon	012 045
Hitachi	004 026 034 043 150 063 137 018
Instant Replay	031 033
JCL	031 033
J.C Penny	012 013 015 066 040 033 101
Jensen	043
LG(Goldstar)	001 012 013 020 101 106 114 123

Remote Control Codes for Other Devices (Continued)

VCR Codes

Brands	Codes
JVC	048 043 130 150 050 055 060 012 031 033 152
Kenwood	014 043 048 039 034 047
Lloyd	034
LXI	034 101 013 014 003 009 017 106
Magin	040
Magnavox	067 031 034 041 033 068
Marantz	031 067 012 033 069
Marta	101
Matsui	027 030
MEI	031 033
Memorex	101 003 010 014 031 034 053 072 139 134 033 102
MGA	045 046 059
Minolta	013 020
Mitsubishi	059 061 151 046 013 020 045 049
MTC	034 040
Multi Tech	024 034
NEC	012 023 043 048 039
Nordmende	043
Optonica	053 054
Panasonic	066 070 083 145 133 140 074
Pentax	013 020 031 033 063
Philco	031 034 067
Philips	031 067 034 101 054 033 071
Pilot	101
Pioneer	021 048 013
Portland	108
Pulsar	072
Quartz	011 014
Quasar	033 066 075 145
RCA	013 020 033 041 034 062 063 107 109 140 144 145 147 040
Realistic	003 008 010 014 031 033 034 040 053 054 101
Rico	058
Runco	148
Salora	014
Samsung	032 040 102 104 105 107 109 112 113 115 120 122 125
Sansui	022 043 048 135
Sanyo	003 010 014 134 007 102
Scott	017 037 129 112 131
Sears	003 008 010 013 014 081 101 009 020 031 042 017 073

Brands	Codes
Sharp	149 031 054
Shintom	024
Sony	009 056 057 058 077 003 149 052 076 031 078
Soundesign	034
STS	013
Sylvania	031 059 033 034 067
Symphonic	034
Tandy	010 034
Teac	034 039 043
Technics	031 033 070
Teknika	031 019 033 034 101
Thomas	034
TMK	006
Toshiba	112 131 008 047 059 082 042 013
Totevision	040 101
Unitech	040
Video Research	012
Video Concepts	012 046 034
Videonsonic	040
Wards	013 024 031 034 040 053 054 003 017 033 131
Yamaha	012 043 034 039
Zenith	001 072 080 056 048 034 101 058 012 013 020 106 114 123

DVD Codes

Brands	Codes
JVC	012
LG (Goldstar)	001 010 016 025
Mitsubishi	002
Pioneer	004 026
Sony	007
Toshiba	019 008
Zenith	010 016 025 001

AUX (AUDIO) Codes

Brands	Codes
LG (Goldstar)	005
Luxman	017
NAD	014
Panasonic	003 015 036 046
RCA	004
Toshia	042
Hitachi	010
Marantz	002 021 028 030 032 035
Victor	006 039
JVC	006 039 049 050
ONKYO	008 009 025 040 041
Sharp	013 029 043 045
KENWOOD	001 013 029 031 044
Optimus	011 013 022
Quasar	003 036
Sherwood	012 019

Brands	Codes
Sony	027 034 038 048 053

AUX (CD) Codes

Brands	Codes
Adc	104
Aiwa	149 178 189 202 212
Akai	134 165 200
Denon	101 190 221 222 223
Emerson	133 136 152 166 175
Marantz	129 135 141 159 224 225 226
Fisher	113 122 138 140 168
GE	209
Hitachi	133 166
JVC	117 196 227 228
KENWOOD	105 110 113 118 144 154 155 198 200 216 217
Luxman	108 123 153 173
Magnavox	127 135 172 179 180
Mcs	111 147 156 169
Mitsubishi	120 179 229 230 231
Onkyo	125 126 130 131 213 215 232
Optimus	100 107 110 124 139 140 145 146 162 164 165 170 163
Panasonic	106 151 176 184 203 219 233
Philips	127 135 195 199 237
Pioneer	107 124 167 171 179 187 191 205 206 207
Quasar	106 176
Radio shack	186 188
Sanyo	121 140 158 168
Sears	147
Sharp	110 141 150 181 200 204 210 150 217
Sherwood	102 115 116 128 141 193
Sony	100 142 168 174 182 183 192 208 234 235 236
Technics	106 148 151 176 184 203 214 218
Teac	103 112 132 141 160 161 177 185 161 197 201
Yamaha	109 119 137 143 194 211

STB Codes

Brands	Codes
LG	001, 002
Zenith	001, 002

Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptom	Solution(s)
HDTV Receiver does not turn on.	<ul style="list-style-type: none"> ● Plug the power cord into a wall power outlet securely.
Fragmented picture and unclear sound.	<ul style="list-style-type: none"> ● Check your antenna input, location, and signal strength.
No picture.	<ul style="list-style-type: none"> ● Make sure the correct video display format is selected. ● Make sure that the right component type is selected. ● If HDTV Receiver is connected to your monitor or TV via the YPbPr port on the back panel, the output connector setting must be set to the YPbPr position (see page 16). Otherwise, you will probably see an abnormal picture. ● If HDTV Receiver is connected to your monitor or TV via the RGB port on the back panel, the output connector setting must be set to the RGB position. Otherwise, you may not be able to see a picture. ● Select the EZ Scan or Manual Add functions if you have not already done so. ● Check to make sure all the cables are installed correctly and that the proper source is selected on your TV. For example, Video 1 or 2. ● The antenna signal strength may be low. Check the signal strength and adjust the antenna location and direction. ● Due to copyright restrictions, you may not be able to view some high definition programs in the high definition format. ● For more information about connections, please refer to connections on pages 9-14.
Normal picture but no sound.	<ul style="list-style-type: none"> ● Check volume levels. ● Make sure the TV is not muted. ● Check that the HDTV receiver is connected properly.
Picture is distorted.	<ul style="list-style-type: none"> ● Make sure the proper format is selected. ● Make sure the proper aspect ratio is selected. ● Make sure the video output is connected to the TV.
Available channels are missing.	<ul style="list-style-type: none"> ● You can find all the available channels is by running the "EZ Scan" or "EZ Add" in the SETUP menu.
You forgot your password.	<ul style="list-style-type: none"> ● Enter the master password "7777".
The remote control does not work properly.	<ul style="list-style-type: none"> ● Use Mode button to select STB operational mode. ● Point the remote control on the remote sensor on the HDTV Receiver. ● Operate the remote control within 23 ft (7 m). ● Remove possible obstacles blocking the signal. ● Replace exhausted batteries with new ones.

Specifications

Television System		NTSC, DTV standard (1080i, 720p, 480p, 480i)
Channel Coverage		Terrestrial: 2-69, Cable: 1-135
Input/Output	ATSC ANT Input	ANT IN (1) (ATSC-8VSB over Terrestrial or QAM over cable)
	ANT Loop Out	Out To TV (1)
	DVI Output	DVI-HDTV Out (1), DVI-D Single Link connector 1080i, 720p, 480p digital RGB
	Component Video Output	Component Out (1 Set), Typical RCA type Jack connectors 1080i, 720p, 480p, 480i YPbPr
	RGB Output	RGB Out (1), 15-pin connector 1080i, 720p, 480p RGB
	S-Video Output	S-Video Out (1), 4-pin Mini-DIN 480i Y/C
	Video Output	Video Out (1), Typical RCA type Jack connector 480i Composite
	Digital Audio Output	Coaxial, Optical (Dolby Digital output)
	Analog Audio Output	Audio Out (2) (Variable Output Level)
	Authorized Service Port	9-pin Serial Port (1)
Dimension (W x H X D)		14.2 x 2.4 x 10.4 inches (360 x 60 x 265 mm)
Weight		7.7 lbs (3.5 kg)
Power Requirements		AC 120V, 60Hz
Power Consumption		15W
Environment	Humidity	0 to 99 percent non condensing
	Storage Temperature	-20 to 60 degrees Celsius (-4 to 140 degrees Fahrenheit)
	Operating Temperature	0 to 40 degrees Celsius (32 to 104 degrees Fahrenheit)
Accessories	RF cable	1
	Video cable	1
	Audio (L/R) cable	1
	Component (YPbPr) cable	1
	Remote Control	1
	Batteries (size AA)	2

REFERENCE

- Design and specifications are subject to change without prior notice.

**LG Electronics, Inc.
HDTV RECEIVER LST-3100A Limited Warranty - USA**



This LG Electronics product, marketed by Zenith, will be repaired or replaced, at LG's option, if it proves to be defective in material or workmanship, under normal use, during the warranty period ("Warranty Period") listed below, effective from the date ("Date of Purchase") of original consumer purchase of the product. This warranty is good only to the original purchaser of the product and effective only when used in the United States, excluding U.S. Territories only when used in the United States, excluding U.S. Territories.

<p>WARRANTY PERIOD:</p> <p>LABOR: 90 days from the Date of Purchase.</p> <p>PARTS: One Year from the Date of Purchase.</p> <p>* Parts replaced are warranted for the remaining portion of the original warranty period.</p>	<p>HOW SERVICE IS HANDLED:</p> <p>Call 1-800-243-0000 for instructions on getting the defective unit repaired or replaced.</p> <p>Please retain dated sales receipt and your box to return the unit to LG for repair or replacement.</p> <p>Shipping both ways will be paid by LG during the Warranty Period. After the Warranty Period, you pay in-bound shipping charges and LG pays return shipping charges.</p> <p>Visit our website at: http://www.lgservice.com</p>
--	---

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. LG ELECTRONICS WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL OR PUNITIVE DAMAGES OF ANY NATURE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, INCLUDING WITHOUT LIMITATION, LOST REVENUES OR PROFITS, LOST OR CORRUPTED PROGRAMMING OR DATA, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT OR OTHERWISE. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights that may vary from state to state.

THIS LIMITED WARRANTY DOES NOT APPLY TO:

- Damages or operating problems that result from shipping, installation, adjustment of user controls, calibration, maintenance or failure to maintain, or separate system components; and
- Damages or operating problems that result from normal wear and tear, misuse, abuse, operation outside environmental specifications or contrary to the requirements or precautions in the Operating Guide, accident, lightning strikes or other natural causes, unauthorized modification or alteration, incorrect electrical current or voltage, reception problem caused by inadequate home antenna or faulty antenna connections, computer software, institutional or commercial use, or other causes not arising out of defect in material or workmanship.

Therefore, the cost of repair or replacement of such defective product shall be borne by the consumer.

CUSTOMER INTER-ACTIVE CENTER NUMBERS:

<p>For nearest Authorized Service Center, Where to buy, Product Assistance, or Customer Assistance</p>	<p>Call 1-800-243-0000 (Monday - Friday 7 AM - 8PM CT and Saturday 8 AM - 5 PM CT) and select appropriate options from the menu.</p> <p>Or visit our website at http://www.lgservice.com</p>
---	--

ZENITH ELECTRONICS CORPORATION
2000 MILLBROOK DRIVE
LINCOLNSHIRE, IL 60069

Zenith Part No. 506-1001
GS# 3835RS0061D
Printed in Korea
Issue O