

OWNER'S MANUAL I FD TV

* LG LED TV applies LCD screen with LED backlights.

Please read this manual carefully before operating your set and retain it for future reference.

47LA6900 47LA6950 47LA7400 55LA6900 55LA6950 55LA7400 60LA7400

P/NO: MFL67652612 (1302-REV01)

IMPORTANT SAFETY INSTRUCTIONS

Always comply with the following precautions to avoid dangerous situations and ensure peak performance of your product.





TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING/CAUTION

- TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



WARNING

If you ignore the warning message, you may be seriously injured or there is a possibility of accident or death.



/!\ CAUTION

If you ignore the caution message, you may be slightly injured or the product may be damaged.



NOTE

The note helps you understand and use the product safely. Please read the note carefully before using the product.

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Wash hands after handling.

Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions.



• Do not use this apparatus near water.



Clean only with a dry cloth.



• Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.



• Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



• Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet (Can differ by country).



· Do not press strongly upon the panel with a hand or a sharp object such as a nail, pencil or pen, or make a scratch on it.



 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



 Only use attachments/accessories specified by the manufacturer.





 Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



 Unplug this apparatus during lightning storms or when unused for long periods of time.



Refer all servicing to qualified service personnel.
 Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



- Do not stick metal objects or any other conductive material into the power cord. Do not touch the end of the power cord while it is plugged in.
- Keep the packing anti-moisture material or vinyl packing out of the reach of children. Anti-moisture material is harmful if swallowed. If swallowed by mistake, force the patient to vomit and visit the nearest hospital. Additionally, vinyl packing can cause suffocation. Keep it out of the reach of children.

• CAUTION concerning the Power Cord (Can differ by country):

It is recommended that appliances be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not connect too many appliances to the same AC power outlet as this could result in fire or electric shock. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. Do not move the TV with the power cord plugged in. Do not use a damaged or loose power cord. Be sure do grasp the plug when unplugging the power cord. Do not pull on the power cord to unplug the TV.



 Warning - To reduce the risk of fire or electrical shock, do not expose this product to rain, moisture or other liquids. Do not touch the TV with wet hands. Do not install this product near flammable objects such as gasoline or candles, or expose the TV to direct air conditioning.




 Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus (e.g. on shelves above the unit).



Grounding

(Except for devices which are not grounded.) Ensure that you connect the earth ground wire to prevent possible electric shock (i.e. a TV with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet). If grounding methods are not possible, have a qualified electrician install a separate circuit breaker. Do not try to ground the unit by connecting it to telephone wires, lightening rods, or gas pipes.

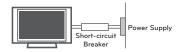


- As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if the unit is turned off.
- Do not attempt to modify this product in any way without written authorization from LG Electronics.
 Unauthorized modification could void the user's authority to operate this product.

Outdoor Antenna Grounding (Can differ by country):

If an outdoor antenna is installed, follow the precautions below. An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits as death or serious injury can occur. Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code (NEC) in the U.S.A. provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode.

Antenna grounding according to the National Electrical Code, ANSI/NFPA 70

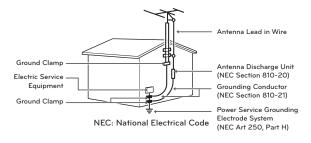

Cleaning

When cleaning, unplug the power cord and wipe gently with a soft cloth to prevent scratching. Do not spray water or other liquids directly on the TV as electric shock may occur. Do not clean with chemicals such as alcohol, thinners or benzine.

Moving

Make sure the product is turned off, unplugged and all cables have been removed. It may take 2 or more people to carry larger TVs. Do not press or put stress on the front panel of the TV.

Ventilation

Install your TV where there is proper ventilation. Do not install in a confined space such as a bookcase. Do not cover the product with cloth or other materials while plugged. Do not install in excessively dusty places.

- If you smell smoke or other odors coming from the TV, unplug the power cord and contact an authorized service center.
- · Keep the product away from direct sunlight.
- Never touch this apparatus or antenna during a thunder or lightning storm.
- When mounting a TV on the wall, make sure not to install the TV by hanging the power and signal cables on the back of the TV.
- Do not allow an impact shock or any objects to fall into the product, and do not drop anything onto the screen.

Disconnecting the Main Power

The power outlet used with this device must remain easily accessible.

- Store the accessories (battery, etc.) in a safe location out of the reach of children.
- This apparatus use batteries. In your community there might be regulations that require you to dispose of these batteries properly due to environmental considerations. Please contact your local authorities for disposal or recycling information.
- Do not dispose of batteries in a fire.
- Do not short circuit, disassemble or allow the batteries to overheat.

Dot Defect

The Plasma or LCD panel is a high technology product with resolution of two million to six million pixels. In a very few cases, you could see fine dots on the screen while you're viewing the TV. Those dots are deactivated pixels and do not affect the performance and reliability of the TV.

Generated Sound

"Cracking" noise: A cracking noise that occurs when watching or turning off the TV is generated by plastic thermal contraction due to temperature and humidity. This noise is common for products where thermal deformation is required.

Electrical circuit humming/panel buzzing: A low level noise is generated from a high-speed switching circuit, which supplies a large amount of current to operate a product. It varies depending on the product.

This generated sound does not affect the performance and reliability of the product.

- Take care not to touch the ventilation openings.
 When watching the TV for a long period, the
 ventilation openings may become hot. This does
 not affect the performance of the product or cause
 defects in the product.
- If the TV feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with TV. Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However, they have no adverse effect on the TV's performance. Avoid touching the LCD screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effects on the screen.

Preventing "Image burn" or "Burn-in" on your TV screen







- If a fixed image displays on the TV screen for a long period of time, it will be imprinted and become a permanent disfigurement on the screen. This is "image burn" or "burn-in" and not covered by the warranty.
- If the aspect ratio of the TV is set to 4:3 for a long period of time, image burn may occur on the letterboxed area of the screen.
- Avoid displaying a fixed image on the TV screen for a long period of time (2 or more hours for LCD, 1 or more hours for the Plasma TV) to prevent image burn.

For USA and Canada

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE TO CABLE/TV INSTALLER

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

Viewing 3D Imaging



WARNING

Viewing Environment

- Viewing Time
 - When watching 3D content, take 5 15 minute breaks every hour. Viewing 3D content for a long period of time may cause headache, dizziness, fatigue or eye strain.

Those that have a photosensitive seizure or chronic illness

- · Some users may experience a seizure or other abnormal symptoms when they are exposed to a flashing light or particular pattern from 3D content.
- · Do not watch 3D videos if you feel nauseous, are pregnant and/ or have a chronic illness such as epilepsy, cardiac disorder, or blood pressure disease, etc.
- 3D Content is not recommended for those who suffer from stereo blindness or stereo anomaly. Double images or discomfort in viewing may be
- If you have strabismus (cross-eyed), amblyopia (weak eyesight) or astigmatism, you may have trouble sensing depth and easily feel fatigue due to double images. It is advised to take frequent breaks than the average adult.
- If your eyesight varies between your right and left eye, revise your eyesight prior to watching 3D content.

Symptoms which require discontinuation or refraining from watching 3D content

- Do not watch 3D content when you feel fatigue from lack of sleep, overwork or intoxication.
- · When these symptoms are experienced, stop using/ watching 3D content and get enough rest until the symptom subsides.
 - Consult your doctor when the symptoms persist. Symptoms may include headache, eyeball pain, dizziness, nausea, palpitation, blurriness, discomfort, double image, visual inconvenience or fatigue.

! CAUTION

Viewing Environment

- Viewing Distance
 - Maintain a distance of at least twice the screen diagonal length when watching 3D content. If you feel discomfort in viewing 3D content, move further away from the TV.

Viewing Age

- · Infants / Children
 - Usage/ Viewing 3D content for children under the age of 5 are prohibited.
 - Children under the age of 10 may overreact and become overly excited because their vision is in development (for example: trying to touch the screen or trying to jump into it. Special monitoring and extra attention is required for children watching 3D content.
 - Children have greater binocular disparity of 3D presentations than adults because the distance between the eyes is shorter than one of adults. Therefore they will perceive more stereoscopic depth compared to adults for the same 3D image.
- Teenagers
 - Teenagers under the age of 19 may be stimulated to light coming from 3D videos. Advise them not to watch 3D videos for a long time when they are tired.
- Elderly
 - The elderly may perceive less of a 3D effect than the youth. Do not sit closer to the TV than the recommended distance

Cautions when using the 3D glasses

- Only use LG 3D glasses. Otherwise, you may not be able to view 3D videos properly.
- Do not use 3D glasses instead of your normal glasses, sunglasses or protective goggles.
- Using modified 3D glasses may cause eye strain or image distortion.
- · Do not keep your 3D glasses in extremely high or low temperatures. It will cause deformation.
- The 3D glasses are fragile and are easy to scratched. Use a soft, clean piece of cloth when wiping the lenses. Do not scratch the lenses of the 3D glasses with sharp objects or clean/wipe them with chemicals.

LICENSES

Supported licenses may differ by model. For more information about licenses, visit 'www.lg.com'.



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

"DivX Certified® to play DivX® video up to HD 1080p, including premium content." "DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its

"DivX", DivX Certified" and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license."

"Covered by one or more of the following U.S. patents:

7,295,673; 7,460,668; 7,515,710; 7,519,274"



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol & DTS and the Symbol together are registered trademarks & DTS 2.0+Digital Out is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

OPEN SOURCE SOFTWARE NOTICE

To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit 'http://opensource.lge.com'.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to 'opensource@lge.com'. This offer is valid for three (3) years from the date on which you purchased the product.

TABLE OF CONTENTS

2	IMPORTANT SAFETY INSTRUCTIONS
6	Viewing 3D Imaging
7	LICENSES
7	OPEN SOURCE SOFTWARE NOTICE
8	TABLE OF CONTENTS

9 INSTALLATION PROCEDURE

9	ASSEMBLING AND PREPARING	
9	Unpacking	
11	Optional Extras	

- 12 Parts and Buttons 13 Lifting and moving the TV
- Setting up the TV 14
- 14 - Attaching the stand
- 15 - Mounting on a table
- 16 - Tidying cables
- 17 - Mounting on a wall

MAKING CONNECTIONS 18

- 18 Connecting to an antenna or cable
- 19 Connecting to a HD receiver, DVD Player or VCR
- 19 - HDMI Connection
- 20 - DVI to HDMI Connection
- 21 - Connecting to a mobile phone
- 22 - Component Connection
- 23 - Composite Connection
- 24 Connecting a PC
- 24 - HDMI Connection DVI to HDMI Connection
- 26 Connecting to an Audio System
- 26 - Digital Optical Audio Connection
- 27 Connecting Headphones
- 27 Connecting a USB Device

MAGIC REMOTE CONTROL 28 **FUNCTIONS**

- 29 Registering Magic Remote Control
- 29 How to use Magic Remote Control
- 29 Precautions to Take when Using the Magic Remote Control

30 **WATCHING TV**

- 30 Turning the TV on for the first time
- 31 **USING THE USER GUIDE**
- 32 **SPECIFICATIONS**

EXTERNAL CONTROL DEVICE SETUP 36

37 **MAINTENANCE**

- 37 Cleaning Your TV
- 37 - Screen, frame, cabinet and stand
- 37 - Power cord

37 **TROUBLESHOOTING**



- Image shown may differ from your TV.
- Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual.
- The available menus and options may differ from the input source or product model that you are
- · New features may be added to this TV in the future.

INSTALLATION PROCEDURE

- Open the package and make sure all the accessories are included.
- Attach the stand to the TV set.
- Connect an external device to the TV set.
- Make sure the network connection is available. You can use the TV network functions only when the network connection is made.

ASSEMBLING AND PREPARING

Unpacking

Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.




. CAUTION

- Do not use any unapproved items to ensure the safety and product life span.
- Any damages or injuries by using unapproved items are not covered by the warranty.
- Some models appear to have a thin film on the screen. It is actually part of the screen, do not remove it.




NOTE -

- The items supplied with your product may vary depending on the model.
- · Product specifications or contents of this manual may be changed without prior notice due to upgrade of product
- For an optimal connection, HDMI cables and USB devices should have bezels less than 10 mm (0.39 inches) thick and 18 mm (0.7 inches) width.
- Use an extension cable that supports USB 2.0 if the USB cable or USB memory stick does not fit into your TV's USB port.

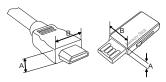


*A≦ 10 mm (0.39 inches)

*B≤ 18 mm (0.7 inches)

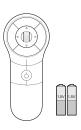

Magic Remote Control, Batteries (AA) (See p.28)

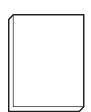

Owner's Manual



Power Cord



Cinema 3D Glasses

The number of 3D glasses may differ depending on the model or country.




Stand Screws

4 EA, M4 x 20 (See p.14)



Cable Holder

(See p.16)

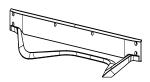

Stand Base

(See p.14)



Tag On

Near Field Communication (NFC) tag.

ENGLISH


Optional Extras

Optional extras can be changed or modified for quality improvement without any notification.

Contact your dealer to buy these items.

These devices only work with certain models.

The model name or design may be changed manufacturer's circumstances or policies.

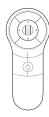


AN-MR400 Magic Remote



AG-F***
Cinema 3D Glasses. All glasses with the Cinema 3D logo support the TVs in this manual.




AG-F**DP
Dual Play Glasses. For playing
head-to-head games. Converts
most 2 player split-screen
games to full screen.

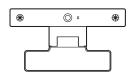

AN-VC***Video Call Camera




Tag OnNear Field Communication (NFC) tag.

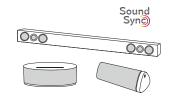


LG Audio device

Parts and Buttons

For LA6900, LA6950 series, 47, 55LA7400

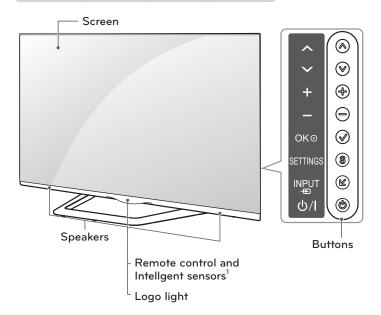

For 60LA7400

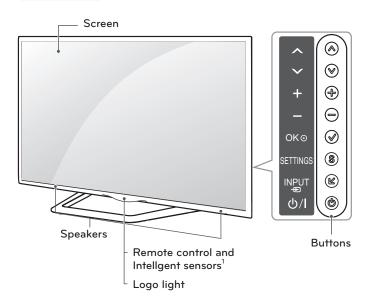

Button	Description
∧ / ∨ (∧ / ∨)	Scrolls through the saved channels.
+ / - / -)	Adjusts the volume level.
♦ (OK ③)	Selects the highlighted menu option or confirms an input.
S (SETTINGS)	Accesses the main menus, or saves your input and exits the menus.
(INPUT ⊕)	Changes the input source.
ම (ර /)	Turns the power on or off.

^{1.} Intelligent sensor - Adjusts the image quality and brightness based on the surrounding environment.

Lifting and moving the TV


When moving or lifting the TV, read the following to prevent the TV from being scratched or damaged and for safe transportation regardless of its type and size.

CAUTION -

- · Avoid touching the screen at all times, as this may result in damage to the screen.
- It is recommended to move the TV in the box or packing material that the TV originally came in.
- Before moving or lifting the TV, disconnect the power cord and all cables.
- · When holding the TV, the screen should face away from you to avoid damage.



 Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grill area.

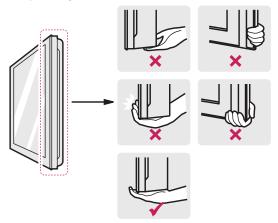

- · When transporting a large TV, there should be at least 2 people.
- When transporting the TV by hand, hold the TV as shown in the following illustration.



- When transporting the TV, do not expose the TV to jolts or excessive vibration.
- · When transporting the TV, keep the TV upright, never turn the TV on its side or tilt towards the left or right.

Setting up the TV

You can mount your TV to a wall or attach the stand if you wish to place the TV on an entertainment center or other furniture.


Attaching the stand

If you are not mounting the TV to a wall, use the following instructions to attach the stand.

- When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.
- Make sure that the screws are fastened tightly. (If they are not fastened securely enough, the TV may tilt forward after being installed.)
- Do not tighten the screws with too much force; otherwise they may be damaged and come loose later.


NOTE -

• Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.

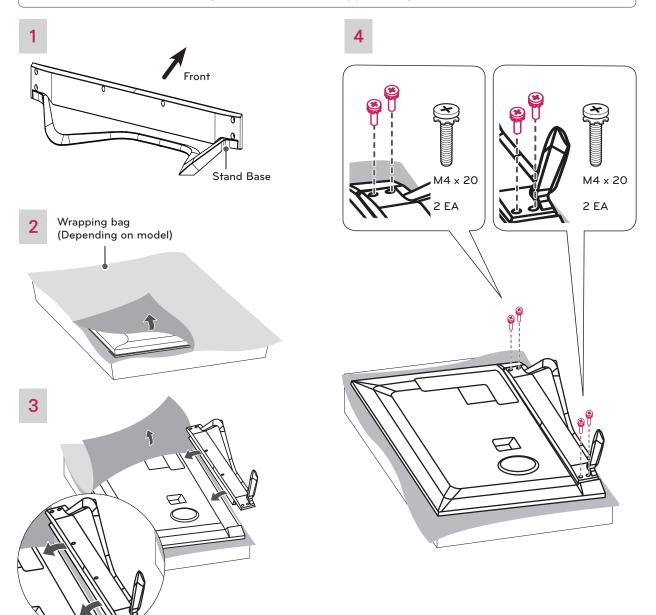

Mounting on a table

- 1 Lift and tilt the TV into its upright position on a table.
 - Leave a 10 cm (minimum) space from the wall for proper ventilation.

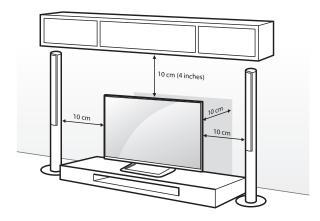


2 Connect the power cord to a wall outlet.

/!\ CAUTION -

• Do not place the TV near or on sources of heat, as this may result in fire or other damage.


Adjusting the angle of the TV to suit view


Swivel 10 degrees to the left or right and adjust the angle of the TV to suit your view. (For 47LA6900, 47LA7400)

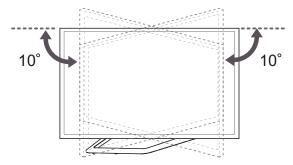

Swivel 8 degrees to the left or right and adjust the angle of the TV to suit your view.

(For 55LA6900, 55LA6950, 55LA7400, 60LA7400)

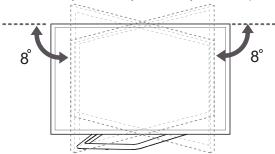

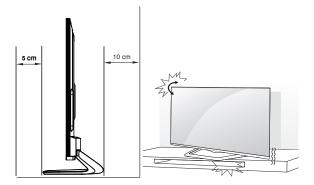



/!\ CAUTION

- Install the product on a flat surface for easy swivel. Make sure to use the TV cabinet or stand that can properly support the TV.
- After installing the TV, the angle of the screen can be adjusted to the left or right.
- When adjusting the angle, make sure there are no objects near the TV and the TV has enough distance from the wall. A space of at least 5 cm on the front and 10 cm on the back should be available. Otherwise, the product could fall due to balance problems, which may cause personal injury or damage to the product.

Securing the TV to a wall (optional)

(Depending on model)

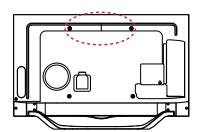

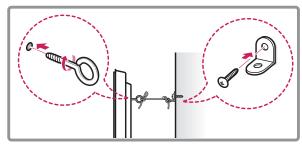

- 1 Insert and tighten the eye-bolts, or TV brackets and bolts on the back of the TV.
 - If there are bolts inserted at the eye-bolts position, remove the bolts first.
- 2 Mount the wall brackets with the bolts to the wall. Match the location of the wall bracket and the eyebolts on the rear of the TV.
- 3 Connect the eye-bolts and wall brackets tightly with a sturdy rope. Make sure to keep the rope horizontal with the flat surface.

$\dot{\mathbb{N}}$ CAUTION -

• Make sure that children do not climb on or hang on the TV.




NOTE -


- Use a platform or cabinet that is strong and large enough to support the TV securely.
- Brackets, bolts and ropes are optional. You can obtain additional accessories from your local dealer.

Tidying cables

Gather and bind the cables with the cable holder on the back of the TV.

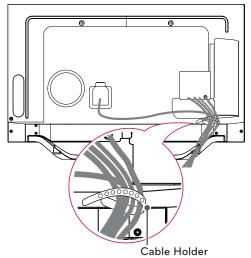


2 Gather and bind the cables with the cable management clip.

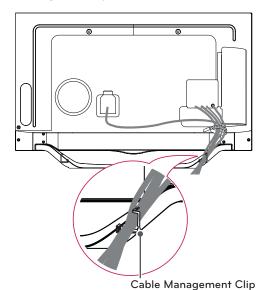

• Do not move the TV by holding the cable holder and cable management clip, as the cable holders may break, and injuries and damage to the TV may occur.

Mounting on a wall

An optional wall mount can be used with your LG Television. Consult with your local dealer for a wall mount that supports the VESA standard used by your TV model. Carefully attach the wall mount bracket at the rear of the TV. Install the wall mount bracket on a solid wall perpendicular to the floor. If you are attaching the TV to other building materials, please contact qualified personnel to install the wall mount. Detailed instructions will be included with the wall mount. We recommend that you use an LG brand wall mount.

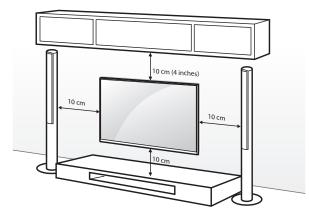

Make sure to use screws and wall mounts that meet the VESA standard. Standard dimensions for the wall mount kits are described in the following table.

Model	47/55LA6900 47/55LA6950 47/55/60LA7400
VESA (A x B)	400 × 400
Standard screw	M6
Number of screws	4
Wall mount bracket (optional)	LSW430B

/!\ CAUTION -

- Disconnect the power before moving or installing the TV. Otherwise electric shock may occur.
- If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury. Use an authorized LG wall mount and contact the local dealer or qualified personnel.
- Do not over tighten the screws as this may cause damage to the TV and void your warranty.
- Use the screws and wall mounts that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty.

NOTE

- Use the screws that are listed in the VESA standard screw specifications.
- The wall mount kit includes an installation manual and necessary parts.
- The wall mount bracket is optional. You can obtain additional accessories from your local dealer.
- The length of screws may differ depending on the wall mount. Make sure to use the proper length.
- For more information, refer to the manual supplied with the wall mount.

MAKING CONNECTIONS

You can connect various external devices to the TV. Supported external devices are: HD receivers, DVD players, VCRs, audio systems, USB storage devices, PC, gaming devices, and other external devices. For more information on external device's connection, refer to the manual provided with each device.




NOTE

- If you record a TV program on a DVD recorder or VCR, make sure to connect the TV signal input cable to the TV through a DVD recorder or VCR. For more information of recording, refer to the manual provided with the connected device.
- · The external device connections shown may differ slightly from illustrations in this manual.
- Connect external devices to the TV regardless of the order of the TV port.
- If you connect a gaming device to the TV, use the cable supplied with the gaming device.
- · Refer to the external equipment's manual for operating instructions.

Connecting to an antenna or cable

Connect an antenna, cable, or cable box to watch TV while referring to the following. The illustrations may differ from the actual items and a RF cable is optional.

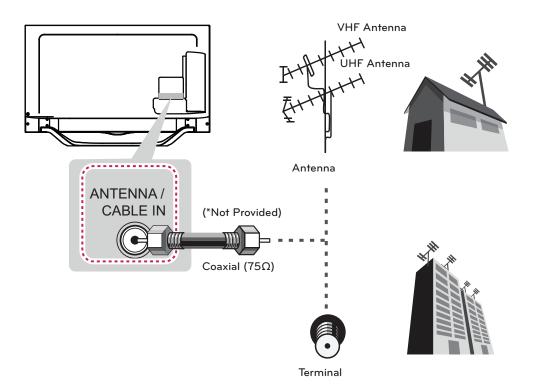



Make sure not to bend the copper wire of the RF cable.



 Complete all connections between devices, and then connect the power cord to the power outlet to prevent damage to your TV.



NOTE -

- Use a signal splitter to use more than 2 TVs.
- Visit http://lgknowledgebase.com for more information about the antenna and cable connection. Search for antenna.
- DTV Audio Supported Codec: MPEG, Dolby Digital, DTS

Connecting to a HD receiver, DVD Player or VCR

Connect a HD receiver, DVD Player, or VCR to the TV and select an appropriate input mode.

HDMI Connection

HDMI is the best way to connect a device.


Transmits digital video and audio signals from an external device to the TV. Connect the external device and the TV with the HDMI cable as shown in the following illustration.



NOTE -

- Use the latest High Speed HDMI™ Cable that supports CEC (Customer Electronics Control) function.
- High Speed HDMI™ Cables are tested to carry an HD signal up to 1080p and higher.
- HDMI Audio Supported Format: Dolby Digital, DTS, PCM (Up to 192 KHz, 32k/44.1k/48k/88k/96k/176k/192k).

Choose any HDMI input port to connect. It does not matter which port you use.

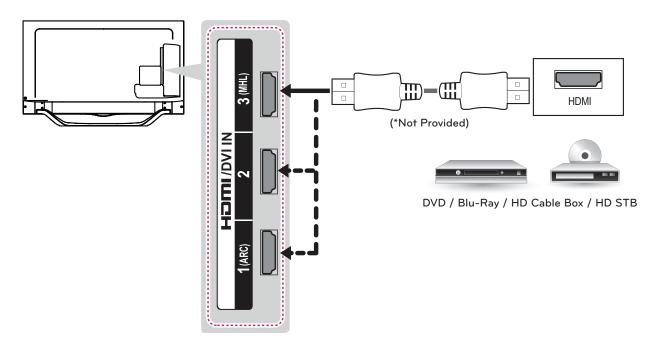


ARC (Audio Return Channel)

- When connected with a high-speed HDMI cable, digital audio can be sent to a compactible device without an additional optical audio cable.
- ARC is only supported on the HDMI input
 1 (ARC) port. An external audio device that supports ARC should be connected to HDMI 1 if you wish to use ARC.

DVI to HDMI Connection

Transmits the digital video signal from an external device to the TV. Connect the external device and the TV with the DVI-HDMI cable as shown in the following illustration. To transmit an audio signal, connect an audio cable.

Choose any HDMI/DVI input port to connect. It does not matter which port you use.

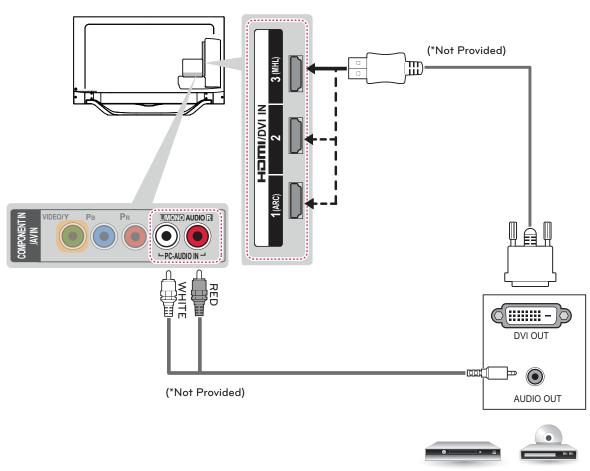

DVD / Blu-Ray / HD Cable Box


Connecting to a mobile phone

Mobile High-definition Link (MHL) is an interface for transmitting digital audio/visual signals from mobile phones to television sets.



NOTE

- Connect the mobile phone to the HDMI IN 3 (MHL) port to view the phone screen on the TV.
- This only works with an MHL-enabled phone.
- With some MHL supporting mobile phones, you can use the TV remote to control the phone.
- An MHL passive cable is needed to connect the TV and a mobile phone.
- Remove the MHL cable from the TV when:
 - the MHL function is disabled
 - your mobile device is fully charged in standby mode

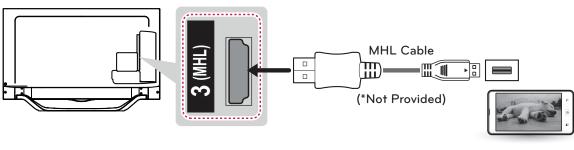


Mobile phone

Component Connection

Transmits analog video and audio signals from an external device to the TV. Connect the external device and the TV with a component cable as shown in the following illustration.



- If cables are installed incorrectly, it could cause the image to display in black and white or with distorted color.
- Check to ensure the cables are matched with the corresponding color connection.

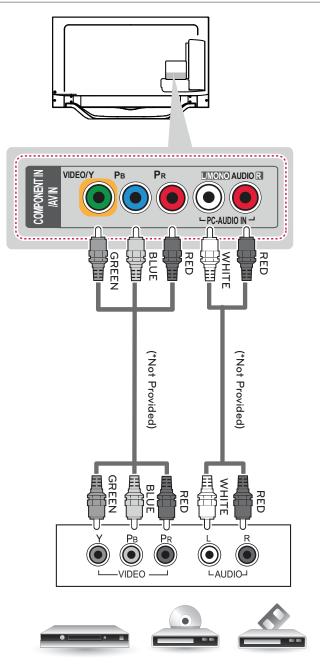


DVD / Blu-Ray / HD Cable Box / VCR

Composite Connection

Transmits analog video and audio signals from an external device to the TV. Connect the external device and the TV with the composite cable as shown in the following illustration.



Check to ensure the cables are matched with the corresponding color connection.

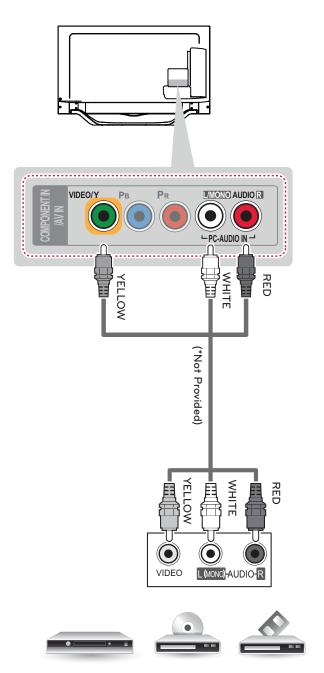

VCR / DVD / Blu-Ray / HD Cable Box


Connecting a PC




- It is recommended to use an HDMI connection for the best image quality.
- Depending on the graphics card, DOS mode video may not work if a HDMI to DVI Cable is in use.
- In PC mode, there may be noise associated with the resolution, vertical pattern, contrast or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the PICTURE menu until the picture is clear.
- The synchronization input form for Horizontal and Vertical frequencies is separate.
- · Depending on the graphics card, some resolution settings may not allow the image to be positioned on the screen

HDMI Connection DVI to HDMI Connection

Choose method A or B to make connection.

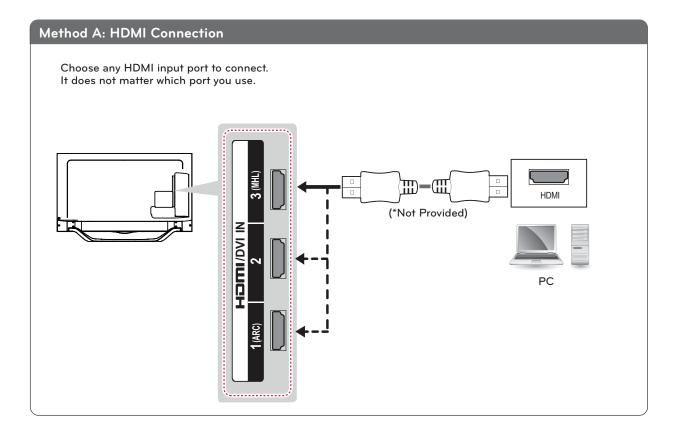

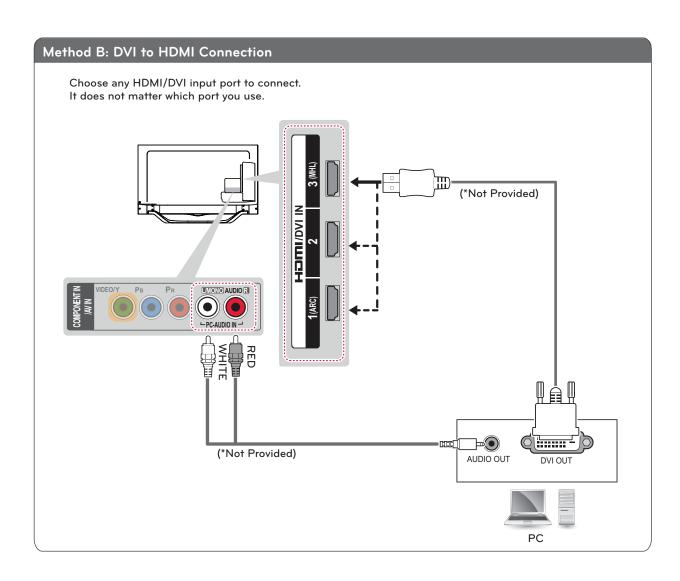

Connecting to an Audio System

You can use an optional external audio system instead of the built-in speaker.


Digital Optical Audio Connection

Transmits a digital audio signal from the TV to an external device. Connect the external device and the TV with the optical audio cable as shown in the following illustration.



NOTE -

- Do not look into the optical output port. Looking at the laser beam may damage your vision.
- · Audio with ACP (Audio Copy Protection) function may block digital audio output.

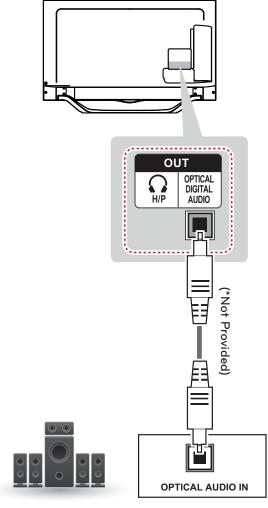

Digital Audio System


Connecting Headphones

Listening to sound with headphones



NOTE

- · AUDIO menu options are disabled when using headphones.
- When changing AV MODE with headphones connected, the change is applied to video but not to audio.
- Optical Digital Audio Out is not available when headphones are connected.
- Headphone impedance: 16 Ω
- Max audio output: 10 mW to 15 mW
- Headphone jack size: 0.35 cm (0.13 inches)

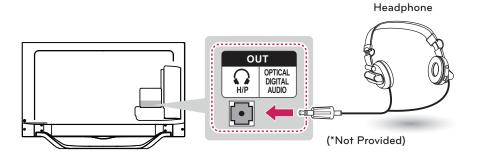

Connecting a USB Device


Connect a USB storage device such as USB flash memory, external hard drive, or a USB memory card reader to the TV and access the Smart Share menu to use various multimedia files.



NOTE


 Some USB Hubs may not work. If a USB device connected using a USB Hub is not detected, connect it to the USB port on the TV directly.

Choose any USB input port to connect. It does not matter which port you use.

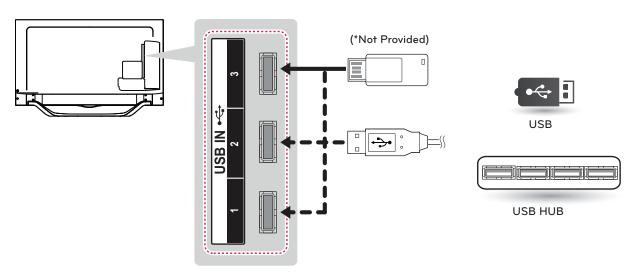

MAGIC REMOTE CONTROL FUNCTIONS


When the message "Magic remote control battery is low. Change the battery." is displayed, replace the battery. To install batteries, open the battery cover, replace batteries (1.5 V AA) matching (+) and (-) ends to the label inside the compartment, and close the battery cover. Be sure to point the remote control at the remote control sensor on the TV. To remove the batteries, perform the installation actions in reverse.

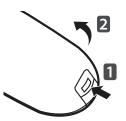



Do not mix old and new batteries, as this may damage the remote control.

This remote uses infrared light. When in use, it should be pointed in the direction of the TV's remote sensor.

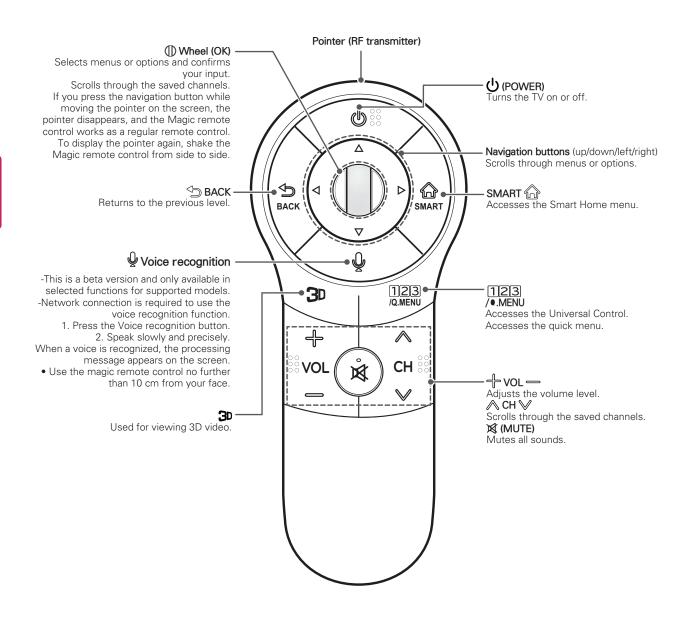

Registering Magic Remote Control

The Magic Remote Control operates by pairing with your

Please register the remote as follows.

How to register the Magic Remote Control



To register automatically, turn the TV on and press the **Wheel (OK)**. When registration is completed, the completion message appears on the screen. If registration fails, turn the TV off and back on, then press the Wheel (OK) to complete registration.

How to Re-register the Magic Remote Control






Press and hold the ➡ BACK and SMART ♠ buttons together for 5 seconds to reset, then register it by following "How to register the Magic remote control" above.

2 To re-register the Magic remote control, press and hold the ♠ BACK button for 5 seconds toward the TV.

How to use Magic Remote Control



- 1 You can move the pointer by aiming the Pointer Receiver of the remote control at your TV then move it left, right, up or
- » If the pointer does not work properly leave the remote control for 10 seconds then use it again.
- 2 If the pointer disappears, move the remote control slightly to left or right. Then, it will automatically appear on the
- » If the pointer has not been used for a certain period of time, it will disappear.

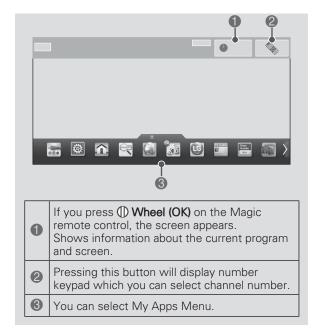

Precautions to Take when Using the Magic Remote Control

- Use the Magic remote control within the maximum communication distance (10 m, 32.8ft). Using the remote control beyond this distance, or with an object obstructing it, may cause a communication failure.
- A communication failure may occur due to nearby devices. Electrical devices such as a microwave oven or wireless LAN product may cause interference, as these use the same bandwidth (2.4 GHz) as the Magic remote control.
- The Magic remote control may be damaged or may malfunction if it is dropped or receives a heavy impact.
- Take care not to bump into nearby furniture or other people when using the Magic remote control.
- Manufacturer and installer cannot provide service related to human safety as the applicable wireless device has possibility of electric wave interference.
- It is recommended that an Access Point (AP) be located more than 1 m (3.28 ft) away from the TV. If the AP is installed closer than 1 m (3.28 ft), the Magic remote control may not perform as expected due to frequency interference.

WATCHING TV


Turning the TV on for the first time

When you turn the TV on for the first time, the Initial setting screen appears. Select a language and customize the basic settings.

- Connect the power cord to a power outlet.
- In Standby mode, press the power button on the remote control to turn the TV on. The Initial setting screen appears if you turn the TV on for the first time.



- You can also access Initial Setting by accessing **OPTION** in the main menu.
- 3 Follow the on-screen instructions to customize your TV settings according to your preferences.

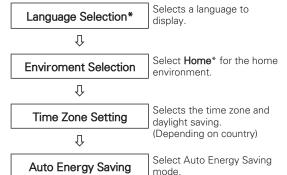

Network Connection Û

mode Setting

Sets your network to enable network-related features on the TV.

Select TV watching Type

Set the TV and set-top box for each watching type.

Û

Auto Tuning

Scans and saves available channels automatically.

Setting is complete.

Confirms the setting options.

Û

Experience Magic Remote Control

Simple guide of Magic Remote Control (Depending on model)



- Select Home* when prompted. Store* mode puts the TV in demo mode.
- If you select **Store***, the any customized settings will switch back to the default settings of Store* in 5 minutes.
- The Standby light feature is disabled in Store Demo mode.
- 4 When the basic settings are complete, press the Wheel (OK).




NOTE -


- If you do not complete the Initial setting, it will appear whenever the TV turns on.
- Disconnect the power cord from the power outlet when you do not use the TV for a long period of time.
- 5 To turn the TV off, press the power button on the remote control.


USING THE USER GUIDE

User Guide allows you to easily access detailed TV information.

- 1 Press **SMART** abutton to access the Smart Home menus.
- 2 Select User Guide and press the (1) Wheel (OK) button.

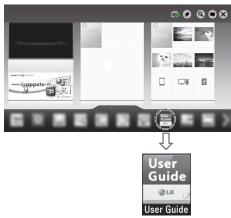

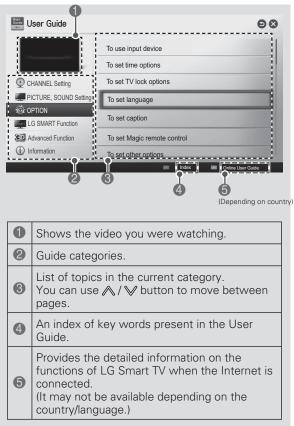

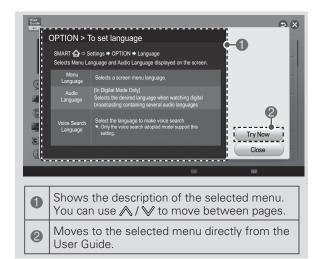

SPECIFICATIONS

Product specifications may be changed without prior notice due to upgrade of product functions.

Power requirement		AC 100 - 240 V ~ 50 / 60 Hz	
Television System		NTSC-M, ATSC, 64 & 256 QAM	
Program Coverage		VHF 2-13, UHF 14-69, CATV 1-135, DTV 2-69, CADTV 1-135	
External Antenna Impedance		75 Ω	
	Operating Temperature	0 - 40 °C	
Environment	Operating Humidity	Less than 80 %	
condition	Storage Temperature	-20 - 60 °C	
	Storage Humidity	Less than 85 %	

MODELS		47LA6900 (47LA6900-UD)
		47LA6950 (47LA6950-UD)
	With stand	1,063 x 697 x 269 (mm)
Dimensions	VVIIII Stand	41.8 x 27.4 x 10.5 (inch)
$(W \times H \times D)$	Without stand	1,063 x 627 x 34.5 (mm)
		41.8 x 24.6 x 1.3 (inch)
Maight	With stand	16.7 kg (36.8 lbs)
Weight	Without stand	14.6 kg (32.1 lbs)
Current Value / Power consumption		1.2 A / 120 W

MODELS		55LA6900 (55LA6900-UD)	
		55LA6950 (55LA6950-UD)	
	With stand	1,233 x 793 x 316 (mm)	
Dimensions		48.5 x 31.2 x 12.4 (inch)	
(W x H x D)	Without stand	1,233 x 723 x 34.7 (mm)	
		48.5 x 28.4 x 1.3 (inch)	
\	With stand	22.8 kg (50.2 lbs)	
Weight	Without stand	20.0 kg (44.0 lbs)	
Current Value / Power consumption		1.4 A / 140 W	

MODELS		47LA7400 (47LA7400-UD)	55LA7400 (55LA7400-UD)	
	With stand	1,063 x 697 x 269 (mm)	1,233 x 793 x 316 (mm)	
Dimensions		41.8 x 27.4 x 10.5 (inch)	48.5 x 31.2 x 12.4 (inch)	
$(W \times H \times D)$	Without stand	1,063 x 627 x 34.5 (mm)	1,233 x 723 x 34.7 (mm)	
		41.8 x 24.6 x 1.3 (inch)	48.5 x 28.4 x 1.3 (inch)	
\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	With stand	16.7 kg (36.8 lbs)	22.8 kg (50.2 lbs)	
Weight	Without stand	14.6 kg (32.1 lbs)	20.0 kg (44.0 lbs)	
Current Value / Power consumption		1.2 A / 120 W	1.4 A / 140 W	

MODELS		60LA7400 (60LA7400-UA)
	\\/ith atomd	1,352 x 848 x 316 (mm)
Dimensions	With stand	53.2 x 33.3 x 12.4 (inch)
$(W \times H \times D)$	Without stand	1,352 x 794 x 59.9 (mm)
		53.2 x 31.2 x 2.3 (inch)
Maight	With stand	27.6 kg (60.8 lbs)
Weight	Without stand	24.8 kg (54.6 lbs)
Current Value / Power consumption		1.8 A / 180 W

HDMI (DTV) supported mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
720X480	31.469 31.50	59.94 60.00
1280X720	44.96 45.00	59.94 60.00
1920X1080	33.72 33.75 26.97 27.000 33.716 33.75 67.43 67.500	59.94 60.00 23.97 24.000 29.976 30.00 59.94 60

Component supported mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	
700 400	15.73	59.94	
720x480i	15.73	60.00	
720v490n	31.47	59.94	
720x480p	31.50	60	
1200,7200	44.96	59.94	
1280x720p	45.00	60.00	
1020~1000;	33.72	59.94	
1920x1080i	33.75	60.00	
	26.97	23.976	
	27.00	24.00	
1000::1000:-	33.71	29.97	
1920x1080p	33.75	30.00	
	67.432	59.94	
	67.500	60.00	

Component port connecting information

Component ports on the	Y	PB	PR
TV			
	Y	PB	PR
Video output ports	Y	B-Y	R-Y
on DVD player	Y	Cb	Cr
	Y	Pb	Pr

HDMI (PC) supported mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
640 x 480	31.469	59.94
800 x 600	37.879	60.31
1024 x 768	48.363	60.00
1152 x 864	54.348	60.053
1360 x 768	47.712	60.015
1280 x 1024	63.981	60.020
1920 x 1080	67.5	60.00

Wireless LAN module (WN8122E1) specification

Standard	IEEE802.11a/b/g/n
Frequency Range	2400 to 2483.5 MHz 5150 to 5250 MHz 5725 to 5850 MHz
Output Power (Max.)	802.11a: 16.5 dBm 802.11b: 16 dBm 802.11g: 15.5 dBm 802.11n - 2.4GHz: 15.5 dBm 802.11n - 5GHz: 16.5 dBm

- Because band channel used by the country could be different, the user can not change or adjust the operating frequency and this product is set for the regional frequency table.
- Contains FCC ID: BEJWN8122E1 Contains IC: 2703H-WN8122E1

Bluetooth module (BM-LDS401) specification

Standard	Bluetooth Version 3.0
Frequency Range	2400 ~ 2483.5 MHz
Output Power (Max.)	10 dBm or lower

• Contains FCC ID: BEJLDS401 Contains IC: 2703H-LDS401

3D supported mode (For 3D TV)

• Video, which is input as below media contents is switched into the 3D screen automatically.

3D supported mode automatically					
Input	Signal	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Playable 3D video format	
	1080p	54.00	24		
		67.50	30		
		27.00	24	F/P, L/A	
		33.75	30		
		67.50	60		
HDMI	1000;	67.50	60	F/P, F/A	
	1080i	33.75		S/S, T&B, S/S Full	
	720p	90.00		F/P, L/A	
		45.00		S/S, T&B, S/S Full	
	400p	63.00		F/P, L/A	
	480p	31.50		T/B, S/S, S/S Full	
USB	1080p	33.75	30	S/S, T&B, C/B, MPO(Photo)	
DLNA		33.73	5.75		
	Playable 3D video format				
DTV	Dual Stream				

S/S: Side by Side, T/B: Top & Bottom, F/P: Frame Packing, F/A: Field Alternative

L/A: Line Alternative, S/S Full: Side by Side Full, C/B: Checker Board

R/I: Row Interleaving, C/I: Column Interleaving, F/S: Single Frame Sequential

3D supported mode manually				
Input	Signal	Playable 3D video format		
TV	-			
ATV(CVBS)	-	2D to 3D, S/S, T&B		
Component	-			
HDMI-PC	1080p	2D to 3D, S/S, T&B, C/B, R/I, C/I (60Hz : F/S)		
	Others	2D to 3D, S/S, T&B		
HDMI-DTV	Interlace	2D to 3D, S/S, T&B		
	Progressive	2D to 3D, S/S, T&B, C/B, R/I, C/I (60Hz : F/S)		
USB / DLNA (Movie)	704 x 480p (Over)	2D to 3D, S/S, T&B, C/B, R/I, C/I (60Hz : F/S)		
	704 x 480i (Over)	2D to 3D, S/S, T&B		
	704 x 480 (Under)	2D to 3D		
USB / DLNA (Photo)	320 x 240 (Over)	2D to 3D, S/S, T&B		
	320 x 240 (Under)	2D to 3D		
Miracast™ / WiDi	1024 x 768p			
	1280 x 720p	2D to 3D, S/S, T&B		
	1920 x 1080p			
	Others	2D to 3D		

EXTERNAL CONTROL DEVICE SETUP

To obtain the external control device setup information, please visit 'www.lg.com'.

MAINTENANCE

Cleaning Your TV

Clean your TV regularly to keep it at peak performance and to extend the product lifespan.



/!\ CAUTION

- Before Cleaning, turn the power off and disconnect the power cord and all other cables.
- When the TV is left unattended or unused for a long time, disconnect the power cord from the wall outlet to prevent possible damage from lightning or power surges.

Screen, frame, cabinet and stand

To remove dust or light dirt, wipe the surface with a dry, clean, and soft cloth.

To remove major dirt, wipe the surface with a soft cloth dampened in clean water or a diluted mild detergent. Then wipe immediately with a dry cloth.



- /İ\ CAUTION -

- · Do not push, rub, or hit the surface with your fingernail or a sharp object, as this may result in scratches on the screen and image distortions.
- · Do not use any chemicals, such as waxes, benzene, alcohol, thinners, insecticides, air fresheners, lubricants, as these may damage the screen's finish and cause discoloration.
- Do not spray liquid onto the surface. If water enters the TV, it may result in fire, electric shock, or malfunction.

Power cord

Remove the accumulated dust or dirt on the power cord regularly.

TROUBLESHOOTING

Problem	Solution
Cannot control the TV with the remote control.	 Check the remote control sensor on the product and try again. Check if there is any obstacle between the product and the remote control. Check if the batteries are still working and properly installed (to to to c).
No image display and no sound is produced.	 Check if the product is turned on. Check if the power cord is connected to a wall outlet. Check if there is a problem in the wall outlet by connecting other products.
The TV turns off suddenly.	 Check the power control settings. The power supply may be interrupted. Check if the Auto sleep feature is activated in the Time settings. If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity.

CHILD SAFETY:

It Makes A Difference How and Where You Use Your Flat Panel Display

Congratulations on your purchase! As you enjoy your new product, please keep these safety tips in mind:



THE ISSUE

- The home theater entertainment experience is a growing trend and larger flat panel displays are popular purchases. However, flat panel displays are not always supported on the proper stands or installed according to the manufacturer's recommendations.
- Flat panel displays that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests or carts may fall over and cause injury.

THIS MANUFACURER CARES!

• The consumer electronics industry is committed to making home entertainment enjoyable and safe.

TUNE INTO SAFETY

- One size does NOT fit all. Follow the manufacturer's recommendations for the safe installation and use of your flat panel display.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't allow children to climb on or play with furniture and television sets.
- Don't allow place flat panel displays on furniture that can easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger than life" flat panel display. Care should be taken to place or install the display where it cannot be pushed, pulled over, or knocked down.
- Care should be taken to route all cords and cables connected to the flat panel display so that they cannot be pulled or grabbed by curious children.

WALL MOUNTING: IF YOU DECIDE TO WALL MOUNT YOUR FLAT PANEL DISPLAY, ALWAYS:

- Use a mount that has been recommended by the display manufacturer and/or listed by an independent laboratory (such as UL, CSA, ETL).
- Follow all instructions supplied by the display and wall mount manufacturers.
- If you have any doubts about your ability to safely install your flat panel display, contact your retailer about professional installation.
- Make sure that the wall where you are mounting the display is appropriate. Some wall mounts are not designed to be mounted to walls with steel studs or old cinder block construction.
 If you are unsure, contact a professional installer.
- A minimum of two people are required for installation. Flat panel displays can be heavy







LG Customer Information Center

For inquires or comments, visit www.lg.com or call;

1-800-243-0000 USA, Consumer User

1-888-865-3026 USA, Commercial User

1-888-542-2623 CANADA

Register your product Online!

www.lg.com

The model and serial number of the TV is located on the back and one side of the TV.

Record it below should you ever need service.

MODEL			
SFRIAL			



This product qualifies for ENERGY STAR in the "factory default (Home Use)" setting.

Changing the factory default settings or enabling other features may increase power consumption that could exceed the limits necessary to quality for ENERGY STAR.



OWNER'S MANUAL

EXTERNAL CONTROL DEVICE SETUP

Please read this manual carefully before operating the set and retain it for future reference.

KEY CODES

• This feature is not available for all models.

Code (Hexa)	Function	Note	Code (Hexa)	Function	Note
00	CH +, PR +	R/C Button	45	Q.Menu	R/C Button
01	CH -, PR -	R/C Button	4C	List, - (ATSC Only)	R/C Button
02	Volume +	R/C Button	53	List	R/C Button
03	Volume -	R/C Button	5B	Exit	R/C Button
06	> (Arrow Key / Right Key)	R/C Button	61	Blue	R/C Button
07	< (Arrow Key / Left Key)	R/C Button	63	Yellow	R/C Button
08	Power	R/C Button	71	Green	R/C Button
09	Mute	R/C Button	72	Red	R/C Button
0B	Input	R/C Button	79	Ratio / Aspect Ratio	R/C Button
0E	SLEEP	R/C Button	91	AD (Audio Description)	R/C Button
0F	TV, TV/RAD	R/C Button	7A	User Guide	R/C Button
10 - 19	Number Key 0 - 9	R/C Button	7C	Smart / Home	R/C Button
1A	Q.View / Flashback	R/C Button	7E	SIMPLINK	R/C Button
1E	FAV (Favorite Channel)	R/C Button	8E	▶► (Forward)	R/C Button
20	Text (Teletext)	R/C Button	8F	◀ (Rewind)	R/C Button
21	T. Opt (Teletext Option)	R/C Button	AA	Info	R/C Button
28	Return (BACK)	R/C Button	AB	Program Guide	R/C Button
30	AV (Audio / Video) Mode	R/C Button	В0	► (Play)	R/C Button
39	Caption/Subtitle	R/C Button	B1	■ (Stop / Live TV)	R/C Button
40	Λ (Arrow Key / Cursor Up)	R/C Button	BA	II (Freeze / Slow Play / Pause)	R/C Button
41	V (Arrow Key / Cursor Down)	R/C Button	BD	• (REC)	R/C Button
42	My Apps	R/C Button	DC	3D	R/C Button
43	Menu / Settings	R/C Button	9F	App / *	R/C Button
44	OK / Enter	R/C Button			

^{*} Key code 4C (0x4C) is available on ATSC/ISDB models which use major/minor channel. (For South Korea, Japan, North America, Latin America except Colombia models)

EXTERNAL CONTROL DEVICE SETUP

· Image shown may differ from your TV.


Connect the USB to Serial converter/RS-232C input jack to an external control device (such as a computer or an A/V control system) to control the product's functions externally.

Note: The type of control port on the TV can be different between model series.

- * Please be advised that not all models support this type of connectivity.
- * Cable is not provided.

USB to Serial converter with USB Cable

USB Type

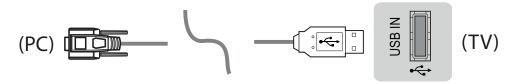


- LGTV supports PL2303 chip-based (Vendor ID: 0x0557, Product ID: 0x2008) USB to serial converter which is not made nor provided by LG.
- It can be purchased from computer stores that carry accessories for IT support professionals.


RS-232C with RS-232C Cable (Legacy)

Phone jack Type

- You need to purchase the phone-jack to RS-232 cable required for the connection between the PC and the TV, which is specified in the manual.
- * For other models, connect to the USB port.

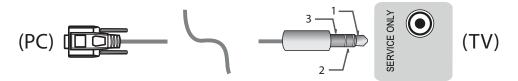


- This connection can only be used for the following models: 55/47/39LN5450-UA, 55/50/47/42LN5400-UA, 42/39/32LN5300-UA, and 37/32LN530B-UA.

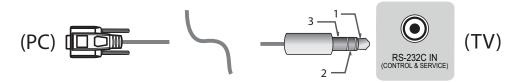


- This connection can only be used for the following models: 42/50PN4500-UA, 50/60PN5300-UF, 50/60PN6500-UA, and 60PN6550-UA.

Customer Computer

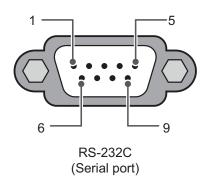

RS-232C configurations

3-Wire Configurations(Not standard)

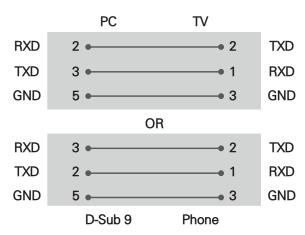

Set ID

For Set ID number, see "Real Data Mapping" on p.6

- 1. Press **SETTINGS** to access the main menus.
- 2. Press the Navigation buttons to scroll to **OPTION** and press **OK**.
- 3. Press the Navigation buttons to scroll to **SET ID** and press **OK**.
- 4. Scroll left or right to select a set ID number and select CLOSE. The adjustment range is 1-99.
- 5. When you are finished, press EXIT.

Communication Parameters

• Baud rate : 9600 bps (UART)

Data length: 8 bitsParity: None

• Stop bit : 1 bit

Communication code : ASCII codeUse a crossed (reverse) cable.

Command reference list

(Depending on model)

	COMMAND1	COMMAND2	DATA (Hexadecimal)		COMMAND1	COMMAND2	DATA (Hexadecimal)
01. Power off	k	а	00	13. Balance	k	t	00 to 64
02. Aspect Ratio	k	С	(p.7)	14. Color (Colour) Temperature	х	u	00 to 64
03. Screen Mute	k	d	(p.7)	15. ISM Method (Only Plasma TV)	j	p	(p.8)
04. Volume Mute	k	е	00 to 01	16. Energy Saving	j	q	00 to 05
05. Volume Control	k	f	00 to 64	17. Tune Command	m	а	(p.8)
06. Contrast	k	g	00 to 64	18. Channel (Programme) Add/Del(Skip)	m	b	00 to 01
07. Brightness	k	h	00 to 64	19. Key	m	С	Key Codes
08. Color/ Colour	k	i	00 to 64	20. Control Back Light, Control Panel Light	m	g	00 to 64
09. Tint	k	j	00 to 64	21. Input select (Main)	х	b	(p.10)
10. Sharpness	k	k	00 to 32	22. 3D (Only 3D models)	х	t	(p.11)
11. OSD Select	k	I	00 to 01	23. Extended 3D (Only 3D models)	х	v	(p.11)
12. Remote Control Lock Mode	k	m	00 to 01				

^{*} Note: During USB operations such as DivX or EMF, all commands except Power(ka) and Key(mc) are not executed and treated as NG.

Transmission / Receiving Protocol

Transmission

[Command1][Command2][][Set ID][][Data][Cr]

[Command 1]: First command to control the TV. (j, k, m or x)

[Command 2]: Second command to control the TV.

[Set ID] : You can adjust the [Set ID] to choose desired monitor ID number in option menu.

Adjustment range in TV is 1 to 99. If [Set ID] value is selected to '0', every connected set

can be controlled.

* [Set ID] is indicated as decimal (1 to 99) on menu and as Hexadecimal (0x00 to 0x63) on

transmission/receiving protocol.

[DATA] : To transmit command data (hexadecimal). Transmit 'FF' data to read status of command.

[Cr] : Carriage Return - ASCII code '0x0D'

[] : Space – ASCII code '0x20'

OK Acknowledgement

[Command2][][Set ID][][OK][Data][x]

* The set transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer.

Error Acknowledgement

[Command2][][Set ID][][NG][Data][x]

* The set transmits ACK (acknowledgement) based on this format when receiving abnormal data from non-viable functions or communication errors.

Data 00: Illegal Code

Real data mapping (Hexadecimal → Decimal)

- * When you enter the [data] in hexadecimal, refer to following conversion table.
- * Channel Tune (ma) Command uses two-byte hexadecimal value([data]) to select channel number.

 00 : Step 0
 32 : Step 50 (Set ID 50)
 FE : Step 254

 01 : Step 1 (Set ID 1)
 33 : Step 51 (Set ID 51)
 FF : Step 255

 ...
 ...
 ...

 0A : Step 10 (Set ID 10)
 63 : Step 99 (Set ID 99)
 01 00 : Step 256

 ...
 ...

 0F : Step 15 (Set ID 15)
 C7 : Step 199
 27 0E : Step 9998

 10 : Step 16 (Set ID 16)
 C8 : Step 200
 27 0F : Step 9999

- * Commands may work differently depending on model and signal.
- 01. Power (Command: k a)
- ► To control Power Off of the set.

Transmission[k][a][][Set ID][][Data][Cr]

Data 00: Power Off

Ack [a][][Set ID][][OK/NG][Data][x]

► To Show Power On. (Works TV is On Only)

Transmission [k][a][][Set ID][][FF][Cr]

Ack [a][][Set ID][][OK][01][x]

* Similarly, if other functions transmit 'FF' data based on this format, Acknowledgement feedback presents status about each function.

02. Aspect Ratio (Command: k c) (Main Picture Size)

► To adjust the screen format. (Main picture format) You can also adjust the screen format using the Aspect Ratio in the Q.MENU. or PICTURE menu.

Transmission [k][c][][Set ID][][Data][Cr]

Data 01: Normal screen 07: 14:9

(Europe, Colombia, Mid-East, (4:3)02 : Wide screen Asia except South Korea and Japan)

(16:9)

09: * Just Scan 04 : Zoom 05 : Zoom 2 0B: Full Wide

(Europe, Colombia, Mid-(Latin America East, Asia except South except Colombia Korea and Japan) Only)

06 : Set by Program/ 10 to 1F : Cinema Zoom 1 Original to 16

Ack [c][][Set ID][][OK/NG][Data][x]

- * Using the PC input, you select either 16:9 or 4:3 screen aspect ratio.
- * In DTV/HDMI/Component mode (high-definition), Just Scan is available.
- * Full wide mode may work differently based on model and is supported for DTV fully, and ATV, AV partially.

03. Screen Mute (Command: k d)

► To select screen mute on/off.

Transmission [k][d][][Set ID][][Data][Cr]

Data 00: Screen mute off (Picture on)

Video mute off

01: Screen mute on (Picture off)

10: Video mute on

Ack [d][][Set ID][][OK/NG][Data][x]

* In case of video mute on only, TV will display On Screen Display(OSD). But, in case of Screen mute on, TV will not display OSD.

04. Volume Mute (Command: k e)

➤ To control volume mute on/off. You can also adjust mute using the MUTE button on remote control.

Transmission [k][e][][Set ID][][Data][Cr]

Data 00: Volume mute on (Volume off)

01: Volume mute off (Volume on)

Ack [e][][Set ID][][OK/NG][Data][x]

05. Volume Control (Command: k f)

▶ To adjust volume.

You can also adjust volume with the volume buttons on remote control.

Transmission [k][f][][Set ID][][Data][Cr]

Data Min: 00 to Max: 64

Ack [f][][Set ID][][OK/NG][Data][x]

06. Contrast (Command: k g)

To adjust screen contrast.

You can also adjust contrast in the PICTURE

Transmission [k][g][][Set ID][][Data][Cr]

Data Min: 00 to Max: 64

Ack [g][][Set ID][][OK/NG][Data][x]

07. Brightness (Command: k h)

► To adjust screen brightness. You can also adjust brightness in the PICTURE

Transmission [k][h][][Set ID][][Data][Cr]

Data Min: 00 to Max: 64

Ack [h][][Set ID][][OK/NG][Data][x]

08. Color/Colour (Command: ki)

► To adjust the screen Color(Colour). You can also adjust colour in the PICTURE menu.

Transmission [k][i][][Set ID][][Data][Cr]

Data Min: 00 to Max: 64

Ack [i][][Set ID][][OK/NG][Data][x]

09. Tint (Command: k j)

To adjust the screen tint. You can also adjust tint in the PICTURE menu.

Transmission [k][j][][Set ID][][Data][Cr]

Data Red: 00 to Green: 64

Ack [j][][Set ID][][OK/NG][Data][x]

10. Sharpness (Command: k k)

➤ To adjust the screen sharpness. You can also adjust sharpness in the PICTURE menu.

Transmission [k][k][][Set ID][][Data][Cr]

Data Min: 00 to Max: 32

Ack [k][][Set ID][][OK/NG][Data][x]

11. OSD Select (Command: k I)

► To select OSD (On Screen Display) on/off when controlling remotely.

Transmission [k][l][][Set ID][][Data][Cr]

Data 01: OSD off 01: OSD on

Ack [I][][Set ID][][OK/NG][Data][x]

12. Remote control lock mode (Command: k m)

➤ To lock the front panel controls on the monitor and remote control.

Transmission [k][m][][Set ID][][Data][Cr]

Data 01 : Lock off 01 : Lock on

Ack [m][][Set ID][][OK/NG][Data][x]

* If you are not using the remote control, use this mode.

When main power is off & on (plug-off and plug-in, after 20 - 30 seconds), external control lock is released.

* In the standby mode (DC off by off timer or 'ka', 'mc' command), and if key lock is on, TV will not turn on by power on key of IR & Local Key.

13. Balance (Command: k t)

► To adjust balance.

You can also adjust balance in the AUDIO menu.

Transmission [k][t][][Set ID][][Data][Cr]

Data Min: 00 to Max: 64

Ack [t][][Set ID][][OK/NG][Data][x]

14. Color(Colour) Temperature (Command: x u)

➤ To adjust colour temperature. You can also adjust Color(Colour) Temperature in the PICTURE menu.

Transmission [x][u][][Set ID][][Data][Cr]

Data Min: 00 to Max: 64

Ack [u][][Set ID][][OK/NG][Data][x]

15. ISM Method (Command: j p) (Only Plasma TV)

► To control the ISM method. You can also adjust ISM Method in OPTION menu.

Transmission [j][p][][Set ID][][Data][Cr]

Data Min: 02: Orbiter

08: Normal

20: Color(Colour) Wash

Ack [p][][Set ID][][OK/NG][Data][x]

16. Energy Saving (Command: j q)

➤ To reduce the power consumption of the TV. You can also adjust Energy Saving in PICTURE menu.

Transmission [j][q][][Set ID][][Data][Cr]

Data

00 : Off

01: Minimum

02 : Medium

03: Maximum

04 : Auto

05: Screen off

* (Depending on model)

Ack [q][][Set ID][][OK/NG][Data][x]

17. Tune Command (Command: m a)

- This command may work differently depending on model and signal.
- For Europe, Mid-East, Colombia, Asia except South Korea and Japan, Model
- ► Select channel to following physical number.

Transmission [m][a][][Set ID][][Data 00][]
[Data 01][][Data 02][Cr]

* Analogue Terrestrial/Cable

[Data 00][Data 01] Channel Data Data 00: High byte channel data Data 01: Low byte channel data - 00 00 ~ 00 C7 (Decimal: 0 ~ 199)

Data 02 : Input Source (Analogue)

- 00 : Terrestrial TV (ATV)

- 80 : Cable TV (CATV)

* Digital Terrestrial/Cable/Satellite

[Data 00][Data 01]: Channel Data

Data 00 : High Channel data Data 01 : Low Channel data

- 00 00 ~ 27 0F (Decimal: 0 ~ 9999)

Data 02: Input Source (Digital)

- 10 : Terrestrial TV (DTV)

- 20 : Terrestrial Radio (Radio)

- 40 : Satellite TV (SDTV)

- 50 : Satellite Radio (S-Radio)

- 90 : Cable TV (CADTV)

- a0 : Cable Radio (CA-Radio)

- * Tune Command Examples:
- 1. Tune to the analogue terrestrial (PAL) Channel 10. Set ID = All = 00

Data 00 & 01 = Channel Data is 10 = 00 0a

Data 02 = Analogue Terrestrial TV = 00

Result = ma 00 00 0a 00

2. Tune to the digital terrestrial (DVB-T) Channel 01.

Set ID = AII = 00

Data 00 & 01 = Channel Data is 1 = 00 01

Data 02 = Digital Terrestrial TV = 10

Result = ma 00 00 01 10

3. Tune to the satellite (DVB-S) Channel 1000.

Set ID = AII = 00

Data 00 & 01 = Channel Data is 1000 = 03 E8

Data 02 = Digital Satellite TV = 40

Result = ma 00 03 E8 40

Ack [a][][Set ID][][OK][Data 00][Data 01] [Data 02][x][a][][Set ID][][NG][Data 00][x]

- For South Korea, North/Latin America except Colombia Model
- To tune channel to following physical/major/minor number.

Transmission [m][a][][0][][Data00][][Data01] [][Data02][][Data03][][Data04][][Data05][Cr]

Digital channels have a Physical, Major, and Minor channel number. The Physical number is the actual digital channel number, the Major is the number that the channel should be mapped to, and the Minor is the sub-channel. Since the ATSC tuner automatically maps the channel from the Major / Minor number, the Physical number is not required when sending a command in Digital.

* Analogue Terrestrial/Cable

Data 00: Physical Channel Number

- Terrestrial (ATV) : 02~45 (Decimal: 2 ~ 69)

- Cable (CATV): 01, 0E~7D (Decimal: 1, 14~125)

[Data 01 ~ 04]: Major/Minor Channel Number

Data 01 & 02: xx (Don't care) Data 03 & 04: xx (Don't care) Data 05: Input Source (Analogue)

- 00 : Terrestrial TV (ATV)

- 01 : Cable TV (CATV)

* Digital Terrestrial/Cable

Data 00: xx (Don't care)

[Data 01][Data 02]: Major Channel Number

Data 01: High byte Channel Data

Data 02 : Low byte Channel Data

- 00 01 ~ 27 0F (Decimal: 1 ~ 9999)

[Data 03][Data 04]: Minor Channel Number

Data 03 : High byte Channel Data Data 04 : Low byte Channel Data

Data 05: Input Source (Digital)

- 02 : Terrestrial TV (DTV) Use Physical Channel Number
- 06 : Cable TV (CADTV) Use Physical Channel Number
- 22 : Terrestrial TV (DTV) Don't Use Physical Channel Number
- 26 : Cable TV (CADTV) Don't Use Physical Channel Number
- 46 : Cable TV (CADTV) Use Major Channel Number Only (One Part Channel)

Two bytes are available for each major and minor channel data, but usually the low byte is used alone (high byte is 0).

- * Tune Command Examples:
- 1. Tune to the analogue cable (NTSC) channel 35.

Set ID = AII = 00

Data 00 = Channel Data is 35 = 23

Data 01 & 02 = No Major = 00 00

Data 03 & 04 = No Minor = 00 00

Data 05 = Analogue Cable TV = 01

Total = **ma 00 23 00 00 00 00 01**

2. Tune to the digital terrestrial (ATSC) channel 30-3.

Set ID = AII = 00

Data 00 = Don't know Physical = 00

Data 01 & 02 = Major is 30 = 00 1E

Data 03 & 04 = Minor is 3 = 00 03

Data 05 = Digital Terrestrial TV = 22 Total = **ma 00 00 00 1E 00 03 22**

Ack [a][][Set ID][][OK][Data 00][Data 01]

[Data 02][Data 03][Data 04][Data 05]

[x][a][][Set ID][][NG][Data 00][x]

- For Japan Model
- ➤ To tune channel to following physical/major/minor number.

Transmission [m][a][][0][][Data00][][Data01] [][Data02][][Data03][][Data04][][Data05][Cr]

* Digital Terrestrial/Satellite

Data 00: xx (Don't care)

[Data 01][Data 02]: Major Channel Number

Data 01: High byte Channel Data Data 02: Low byte Channel Data

- 00 01 ~ 27 0F (Decimal: 1 ~ 9999)

[Data 03][Data 04]: Minor/Branch Channel Number (Don't care in Satellite)

Data 03: High byte Channel Data Data 04: Low byte Channel Data

Data 05: Input Source (Digital/Satellite for Japan)

- 02 : Terrestrial TV (DTV)
- 07 : BS (Broadcasting Satellite)
- 08 : CS1 (Communication Satellite 1)
- 09 : CS2 (Communication Satellite 2)
- **Tune Command Examples:**
- 1 Tune to the digital terrestrial (ISDB-T) channel 17-1.

Set ID = AII = 00

Data 00 = Don't know Physical = 00

Data 01 & 02 = Major is 17 = 00 11

Data 03 & 04 = Minor/Branch is 1 = 00 01

Data 05 = Digital Terrestrial TV = 02

Total = ma 00 00 00 11 00 01 02

2. Tune to the BS (ISDB-BS) channel 30.

Set ID = AII = 00

Data 00 = Don't know Physical = 00

Data 01 & 02 = Major is 30 = 00 1E

Data 03 & 04 = Don't Care = 00 00

Data 05 = Digital BS TV = 07

Total = ma 00 00 00 1E 00 00 07

This feature is varied based on the model.

Ack [a][][Set ID][][OK][Data 00][Data 01]

[Data 02][Data 03][Data 04][Data 05]

[x][a][][Set ID][][NG][Data 00][x]

18. Channel(Programme) Add/Del(Skip)

(Command: m b)

► To skip current channel(programme) for next time.

Transmission [m][b][][Set ID][][Data][Cr]

Data 00 : Del(ATSC,ISDB)/Skip(DVB) 01 : Add

Ack [b][][Set ID][][OK/NG][Data][x]

 Set the saved channel status to del(ATSC, ISDB)/ skip(DVB) or add.

- 19. Key (Command: m c)
- To send IR remote key code.

Transmission [m][c][][Set ID][][Data][Cr]

Data Key code - p.2.

Ack [c][][Set ID][][OK/NG][Data][x]

20. Control Back Light (Command: m g)

For LCD TV / LED TV

▶ To control the back light.

Transmission [m][g][][Set ID][][Data][Cr]

Data Min: 00 to Max: 64

Ack [g][][Set ID][][OK/NG][Data][x]

Control Panel Light (Command: mg)

- For Plasma TV
- ► To control the panel light.

Transmission [m][g][][Set ID][][Data][Cr]

Data Min: 00 to Max: 64

Ack [g][][Set ID][][OK/NG][Data][x]

21. Input select (Command: x b) (Main Picture Input)

➤ To select input source for main picture.

Transmission [x][b][][Set ID][][Data][Cr]

Data

00: DTV 01: CADTV 02 : Satellite DTV 10: ATV

ISDB-BS (Japan)

03: ISDB-CS1 (Japan)

04: ISDB-CS2 (Japan)

11: CATV

20: AV or AV1 21: AV2

40 : Component1 41: Component2

90: HDMI1 91: HDMI2 92: HDMI3 93: HDMI4

Ack [b][][Set ID][][OK/NG][Data][x]

* This function depends on model and signal.

22. 3D(Command: x t) (only 3D models) (Depending on model)

► To change 3D mode for TV.

Transmission [x][t][][Set ID][][Data 00][][Data 01] [][Data 02][][Data 03][Cr]

Data Structure

[Data 00] 00:3D On

01:3D Off

02 : 3D to 2D

03: 2D to 3D

[Data 01] 00: Top and Bottom

01: Side by Side

02: Check Board

03 : Frame Sequential

04 : Column interleaving

05: Row interleaving

[Data 02] 00 : Right to Left

01: Left to Right

[Data 03] 3D Effect(3D Depth): Min: 00 - Max: 14 (*transmit by Hexadecimal code)

- If [Data 00] is 00 (3D On), [Data 03] has no meaning.
- * If [Data 00] is 01 (3D off) or 02 (3D to 2D), [Data 01], [Data 02] and [Data 03] have no meaning.
- * If [Data 00] is 03(2D to 3D), [Data 01] and [Data 02] have no meaning.
- * All 3D pattern options ([Data 01]) may not be available according to broadcasting/video signal.

[Data 00]	[Data 01]	[Data 02]	[Data 03]
00	0	0	Х
01	Х	Х	Х
02	Х	Х	Х
03	Х	Х	0

X: don't care

Ack [t][][Set ID][][OK][Data00][Data01][Data02]

[Data03][x]

[t][][Set ID][][NG][Data00][x]

- 23. Extended 3D(Command: x v) (only 3D models) (Depending on model)
- ► To change 3D option for TV.

Transmission [x][v][][Set ID][][Data 00][]
[Data 01][Cr]

[Data 00] 3D option

00: 3D Picture Correction

01: 3D Depth (3D Mode is Manual Only)

02:3D Viewpoint

06: 3D Color Correction

07: 3D Sound Zooming

08 : Normal Image View

09 : 3D Mode (Genre)

[Data 01] It has own range for each 3D option determined by [Data 00].

1) When [Data 00] is 00

00 : Right to Left

01: Left to Right

2) When [Data 00] is 01, 02

Data Min: 0 - Max: 14 (*transmit by Hexadecimal

code)

Data value range(0 - 20) converts Viewpoint range (-10 - +10) automatically (Depending on model)

3) When [Data 00] is 06, 07, 08

00 : Off 01 : On

4) When [Data 00] is 09

00 : Standard 01 : Sport 02 : Cinema 03 : Extreme

04: Manual

Ack [v][][Set ID][][OK][Data00][Data01][x] [v][][Set ID][][NG][Data00][x]






SMART TV Quick Setup Guide

- * Image shown may differ from your TV.
- * Image shown on a PC or mobile phone may vary depending on the Operating System (OS).

Wireless Network Connection



Wired Network Connection

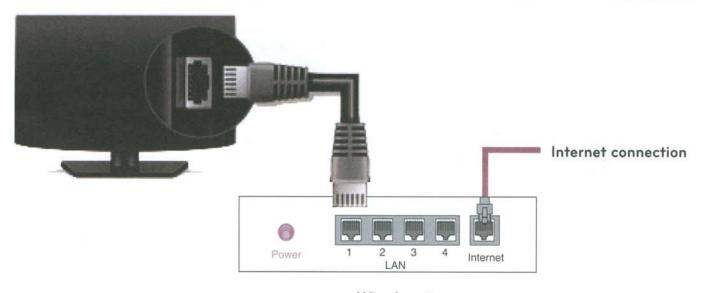

Wired router

P/NO: MBM63822502 (1301-REV00)

Printed in Mexico

NETWORK SETTING

Premium Apps are pre-installed on the TV. These may vary by country.

Press the **SMART \(\hat{\alpha} \)** button to access the Home menu. Select **Settings** and press **Wheel(OK)**.





Settings

2 Select the NETWORK Network Connection menu.



3 Select the Start Connection.




4 The device automatically tries to connect to the network available (wired network first).



If you select **Cancel** or it fails to connect to the network, the network list available is displayed. Choose the network you wish to use.



For wireless AP(Router) that have the $\widehat{\blacksquare}$ symbol, you need to enter the security key.

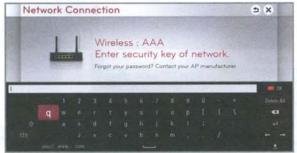

5 The connected network is displayed.
Select Complete to confirm the network connection.
If you select the Other Network List, the available network list is displayed again.



Troubleshooting Network Problems

Press the SMART button to access the Smart Home menu. Select Settings and press Wheel(OK).





Settings

2 Select the NETWORK → Network Status menu.



Follow the instructions below that correlate to your network status.

Check the TV or the AP(Router).



When an ✓ appears on TV, but an X on Gateway.

- Check the connection status of the TV, AP(Router) and cable modem.
- Power off and power on the TV, AP(Router) and cable modem.
- 3 If you are using a static IP, enter the IP directly.
- Contact internet companies or AP(Router) companies.
 - Additional points to check when using a wireless connection
 - Check the password for the wireless connection in the AP(Router) settings window.
 - Change the AP(Router) SSID (network name) or the wireless channel.

Check the AP(Router) or consult your Internet service provider.



When an ✓ appears on TV and Gateway, but an X on DNS.

- Unplug the power cord of the AP(Router), cable modem and try to connect after 5 seconds.
- Initialize(Reset) the AP(Router) or cable modem.
- Ocontact internet companies or AP(Router) companies.



When an ✓ appears on TV, Gateway and DNS, but an X on Internet.

- Unplug the power cord of the AP(Router), cable modem and try to connect after 5 seconds.
- 2 Initialize(Reset) the AP(Router) or cable modem.
- S Check that the MAC address of the TV/AP(Router) is registered with your Internet service provider. (The MAC address displayed on the right pane of the network status window should be registered with your Internet service provider.)
- Check the AP(Router) manufacturer's website to make sure your router has the latest firmware version installed.

SmartShare PC SW Installation & Setting

Install the SmartShare PC SW(DLNA) and SmartShare PC SW(MediaLink) program on your PC.

- 1 Go to www.lg.com. Then, select your region.
- 2 Select SUPPORT. Then, search for your model.
- 3 Select Drivers & Software or SOFTWARE UPDATE. Then, select SmartShare PC SW(DLNA)
- 4 You can run the program when installation is complete.



• DLNA service is only available if TV and other devices are connected via a single AP(Router).

DLNA Connection to Smartphone

- 1 Check that Wi-Fi is enabled on your smartphone. To use DLNA, both devices must on the same local network.
- 2 Install/run the app for sharing content on your smartphone (It's called SmartShare on LG phones).
- 3 Enable your smartphone to share content files with other devices.
- 4 Select the file type you want to play (movie, audio or photo).
- 5 Select a movie, music or photo file to play on the TV.
- 6 Add the selected file to the playlist.
- 7 Select a TV model name on which to play the files. (The TV model name is on a label on the side of the TV and in the customer support menu.)
- 8 Play the media file to view and enjoy it on your TV.

Updating the TV Firmware

HOME → Settings → SUPPORT → Software Update

By default, the TV will notify you of new software updates. You can use the Software Update menu to manually check for available updates.

Software Update	Set it to On . When an updated file is detected, the file is downloaded automatically.
Automatic Update Mode	If an update is available, the update automatically starts without prompting.
Check Update Version	Checks the latest update version installed. When a new update is available, the download process can be performed manually.

Tag On

(Depending on model)



Tag On is a data transmission technology that can be used on smartphones with NFC (Near Field Communication). Simply by tapping your smartphone to a Tag On sticker, you can share content between your smartphone and TV.

- To connect your smartphone to the TV using Tag On, they must be connected on the same Wi-Fi network or Miracast™/Intel's WiDi of the smart TV is set to On.
 - -Do not attach the sticker to a metal part of the TV. Otherwise, your smartphone cannot recognize the Tag On sticker.
 - -Do not crumple or fold the Tag On sticker. Otherwise, the Tag On is not recognized.
 - -To purchase a Tag On sticker, please contact the LG Electronics Service Center.
 - -This function is supported only on a smartphone with Android 4.0 (ICS) or later.

Wi-Fi Direct Setting

HOME → Settings → NETWORK → Wi-Fi Direct

If a local network is not available, you can connect a portable device directly to the TV using Wi-Fi Direct. With Smart Share, you can share files or screens of devices connected to **Wi-Fi Direct**.

[Device Screen]



- 1 If Wi-Fi Direct is set to On, a list of available devices appears.
 - » To use Wi-Fi Direct, go to Settings → NETWORK and set Wi-Fi Direct(a) to On.
- When you are prompted to request connection, select Yes.
 Wi-Fi Direct is now connected to your TV.

*If you are not using **Wi-Fi Direct** to minimize the interference between Wi-Fi devices, it is recommended to set **Wi-Fi Direct**(a) to **Off**. You can only use devices that support **Wi-Fi Direct**.

Miracast[™] Setting

Miracast allows a portable device to securely send video and sound to the TV wirelessly.

[Device Screen]



- 1 Miracast should be set to 'ON' on your mobile device And TV. Go to the Network settings to set the Miracast.
- 2 When your TV or portable device is detected, select the device.

WiDi (Wireless Display) Setting

Intel's WiDi (Wireless Display) technology enables easy and fast connection without wires or internet network for mirrored and dual monitor display on your TV. You can sit back and experience your favorite movies, videos, photos, online shows and more in full HD on your TV with great image clarity and sound.



NOTE

- When you connect the TV and laptop, you should set up TV mode for "Live TV" and " external input".
 If not, your computer cannot detect LG Smart TV.
- 1 Intel's WiDi is set to On. Connect your laptop to AP(Router). (Without AP, it is possible to use this function; it is recommended to connect to AP.) Your laptop runs the Intel WiDi program.
- 2 It detects LG Smart TVs available, which supports WiDi. In the list, select the TV you want and click Connect. Enter the number(a) shown on the screen into the input field(b) on your laptop and then click Continue. (4-digit number: under WiDi 3.1.29, 8-digit number: above WiDi 3.5)







[TV Screen]

[Notebook Screen]


- 3 The TV screen appears on the laptop screen. The wireless environment may affect the screen display. If the connection is poor, the Intel WiDi connection may be lost.
- * LG TVs do not need to register.
- * TV sound setting for Digital Sound Out is set to PCM.
- * For more information on Intel WiDi, visit 'http://intel.com/go/widi'.
- * On the Intel's WiDi, WiDi device is not searched. Close the Intel's WiDi, then search WiDi.
- * You can control your PC using the Magic Remote Control.
- * Intel's WiDi laptop is not appeared in the Miracast /WiDi menu in TV network menu.

On-Screen Remote

To use the Universal Control function (It may not be available depending on the country/model.)

With the Magic Remote Control, you can easily control your set-top box, Blu-ray player, home theater system, and Sound Bar.

- 1 Check if the device is connected to the TV.
- 2 After pressing the '/Q.MENU' button on the Magic Remote Control, select the device you want to control in the Change Device tab. The Screen Remote that can control the device appears.

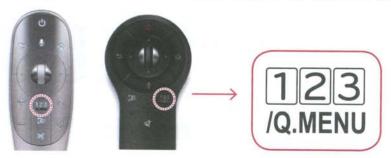

3 You can control external devices using the Screen Remote on the screen. (This may not work with the '123' button for some models.)






» c: Expand the ScreenRemote

» d: Exits the Screen Remote

» e : Moves the position of the ScreenRemote to left or right


4 Control external devices using the navigation keys, wheel (OK), or BACK button on the Magic Remote Control.

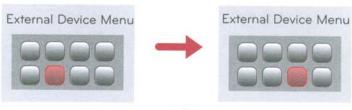



ENGLISH

How to use the Magic remote control

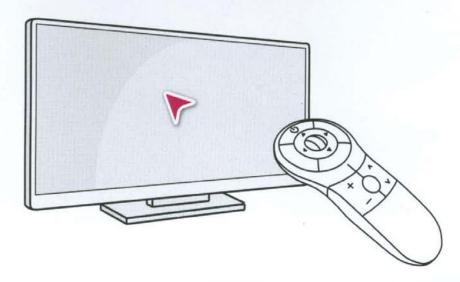


* To use the Magic remote control, pair it with your TV first.

How to register the Magic remote control





- 1 Put batteries into the Magic remote control and turn the TV on.
- 2 Point the Magic remote control at your TV and press the WHEEL (OK) on the remote control.
- If the TV fails to register the Magic remote control, try again after turning the TV off and back on.

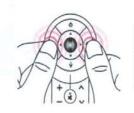

How to Re-register the Magic remote control

 Press the BACK and SMART at the same time, for five seconds, to unpair the Magic remote control with your TV.

How to use the Magic remote control pointer




- Shake the Magic remote control slightly to the right and left or press SMART♠, ℚ, □□□□ buttons to make the pointer appear on the screen.
- Shake the Magic remote control slightly to the right and left to make the pointer appear on the center of screen.
- · If the pointer has not been used for a certain period of time, it will disappear.



How to use the Magic remote control tip

- · The wheel also functions as the 'OK' button when pressed.
- You can change channels and scroll through menus using the Wheel.
- · You can just move your wrist to move the pointer instead of moving your whole arm.
- The Magic remote control depletes batteries faster than a normal remote due to the additional features. You may wish to use rechargeable batteries.
- If the pointer loses its calibration, set down the remote for a couple of minutes to let it recalibrate. Or you can re-register the remote.

* Image shown may differ from your product.

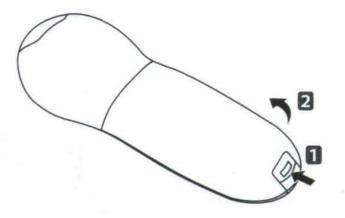

Installing Batteries


 Press the end of the battery cover, slide it back and lift the cover as shown below.



P/NO: MBM51168889(1301-REV01)

Magic Remote User Information

Model Name: AN-MR400G

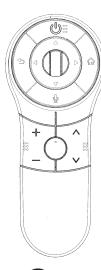



1. Introdução e especificações do controle remoto

(1) Introdução

Este controlo remoto é um produto similar a um rato sem-fios que permite controlar a TV. Difere dos outros telecomandos que podem apenas controlar os aparelhos em seu redor, este controlo remoto de 2.4GHz RF, por sua vez, pode controlá-los, sem limitação, dentro de um raio de 10m. (Suporte de

(2) Especificações

Item	Conteúdo
Nome do Modelo	AN-MR400G
Banda de Freqüência	2.400 GHz ~ 2.4835 GHz
Canais	79 canais
Saída de Transmissão	10 dBm
Sensibilidade de Recepção	-86 dBm
Tamanho	L 56.4 x E 33.2 x A 135.5 (tolerância ± 1 mm)
Peso	66,6 g ± 5 g (sem baterias)
Alimentação	AA 1.5 V, utiliza-se 2 pilhas alcalinas
Temperatura de uso	0 °C à 60 °C

 Após troca de pilhas deve emparelhar novamente o comando com a televisão, de acordo com o manual do aparelho. (2) Se o comando remoto não funcionar após a troca de pilhas, remova-as e tente novo emparelhamento de acordo com o

manual do controlo remoto.

(3) Se não utilizar o controlo remoto por alargados períodos é

recomendado remover as pilhas.
(4) Não desmonte ou aqueça as pilhas.

(5) Não deixe cair as pilhas ou que estão sofram qualquer

(6) Não molhe as pilhas.

Perigo de explosão se colocar as pilhas na posição errada. (8) Coloque as pilhas em local recomendado.

3. Suporte ao Cliente

Ver dados para contato impresso no Manual de TV.



Indice

1. Sumario y especificaciones del control remoto

목

1. 리모컨의 개요 및 제원 (1) 개 요

(2) 제 원 2. 주의 사항 3. 고객 지원

1. 리모컨의 개요 및 제원

게 요 이 리모컨은 사용자가 댁내에서 리모컨을 무선 마우스처럼 사용하여 TV를 제어할 수 있는 제품으로써, 기존 적외선 리모컨이 육안상에 위치한 제품을 제어했던 반면에 댁내 10m 이내에서 방향에 상관없이 제어할 수 있는 2.4 GHz대 RF 리모콘이다.(음성인식지원)

(2) 제 원

구 분	내 용
모 델 명	AN-MR400G
주파수 대역	2.400 GHz ~ 2.4835 GHz
채 널	79 채널
송 신 출 력	10 dBm
수 신 감 도	-86 dBm
크 기	폭 56.4 X 두께 33.2 X길이 135.5 (공차 ± 1 mm)
무 게	66,6 g ± 5 g (건전지 포함하지 않음)
전 원	AA 1.5 V, 알카라인 건전지 2개 사용
동작 온도	0 ℃ ~ 60 ℃

2. 주의 사항

(1) 건전지를 교체한 후에는 리모컨 사용법에 따라 페어링 후에 사용한다. (2) 건전지를 교체 후 동작하지 않는다면, 건전지를 제거 후

사용법에 따라 페어링을 재시도한다. (3) 장기간 리모컨을 사용하지 않는 경우, 건전지를 제거해

두는 것이 좋다.

(4) 건전지를 분해하거나, 열을 가해서는 안된다. (5) 건전지를 떨어뜨리거나, 케이스가 손상될 정도로 극심한 추격을 쥐서는 아되다

(6) 건전지를 물에 넣어서는 안된다.

(7) 건전지를 거꾸로 삽입시 폭발의 위험이 있다 (8) 지정된 장소에 사용한 건전지를 폐기 한다.

(1) Sumario

(2) Especificaciones 2. Precauciones

3. Soporte al cliente

1. Sumario y especificaciones

del control remoto

 Sumario
 Ste control remoto es un producto para controlar la TV usándolo como un raton inalámbrico dentro de la casa del usuario que, a diferencia de los controles remotos a rayo infrarrojo convencionales que controlaban los productos ubicados dentro del radio de la visión, es un control remoto RF de 2.4 GHz que puede controlar dentro de un radio de 10 m sin importar la dirección.(Reconocimiento de voz de apoyo)

(2) Especificaciones

Item	Contenido
Modelo	AN-MR400G
Banda de frecuencia	2.400 GHz ~ 2.4835 GHz
Canal	79 canales
Salida de transmisión	10 dBm
Grado de recepción	-86 dBm
Dimensiones	Ancho 56.4 x espesor 33.2 x largo 135.5 (Dif. ± 1 mm)
Peso	66,6 g ± 5 g (sin las pilas)
Energía	AA 1.5 V, 2 pilas alcalinas
Temperatura de operación	0 °C ~ 60 °C

2. Cuidados

(1) despues de colocar las pilas, hay que emparejar el mando con el televisor de acuerdo con las instrucciones.

(2) sin no funciona despues de colocar las pilas, reintente emparejar el mando.
(3) Si no utiliza el control remoto por un tiempo prolongado, es

recomendable quitar las pilas.

(4) No desarme las pilas ni aplique calor. (5) No deje caer las pilas ni golpee la caja para evitar dañarla

No sumerja las pilas en agua) No sumerja las pilas en agua) No coloque las pilas al revés ya que hay peligro de explosión.) Deseche las pilas usadas en los lugares establecidos.

3. Soporte al cliente

Vea las direcciones y los teléfonos de servicio en el manual de la

3. 고객 지원

TV 매뉴얼의 서비스 연락처를 참조하세요. TV 배뉴널의 시네ㅡ _____ [KCC 인증 마크 및 인증번호]

상 호 명 : 엘지전자(주) 인증번호 : KCC-CRM-LGE-MR400G 제조연월 : 2013. 제조자/제조국가 : 엘지전자(주)/대한민국 기자재의 명칭/모델명 : 특정소출력 무선기기(무선데이터통신시스템용 무선기기)/AN-MR400G

ENGLISH

Table of Contents

1. Overview and specification of the remote control (1) Overview

2) Specification

2. Précautions 3. Customer Support

1. Overview and Specifications for the Remote Control

(1) Overview

this remote uses RF(Radio Frequency) instead of IR (InfaRed light). this remote will operate within 10m of the tv and does not require it be pointed at the tv.(voice recognition support)

(2) Specifications

Categories	Details
Model No.	AN-MR400G
Range of frequency Channel	2.400 GHz ~ 2.4835 GHz 79 channels
Transmission output	10 dBm
Reception sensitivity	-86 dBm
Dimensions	Width 56.4 x Thickness 33.2 x Length 135.5 (tolerance of ± 1 mm)
Weight	66.6 g ± 5 g (excluding battery)
Power source	AA 1.5 V, 2 alkaline batteries are used
Operational temperature range	0 °C ~ 60 °C

目 录

1. 遥控器的概要及所有因素 (1) 概要

(2) 所有因素

2 注意事项

3. 客户服务

1. 遥控器的概要及所有因素

(1) 概要

该遥控器为用户可在家里仿佛 使用无线鼠标般调控 电视的产品, 相比现有红外线遥控器只可调 控位于 肉眼可看到的范围内产品,该遥控器是可以调控家 里10m以内, 并且从任何方向都可调控2.4 GHz 范 围内电视的RF遥控器。(支持语音识别)

(2) 所有因素

區分	内 容			
型号名称	AN-MR400G			
频率范围	2.400 GHz ~ 2.4835 GHz			
频道	79 频道			
输出功率	10 dBm			
灵敏度	-86 dBm			
大小	宽度 56.4 x 厚度 33.2 x 长度 135.5 (公差±1 mm)			
重量	66.6 g ±5 g (不包括干电池)			
电源	AA 1.5 V, 使用2个碱性干电池			
动作温度	0 °C ~ 60 °C			

2. 注意事项

(1) 更换电池后 请在根据遥控器使用方法调配后使用。 (2) 更换电池后如无法正常使用

请在取下电池后再次做好调配。 (3) 长期停止使用遥控器时,最好取下电池。

(4) 不得分解电池或对电池加热。 (5) 不得掉落电池或施加可能造成盖

子受损程度的严重冲击。 (6) 不得将电池放入水中。

2. Precautions

(1) After replacement of the battery, use the remote control following pairing in accordance with user manual.

(2) If the unit does not operate after replacement of battery, take the battery out and reattempt pairing in accordance with the user manual

(3) If the remote controller is not being used for prolonged period of time, it is recommended you remove the battery from the unit.

(4) Do not dismantle or exert heat to the battery.

(5) Do not drop battery or exert extreme impact that may ever cause the case to be damaged.

Do not immerse the battery in water.

(8) Properly dispose of used batteries.

3. Customer Support

Refer to the contact number for services provided in the TV



Inhalt

1. Beschreibung und technische Spezifikation der Fernbedienung

(1) Beschreibung (2) Technische Spezifikation

2. Warnhinweise

3. Kundendienst

Beschreibung und technische Spezifikation der Fernbedienung

(1) Beschreibung Die Fernbedienung kann wie eine schnurlose Maus verwendet werden um den Fernseher zu bedienen. Im Gegensatz zu herkömmlichen Fernbedienungen mit denen der Fernseher nur aus kurzer Distanz bedient werden kann, kann man mit dieser RF Fernbedienung mit ihrem 2.4 GHz Frequenzbereich den Fernseher von irgendeiner beliebigen Richtung aus in Ihrem Haus und bei einem Abstand von bis zu 10 m bedienen, (Voice Recognition Unterstützung)

(7) 电池反讨来插入时

3. 客户服务

TRADITIONAL CHINESE 中文繁體

有发生爆炸的危险

(8) 干电池要废弃到指定场所。

请参照TV说明书的服务联络处。

1. 遙控器概要說明與規格表

1. 遙控器概要說明與規格表

無線接收器讓用戶在家享有使用

相較現有的紅外線遙控器僅能控制 在肉眼可視範圍內, 此無線遙控器

從任何方向均能操控手中的遙控器。

内 容

AN-MR400G

2,400 GHz ~ 2,4835 GHz

79 頻道

10 dBm

-86 dBm

寬度 56.4 x 厚度 33.2 x 長度 135.5 (公差±1 mm)

66.6 g ±5 g (不包括乾電池)

AA 15 V

使用2個鹼性乾電池

0 °C ~ 60 °C

無線滑鼠般的無線操控電視

遙控範圍在家中10公尺以内

(此遙控器支援語音識別功能)

(1) 概要說明

(2) 規格表

2. 注意事項

3. 客戶服務

(1) 概要

(2) 規格表

區分

型號名稱

頻率節圍

頫道

輸出功率

靈敏度

大小

重量

電源

動作溫度

目

Kategorie	Details
Modell	AN-MR400G
Frequenzbereich	2.400 GHz ~ 2.4835 GHz
Kanal	Kanal 79
Sendeleistung	10 dBm
Empfängerleistung	-86 dBm

Größe (Abweichung ± 1 mm) 66.6 g ± 5 g (ohne Batterien) Gewicht

Breite 56.4 x Höhe 33.2 x Länge 135.5

AA 1.5 V, 2 Alkali-Batterien werden benötigt Energieguelle 0 °C ~ 60 °C Arbeitstemperatur

2. Warnhinweise

Nachdem Sie die Batterien ausgetauscht haben, verwender Sie die Fernbedienung der Beschreibung folgend.

 Wenn die Fernbedienung nach dem Batterienwechsel nicht funktioniert, nehmen Sie die Batterien nocheinmal heraus und setzen Sie sie ordnungsgemäß ein.
(3) Wenn Sie die Fernbedienung für längere Zeit nicht benutzen,

ist es besser die Batterien herauszunehmen. (4) Zerlegen und erhitzen Sie die Batterien nicht.

(5) Lassen Sie die Batterien nicht fallen und üben Sie keinen übermäßigen Druck auf die Fernbedienung aus.

(6) Die Batterien sollen keinen Kontakt mit Wasser haben. (7) Es besteht Explosionsgefahr wenn Sie die Batterien verkehrt

(8) Entsorgen Sie die Batterien an einem dafür vorgesehenen Ort.

3. Kundendienst

Die Kundendienst Rufnummer finden Sie in der Bedienungsanleitung des Fernsehers



Table des matières

1. Aperçu et spécifications de la

télécommande 1) Aperçu

2) Spécifications

2. Précautions d'emploi 3. Support client

télécommande

1. Aperçu et spécifications de la

(1) Aperçu Cette télécommande vous permet de contrôler votre téléviseur en l'utilisant comme une souris sans fil. Avec cette télécommande qui utilise la radiofréquence 2.4Ghz, contrôlez votre écran jusqu'à une portée de 10m (reconnaissance vocale incluse).

remoto (1) Introdução

PORTUGUESE PORTUGUES

(2) Especificações 2. Cuidados

(2) Spécifications

Catégorie

Nom de modèle

Zone de fréquences

Chaîne

Puissance pour l'envo

Réceptivité

Dimensions (mm)

Poids (q)

Température de fonctionnem

2. Précautions

Contenu

AN-MR400G

2.400 GHz ~ 2.4835 GHz

79 chaînes

10 dBm

-86 dBm

56.4 (L) x 33.2 (L) x 135.5 (E) (tolérances ± 1)

66 6 ± 5

AA 1.5 V, 2 piles alcalines

0 °C à 60 °C

(1) Après avoir changé de batterie, procédez à la synchronisation

de la télécommande en suivant le mode d'emploi.

nouveau l'appareillement suivant le mode d'emploi.

longue période, il vaut mieux enlever la batterie.

(4) Ne pas laisser les piles près d'une source de chaleur

(7) vous introduisez les piles à l'envers il y a un risque de

(8) Les piles usées doivent être jetées dans un endroit adapté

Veuillez consulter les coordonnées du service affichées dans le

Índice

1. Introdução e especificações do controlo

(6) Ne pas mettre les piles dans de l'eau

déterioration ou d'explosion

3. Support client

(3) En cas de non utilisation de la télécommande pendant une

(5) Ne faîtes pas subir de chocs à la télécommande, cela pourrait endommager son boitier et son fonctionnement.

(2) Si la télécommande ne fonctionne pas même après avoir changé de batterie, enlevez cette dernière, puis essayez à

(non incluant les piles)

3. Suporte ao Cliente

2. 注意事項

(1) 更換電池後, 請同時參照遙控器的說明文件。 (2) 更換電池後若無法正常使用, 請將電池拔除再次裝上。

(3) 若長時間不使用遙控器

請取下電池。 (4)請勿自行拆解電池本體或對電池加溫。 (5)電池脱落或使力過大將造成遙控器背蓋受損。

(6) 請勿將產品浸水。 (7) 電池倒反插時, 有可能造成爆炸的危險。

(8) 廢棄電池請回收到指定地點。 3. 客戶服務

請參照TV說明書内的服務聯絡電話。

Содержание

1. Краткое описание и технические параметры Дистанционного пульта управления

(1) Краткое описание(2) Технические параметры

2. Меры предосторожности 3. Техническая поддержка

1. Краткое описание и технические параметры пульта дистанционного управления

(1) Краткое описание Данный дистанционный пульт управления может быть использован для управления телевизором подобно беспроводной мышки для компьютера, имеет радиочастоту в 2.4ГГц и в отличие от прежних моделей инфракрасных пультов, которые позволяли управлять только в пределах видимости, эта модель позволяет управлять в любом направлении в доме в радиусе 10 метров (поддержка функции распознавания голоса).

(2) Технические параметры

Название	Содержание	
Название модели	AN-MR400G	
Диапазон радио частот	2.400 GHz ~ 2.4835 GHz	
Каналы	79 каналов	
Мощность сигнала	10 дБм	

Чувствительность сигнала -86 дБм Ширина 56.4x Толщина 33.2 x Длина 135.5 (допуск ± 1мм) Размерь 66.6 гр. ± 5 гр Bec (без батареек) AA 1.5 V. Источник питания щелочные батарейки 2 шт 0 °C ~ 60 °C Рабочая температура

2. Меры предосторожности:

(1) При замене батарей необходимо следовать инструкции по

применению пульта дистанционного управления.
(2) Если пульт не работает после замены батарей, необходимо вытащить их и ещё раз установить в

оответствии с инструкцией.
(3) Если пульт не используется в течение длительного времени, необходимо вытащить батареи.
(4) Не разбирайте и не подвергайте батареи воздействию

 (4) Пе разоправте и не подрерганте обтарен возденствию высоких температур.
 (5) Не подверганте продукт излишнему механическому воздеиствию, которое может привести к повреждению продукта.

продукта. (б) Избегать контакта батареи с водой. (7) Если батареи установлены неправильно, существует опасность повреждения устройства. (8) Использованные батареи необходимо выбрасывать в пециально отведённые места

3. Техническая поддержка

По вопросам эксплуатации изделия и сервисного обслуживания обращайтесь в службу поддержки клиентов по телефонам, указанным в инструкции по эксплуатации телевизора



目 次

1. リモコンの 概要と仕様 (1) 概要

(2) 仕様

2. 注意事項 3. カスタマーサ ービス

1. リモコンの概要と仕様

概要 マジックリモコンは、ワイヤレスマウスのように使用してテレビ を操作できます。従来の赤弁線リモコンでは、テレビの受先部 にリモコンを向け、操作すると数かありましたが、ジックリモ コンは、249は周波陵等を使用した無能を利用することで、リ モユーの向きを思いすることが、は作することができます。(10 ロ以内の距離で操作することが可能です。音声認識機能もサ ポート・アナモ

2. 注意事項

(1) 指定以外の乾電池は使用しないでください。 (2) 電池の交換後に、テレビを操作できない場合は マジックリモコンの取扱説明書に従ってペアリングを

クリモコンを長期間使用しないときは乾電池の 消耗をさけるために、乾電池を取り出しておいてください。 (4)表示されている「使用推奨期限」を過ぎた乾電池や 使い切った乾電池はマジックリモコンに入れておかないで

くたさい。 (5) 傷ついたり、変形、液漏れした乾電池を使用しないでください (5)傷ついてり、変形、液調化した毛电池と医師しない、いことで。 (6)小さなお子様が使用される場合、乾電池のセットおよび取り出しは、保護者の方が行ってください。 (7)極端な温度条件下で保管しないでください。

(8) 強い衝撃を与えないでください。 (9) 乾電池を廃棄するときは地域の条例に従ってください。

3 カスタマーサービス

※本紙の別項目に記載されたカスタマーサ ートセンターの連絡先を参照してください。

(1) KCC Statement(한국)

'제작자 및 설치자는 해당 무선설비가 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없음'

(2) NCC Statement(Taiwan) 根據NCC低功率電波輻射性電機管 理辦法規定 1) 第十二條 經型式認體合格之低功率射頻電機 非經許可,公司 商號或使用者均不

导擅自變更頻率 加大功率或變更原

direktiver.

R&TTF-direktiv 1999/5/EC

設計ク特性及功能

De produkter, der er beskrevet ovenfor, overholder de vigtigste krav i de angivne direktiver.

Europæisk repræsentant:

LG Electronics Inc. Krijgsman 1, 1186 DM Amstelveen,

(6-12) SUOMI

EU-vaatimustenmukaisuusilmoitus: LG Electronics vakuuttaa täten, että tämä tuote on seuraavien direktiivien mukainen:

R&TTE-direktiivi 1999/5/EC

Edellä mainitut tuotteet ovat eriteltyjen direktiivien oleellisten vaatimusten mukaisia.

Edustaja Euroopassa: LG Electronics Inc. Krijgsman 1, 1186 DM Amstelveen, Alankomaat

(6-13) EESTI EÜ vastavuskinnitus: Käesolevaga kinnitab LG Electronics, et see toode ühildub järg-miste

direktiividega... Raadioseadmete ja telekommunikatsioonivõrgu lõppseadmete direktiiv 1999/5/EÜ

Eelnimetatud tooted vastavad märgitud direktiivide

Euroopa esindus: LG Electronics Inc. Krijgsman 1, 1186 DM Amstelveen, Holland

(6-14) LIETUVIŲ K

EB atitikties deklaracija: "LG Electronics" pareiškia, kad šis produktas atitinka tokias direktyvas.

R&TTE direktyva 1999/5/EB

Aukščiau įvardinti produktai atitinka nurodytų direktyvų esminius reikalavimus.

Atstovas Europoje: LG Electronics Inc. Krijgsman 1, 1186 DM Amstelveen, Nyderlandai

(6-15) LATVIEŠU

Pazinojums par atbilstību ES direktīvām: LG Electronics ar šo paziņo, ka šis izstrādājums atbilst turpmāk minētajām

the FCC rules.

2) 第十四條 ポーロペ 低功率射頻電機之使用不得影響飛航安全或干擾 合法通信: 經發現有干擾現象時, 應立即停用, 並 改善至無干擾時方得繼續使用前項合法通信,指依 電信法規定作業之無線電通信低功率射頻電機須 忍受合法通信或工業 科學及醫療用電波輻射性電

(3) ANATEL Statement (Para Brazil)

Este equipamento opera em caráter secundário, isto é, não tem direito à proteção contra interferência prejudicial, mesmo de estações do mesmo tipo e não pode causar interferência a sistemas operando em caráter primário.

(4) Federal Communications Commission(FCC) Statement You are cautioned that changes or modifications not expressly

approved by the part responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -. Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation of the

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment and For indoor use only, use outdoors or in other modes not covered by this manual may violate the FCC regulation and violate the user authority to use the product.

R&TTE direktīva 1999/5/EK

Iepriekš aprakstītie izstrādājumi atbilst norādīto direktīvu būtiskajām prasībām

Pärstävniecība Eiropā: LG Electronics Inc. Krijgsman 1, 1186 DM Amstelveen, Niderlande

(6-16) SLOVENŠČINA

Izjava o skladnosti EU: LG Electronics izjavlja, da je ta izdelek v skladu z naslednimi direktivami.

Direktiva 1999/5/ES o radijski opremi in telekomunikacijski terminalski opremi ter medsebojnem prizna-vanju skladnosti te opreme

Zgoraj opisani izdelki izpolnjujejo bistvene zahteve navedenih

Evropski zastopnik:

LG Electronics Krijgsman 1, 1186 DM Amstelveen, Nizozemska

Napomena o usklađenosti sa standardima: LG Electronics ovim izjavljuje da je ovaj proizvod usklađen sa sledećim direktivama:

R&TTE direktiva 1999/5/EC

Prethodno opisani proizvodi usklađeni su s osnovnim zahtevima iz

Evropski predstavnik: LG Electronics Inc. Krijgsman 1, 1186 DM een, Holandija

(6-18) HRVATSKI

Napomena o sukladnosti s EU standardima: LG Electronics ovim putem izjavljuje da je ovaj proizvod sukladan sljedećim Direktivama.

R&TTE direktiva 1999/5/EC

Gore opisan proizvod sukladan je osnovnim zahtjevima navedenih direktiva.

Zastupnik za Europu:

LG Electronics Krijgsman 1, 1186 DM Amstelveen, Nizozemska

(6-19) TÜRKCE AB Uygunluk Bildirimi: LG Electronics, burada bu ürünün aşağıdaki Direktifler ile uyumlu olduğunu beyan eder. R&TTE Direktifi 1999/5/EC

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

(5) Industry Canada(IC) Statement

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: 1) this device may not cause interference and this device must accept any interference. Including interference that may cause undesired operation of device

Avis d'Industrie Canada

Cet appareil est conforme à norme CNR-210 des règlements d'Industrie Canada. Son fonctionnement est sujet aux deux conditions suivantes.

1) Cet appareil ne doit pas provoquer d'interférences et 2) Cet appareil doit accepter toute les interférences, y compris

celles pouvant entraîner son dys-fonctionnement.

IC Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. NOTE: THE MANUFACTURERE IS NO T RESPONSIBLE FOR ANY RADIO

OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS FOLITIMENT SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE FOLIPMENT.

Avis d'Industrie Canada sur I'exposition aux

Cet appareil est conforme aux limites d'exposition aux

rayonnements d'Industrie Canaca pour unenvironnement non REMARQUE

LE FABRICANT N'EST PAS RESPONSIBLE DES INTERFÉRENCES RADIOÉ ECTRIOLES CAUSÉES PAR DES MODIFICATIONS NON AUTORISÉES APPORTÉES APPORTÉES À CET APPAREIL. DE TELLES MODIFICATIONS POURRAIT ANNULER L'AUTORISATION ACCORDÉE À L'UTILISATEUR DE FAIRE FONCTIONNER L'APPAREIL.

COFFTEI (Mexico)

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause

interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Yukarıda anlatılan ürünler, belirtilen direktiflerin gereklilikleri ile uvumludur.

Avrupa temsilciliği

LG Electronics Krijgsman 1, 1186 DM Amstelveen, Hollanda (6-20) SHOIF

DeklarataDeklarata e Konformitetit për BE-në: LG Electronics nëpërmjet kësaj deklaron se ky produkt është në përputhje me Direktivat e mëposhtme.

Direktivën R&TTE 1999/5/KE

Produktet e përshkruara më lart përputhen me kërkesat thelbësore të direktivave të specifikuara.

LG Electronics Krijgsman 1, 1186 DM Amstelveen, Holandë

(6-21) BOSANSKI

Napomena o usklađenosti sa propisima EU: LG Electronics ovim putem izjavljuje da je ovaj proizvodusklađen sa sljedećim direktivama:

Direktiva o radijskoj opremi i telekomunikacijskoj terminalnoj opremi 1999/5/EC

Opisani proizvodi usklađeni su sa ključnim zahtjevima navedenih direktiva.

Predstavnik za Europu:

LG Electronics Krijgsman 1, 1186 DM Amstelveen, Holandija

(6-22) MACEDONTAN

Известување за усогласеност со EV: LG Flectronics јавно изјавува дека овој производ е во согласност со следните

R&TTE директива 1999/5/EC

Производите опишани погоре ги исполнуваат основните услови од посочените директиви.

Европски претставник: LG Electronics Inc. Krijgsman 1, 1186 DM Amstelveen. The Netherlands

EO сәйкестік туралы ескертуі: LG Electronics осы құжат арқылы бұл құрылғының мына директиваларға сай екенін мәлімлейлі.

Радио және телекоммуникациялық жабдықтардың 1999/5/ЕС липективасы

2) CE Notified Body statement:

(6) CF Statement

CF conformity Notice

R&TTE Directive 1999/5/EC

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures. Explosive device proximity warning - Do not operate a portable transmitter (such as a wireless network device) near unshielded blasting caps or in an explosive environment unless the device has been modified to be qualified for such use. This CF marking is valid for FU non-harmonized telecommunications products R&TTE Directive (1999/5/EC)

LG Electronics hereby declares that this product is in

The products described above comply with the essential

This device is a 2.4 GHz wideband transmission system

intended for use in all EU member states and EFTA countries

European representative: LG Electronics Inc. Krijgsman 1, 1186

compliance with the following Directives.

requirements of the directives specified.

DM Amstelveen. The Netherlands

issued by the Commission of the European Community

3) Certification Marking

C € 0197

(6-1) DEUTSCH EU-Konformitätserklärung: LG Electronics erklärt hiermit,

dass dieses Produkt den folgenden Richtlinien entspricht: R&TTE-Richtlinie 1999/5/EC

Die oben beschriebenen Produkte entsprechen den grundlegenden Anforderungen der angegebenen Richtlinien. Vertreter für Europa: LG Electronics Inc. Krijgsman 1, 1186 DM

Amstelveen, Niederlande (6-2) FRANCAIS

Notice de conformité UE: LG Electronics atteste que ces produits est en conformité avec les Directives suivantes. Directive 1999/5/CE des R&TTE

Les produits décrits ci-dessus sont en conformité avec les exigences essentiels des directives spéci-fiées.

Жоғарыда сипатталған өнімдер көрсетілген директивалардың негізгі талаптарына сай келеді.

Еуропадағы өкілдік: LG Electronics Inc. Krijgsman 1, 1186 DM Amstelveen. Нидерланд

(6-24) РУССКИЙ

Уведомление о соответствии нормам EC: Компания LG Electronics настоящим заявляет о том, что данное изделие соответствует следующим директивам.

Директива R&TTE 1999/5/EC

Описанные выше изделия соответствуют основным требованиям указанных директив.

LG Electronics Krijgsman 1, 1186 DM Amstelveen, Нидерланды

(6-25) Українська

Підтвердження відповідності стандартам ЄС: Цим компанія LG Electronics підтверджує відповідність цього продукту вимогам директив, що перелічені нижче.

Директива R&TTE, 1999/5/EC

Описані вище продукти відповідають основним вимогам вказаних лиректив.

Уповноважена особа у Європі: LG Electronics Krijgsman 1, 1186 DM Amstelveen, Нідерланди

(6-26) POLSKI

Deklaracja zgodności z normami UE: Firma LG Electronics niniejszym zaświadcza, że ten produkt spełnia wymagania poniższych dyrektyw.

Dyrektywa 1999/5/WE w sprawie urządzeń radiowych i końcowych urządzeń telekomunikacyjnych

Powyżej wymienione produkty spełniają zasadnicze wymagania wymienionych dyrektyw. Przedstawiciel na Europe:

Prohlášení o shodě s legislativou EU: Společnost LG Electronics tímto prohlašuje, že tento výrobek je ve shodě s následujícími směrnicemi.

LG Electronics Krijgsman 1, 1186 DM Amstelveen, Holandia

Směrnice o radiokomunikačních a telekomunikačních koncových zařízeních 1999/5/FC

DM Amstelveen, Pays-Bas (6-3) ITALIANO

Avviso di conformità EU: LG dichiara che questo prodotto è conforme alle sequenti direttive

Représentant en Europe : LG Electronics Inc. Krijgsman 1, 1186

Direttiva R&TTE 1999/5/CE

I prodotti descritti sopra sono conformi ai requisiti essenziali delle direttive specificate.

Rappresentante europeo: LG Electronics Inc. Kriigsman 1, 1186 DM Amstelveen, Paesi Bassi

(6-4) ESPAÑOL

Aviso de conformidad con la UE: Por la presente, LG Electronics declara que este producto cumple con las siguientes Directiva sobre equipos radioeléctricos y equipos terminales de

telecomunicación 1999/5/CE

Los productos descritos anteriormente cumplen con los requisitos esenciales de las directivas especifi-cadas.

Rappresentante europeo: LG Electronics Inc. Krijgsman 1, 1186 DM Amstelveen Países Baios

(6-5) PORTUGUÊS

Aviso de conformidade da UE: A LG Electronics declara por este meio que este produto está em conformidade com as sequintes Directivas.

Directiva R&TTE 1999/5/CE

R&TTE-richtlijn 1999/5/EC

Os produtos acima descritos estão em conformidade com os requisitos essenciais das directivas espe-cificadas.

Rappresentante europeo: LG Electronics Inc. Krijgsman 1, 1186

(6-6) NEDERLANDS Conformiteitsverklaring (EU): LG verklaart hierbij dat dit product voldoet aan de volgende richtlijnen.

De hierboven genoemde producten voldoen aan de essentiële voorwaarden van de gespecificeerde richtlijnen

Europees hoofdkantoor: LG Electronics Inc. Krijgsman 1, 1186 DM Amstelveen Nederland

Výše popisované produkty isou v souladu se základními

Zastoupení v Evropě: LG Electronics Krijgsman 1, 1186 DM Amstelveen, Nizozemsko

(6-28) SLOVENSKY

požadavky uvedených směrnic.

Vyhlásenie o zhode pre oblasť EÚ: Spoločnosť LG Electronics týmto vyhlasuje, že tento výrobok dosahuje súlad s nasledujúcimi

Smemica R&TTE 1999/5/ES

Vyššie popísané výrobky vyhovujú základným požiadavkám uvedených smerníc.

Furónske zastuniteľstvo: LG Electronics Krijgsman 1, 1186 DM Amstelveen, Holandsko

(6-29) ROMANESTE Declarat ie de conformitate UE: Prin prezenta, LG Electronics declara" ca" acest produs este conform cu urma toarele

Directive. Directiva R&TTE 1999/5/CE

Produsul descris mai sus este conform cu cerint, ele esent, iale ale directivelor specificate.

Reprezentant european: LG Electronics Krijgsman 1, 1186 DM Amstelveen, Olanda


(6-30) БЪЛГАРСКИ

Бележка относно съответствие с нормите на ЕС: С настоящото LG Electronics декларира, че този продукт съответства на следните директиви.

R&TTE директива 1999/5/EC

Описаният по-горе продукт съответства на основните изисквания на посочените директиви. Европейски представител LG Electronics Krijgsman 1, 1186 DM Amstelveen, Нидерландия

(7) Japan

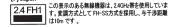

< 本製品の使用上の注意事項>

この機器の使用周波数帯では、電子レンジ等の産業・科学・医療用 構内無線局(免許を要する無線局)及び特定小電力無線局(免許を

απαπήσεις των ανωτέρω οδηγιών.

Τα παραπάνω προϊόντα συμμορφώνονται με τις ουσιώδεις

παρόν προϊόν συμμορφώνεται με τις εξής Οδηγίες:

Ευρωπαϊκός αντιπρόσωπος:

Δήλωση συμμόρφωσης Ε.Ε.: Η LG Electronics δηλώνει ότι το

Οδηγία 1999/5/ΕΚ περί Ραδιοεξοπλισμού και Τηλεπικοινωνιακού

LG Electronics Krijgsman 1, 1186 DM Amstelveen, Okkovõia

(6-7) EAAHNTICA:

EU megfelelőségi nyilatkozat: AZ LG Electronics ezúton kijelenti, hogy a terma termék megfelel a következő irányelvk

1999/5/EK R&TTE iránvelv

Τερματικού Εξοπλισμού (R&TTE)

A fentiekben bemutatott termékek teljesítik a megadott irányelvek alapyető előírásait. Európai képviselet:

LG Electrorics Krijgsman 1, 1186 DM Amstelveen, Hollandia

Europeisk representant: LG Electronics Inc. Krijgsman 1, 1186

Samsvarsmerknad for EU: LG Electronics erklærer herved at dette produktet er i henhold til de følgende direktivene.

Produktene som beskrives ovenfor, overholder kravene i de angitte direktivene.

Europeisk representant: LG Electronics Inc. Krijgsman 1, 1186 DM Amstelveen, Nederland

(6-11) DANSK

EU-overensstemmelseserklæring: LG Electronics

要しない無線局)並びにアマチュア無線局(免許を要する無線局)が

1 この機器を使用する前に、近くで移動体識別用の構内無線局及 び特定小電力無線局並びにアマチュア無線局が運用されていな いことを確認して下さい。

き、混信回避のための処置等(例えば、パーティションの設置など) についてご相談して下さい。 3 その他、この機器から移動体識別用の特定小電力無線局あるい

合わせ下さい。

受付納間 國月唯一金曜 09:00~20:00 國土曜·日曜·祝日 09:00~18:00(年末年始を除く)

(8) Malaysia SIRIM Sticker (9) Israel MoC ID MoC: 51-34091

label here (10) Ukraine

OMAN-TRA

(13) South Africa

TA-2012/1222 APPROVED

[Specification]

(12) Singapore

2) Batch/Serial No.: -

4) Brand: LG Electronics Inc.

機器のほか工場の製造ライン等で使用されている移動体識別用の

(6-9) SVENSKA Meddelande om EU-regelefterlevnad: LG Electronics intygar härmed att den här produkten uppf-yller följande gällande

R&TTE-direktivet 1999/5/EG

DM Amstelveen, Nederländerna

Ovan nämnda produkter stämmer överens med de grundläggande kraven som anges i direktiven.

(6-10) NORSK

R&TTE-direktiv 1999/5/EC

erklærer hermed, at dette produkt overholder følgende

運用されています。

、この機器から移動体識別用の構内無線局に対して有害な 電波干渉の事例が発生した場合には、速やかに使用周波数を変更するか又は電波の発射を停止した上、下記連絡先にご連絡頂

はアマチュア無線局に対して有害な電波干渉の事例が発生した 場合など何かお困りのことが起きたときは、次の連絡先へお問い

LG Electronics Japan (株) カスタマーサポートセンター

Place SIRIM

(11) Oman

(1)ПІІ 'ЛГ Електронікс Україна'. Україна, 01004, м. Київ, вул Басейна. 4 (літела А).

факс: +38 (044) 201-43-73

ICN:SA


1) Model Name: AN-MR400G

3) Manufacturer: OHSUNG Electronics

DB102260

5) Product Name: Magic Remote

0120-813-023 PEES/200777-547960 TEL:03-5675-7323

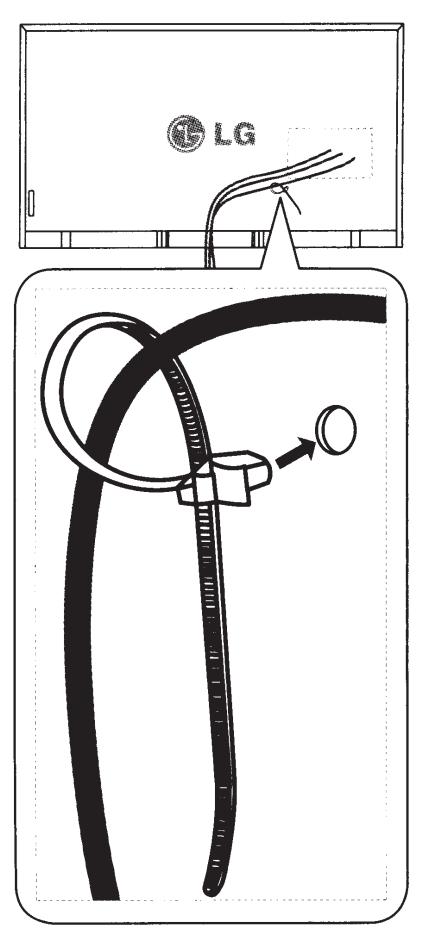

* Please see the back for more information about the above pictures.

To prevent damage to the coaxial cable connection port, attach the coaxial cable holder provided with the TV to the back of the TV. Insert the connected coaxial cable into the coaxial cable holder and tighten it in place. Make sure to attach cables separately to prevent damage to it, which may occur due to excessive movement.

Pour éviter d'endommager le port du câble coaxial, fixez le serre-câble fourni à l'arrière du téléviseur. Glissez le câble coaxial branché dans le serre-câble et serrez pour le maintenir en place. Veillez également à fixer le câble coaxial séparément pour éviter l'usure liée à un excès de mouvement.

Para prevenir daños al puerto de conexión del cable coaxial, coloque el soporte para el cable coaxial suministrado con el TV en la parte posterior del mismo. Inserte el cable coaxial conectado en el soporte para cables coaxiales y fíjelo en su lugar. Asegúrese de fijar el cable coaxial de forma separada a fin de evitar dañarlo por causa del movimiento excesivo.

Para evitar danos à porta de conexão do cabo coaxial, prenda o suporte do cabo coaxial fornecido com a TV na parte de trás da TV. Insira o cabo coaxial já conectado no seu suporte e prenda no lugar. Certifique-se de prender o cabo coaxial separadamente, a fim de evitar danos nele, que podem ocorrer em decorrência de movimento excessivo.

P/NO: MBM63800002 (1209-REV00)



SMART TV

Smart Home Entertainment



Please direct all service-related questions or comments to www.lgusa.com/support or call 1.800.243.0000



First-Class postage required. Post Office will not deliver without proper postage.

CMF01 **LG Electronics**



PO BOX 174355 DENVER CO, 80217-4355



online at www.lgusa.com/register OR Fill out and return this card



Registering is important, quick and easy!

Thank you for purchasing an LG product! We hope you are enjoying your new product and look forward to sharing some insider tips and tricks with you soon. Registering your LG product is simple and also serves as a verification of ownership if your product is stolen or lost.

In addition, you'll receive the following benefits and many more:

- Helpful emails on how to make the most of your product
- Reminders about product downloads and firmware
- More efficient warranty service
- Exclusive information on new products and innovations
- Special offers and promotions

Welcome to the LG family!

Please seal with tape. Do not staple.



online at www.lgusa.com/register OR Fill out and return this card within the next 10 days

1. Mr. Mrs. Ms. Miss First name	Initial Last name
Street	Apt
City	State / Province ZIP / Postal Code
Email address	
2. Telephone number () —	4. Model number
3. Date of purchase	5. Serial number
Month Day Year	6. Name of store where purchased



LG Electronics, Inc. LCD Television Limited Warranty - USA

Your LG LCD Television will be repaired or replaced, at LG's option, if it proves to be defective in material or work-manship under normal use, during the warranty period ("Warranty Period") listed below, effective from the date ("Date of Purchase") of original consumer purchase of the product. This warranty is good only to the original purchaser of the product and effective only when used in the United States, excluding U.S. Territories.

WARRANTY PERIOD

LABOR: One Year from the Date of Purchase.

PARTS: One Year from the Date of Purchase.

Replacement Units and Repair Parts may be new or factory remanufactured.

Replacement Units and Repair Parts are warranted for the remaining portion of the original unit's warranty period.

HOW SERVICE IS HANDLED

Please retain dealer's dated bill of sale or delivery ticket as evidence of the Date of Purchase for proof of warranty, and submit a copy of the bill of sale to the service person at the time warranty service is provided.

CONSUMER USER

Please Call 1-800-243-0000 (24 hours a day, 365 days per year) for instructions on getting the defective unit repaired or replaced.

Visit our website at:

http://www.lgservice.com

COMMERCIAL USER

Please Call (888) 865-3026 (Staffed during these times Mon. - Fri. 8:00AM \sim 5:00PM Central Standard Time) for instructions on getting the defective unit repaired or replaced.

Visit our website at:

http://www.lgcommercial.com

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS U.S. DISTRIBUTOR SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE, INCLUDING WITHOUT LIMITATION, LOST PROFITS, LOST OR CORRUPTED PROGRAMMING OR DATA, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

THIS LIMITED WARRANTY DOES NOT APPLY TO:

- damage caused in shipping or transit
- service required as a result of improper installation, including incorrect or insufficient AC supply (please consult the owner's manual for power supply requirements).
- installation or repair of antenna systems, cable converters, cable company supplied equipment, or other components in a video system
- set-up or adjustment on consumer controls, or damage caused by improper adjustments
- damage caused by other system components
- any unit that has been modified or incorporated into any other product
- replacement of batteries on the remote control.
- damage (including cosmetic damage), failure, loss or personal injury due to misuse, abuse, negligence, improper maintenance or storage, or to acts of nature or other causes beyond our control. (Causes beyond our control include but are not limited to lightning strike, power surges, power outages and water damage.)
- image burn-in
- repair or replacement of warranted parts by other than an LGE authorized service centers.
- units purchased or serviced outside of the U.S.A.
- product where the original factory serial numbers have been removed, defaced or changed in any way.
- product sold and labeled as "as is, where is" or similar disclaimer.

The cost of repair or replacement under these excluded circumstances shall be borne by the consumer.

LCD Television Limited Warranty – USA (continued)

CUSTOMER INTERACTIVE CENTER NUMBERS

To obtain Customer Assistance, Product Information, or Dealer or Authorized Service Center location:

CONSUMER USER

Please call 1-800-243-0000 (24 hours a day, 365 days per year) and select the appropriate option from the menu.

Or visit our website at: http://www.lgservice.com

COMMERCIAL USER

Please call (888) 865-3026 (Staffed during these times Mon. - Fri. $8:00AM \sim 5:00PM$ Central standard time) and select the appropriate option from the menu.

Or visit our website at: http://www.lgcommercial.com

CONCERNING PIXEL FUNCTIONALITY: An LCD Television contains hundreds of thousands of individual pixels. LCD displays typically contain a small number of pixels that do not function normally. Your display has been inspected and is in compliance with manufacturer's specifications, indicating that any pixel defects do not effect the operation or use of your display.

BEFORE CALLING FOR SERVICE:

Please have your product model number, serial number, and the date of purchase available.

Under some circumstances you may be asked to provide a reserve deposit to the LGE Service Center, using a credit card number as surety for advanced shipment. Your credit card will not be charged if you return the defective unit within 10 working days.

If a replacement unit is received, please use the carton and packaging from that unit in returning the defective unit to the LGE Service Center.

Parts and service in accordance with the LGE warranty is our responsibility and will be provided without charge. Other service requirements will be at the owner's expense. If you have problems in obtaining satisfactory warranty service, write or call the LGE Customer Interactive Service.

To assure proper credit and avoid unnecessary charges, you must obtain a Return Authorization before returning any product to the Factory Service Center. Contact the Customer Interactive Center for details.

Service for your LGE Television is provided through LG Electronics Alabama, Inc., the authorized LGE Service Center for the United States.

TO CONTACT LG ELECTRONICS BY MAIL:

LGE Customer Interactive Center P. O. Box 240007 201 James Record Road Huntsville, Alabama 35824 ATTN: CIC

LGE LCD Televisions are marketed and distributed in the United States by: LG Electronics U.S.A., Inc., 1000 Sylvan Avenue, Englewood Cliffs, NJ 07632

P/NO: 3840TWL056A (0704-REV01)

Printed in Mexico