Simple Owner's Manual Healthcare LCD HDTV



Thank you for purchasing this Panasonic product. Please read these instructions before operating your set and retain them for future reference. The images shown in this manual are for illustrative purposes only.



SDXC Logo is a trademark of SD-3C, LLC.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories

Pro:Idiom

Pro: Idiom is a trademark of Zenith Corporation.



This product qualifies for ENERGY STAR in the factory default setting and this is the setting in which energy savings will be achieved

TH-32LRH30U

Panason

http://panasonic.net/

Pillow speaker must be listed to UL 1069

If you need more detail information.

Please visit to Panasonic website

Any modifications to the factory default setting or other factory default settings could result in greater energy consumption beyond levels that meet ENERGY STAR qualifications.

Safety Precautions



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



user that parts inside the product are a risk of electric shock to persons. The exclamation point within a triangle is intended to tell the

user that important operating and

servicing instructions are in the papers with the appliance.

The lightning flash with arrowhead within a triangle is intended to tell the

WARNING: To reduce the risk of electric shock, do not remove cover or back. No user-serviceable parts inside. Refer servicing to qualified service personnel.

Important Safety Instructions

- Read these instructions
- Keep these instructions
- Heed all warnings
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

 Only use attachments / accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 15) Operate only from the type of power source indicated on the marking label. If you are not sure of the type of power source indicated between the power source indicated on the marking label.
- supplied to your home consult your television dealer or local power company.

- 16) Follow all warnings and instructions marked on the LCD TV.
- 17) Never push objects of any kind into this LCD TV through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the LCD TV.
- 18) Antenna grounding according to the National Electrical Code (NEC), ANSI/NFPA 70.

If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. In the U.S. Section 810-21 of the NEC provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding

conductors, location of antenna discharge unit

connection to grounding electrodes, and requirements for the grounding electrode.

19) An outside antenna system should not be located in the vicinity of overhead power lines, other electric light, power

- circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

 20) Unplug this LCD TV from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- When the power cord or plug is damaged or frayed.
 - b.
 - If liquid has been spilled into the LCD TV.
 If the LCD TV has been exposed to rain or water.
 - If the LCD TV does not operate normally by following the operating instructions.

Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the LCD TV to normal operation.

EXAMPLE OF ANTENNA

GROUND CLAMP

ANTENNA

LEAD-IN WIRE

DISCHARGE UNIT

GROUNDING

GROUND CLAMPS

POWER SERVICE GROUNDING

ELECTRODE SYSTEM (NEC ART 250, PART H)

CONDUCTORS

(NEC SECTION 810-20)

(NEC SECTION 810-21)

GROUNDING AS PER (NEC) NATIONAL

FI FCTRIC

EQUIPMENT

SERVICE

ELECTRICAL

CODE

- If the LCD TV has been dropped or the cabinet has been damaged.

 When the LCD TV exhibits a distinct change in performance this indicates a need for service.
- 21) When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 22) WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING.
 DO NOT PLACE LIQUID CONTAINERS (FLOWER VASES, CUPS, COSMETICS, ETC.) ABOVE THE

SET (INCLUDING ON SHELVES ABOVE, ETC.).

23) WARNING: SMALL PARTS CAN PRESENT CHOKING HAZARD IF ACCIDENTALLY SWALLOWED. KEEP SMALL PARTS AWAY FROM YOUNG CHILDREN.

DISCARD UNNEEDED SMALL PARTS AND OTHER OBJECTS, INCLUDING PACKAGING MATERIALS AND PLASTIC BAGS/SHEETS TO PREVENT THEM FROM BEING PLAYED WITH BY YOUNG CHILDREN, CREATING THE POTENTIAL RISK OF SUFFOCATION.

24) WARNING: To prevent the spread of fire, keep candles or other open flames away from this

product at all times. TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS PLUG WITH A RECEPTACLE 25) WARNING: OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

This LCD TV is for use only with the following optional accessory. Use with any 26) WARNING: other type of optional accessories may cause instability which could result in the possibility of

injury.(All of the following accessories are manufactured by Panasonic Corporation)

Wall-hanging bracket: TY-WK3L2RW

Always be sure to ask a qualified technician to carry out set-up.

The Power switch on this unit will not completely shut off all power from AC outlet. Since the power cord

27) CAUTION: serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power.

Therefore, make sure the unit has been installed so that the power cord can be easily unplugged from AC outlet in case of an accident. To avoid fire hazard, the power cord should also be unplugged from the

AC outlet when left unused for a long period of time (for example, when on vacation). DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE 28) CAUTION: SAME OR EQUIVALENT TYPE.

29) CAUTION: This LCD TV is for Wall-Mount only. It is not intended to be touched by patient.

NOTE: This equipment is designed to operate in North America and other countries where the broadcasting system and AC house current are exactly the same as in North America

TQB2AA0632-1

Secure Ventilation

Slots and openings in the cabinet and the back or bottom are provided for ventilation, and to ensure reliable operation of the LCD TV and to protect it from overheating. These openings must not be blocked or covered. There should be at least 4 inches of space from these openings. The openings should never be blocked by placing the LCD TV on a bed, sofa, rug or other similar surface. This LCD TV should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.

- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To assure continued compliance, follow the attached installation instructions and use only shielded interface cables when connecting to computer or peripheral devices. Any changes or modifications not expressly approved by Panasonic Corp. of North America could void the user's authority to operate this device.

FCC Declaration of Conformity Model No. TH-32LRH30U

Responsible Party: Panasonic Corporation of North America Three Panasonic Way, 2F-5, Secaucus, NJ 07094

Contact Source: Panasonic Solutions Company 1-800-973-4390

CEA CHILD SAFETY NOTICES

WARNING

Flat panel displays are not always supported on the proper stands or installed according to the manufacturer's recommendations. Flat panel displays that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests or carts may fall over and may cause personal injury or even death.

The consumer electronics industry (of which Panasonic is a member) is committed to making home entertainment enjoyable and safe. To prevent personal injury or death, be sure to follow the following safety guidelines:

TUNE INTO SAFETY:

- One size does NOT fit all. Follow the manufacturer's recommendations for the safe installation and use of your flat panel display. Carefully read and understand all enclosed
- instructions for proper use of this product. Don't allow children to climb on or play with furniture and television sets.
- Don't place flat panel displays on furniture that can
- easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on "larger than life" flat panel displays. Care should be taken to install the display where it cannot be pushed, pulled over, or knocked down.

· Care should be taken to route all cords and cables connected to the flat panel display so that they cannot be pulled or grabbed by curious children.

WALL MOUNTING: TO WALL MOUNT YOUR FLAT PANEL DISPLAY, ALWAYS:

- Use a mount that has been recommended by the display manufacturer and/or listed by an independent laboratory (such as UL, CSA, ETL).
- Follow all instructions supplied by the display and wall mount manufacturers.
- If you have any doubts about your ability to safely install your flat panel display, contact your retailer about professional installation.
- Make sure the wall where you are mounting the display is appropriate. Some wall mounts are not designed to be mounted to walls with steel studs or old cinder block construction. If you are unsure, contact a professional installer
- A minimum of two people are required for installation. Flat panel displays can be heavy.

The American Academy of Pediatrics discourages television viewing for children younger than two years of age.




Accessories

Check you have all the items shown.

Accessories

☐ Operating Instructions

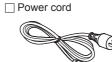

☐ Clamper and screw for power cord



refer to the wall-hanging bracket installation manual.

Please contact your nearest Panasonic dealer to purchase the

recommended wall-hanging bracket. For additional details, please





Optional Accessories Remote Control Transmitter

N2QAYB000485 Wall-hanging bracket

Back of the TV (200 mm Holes for wall-hanging bracket

Screw for fixing the TV onto the wall-hanging bracket (not supplied with the TV) Depth of screw: Minimum: 0.39" (10.0 mm) Maximum: 0.47" (12.0 mm) M6 (View from the side)

WARNING

 Customer assumes liability if mounting the unit themselves or if a Panasonic bracket is not used. Any damage resulting from not having a professional installer mount your unit will void your warranty.

Always be sure to ask a qualified technician to perform any necessary set-up. Incorrect fitting may
cause equipment to fall, resulting in injury and product damage.

 Do not mount the unit directly below ceiling lights (such as spotlights, floodlights or halogen lights) which typically give off high heat. Doing so may warp or damage plastic cabinet parts


Take care when fixing wall brackets to the wall. Always ensure that there are no electrical cables or

pipes in the wall before hanging bracket. • When using an angled-type wall hanging bracket, please ensure that there is sufficient space for the

Power cord connection

connecting cables so that they do not press against the wall when the TV is tilted forward

For safety reasons, remove units no longer being used from their wall-mounted locations.

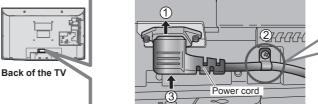

install

Caution


① Insert the power cord plug firmly into place. Make sure that power plug is inserted straight into the unit

(2) Fix securely the power cord with clamper and screw. 3 Confirm the plug is completely inserted.




Attach the clampe

Connections

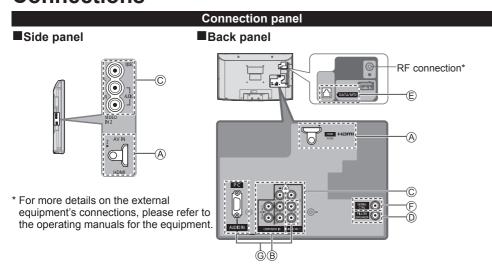


VHF/UHF Antenna

- NTSC (National Television System Committee):
- Conventional broadcasting
- ATSC (Advanced Television Systems Committee): Digital TV Standards include digital high-definition television (HDTV), standard-definition television (SDTV), data broadcasting, multichannel surround-sound audio and interactive television.

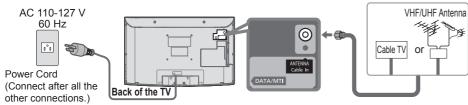

Cable


- You need to subscribe to a cable TV service to enjoy viewing their programming.
- You can enjoy high-definition programming by subscribing to a high-definition cable service. The connection for high-definition can be done with the use of HDMI or Component Video cable.
- To view high-definition programming select the correct video input.

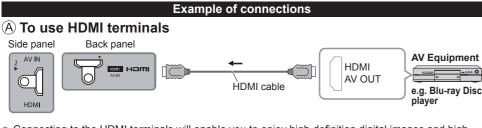

- Connecting to the HDMI terminals will enable you to enjoy high-definition digital images and highquality sound.
- The HDMI connection is required for a 1080p signal.

B To use COMPONENT terminals green green VIDEO OUT blue blue VIDEO OUT **AV** Equipment red red e.g. Blu-ray Disc player white white AUDIO red red red © To use COMPOSITE terminals Side panel Back panel **AV** Equipment yellow yellow e.g. DVD Recorder \bigcirc COMPOSITE or OUT \bigcirc) \Box white white red red e.g. VCR To use PILLOW SPEAKER terminals **PILLOW SPEAKER** Conversion cable (Connect power cord after Pillow speaker must be listed to UL 1069. pillow speaker connection) Please refer about "Connectivity of PILLOW SPEAKER" to Panasonic Solutions Company. (Caution)

Do not connect or disconnect the Pillow speaker while this TV is turned on (including Standby condition).

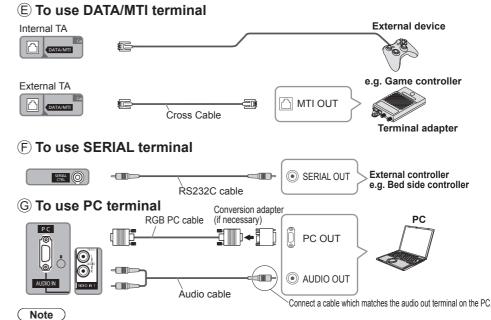

- Not all cables and external equipment shown in this book are supplied with the TV.
- For more details on the external equipment's connections, please refer to the operating manual for the equipment.

Specifications

		TH-32LRH30U		
Power Source		AC 110-127 V, 60 Hz		
Power Consumption (Rated/Standby)		106 W / 0.8 W		
Display panel	Aspect Ratio	16:9		
	Visible screen size	32" class (31.5 inches measured diagonally)		
	(W × H × Diagonal)	27.5 " × 15.4 " × 31.5 "(698 mm × 392 mm × 800 mm)		
	(No. of pixels)	1,049,088 (1,366 (W) × 768 (H)) [4,098 × 768 dots]		
Sound	Speaker	1-way 2 bottom SP System		
	Audio Output	20 W [10 W + 10 W] (10 % THD)		
PC signals		VGA, SVGA, XGA, WXGA, SXGA Horizontal scanning frequency 31 - 69 kHz Vertical scanning frequency 59 - 86 Hz		
Channel Capability- ATSC/NTSC (Digital/Analog)		VHF/ UHF: 2 - 69, CATV: 1 - 135 (support MPEG4 H.264 decode)		
Operating Conditions		Temperature: 32 °F – 95 °F (0 °C – 35 °C) Humidity: 20 % – 80 % RH (non-condensing)		
Connection Terminals	VIDEO IN 1-2	VIDEO: RCA PIN Type × 1 1.0 V[p-p] (75 Ω) AUDIO L - R: RCA PIN Type × 2 0.5 V [rms]		
	COMPONENT IN	Y: 1.0 V [p-p] (including synchronization) PB, PR: ±0.35 V [p-p] AUDIO L-R: RCA PIN Type × 2 0.5 V [rms]		
	HDMI 1-2	TYPE A Connector × 2		
	PC	D-SUB 15PIN: R,G,B / 0.7 V [p-p] (75 Ω) HD, VD / 1.0 - 5.0 V [p-p] (high impedance)		
	SERIAL CTRL	M3 Jack × 1 (RS232C)		
	PILLOW SPEAKER	M3 Jack × 1		
	DATA/MTI	RJ-11C (6pin) Multiple Television Interface (MTI) SNES Controller Nintendo Controller Power (pin3: DC12V / 30mA (max))		
	Card slot	SD CARD slot × 1		
Dimensions (W × H × D)		31.5 " × 20.2 " × 3.3 " (798 mm × 511 mm × 83 mm)		
Mass		22.0 lb. (10.0 kg) NET		
		Design and Specifications are subject to change without notice. Mass		

 Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate

Care and Cleaning

First, unplug the Power cord plug from the wall outlet

The front of the display panel has been specially treated. Wipe the panel surface gently using only a cleaning cloth

If the surface is particularly dirty, soak a soft, lint-free cloth in diluted mild liquid dish soap (1 part mild liquid dish soap diluted by 100 times the amount of water) and then wring the cloth to remove excess liquid. Use this cloth to wipe the surface of the display panel, then wipe it evenly with a dry cloth of the same type until the surface is dry.
 Do not scratch or hit the surface of the panel with fingernails or other hard objects. Furthermore, avoid contact with volatile substances such as insect sprays, solvents, and thinner; otherwise, the quality of the surface may be adversely affected.

adversely affected.

Cabinet

- If the cabinet becomes dirty, wipe it with a soft, dry cloth.

 If the cabinet is particularly dirty, soak the cloth in a weak mild liquid dish soap and then wring the cloth dry. Use this cloth to wipe the cabinet and then wipe it dry with a dry cloth.

 Do not allow any mild liquid dish soap to come into direct contact with the surface of the LCD TV.
- If water droplets get inside the unit, operating problems may result.

 Avoid contact with volatile substances such as insect sprays, solvents, and thinner; otherwise, the quality of the cabinet surface may be adversely affected or the coating may peel off. Furthermore, do not leave it for long periods in contact with articles made from rubber or PVC.

Power cord plug

Panasonic Solutions Company Unit of Panasonic Corporation of North America Three Panasonic Way, 2F-5, Secaucus, NJ 07094

Panasonic Healthcare LCD HDTV **Limited Warranty**

Panasonic Solutions Company. (referred to as "the Warrantor") will repair this product and all included accessories with new or refurbished parts, free of charge in the USA or Puerto Rico, of the original purchase in the event of a defect in materials or workmanship as follows:

Models or Parts	Part Warranty	Labor Warranty
Professional Flat Panel Display	2 Years	2 Years

On-site or carry-in service in the USA and Puerto Rico may be obtained during the warranty period by contacting Panasonic Solutions Company Service toll free at 1-800-973-4390.

This warranty is extended only to the original purchaser

and is non transferable. A purchase receipt or other

proof of date of original purchase will be required before

This warranty only covers failures due to defects in

materials or workmanship, which occur during normal

use. The warranty does not cover damage which occur

in shipment, or failures which are caused by products

not supplied by the warrantor, or failures which result

from improper installation, set-up adjustments, improper

LIMITS AND EXCLUSIONS There are no express warranties except as listed above.

antenna, inadequate signal pickup, maladjustment of

consumer controls, improper operation, power line surge, improper voltage supply, lighting damage, or service by

anyone other than an authorized repair facility, or

damage that is attributable to acts of God.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITION, DAMAGE TO DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH

Some states do not allow the exclusion or limitation

of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may nor apply to you. This warranty gives you specific legal rights and you may other rights, which vary from state to state.

If you have a problem with this product that is not handled to your satisfaction, then write the Consumer Affairs Department at the Company address indicated

In the USA and Puerto Rico FOR SERVICE CALL TOLL FREE 1-800-973-4390

USA only: This product has a fluorescent lamp that contains mercury Disposal may be regulated in your community due to environmental considerations. For disposal or recycling information, please visit

Panasonic website: http://www.panasonic.com/environmental or call 1-888-769-0149.

Customer's Record

warranty service is rendered.

The model number and serial number of this product can be found on its back cover. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Serial Number

© Panasonic Corporation 2011

Panasonic Solutions Company Executive Office: Unit of Panasonic Corporation of North America Three Panasonic Way, 2F-5, Secaucus, NJ 07094