

Panasonic®

Operating Instructions LCD Television

Model No.

TC-19LX50
TC-23LX50
TC-19LE50
TC-23LE50



TV screen image is simulated.

LCD TV shown above is model TC-23LX50.

For assistance, please call : 1-800-211-PANA (7262)
or visit us at www.panasonic.com/contactinfo (U.S.A.)

For assistance, please call : 787-750-4300
or visit us at www.panasonic.com (Puerto Rico)

For assistance, please call : 1-800-561-5505
or visit us at www.panasonic.ca (Canada)


Before connecting, operating or adjusting this product, please read these instructions completely.
Please keep this manual for future reference.

English

Español [Resumen]

TQBC0994

Important Safety Instructions

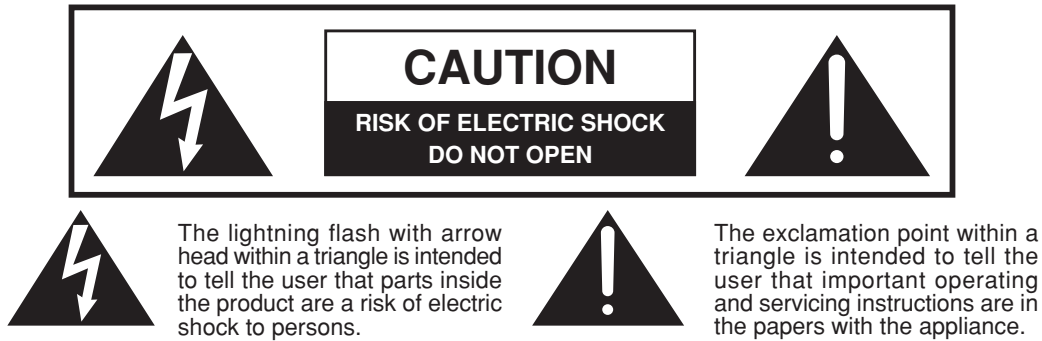

■ **Note to CATV System Installer:** This reminder is provided to direct the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

■ Secure ventilation

Slots and openings in the cabinet and the back or bottom are provided for ventilation, and to ensure reliable operation of the LCD TV and to protect it from overheating. These openings must not be blocked or covered. There should be at least 10 cm of space from these openings. The openings should never be blocked by placing the LCD TV on a bed, sofa, rug or other similar surface. This LCD TV should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.

■ Important Safety Instructions for LCD TV


- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments / accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Operate only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home consult your television dealer or local power company.
- 16) Follow all warnings and instructions marked on the LCD TV.
- 17) Never push objects of any kind into this LCD TV through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the LCD TV.



Important Safety Instructions

18) If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. In the U.S. Section 810-21 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

EXAMPLE OF ANTENNA GROUNDING AS PER (NEC) NATIONAL ELECTRICAL CODE

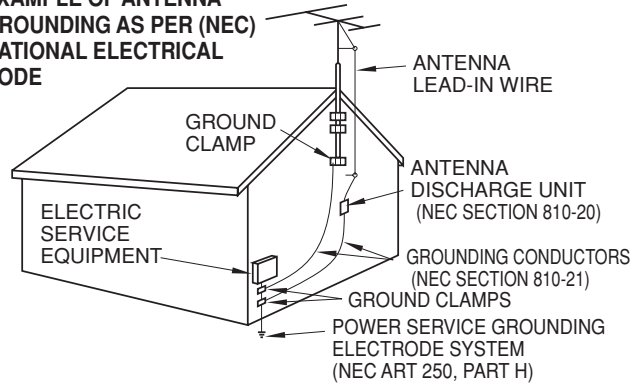

19) An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

20) Unplug this LCD TV from the wall outlet, and refer servicing to qualified service personnel under the following conditions:

- a. When the power cord or plug is damaged or frayed.
- b. If liquid has been spilled into the LCD TV.
- c. If the LCD TV has been exposed to rain or water.
- d. If the LCD TV does not operate normally by following the operating instructions.

Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the LCD TV to normal operation.

- e. If the LCD TV has been dropped or the cabinet has been damaged.
 - f. When the LCD TV exhibits a distinct change in performance - this indicates a need for service.
- 21) When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.

22) **WARNING : TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE. DO NOT PLACE LIQUID CONTAINERS (FLOWER VASES, CUPS, COSMETICS, ETC.) ABOVE THE SET. (INCLUDING ON SHELVES ABOVE, ETC.)**

23) **WARNING : KEEP UNNEEDED SMALL PARTS AND OTHER OBJECTS OUT OF THE REACH OF SMALL CHILDREN. THESE OBJECTS CAN BE ACCIDENTALLY SWALLOWED. ALSO, BE CAREFUL ABOUT PACKAGING MATERIALS AND PLASTIC SHEETS.**

24) **CAUTION : TO PREVENT ELECTRIC SHOCK DO NOT USE THIS PLUG WITH A RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.**

25) **CAUTION : USE WITH OTHER STAND MAY RESULT IN INSTABILITY POSSIBLY CAUSING INJURY.**

26) **CAUTION : DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.**

NOTE : ● This equipment is designed to operate in North America and other countries where the broadcasting system and AC house current are exactly the same as in North America.

■ This product utilizes tin-lead solder, and has a fluorescent lamp containing a small amount of mercury. Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information please contact your local authorities, or the Electronics Industries Alliance: www.eiae.org.

Dear Panasonic Customer

Welcome to the Panasonic family of customers.

We hope that you will have many years of enjoyment from your new LCD TV.

To obtain maximum benefit from your set, please read these instructions before making any adjustments, and retain them for future reference.

Retain your purchase receipt, and record the model number and serial number of your set in the space provided on the rear cover of these instructions.

For assistance, please call : 1-800-211-PANA (7262) or visit us at www.panasonic.com/contactinfo (U.S.A.)
For assistance, please call : 787-750-4300 or visit us at www.panasonic.com (Puerto Rico)
For assistance, please call : 1-800-561-5505 or visit us at www.panasonic.ca (Canada)

Federal Communication Commission Information

This equipment has been tested and found to comply with the limits for a TV Broadcast Receiver, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause or receive interference, which can be determined by turning equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the TV antenna.
- Increase the separation between TV and other equipment.
- Connect TV into separate outlet from other equipment.
- Consult the dealer or an experienced radio / TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.



The ENERGY STAR® label, a symbol for energy efficiency, was created by the U.S. Environmental Protection Agency (EPA) and the U.S. Department of Energy (DOE) to help customers identify products that can save them money and protect the environment by saving energy. ENERGY STAR® compliant products generally consume less energy than similar standard products.

Table of Contents


Important Safety Instructions	2	Operating peripheral equipment using the remote control	25
Maintenance	5	Programming the remote control code	25
SUPPLIED ACCESSORIES	6	Infrared Code Index	26
Remote control battery installation	6	Mode Operational Key Chart	28
Installation	7		
Connections	8	— Manuel de instrucciones [Resumen] —	
Antenna Connection	8	Instalación	29
Cable Box Connection	8	Instalación de las pilas del mando a distancia	29
Connecting Other Equipment	9	Conexión	30
Connecting Headphones / Earphones	10	Conexión de antena	30
Power ON / OFF	10	Conexión del receptor de TV por cable	30
Basic Controls	11	Conexión de otro equipo	31
Menu Operations	12	Conexión de auriculares	32
Tuning Channels	14	Conexión / desconexión de la alimentación ...	32
LOCK	15	Controles básicos	33
CLOSED CAPTION	19	Operaciones con menús	34
INPUT LABEL	19	Sintonización de canales	36
OTHER ADJUST	20		
PICTURE ADJUST	21	Troubleshooting	37
POSITION/SIZE	22	CUSTOMER SERVICES DIRECTORY (for U.S.A.)	38
AUDIO ADJUST	23	Specifications	39
ASPECT Controls	24		

Maintenance

To clean this unit, wipe with a soft, dry cloth.

If the surfaces are extremely dirty, use a soft cloth dipped in a soap and water solution or a weak detergent solution.

- Use eyeglass cleaner to remove stubborn dirt from the LCD.
- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using a chemically treated cloth, carefully read the instructions that came with the cloth.

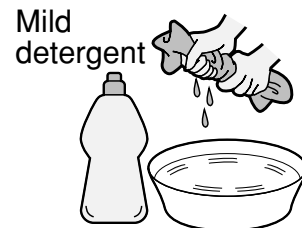


CAUTION :

If water or other liquid enters the monitor through the display panel surface, a malfunction may occur.


SUPPLIED ACCESSORIES

Check the accessories before installation.

- Operating Instructions

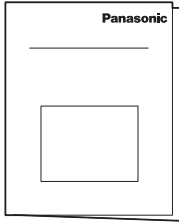

 
- Remote Control Transmitter (EUR7613Z90R)




- Batteries for the Remote Control Transmitter (2 × AA size)



 
- Warranty Card



 - Product Registration Card and Customer Care Plan Card (For U.S.A.)



 
- F-Type Antenna Connector (for 4C-2V) (× 1)




Remote control battery installation

Requires two AA batteries.


1. Open the battery cover.

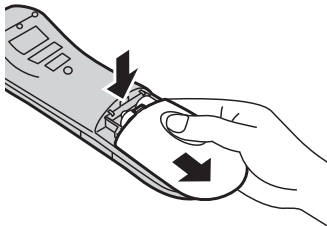

2. Install the batteries. Note the correct polarity (+ and -).

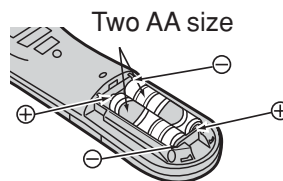

3. Replace the cover.

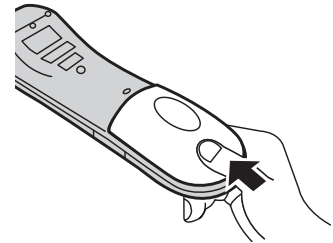

⚠ Precaution on battery use

Incorrect installation can cause battery leakage and corrosion that will damage the remote control transmitter. Disposal of batteries should be in an environmentally friendly manner.

1. Always use new batteries when replacing the old set.
2. Do not attempt to charge, short-circuit, disassemble, heat or burn used batteries.
3. Battery replacement is necessary when remote control acts sporadically or fails to operate this unit.

Notes:

- Do not drop, apply shock to or step on the remote control.
- Do not spill water on the remote control.
- Do not place objects between the remote control and remote control receiver.
- Do not use remote controls for other equipment at the same time.
- If the TV does not operate even when using the remote control from a close range, it is time to replace the batteries.

Installation

Receiver Location

 


Locate at a comfortable distance for viewing. Avoid placing where sunlight or other bright light (including reflections) will fall on the screen.

Use of some types of fluorescent lighting can reduce remote control transmitter range.

Adequate ventilation is essential to prevent internal component failure. Keep away from areas of excessive heat or moisture.

How to use the LCD stand

Adjust the stand to your desired angle. The stand angle can be adjusted between 5 ° forward and 10 ° back, and rotated 20 ° to the right / left.

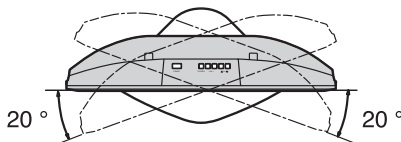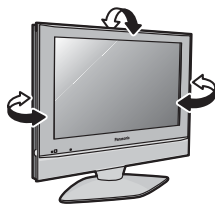

Optional External Equipment

The Video / Audio connection between components can be made with shielded video and audio cables. For best performance, antenna cables should utilize 75 ohm coaxial shielded wire. Cables are available from your dealer or electronic supply store.

Before you purchase any cables, be sure you know what type of output and input connectors your various components require. Also determine the length of cable you'll need.




For optimum quality picture

When the LCD is exposed to light from outdoors or lighting fixtures, high-contrast pictures may not be displayed clearly. Turn off florescent lamps near the LCD and place in a location not exposed to outdoor light.

How to hang the LCD Television on the wall

This LCD Television is for use only with the following optional accessory. Use with any other type of optional accessories may cause instability which could result in the possibility of injury.

- Wall-hanging bracket TY-WK22LR1W

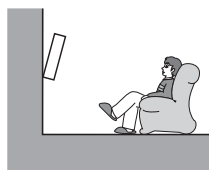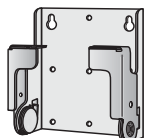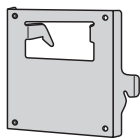

Always be sure to ask a qualified technician to carry out set-up.


Connections

Note:

Cables and connectors are not supplied with this set.

Antenna Connection


For proper reception of VHF/UHF channels, an external antenna is required. For best reception, an outdoor antenna is recommended. The antenna mode must be set to TV (see page 14, Mode selection).

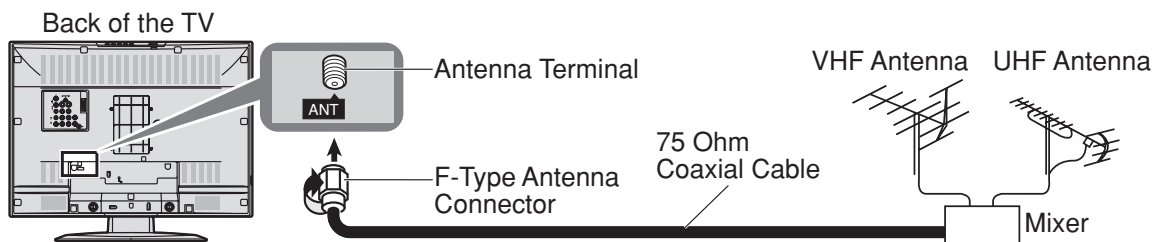


Cable Box Connection

- For reception of cable channels (01 - 125), connect the cable supplied by your local cable company. The antenna mode must be set to CABLE (see page 14, Mode selection).
- Certain cable systems offset some channels to reduce interference or view Premium (scrambled) channels. A cable converter box is required for proper reception. Check with your local cable company for its compatibility requirements.
- Set the TV channel to CH3 or CH4 when using this connection.

Cable Box

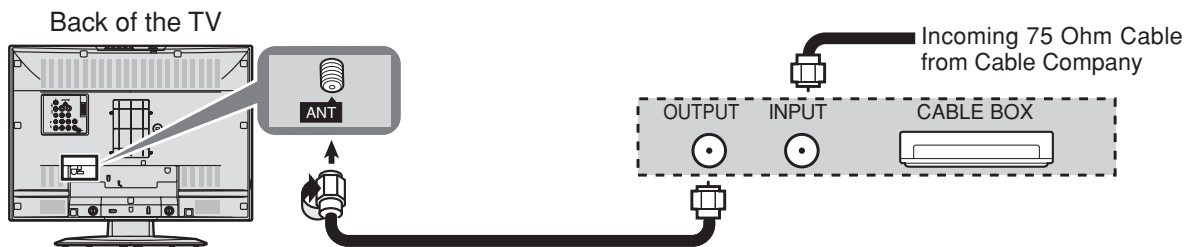


Cable Box and VCR

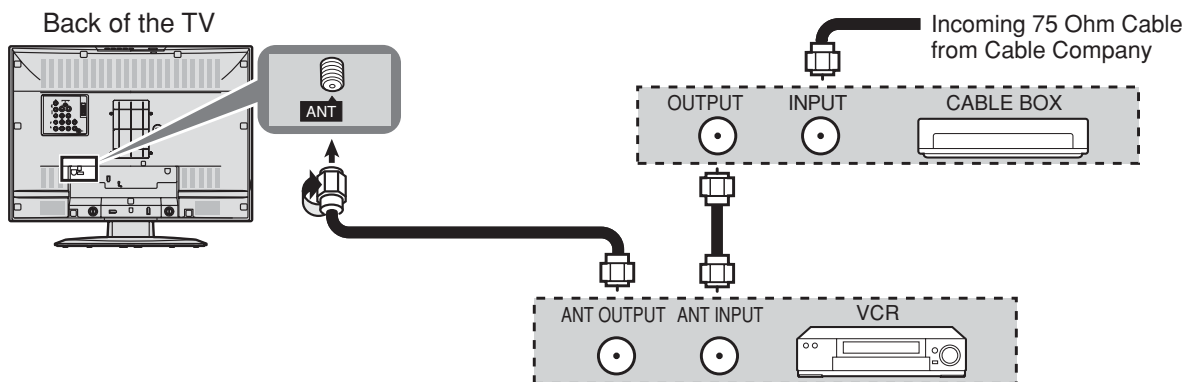

Connecting Other Equipment

Rear Input Terminals

To bundle the cables with the clammer

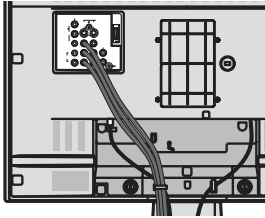

1. Pull upward.



2. Put the cables in the clammer and close.



Note:

To avoid noise do not put the antenna cable and the power cord together.


Back of the TV

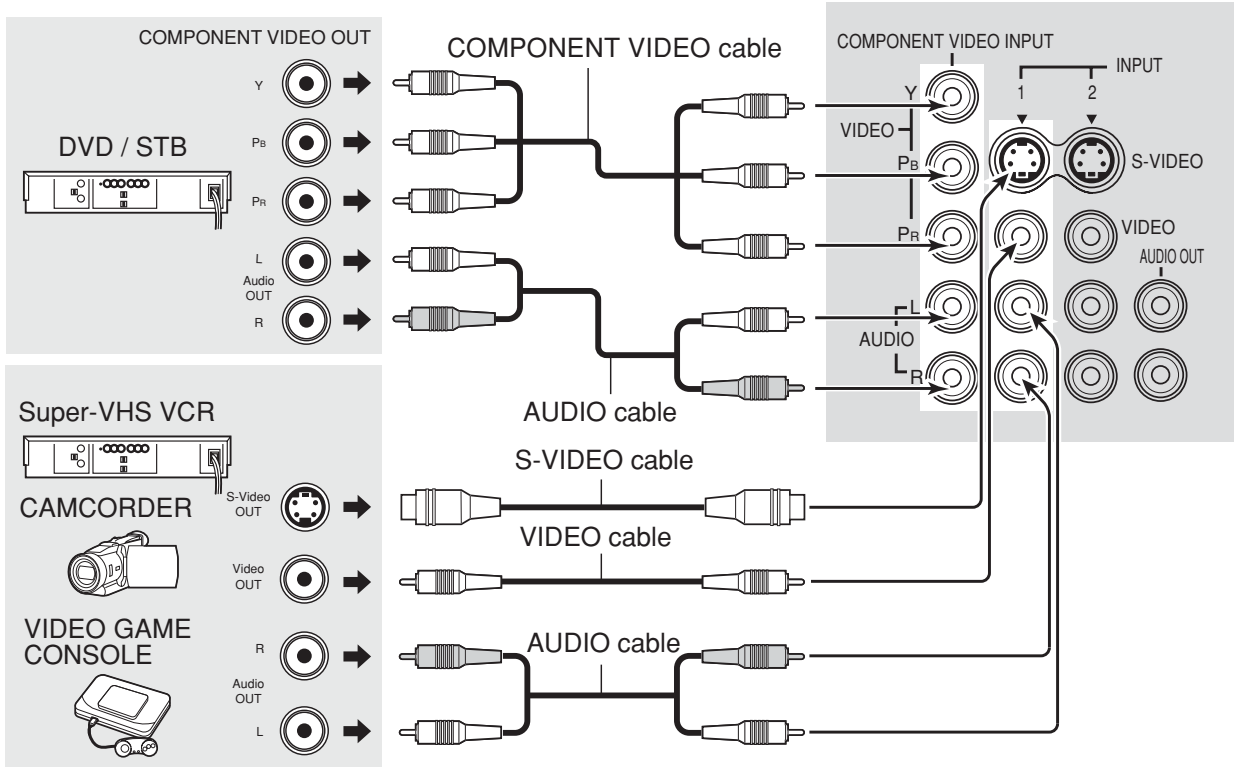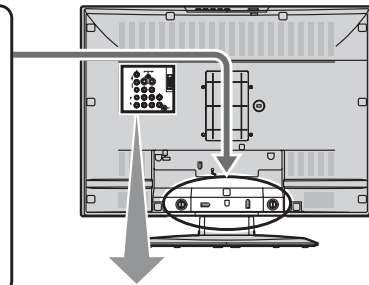


Notes:

- When connecting video cables, priority is given to the S-Video cable when both the S-VIDEO input terminal and the VIDEO input terminal are connected.
- Please make inquiries of video game manufacturers concerning component cables to connect with video game console.

Rear Output Terminals

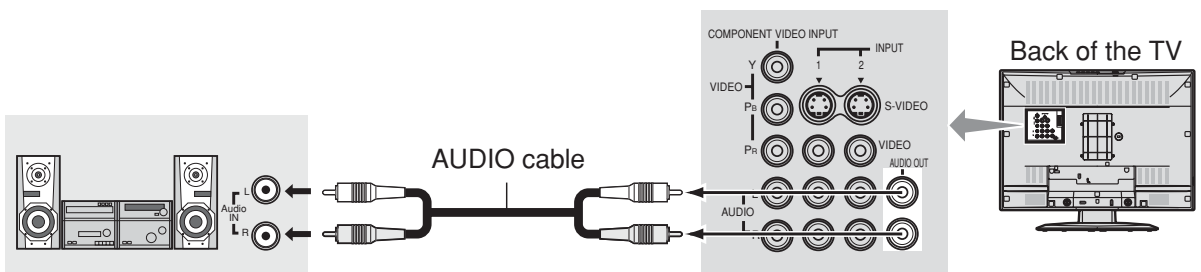

Connecting Headphones / Earphones

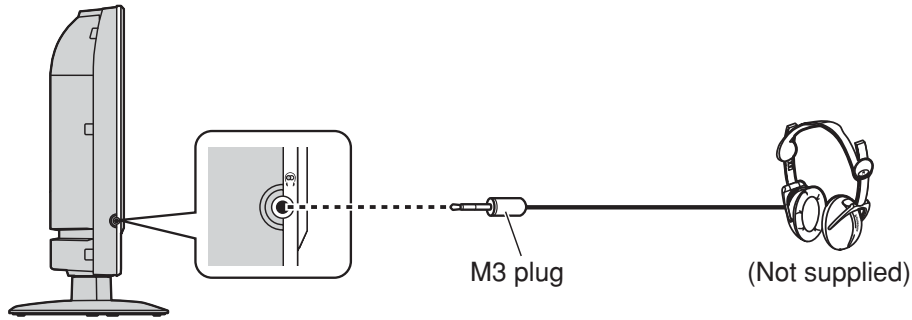

Power ON / OFF

 

Preparation

Connect the plug to the wall outlet.

Note:

The TV consumes some power as long as the power cord is inserted into the wall outlet.

Back of the TV

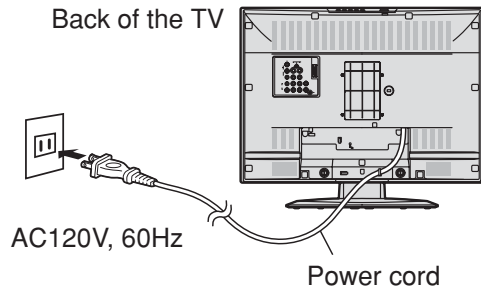

Main POWER switch

On the main unit



Press to turn the TV's main power on / off.

 

- Power indicator
- Main power ON: Green
- Main power OFF: No light

On the remote control



Press to turn the TV on / off.

- Power indicator
- Power ON : Green
- Power OFF (Standby): Red
- This does not work when the main power is off (No light) (see above).

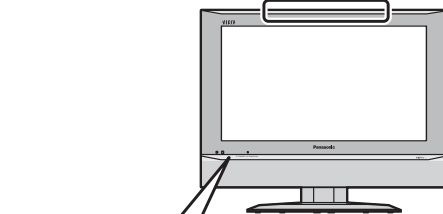

Remote control sensor


C.A.T.S. sensor

LCD C.A.T.S. (Contrast Automatic Tracking System) automatically senses the ambient light conditions and adjusts the brightness and gradation accordingly, to optimize contrast. C.A.T.S. is in effect when PIC MODE is set to AUTO (see page 21).



Note:


The screen below is displayed for a few moments when the TV is turned on.

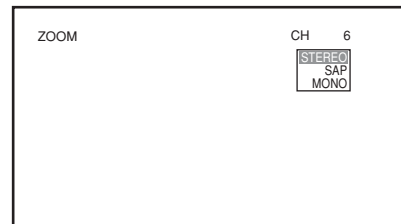

Note:

Select the menu language before operating the TV (see pages 12, 13, LANGUAGE).

Basic Controls

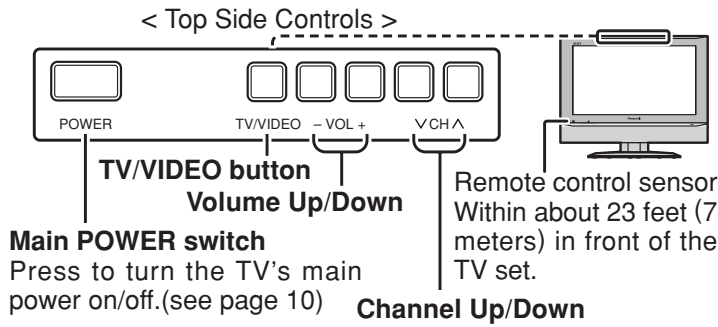

Power button
Press to turn the TV ON or OFF.

Note:
The TV's power cord must first be plugged into the wall outlet and then the TV can be turned on using the POWER switch.

Direct program number selection buttons
R-TUNE button
Switches to previously viewed channel or video mode.

- Not effective under the following conditions:
1. Right after the TV is turned on.
 2. After switching TV / CATV (MODE in PROGRAM CHANNELS).
 3. Right after the ACP (Automatic channel programming) execution.
 4. When the same channel as the present channel is selected.

PROG dash button / SLEEP TIMER button
Program dash channel numbers for DTV and DBS.
Sleep timer (MINUTES)
→ 0 → 30 → 60 → 90

ASPECT button
Change screen size (see page 24).
→ JUST → ZOOM → FULL → NORMAL

SAP button
Selects Audio mode (see page 23).
→ STEREO → SAP → MONO

Mode Selection buttons
Digital Broadcasting Satellite mode for Remote Control / Cable TV Mode Selection for Remote Control

VCR Mode Selection for Remote Control
Digital Video Disc Mode Selection for Remote Control
TV Mode Selection for Remote Control

Changes to the next channel up
Moves cursor upward during menu mode.

Reduces volume
Moves cursor to the left during menu mode.

Increases volume
Moves cursor to the right during menu mode.

Displays menu
Press to access TV, DTV, DBS or DVD menus.

Press to Return to previous MENU or EXIT from menu.

Changes to the next channel down
Moves cursor downward during menu mode.

Press to display input mode menu. While the menu is displayed, press again to change the input mode. The input mode changes each time this button is pressed.

Press this button to mute the sound, press again to cancel the mute.

GUIDE button for DBS.

Press to display the current system status, for example, Aspect mode, Channel number, Stereo mode, TV/VIDEO and Off timer.

Operation of other Device

Buttons	REW / FF	PLAY	PAUSE	STOP
Device				
VCR	VCR REW/FF	PLAY	Pause	STOP
CABLE/DBS	—	—	—	—
DVD	Skip Search REW/FF	PLAY	Pause	STOP

Buttons	REC	ASPECT TV/VCR	VCR/DBS CH
Device			
VCR	VCR RECORD	TV/VCR Switch	VCR CH up/down
CABLE/DBS	—	STB-ASPECT	PAGE up/down
DVD	—	Open / Close	Slow +/-

Menu Operations

1 Press to display MENU screen.


TV/VIDEO
Change the input mode.

- Press to display the Input selection menu.

- 1 TV
- 2 COMPONENT
- 3 VIDEO 1
- 4 VIDEO 2

- Press corresponding number key on the remote control to select the input of your choice.

Note:
Video input can also be selected by pressing **TV/VIDEO**, then the CH **▲▼** buttons, and push "OK" key.

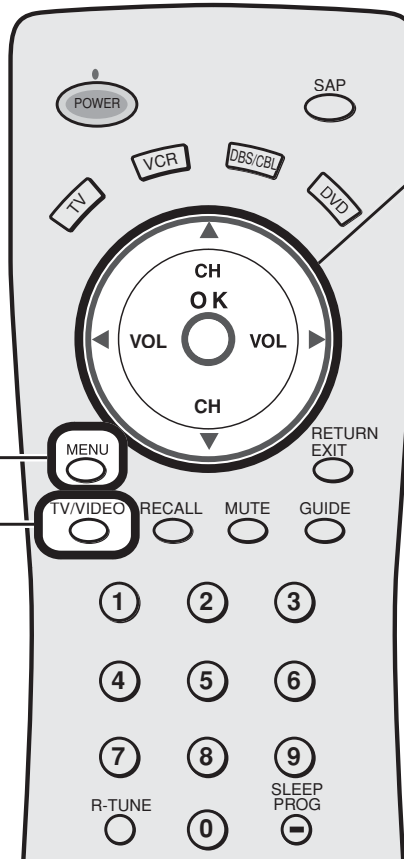



2

or


ON SCREEN HELP 'Instruction' box

An On Screen Help box is displayed when a menu is displayed on the TV. This Help box indicates which keys on the remote control are used to navigate the menu shown.

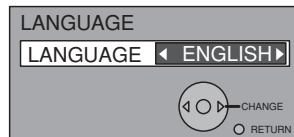


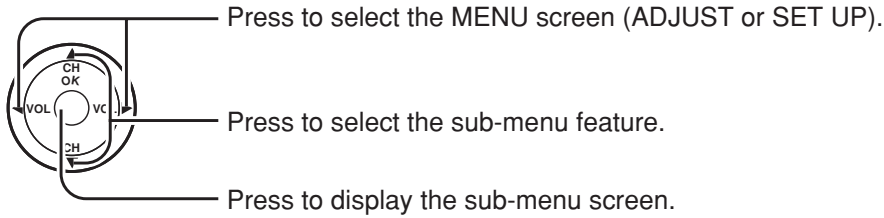


- To return to the previous screen : RETURN EXIT
- To exit the MENU screen: MENU This returns TV to normal viewing.

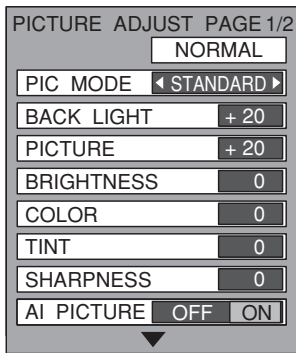

(See page 21)

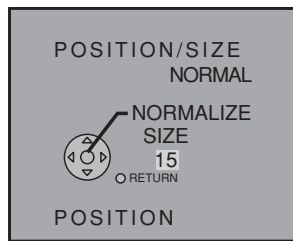


(See page 22)

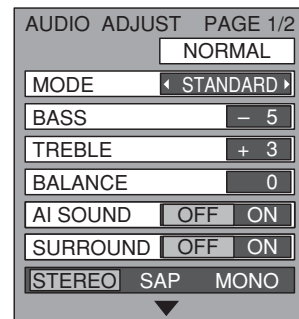


(See page 23)



Select the menu language.

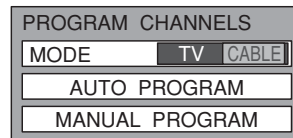


(See page 14)

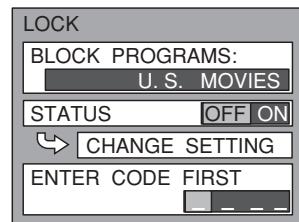


(See pages 15-18)



(See page 19)

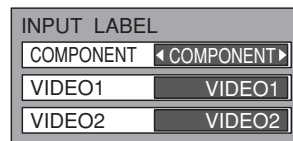



(See page 19)

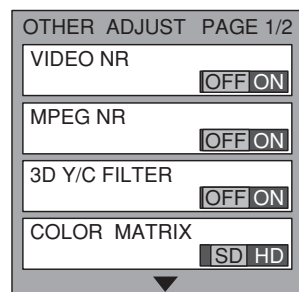

(See page 20)



Tuning Channels

- 1 Press the TV/VIDEO button to display the TV channel.
- 2 Press the MENU button to display the MENU screen and select SET UP.

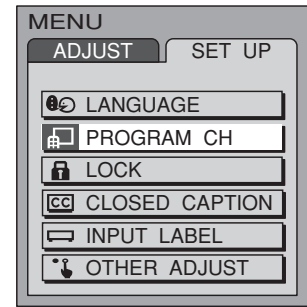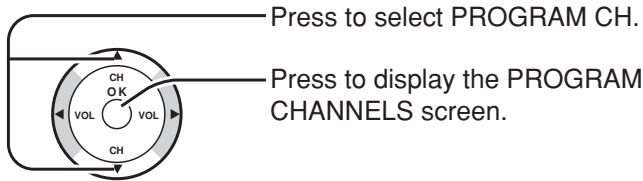

Mode selection



- 3 Press to select MODE.
- Press to select TV or CABLE.

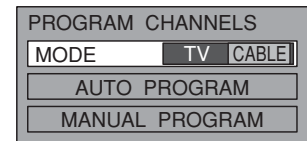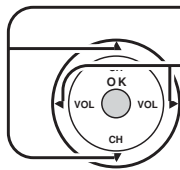



Automatic channel programming

Automatically scans and stores all the TV channels.

- 4 Press to select AUTO PROGRAM.
- Press to display the AUTO PROGRAM screen.

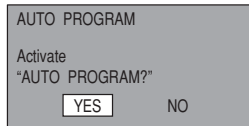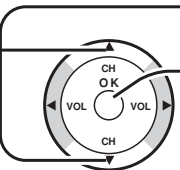

- 5 Press to select YES.
- Press to start AUTO PROGRAM.

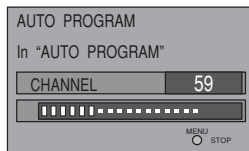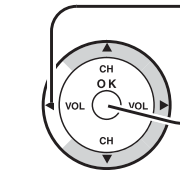

Channels will automatically advance until all channels have been scanned. Channel numbers with video signal received will be stored in the Channel Memory.



Notes:

- When any button is pressed during AUTO PROGRAM, the TV will return to normal viewing. (Channels searched up to that point are added.)
- After AUTO PROGRAM finishes, the lowest channel number added will be displayed.
- When there is no receivable channel, channel 69 (for TV) or channel 125 (for cable TV) is displayed.


Manual channel programming

Add or delete a channel manually.


- 4 Press to select MANUAL PROGRAM.
- Press to display the MANUAL PROGRAM screen.

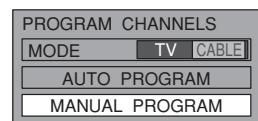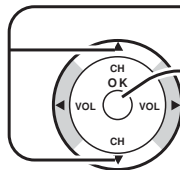

- 5 Press to select the channel.
- You can also use the numbered buttons.

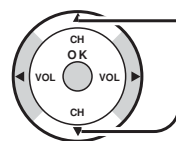

- 6 Press to add the channel to the Channel Memory (the channel number turns blue).
- Press to delete the channel from the Channel Memory (the channel number turns yellow).


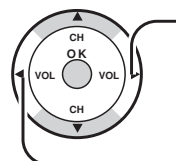


- Repeat steps 5 and 6 for other channels.


LOCK

V-Chip technology allows parents to use the TV rating codes to block programs that they feel are inappropriate for their children to watch.

- 1 Press the MENU button to display the MENU screen and select SET UP.

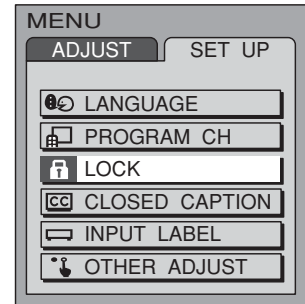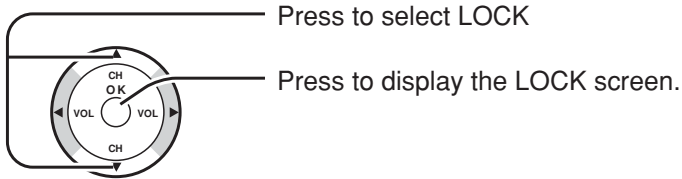


2

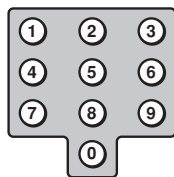

Input 4-digit code.



- To clear the numbers while entering the code, press Up or Down .
- You will need the code to enter the LOCK menu.
- After entering your password for the first time, ENTER CODE FIRST will change to CHANGE CODE.

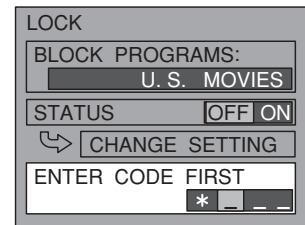



Note:

Use a code that is easy to remember and record it in a safe place.



3

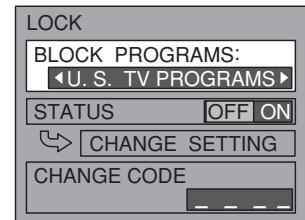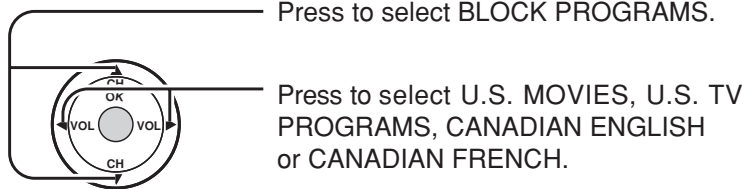

4

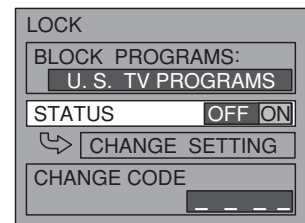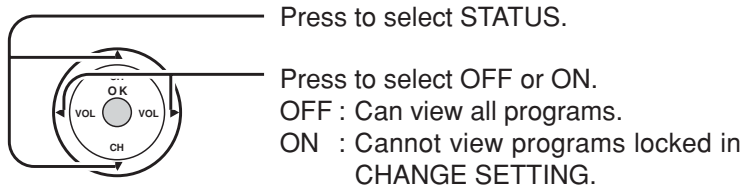


5

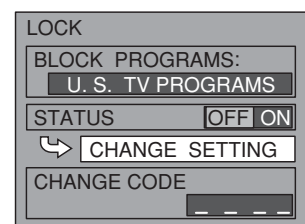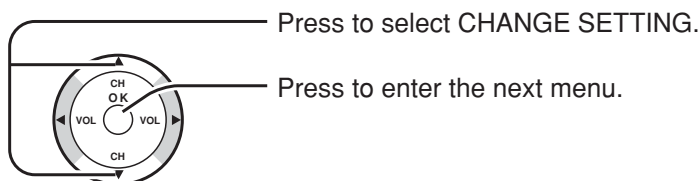

U.S. MOVIES

This TV features the “V-Chip technology” which allows you to use Motion Picture Ratings when viewing movies or video tapes. This innovation allows parents to block various types of movies and video tapes at their discretion.

6

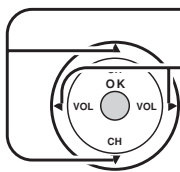


Press to select VIEW NR PROGRAMS?.

Press to select NO or YES.

NO : Cannot view programs with NR signals.

YES : Can view programs with NR signals.

7

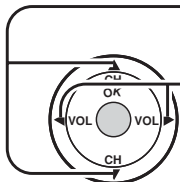


Press to select the rating.

Press to lock or unlock the rating.

Lock : Red

Unlock : Green

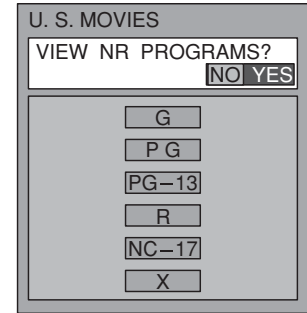

Notes:


- When a rating is locked, all ratings below this rating are locked.
- When a rating is unlocked, all ratings above this rating are unlocked.

NR	CONTAINS NO RATING (NOT RATED) AND NA (NOT APPLICABLE) PROGRAMS. Movie has not been rated or rating does not apply.
G	GENERAL AUDIENCES. All ages admitted.
PG	PARENTAL GUIDANCE SUGGESTED. Some material may not be suitable for children.
PG-13	PARENTS STRONGLY CAUTIONED. Some material may be inappropriate for children under 13.
R	RESTRICTED. Under 17 requires accompanying parent or adult guardian.
NC-17	NO ONE 17 AND UNDER ADMITTED.
X	ADULTS ONLY.

U.S. TV PROGRAMS

This TV features the “V-Chip technology” which allows you to use U.S. TV PROGRAMS Guide ratings to block various types of TV programs.

6

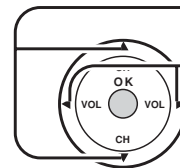


Press to select VIEW NR PROGRAMS?.

Press to select NO or YES.

NO : Cannot view programs with NR signals.

YES : Can view programs with NR signals.

7

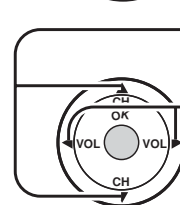


Press to select SETTING.

Press to select BASIC or DETAILED.

BASIC : You can select the ratings.

DETAILED : You can select the ratings and options.

8

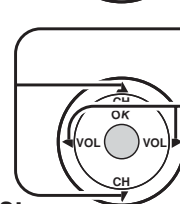


Press to select the rating.

Press to lock or unlock the rating.

Lock : Red

Unlock : Green

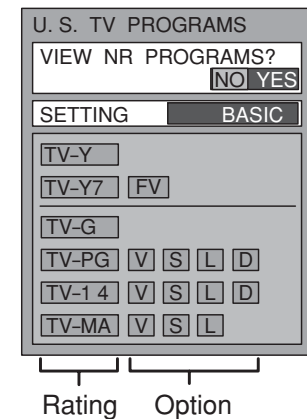

Notes:

- When a rating is locked, all ratings (including options) below this rating are locked.
- When a rating is unlocked, all ratings (including options) above this rating are unlocked.
- When an option (V, S, L or D) is locked, all the same options (V, S, L or D) below this rating are locked.
- When an option (V, S, L or D) is unlocked, all the ratings and the same options (V, S, L or D) above this rating are unlocked.

NR	Not Rated. See Customer Caution below.
TV-Y	All children. The themes and elements in this program are specifically designed for a very young audience, including children from ages 2-6.
TV-Y7	Directed to older children. Themes and elements in this program may include mild physical or comedic violence, or may frighten children under the age of 7.
TV-G	General audience. It contains little or no violence, no strong language, and little or no sexual dialogue or situations.
TV-PG	Parental guidance suggested. The program may contain infrequent coarse language, limited violence, some suggestive sexual dialogue and situations.
TV-14	Parents strongly cautioned. This program may contain sophisticated themes, sexual content, strong language and more intense violence.
TV-MA	Mature audiences only. This program may contain mature themes, profane language, graphic violence, and explicit sexual content.
FV	FANTASY/CARTOON VIOLENCE
V	VIOLENCE
S	SEX
L	OFFENSIVE LANGUAGE
D	DIALOGUE WITH SEXUAL CONTENT

Customer Caution


The V-Chip system that is used in this set is capable of blocking “NR” programs (non rated, not applicable as and none) per FCC Rules Section 15.120(e)(2). If the option of blocking “NR” programs is chosen “unexpected and possibly confusing results may occur, and you may not receive emergency bulletins or any of the following types of programming:”

- Emergency Bulletins (Such as EAS messages, weather warnings and others)
- Locally originated programming • News • Political • Public Service Announcements • Religious • Sports
- Weather



CANADIAN ENGLISH / CANADIAN FRENCH

The V-CHIP used in this TV allows you to block various types of movies and television programs based on the two rating systems used in Canada. It also lets you block or unblock Canadian French programs according to various ratings categories.


6

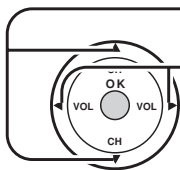

Press to select VIEW E PROGRAMS?.*
 Press to select NO or YES.
 NO : Cannot view programs with E signals.
 YES : Can view programs with E signals.
 *E means Exempt.

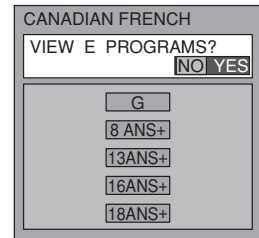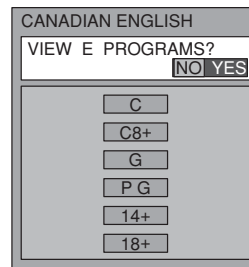

7

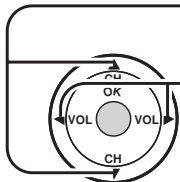

Press to select the rating.
 Press to lock or unlock the rating.
 Lock : Red
 Unlock : Green

Notes:

- When a rating is locked, all ratings below this rating are locked.
- When a rating is unlocked, all ratings above this rating are unlocked.

CANADIAN ENGLISH RATINGS CHART

E	Exempt - Exempt programming includes: news, sports, documentaries and other information programming, talk shows, music videos, and variety programming.
C	Programming intended for children under age 8. No offensive language, nudity or sexual content.
C8+	Programming generally considered acceptable for children 8 years and over. No profanity, nudity or sexual content.
G	General programming, suitable for all audiences.
P G	Parental Guidance suggested. Some material may not be suitable for children.
14+	Programming contains themes or content which may not be suitable for viewers under the age of 14. Parents are strongly cautioned to exercise discretion in permitting viewing by pre-teens and early teens.
18+	18+ years old. Programming restricted to adults. Contains constant violence or scenes of extreme violence.

CANADIAN FRENCH RATINGS CHART

E	Exempt - Exempt programming.
G	General - Programming intended for audience of all ages. Contains no violence, or the violence content is minimal or is depicted appropriately.
8 ANS+	8+ General - Not recommended for young children. Programming intended for a broad audience but contains light or occasional violence. Adult supervision recommended.
13ANS+	Programming may not be suitable for children under the age of 13 - Contains either a few violent scenes or one or more sufficiently violent scenes to affect them. Adult supervision strongly suggested.
16ANS+	Programming may not be suitable for children under the age of 16 - Contains frequent scenes of violence or intense violence.
18ANS+	Programming restricted to adults. Contains constant violence or scenes of extreme violence.



CLOSED CAPTION

This unit has a built in decoder that provides a visual depiction of the audio portion of a television program in the form of written words across the screen (white or colored letters on a black background). It allows you to read the dialogue of a television program or other information.


Notes:

- This feature is available only with the 480i input signal and with programs that include closed captions.
- The closed caption is not displayed when you set the aspect to "ZOOM" (see page 24).

1 Press the MENU button to display the MENU screen and select SET UP.

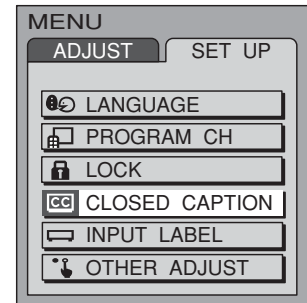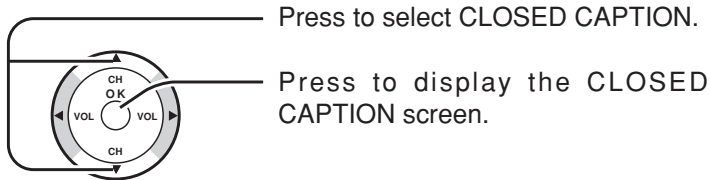

2 Press to select OFF, C1 or C2.


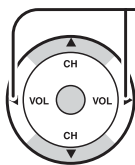


- **OFF (NO)**: Recommended mode when Closed Caption is not being used.
- **C1**: For video related information that can be displayed (up to 4 lines of script strategically placed on the television screen so that it does not obstruct relevant parts of the picture).
- **C2**: Another mode used for video related information.



INPUT LABEL

You can change the video input labels displayed on the screen to match the connected device (VCR, DVD player, etc.).

1 Press the MENU button to display the MENU screen and select SET UP.

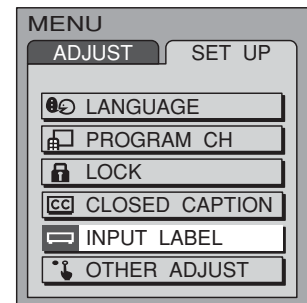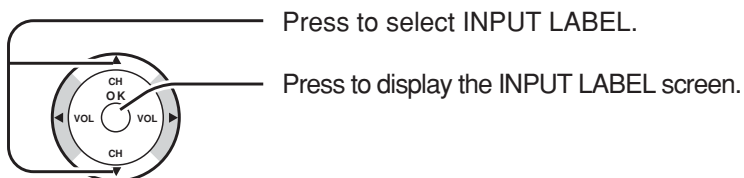


2 Press to select the video input.

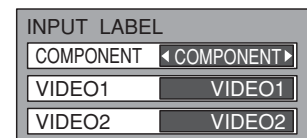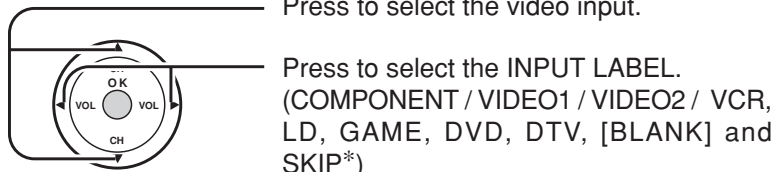



* Select to skip unused video input when pressing TV/VIDEO button.

OTHER ADJUST

- 1** Press the MENU button to display the MENU screen and select SET UP.

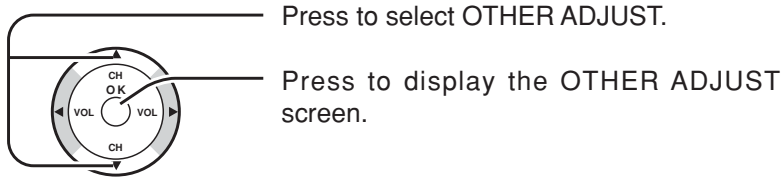

- 2**
- Press to select the item.
- Press to select the setting.

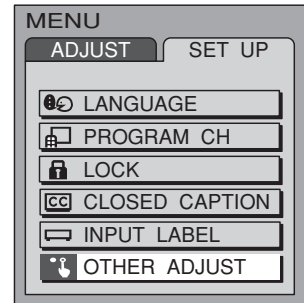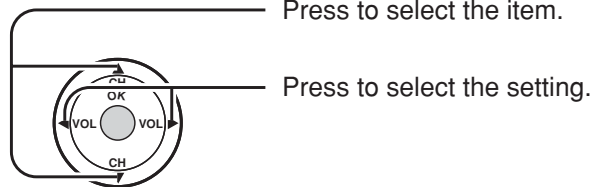

VIDEO NR

Reduce video noise in the picture.

OFF ↔ ON

MPEG NR

Noise unique to DVD, STB, etc. will be reduced.

OFF ↔ ON

3D Y/C FILTER

Minimizes noise and cross color in the picture. Not available for COMPONENT VIDEO INPUT.

OFF ↔ ON

COLOR MATRIX

Displays input signals (480p signals) in natural color. Automatically adjusts color parameters for HD (high definition) and SD (standard definition).

SD ↔ HD

Note:

COLOR MATRIX is effective only when 480p signal is input in COMPONENT input mode.

In any other case the indication of COLOR MATRIX becomes blue, and changing between SD and HD is not possible.

POWER SAVE

Reduces screen brightness to lower power consumption. Eye-friendly for viewing in a dark room.

STANDARD ↔ SAVING

BLACK LEVEL



Select DARK or LIGHT depending on the picture conditions, when selecting the video or component input.

The dark scene becomes easy to see.

DARK ↔ LIGHT



Note:

Fixed to DARK when selecting TV mode.


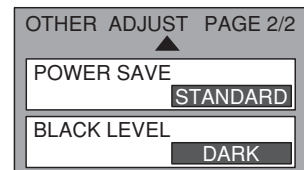
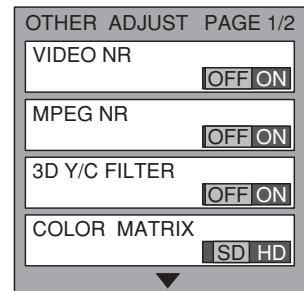


PICTURE ADJUST

1 Press the MENU button to display the MENU screen and select ADJUST.

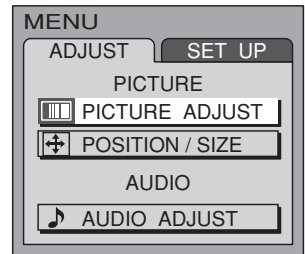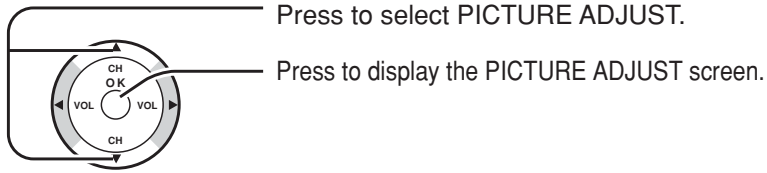

2 Press to select the sub-menu.

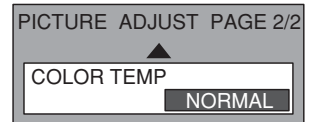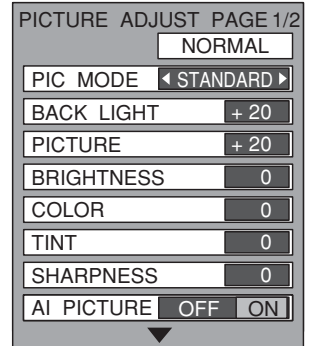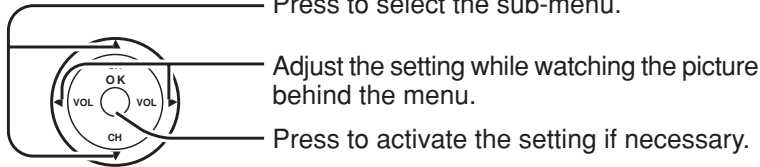

NORMAL / NORMALIZE

Select "NORMALIZE" and press "OK" to return each PIC MODE to the factory default setting.

Notes:

- "NORMAL" means the PIC MODE is at the factory default setting. "NORMAL" changes to "NORMALIZE" when you change the setting of BACK LIGHT, PICTURE, BRIGHTNESS, COLOR, TINT, SHARPNESS, AI PICTURE or COLOR TEMP.
- You can normalize each PIC MODE separately.

PIC MODE

MODE	Function
STANDARD	Displays a standard image for average lighting conditions.
CINEMA	Ideal for watching movies in a dark room.
VIVID	Displays a clear image with high contrast in a bright room.
AUTO	Automatically senses the ambient light conditions and adjusts the brightness and gradation accordingly, to optimize contrast.

PIC MODE is stored for TV, VIDEO1, VIDEO2 and COMPONENT individually.

BACK LIGHT, PICTURE, BRIGHTNESS, COLOR, TINT, SHARPNESS, AI PICTURE, COLOR TEMP




You can change the level of each Item (BACK LIGHT, PICTURE, BRIGHTNESS, COLOR, TINT, SHARPNESS, AI PICTURE and COLOR TEMP) for each MODE (STANDARD, CINEMA, VIVID and AUTO) according to your personal preference.

Sub-menu	Function
BACK LIGHT	Luminance of the back light is adjusted.
PICTURE	Selects proper contrast and density for the room.
BRIGHTNESS	Adjusts for easier viewing of dark pictures such as night scenes.
COLOR	Adjusts the level of color.
TINT	Adjusts for flesh tone color (more green or more red).
SHARPNESS	Adjusts the degree of sharpness.
AI PICTURE	Controls dark areas without affecting the black level or brightness in the overall picture.
COLOR TEMP (Color temperature)	Increases or decreases WARM (red) and COOL (blue) colors to suit personal preference. \rightarrow NORMAL \leftrightarrow COOL \leftrightarrow WARM \leftarrow



POSITION/SIZE

During "ZOOM" mode finely adjust the vertical position and the size of the screen.



- 1** Press the MENU button to display the MENU screen and select ADJUST.

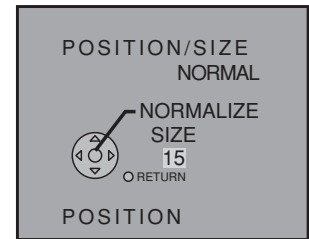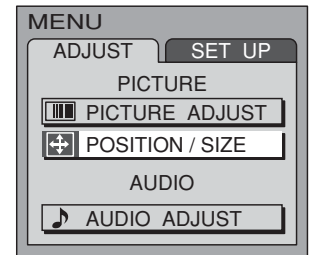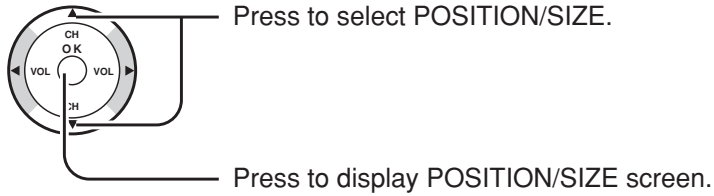

- 2** For "ZOOM" mode (see page 24)
• POSITION

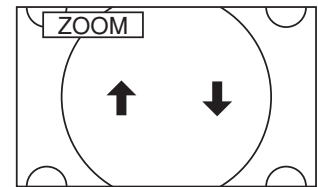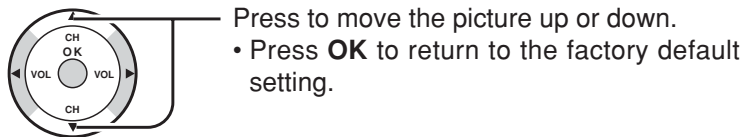


• SIZE

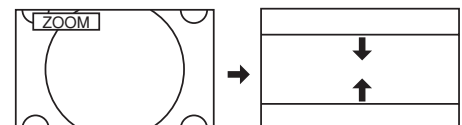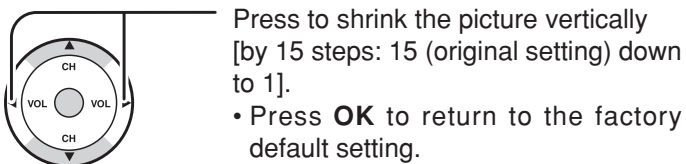


AUDIO ADJUST

1 Press the MENU button to display the MENU screen and select ADJUST.

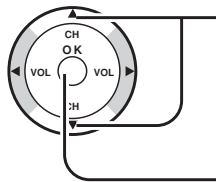


Press to select AUDIO ADJUST.

Press to display the AUDIO ADJUST screen.


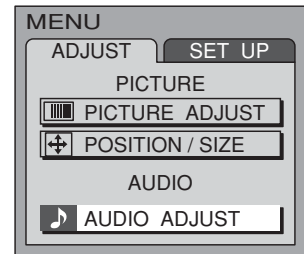


2 Press to select the sub-menu.

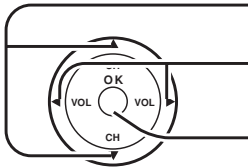

Select the setting while listening to the sound.

 Press to activate the setting if necessary.

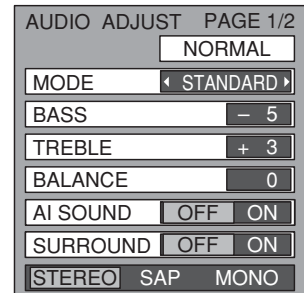

NORMAL / NORMALIZE

Select "NORMALIZE" and press "OK" to return each MODE to the factory default setting.

Notes:

- "NORMAL" means the MODE is at the factory default setting. "NORMAL" changes to "NORMALIZE" when you change the setting of BASS, TREBLE, BALANCE, AI SOUND, SURROUND or AUDIO LEVELER.
- You can normalize each MODE separately.

MODE

STANDARD	Emits the original sound.
DYNAMIC	Gives contrast to sound.
SPEECH	Make voice sound clear.

BASS, TREBLE, BALANCE, AI SOUND, SURROUND

You can change the level of each sub-menu (BASS, TREBLE, BALANCE, AI SOUND, SURROUND) for each MODE (STANDARD, DYNAMIC and SPEECH) according to your personal preference.

BASS	Adjusts low frequencies.
TREBLE	Adjusts high frequencies.
BALANCE	Adjusts left and right volume.
AI SOUND	Automatically adjusts sound quality when ON is selected.
SURROUND	To enjoy a concert hall effect, select ON when stereo is playing.

STEREO / SAP / MONO

- Red display : With signal
- White display : No signal
- White display (All modes) : MONO
- To change the mode using SAP button (see page 11).


STEREO	Two channel Audio reception.
SAP	Second Audio Programming (typically used for bilingual audio).
MONO	Select when stereo signal is weak.

AUDIO LEVELER

You can adjust the volume level for each of the input modes (TV, VIDEO1, VIDEO2 and COMPONENT).

ASPECT Controls

This feature allows you to enjoy viewing the picture at its maximum size, including wide screen cinema format picture.

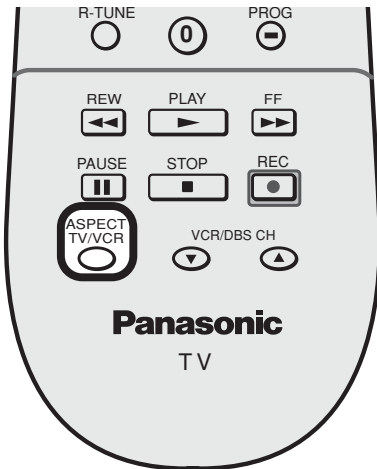

ASPECT TV/VCR

Each time you press the button:

→ JUST → ZOOM → FULL → NORMAL

Notes:

- This feature does not work for 1080i and 720p input signals.
- The aspect setting is stored separately for TV, VIDEO1, VIDEO2 and COMPONENT.

Mode	Picture	Explanation
NORMAL		NORMAL mode will display a 4:3 picture at its standard 4:3 size without any stretching.
JUST		JUST mode will display a 4:3 picture at its maximum size but with aspect correction applied to the sides of the screen so that elongation is only apparent at the left and right edges of the screen. The size of the picture will depend on the original signal.
ZOOM		ZOOM mode magnifies the central section of the picture.
FULL		FULL will display the picture at its maximum size but with slight elongation.


Operating peripheral equipment using the remote control


Programming the remote control code

You can operate other manufacturers' components using this TV's remote control.


Preparations:

- Connect the plug of the external component to the wall outlet.
- Make sure the component is turned off.

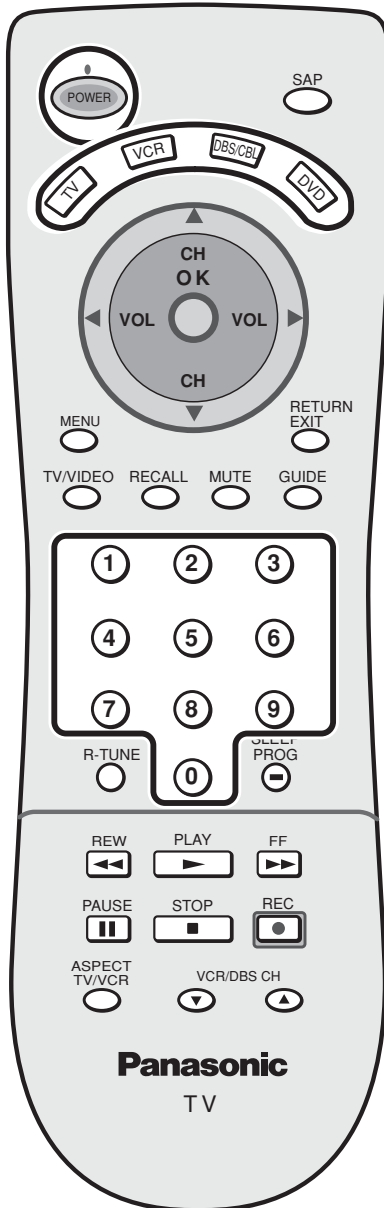


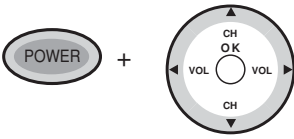- 

Press and hold **POWER** and **OK** together, for at least **5 seconds**.

 - The mode selection buttons flash, then release **POWER** and **OK**.
- 

Select the type of the component.

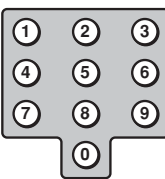 - The selected button lights and all others go out.
- 

Enter the 3-digit infrared code (see pages 26, 27).


 - Factory default setting: Panasonic
 - Press **POWER** to test the operation.

Notes:

- If the component does not operate with the remote control, repeat the procedure using another code. (Some brands have multiple codes).
- If an incorrect code is entered, or if the procedure takes longer than 30 seconds, the programming will fail.

To find a code not listed in the index

After step 2 above,

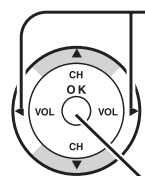
- 
- Press to select the code.
 - The potential code is loaded for the device selected in step 2.
 - Press **POWER** button to test the operation.
 - Repeat the steps until the component code is found. It may take many attempts before the correct code is found.
 - Press to store the code.

Infrared Code Index

The Universal Remote Control is capable of operating many component brands after entering a code. Some components may not operate because the codes are not available due to limited memory. The Universal Remote Control does not control all features found in each model.

Write the code numbers from tables in this space. This will serve as a reference if you need to program your Remote Control.


VCR	DBS	CABLE	DVD
<input type="text"/> <input type="text"/> <input type="text"/>	<input type="text"/> <input type="text"/> <input type="text"/>	<input type="text"/> <input type="text"/> <input type="text"/>	<input type="text"/> <input type="text"/> <input type="text"/>

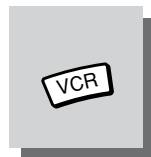

Codes for VCR

Brand	Code
Admiral	335
Aiwa	332
Akai	314, 315, 316, 329
Audio Dynamic	311, 339
Bell & Howell	305, 313
Broksonic	320, 326
Canon	323, 325
Citizen	306
Craig	305, 306, 329
Curtis Mathes	324, 345
Daewoo	301, 324, 343
DBX	310, 311, 339
Dimensia	345
Emerson	303, 319, 320, 325, 326, 343
Fisher	305, 307, 308, 309, 313
Funai	320, 326, 334
GE	324, 333, 345
Goldstar	306
Gradiente	334
Hitachi	300, 323, 345
Instant Replay	323, 324
Jensen	339
JVC	310, 311, 334, 339
Kenwood	306, 310, 311, 339
LXI	300, 305, 306, 307, 308, 309
Magnavox	323, 324, 331
Marantz	310, 311, 339
Marta	306
Memorex	309, 324
MGA	338, 340, 341, 347, 348
Minolta	300, 345
Mitsubishi	338, 340, 341, 347, 348
Multitech	304, 347
NEC	310, 311, 334, 339
Olympic	323, 324
Optimus	306, 321, 328, 335

Brand	Code
Orion	320, 326
Panasonic	321, 322, 323, 324
J.C.Penney	300, 305, 310, 311, 324, 339, 345
Pentax	300, 311, 345
Philco	320, 323, 324, 326, 331, 343
Philips	323, 324, 331
Pioneer	323
Proscan	300, 301, 302, 323, 324, 331, 333, 345, 346
Quasar	321, 322, 323, 324
Radio Shack	305, 309, 324, 333, 336, 340
RCA	300, 301, 302, 323, 324, 331, 333, 345, 346
Realistic	305, 309, 324, 336, 340
Samsung	302, 304, 333
Sansui	320, 326, 339, 352
Sanyo	305, 309, 313
Scott	301, 302, 304, 309, 320, 326, 338, 340, 347, 348
Sears	300, 305, 306, 307, 308
Sharp	335, 336
Shintom	317
Signature 2000	335
Singer	317
Sony	328, 329, 330
Sylvania	323, 324, 331
Tashiro	306
Tatung	310, 311, 339
Teac	310, 311, 339
Technics	321, 322, 323, 324
Teknika	324
Toshiba	301, 346
Vector Research	311
Wards	306, 309, 335, 336, 344
Yamaha	305, 310, 311, 339
Zenith	306, 344

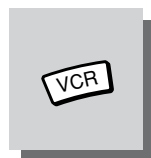

Codes for Personal Video Recorders

Brand	Code
Panasonic Replay	100
Philips Tivo	101
Sony Tivo	102

Operating peripheral equipment using the remote control



DBS/CBL

Codes for Cable Box

Brand	Code
ABC	124
Archer	125, 132
Cableview	105, 132
Citizen	105, 122
Curtis	112, 113
Diamond	124, 125, 132
Eagle	129
Eastern	134
GC Brand	105, 132
Gemini	122
General Instrument/ Jerrold	111, 119, 120, 121, 122, 123, 124, 125, 126, 127
Hamlin	112, 118, 140, 141, 142, 145
Hitachi	103, 124
Macom	103, 104, 105
Magnavox	133
Memorex	130
Movietime	105, 132
Oak	102, 137, 139
Panasonic	109, 110, 114
Philips	106, 107, 128, 129, 130
Pioneer	101, 116
Pulsar	105, 132

Brand	Code
Puser	132
RCA	115
Realistic	132
Regal	112, 118, 140, 141, 142, 145
Regency	134
Rembrandt	105, 132, 137
Samsung	105
Scientific Atlanta	111, 112, 113
Slmark	101, 105
Sprucer	105, 110
Stargate	105, 132
Tel eview	101, 105
Texscan	144
Tocom	135
Toshiba	104
Unika	125, 132
Universal	122, 132
Videoway	106
Viewstar	129, 130
Zenith	100, 117
Zenith /Drae Satellite	100



DBS/CBL

Codes for DBS

Brand	Code
Dish Network	105, 115, 116
Echo Star (Echostar)	105
Express VU	105, 115
G.E.	106
G.I. (General Instrument)	108
Gradiente	114
Hitachi	103, 111, 112
HNS (Hughes)	103

Brand	Code
Magnavox	101, 102
Panasonic	104
Philips	101, 102
Primestar	108
Proscan	106, 109, 110, 113
RCA	106, 109, 110, 113
Sony	107
Star Choice	103, 108
Toshiba	100
Uniden	101, 102



DVD

Codes for DVD

















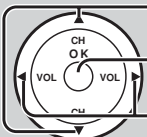


Brand	Code
Denon	100
Ferguson	101
JVC	109
Mitsubishi	105
Nordmende	101
Panasonic	100
Philips	103
Pioneer	102
RCA	101

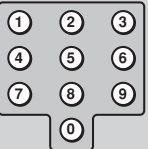Brand	Code
Saba	101
Samsung	110
Sharp	108
Sony	104
Technics	100
Thomson	101
Toshiba	103
Yamaha	100
Zenith	107

Operating peripheral equipment using the remote control

Mode Operational Key Chart

 This chart defines which keys are operational after programming (if needed), while in the selected remote control mode : DTV, CABLE, DBS, VCR, DVD ...etc.

KEY NAME	TV MODE	VCR MODE	CABLE MODE	DBS MODE	DVD MODE (DVD)
	POWER	POWER	POWER	POWER	POWER
	SAP ON/OFF	–	–	STB AUDIO TRACK	–
	MUTE	TV MUTE	TV MUTE	STB MUTE	TV MUTE
	TV INPUT SW	TV INPUT SW	TV INPUT SW	TV INPUT SW	TV INPUT SW
	CHANNEL UP/DOWN	TV CHANNEL UP/DOWN	CABLE CHANNEL UP/DOWN	STB NAVIGATION UP/DOWN	NEXT/PREVIOUS CHAPTER
	ACTION	TV ACTION	ENTER	STB ACTION	–
	VOL + / –	TV VOLUME +/-	CABLE VOL +/-	STB NAVIGATION RIGHT/LEFT	TV VOLUME +/-
	MENU	–	–	STB MENU	–
	DISPLAY	ONSCREEN VCR DISPLAY	–	–	–
	EXIT	–	–	STB EXIT	–
	–	–	–	STB GUIDE	–
	Select Channel	Select Channel	Select Channel	Select Channel	–
	PREVIOUS CHAN OR VIDEO MODE	–	CABLE PREVIOUS	STB PREVIOUS	–
	SLEEP	–	–	STB PROGRAM/DASH	–
	–	VCR REW/FF	–	–	SKIP SEARCH <<REW/>>FF
	–	PLAY	–	–	PLAY
	–	PAUSE	–	–	PAUSE
	–	STOP	–	–	STOP
	–	VCR RECORD	–	–	–
	ASPECT	TV/VCR SWITCH	–	STB ASPECT	OPEN/CLOSE
	–	VCR CHANNEL UP/DOWN	–	PAGE UP/DOWN	SLOW +/-

Manuel de instrucciones [Resumen]

Estimado cliente de Panasonic

Bienvenido a la familia de clientes de Panasonic.

 


Esperamos sinceramente que disfrute durante muchos años de su nuevo televisor LCD. Para obtener el máximo beneficio de su aparato, lea estas instrucciones antes de hacer cualquier ajuste, y guárdelas para poder utilizarlas como referencia en el futuro.

Guarde también el recibo de su compra, y anote el número del modelo y el número de serie de su aparato en el espacio provisto en la cubierta posterior de estas instrucciones.

Instalación

Ajuste el soporte con el ángulo deseado




El ángulo del soporte se puede ajustar entre 5° hacia delante y 10° hacia atrás, y se puede girar 20° hacia la derecha/izquierda.

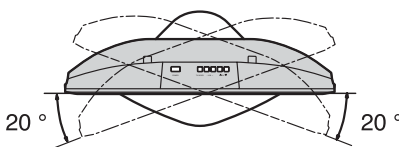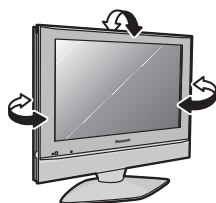

Modo de colgar el televisor LCD en la pared

Este televisor LCD solamente puede ser utilizado con el accesorio opcional siguiente. Si se utiliza con cualquier otro tipo de accesorio opcional podrá producir inestabilidad con la consiguiente posibilidad de ocasionar heridas.

- Soporte para colgar en pared TY-WK22LR1W

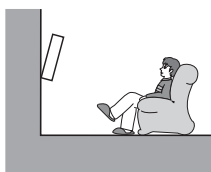
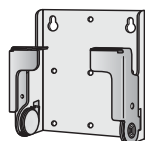
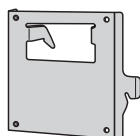


Asegúrese siempre de pedir a un técnico cualificado que le haga la instalación.

Instalación de las pilas del mando a distancia

Se necesitan dos pilas AA.

1. Abra la cubierta de las pilas.
2. Instale las pilas. Tenga en cuenta las polaridades (+ y -) al instalar las pilas.
3. Vuelva a colocar la cubierta.

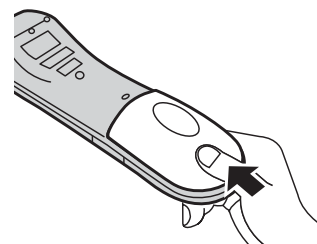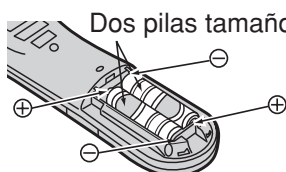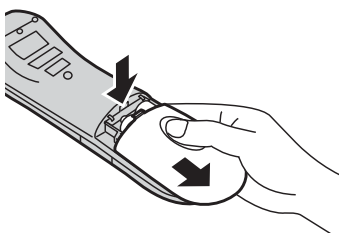

⚠ Precauciones relacionadas con la utilización de las pilas

La instalación incorrecta de las pilas puede causar fugas en las mismas que podrían estropear el transmisor de mando a distancia.

Las pilas deben desecharse por medios ecológicos.

1. Utilice siempre pilas nuevas cuando reemplace las viejas.
2. No intente cargar, cortocircuitar, desarmar, calentar o quemar las pilas usadas.
3. El cambio de las pilas resulta necesario cuando el mando a distancia funciona esporádicamente o no puede controlar esta unidad.

Conexión


Nota:

Con este aparato no se suministran cables ni conectores.

Conexión de antena

Para recibir correctamente los canales de VHF/UHF se requiere una antena externa. Para obtener la mejor recepción se recomienda utilizar una antena para exteriores. El modo de antena debe ajustarse a TV (consulte la página 36, Selección del mode).

La parte posterior del televisor

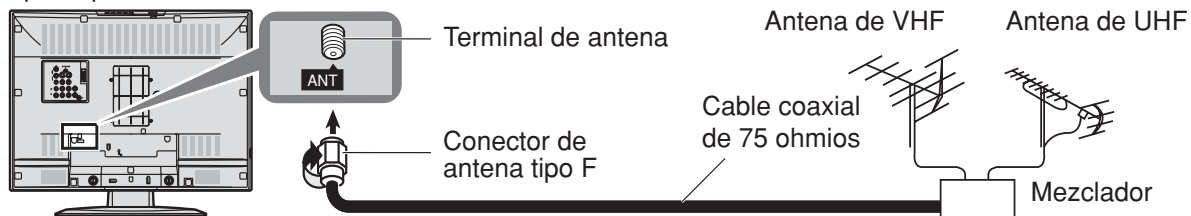


Conexión del receptor de TV por cable

- Para recibir los canales de televisión por cable (01 - 125) conecte el cable suministrado por su compañía de televisión por cable. El modo de antena debe ajustarse a CABLE (consulte la página 36, Selección del mode).
- Algunos sistemas de televisión por cable neutralizan algunos canales para reducir interferencias o tienen canales especiales (codificados). Para recibir correctamente estos canales se necesita un sintonizador de conversión de televisión por cable. Póngase en contacto con su compañía de televisión por cable para conocer los requerimientos de compatibilidad.
- Ponga el canal del televisor en CH3 o CH4 utilice esta conexión.


Receptor de TV por cable

La parte posterior del televisor

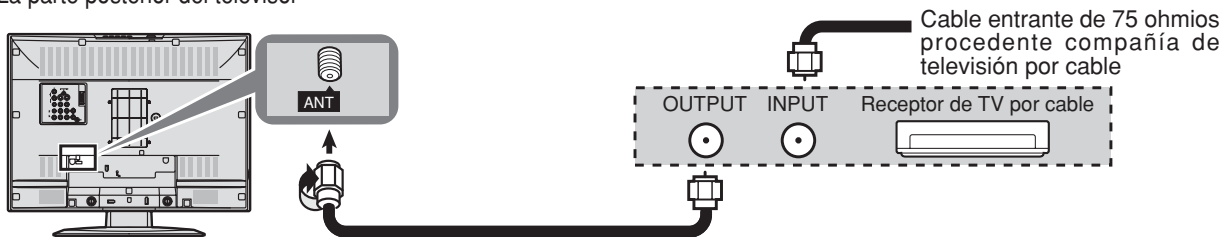

Receptor de TV por cable y Videgrabadora

La parte posterior del televisor

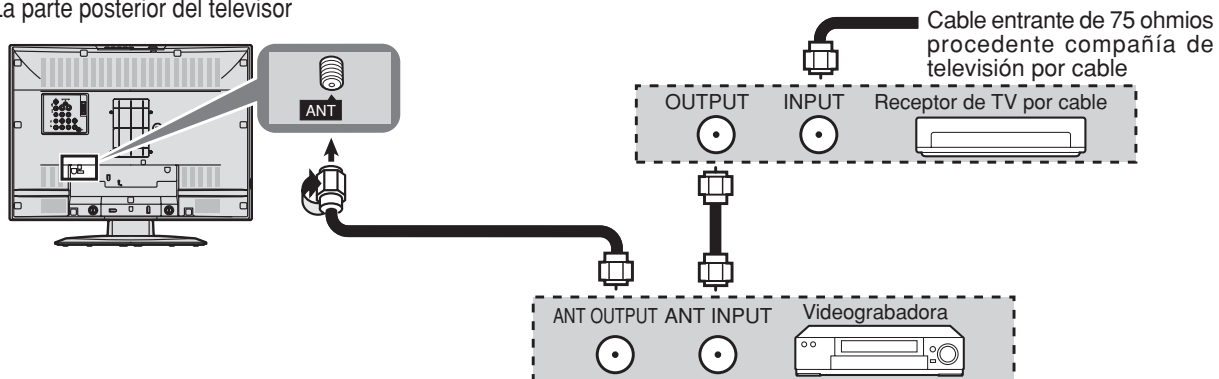

Conexión de otro equipo



Terminales de entrada traseros

Para liar los cables con la abrazadera

1. Tire hacia arriba.
2. Ponga los cables en los abrazadera y cierre.

Nota: Para evitar ruidos, no ponga juntos el cable de la antena y el de la alimentación.


La parte posterior del televisor

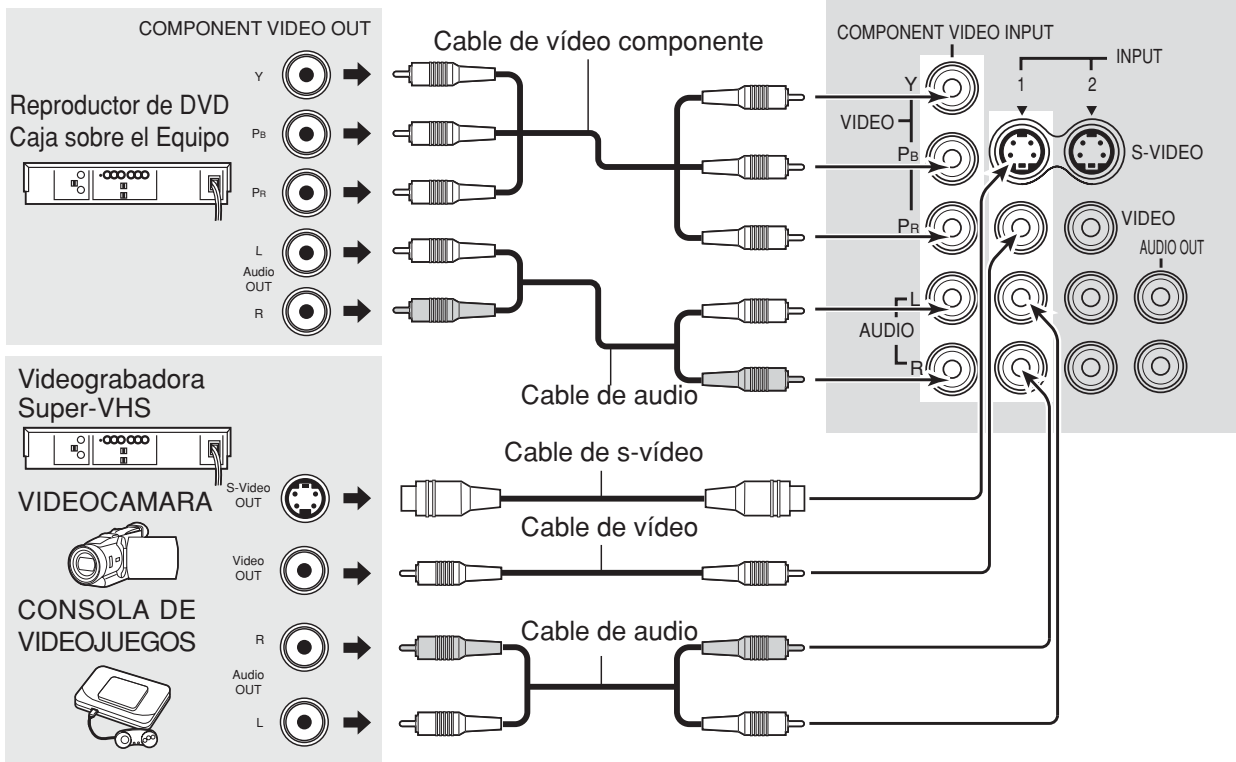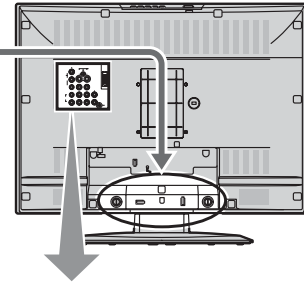


Notas:

- Al conectar cables de vídeo se da prioridad al cable de S-vídeo cuando están conectados el terminal de entrada S-VIDEO y el terminal de entrada VIDEO.
- Consulte a los fabricantes de los videojuegos acerca de los cables necesarios para conectar la consola de videojuegos.

Terminales de salida traseros

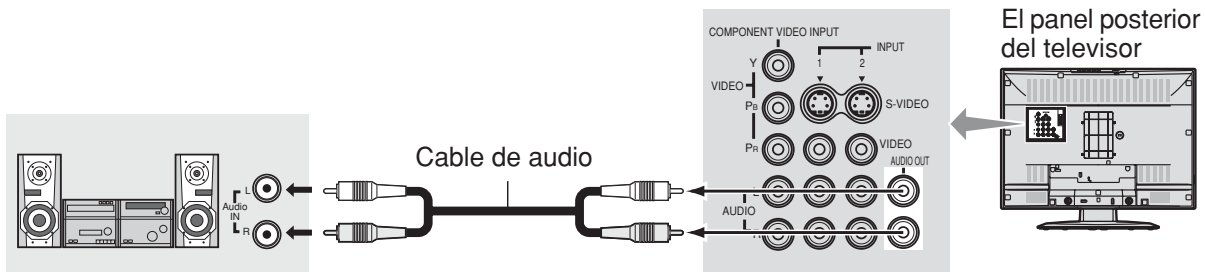

Conexión de auriculares

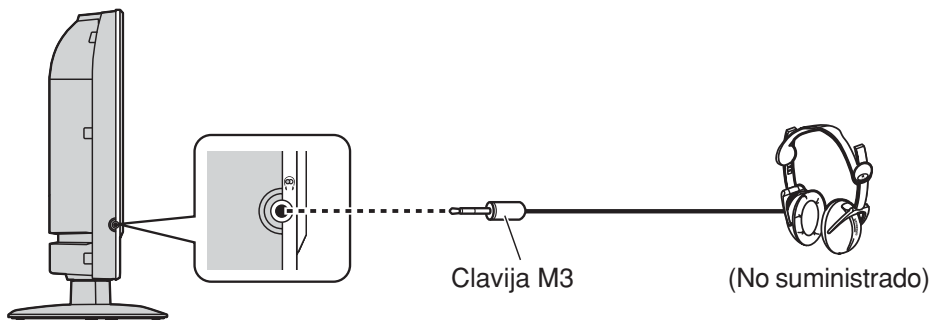


Conexión / desconexión de la alimentación

Preparación

Conecte el enchufe al tomacorriente.

La parte posterior del televisor

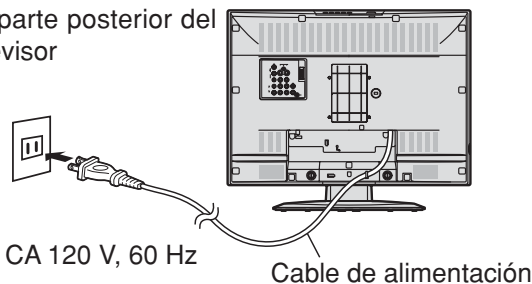

Nota:

El televisor consumirá algo de corriente siempre que el enchufe del cable de alimentación esté introducido en la toma de corriente.

Interruptor principal
POWER



En el aparato principal



Púlselo para conectar / desconectar la alimentación principal del televisor.

- Indicador de la alimentación
Conectada : Verde
Desconectada : Apagado

En el mando a distancia

 


Púlselo para encender / apagar el televisor.

- Indicador de la alimentación
Encendido : Verde
Apagado (En espera) : Rojo
- Esto no funciona cuando la alimentación principal está desconectada (apagado) (consulte arriba).


Nota:

La pantalla de abajo se visualiza durante unos momentos cuando se enciende el televisor.



Sensor C.A.T.S.

El LCD C.A.T.S. (Contrast Automatic Tracking System = Sistema de seguimiento automático del contraste) detecta automáticamente las condiciones de la luz ambiental y ajusta el brillo y la gradación en conformidad, para optimizar el contraste. C.A.T.S. estará activado cuando Modo de Imagen esté ajustado a Auto.

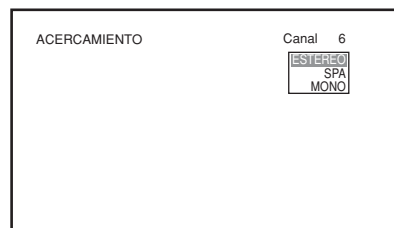


Nota:

Seleccione el idioma de menú antes de utilizar el televisor (consulte la página 35, Idioma).

Controles básicos
 
< Controles del lado superior >



Botón TV/VIDEO
Subida/bajada del volumen

Interruptor POWER principal
Púlselo para conectar/desconectar la alimentación principal del televisor (consulte la página 32)

Sensor de mando a distancia
Dentro de unos 7 metros enfrente del televisor.

Canal superior/inferior

Botón de la alimentación
Púlselo para encender o apagar el televisor.

Nota:

El cable de la alimentación del televisor deberá enchufarse primero al tomacorriente, y el televisor encenderse luego con el interruptor POWER (modo de espera).

Botones de selección directa de números de programas

R-TUNE

Botón R-TUNE

Cambia al canal o modo de vídeo anterior.

No resulta efectivo bajo las condiciones siguientes:

1. Justo después de encender el televisor.
2. Después de cambiar TV / CATV (MODO en Prog. Canales).
3. Justo después de la ejecución de ACP (programación automática de canales).
4. Cuando se selecciona el mismo canal que el canal actual.

SLEEP PROG

Botón PROG raya / Botón

Temporizador de cancelado

Programa números de canales para DTV y DBS.

→ 0 → 30 → 60 → 90

ASPECT TV/VCR

Botón ASPECT

Cambia el tamaño de la pantalla.

→ JUSTIFICADO → ACERCAMIENTO → COMPLETO → NORMAL

Botón SAP

Selecciona el modo de audio.

→ ESTEREO → SPA → MONO

Botones de selección de modo

Satélite de emisión digital para el control remoto
Selección del modo de televisión por cable para el control remoto

Selección del modo de videogradora para el control remoto

Selección del modo de disco de vídeo digital para el control remoto



Selección del modo de televisor para el control remoto

Cambia al siguiente canal superior

 
Mueve el cursor hacia arriba durante el modo del menú.

Reduce el volumen

Mueve el cursor hacia la izquierda durante el modo del menú.

Aumenta el volumen

Mueve el cursor hacia la derecha durante el modo del menú.



Visualiza el menú

Presione para acceder a los menús DTV, DBS o DVD.

Presione para volver MENU

anterior o salir de MENU.

Cambia al siguiente canal inferior

Mueve el cursor hacia abajo durante el modo del menú.

Púlselo para visualizar el menú del modo de entrada. Mientras se visualiza el menú, púlselo de nuevo para cambiar el modo de entrada. El modo de entrada cambia cada vez que se pulsa este botón.

Pulse este botón para silenciar el sonido, y púlselo de nuevo para cancelar el silenciamiento.

TV/VIDEO RECALL MUTE GUIDE Botón GUIDE para DBS

Púlselo para visualizar el estado actual del sistema como, por ejemplo, el modo de aspecto, el número del canal, el modo estéreo, TV/VIDEO y el temporizador de apagado.


Funcionamiento de otro dispositivo

Botones	REW / FF	PLAY	PAUSE	STOP
Aparato				
Videogradora	Rebobinado / avance rápido de videogradora	Reproducción	Pausa	Parada
CABLE/DBS	-	-	-	-
DVD	Búsqueda con salto en rebobinado / avance rápido	Reproducción	Pausa	Parada
Botones	REC	ASPECT TV/VCR	VCR/DBS CH	
Aparato				
Videogradora	Grabación de videogradora	Conmutación de televisor / videogradora	Subida / bajada de canal para videogradora	
CABLE/DBS	-	ASPECTO de STB	UP / DOWN de Página	
DVD	-	Abertura/cierre	Lentamente / + / -	

Operaciones con menús

1

Púlselo para visualizar la pantalla MENU.

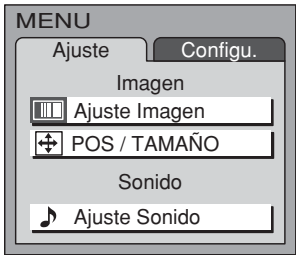

2



0






TV/VIDEO
Cambia el modo de entrada.

- Pulse para visualizar el menú de selección de entrada.

- 1 TV
- 2 Componente
- 3 Video 1
- 4 Video 2


- Pulse la tecla de número correspondiente en el mando a distancia para seleccionar la entrada de su elección.

Nota:
La entrada de vídeo también se puede seleccionar pulsando primero **TV/VIDEO**, luego los botones **CH▲▼** y finalmente la tecla "OK".

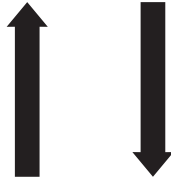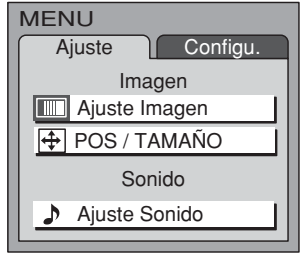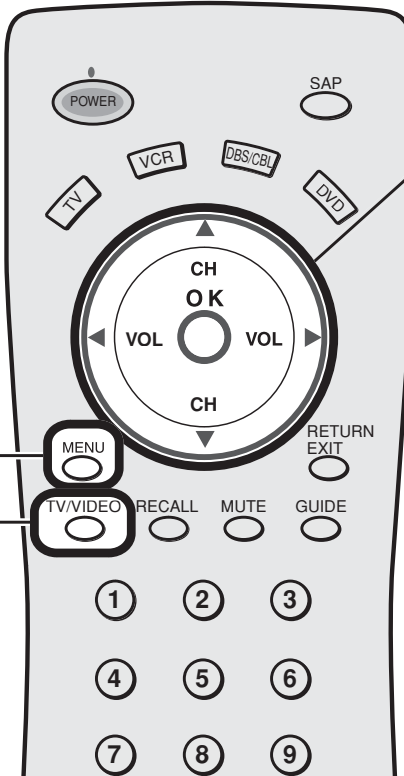

Cuadro de instrucciones de ayuda en pantalla
Cuando se visualiza un menú en el televisor aparece un cuadro de ayuda en la pantalla. Este cuadro de ayuda indica qué teclas del mando a distancia se utilizan para navegar por el menú mostrado.






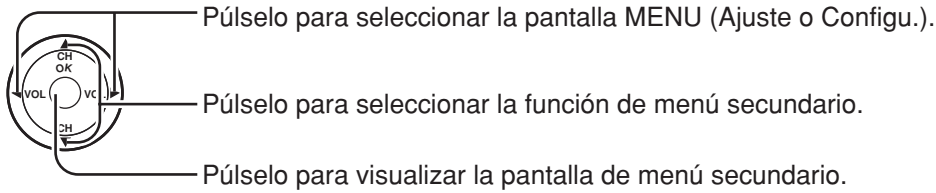





• Para volver a la pantalla anterior : RETURN EXIT

• Para salir de la pantalla MENU : MENU

Con esto se retorna a la visión normal.

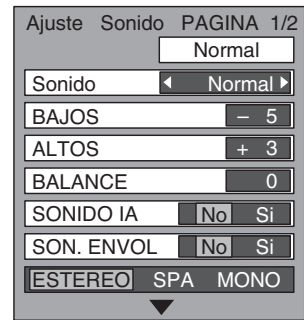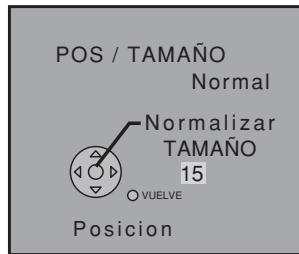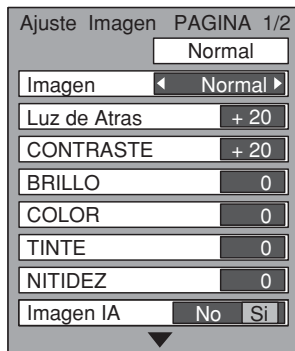


Seleccione el idioma del menú.

 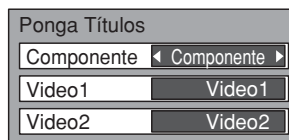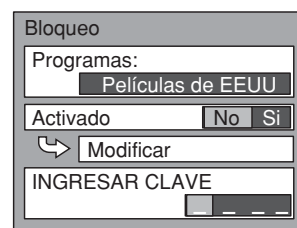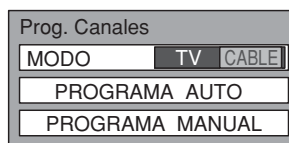

Sintonización de canales



1 Pulse el botón TV/VIDEO para visualizar el canal de TV.

2 Pulse el botón MENU para visualizar la pantalla MENU y seleccione Configu.

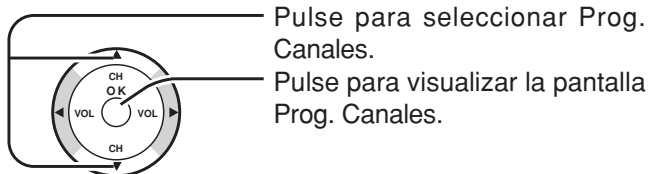

Selección del mode


3 Pulse para seleccionar MODO.

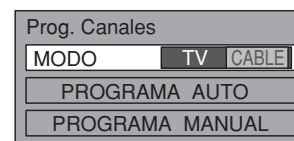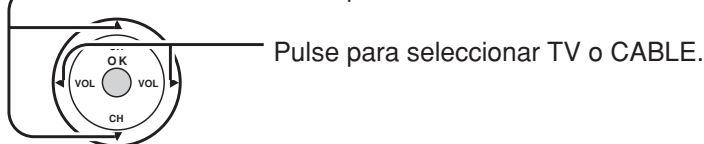



Programación automática de canales

Explora y guarda automáticamente todos los canales de TV.

4 Pulse para seleccionar PROGRAMA AUTO. Púselo para visualizar la pantalla PROGRAMA AUTO.

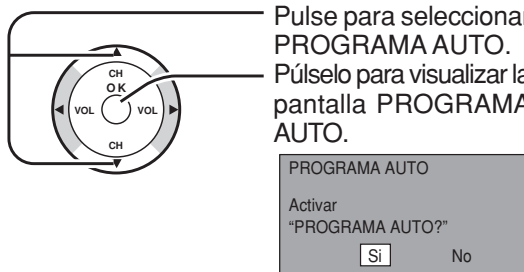

5 Pulse para seleccionar Si.

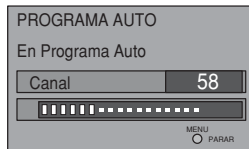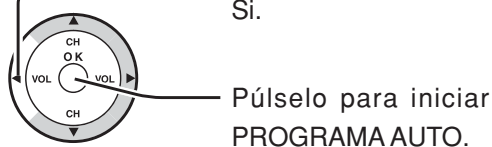

Los canales avanzarán automáticamente hasta que todos ellos hayan sido explorados. Los números de los canales con señal de vídeo recibida se guardarán en la memoria de canales.


Notas:

- Cuando se pulse cualquier botón durante PROGRAMA AUTO, el televisor volverá a mostrar la imagen normal. (Los canales encontrados hasta ese punto se añaden.)
- Después de terminar PROGRAMA AUTO se visualizará el número del canal más bajo añadido.
- Cuando no hay canal que puedan recibirse, se visualizará el canal 69 (para TV) o el canal 125 (para TV por cable).



Programación automática de canales

Añada o borre un canal manualmente.


4 Pulse para seleccionar PROGRAMA MANUAL. Púselo para visualizar la pantalla PROGRAMA MANUAL.

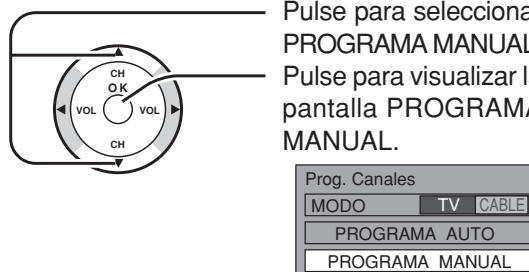

5 Pulse para seleccionar canal.

 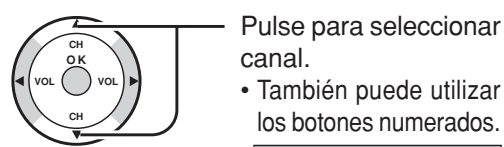



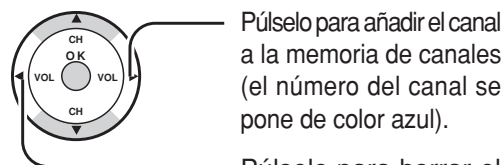













6 Púselo para añadir el canal a la memoria de canales (el número del canal se pone de color azul).



- Repita los pasos 5 y 6 para otros canales.

Troubleshooting

If there is a problem with your TV please refer to the table below to determine the symptoms, then carry out the suggested check. If this does not solve the problem, please contact your local Panasonic dealer, quoting the model number and serial number (both found on the rear of the TV).

Symptoms		Checks
Picture	Sound	
 Snowy Picture	 Noisy Sound	Antenna location, direction or connection.
 Multiple Images	 Normal Sound	Antenna location, direction or connection.
 Interference	 Noisy Sound	Electrical appliances. Cars / Motorcycles. Fluorescent lights.
 Normal Picture	 No Sound	Volume level. Sound mute switched on. STEREO/SAP/MONO
 No Picture	 No Sound	TV set to AV mode. Not plugged into AC outlet. Not switched on. Picture / Sound controls set at minimum levels. Check if in Standby mode.
 No Color	 Normal Sound	Color controls set at minimum levels. Weak signal.
 Poor or Distorted Picture	 Weak or No Sound	Retune Channel(s).
 Normal Picture	 Weak, Wrong or No Sound	Sound reception may have deteriorated. Set STEREO/SAP/MONO setting (AUDIO ADJUST menu) to SAP or MONO until reception improved.
Cannot operate with the remote control.		The battery/ies is/are exhausted. The batteries' polarity is wrong. The remote control sensor is exposed to strong light from a fluorescent lamp, etc.
The main unit is hot.		The main unit radiates heat and some of the parts may become hot. This is not a problem for performance or quality. Set up in a location with good ventilation. Do not cover the ventilation holes of the TV with a tablecloth, etc., and do not place on top of other equipment.
There may be red spots, blue spots, green spots and black spots on the screen.		This is a characteristic of liquid crystal panels and is not a problem. The liquid crystal panel is built with very high precision technology giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as fixed points of red, blue, green, or black. Please note this does not affect the performance of your LCD.

CUSTOMER SERVICES DIRECTORY (for U.S.A.)

Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicenter; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/consumersupport>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:

1-800-211-PANA (7262)

Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

For hearing or speech impaired TTY users, TTY : 1-877-833-8855

Accessory Purchases

Purchase Parts, Accessories and Instruction Books on line for all Panasonic Products by visiting our Web Site at:

<http://www.pasc.panasonic.com>

or, send your request by E-mail to:

npcparts@us.panasonic.com

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday - Friday 9 am to 8 pm, EST.)

Panasonic Services Company

20421 84th Avenue South,

Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

For hearing or speech impaired TTY users, TTY : 1-866-605-1277

Service in Puerto Rico

Panasonic Puerto Rico, Inc.

Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park,

Carolina, Puerto Rico 00985

Phone (787)750-4300, Fax (787)768-2910

Specifications

	TC-19LX50, TC-19LE50	TC-23LX50, TC-23LE50
Power Source	AC 120 V, 60 Hz	
Power Consumption	Average use : 66 W Stand-by condition : 0.11 W Power off : 0.1 W	Average use : 83 W Stand-by condition : 0.11 W Power off : 0.1 W
LCD	1280 × 768 pixels widescreen LCD panel.	1366 × 768 pixels widescreen LCD panel.
Screen Size (W × H × diagonal)	16.3 " × 9.8 " × 18.9 " (413 mm × 248 mm × 481 mm)	20.0 " × 11.3 " × 23.0 " (508 mm × 286 mm × 583 mm)
Channel Capability	VHF-12 : UHF-56 : Cable-125	
Sound		
Speakers	ø5 cm × 2 pcs, 8 Ω	ø6 cm × 2 pcs, 8 Ω
Audio Output	8 W [4 W + 4 W] (10%THD)	
Headphones	M3 (3.5 mm) Jack × 1	
FEATURES	3D Y/C Digital Comb Filter, CLOSED CAPTION, V-Chip	
Operating Conditions	Temperature : 41 °F - 95 °F (5 °C – 35 °C) Humidity : 5 % - 90 % RH (non-condensing)	
Connection Terminals		
INPUT	VIDEO (RCA PIN Type × 1) × 2	1.0 Vp-p (75 Ω)
	S-VIDEO (MINI DIN 4pin × 1) × 2	Y : 1.0 Vp-p (75 Ω), C : 0.286 Vp-p (75 Ω)
	AUDIO L-R (RCA PIN Type × 2) × 2	0.5 Vrms
COMPONENT VIDEO INPUT	Y × 1	1.0 Vp-p (including synchronization)
	P _B / P _R × 1	±0.35 Vp-p
OUTPUT	AUDIO L-R (RCA PIN Type × 2) × 1	0.5 Vrms
	AUDIO L-R (RCA PIN Type × 2) × 1	0.5 Vrms
Dimensions (W × H × D)		
Including TV Stand	20.2 " × 18.1 " × 10.2 " (514 mm × 459 mm × 259 mm)	24.1 " × 19.9 " × 10.2 " (612 mm × 505 mm × 259 mm)
TV Set Only	20.2 " × 15.6 " × 4.9 " (514 mm × 395 mm × 125 mm)	24.1 " × 17.4 " × 4.9 " (612 mm × 441 mm × 125 mm)
Mass (Weight)	8.5 kg (18.7 lb.) NET	9.5 kg (20.9 lb.) NET

Note:

Design and Specifications are subject to change without notice. Weight and Dimensions shown are approximate.

Customer's Record

The model number and serial number of this product can be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number _____

Serial Number _____

**Panasonic Consumer Electronics
Company, Division of Panasonic
Corporation of North America**
One Panasonic Way Secaucus
New Jersey 07094

Panasonic Puerto Rico Inc.
Ave. 65 de Infanteria, Km 9.5
San Gabriel Industrial Park,
Carolina, Puerto Rico 00985

Panasonic Canada Inc.
5770 Ambler Drive
Mississauga, Ontario
L4W 2T3



Important! Please complete and return within ten days.

You can also register online via the Internet at:

http://www.panasonic.com/register

It is not necessary to return this card in order to effectuate the limited warranty.

QAA01-01
Television

1. 1. Mr. 2. Mrs. 3. Ms. 4. Miss
First Name Initial Last Name

Street

Apt. No.

City

State

ZIP Code

2. E-mail Address:

3. Telephone number:

() -

4. Date of purchase:

Month / Day / Year

5. A. Model #: (refer to operating manual or box)

B. Serial #: (refer to the product)

6. Name of store where purchased:

City

State

or website address if purchased via the internet:

7. Price paid (excluding service contract, shipping and taxes): \$.00

8. Did you purchase or receive an extended service contract with your product?

1. Yes 2. No

9. Is this product:

- 1. The first TV you've ever purchased?
2. A replacement for another TV?
3. An additional product, already own one other TV?
4. An additional product, already own two or more other TVs?

10. Where did you first learn about this product?

- 01. Received as a Gift 08. Magazine Article/Review
02. In-store Display 09. Catalog
03. Store Advertisement/Store Flyer/Circular 10. Direct Mail Promotion
04. Newspaper Ad 11. Friend/Family Recommendation
05. Magazine Ad 12. Salesperson Recommendation
06. TV Advertisement 13. Internet
07. Radio Advertisement 14. Other

11. What were the most important factors that influenced your selection of this product? (check up to 2 responses)

- 01. Trust in Panasonic 07. Ease of Operation
02. Quality 08. Salesperson's Recommendation
03. Features 09. Friend/Family Recommendation
04. Price 10. Online Research
05. Size 11. Other
06. Appearance/Design

12. What were the most important features that influenced your selection of this product? (check up to 3 responses)

- 01. Picture Quality 07. Picture-in-Picture
02. HDTV Monitor 08. Lighted Remote
03. Comb Filter 09. On-screen Menu
04. Sound Quality 10. Parental Controls
05. Surround Sound 11. Energy Star Rating
06. Input Jacks 12. Other

13. Which of the following brands did you seriously consider before selecting Panasonic? (check all that apply)

- 01. Did not consider any other brands 09. Sampo
02. Apex 10. Samsung
03. Hitachi 11. Sanyo
04. JVC 12. Sharp
05. Mitsubishi 13. Sony
06. Philips 14. Sylvania
07. Pioneer 15. Toshiba
08. RCA 16. Zenith
17. Other

14. Excluding this purchase, what other electronics equipment do you currently own or intend to purchase?

Table with 3 columns: (A) If you Currently own, (B) If it's Panasonic or Technics, (C) Intend to buy in next 6 months. Rows include TV/DVD Combination, TV/VCR Combination, 27" or Larger Color TV, Projection TV, Digital TV, Plasma TV, Digital Camcorder, Digital Camera, Digital Satellite System, DVD Video Player, DVD Video Recorder, DVD Audio System, Dolby Digital Receiver, Home Theater System, MP3 Player, Cordless Phone, Fax Machine, Home Computer, Personal Digital Assistant, Microwave Oven.

15. Your date of birth:

Month / Year

16. Marital status: 1. Married 2. Single

17. Not including yourself, what is the GENDER and AGE (in years) of children and other adults living in your household?

Table with columns for Male, Female, Age for children and other adults.

18. Occupation: (check all that apply)

Table with columns for You and Spouse, listing various occupations.

19. Are you or your spouse

Table with columns for You and Spouse, listing marital status and employment.

20. Which group describes your annual family income?

- 01. Under \$15,000 08. \$75,000-\$99,999
02. \$15,000-\$19,999 09. \$100,000-\$124,999
03. \$20,000-\$29,999 10. \$125,000-\$149,999
04. \$30,000-\$39,999 11. \$150,000-\$174,999
05. \$40,000-\$49,999 12. \$175,000-\$199,999
06. \$50,000-\$59,999 13. \$200,000-\$249,999
07. \$60,000-\$74,999 14. \$250,000 & over

21. Level of education: (check highest level completed)

- 1. Completed High School 3. Completed Graduate School
2. Completed College

22. Which credit cards do you use regularly?

- 1. American Express, Diners Club 3. Dept. Store, Oil Company, etc.
2. MasterCard, Visa, Discover 4. Do not use credit cards

23. For your primary residence, do you: 1. Own? 2. Rent?

24. Which of the following do you plan to do within the next 6 or 12 months?

Table with columns for 1-6 Months and 7-12 Months, listing future plans like Get Married, Have a Baby, Buy a House, etc.

Please fold here

25. Please check all that apply to your household.

- | | | | |
|---|--|--|--|
| 01. <input type="checkbox"/> Shop by Catalog/Mail | 04. <input type="checkbox"/> Own a Compact Disc Player | 08. <input type="checkbox"/> Subscribe to an Online/Internet Service | 10. <input type="checkbox"/> Own an Apple/Macintosh Computer |
| 02. <input type="checkbox"/> Member of Frequent Flyer Program | 05. <input type="checkbox"/> Have a Dog | 09. <input type="checkbox"/> Own an IBM or Compatible Computer | 11. <input type="checkbox"/> Own a CD-Rom |
| 03. <input type="checkbox"/> Donate to Charitable Causes | 06. <input type="checkbox"/> Have a Cat | | |
| | 07. <input type="checkbox"/> Own a Cellular Phone | | |

26. To help us understand our customers' lifestyles, please indicate the interests and activities in which *you or your spouse* enjoy participating on a regular basis.

- | | | | |
|--|---|---|--|
| 01. <input type="checkbox"/> Bicycling | 14. <input type="checkbox"/> Needlework/Knitting/Sewing | 27. <input type="checkbox"/> Health/Natural Foods | 40. <input type="checkbox"/> Real Estate Investments |
| 02. <input type="checkbox"/> Golf | 15. <input type="checkbox"/> Flower Gardening | 28. <input type="checkbox"/> Photography | 41. <input type="checkbox"/> Stocks/Bonds/Mutual Funds |
| 03. <input type="checkbox"/> Physical Fitness/Exercise | 16. <input type="checkbox"/> Vegetable Gardening | 29. <input type="checkbox"/> Attending Cultural/Arts Events | 42. <input type="checkbox"/> Entering Sweepstakes |
| 04. <input type="checkbox"/> Running/Jogging | 17. <input type="checkbox"/> Crafts | 30. <input type="checkbox"/> Fashion Clothing | 43. <input type="checkbox"/> Casino Gambling |
| 05. <input type="checkbox"/> Snow Skiing | 18. <input type="checkbox"/> Buy Prerecorded Videos | 31. <input type="checkbox"/> Fine Art/Antiques | 44. <input type="checkbox"/> Science Fiction |
| 06. <input type="checkbox"/> Tennis | 19. <input type="checkbox"/> Automotive Work | 32. <input type="checkbox"/> Foreign Travel | 45. <input type="checkbox"/> Wildlife/Environmental Issues |
| 07. <input type="checkbox"/> Camping/Hiking | 20. <input type="checkbox"/> Electronics | 33. <input type="checkbox"/> Cruise Ship Vacations | 46. <input type="checkbox"/> Dieting/Weight Control |
| 08. <input type="checkbox"/> Fishing | 21. <input type="checkbox"/> Home Workshop/Do-It-Yourself | 34. <input type="checkbox"/> Travel in USA | 47. <input type="checkbox"/> Science/New Technology |
| 09. <input type="checkbox"/> Hunting/Shooting | 22. <input type="checkbox"/> Recreation Vehicles | 35. <input type="checkbox"/> Gourmet Cooking/Fine Foods | 48. <input type="checkbox"/> Self-Improvement |
| 10. <input type="checkbox"/> Horseback Riding | 23. <input type="checkbox"/> Listen to Records/Tapes/CDs | 36. <input type="checkbox"/> Wines | 49. <input type="checkbox"/> Walking for Health |
| 11. <input type="checkbox"/> Powerboating | 24. <input type="checkbox"/> Surf the Internet | 37. <input type="checkbox"/> Coin/Stamp Collecting | 50. <input type="checkbox"/> Watching Sports on TV |
| 12. <input type="checkbox"/> Sailing | 25. <input type="checkbox"/> Avid Book Reading | 38. <input type="checkbox"/> Collectibles/Collections | 51. <input type="checkbox"/> Home Video Recording |
| 13. <input type="checkbox"/> Grandchildren | 26. <input type="checkbox"/> Bible/Devotional Reading | 39. <input type="checkbox"/> Our Nation's Heritage | 52. <input type="checkbox"/> Moneymaking Opportunities |

27. Using the numbers in the above list, please indicate your 3 most important activities:

Thanks for taking the time to fill out this questionnaire. Your answers will be used for market research studies and reports. They will also allow you to receive important mailings and special offers from a number of fine companies whose products and services relate directly to the specific interests, hobbies, and other information indicated above. Through this selective program, you will be able to obtain more information about activities in which you are involved and less about those in which you are not. Please check here if, for some reason, you would prefer *not* to participate in this opportunity.

Please check here if you do not want to receive mailings and offers from Panasonic using your E-mail address.

Send any correspondence about our product to:

**Panasonic Consumer Affairs, Panasonic Consumer Electronics Company,
A Division of Panasonic Corporation of North America, One Panasonic Way, 2F-3, Secaucus, NJ 07094**

Copyright © 2002 All Rights Reserved.

TQD2A81701-3

Please seal with tape. Do not staple.



**Please send products and other
correspondence to:**

Panasonic Consumer Affairs
Panasonic Consumer Electronics Company
A Division of Panasonic Corporation of North America
One Panasonic Way, 2F-3
Secaucus, NJ 07094

Q A A 0 1 - 0 1



First-Class
Postage
Required
Post Office will
not deliver
without proper
postage.

**PANASONIC CONSUMER
ELECTRONICS COMPANY
PO BOX 174287
DENVER CO 80217-4287**





Panasonic Product Registration

THREE IMPORTANT REASONS

to register your new purchase immediately:

1. Protect Your New Investment

Register your new product for insurance purposes in case it is lost or stolen.

2. Product Safety Notification

Registering your product can help us to contact you in the unlikely event a safety notification is required under the Consumer Product Safety Act.

3. Improved Product Development

Help us continue to design products that meet your needs.

See details inside...

Send this card by mail or register via the Internet at:

<http://www.panasonic.com/register>

TQDC17003



Panasonic Quasar Technics

THE
Panasonic
CUSTOMER
CARE PLAN

USA ONLY

An extended service plan that assures continued top performance of your electronic product after the factory warranty has expired!

*USE THE CONVENIENCE OF OUR
TOLL-FREE CUSTOMER CARE PLAN HOTLINE:*

1-800-637-2007

**RESPOND PROMPTLY AND RECEIVE
AN "EARLY BIRD" DISCOUNT!
TOMORROW'S SERVICE AT TODAY'S PRICES!**



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST-CLASS MAIL PERMIT NO. 110 ELGIN IL

POSTAGE WILL BE PAID BY ADDRESSEE

Panasonic® Quasar® Technics®
CUSTOMER CARE PLAN ADMINISTRATION
PANASONIC SERVICES COMPANY
1703 N. RANDALL RD
ELGIN IL 60123-9964



THE CUSTOMER CARE PLAN OFFERS ALL OF THESE OUTSTANDING BENEFITS:

- Labor to complete repairs.
- Replacement parts.
- Electronic or mechanical adjustments.
- Specified internal cleaning.
- Requested preventive maintenance.
- No hidden charges or deductibles. Complete coverage for one low, up-front price.
- Coverage is transferable.

Service is performed by our nationwide network of conveniently located Factory or Local Authorized Servicenters.

ACT NOW:

Just complete the attached postage paid postcard and drop it in the mail. We will contact you promptly with more information about the Customer Care Plan.

OR CALL: 1-800-637-2007

OFFERED AND ADMINISTERED BY:
Customer Care Plan Administration
PANASONIC SERVICES COMPANY
1703 N. Randall Road
Elgin, IL 60123-9964

Certain restrictions apply: 1) Offered only in the United States with the exception of Florida; 2) Applications for coverage are subject to final acceptance by our company.

PRODUCT INFORMATION CARD

I OWN A: **Panasonic**® **Quasar**® **Technics**®

Model No.	Date of Purchase
	/ /
Serial No.	

Yes! I would like more information regarding the "Early Bird" discount offer for the manufacturers extended service plan. I understand that you will promptly contact me with more information

(Please Print)

Name _____

Address _____ Apt. _____

City _____ State _____ Zip _____

() _____ A.M. _____ P.M.

Phone Best time to call

PANASONIC CONSUMER ELECTRONICS COMPANY,
DIVISION OF
PANASONIC CORPORATION OF NORTH AMERICA
One Panasonic Way
Secaucus, New Jersey 07094

PANASONIC SALES COMPANY,
DIVISION OF
PANASONIC PUERTO RICO INC.
Ave. 65 de Infanteria, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985

Panasonic LCD Televisions Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Puerto Rico, Inc. (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

LCD TV Categories	PARTS	LABOR	SERVICE
Up to 20" (diagonal)	1 (One) Year	1 (One) Year	Carry-In or Mail-in
21" (diagonal) and larger			In Home or Carry- in/Mail- in

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must carry-in or mail-in your product during the warranty period. If non-rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is". A purchase receipt or other proof of the original purchase date is required for warranty service.

In-Home or Carry-in Service

For In-Home or Carry-In Service in the United States call 1-800-211-PANA(7262) or visit the Panasonic web Site: <http://www.panasonic.com>.
For assistance in Puerto Rico call Panasonic Puerto Rico, Inc. (787)-750-4300 or fax (787)-768-2910.

In-Home service requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain in-home repairs will not be completed in-home, but will require that the product, or parts of the product, be removed for shop diagnosis and/or repair and then returned.

Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover makings or retained images on the LCD panel resulting from viewing fixed images (including, among other things, letterbox pictures on standard 4:3 screen TV's, or non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have others rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE (INCLUDING COST OF AN IN-HOME SERVICE CALL, WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.