

# Panasonic

## Operating Instructions LCD TV

---

Model No.

**TX-17LA1M**

**TX-20LA1M**

**TX-17LA1Q**

**TX-20LA1Q**

**TX-17LA1Z**

**TX-20LA1Z**

**TX-17LA1X**

**TX-20LA1X**

**TC-17LA1H**

**TC-20LA1H**



LCD TV shown above is model TX-20LA1.

Please read these instructions before operating your set and retain them for future reference.

**English**

# Dear Panasonic Customer

Welcome to the Panasonic family of customers. We hope that you will have many years of enjoyment from your new LCD TV.

To obtain maximum benefit from your set, please read these Instructions before making any adjustments, and retain them for future reference.

Retain your purchase receipt also, and note down the model number and serial number of your set in the space provided on the rear cover of these instructions.

## Table of Contents

<b>Warnings and Precautions</b> .....	<b>3</b>	<b>SETUP MENU</b> .....	<b>13</b>
TV Games / Home Computers .....	3	<b>TUNING MENU</b> .....	<b>14</b>
Cabinet and LCD panel care .....	4	Channel Selection .....	14
Preparation .....	4	AUTO TUNE .....	16
Receiver Location .....	4	AUTO TUNE (via top panel) .....	16
Optional External Equipment .....	4	MANUAL TUNE .....	17
For optimum quality picture .....	4	MANUAL TUNE (via top panel) .....	17
How to use the LCD stand .....	4	<b>PICTURE</b> .....	<b>18</b>
<b>Before Operating This Set</b> .....	<b>5</b>	<b>SOUND</b> .....	<b>19</b>
Supplied Accessories .....	5	Stereo Bilingual Sound Selection .....	20
Fitting remote control batteries .....	5	<b>ASPECT Controls</b> .....	<b>21</b>
Battery cautions .....	5	<b>Advanced Remote Control Operation</b> .....	<b>22</b>
Antenna cover removal and fitting .....	6	TELETEXT .....	22
Cable cover removal and fitting .....	6	VCR / DVD Operation .....	24
<b>Quick Start Guide</b> .....	<b>7</b>	Manufacturer setting .....	25
<b>Connections</b> .....	<b>8</b>	<b>Channel Allocation</b> .....	<b>26</b>
How to connect the input terminals .....	8	<b>Troubleshooting</b> .....	<b>27</b>
Connecting Headphones / Earphones .....	9	<b>Maintenance</b> .....	<b>27</b>
<b>Basic controls</b> .....	<b>10</b>	<b>Specifications</b> .....	<b>Back cover</b>
Top panel controls and Remote control .....	10		
<b>Using the On Screen Displays</b> .....	<b>12</b>		

# Warnings and Precautions

- This TV set is designed to operate on DC 15V.


- To prevent damage which might result in electric shock or fire, do not expose this TV set to rain or excessive moisture. This TV must not be exposed to dripping or splashing water, and objects filled with liquid, such as vases, must not be placed on top of or above the TV.




- DO NOT use this unit near water. (Near a bath tub, etc.)



- Unplug the power cord in the event of any malfunction (screen goes blank, no sound, odd sounds, smoke or unusual odours coming from the unit). Unplug the power cord if foreign matter or water falls into the unit, or if the unit is dropped or the cabinet is damaged.

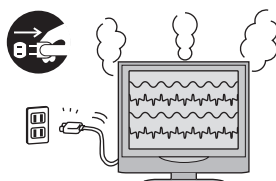

- TAKE CARE NOT to damage the power cord.

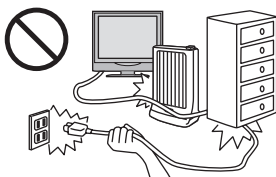


- DO NOT touch the aerial cable and this unit when there is lightning.



- DO NOT use if the power cord or power plug is damaged, or if the plug does not fit tightly into the socket.



 - DO NOT use at a voltage other than indicated.




- DO NOT touch the power plug if your hands are wet.



- Turn the power "Off" before connecting other electrical equipment.



- Ask your sales outlet to install the aerial.

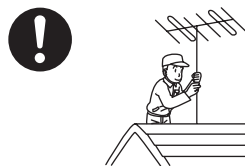

## WARNING : HIGH VOLTAGE!!!

- Do not remove the rear cover as live parts are accessible when it is removed. There are no user serviceable parts inside.




## TV Games / Home Computers

Extended use of TV games or home computers with any television set can cause a permanent 'shadow' on the screen. This type of irreversible LCD panel damage, can be limited by observing the following points:

- Reduce the brightness and contrast levels to a minimum viewing level.
- Do not allow a still picture to be displayed for an extended period, as this can cause a permanent after-image to remain on the LCD TV screen.
- Examples of still pictures include logos, video games, computer images, teletext and images displayed in 16:9 mode.
- This type of LCD panel damage, is not an operating defect, and as such is not covered by the Panasonic warranty.

- The On/Off switch on this model does not fully disconnect the TV from the mains supply.

Remove the mains plug before connecting or disconnecting any leads, or if the TV set is not used for a prolonged period of time.

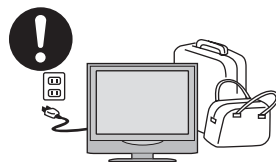


## Note:

- If the set is not switched off when the TV station stops transmitting, it will automatically go to stand-by mode after 30 minutes. This function will not operate when the TV is in AV mode.

# Warnings and Precautions


## • Cabinet and LCD panel care

Remove the mains plug from the wall socket. The cabinet and LCD panel can be cleaned with a soft cloth moistened with mild detergent and water. Do not use solutions containing benzol or petroleum.

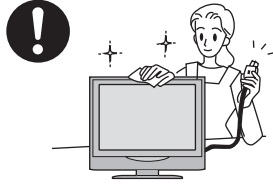


• When ambient temperature is cool, the picture may take a short time to reach normal brightness, but this is not a malfunction. (After brief moment, the picture will have normal brightness.)

• Adequate ventilation is essential to prevent failure of electrical components, we recommend that a gap of at least 10cm is left all around this television receiver even when it is placed inside a cabinet or between shelves.

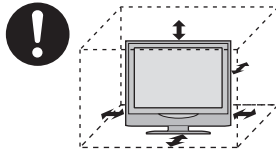

• Avoid exposing the TV set to direct sunlight and other sources of heat. To prevent fire, never place any type of candle or naked flame on top or near the TV set.

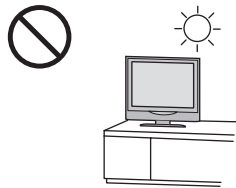

• DO NOT insert foreign objects (metal or easily flammable objects).




• DO NOT stand, or place heavy objects on the unit. Particular care should be taken by families with small children.



• DO NOT place in an unstable location.



• Place in a safe location.

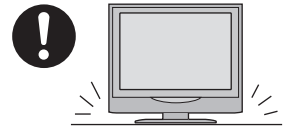

• DO NOT jolt the unit.



## Preparation

### • Receiver Location

Locate for comfortable viewing. Avoid placing where sunlight or other bright light (including reflections) will fall on the screen.

Use of some types of fluorescent lighting can reduce remote control transmitter range.

Adequate ventilation is essential to prevent internal component failure. Keep away from areas of excessive heat or moisture.

To insure optimum picture do not position magnetic equipment (motors, fans, other speakers, etc.) nearby.

### • Optional External Equipment

The Video/Audio connection between components can be made with shielded video and audio cables. For best performance, we recommend 75 ohm coaxial aerial cable is used. Cables are available from your dealer or electronic supply store.


Before you purchase any cables, be sure you know what type of output and input connectors your various components require. Also determine the length of cable you'll need.

### • For optimum quality picture

When the LCD is exposed to light from outdoors or lighting fixtures, high-contrast pictures may not be displayed clearly. Turn off florescent lamps near the LCD and place in a location not exposed to outdoor light.

### • How to use the LCD stand

Adjust the stand to your desired angle. The stand angle can be adjusted between 5° forward to 15° back.

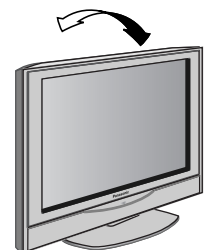


# Before Operating This Set

## Supplied Accessories

Check the accessories before installations.


- Operating Instruction book

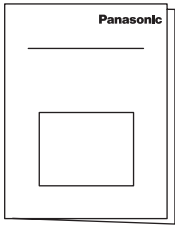


- Remote Control Transmitter




- AC Adaptor

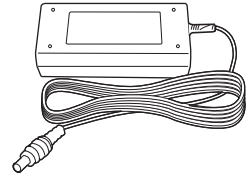


- Mains Lead  
TX-17LA1M, TX-20LA1M

 

 
- TX-17LA1Q, TX-20LA1Q  
TX-17LA1Z, TX-20LA1Z



 - TX-17LA1X, TX-20LA1X  
TC-17LA1H, TC-20LA1H



 - AC Plug Adaptor  
TX-17LA1X, TX-20LA1X only




- Batteries for the Remote Control  
Transmitter (2 × R6 (AA) size)



## Fitting remote control batteries

### 1 Open the cover.


Apply slight downward pressure while pulling towards the bottom.

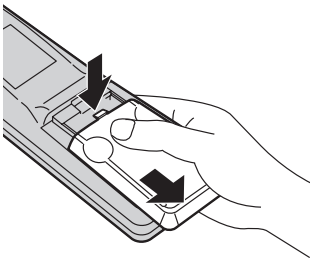


### 2 Batteries: Use two “R6 (AA)” size batteries.

Insert the batteries ensuring the correct polarities. This is identifiable by the “+” and “-” symbols on the batteries and inside the battery compartment.

Two “R6 (AA)” size

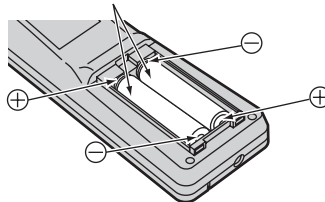

### 3 Replace the cover.

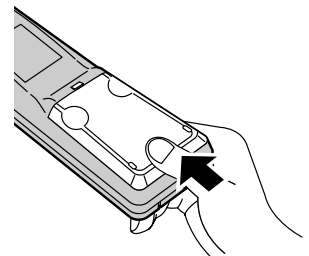

Do not use rechargeable (Ni-Cd) batteries.

They are different in shape and performance and may fail to ensure correct operation.

## Battery cautions

The incorrect use of batteries can cause electrolyte leakage which will corrode the Remote Control or cause the batteries to burst.

**Observe the following precaution:**


1. Batteries shall always be replaced as a pair. Always use new batteries when replacing the old set.
2. Do not combine a used battery with a new one.
3. Do not mix battery types (example: “Zinc Carbon” with “Alkaline”).
4. Do not attempt to charge, short-circuit, disassemble, heat or burn used batteries.
5. Battery replacement is necessary when remote control acts sporadically or stops operating the TV set.

## Before Operating This Set

### Antenna cover removal and fitting


#### TX-17LA1, TC-17LA1

##### Removal

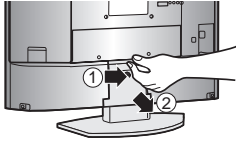

1. Grasp the cover at the bottom end and initially remove by pulling slightly towards yourself.
2. Slowly pull out in the downward direction.


##### Fitting

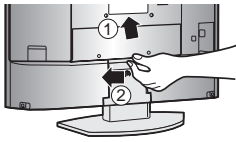

1. Insert the claws (at 4 points) at the top end.
2. Push it until click.


#### TX-20LA1, TC-20LA1

##### Removal

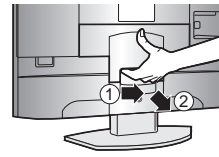

1. Grasp the opening and initially pull the cover slightly towards yourself to disengage the claws (at 2 points on both the left and right).
2. Slowly pull out in the downward direction.


##### Fitting

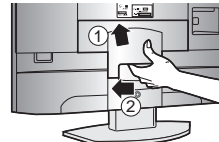

1. Insert the claws (at 4 points) at the top end.
2. Push it until click.

### Cable cover removal and fitting

##### Removal

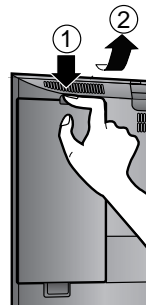

1. Disengage the claws at the uppermost end.
2. Slowly pull out in the upward direction.

##### Fitting




1. Insert the claws (at 2 points) at the bottom.
2. Push it until click.


#### Note:

Depending on the type of cable used it may not be possible to close the cover. In such cases the cable may be routed through the antenna cover.

# Quick Start Guide

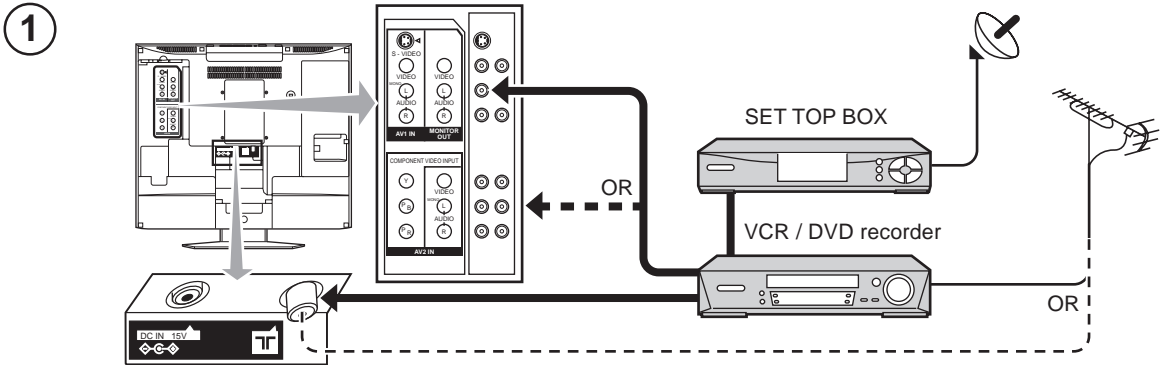



Plug in aerial and connect ancillary equipment

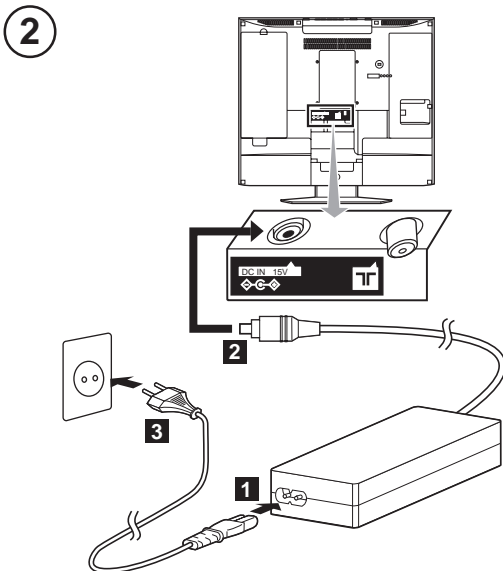

- 1** Connect the mains lead to the AC Adaptor.
- 2** Connect the AC Adaptor DC plug to the DC IN socket.
- 3** Plug into household mains socket.


- Be sure to use the mains lead and AC adaptor included in the accessories.
- Do not use the AC adaptor for other than the specified equipment.
- Unplug the AC adaptor if it is not used for long time.
- Do not place any objects on the AC adaptor.
- Do not use the AC adaptor outdoors.
- Do not attempt to repair the AC adaptor if it is broken or malfunctioning. Refer the servicing to the service representative.
- Do not try to open the AC adaptor.
- Do not use water or wet cloth for cleaning the AC adaptor.

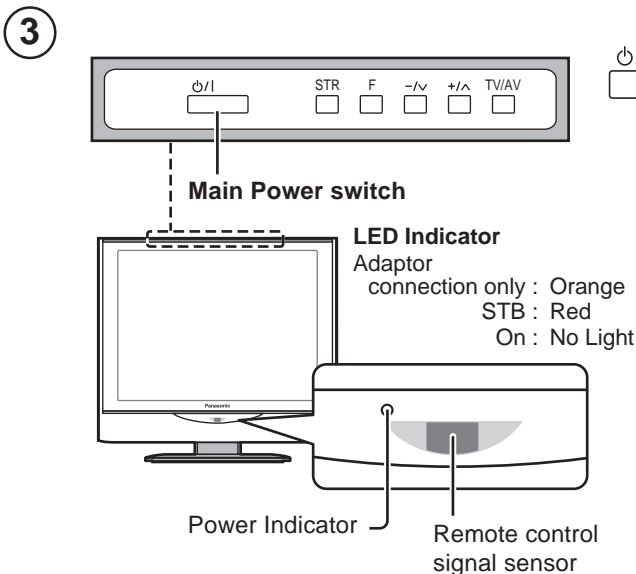

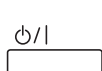
Press the  switch on the LCD TV to turn the set on.

## IMPORTANT NOTES

 There are two ways to switch the TV set to stand-by mode.

(A) Press the  switch on the LCD TV and check RED LED is lit.

OR

(B) Press the  Stand-by button on the remote control.

The TV set can be switched on by the remote control if it was switched to stand-by using method (A) or method (B).


# Connections
 
## How to connect the input terminals



Connects VCRs and other peripheral equipment

### • S-Video socket information



#### AV1 S-Video 4 pin socket




Connect the S-VIDEO or VIDEO terminal.

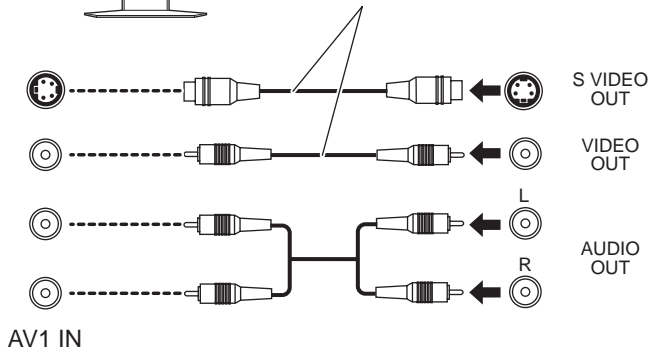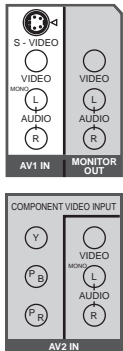




Example of input signal source

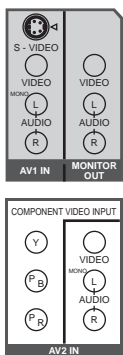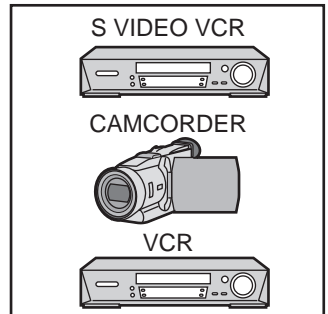


Connect the Y/PB/PR or VIDEO terminals.

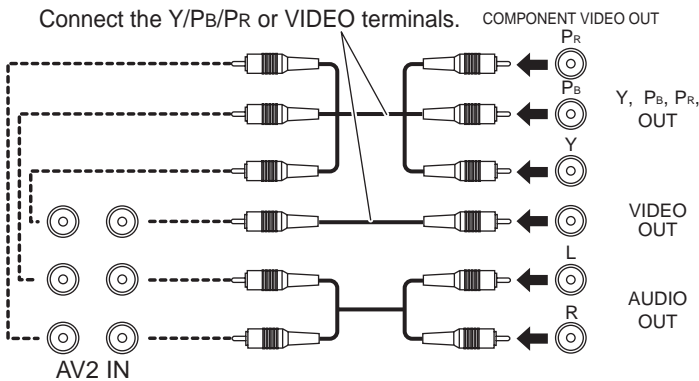

Example of input signal source

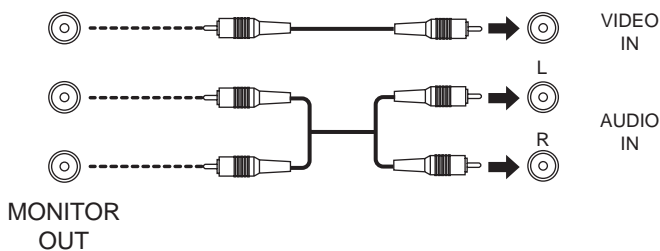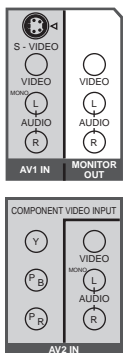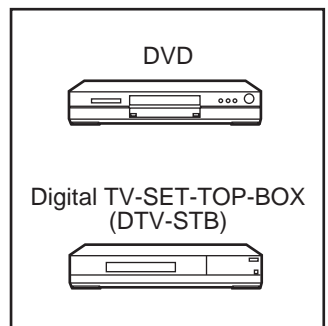

Example of input signal source

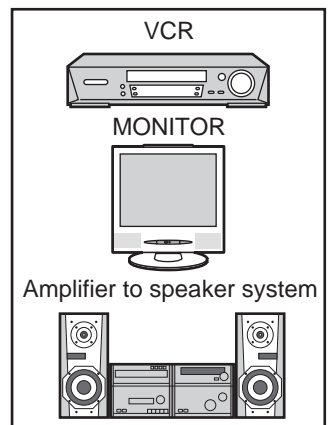

### Notes:

- Additional equipment and cables shown are not supplied with this TV set.
- Do not connect a computer with TTL output (5V) to this set.
- Select the desired VIDEO input position by pushing the TV/AV button. (see page 10, 11)




---

## Connecting Headphones / Earphones

---

Connect headphones / earphones as follows.

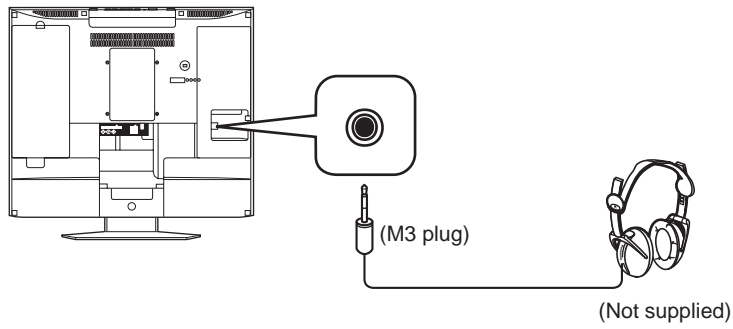


**Notes:**

- The volume level of the headphones can be adjusted by selecting "HEADPHONE VOL." from the SOUND.
- Additional equipment and cables shown are not supplied with this TV set.

# Basic controls

## Top panel controls and Remote control

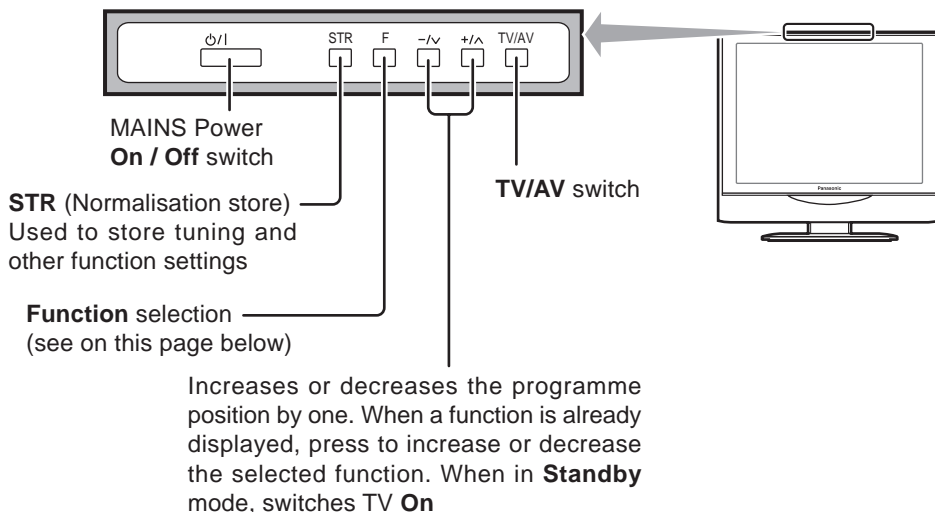

**PICTURE** \_\_\_\_\_  
(see page 18, 19)

**SOUND** \_\_\_\_\_  
(see page 19, 20)

**SETUP MENU** \_\_\_\_\_  
(see page 13)

**Stereo Bilingual Sound Selection** \_\_\_\_\_  
(see page 20)

**TV/TEXT Selection** (see page 22, 23, 24) \_\_\_\_\_

**TEXT Favourite Page Selection** \_\_\_\_\_  
(see page 23)

**SURROUND** (see page 20) \_\_\_\_\_

**ASPECT Controls** (see page 21) \_\_\_\_\_

**Recall** \_\_\_\_\_


Press the Recall button to display the current system status, for example, Programme number, Channel number, Stereo mode, Aspect mode, Sound menu, Picture menu.

**Normalization / Normalise** \_\_\_\_\_  
(see page 19, 20)

**Store** (see page 12, 15, 17, 23) \_\_\_\_\_  
Stores some settings in TUNING MENU and TELETEXT.

### Function selection

Displays the on screen display functions, press repeatedly to select from the available functions. The following adjustments can be accessed directly.

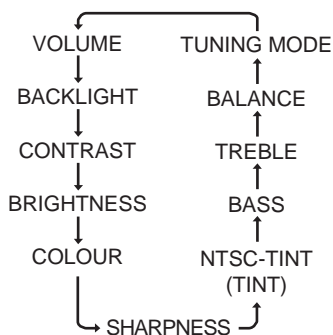

### Notes:

- NTSC-TINT : Displayed when receiving NTSC signals.
- TINT : Displayed when receiving YUV (60Hz) signals.
- TUNING MODE : Not displayed during AV mode.

## Power (Stand-by)

The TV set must first be plugged into the wall outlet and turned on at the TV ON / Stand-by button on the top panel.  
Press this button to turn the TV set On from Standby mode, press it again to turn the TV set OFF to Standby mode.

## Note:

It is also possible to turn the TV set on from STANDBY mode by pressing the "Direct Programme Number Selection" Buttons (0-9) and the "Programme Number Up or Down" Button, either on the top panel or on the Remote Control.

## Sound Mute

Press to mute the sound completely the "M" symbol will appear.  
Press again to restore the previous sound level, and cancel the mute.

## Programme Number Selection

Press to select the next higher or lower Programme number.

## Volume Adjustment

Press to increase or decrease the sound volume level.



## TV/AV Mode Selection

Press to select TV, AV input signal modes sequentially.

Remote control :



Press to display AV1 - AV2 at the bottom of the screen. Each coloured button corresponds to each input signals. For example, pressing the Red button selects AV1.

## Coloured buttons used for Teletext functions

(see page 22, 23, 24)

## AV Selection

TEXT hold (see page 23)

TEXT Index (see page 23)

## Direct Programme Number

### • Direct Programme Number Selection (CH SELECT = POSITION)

You can select the numbers directly by pressing "Number 0-9" button and the two digit Numbers by pressing "Two Digit" and "Programme Number" buttons.

Programme Number 8 .....

Programme Number 12..... , ,

### • Direct Programme Number Selection (CH SELECT = DIRECT; except TX-17LA1Q, TX-20LA1Q)

You can select the number directly by pressing the corresponding programme number button.

Channel Number 8.....

Channel Number 36..... ,

Channel Number 124... , ,


## Note:

When the Skip setting for Programme Number 100 through 125 is on, the channel selection time will be shortened, and thus you can not input three digits at a time.




# Using the On Screen Displays


Many features available on this TV can be accessed via the On Screen Display menu system. Use the remote control as shown below to access and adjust features as desired.

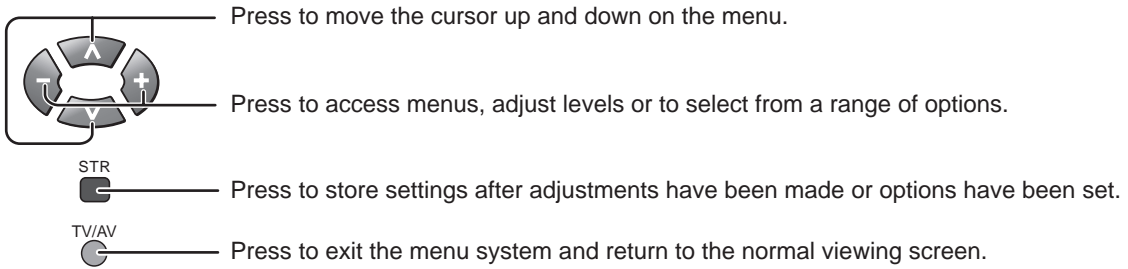


Press to display **"PICTURE"** screen.  
Example: TX-17LA1M, TX-20LA1M

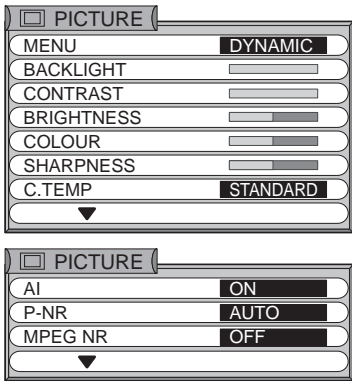

Press to display **"SOUND"** screen.  
Example: TX-17LA1M, TX-20LA1M

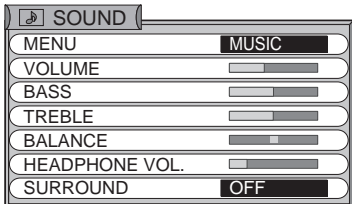

Press to display **"SETUP MENU"** screen.  
Example: TX-17LA1M, TX-20LA1M

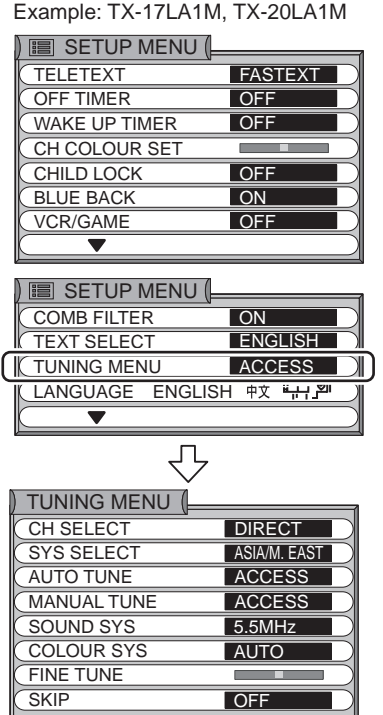

- Notes:**
- TX-17LA1Q, TX-20LA1Q do not have the "TEXT SELECT", "LANGUAGE", "CH SELECT" functions.
  - TC-17LA1H, TC-20LA1H do not have the "TELETEXT", "TEXT SELECT" functions.


## Please refer to the On Screen Help

An On Screen Help box is displayed whenever a menu is displayed on the TV. This Help box indicates which keys on the remote control are used to navigate the menu shown, see above for descriptions of button functions.

**Note:**



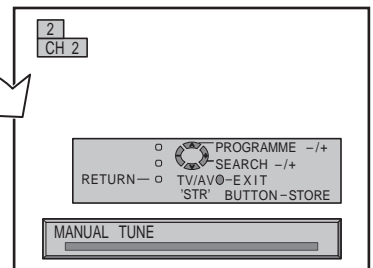

The Help box is not shown in the menu pictures in this instruction book due to space limitations.

**ON SCREEN HELP 'Instruction' box**



# SETUP MENU



The setup menu provides access to various advanced features and also to the Tuning menu.

-  Press to display the setup menu screen.
  -  Press to select the menu to adjust.
  -  Press to adjust the desired setting.
- Press  at any time to go back to watching TV.

## Notes:


- TX-17LA1Q, TX-20LA1Q do not have the "TEXT SELECT", "LANGUAGE" functions.
- TC-17LA1H, TC-20LA1H do not have the "TELETEXT", "TEXT SELECT" functions.

Example: TX-17LA1M, TX-20LA1M

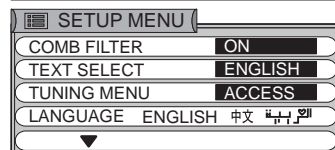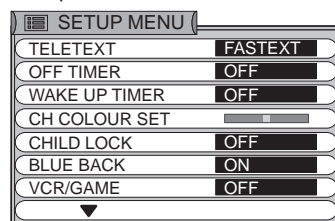

(TV mode)

- TELETEXT** Allows you to choose 2 modes. (see page 22)  
 • TX-17LA1Q, TX-20LA1Q • other  
 TOP ↔ List FASTEXT ↔ List
- OFF TIMER** Switches the TV off within a preset time which you can choose from between 0 to 90 minutes in 15 minute intervals.  
 → OFF ↔ 15 ↔ 30 ↔ 45 ←  
 → 90 ← → 75 ← → 60 ←
- WAKE UP TIMER** Switches the TV on within a preset time which you can choose from between 0 to 12 hours in 15 minutes intervals.
- CH COLOUR SET** Colour density varying between broadcast channels can be adjusted to three levels for each reception channel.
- CHILD LOCK** When ON, picture and sound of the TV/AV mode being viewed will disappear and a Black screen will appear. CHILD LOCK can be set for each programme number and each AV mode.
- BLUE BACK** You can choose Blue Back display ON or OFF when there is no signal.
- VCR/GAME** Reproduction of irregular signals, such as certain TV games and rental video tapes, may be improved.
- COMB FILTER** Occasionally, whilst viewing still or slow moving pictures, colour patterning may be seen. Set Comb filter to On to display sharper and more accurate colours.
- TEXT SELECT** Select character set, so that all characters needed are available for text on teletext pages (eg: cyrillic characters, etc).  
**Mode Languages:** ENGLISH/CIS/E.EUROPE/PERSIAN
- COLOUR SYS (Colour System)** During AV mode, COLOUR SYS is displayed. If a clear picture with current colours cannot be obtained when a Broadcast or AV signal is received, this function is used.  
 → AUTO ↔ PAL ↔ SECAM ←  
 → NTSC 3.58 ↔ NTSC 4.43 ←
- TUNING MENU** Provides access to many other features including SYS SELECT and AUTO TUNE (see page 15) . Not displayed during AV mode.
- LANGUAGE** You can select the OSD language.  
 → English ↔ Chinese ↔ Arabic ←

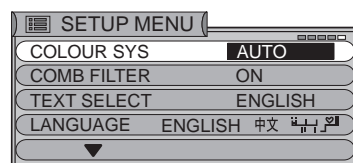


(AV mode)

PAL, SECAM and NTSC 3.58 are different colour signal broadcast transmission systems applicable to differing countries. NTSC 4.43 is a trick playback mode used in special VCR's to playback NTSC recorded video tapes through PAL television equipment.

# TUNING MENU

## Channel Selection

Select the most easily viewed channel selection method.

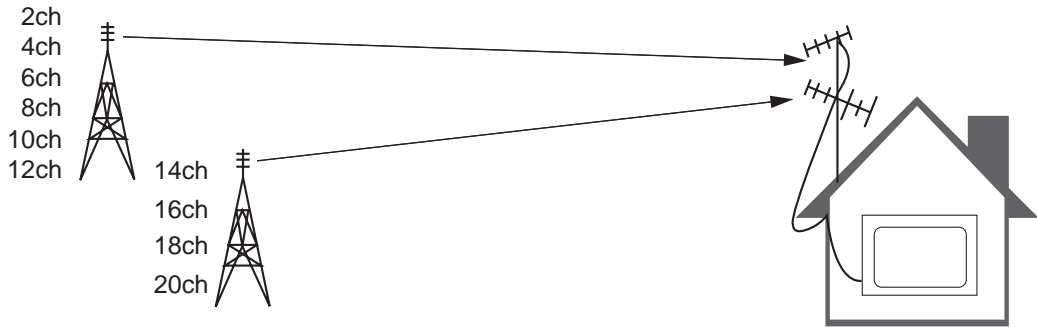

Example

Programme Number	Channel Display	Received Channel
1	2	2
2	4	4
3	6	6
4	8	8
5	10	10
6	12	12
7	14	14
8	16	16
9	18	18
10	20	20

### POSITION SELECT

When the Channel Selection is on POSITION, and AUTO TUNE is performed, the unit memorises the channels Tuned in order from Programme No.1.

Press the button ① to view channel 2.

Press the button ② to view channel 4.

Press the button ③ to view channel 6.

During Position mode various reception channels can be viewed.


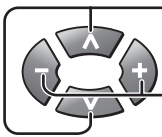
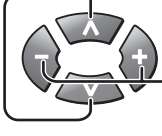
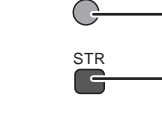


Example


Programme Number	Channel Display	Received Channel
1	—	—
2	2	2
3	—	—
4	4	4
5	—	—
6	6	6
7	—	—
8	8	8
9	—	—
10	10	10
⋮	⋮	⋮
20	20	20
⋮	⋮	⋮

### DIRECT SELECT [Except TX-17LA1Q, TX-20LA1Q]

When the Channel Selection is on DIRECT, and AUTO TUNE is performed, the unit memorises the programme number which is the same as the channel Tuned.

This method allows you to select the desired channel by pressing the channel display number directly on the remote control to select the station. The channel display numbers for the broadcast stations in each region are listed on page 26.

- 1  Press to display the SETUP MENU.
  - 2  Press to select the TUNING MENU.
  - 3  Press to select the menu to adjust.  
 Press to adjust option or access chosen menu.
-  Press at any time to go back to watching TV.
-  Pressing this button after having adjusted a feature will store the setting as the default (replacing the factory setting).

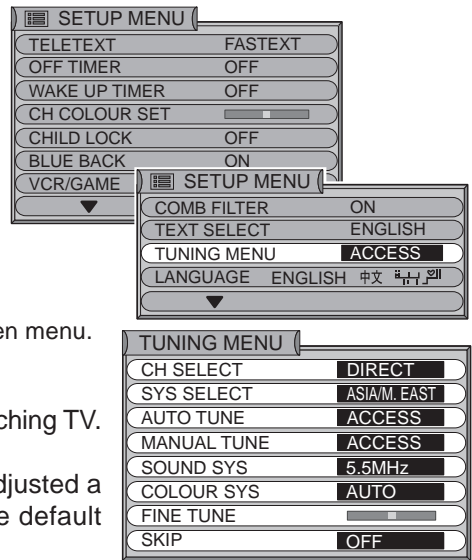

**CH SELECT** [Except TX-17LA1Q, TX-20LA1Q]  
 (Channel Selection) Select the most easily viewed channel selection method. (see page 14)  
 POSITION ↔ DIRECT

**SYS SELECT**  
 (System Selection) Select the system.  
 CHINA ↔ HK/UK ↔ ASIA/M.EAST ↔ NZ/INDONES ↔ AUSTRALIA ↔  
 JAPAN ↔ CATV ↔ AMERICA ↔ SPECL VER ↔ E.EUROPE ↔

### System Select by Region

SYSTEM	REGION
CHINA	China
HK/UK	Hong Kong, United Kingdom
ASIA/M.EAST	Malaysia, Singapore, Thailand, Asia countries, Kuwait, Saudi Arabia, United Arab Emirates, Middle East countries, etc.
NZ/INDONES	New Zealand, Indonesia, etc.
AUSTRALIA	Australia
E-EUROPE	CIS, Poland, etc.
SPECL VER	South Africa
AMERICA	U.S.A., Chile, Mexico, Panama, Pelu, Philippines, Taiwan, Venezuela, etc.
CATV	USA CATV
JAPAN	Japan

**AUTO TUNE** Allows you to automatically retune the TV. Useful if you move house and wish to retune your TV to the local stations. (see page 16)

**MANUAL TUNE** Allows individual program positions to be tuned, manually. (see page 17)

**SOUND SYS** (Sound System) You can change the sound system used for a programme channel.  
 Choose the required sound system:

4.5 MHz ↔ 5.5 MHz ↔  
 6.5 MHz ↔ 6.0 MHz ↔

**COLOUR SYS** (Colour System) Lets you select the correct transmission standard for the transmission signal being received (see page 13).

AUTO ↔ PAL ↔ SECAM ↔  
 NTSC 3.58 ↔ NTSC 4.43 ↔


**FINE TUNE** Use to make small adjustments to the tuning of an individual station (useful for example when weather conditions are affecting reception quality of a program).  
 To cancel the FINE TUNE, tune again by MANUAL TUNE.


**SKIP** It is possible to skip Program Number on which no TV stations are tuned appearing on the screen. The function is only effective when pressing the Program Number UP or DOWN button either on the TV set or on the remote control.

# TUNING MENU

## AUTO TUNE


Before AUTO TUNE, set the “CH SELECT” and “SYS SELECT”.  
Follow the step on the previous page to display the TUNING MENU screen.

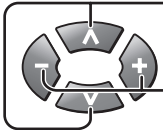
- 1  Press to select AUTO TUNE.  
Press to access AUTO TUNE.

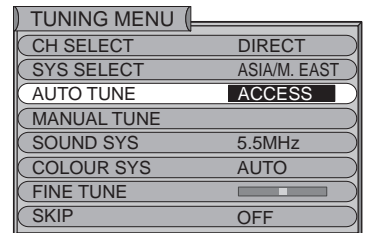


### Notes:

- If you proceed with the next step all tuning data will be erased (all stations and their programme positions stored in your TV's memory will be wiped out so that the new settings can be stored).
- If you exit the procedure after this point and before AUTO TUNE is complete, no station information will be stored. Restart and complete the AUTO TUNE procedure so that the TV is re-tuned.

- 2  Press to start AUTO TUNE.

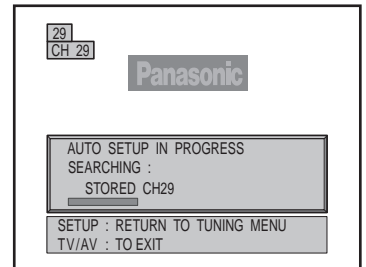








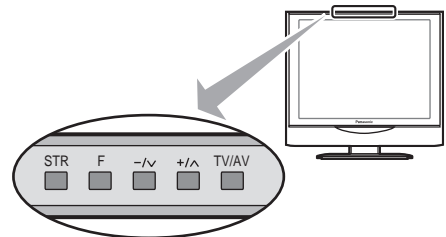
Once this operation is completed the TV will display the program now stored on programme position 1.

-  Press at any time to go back to watching TV (please read the Note in the above procedure).

## AUTO TUNE (via top panel)

It is also possible to use the control panel buttons on the top of the TV to tune individual programme positions

- 1 Press  (Top panel) until Tuning mode is reached.
  - 2 Press  or  to access Tuning mode.
  - 3 Press  (Top panel) to access Auto tune.
  - 4 Press  or  to start search.
- Press  at any time to exit the Tuning menu.




### Helpful Hint

1. If a clear picture with correct colours cannot be obtained when a Broadcast or AV signal is received, refer to the “Colour System” selection on page 15.
2. After the Automatic tune is finished, press the Programme Number “Up” Button to confirm the tuning condition for each Programme Number. If some Programme Numbers are unused, it is possible to skip such Programme Numbers. Please refer to the Programme SKIP function on page 15.




## MANUAL TUNE

Before MANUAL TUNE, set the "CH SELECT" and "SYS SELECT".  
Follow the step on page 15 to display the TUNING MENU screen.

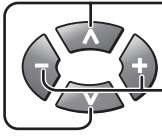
- 

Press to select MANUAL TUNE.

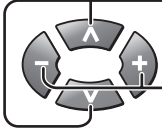Press to access MANUAL TUNE.
- 


Press to select the desired Programme Number.

Press to search the higher or lower channel.
- STR




When the desired station is found, press to store. The programme position will flash.

TV/AV



Press at any time to go back to watching TV.

TUNING MENU	
CH SELECT	DIRECT
SYS SELECT	ASIA/M. EAST
AUTO TUNE	
MANUAL TUNE	ACCESS
SOUND SYS	5.5MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF

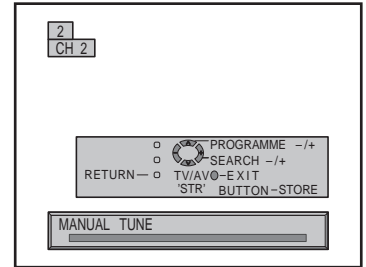



## MANUAL TUNE (via top panel)

It is also possible to use the control panel buttons on the top of the TV to tune individual programme positions

- Press **F** (Top panel) until Tuning mode is reached.
- Press **-/v** or **+/^** to access Tuning mode.
- Press **F** (Top panel) until Manual tune is reached.
- Press **TV/AV** to move between Change programme, Search and Change TV system.
- Press **-/v** or **+/^** to change programme position or start search.

When the desired station is found, press **STR** to store. The programme position will flash.  
Repeat above procedure to tune additional programme positions.


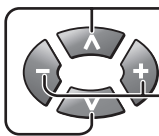

Press **F** at any time to exit the Tuning menu.

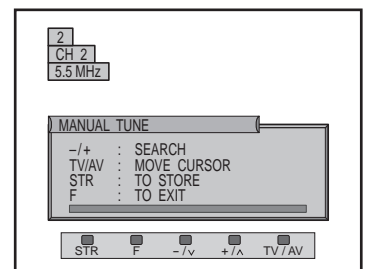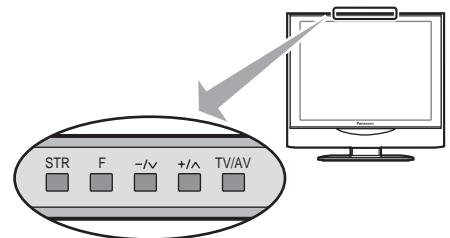


## Helpful Hint

- If a clear picture cannot be obtained even when a Broadcast or AV signal is received, refer to the "Colour System" selection on page 15.
- After the Manual tune is finished, press the Programme Number "Up" Button to confirm the tuning condition for each Programme Numbers. If some Programme Numbers are unused, it is possible to skip such Programme Numbers.
- When using a VCR without video and audio input/output terminals, it is convenient to connect the aerial cable as indicated in the instruction manual of VCR and to set the designated channel to programme No."0". In that case, perform manual tune after setting the colour system and sound system in advance. Further, in multi-system VCR, it is more convenient to set the designated channel to several programme Numbers.

# PICTURE

- 1  Press to display the PICTURE screen.
- 2  Press to select the menu to adjust.  
Adjust the desired level by looking at the picture behind the menu.
- 3  Press to exit from the PICTURE screen.  
This returns the set to the normal viewing condition.

Example: TX-17LA1M, TX-20LA1M

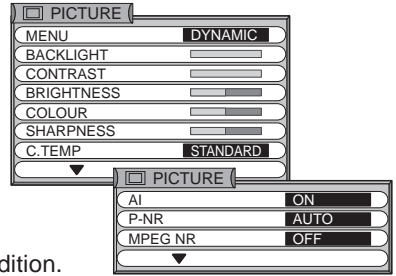


## MENU

MENU mode will be memorized for each TV, AV1 and AV2 mode.




MENU	Function
<b>DYNAMIC</b>	Displays a bright screen with maximum contrast.
<b>STANDARD</b>	Displays standard image.
<b>CINEMA</b>	Ideal for movies in the dark room.

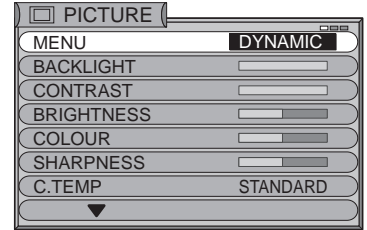







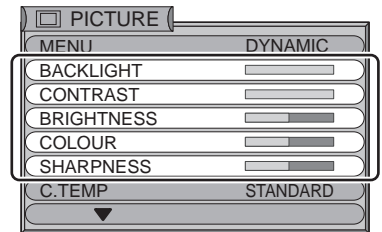





## BACKLIGHT, CONTRAST, BRIGHTNESS, COLOUR, SHARPNESS, NTSC-TINT (TINT)

You can change the level of each Item (BACKLIGHT, CONTRAST, BRIGHTNESS, COLOUR, SHARPNESS, NTSC-TINT) for each MENU (DYNAMIC, STANDARD and CINEMA) according to your personal preference.

With an NTSC signal source connected to the TV, the picture hue can be adjusted to suit your taste.




Item	Effect	Function
<b>BACKLIGHT</b>	Darker   Brighter	Brightness of the back light is adjusted.
<b>CONTRAST</b>	Darker   Brighter	Adjusts for contrast.
<b>BRIGHTNESS</b>	Less   More	Adjusts for easier viewing of dark pictures such as night scenes and hair.
<b>COLOUR</b>	Less   More	Adjusts slightly to a lighter.
<b>SHARPNESS</b>	Less   More	Displays a sharp image.
<b>NTSC-TINT (TINT)</b>	Less   More	Adjusts the picture hue.

### Notes:


- When the TV is receiving NTSC signals, NTSC-TINT is displayed and level adjustment is possible.
- When the TV is receiving YUV (60Hz) signals, TINT is displayed and level adjustment is possible.
- Only BACKLIGHT and CONTRAST will be displayed during TEXT mode.

## C.TEMP


Allows you to set the overall colour tone of the picture.

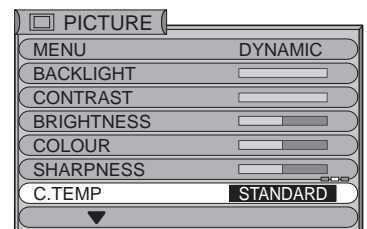


**AI (Artificial Intelligence)** Automatically analyses the incoming picture and processes it to give improved contrast and optimum depth of field.  
ON ↔ OFF

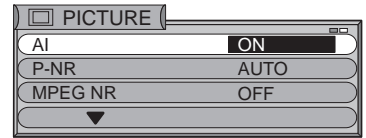

**P-NR** Reduces unwanted picture noise.

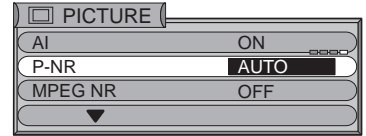


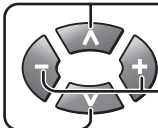

**MPEG NR** Reduces MPEG noise. This function is effective in reducing the digital block noise when viewing DVD, VCD or digital broadcasting. The effect will be changed based on the scene and image.  
**Note:**  
**MPEG** Compression technology of the image signal adopted by DVD, VCD or digital broadcasting.

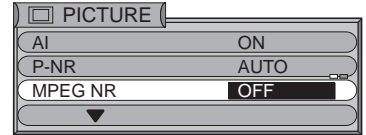


## Helpful Hint ( **N** Normalization)

By pressing the Normal "N" Button on the Remote Control while the PICTURE menu is displayed, the selected menu will be changed to the Normal Mode. Normalization will not occur if the menu is not displayed when the "N" Button is pressed. The Normal mode is the factory preset condition. Returning to this original condition is called "Normalization".

# SOUND

-  Press to display the SOUND screen.
-  Press to select the menu to adjust.  
Adjust the desired level by listening to the sound.  
Press  at any time to go back to watch TV.


Example: TX-17LA1M, TX-20LA1M

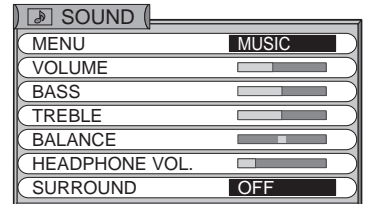

**MENU** MENU mode will be memorized for each TV, AV1 and AV2 mode.  
• You can change the level of each Item (VOLUME, BASS, TREBLE, BALANCE and HEADPHONE VOL.) for each MENU (MUSIC, NEWS and CINEMA).

→ MUSIC ↔ NEWS ↔ CINEMA ←


MENU	Function
<b>MUSIC</b>	Amplifies the Low frequencies and outputs optimum sound. For music programmes for example.
<b>NEWS</b>	Human voices (middle pitch sounds) will sound more clear.
<b>CINEMA</b>	For movie and drama programmes.

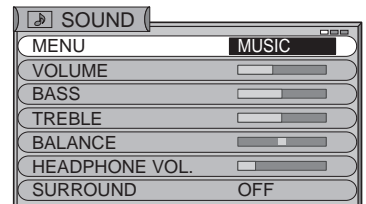

# SOUND

## VOLUME, BASS, TREBLE, BALANCE, HEADPHONE VOL.

Item	Effect	Function
<b>Volume</b>	Less   More	Adjusts output volume.
<b>Bass</b>	Less   More	Adjusts lower deeper sounds.
<b>Treble</b>	Less   More	Adjusts higher sharper sounds.
<b>Balance</b>	Left SP   Right SP	Adjusts the sound level difference between left and right speakers.
<b>Headphone volume</b>	Less   More	Adjusts Headphone volume.

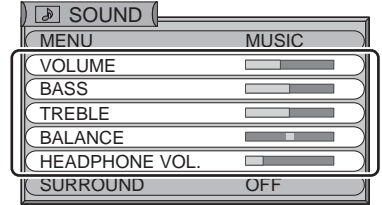

**SURROUND** To enjoy a concert hall effect, turn SURROUND to on.

ON ↔ OFF

Switching is also possible by pressing the button.


Press to switch between ON and OFF.

↔

The benefits of SURROUND sound are enormous.

You can be completely enveloped in sound; just as if you were at a concert hall or cinema.

The SURROUND effect can be obtained without the use of external SURROUND speakers.

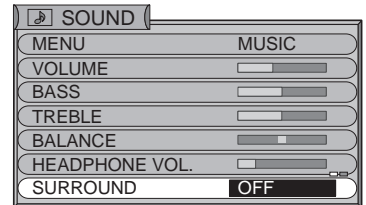

## Helpful Hint ( **N** Normalization)

By pressing the Normal “N” Button on the Remote Control while the SOUND menu is displayed, the selected menu will be changed to the Normal Mode.

Normalization will not occur if the menu is not displayed when the “N” Button is pressed.

The Normal mode is the factory preset condition. Returning to this original condition is called “Normalization”.

## Stereo Bilingual Sound Selection



When you receive the stereo/bilingual sound system, sound output modes can be selected by pressing the stereo/bilingual sound selection button.

Audio Signal	STEREO	MAIN I	SUB II	MONO
Mode Indicator		I	II	▽

**NICAM** .....Used in New Zealand, Malaysia, Thailand, Indonesia etc.

Type of broadcast	Regular broadcast (Standard Audio)	Regular + NICAM MONO I (MAIN I)	NICAM STEREO	NICAM DUAL MONO (MAIN I / SUB II)
Mode Indicator	No Indicator ↔ ▽	I ↔ ▽	↔ ▽	I → ▽ ← II

**A2(German)** .....Used in Australia, Malaysia, Singapore, China.

Type of broadcast	Regular broadcast (Standard Audio)	BILINGUAL or DUAL MONO: MAIN I / SUB II	STEREO
Mode Indicator	No Indicator ↔ ▽	I ↔ II	↔ ▽

### Notes:

- If the stereo signal is poor or the receiving conditions are not optimum or if STEREO:MONO automatic switching occurs, it is recommended you switch from STEREO to MONO.
- Even when the contents of the receiving signal undergo changes, selection mode is kept intact.
- When the receiving conditions deteriorate, listening will be easier if the mode is set to the “MONO” position, using the stereo/bilingual sound selection button.
- “DUAL”, also known as “DUAL MONO” or as “BILINGUAL” is not currently transmitted in some countries.

# ASPECT Controls

The TV will allow you to enjoy viewing the picture at its optimum size and aspect.

ASPECT



## ASPECT button

The aspect mode changes each time the ASPECT button is pressed.

TV mode : 4:3 ↔ 16:9

AV mode :


### Note:

TX-17LA1Q, TX-20LA1Q do not have the AUTO mode.

Mode	Picture	Explanation
4 : 3		<b>4:3</b> will display a 4:3 picture at its standard 4:3 size and can be selected if you wish to view in this format.
16 : 9		<b>16:9</b> will display a 16:9 picture at its standard 16:9 size and can be selected if you wish to view in this format.
AUTO	<p>4:3 Signal      16:9 Signal</p>	Selecting <b>AUTO</b> mode of this TV will automatically cause the TV to display any incoming picture at its correct format, i.e. 16:9 or 4:3.

# Advanced Remote Control Operation

## TELETEXT

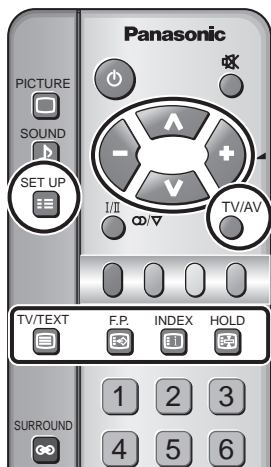

- Teletext features may vary depending on the Broadcasting Companies and is only available if the channel selected is transmitting Teletext.
- Pressing the Picture button whilst in Teletext operation will display the contrast function with a cyan bar, press or to alter the setting as required.
- Pressing the Setup button whilst in Teletext operation will display special function options at the bottom of the screen.
- When in Teletext mode, the volume may still be altered to the desired listening level after pressing SOUND or MUTE button.

### What is List mode?

In List mode, four differently coloured page numbers are situated at the bottom of the screen. Each of these numbers can be altered and stored in the LCD TV's memory.

### What is FASTEXT? (Except TX-17LA1Q, TX-20LA1Q)

In FASTEXT mode, four differently coloured subjects are situated at the bottom of the display. To access more information about one of these subjects, press the appropriately coloured button. This facility enables fast access to information on the subjects shown.

### What is TOP? (TX-17LA1Q, TX-20LA1Q)

- In TOP mode, four differently coloured subjects are situated at the bottom of the display. To access more information about one of these subjects, press the appropriately coloured button. This facility enables fast access to information on the subjects shown.

### Note:


TC-17LA1H, TC-20LA1H do not have the "TELETEXT" function.

### TV/TEXT



### TV / Teletext mode

Press to switch between the current programme and teletext mode.

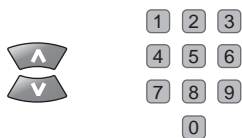

### Page Selection

Pages can be selected in two ways:

- Press or to increase or decrease the page number by one.
- By entering the page number, using 0 -9 on the remote control.



 
### Full / Top / Bottom

Press to display special functions, followed by the **Green** button. Press the **Green** button again to expand the BOTTOM half. Press again to return to normal (FULL) size.



### Reveal

Press to display special functions, followed by the **Red** button to reveal hidden words e.g. quiz page answers. Press again to hide.




### Red / Green / Yellow / Blue buttons

In FASTEXT (TOP) mode they correspond to the differently coloured subjects. In List mode they correspond to the differently coloured page numbers.


# Advanced Remote Control Operation

It is not possible to change the programme position when in News flash, Update or Sub Coded Page Access operation.

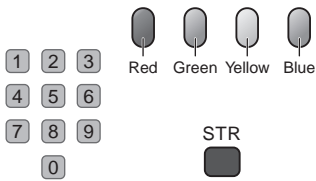


## List Store


In List mode the four page numbers can be altered (programme positions 1 - 25 only).

To do this, press one of the four coloured buttons and enter the new page number. Press and hold  , the page number will change to white indicating that the page is stored.




## Hold

Press  to hold the Teletext page when viewing multi-page information. Press again to return to automatic page update.

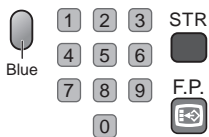

## Favourite Page (F.P.)

Stores a favourite page in memory for instant recall. To store such a page, the TV must be in List mode, and the programme position must be from 1 - 25.

Press the **Blue** button, select the page number, then press and hold  .


The page number is now stored.

Press  to recall this page.

### Note:


If Teletext subtitling is in use, the aspect ratio is set to 16:9.

## Update Display


Press  to display special functions, followed by the **Yellow** button to view the TV picture whilst searching for a Teletext page.


When found, the screen will display the page number at the top left.

Press the **Yellow** button to view the page.

Press  to return to normal TV operation.

## News Flash

When a news flash page has been selected, press  , **Yellow**, to view the TV picture. When an update is received, the page number will be displayed on screen. Press the **Yellow** button to display the News Flash.


Press  to return to normal TV operation.

## Update

Press  , **Yellow** to see the update of information on certain pages.

When an update is received, the page number will be displayed at the top left of the screen.


Press the **Yellow** button to view the page.

Press  to return to normal TV operation.



## Index

### When in Top operation

Press  to return to the main index page.

Depending on the way information is transmitted, this may have to be pressed more than once to return to the main index page.

# Advanced Remote Control Operation



## Sub Coded Page Access

When Teletext information exceeds more than one page, it may take some time for the automatic changing of the sub pages to reach the sub page you require.

It is possible to enter your required sub page and continue watching the normal programme until the correct sub page is found.

Select the required page number using buttons 0 - 9.

If the top of the page indicates that sub pages are being transmitted yet the page does not change, then the number at the top of the page is there to indicate that the broadcaster has updated the page's contents, there are no sub pages.

Press followed by the **Blue** button; T\*\*\*\* will be displayed at the top right of the screen. Enter desired sub page number before the T\*\*\*\* disappears. To select page 6 enter 0, 0, 0 and 6. (If in List mode, a 'T' will appear in the current box at the bottom).

(Press , **Yellow** in List mode).

When the page is available, press the **Yellow** button to view the page.

To clear the page perform one of the following:

- Press .
- Select a new page number.
- Press to return to normal TV operation.




### Note:

When using subtitles, the picture brightness may vary to a preset level.

# VCR / DVD Operation

The Remote Control is capable of operating some functions of selected VCR and DVD (Digital Versatile Disc) equipment. Some VCR and DVD equipment have different functions, so to ensure compatibility please refer to the equipment's instruction book or consult your dealer for details.

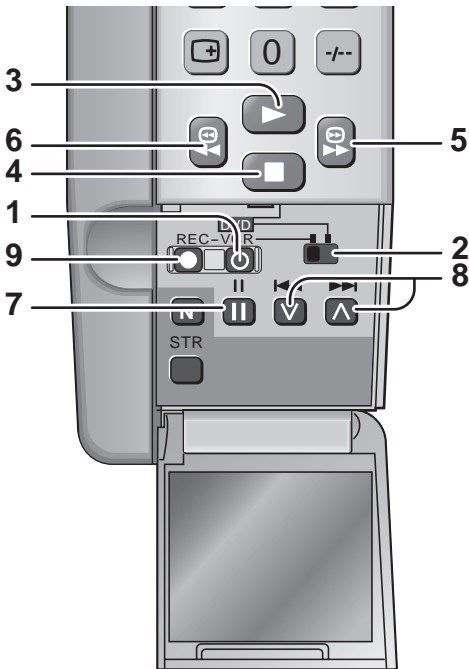


Button	Function
1	Standby
2	VCR / DVD selection switch
3	Play
4	Stop
5	VCR : Fast Forward / Cue DVD : Slow / Search
6	VCR : Rewind / Review DVD : Slow / Search
7	Pause / Still
8	VCR : Programme number Up / Down DVD : Skip
9	Record




## Manufacturer setting

Remote Control Operation is possible for the VCR's and DVD's of the various manufacturers. After completion of setting, execute the various operations after pressing the VCR/DVD selection switch.

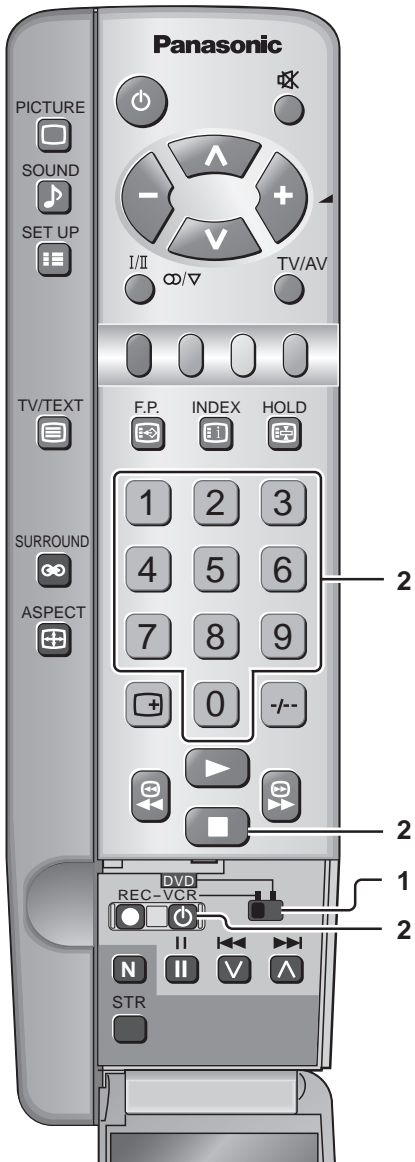

1  Press to select VCR or DVD.

2  While pressing the VCR / DVD Power button, press the manufacturer code (enter the two digit code), and press the VCR / DVD Stop button.



### VCR

Manufacturer	Code	Manufacturer	Code
Panasonic/ National	10,11,12,13	NEC	40,41,42,43
AIWA	15,16	ORION	45,46
FUJITSU	20	PHILIPS	50
HITACHI	25,26,27	SANYO	55,56,57,58
JVC	30,31,32	SHARP	60,61
MITSUBISHI	35,36	SONY	65,66,67
		TOSHIBA	70,71

### DVD

Manufacturer	Code	Manufacturer	Code
Panasonic	70, 71	PIONEER	85
JVC	75	SONY	90, 91
MITSUBISHI	80	TOSHIBA	95

### Note:

After setting, execute operation confirmation.  
If there is no operation, set a different code.



## Helpful Hint














 



1. The respective VCR / DVD manufacturer code is cancelled when battery has been exchanged. Please set it again.
2. Depending on the model, operation of VCR's or DVD's of the manufacturers listed above may not be possible.
3. In some cases, new products may not be operative.
4. It will not operate with other than the above manufactures.

# Channel Allocation

SYS SELECT	CHINA	HK/UK	ASIA/M.EAST	NZ/INDONES	AUSTRALIA	E.EUROPE	SPECL VER	AMERICA	CATV	JAPAN
CH DISPLAY	RECEIVE CHANNEL									
0	-	-	-	-	0	-	-	-	-	-
1	1	-	-	1	1	1	1	-	1	1
2	2	-	2	2	2	2	2	2	2	2
3	~	-	~	~	3	~	~	~	~	~
4	~	-	~	~	4	~	~	~	~	~
5	~	-	~	~	5	~	~	~	~	~
6	~	-	~	~	S2	~	~	~	~	~
7	~	-	~	~	~	~	~	~	~	~
11	~	-	~	~	~	11	11	~	~	~
12	12	-	12	-	~	12	12	~	~	12
13	13	-	-	-	~	-	13	~	~	13
14	~	-	-	-	~	-	~	13	~	~
15	~	-	-	-	S10	-	-	14	~	~
16	~	-	-	-	6	-	-	~	~	~
19	~	-	-	-	9	-	-	~	~	~
20	~	-	-	-	9A	-	-	~	~	~
21	~	21	21	21	10	21	21	~	~	~
22	~	~	~	~	11	~	~	~	~	~
23	~	~	~	~	12	~	~	~	~	~
24	~	~	~	~	S11	~	~	~	~	~
28	~	~	~	~	~	~	~	~	~	~
57	57	~	~	~	S44	~	~	~	~	~
58	-	~	~	~	20	~	~	~	~	~
59	-	~	~	~	21	~	~	~	~	~
62	-	62	62	62	~	62	62	62	62	62
63	-	63	63	63	~	63	63	63	63	C13
69	-	69	69	69	~	69	69	69	~	~
70	-	-	-	-	~	-	-	-	~	~
73	-	-	-	-	~	-	-	-	~	~
74	-	S'1	S'1	S'1	~	S'1	S'1	-	~	~
75	-	S'2	S'2	S'2	~	-	S'2	-	~	~
76	-	S'3	S'3	S'3	~	-	S'3	-	~	~
77	-	-	-	-	~	-	-	-	~	~
78	-	-	-	-	~	-	-	-	~	~
79	-	-	-	-	~	-	-	-	~	~
80	-	S1	S1	S1	~	S1	S1	-	~	~
81	Z1	S2	S2	S2	~	S2	S2	-	~	~
89	Z9	S10	S10	S10	~	S10	S10	-	~	~
90	Z10	S11	S11	S11	~	S11	-	-	~	~
91	Z11	S12	S12	S12	~	S12	-	-	~	~
92	Z12	S13	S13	S13	~	S13	-	-	~	~
93	Z13	S14	S14	S14	~	S14	S14	-	~	~
94	Z14	S15	S15	S15	~	S15	S15	-	~	~
95	Z15	S16	S16	S16	~	S16	S16	-	~	~
96	Z16	S17	S17	S17	~	S17	S17	-	~	~
97	Z17	S18	S18	S18	~	S18	S18	-	~	~
98	Z18	S19	S19	S19	~	S19	S19	-	~	~
99	Z19	S20	S20	S20	~	S20	S20	-	99	C49
100	Z20	S21	S21	S21	~	S21	S21	-	100	-
107	~	~	~	~	69	~	~	-	~	-
117	Z37	~	~	~	-	~	~	-	~	-
118	-	~	~	~	-	~	~	-	~	-
120	-	S41	S41	S41	-	S41	S41	-	~	-
125	-	-	-	-	-	-	-	-	125	-

# Troubleshooting

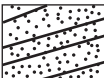If there is a problem with your LCD TV please refer to the table below to determine the symptoms, then carry out the suggested check. If this does not solve the problem, please contact your local Panasonic dealer, quoting the model number and serial number (both found on the rear of the TV).


Symptoms		Checks
Picture	Sound	
 Snowy Picture	 Noisy Sound	Aerial location, direction or connection
 Multiple Image	 Normal Sound	Aerial location, direction or connection
 Interference	 Noisy Sound	Electrical appliances Cars/Motorcycles Fluorescent lights
 Normal Picture	 No Sound	Volume level Sound mute switched on
 No Picture	 No Sound	TV set to AV mode Not plugged into A.C. outlet Not switched on Picture / Sound controls set at minimum levels Check if in stand-by mode
 No Colour	 Normal Sound	Colour Controls set at minimum levels Colour System
 Poor or Distorted Picture	 Weak or No Sound	Retune Channel (s)
 Normal Picture	 Weak or distorted sound	Sound reception may have deteriorated. Sound System
There may be red spots, blue spots and green spots on the screen	 Normal Sound	This is a characteristic of liquid crystal panels. This is not a malfunction and can not be a reason for service claim. The liquid crystal panel is built with very high precision technology giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green, or red. Please note this does not affect the performance of your LCD.

# Maintenance

## To clean this unit, wipe with a soft, dry cloth.

If the surfaces are extremely dirty, use a soft cloth dipped in soap-and-water solution or a weak detergent solution.

- Use eyeglass cleaner to remove stubborn dirt from the LCD.
- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically treated cloth, read the instructions that came with the cloth carefully.
- Do not wipe the LCD with water.

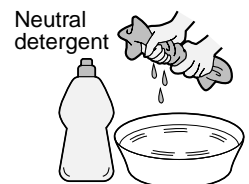

## Wipe the cabinet with a soft cloth

If the cabinet is heavily soiled, wipe with a well-wrung soft cloth dipped in kitchen cleanser (neutral) diluted with water.

### CAUTION:

If water or similar substances get inside the monitor via the liquid crystal panel surface, a malfunction may result.

# Specifications

	<b>TX-17LA1M, TX-17LA1Q, TX-17LA1Z, TX-17LA1X, TC-17LA1H</b>	<b>TX-20LA1M, TX-20LA1Q, TX-20LA1Z, TX-20LA1X, TC-20LA1H</b>																												
<b>Power Source</b>	AC 100 - 240 V, 50 / 60 Hz																													
<b>Power Consumption</b>	Average use : 56 W Stand-by condition : 1.8 W TV set DC 15 V, 3.2 A max.	Average use : 60 W Stand-by condition : 1.8 W TV set DC 15 V, 3.4 A max.																												
<b>LCD</b>	17-inch (432 mm) 4:3 aspect ratio LCD panel (640 × 480 pixel)	20-inch (510mm) 4:3 aspect ratio LCD panel (640 × 480 pixel)																												
<b>Screen Size</b>	343.7 mm (W) × 261.6 mm (H)	408.0 mm (W) × 306.0 mm (H)																												
<b>Sound</b>																														
<b>Speaker</b>	φ 4 cm, 2 pcs, 16 Ω																													
<b>Audio Output</b>	6.0 W (3.0 W + 3.0 W), 10 % THD																													
<b>Headphones</b>	M3 (3.5 mm) Jack × 1																													
<b>Receiving Systems/ Band name</b>	<table border="1"> <thead> <tr> <th>17 Systems</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>1 PAL B, G, H</td> <td rowspan="7">Reception of broadcast transmissions and Playback from Video Cassette Tape Recorders</td> </tr> <tr> <td>2 PAL I</td> </tr> <tr> <td>3 PAL D, K</td> </tr> <tr> <td>4 SECAM B, G</td> </tr> <tr> <td>5 SECAM D, K</td> </tr> <tr> <td>6 SECAM K1</td> </tr> <tr> <td>7 NTSC M (NTSC 3.58 / 4.5 MHz)</td> </tr> <tr> <td>8 NTSC 4.43 / 5.5 MHz</td> <td rowspan="7">Playback from Special VCR's</td> </tr> <tr> <td>9 NTSC 4.43 / 6.0 MHz</td> </tr> <tr> <td>10 NTSC 4.43 / 6.5 MHz</td> </tr> <tr> <td>11 NTSC 3.58 / 5.5 MHz</td> </tr> <tr> <td>12 NTSC 3.58 / 6.0 MHz</td> </tr> <tr> <td>13 NTSC 3.58 / 6.5 MHz</td> </tr> <tr> <td>14 SECAM I</td> </tr> <tr> <td>15 PAL 60 Hz / 5.5 MHz</td> <td rowspan="3">Playback from Special Disc Players and Special VCR's</td> </tr> <tr> <td>16 PAL 60 Hz / 6.0 MHz</td> </tr> <tr> <td>17 PAL 60 Hz / 6.5 MHz</td> </tr> </tbody> </table>	17 Systems	Function	1 PAL B, G, H	Reception of broadcast transmissions and Playback from Video Cassette Tape Recorders	2 PAL I	3 PAL D, K	4 SECAM B, G	5 SECAM D, K	6 SECAM K1	7 NTSC M (NTSC 3.58 / 4.5 MHz)	8 NTSC 4.43 / 5.5 MHz	Playback from Special VCR's	9 NTSC 4.43 / 6.0 MHz	10 NTSC 4.43 / 6.5 MHz	11 NTSC 3.58 / 5.5 MHz	12 NTSC 3.58 / 6.0 MHz	13 NTSC 3.58 / 6.5 MHz	14 SECAM I	15 PAL 60 Hz / 5.5 MHz	Playback from Special Disc Players and Special VCR's	16 PAL 60 Hz / 6.0 MHz	17 PAL 60 Hz / 6.5 MHz							
17 Systems	Function																													
1 PAL B, G, H	Reception of broadcast transmissions and Playback from Video Cassette Tape Recorders																													
2 PAL I																														
3 PAL D, K																														
4 SECAM B, G																														
5 SECAM D, K																														
6 SECAM K1																														
7 NTSC M (NTSC 3.58 / 4.5 MHz)																														
8 NTSC 4.43 / 5.5 MHz	Playback from Special VCR's																													
9 NTSC 4.43 / 6.0 MHz																														
10 NTSC 4.43 / 6.5 MHz																														
11 NTSC 3.58 / 5.5 MHz																														
12 NTSC 3.58 / 6.0 MHz																														
13 NTSC 3.58 / 6.5 MHz																														
14 SECAM I																														
15 PAL 60 Hz / 5.5 MHz	Playback from Special Disc Players and Special VCR's																													
16 PAL 60 Hz / 6.0 MHz																														
17 PAL 60 Hz / 6.5 MHz																														
<b>Receiving Channels</b>	<table border="0"> <tr> <td>Regular TV</td> <td><b>VHF BAND</b></td> <td><b>UHF BAND</b></td> <td><b>CATV</b></td> </tr> <tr> <td></td> <td>2-12 (PAL/SECAM B, K1)</td> <td>21-69 (PAL G, H, I/SECAM G, K, K1)</td> <td>S1-S20 (OSCAR)</td> </tr> <tr> <td></td> <td>0-12 (PAL B AUSTR.)</td> <td>28-69 (PAL B AUSTR.)</td> <td>1-125 (U.S.A CATV)</td> </tr> <tr> <td></td> <td>1-9 (PAL B N.Z)</td> <td>13-57 (PAL D, K)</td> <td>C13-C49 (JAPAN)</td> </tr> <tr> <td></td> <td>1-12 (PAL/SECAM D)</td> <td>13-62 (NTSC M Japan)</td> <td>S21-S41 (HYPER)</td> </tr> <tr> <td></td> <td>1-12 (NTSC M Japan)</td> <td>14-69 (NTSC M U.S.A)</td> <td>Z1-Z37 (CHINA)</td> </tr> <tr> <td></td> <td>2-13 (NTSC M U.S.A)</td> <td></td> <td>5A,9A (AUSTR.)</td> </tr> </table>	Regular TV	<b>VHF BAND</b>	<b>UHF BAND</b>	<b>CATV</b>		2-12 (PAL/SECAM B, K1)	21-69 (PAL G, H, I/SECAM G, K, K1)	S1-S20 (OSCAR)		0-12 (PAL B AUSTR.)	28-69 (PAL B AUSTR.)	1-125 (U.S.A CATV)		1-9 (PAL B N.Z)	13-57 (PAL D, K)	C13-C49 (JAPAN)		1-12 (PAL/SECAM D)	13-62 (NTSC M Japan)	S21-S41 (HYPER)		1-12 (NTSC M Japan)	14-69 (NTSC M U.S.A)	Z1-Z37 (CHINA)		2-13 (NTSC M U.S.A)		5A,9A (AUSTR.)	
Regular TV	<b>VHF BAND</b>	<b>UHF BAND</b>	<b>CATV</b>																											
	2-12 (PAL/SECAM B, K1)	21-69 (PAL G, H, I/SECAM G, K, K1)	S1-S20 (OSCAR)																											
	0-12 (PAL B AUSTR.)	28-69 (PAL B AUSTR.)	1-125 (U.S.A CATV)																											
	1-9 (PAL B N.Z)	13-57 (PAL D, K)	C13-C49 (JAPAN)																											
	1-12 (PAL/SECAM D)	13-62 (NTSC M Japan)	S21-S41 (HYPER)																											
	1-12 (NTSC M Japan)	14-69 (NTSC M U.S.A)	Z1-Z37 (CHINA)																											
	2-13 (NTSC M U.S.A)		5A,9A (AUSTR.)																											
<b>Aerial - Rear</b>	UHF / VHF																													
<b>Operating Conditions</b>	Temperature : 5 °C - 40 °C Humidity : 5 % - 90 % RH (non-condensing)																													
<b>Connection Terminals</b>																														
<b>AV1</b>	VIDEO (RCA Pin Type) S-VIDEO (MINI DIN 4-pin) AUDIO L-R (RCA Pin Type × 2)	1.0 Vp-p (75 Ω) Y:1.0 Vp-p (75 Ω) C:0.286 Vp-p (75 Ω) 0.5 Vrms																												
<b>AV2</b>	VIDEO (RCA Pin Type) AUDIO L-R (RCA Pin Type × 2) Y PB/PR	1.0 Vp-p (75 Ω) 0.5 Vrms 1.0 Vp-p (including synchronization) ±0.35 Vp-p																												
<b>MONITOR OUT</b>	VIDEO (RCA Pin Type) AUDIO L-R (RCA Pin Type × 2)	1.0 Vp-p (75 Ω) 0.5 Vrms																												
<b>Dimensions (W × H × D)</b>																														
<b>Including TV Stand</b>	424 mm × 415 mm × 215 mm	494 mm × 461 mm × 255 mm																												
<b>TV Set Only</b>	424 mm × 382 mm × 64 mm	494 mm × 422 mm × 82 mm																												
<b>Mass (Weight)</b>	5.4 kg Net	7.4 kg Net																												

## Note:

Design and Specifications are subject to change without notice. Weight and Dimensions shown are approximate.

## Customer' Record

The model number and serial number of this product can be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

## Matsushita Electric Industrial Co., Ltd.

Web Site : <http://www.panasonic.co.jp/global/>

© 2003 Matsushita Electric Industrial Co., Ltd. All Rights Reserved.

Printed in Japan  
MBS1003S1113