

# **Panasonic**

Operating Instruction

Colour Television  
TX-33S200X  
TX-33S200Z

 
Please read the operating instructions completely before operating this set.

TQB4G0591


## Dear Panasonic customer

Welcome to the Panasonic family of customers. We hope that you will have many years of enjoyment from your new colour television.


## Safety Instructions

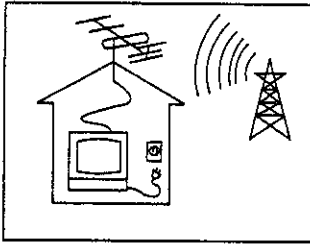

 
The TV set can be operated on AC AUTO 110/240V, 50/60Hz (TX-33S200X) AND AC SINGLE 230V, 50Hz (TX-33S200Z)

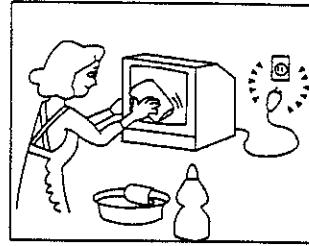

 
The cabinet and picture tube can be kept in good condition by simply wiping with a clean, soft cloth moistened with mild detergent and water. Do not use solutions containing benzol, petroleum or a chemical cloth. For safety, remove the plug from the wall outlet.

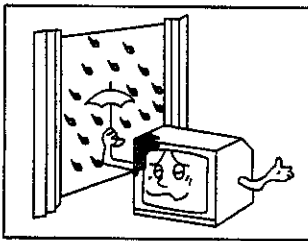

 
To prevent damage which may result in fire or electrical shock, do not expose the TV set to rain or excessive moisture.

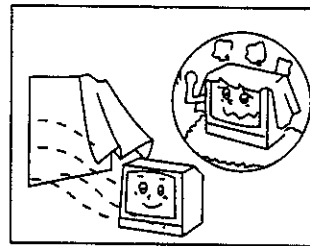

 
Adequate ventilation is essential to prevent failure of electrical components.

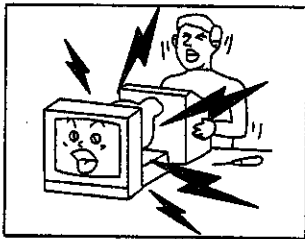

 
Do not remove the rear cover, as live parts are accessible when it is removed.

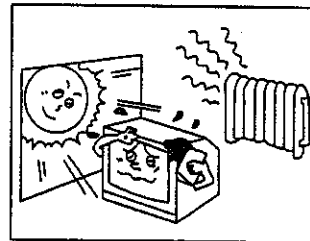

 Avoid exposing the TV set to direct sunlight and other source of heat.

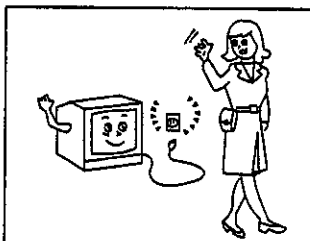

 
Remove the plug from the wall outlet (Power point ) when the TV set is not used for a prolonged period of time.

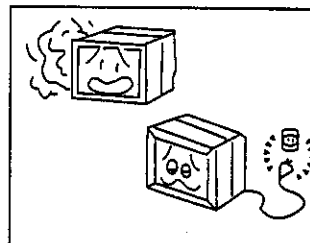

Do not use this set if abnormal operation occurs.  
EX: smoke, odd sounds or smells, turn the power switch off and disconnect the AC power if you notice any unusual operation.

## Before Operating This Set
 
### Connect the Aerial Cable to the RF In Terminal

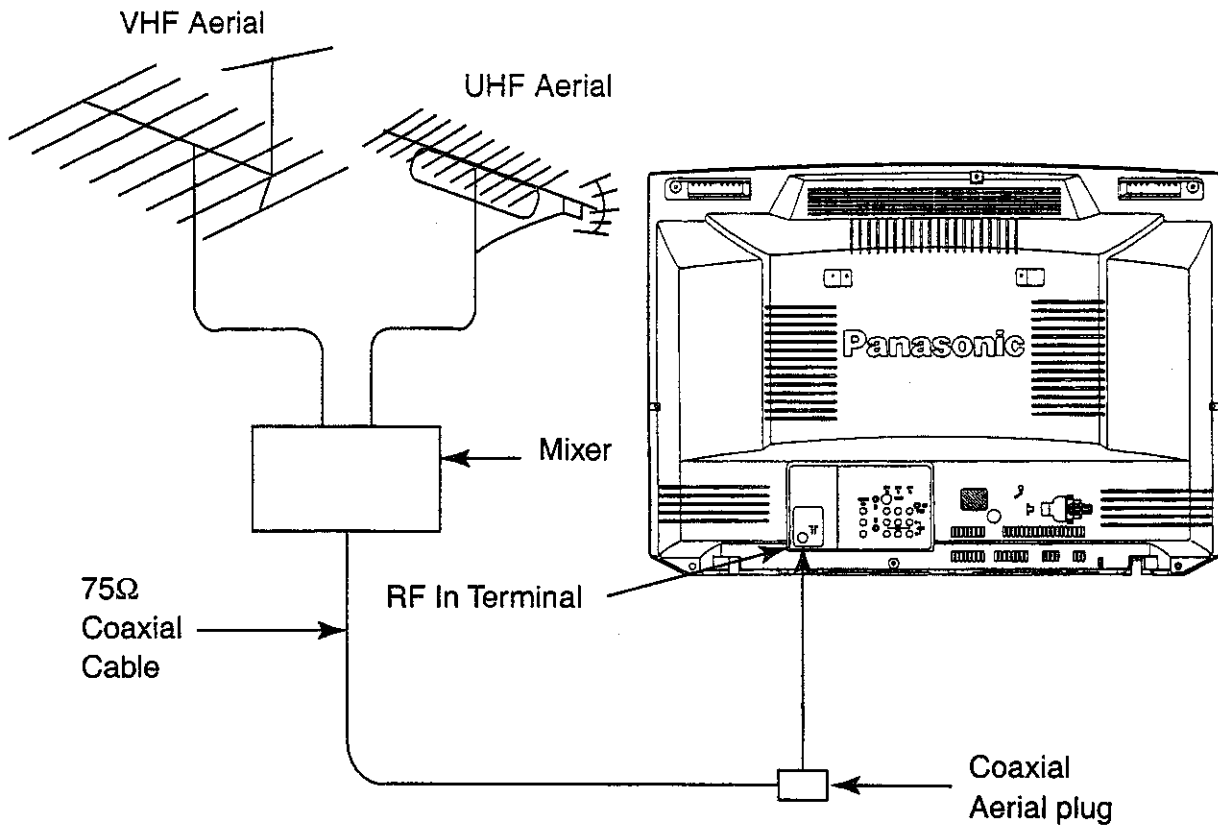

To obtain the best quality picture and sound, an external antenna, the correct cables (75 Ohm coaxial) and the correct terminating plug will be required.


If a communal antenna system is used, you may require the correct connection cable and plugs between the wall antenna socket and your television receiver.

Your local Television Service Dealer may be able to assist you in obtaining the correct antenna system for your particular area and accessories required.

Any matters about antenna installation, upgrading of existing systems or accessories required, and the cost incurred, are the responsibility of the customer.



#### Note :

 If your existing antenna system uses 300 Ohm to 75 Ohm Balun, see Below.

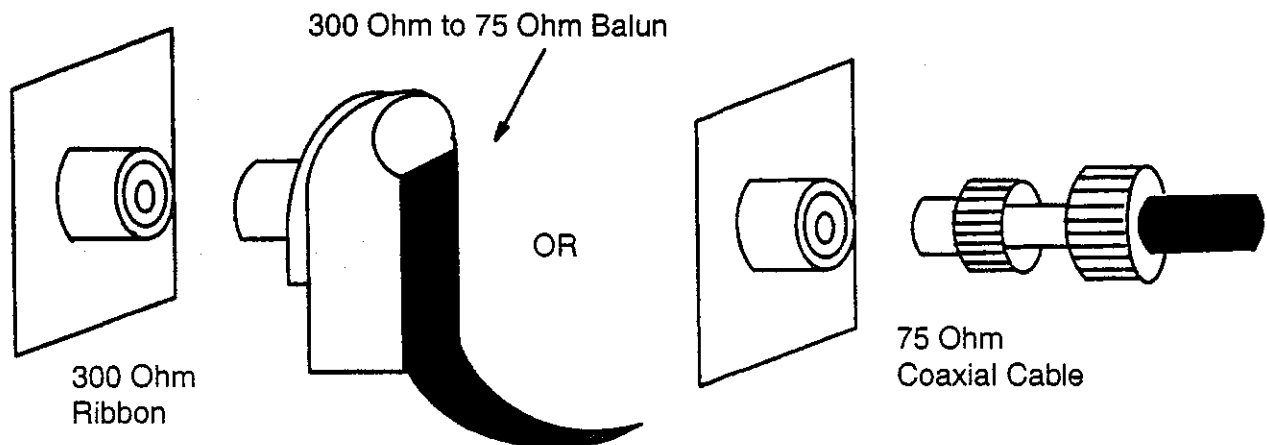


## Connections
  
### How to connect the "AV1, AV2 or AV3" Input Terminals.

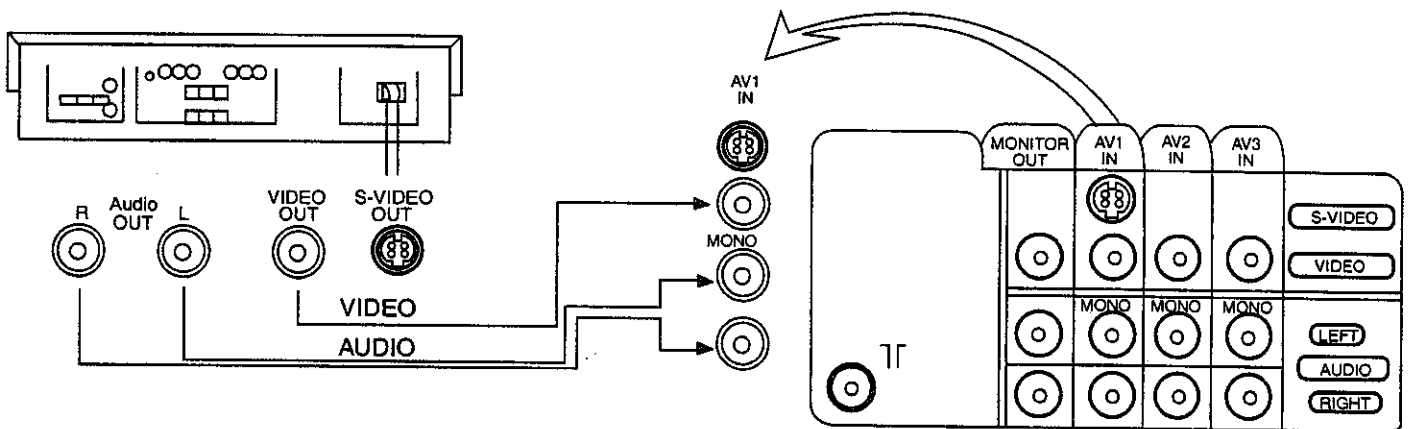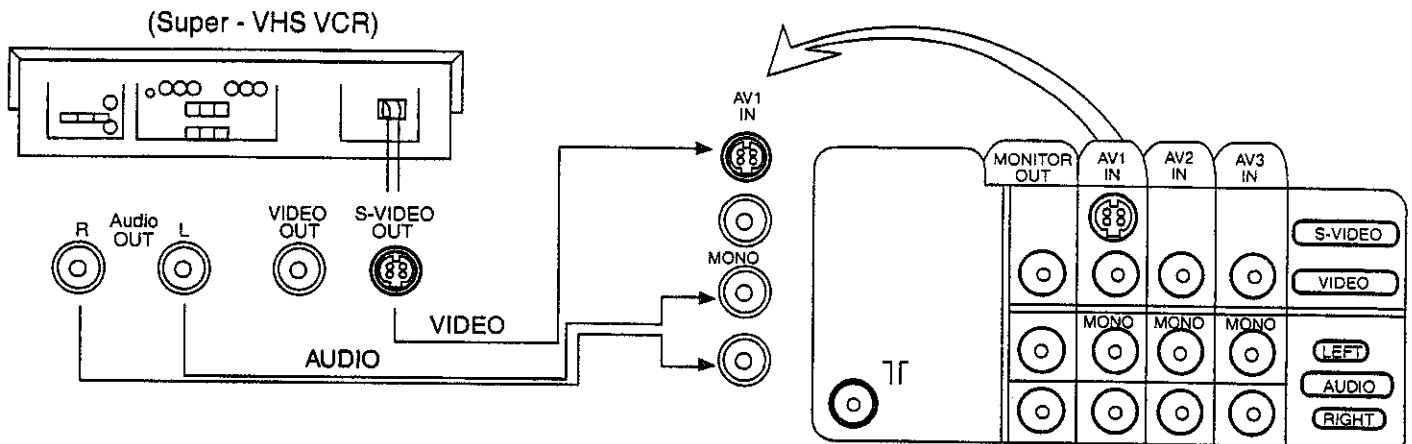


#### Note :

1. When Blue Back function is selected ON and that AV mode has no input picture signal, the background colour of the TV screen will change to blue screen. (Refer to Blue Back function for details)
2. When the S-Video cable is connected to the S-Video terminal, The Phono Video input will be automatically switched off for that AV mode. AV- Indication will appear on the top left of the screen.
3. When a Monaural VCR is used, connect the Monaural Audio cable to the Audio "L" (Left) terminal.
4. Similar connections are available at the AV1, AV2 and AV3 input terminals.  
Select the desired AV input position by pressing the TV/AV button (Refer to page 8).
5. AV2 have two terminals, Front AV2 and Rear AV2 terminal. In case both terminal has the Input, mechanical switch will switch off the rear input and only front AV2 signal could be seen on the screen.

## Connections

### How to connect the AV MONITOR OUTPUT terminals to the other equipment.

 The monitor out terminal output the same signals as are on the TV screen at that time.  
e.g. TV programmes or signals from AV1, AV2 or AV3 input.

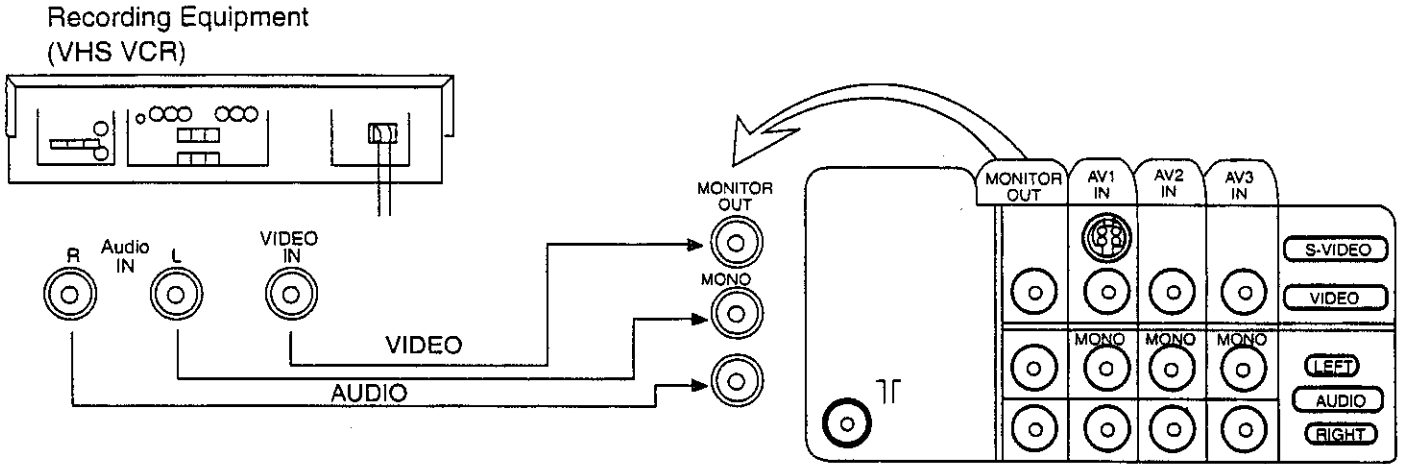


#### Note :

- (1) Never connect the same video recorder with both the VIDEO IN and MONITOR OUT terminals on this TV set, as this could cause incorrect operation.




### Connecting Headphones

 When a headphones plug is inserted into the Headphones socket all speakers will be automatically disconnected; only the Headphones will function.

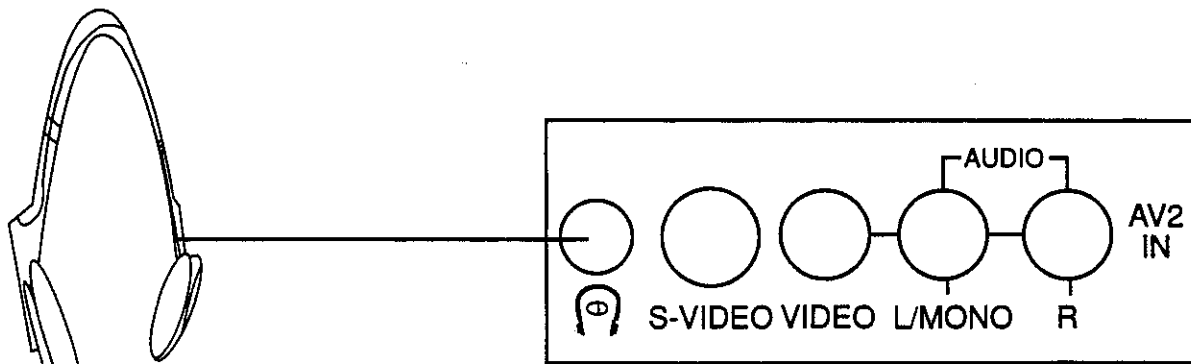


(Optional)  
(not supplied)

# Location of Control (TV)

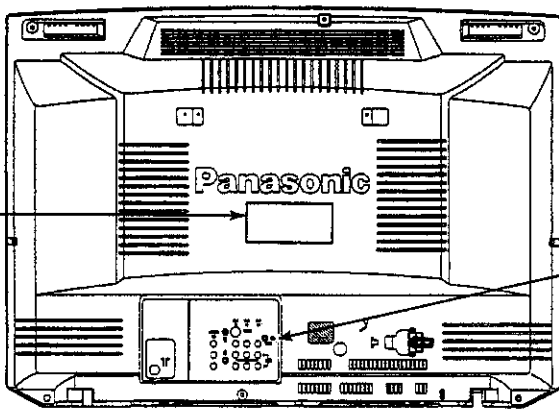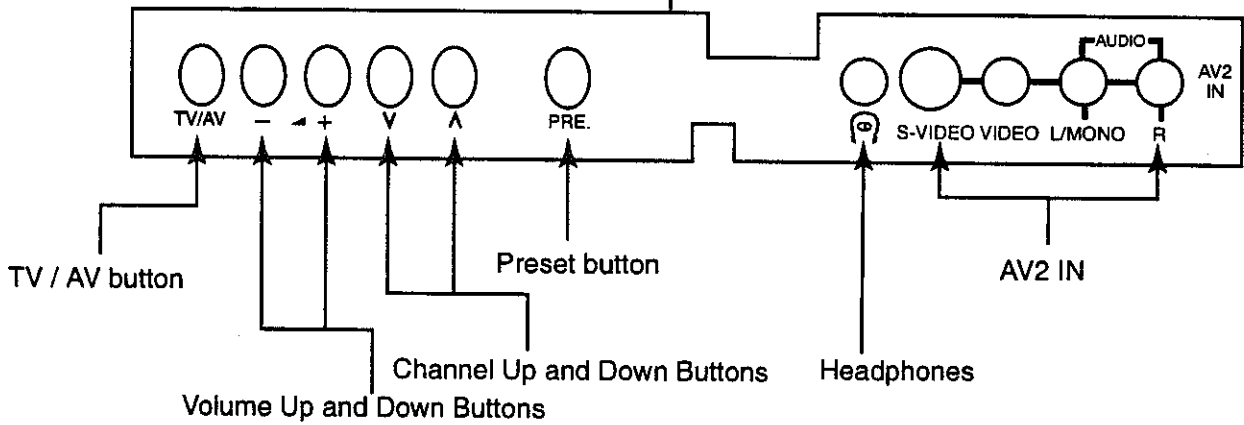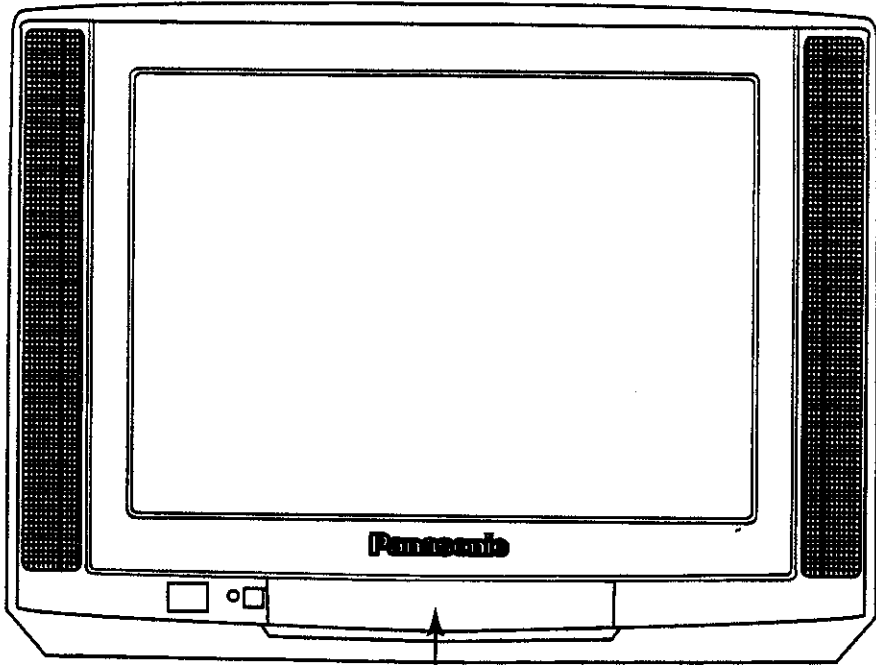   

 
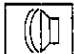


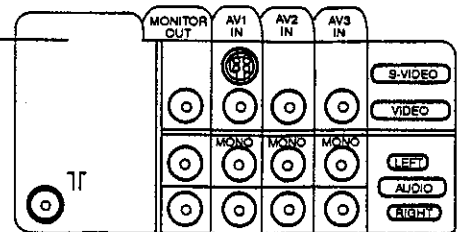




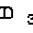























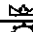

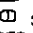
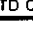
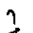
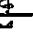
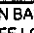




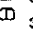

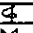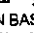

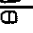

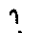




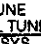


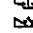




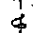


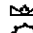



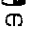





Model Name Plate

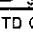

# Flow Chart of Main Menu

 
 
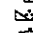 
When the "MAIN MENU" button is pushed at the main menu screen, the screen display will return to the normal viewing condition. When the "MAIN MENU" button is pushed at each MENU screen ( Picture, Sound, Peatures, Language, Preset), the screen display will return to the Main Menu screen.

Push	MAIN MENU 				
Select					
Symbol Mark					
On-Screen Indication	<b>PICTURE</b>	<b>SOUND</b>	<b>FEATURES</b>	<b>LANGUAGE</b> ENGLISH 中文 РУССКИЙ العربية	<b>PRESET</b>
Push					
On-Screen Indication (example)	<b>DYNAMIC</b>  32 COLOUR  32 NTSC-TINT  32 BRIGHT  63 CONTRAST  32 SHARPNESS STD COLOUR TEMP	<b>SPEECH</b>  :32 BASS  32 TREBLE  32 BALANCE ON BASS BOOST OFF LOUDNESS	<b>BLUE BACK</b> ON CH COLOUR SET STD CHILD LOCK OFF GEOMAGNETIC 8	<b>语言</b> ENGLISH 中文 РУССКИЙ العربية	88 <b>AUTO TUNE</b> MANUAL TUNE SOUND SYS 5.5MHz COLOUR SYS AUTO FINE TUNE SKIP OFF POS. CHANGE 88
					
	<b>DYNAMIC</b>  32 COLOUR  32 NTSC-TINT  32 BRIGHT  63 CONTRAST  32 SHARPNESS STD COLOUR TEMP	<b>SPEECH</b>  :32 BASS  32 TREBLE  32 BALANCE ON BASS BOOST OFF LOUDNESS	<b>BLUE BACK</b> ON CH COLOUR SET STD CHILD LOCK OFF GEOMAGNETIC 8	<b>Язык</b> ENGLISH 中文 РУССКИЙ العربية	88 <b>AUTO TUNE</b> MANUAL TUNE SOUND SYS 5.5MHz COLOUR SYS AUTO FINE TUNE SKIP OFF POS. CHANGE 88
					
	<b>DYNAMIC</b>  32 COLOUR  32 NTSC-TINT  32 BRIGHT  63 CONTRAST  32 SHARPNESS STD COLOUR TEMP	<b>SPEECH</b>  :32 BASS  32 TREBLE  32 BALANCE ON BASS BOOST OFF LOUDNESS	<b>BLUE BACK</b> ON CH COLOUR SET STD CHILD LOCK OFF GEOMAGNETIC 8	<b>اللغة</b> ENGLISH 中文 РУССКИЙ العربية	88 <b>AUTO TUNE</b> MANUAL TUNE SOUND SYS 5.5MHz COLOUR SYS AUTO FINE TUNE SKIP OFF POS. CHANGE 88
					
	<b>DYNAMIC</b>  32 COLOUR  32 NTSC-TINT  32 BRIGHT  63 CONTRAST  32 SHARPNESS STD COLOUR TEMP	<b>SPEECH</b>  :32 BASS  32 TREBLE  32 BALANCE ON BASS BOOST OFF LOUDNESS	<b>BLUE BACK</b> ON CH COLOUR SET STD CHILD LOCK OFF GEOMAGNETIC 8		88 <b>AUTO TUNE</b> MANUAL TUNE SOUND SYS 5.5MHz COLOUR SYS AUTO FINE TUNE SKIP OFF POS. CHANGE 88
					
	<b>DYNAMIC</b>  32 COLOUR  32 NTSC-TINT  32 BRIGHT  63 CONTRAST  32 SHARPNESS STD COLOUR TEMP	<b>SPEECH</b>  :32 BASS  32 TREBLE  32 BALANCE ON BASS BOOST OFF LOUDNESS			88 <b>AUTO TUNE</b> MANUAL TUNE SOUND SYS 5.5MHz COLOUR SYS AUTO FINE TUNE SKIP OFF POS. CHANGE 88
					
	<b>DYNAMIC</b>  32 COLOUR  32 NTSC-TINT  32 BRIGHT  63 CONTRAST  32 SHARPNESS STD COLOUR TEMP				88 <b>AUTO TUNE</b> MANUAL TUNE SOUND SYS 5.5MHz COLOUR SYS AUTO FINE TUNE SKIP OFF POS. CHANGE 88
					

**Note :**


The menu screen function of Bright, Contrast, Bass, Treble, Balance, Bass Boost, Loudness, Blue Back, CH Colour Set, Geomagnetic, Language and Fine Tune are applicable in teletext mode.

# General Operation

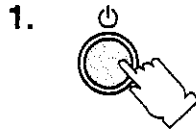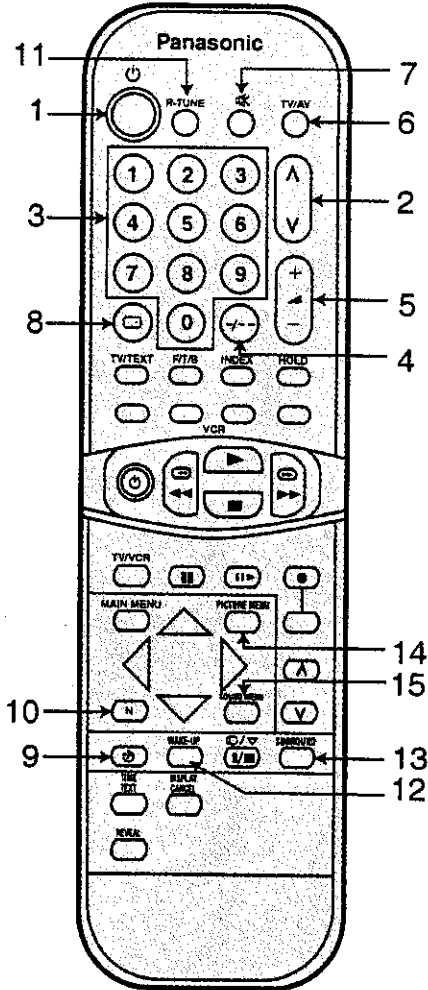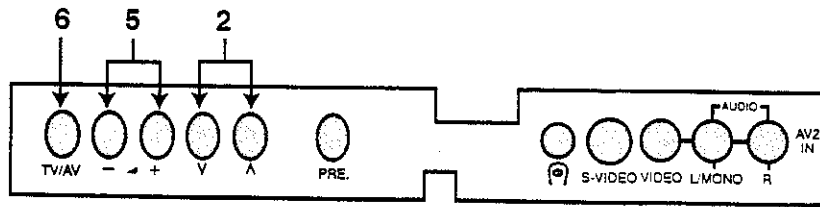



## 1. To Switch Power on/off

 The TV set must be switched on at the wall outlet and at the Main power switch. Press this button to turn the TV set ON, from stand-by mode. Press it again to turn off.

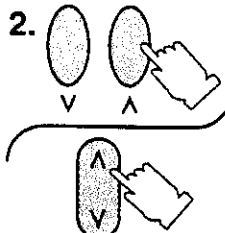

## 2. Programme Number Selection

 
 
Press the programme number Up " $\wedge$ " or down " $\vee$ " Button to select the next higher or lower programme number.

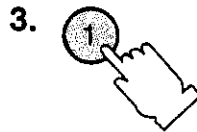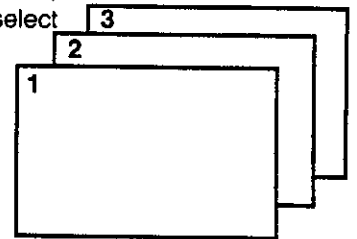

## 3. Direct Programme Number Selection

(0 - 9)

  e. g. To select programme number "1", press the "1" button.

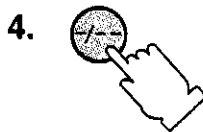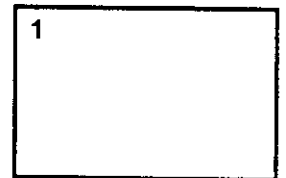

## 4. Two Digit Programme Number Selection

 
 
e.g. To select Programme Number "24".

Push the  $\oplus/-$  button.

Push the  $\textcircled{2}$  button.

Push the  $\textcircled{4}$  button.

Setting range 0 ~ 99

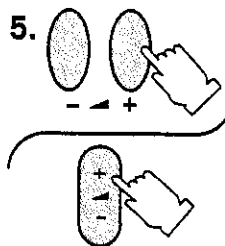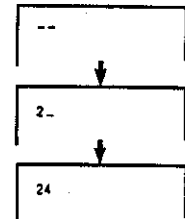


## 5. Volume Adjustment

Push the Volume Up or Down button to increase or decrease the sound volume level.


### Note :

 The on screen display will indicate both numerically and graphically the volume level. Numeric levels start at " 0 " for zero or no sound, and will increase up to 63 which is the maximum sound level.

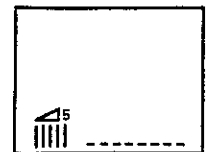





## General Operation

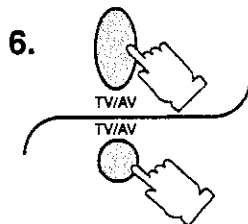 


### 6. TV / AV Selection

  Push the " TV/AV " button to select TV, AV1, AV2 and AV3 input signal modes sequentially.

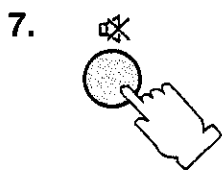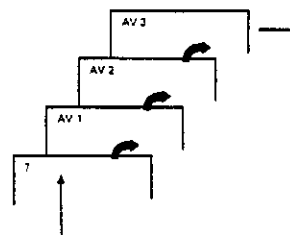


### 7. Sound Mute Button

 Push this button to mute the Sound completely.  
Push the button once again to restore the previous sound level, and cancel the mute.


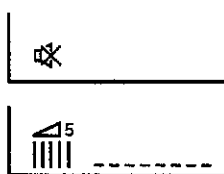


 The " Mute " symbol will appear.  
( Colour changes to red )

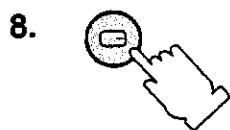



### 8. Recall Button

  Push the RECALL button to display the current system status.  
Press this button until display is cancelled.

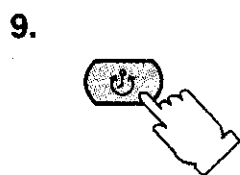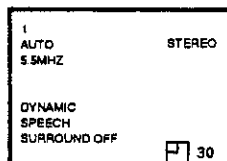

### 9. Off Timer Button

  The TV set may be preset to switch to stand-by after a fixed period.  
By pressing "Off-Timer" button, you can select the preset time either 30, 60, or 90 minutes.

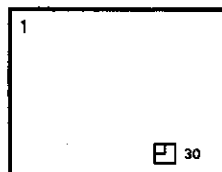

When the off-timer reaches its last 3 minutes, it starts blinking before going to stand-by condition.




#### Note :

 Setting Off-timer to AUTO mode. If the set is not switched off, when the TV station ends broadcasting, it will automatically go to the stand-by condition after 5 minutes. This AUTO mode will not operate when the TV receiver is in AV mode.


#### How to cancel the OFF-timer setting:

1. Set the preset time condition to "0" mode by pressing the Off - timer button.
2. Turning the TV set off.

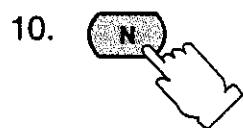

### 10. Normal ( N ) Button

 By pushing the Normal "N" Button on the Remote Control while Picture or Sound Control Function is displayed, the Selected function will be changed to the Normal Mode. Normalization will not occur if the function is not displayed when the "N" button is pushed. The Normal mode is the factory preset condition. Returning to this original condition is called "Normalization".

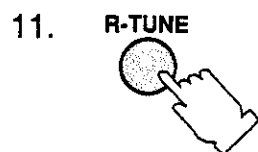


### 11. Rapid Tune Button

Push the button to access previously viewed channel.



PRESENT CHANNEL  
BEING VIEWED

 LAST VIEWED  
CHANNEL




## 12 Wake Up Timer Button.

  1. Press the "WAKE UP TIMER" button.

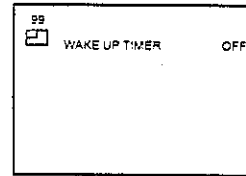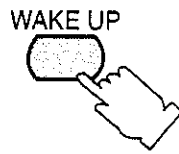

 
2. Press the position left or right button to select the wake up timer. (Wake up timer will increase or decrease by 10 minutes when left or right button is pressed.)

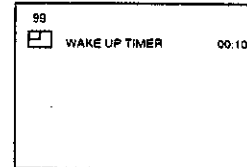

### Note :

Wake up time can be set up to 12 hours.

 3. After setting the wake up timer, switch the TV set to stand-by mode. (LED light will blink ON and OFF during stand-by mode)
4. When the time wake up timer has elapsed in the set will automatically switch on. (Press any button to cancel the wake up timer on screen display.)

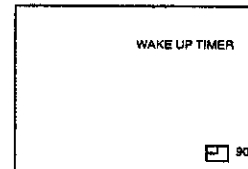

### Note :

 
- i) After the wake up time is set and the TV is still not switched off, the wake up timer will continue to count down until the timer is off.
- ii) When wake up timer switch ON the TV set, the off timer is set to 90 minutes automatically. Press any button to cancel the off-timer. If no button is pressed, the TV set will switch off automatically after 90 minutes.

5. To cancel the wake up timer.

- i) Switch off the main power.
- ii) Press the position left or right button, until OFF is reached.
- iii) Press the Normalize button when wake up timer OSD is displayed.

# General Operation

## 13. SURROUND

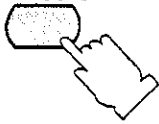


### Surround Sound Operation

The benefit of surround sound are enormous. With additional speakers you can be completely enveloped in sound; just as if you were at a concert hall or cinema. The surround effect does operate without external surround speakers, but is enhanced when they are connected. Such near surround speakers should not be sited in direct proximity to the listeners.

#### On-screen display during surround mode.

	Type of broadcast	ON-Screen display
TV Mode	MONO	MONO SURROUND ↕ SURROUND OFF
	STEREO	STEREO SURROUND ↕ SURROUND OFF
AV Mode	Select AV mode	STEREO SURROUND ← ↓ MONO SURROUND ↓ SURROUND OFF →
 
## 14. PICTURE MENU

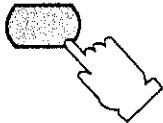

### Picture Menu Operation

By pressing the PICTURE MENU button, you can sequentially select the Picture menus as shown below:

On-screen	Function
DYNAMIC	For watching in brighter environments. This menu selects a higher than normal level of contrast.
STANDARD	For watching in normal (evening) environments. This menu selects normal level of contrast.
SOFT	For watching in dark environments. This menu selects reduced level of contrast.

## 15. SOUND MENU



 
 
### Sound Menu Operation

By pressing the SCUND MENU button, you can sequentially select the Sound menus as shown below:


On-screen	Function
MUSIC	For music programme for example.
SPEECH	For News programme for example.
MOVIE	For movie programme for example.

# Tuning Procedure


## Automatic Tune

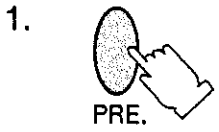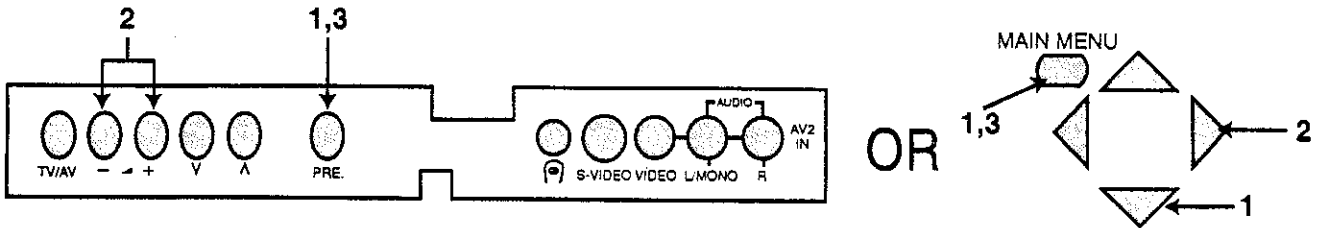

 
1. Press the "PRE" (PRESET) button, until "AUTO TUNE" function is selected.

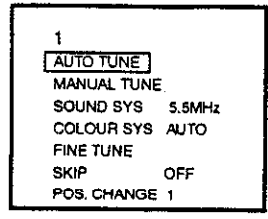

 
Channel Number Automatic search condition.

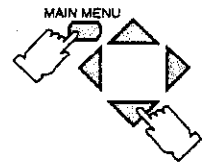

 
Press the "MAIN MENU" and "Position" buttons, until "AUTO TUNE" function is selected.

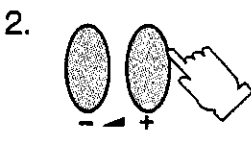

 
2. Press the Volume Up "+" button.

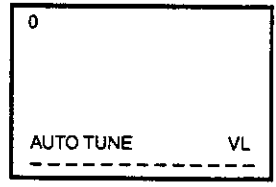


Search start.

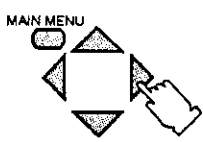 

Press the Position Right button.

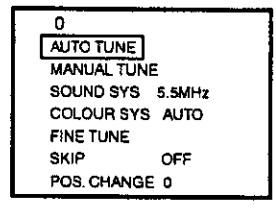 

 The best tuning position is automatically memorized.

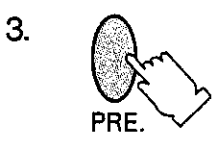


3. Press the "PRE" (PRESET) button 7 times.

This returns the set to the normal viewing condition.





 After all stations are tuned, press the "MAIN MENU" button twice.

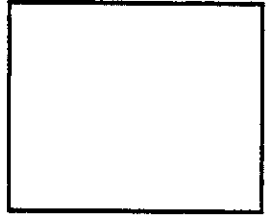


# Tuning Procedure

  
## Manual Tune

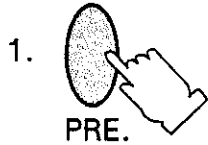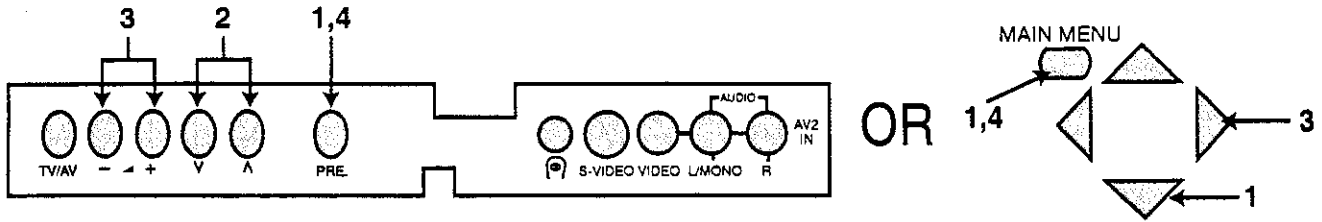

 
1. Press the "PRE" (PRESET) button twice, setting the Manual Tune mode.

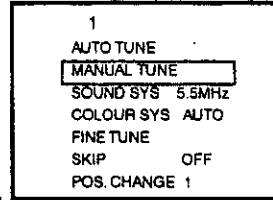


Channel Number  
Manual Tune condition.

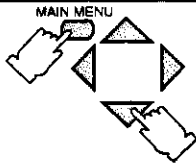 

 
Press the "MAIN MENU" and "Position" buttons, until "MANUAL TUNE" function is selected.

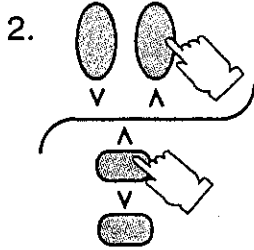

 
2. Press either the Channel Up or Down button.

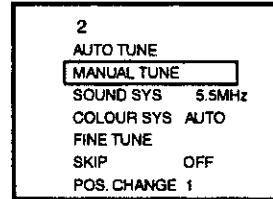


Select the desired  
Channel Number.

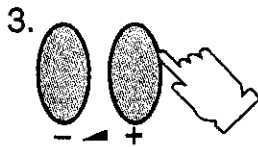 

 
3. Press the Volume Up "+" or Down "-" button.  
Volume "+": Next higher Channel  
Volume "-": Next lower Channel

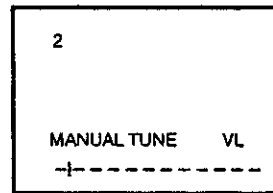

Search Start.

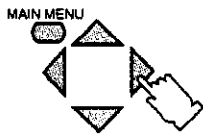 

 Press the Position Left or Right button.  
Position left: Next lower Channel.  
Position right: Next higher Channel.

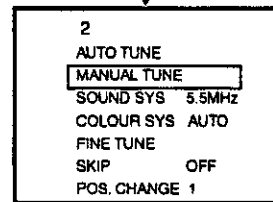

The best tuning position is  
automatically memorized.



4. Press the "PRE" (PRESET) button 6 times.




This returns the set to the  
normal viewing condition.




Press the "MAIN MENU" button twice.

# Tuning Procedure

 
## Fine Tune

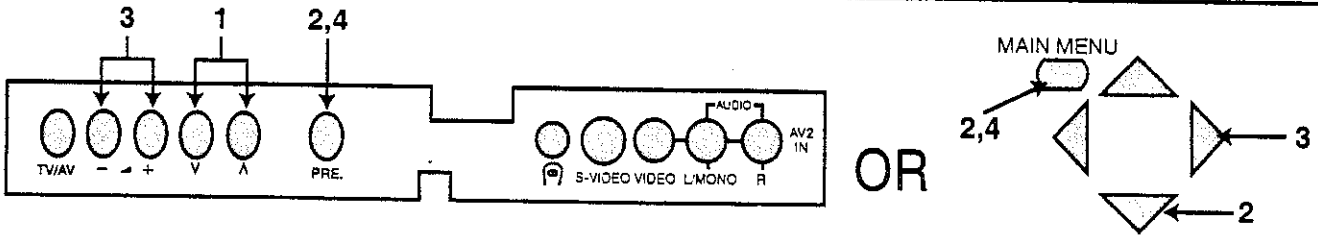


Under normal reception condition, this function is not used. However, in areas of poor reception or constant interference, a slight adjustment on the fine tuning can improve the picture and sound quality.

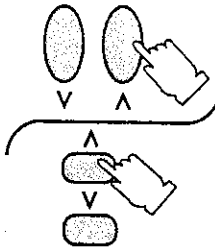1. 

 
Select the channel which you want to try to improve, using the Channel Up or Down buttons.

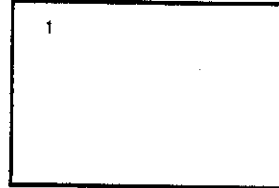


Select the desired Channel Number.

2. 

 
Press the "PRE." (PRESET) buttons 5 times, setting the Preset Menu to "Fine Tune".

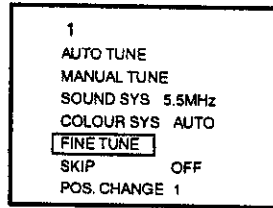


Fine Tune condition.

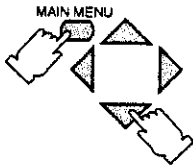


Press the "MAIN MENU" and "Position" buttons, until "FINE TUNE" is selected.

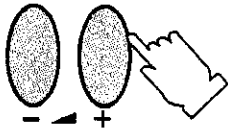3. 

 
Press the Volume Up "+" or Down "-" button until the picture is received.

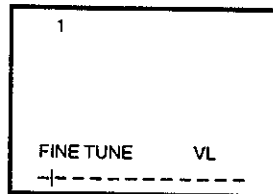


Fine Tune Start.

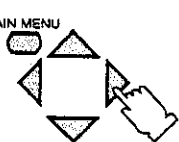

 Press the Position Left or Right button until the picture is received.

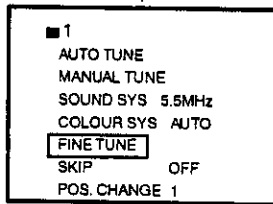


The AFC (Automatic Frequency Control) function is deactivated. The "■" symbol appears to the left of the Channel Number.

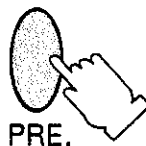
4. 

Press the "PRE" (PRESET) button 3 times.

This returns the set to the normal viewing condition.




 After all stations are tuned, press the "MAIN MENU" button twice.

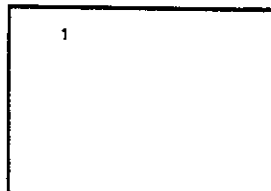


# Tuning Procedure
 
## How to cancel the Fine Tuning

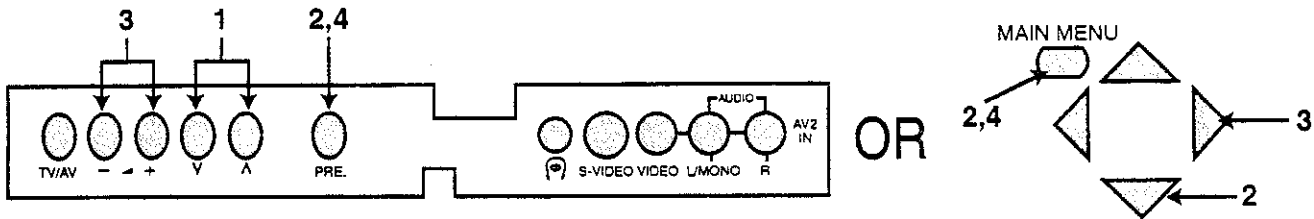


Cancelling previously adjusted (manually) fine tuning, means re – activating the AFC (Automatic Frequency Control) Function, also known as AFT (Automatic Frequency Tuning). Re – activating the Automatic Frequency Tuning means albarning the set to automatically tune optimum tuning position, for that Channel Number.

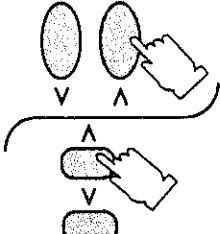1.  Select the "AFC OFF" Channel Number which you want to return to Automatic Frequency Control (Cancel the manual fine tuning).

■ 1

"AFC OFF" Channel Numbers are indicated to you by the " ■ " symbol to the left of the Channel Number.


2.  Press the " PRE." (PRESET) buttons twice, to set to "MANUAL TUNE" mode.

MAIN MENU

Press the "MAIN MENU" and "Position" buttons, until "MANUAL TUNE" function is selected.

■ 1  
 AUTO TUNE  
**MANUAL TUNE**  
 SOUND SYS 5.5MHz  
 COLOUR SYS AUTO  
 FINE TUNE  
 SKIP OFF  
 POS. CHANGE 1

Manual Search condition.

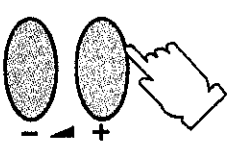3.  Press the Volume Up " + " or Down " - " button briefly.


MAIN MENU

Press the Position Left or Right button briefly.

1  
 MANUAL TUNE VL  
 - - - - -

The best tuning position is automatically memorized.

1  
 AUTO TUNE  
**MANUAL TUNE**  
 SOUND SYS 5.5MHz  
 COLOUR SYS AUTO  
 FINE TUNE  
 SKIP OFF  
 POS. CHANGE 1

4.  Press the "PRE" (PRESET) button 6 times.

MAIN MENU



Press the "MAIN MENU" button twice.

1


This returns the set to the normal viewing condition.

# Tuning Procedure

  
## How to Skip Programme Number

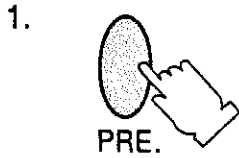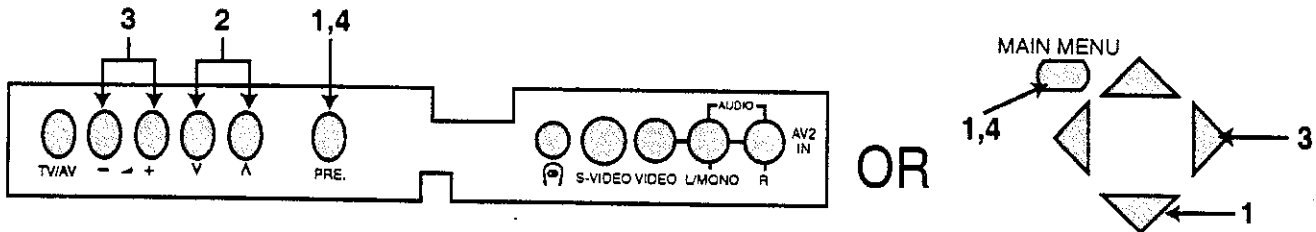

 
Press the "PRE." (PRESET) button 6 times, setting the Preset Menu to "SKIP".

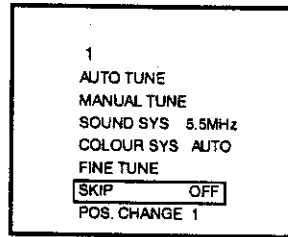



Channel Skip condition.

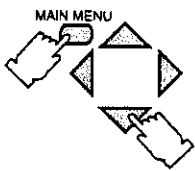 

 Press the "MAIN MENU" and "Position" buttons, until the "SKIP" is selected.


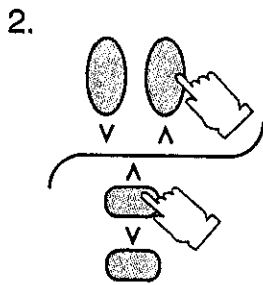


  Select a Programme Number you want to skip, by pushing the Channel number Up or Down buttons.

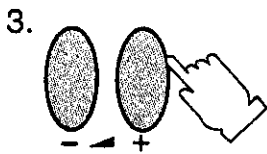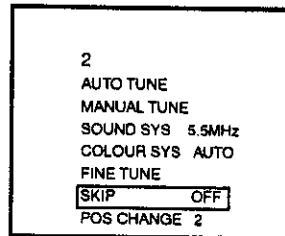


Press the Volume Up "+" or Down "-" button.

  The displayed "OFF" condition changes to "ON".

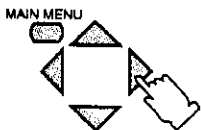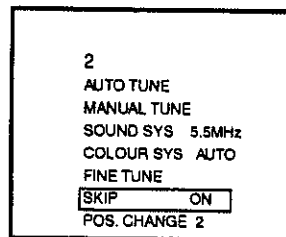


 Press the Position Left or Right button.

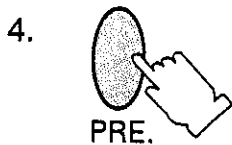

Press the "PRE" button 2 times.

 This returns the set to the normal viewing condition.




Press the "MAIN MENU" button twice.




# Tuning Procedure

 
## How to Cancel the Skip Function.

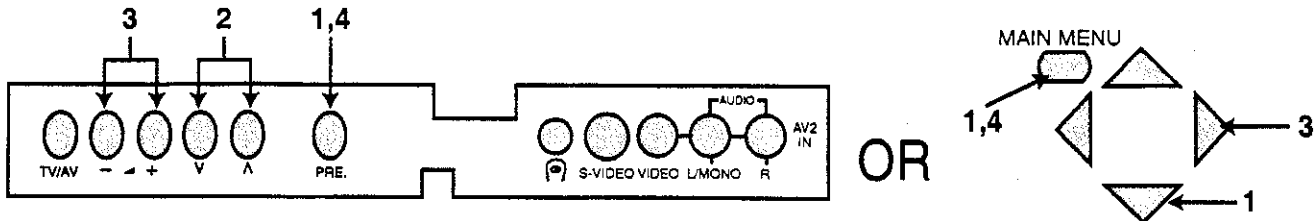

 
1. Press the "PRE." (PRESET) buttons 6 times, setting the Preset Menu to "SKIP".

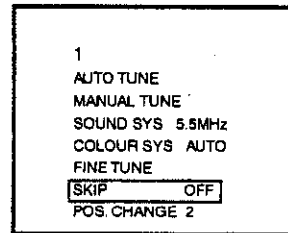



Channel Skip condition.

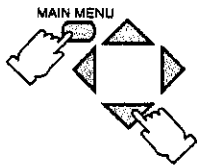 

 
Press the "MAIN MENU" and "Position" buttons, until "SKIP" is selected.

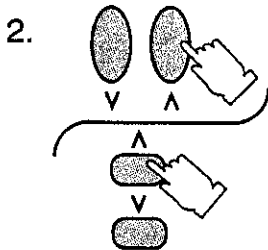

  
2. Select the skipped Programme Number, by pressing the Channel Number Up or Down buttons.

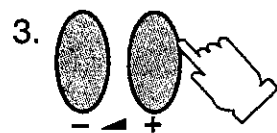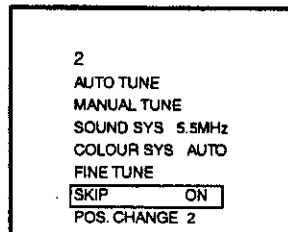

 3. Press the Volume Up "+" or Down "-" button.

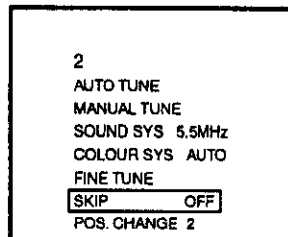

 The displayed "ON" condition changes to "OFF".

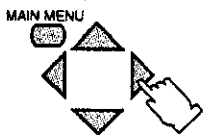


Press the Position Left or Right button.

Repeat step 2 and 3, if you wish to cancel the Skip function on any other programme number.



 4. After the Skip Cancel operation is completed, press the "PRE" button 2 times.

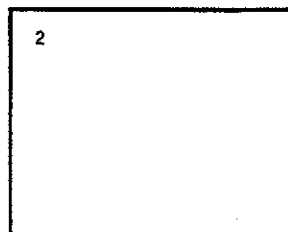

This returns the set to the normal viewing condition.




After the Skip Cancel Operation is completed, press the "MAIN MENU" button twice.

# Tuning Procedure

 
## Colour System Selection

Use this function if a clear picture with weak colour is obtained when a Broadcast or AV signal is received.

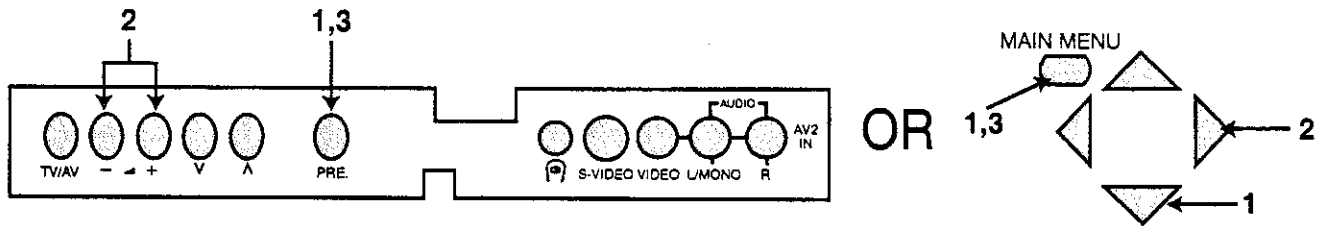


1. Press the "PRE." (PRESET) button 4 times.

 Colour System condition.

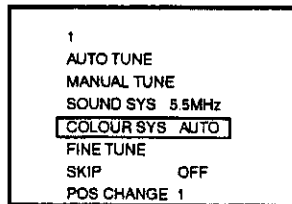


Press the "MAIN MENU" and "Position" buttons, until "COLOUR SYS" is selected.

 2. Press the Volume Up "+" or Down button, "-" repeatedly until the optimum image is produced.

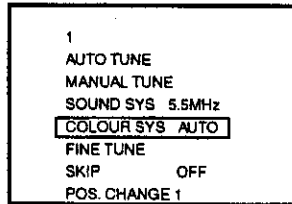

The Colour system will change as shown:

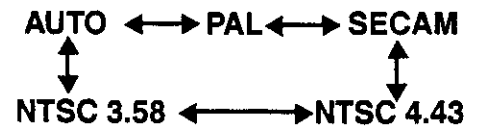 

Press the Position Left or Right button repeatedly until the optimum image is obtained.

3. Press the "PRE" (PRESET) button 4 times.

This returns the set to the normal viewing condition.

This selected Colour System is automatically memorized.


Press the "MAIN MENU" button twice.




# Tuning Procedure

 
## Sound System Selection


This function is used only in the TV mode, and is not applicable in AV mode.  
When the sound is not clear or no sound is produced on a channel.

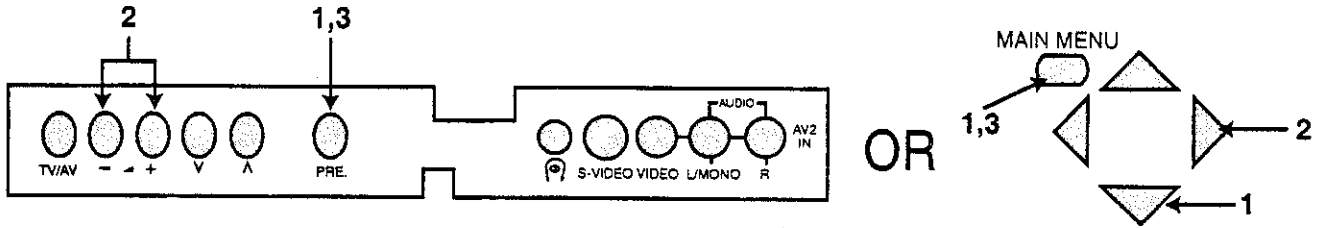


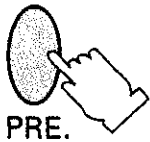
1.  Press the "PRE." (PRESET) button 3 times.

 Sound System condition.

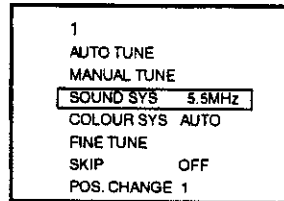


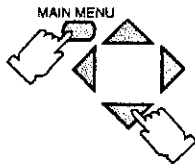
 Press the "MAIN MENU" and "Position" buttons, until "SOUND SYS" is selected.

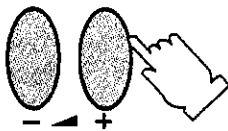 
2.  Press the Volume Up "+" or Down button "-" repeatedly until the optimum sound is obtained.

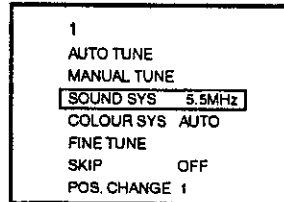

The Sound system will change as shown:

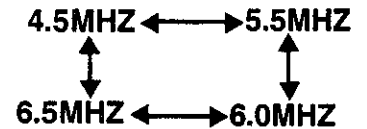 

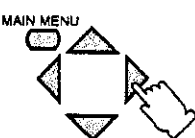
 Press the Position Left or Right button repeatedly until the optimum sound is obtained.

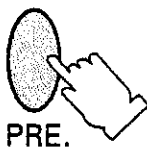3.  Press the "PRE" (PRESET) button 5 times.



This returns the set to the normal viewing condition.

This selected Sound System is automatically memorized.

 Press the "MAIN MENU" button twice.

# Tuning Procedure

 
 
## Pos. Change

The position change function is be able to shift the present channel to any programme number without doing any tuning process.

1.




Press the "PRE." (PRESET) button 7 times.

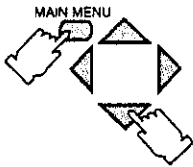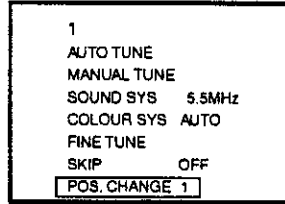


Press the "MAIN MENU" and "Position" buttons, until "POS. CHANGE" is selected.

 2.

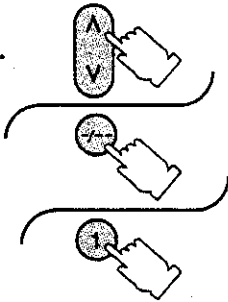

 
Select a Programme number you want to change by pushing either channel UP or DOWN button, two digit programme selection or Direct Programme number selection on the remote control.

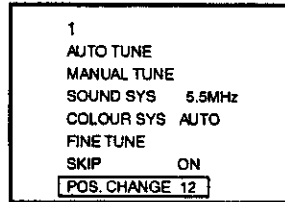


Note:

Position change also can operated using panel key. Use PRESET key to enter POSITION CHANGE, then, use volume up/down to change the channel to be swapped to. Use TV/AV to confirm.

 3.

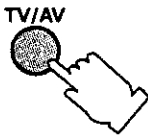

Press the "TV/AV" button to confirm.

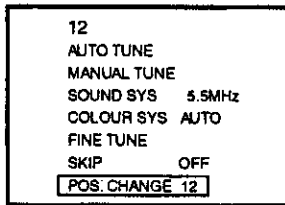 

This returns the set to the normal viewing condition.






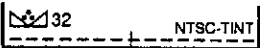








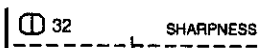




Press the "MAIN MENU" button twice.
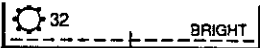
## Advanced Remote Control Transmitter Operation












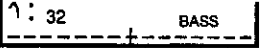

### Picture Menu Operation (Refer to page 6)

#### Picture Menu

Push	Item	Effect	Indicator
 Select	<b>COLOUR</b>	 Less More	
 Select	<b>NTSC-TINT</b>	 Greenish Reddish	
 Select	<b>BRIGHT</b>	 Darker Brighter	
 Select	<b>CONTRAST</b>	 Less More	
 Select	<b>SHARPNESS</b>	 Less More	
 Select	<b>COLOUR TEMP</b>	 STD ↔ WARM	COLOUR TEMP

 
### Sound Menu Operation (Refer to page 6)

#### Sound Menu

Push	Item	Effect	Indicator
 Select	<b>BASS</b>	 Less More	
 Select	<b>TREBLE</b>	 Less More	
 Select	<b>BALANCE</b>	 Left SP. Right SP.	
 Select	<b>BASS BOOST</b>	 ON ↔ OFF	BASS BOOST
 Select	<b>LOUDNESS</b>	 ON ↔ OFF	LOUDNESS


# Advanced Remote Control Transmitter Operation

## FEATURES Menu Operation

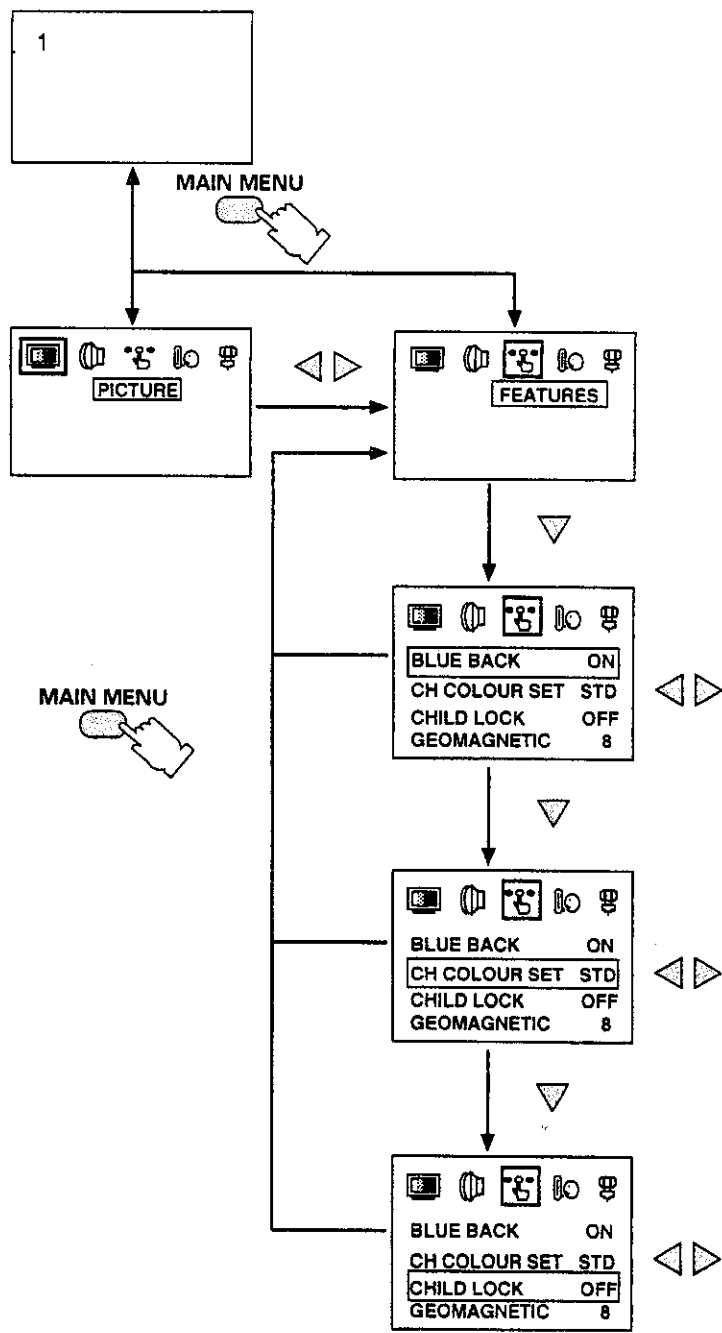

### BLUE BACK Mode.

 When no picture signal is received, or the signal is weak, the screen reverts to a blue background colour and the sound is muted. Disable this features to continue watching very weak signals.

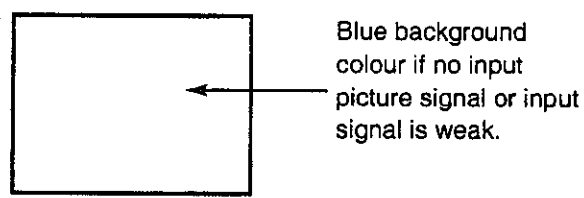


### Note :

If BLUE BACK Mode is set on while a VCR signal is being viewed, selecting CUE or REVIEW may cause the screen to revert to the blue background colour. Disable this feature to view correctly.

### CH (Channel) COLOUR SET mode.

 Colour density varying between broadcast channels can be adjusted to three levels for each reception channel as follows :



### CHILD LOCK mode.

To child lock any channel, press the position left or right button.

- 1) When channel is "LOCK", sound is muted and screen becomes blue colour.
- 2) If any of the channels is CHILD LOCK, then preset key at any panel will not work. If preset key (Panel) is pressed, message "CHILD LOCK ON" will appear.
- 3) Main power ON in child locked channel will display "CHILD LOCK ON" on screen to remind user that the Child lock is On and is in Child locked channel.
- 4) Each channel has its own memory for channels to be child locked.

## Before Operating This Set


### Geomagnetic Correction

Since a large picture tube has been used, blurring of colours and strange discoloration patches may occur depending on the direction the television faces. This is caused by a geomagnetic effect.

For optimum viewing, it is necessary to adjust the TV placement.

1. The Power should be off when determining the installation location and direction.

 At this time please verify what direction the TV screen is to face (direction indicated by the arrow).

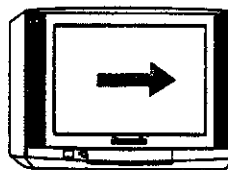


2. Press the "Main Power Switch"



3. Press the "MAIN MENU" button.

 
MAIN MENU

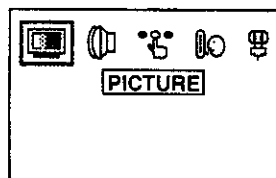

"Main Menu" condition.



4. Select the features Menu by using the Position Left or Right button.

 MAIN MENU

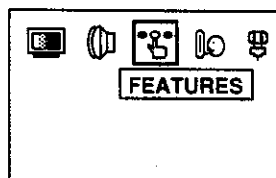




5. Select the Geomagnetic Mode by using the "Position" Left or Right button.

  MAIN MENU

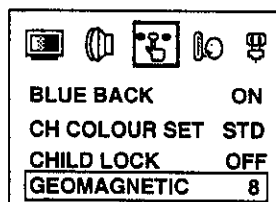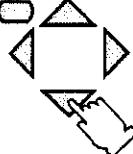

6. Press the Position Left or Right button to adjust the Geomagnetic level so that the colour patches in the four corners of the screen do not appear.

   MAIN MENU

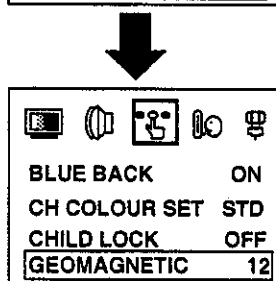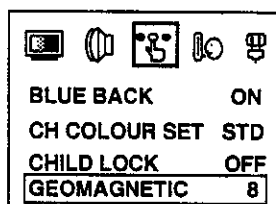

### Helpful Hint

 
- (1) If Geomagnetic changes still cause colour patches on the screen even after the TV is installed, turn the power off and turn back on again after about 30 minutes.
- (2) Adjustment for geomagnetic should be performed every time the location of the TV is changed.
- (3) In some cases colour patches will not be completely eliminated even after adjustment, particularly in ferro-concrete building and other structures susceptible to geomagnetic. In these cases adjust by changing the installation location.

# Advanced Remote Control Transmitter Operation

## Language Menu Operation

### Language Menu


Press the "Position Up or Down" button. The on-screen language display will change as follows :

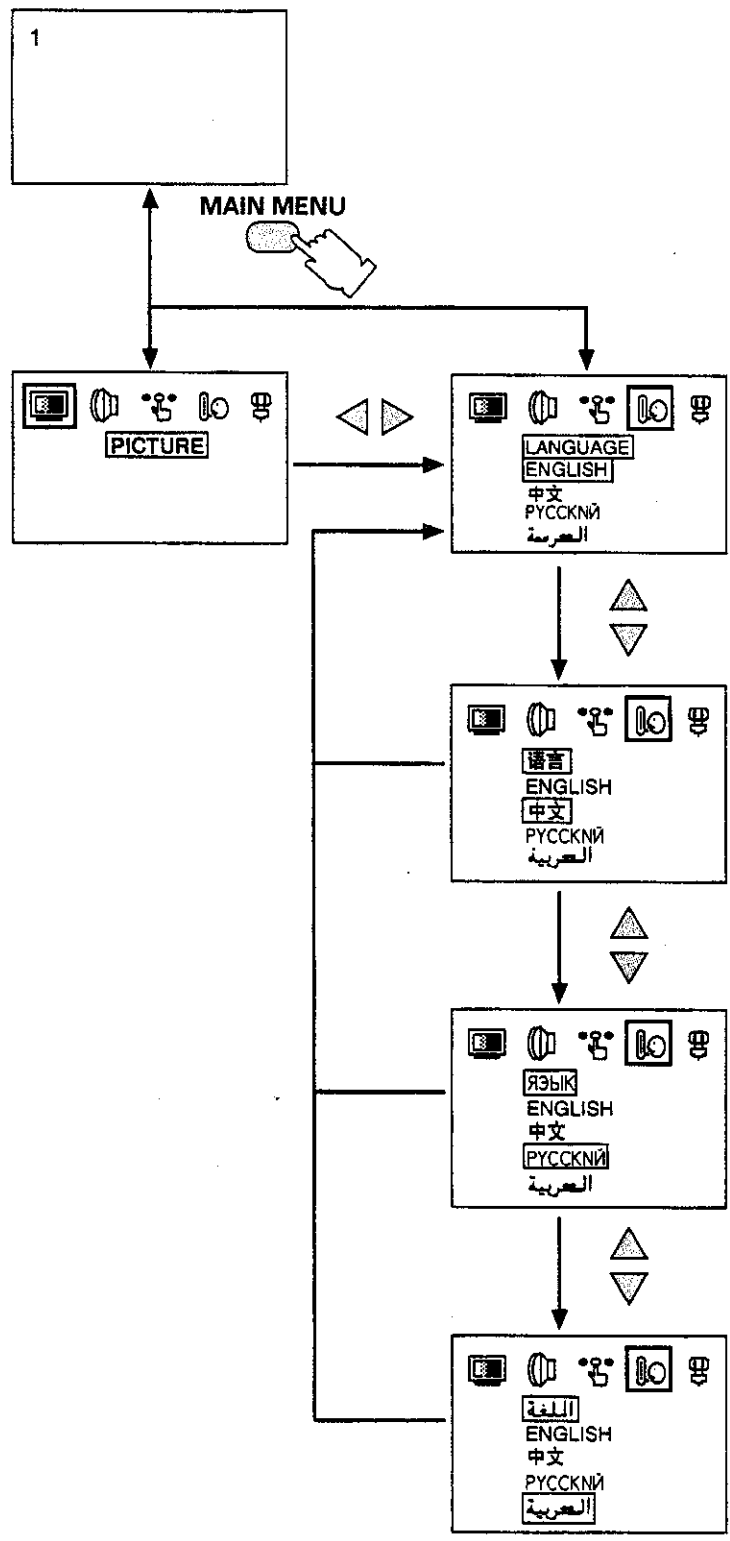



# Advanced Remote Control Transmitter Operation
 
## 1. Stereo Reception





### Stereo / Bilingual Sound Selection Button


Sound output modes can be selected by pressing the "Sound Selection" Button. STEREO, BILINGUAL (if transmitted) and MONO modes can be selected using this button.

	Types of Broadcast	On-screen Indication	Remarks
NICAM Digital Stereo	Regular Broadcast (Standard Audio)		Normal use
	Regular + NICAM MONO I [ MAIN <I> ]		You can select either the "MAIN <I>" or "MONO" audio signal
	NICAM STEREO		You select either the "STEREO" or "MONO" mode.
	NICAM DUAL MONO MAIN <I> / SUB <II>		You can select either the "MAIN <I>", "SUB <II>" or "MONO".
A2 (German) Stereo	Regular Broadcast (Standard Audio)		Normal use
	BILINGUAL or DUAL MONO MAIN <I> / SUB <II>		You can select either the "MAIN <I>" or "SUB <II>" audio signal".
	STEREO		You can select either the "STEREO" or "MONO" mode.

 
# Teletext Operation

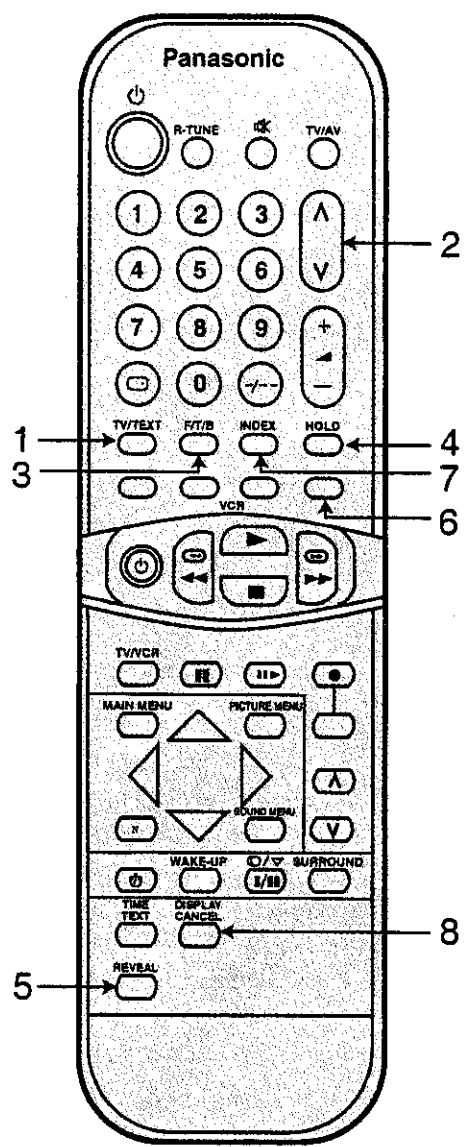

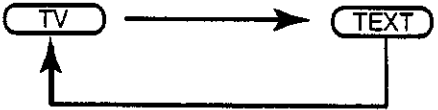   
**1. TV/TEXT**  
**TV/Teletext mode**  
 By pushing the TV/TEXT button, to change the TV/ Teletext mode as follows:  

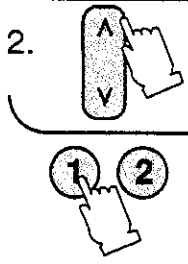


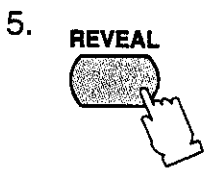 
**2. Page Selection**  
 Page can be selected in two ways:  
 a) Push the Up / Down Buttons to increase or decrease the page number by one.  
 b) By entering the page number, using 0 ~ 9 on the remote control.

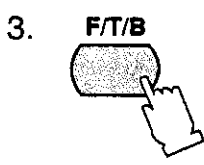


**3. F/T/B**  
**Full/Top/Bottom**  
 Push to expand the Top of the page.  
 Push again to expand the Bottom half.  
 Push again to return to normal (Full) size.

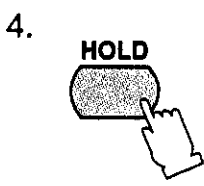


**4. HOLD**  
**Hold**  
 Push to hold the current page.  
 Push again to cancel the hold.



 
**5. REVEAL**  
**Reveal**  
 Push to reveal hidden words.  
 e.g. quiz page answer.  
 Push again to hide.

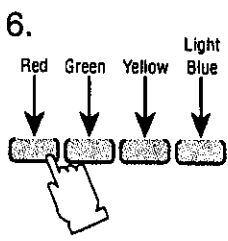

 **6. Colour-coded buttons**  
 In Fastext mode these correspond to the differently coloured subjects.

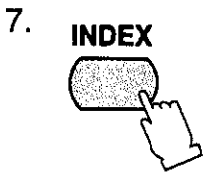

 
**7. INDEX**  
**Index**  
 Push INDEX to return to the main index page.

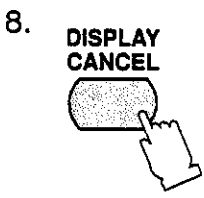

**8. DISPLAY CANCEL**  
**Display Cancel**  
 Push the "DISPLAY CANCEL" button to view the normal TV programme.  
 When the desired sub-page is received, the "TEXT" message appears at the top left of the screen.


# Teletext Operation

 9.

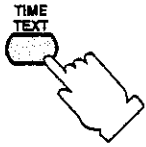

## TIME TEXT

 The Required Teletext page must be selected. When the "TIME TEXT" button is pressed, the on-screen will be changed as follows :

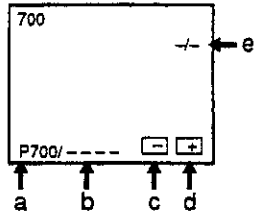


- a - Selected Page Number
- b - Selected Sub - page Number
- c - Sub - page Number Down
- d - Sub - page Number Up
- e - Sub - page Number


If the selected page number contain sub-page number, the required sub - page number can be select by :

1. Press the Sub - page number Up (green colour button)
2. Press the Sub - page Number Down (red colour button)
3. Press ther Direct Programme Number Buttons, or
4. Programme Number Up or Down Buttons

 e.g. To change sub - page 2 to sub - page 3 by pressing the Direct Programme Number buttons.



  
e.g. To change sub - page 2 to sub - page 1 by pressing the Sub - page Number Down Button (Red button).

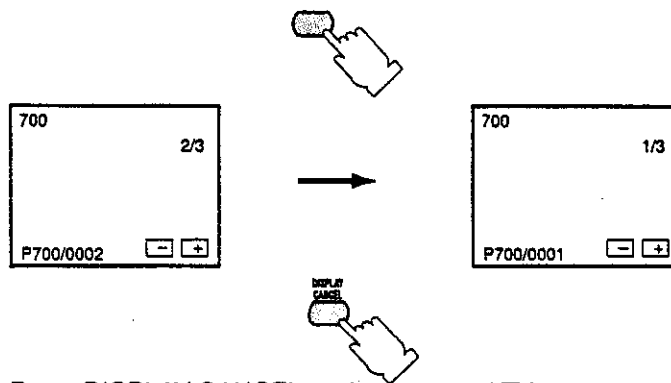







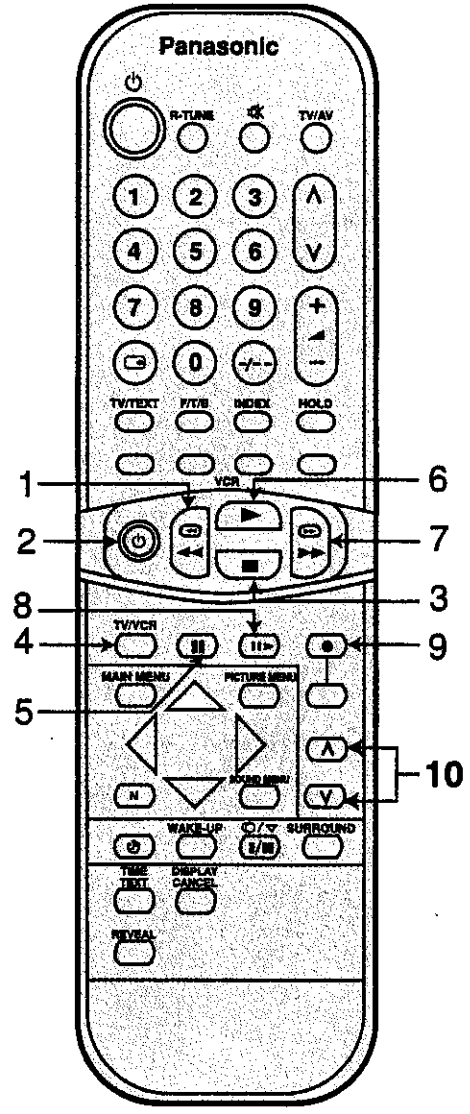



Press DISPLAY CANCEL to view a normal TV programme.

# Operation of VCR





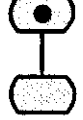







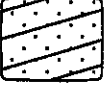


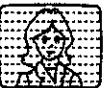


Your remote control is designed to be used with selected Panasonic/National VCRS. Some VCR model have different functions, so please refer to the individual VCR instruction manual to ensure compatibility.



- 1.  Rew (Rewind)/Review Button
- 2.  VCR Power Button
- 3.  Stop Button
- 4.  TV/VCR Selection Button
- 5.  Pause / Still Button
- 6.  Play Button
- 7.  FF (Fast forward) Cue Button
- 8.  Still advance Button
- 9.  Rec (Record) Button
- 10.  Channel Up and Down Button for VCR

# Troubleshooting

Before calling for service, determine the symptoms and make a few simple checks as shown below.

Symptoms		Checks
Picture	Sound	
 Snowy Picture	 Noisy Sound	Aerial Location, direction Connection
 Multiple Image	 Normal Sound	Aerial Location, direction Connection
 Interference	 Noisy Sound	Electrical Appliances Cars / Motorcycles Fluorescent Lamps
 Normal Picture	 No Sound	Volume (Check whether the mute function has been activated on the Remote Control.)
 No Picture	 No Sound	Not plugged into AC outlet Not switched on Contrast and Brightness / Volume Setting (Check by pushing the Power Switch or Stand-by Button on the Remote Control.)
 No Colour	 Normal Sound	Colour Control
 Scrambled	 Weak Sound	Re-tune Channels
 Colour Patches	 Normal Sound	Magnetic interference from unshielded equipment. Receiver moved while "ON"
 No Colour Rolling Picture H-Line	 Noisy Sound	System Button

## Specifications

Power Source : AC AUTO 110/240V, 50/60Hz (TX-33S200X) and AC SINGLE 230V, 50Hz (TX-33S200Z)

Power Consumption : 210 W

Receiving System : 17 SYSTEMS

	SYSTEMS	FUNCTION
1. 2. 3. 4. 5. 6. 7.	PAL B,G,H PAL I PAL D,K SECAM B,G SECAM D. K. SECAM K1 NTSC M (NTSC 3.58 / 4.5MHZ)	Reception of broadcast transmissions and playback from video cassette tape recorders.
8. 9. 10. 11. 12. 13. 14.	NTSC 4.43 / 5.5MHz NTSC 4.43 / 6.0MHz NTSC 4.43 / 6.5MHz NTSC 3.58 / 5.5MHz NTSC 3.58 / 6.0MHz NTSC 3.58 / 6.5MHz SECAM I	Playback from special VCR only.
15. 16. 17.	PAL 60Hz / 5.5MHz PAL 60Hz / 6.0MHz PAL 60Hz / 6.5MHz	Playback from special Disc player and VCR only.

Receiving Channels :

VHF BAND		UHF BAND	CATV	
2 - 12	PAL / SECAM B,K1	21 - 69	S1 - S20 (OSCAR) S21 - S41 (HYPER) 1 - 125 (USA) C13 - C49 (JAPAN) 5A, 9A (AUS) Z1 - Z37 (CHINA)	
0 - 12	PAL B (AUS)	28 - 69		PAL G,H,I / SECAM G,K,K1
1 - 9	PAL B (N.Z)	13 - 57		PAL B (AUSTRALIA)
1 - 12	PAL / SECAM D	13 - 62		PAL D,K
1 - 12	NTSC M (JAPAN)	14 - 69		NTSC M (JAPAN)
2 - 13	NTSC M (U.S.A)			NTSC M (U.S.A)

Tuning System Voltage synthesizer Auto search tuning 100 position.

Picture Tube : 80 cm, measured diagonally, 110° deflection

Audio Output : 7.5W X 2 (Speaker)

15W (Woofer)

Aerial Impedance : 75Ω Unbalanced coaxial

Video/audio terminal :

AV1	S-Video in	Y: 1.0 Vp-p, 75Ω	AV2	Video in	1 Vp-p, 75Ω	AV3	Video in	1.0 Vp-p, 75Ω	
		C: 0.3 Vp-p, 75Ω		Audio in	Approx: 400mV		Audio in	Approx: 400mV	
	Video in	1 Vp-p, 75Ω		Monitor out	Video out		1 Vp-p, 75Ω		
	Audio in	Approx: 400mV			Audio out		Approx: 400mV		

Remote Control Transmitter : EUR 51979

Battery : R6 (AA) X 2

Dimension (W X D X H) : 896 x 535 x 670.25 mm

Weight (Net) : 57 Kg

### Note :

Design and Specifications are subject to change without notice.

**Matsushita Electric Industrial Co., Ltd**

Central P.O. Box 288, Osaka 530-91, Japan