


Panasonic[®]

Operating Instructions LCD TV

Model No. TX-37LZ800A

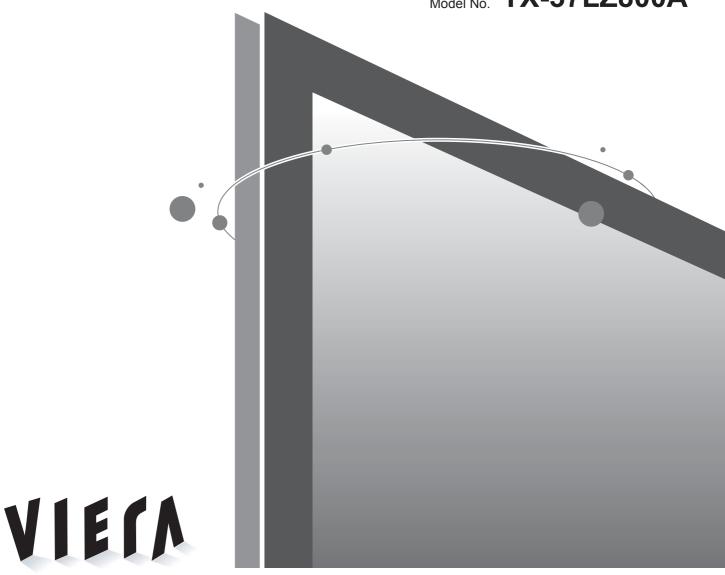










Please read these instructions before operating your set and retain them for future reference. The images shown in this manual are for illustrative purposes only.


English

Turn your own living room into a movie theatre!

Experience an amazing level of multi-

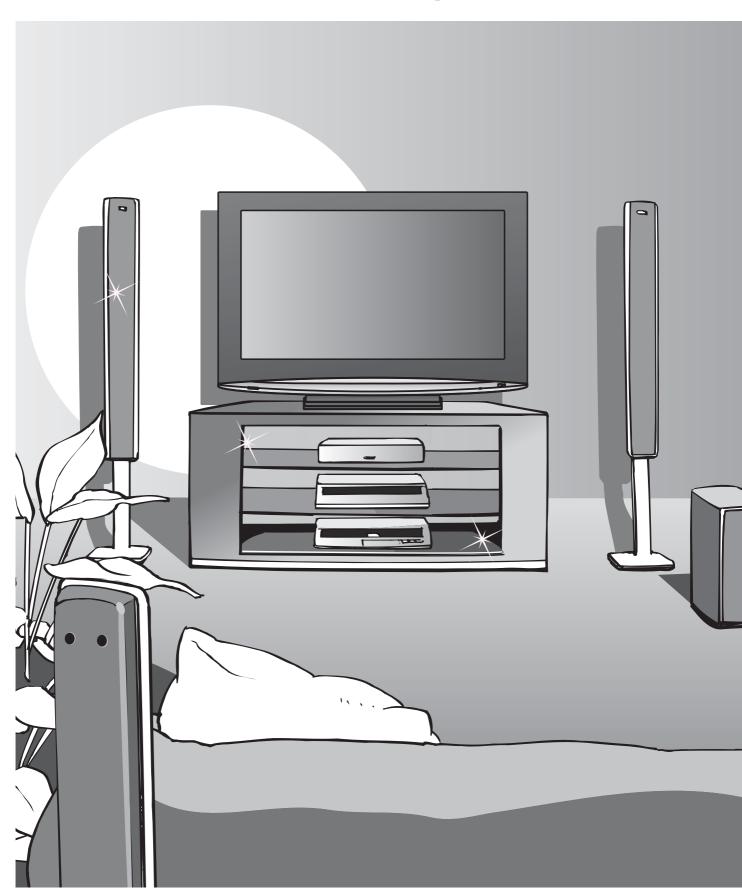

media excitement

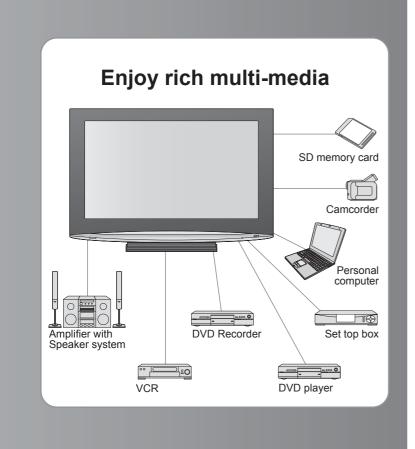



Contents

Be Sure to Read Safety Precautions (Warning / Caution) Notes Maintenance	5
Quick Start Guide Accessories / Options Identifying Controls Basic Connection Auto Tuning Language Setting	······· 7 ······ 8 ····· 9
Enjoy your TV! Basic Features Watching TV Watching Videos and DVDs Viewing Teletext	14
Advanced Features How to Use Menu Functions (picture, sound quality, etc.) Editing Programmes Tuning Programmes Control Programme Audience Restore Settings Input Labels Displaying PC Screen on TV Viewing from SD Card (Photos) VIERA Link "HDAVI Control™"	
External Equipment	36

■ Technical Information · · · · · 38 ● FAQs ------43 ● Licence -------45 ● WARRANTY ------45 Specifications ------46


FAQs, etc.

Safety Precautions

Warning

Handling the mains plug and lead

- Insert the mains plug fully into the socket outlet. (If the mains plug is loose, it could generate heat and cause fire.)
- Ensure that the mains plug is easily accessible.
- Do not touch the mains plug with a wet hand. (This may cause electrical shock.)
- Do not damage the mains lead. (A damaged lead may cause fire or electrical shock.)
 - •Do not move the TV with the lead plugged in the socket outlet.
 - •Do not place a heavy object on the lead or place the lead near a high-temperature object.
 - •Do not twist the lead, bend it excessively, or stretch it.
 - •Do not pull on the lead. Hold onto the mains plug body when disconnecting lead.
 - •Do not use a damaged mains plug or socket outlet.

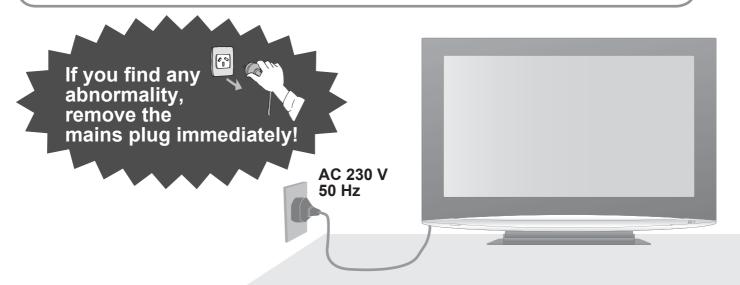

Power source

 This TV is designed to operate on 230 V, 50 Hz AC.

Do not remove covers NEVER modify the TV yourself

(High-voltage components may cause serious electrical shock.)

• Have the TV checked, adjusted, or repaired at your local Panasonic dealer.

Keep liquids away from the TV

- To prevent damage which may result in fire or shock hazard, do not expose this appliance to dripping or splashing.
- Do not place containers with water (flower vase, cups, cosmetics, etc.) above the TV. (including on shelves above, etc.)

Do not expose to direct sunlight and other sources of heat

 Avoid exposing the TV to direct sunlight and other sources of heat. To prevent fire never place any type of candle or naked flame on top or near the TV.

Do not place foreign objects inside the TV

 Do not let metal or flammable objects drop into the TV through the air vents (fire or electrical shock may result).

Do not place the TV on sloped or unstable surfaces

The TV may fall off or tip over.

Use only the dedicated stands / mounting equipment

- Using an unauthorized stand or other fixtures may make the TV shaky, risking injury. Be sure to ask your local Panasonic dealer to perform setup.
- Use optional stands / mounts (p. 6).

Do not allow children to handle SD card

As with a small object, SD card can be swallowed by young children. Please remove SD card immediately after use.

Notes

Caution

■When cleaning the TV, remove the mains plug


(Cleaning an energized TV may cause electrical shock.)


■When TV will not be used for a long time, remove the mains plug

This TV will still consume some power even in the Off mode, as long as the mains plug is still connected to a live socket outlet.

■Allow sufficient space around the TV for radiated heat

Minimum distance

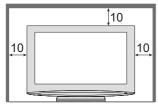

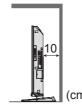

- When using the pedestal, keep the space between the bottom of the TV and the floor surface.
- In case of using Wall-hanging bracket, follow the manual of it.

Do not block the rear air vents

- Blocked ventilation by curtains, etc. may cause overheating, fire or electrical shock.
- ■Do not expose your ears to excessive volume from the headphones
 - Irreversible damage can be caused.

Auto power standby function

• If no signal is received and no operation is performed in TV mode for 30 minutes, the TV will automatically go to standby mode.


■ Keep the TV away from these equipment

- Electronic equipment
 - In particular, do not place video equipment near the TV (electromagnetic interference may distort images / sound).
- Equipment with an infrared sensor
 This TV also emits infrared rays (this may affect operation of other equipment).

■ Transport only in upright position

■ Adjust the LCD panel to your desired angle

- Ensure that the pedestal does not hang over the edge of the base even if the TV swivels to the full rotation range.
- Do not place any objects or hands within the full rotation range.

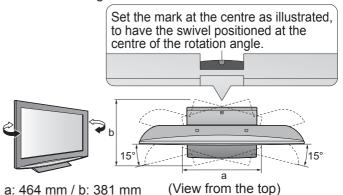

Maintenance

First, remove the mains plug from the socket outlet.

Display panel

Regular care: Gently wipe the surface clean of dirt by using a soft cloth.

Major contamination: Wipe the surface clean using a soft cloth dampened with clean water or diluted neutral detergent by 100 times of water. Then, using a soft dry cloth, evenly wipe the surface clean until it is dry.

Caution

- The surface of the display panel has been specially treated and may be easily damaged. Do not tap or scratch the surface with your fingernail or other hard object.
- Use care not to subject the surface to bug repellent, solvent, thinner, or other volatile substances (this may degrade surface quality).

Cabinet

Regular care: Wipe the surface clean using a soft dry cloth.

Major contamination: Dampen a soft cloth with clean water or water containing a small amount of neutral detergent. Then, wring the cloth and wipe the surface clean with it. Finally, wipe the surface clean with a dry cloth.

Caution

- Use care not to subject the TV's surfaces to detergent.
 (A liquid inside the TV could lead to product failure.)
- Use care not to subject surfaces to bug repellent, solvent, thinner, or other volatile substances (this may deteriorate the surface by peeling the paint).
- Do not allow the cabinet to make contact with a rubber or PVC substance for a long time.

Mains plug


Accessories / Options

Standard accessories

☐ Remote Control
Transmitter
■ N2QAYB000120



Check that you have the accessories and items shown

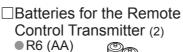





☐ Cleaning cloth



☐ Operating Instructions

Installing remote's batteries

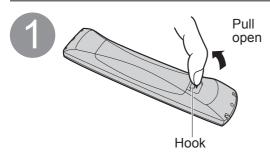

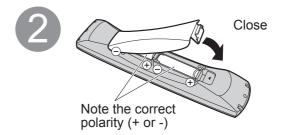

Caution

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
- Do not mix old and new batteries.
- Do not mix different battery types (such as alkaline and manganese batteries).
- Do not use rechargeable (Ni-Cd) batteries.
- Do not burn or breakup batteries.
 Batteries must not be exposed to excessive

Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

Optional accessories

Wall-hanging bracket

●TY-WK32LR2W




Please contact your nearest Panasonic dealer to purchase the recommended wall-hanging bracket. For additional details, please refer to the wall-hanging bracket installation manual.

WARNING!

- Failure to use a Panasonic bracket or choosing to mount the unit yourself will be done at the risk of the consumer.
 - Any damage resulting from not having a professional installer mount your unit will void your warranty.
- Always be sure to ask a qualified technician to carry out set-up. Incorrect fitting may cause equipment to fall, resulting in injury and product damage.
- Do not mount the unit directly below ceiling lights (such as spotlights, floodlights or halogen lights) which typically give off high heat. Doing so may warp or damage plastic cabinet parts.


■ How to remove the TV Stand

Remove four screws

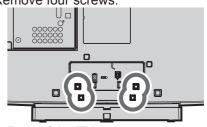

Rear of the TV

Identifying Controls

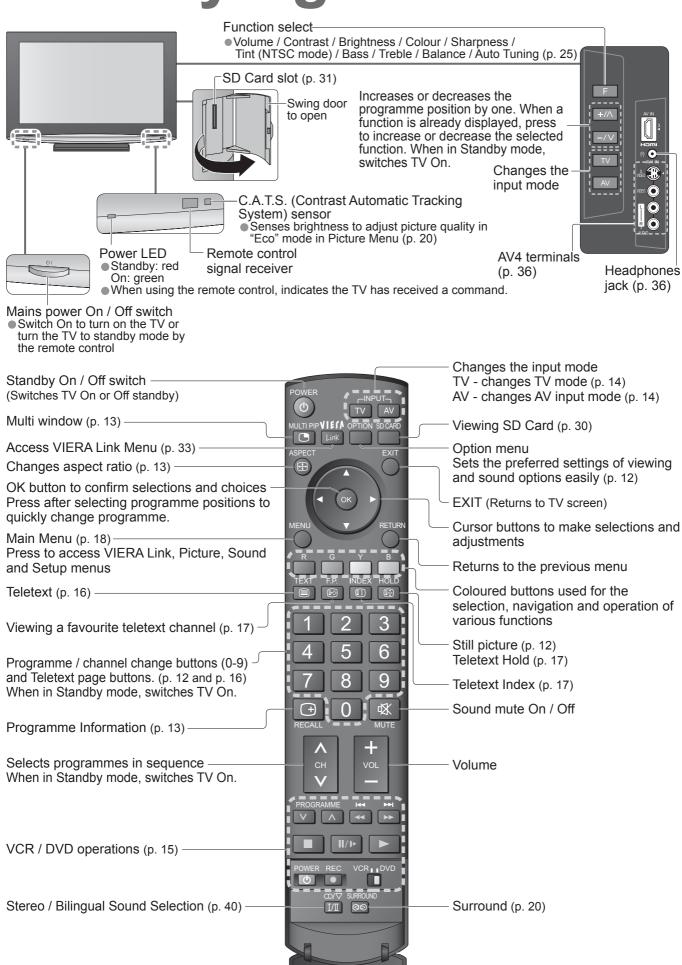

Basic Connection


External equipment and cables shown are not supplied with this TV.

Please ensure that the unit is disconnected from the mains socket before attaching or disconnecting any leads.


Example 1 Connecting aerial

Example 2 Connecting DVD Recorder / VCR

TV only

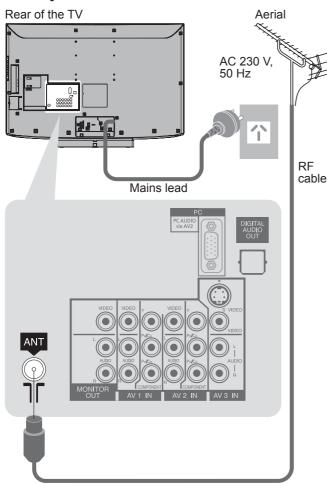

TV, DVD Recorder or VCR

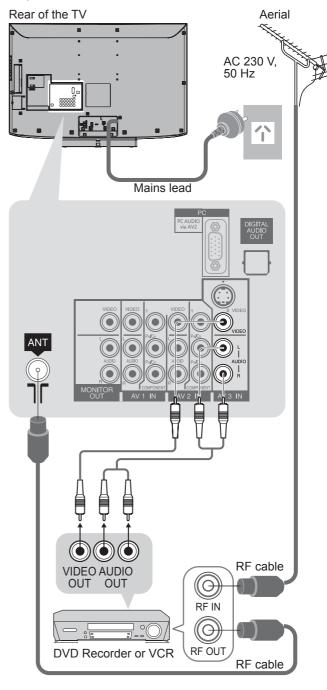


Note

- Do not put the Coaxial cable close to the mains lead to avoid noise.
- Do not place the Coaxial cable under the TV.
- lacktriangle To obtain optimum quality picture and sound, an Aerial, the correct cable (75 Ω coaxial) and the correct terminating plug are required.
- If a communal Aerial system is used, you may require the correct connection cable and plug between the wall Aerial socket and the TV.
- Your local Television Service Centre or dealer may be able to assist you in obtaining the correct Aerial system for your particular area and the accessories required.
- Any matters regarding Aerial installation, upgrading of existing systems or accessories required, and the costs incurred, are the responsibility of you, the Customer.

Auto Tuning

Search and store TV channels automatically.

These steps are not necessary if the setup has been completed by your local dealer.

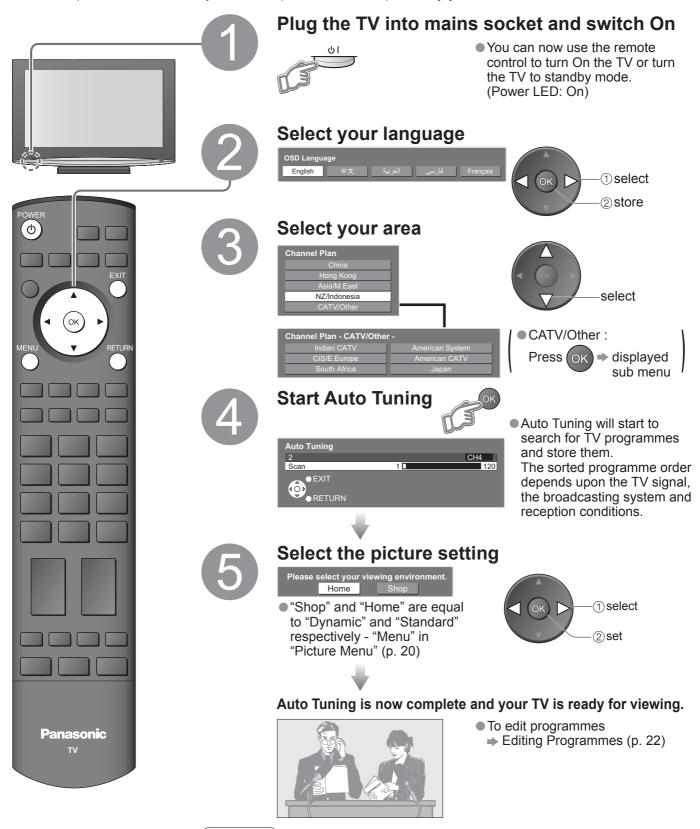


Note

- If tuning have failed ⇒ "Auto Tuning" (p. 25).
- To initialize all settings ⇒ "Shipping Condition" (p. 27)
- If you turned the TV Off during Standby mode last time, the TV will be in Standby mode when you turn the TV On with Mains power On / Off switch.

Language Setting

You can change language for on-screen displays.

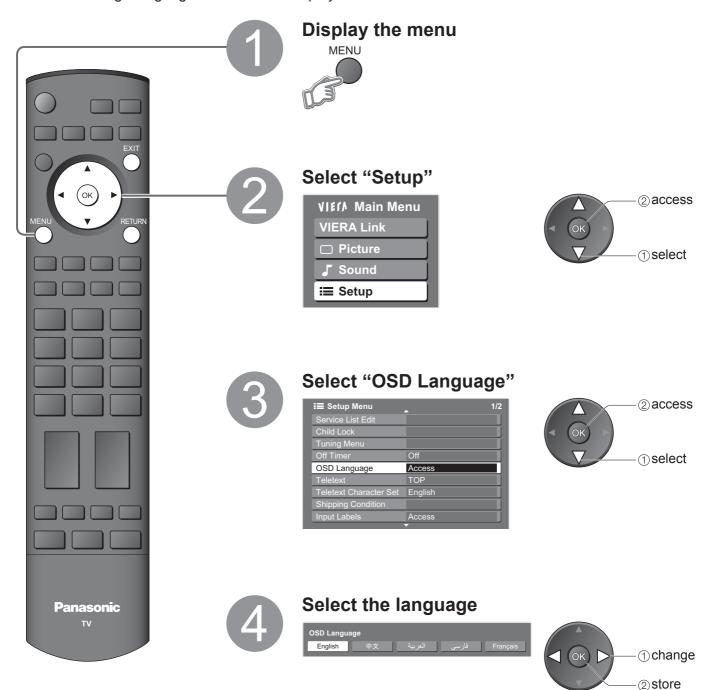

Many features available on this TV can be accessed via the On Screen Display

■ How to use remote control



Open the main menu



Move the cursor / select the menu



Move the cursor / adjust levels / select from a range of options



Access the menu / store settings after adjustments have been made or options have been set

Using the On Screen Displays



Return to the previous menu






Exit the menu system and return to the normal viewing screen


■ ON SCREEN HELP Instructions box

(example: Sound Menu)

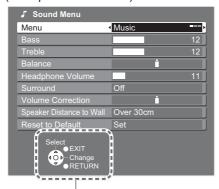



On-screen operation guide will help you.

Watching TV

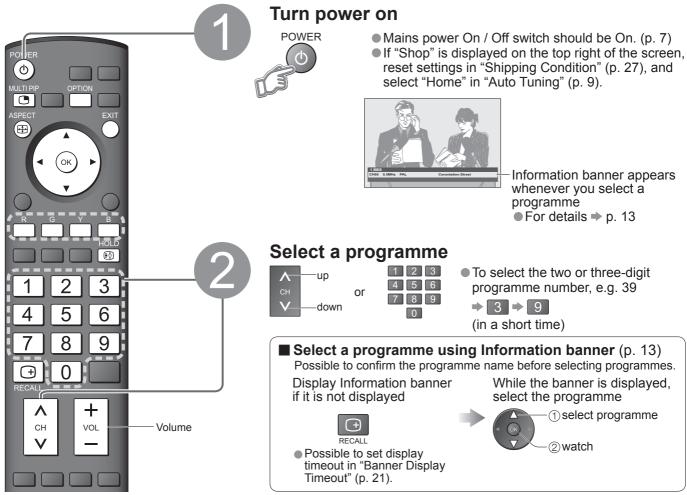

■ Other useful functions

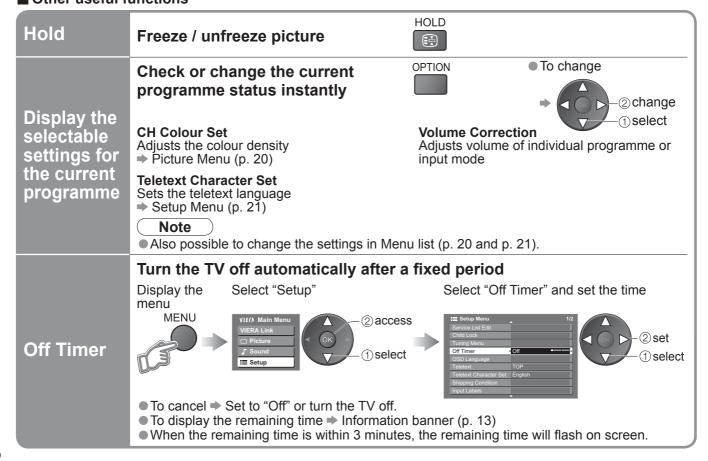

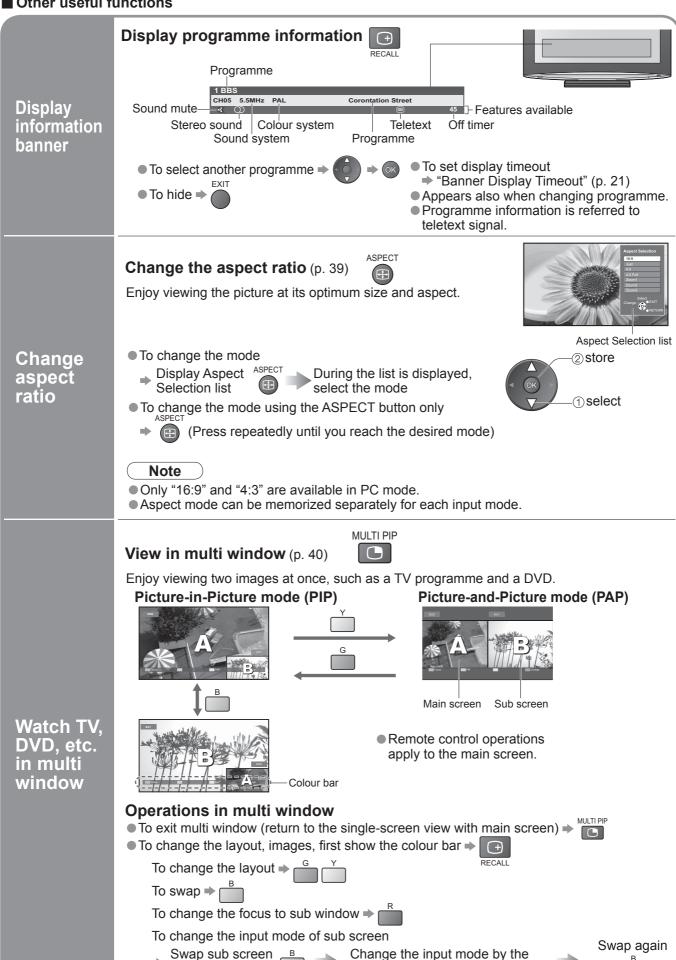


remote control (p. 14)

for main screen

Watching Videos and DVDs

Connect the external equipment (VCRs, DVD equipment, etc.) and you can watch the input. To connect the equipment (p. 8)

The Remote Control is capable of operating some functions of selected Panasonic external equipment.

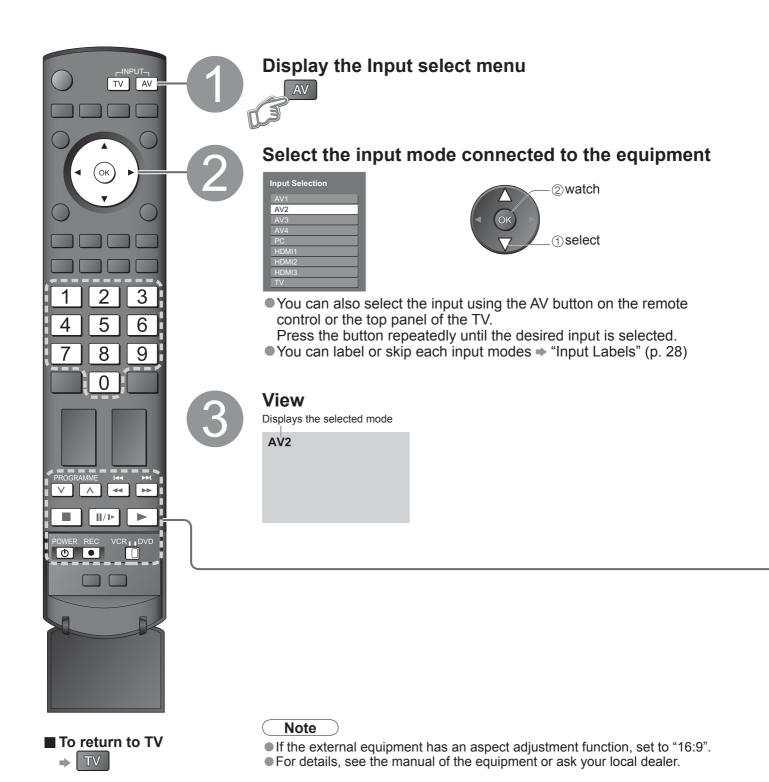

Panasonic equipment connected to the TV can be directly operated with the remote control.

	<u> </u>
VCR ₁₁ DVD	VCR / DVD switch* Select VCR to operate Panasonic VCR or DVD equipment Select DVD to operate Panasonic DVD equipment or Player home theatre
POWER	Standby Set to Standby mode / Turn on
	Play Playback videocassette / DVD
	Stop Stop the operations
 -	Rewind / Skip / Search VCR: Rewind, view the picture rapidly in reverse DVD: Skip to the previous track or title Press and hold to search backward
▶ ►	Fast-forward / Skip / Search VCR: Fast-forward, view the picture rapidly forward DVD: Skip to the next track or title Press and hold to search forward
II/I>	Pause Pause / Restart DVD: Press and hold to play at slow speed
PROGRAMME	Programme Up / Down Select programme
REC	Record Start recording

*Setting your remote control to operate Panasonic VCR, DVD, etc.

- VCR DVD ① Set the VCR / DVD switch to the appropriate position ⇒
- ② Press and hold ouring the following operations Enter the appropriate code for the equipment

to be controlled, see table below

2010110		
1 2 3		
4 5 6	→ Press	г
7 8 9	,	
0		

"VCR" position

p	
Equipment	Code
VCR	10 (default)
DVD	11

"DVD" position

Equipment	Code
DVD	70 (default)
Player home theatre	71

Note

- Confirm if the remote control works correctly after changing the code.
- The codes will be reset to default values if batteries are replaced.
- "DVD" means DVD player, DVD recorders and Recorder home theatre.
- Some operations may not be possible on some equipment models.

Viewing Teletext

You can enjoy teletext broadcasting, including news, weather forecasts and subtitles, if this service is provided by the broadcasters.

What is FASTEXT mode?

In FASTEXT mode, four differently coloured subjects are situated at the bottom of the screen. To access more information about one of these subjects, press the appropriately coloured button. This facility enables fast access to information on the subjects shown.

What is TOP mode? (in case of TOP text broadcasting)

TOP is a particular improvement of the standard teletext service that results in an easier search and effective guide.

- Fast overview of the teletext information available
- Easy to use step-by-step selection of the topical subject
- Page status information at the bottom of the screen

Available page up / down ⇒

R
G
G


To select among subject blocks ⇒ □

To select next subject within the subject block (After the last subject, it moves to the next subject block.)


What is List mode?


In List mode, four differently coloured page numbers are situated at the bottom of the screen. Each of these numbers can be altered and stored in the TV's memory. ("Store frequently viewed pages", p. 17)

■ To change mode → "Teletext" in Setup Menu (p. 21)

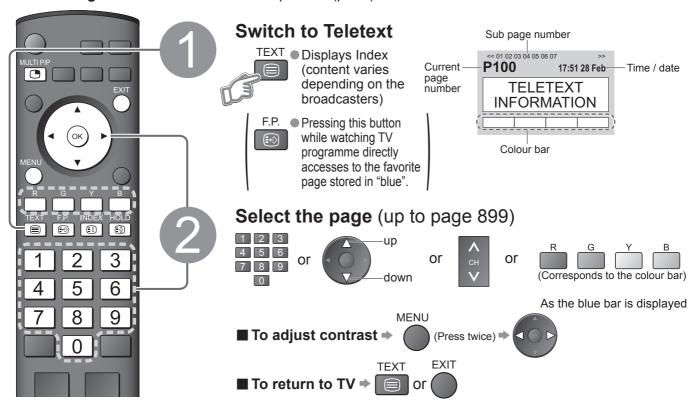


■ Using teletext conveniently

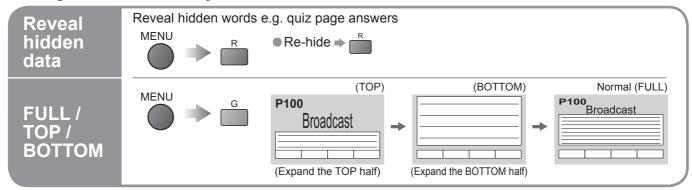

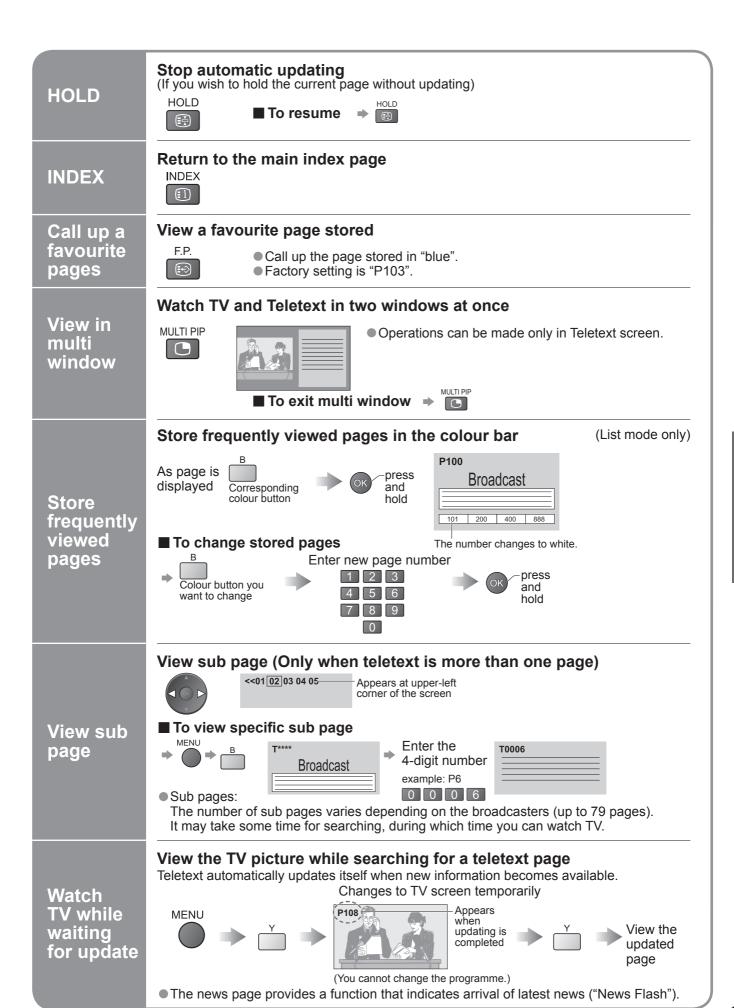


How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions.

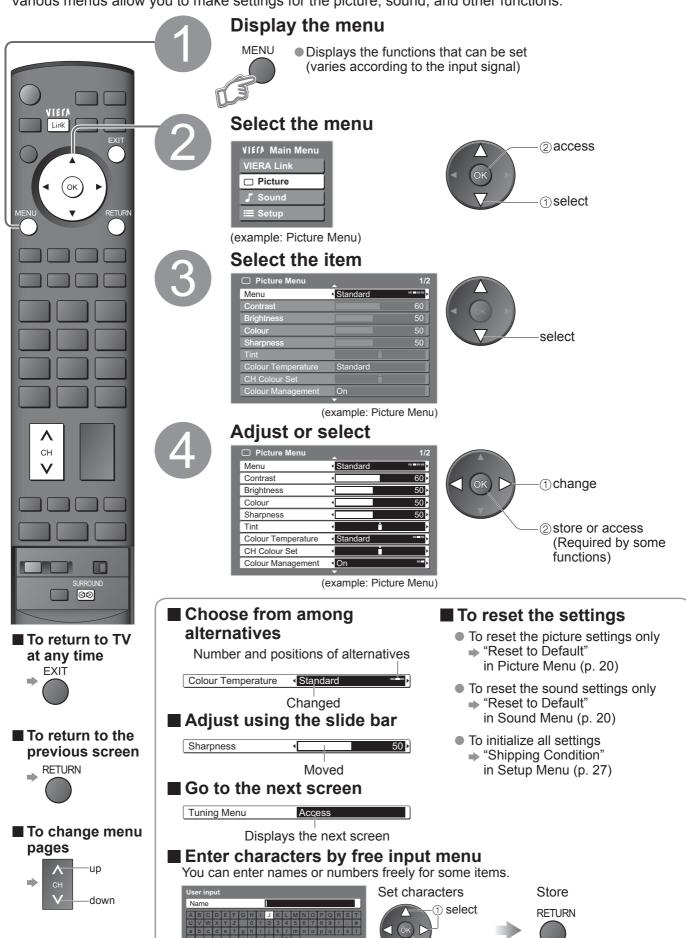

Overview

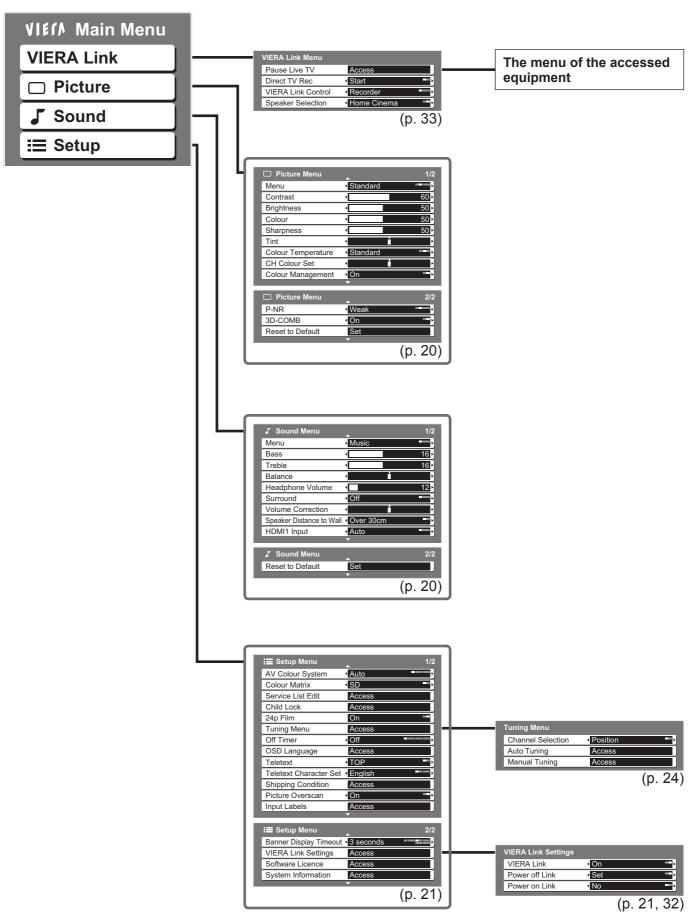

Depending on the received signals, available items are varied.

How to Use Menu Functions

■ Menu list

Menu	Item	Adjustments / Configurations (alternatives)	
	Pause Live TV	rajustino resimigarations (alternatives)	
VIERA Link	Direct TV Rec VIERA Link Control Speaker Selection	Controls the connected equipment with VIERA Link function, and enables various convenient recording, playback, etc. (p. 33 - 35) • You can also access VIERA Link Menu directly using the VIERA Link button on the remote control.	
	Menu	Basic picture mode (Dynamic / Standard / Cinema / Eco) Dynamic: Provides enhanced picture contrast and sharpness when viewing in a bright room Standard: Recommended for viewing under normal ambient room lighting conditions Cinema: For watching movies in a darkened room producing a cinema-like picture Eco: Adjusts picture settings automatically dependent on ambient lighting conditions Set for each input signal	
	Contrast, Brightness, Colour, Sharpness	Increases or decreases the levels of these options according to your personal preference	
	Tint	With an NTSC signal source connected to the TV, the picture hue can be adjusted to suit your taste For NTSC or Component / HDMI input signal reception only	
P	Colour Temperature	Allows you to set the overall colour tone of the picture (Cool / Standard / Warm)	
Picture	CH Colour Set	Colour density varying between broadcast programmes can be adjusted to three levels for each reception programme Select the programme you want to adjust and set this function	
	Colour Management	Automatically adjusts colours to vivid ones (Off / On) Not valid on PC signal	
	P-NR	Picture Noise Reduction Automatically reduces unwanted picture noise and flicker noise in the contoured parts of a picture (Off / Weak / Mid / Strong) Not valid on PC signal	
	3D-COMB	Occasionally, whilst viewing still or slow moving pictures, colour patterning may be see Set to "On" to display sharper and more accurate colours (Off / On) For PAL or NTSC signal reception only Not valid on S-Video, Component, PC, HDMI and SD Card	
	Reset to Default	Press the OK button to reset Picture Menu on all inputs to default settings.	
	Menu	Basic sound mode (Music / News / Cinema) Set for each input signal	
	Bass	Increases or decreases level to enhance or minimise lower, deeper sound output	
	Treble	Increases or decreases level to enhance or minimise sharper, higher sound output	
	Balance	Adjusts volume level of right and left speakers	
	Headphone Volume	Adjusts the volume of the headphones	
Sound	Surround	Surround sound settings (Off / Simulated Surround / SRS TruSurround XT) Simulated Surround: Provides a dynamic enhancer to simulate improved spatial effects SRS TruSurround XT: SRS TruSurround XT [®] creates a high quality surround sound effect using just two speakers from the source which can output surround encoded signals Switching is also possible by the Surround button on the remote control (p. 7)	
p	Volume Correction	Adjusts volume of individual programme or input mode	
	Speaker Distance to Wall	Adjusts the low frequency sound (Over 30cm / Up to 30cm) If the back space between the TV and wall is over 30 cm, "Over 30cm" is recommended. If the back space between the TV and wall is within 30 cm, "Up to 30cm" is recommended.	
	HDMI1 / 3 Input	Select to fit the input signal (Auto / Digital / Analogue) (p. 41) Auto: Automatic detection of digital or analogue sound source Digital: HDMI cable connection Analogue: HDMI-DVI adapter cable connection HDMI input mode only HDMI2 terminal is for digital signal only No setting for HDMI2 available	
	Reset to Default	Press the OK button to reset the present Sound Menu to the default settings	


■ Menu list

Menu	lenu Item		Adjustments / Configurations (alternatives)		
	AV Colour System		Selects optional colour system based on video signals in AV mode (Auto / PAL / SECAM / NTSC4.43 / NTSC3.58)		
	Colour Matrix		Available only with 480p or 576p input signals in a natural colour from digital equipment connected to AV1 / AV2 Component or HDMI1 / HDMI2 / HDMI3 terminals Select SD or HD to adjust suitable colour parameters for SD (standard definition) or HD (high definition) SD: Input signal is a normal TV system HD: Input signal is a High-Definition system		
	Service List Edit		Skips the unwanted programmes or edits programmes (p. 23)		
	Ch	ild Lock	Locks a programme / AV input to prevent access to it (p. 26)		
	24p	o Film	Displays moving pictures smoothly when receiving 24p signals (Off / On)		
	Tuni	Channel Selection	Selects the most easily viewed programme selection method (Position / Direct) (p. 25)		
	Tuning Menu	Auto Tuning	Automatically sets the programmes received in the area (p. 25)		
	lenu	Manual Tuning	Sets the programmes manually (p. 25)		
	Off Timer		Sets the time the TV automatically turns Off (Off / 15 / 30 / 45 / 60 / 75 / 90 minutes)		
	OSD Language		Changes language for on-screen displays		
S	Tel	etext	Teletext display mode (TOP (FASTEXT) / List) (p. 16)		
Setup	Teletext Character Set		Select teletext language (English / CIS / E.Europe / Persian)		
ס	Shipping Condition		Resets all settings, for example, when moving house (p. 27)		
	Picture Overscan		Selects the screen area displaying the image (Off / On) On: Enlarged the image to hide the edge of the image. Off: Displayed the image in the original size. Set to "On" if noise is generated on the edge of the screen. This function is available when aspect is set to 16:9. This function can be memorized separately for SD (Standard definition) and HD (High definition) signals.		
	Input Labels		Labels or skips each input terminals (p. 28)		
	Banner Display Timeout		Sets how long the information banner (p. 13) stays on screen O (No display) to 10 sec. in 1-sec. increments		
	VIERA	VIERA Link	Sets to use VIERA Link functions (Off / On) (p. 32)		
	Link	Power off Link	Sets to use Power off Link function (No / Set) (p. 32)		
	Power on Link		Sets to use Power on Link function (No / Set) (p. 32)		
	Software Licence		Displays the software licence information		
System Information		stem Information	Displays the system information of this TV		

<sup>A different menu will be displayed while PC or SD Card is used. (p. 29 and p. 31)
Only available items can be selected.</sup>

Editing Programmes


You can skip unwanted programmes or edit programmes.

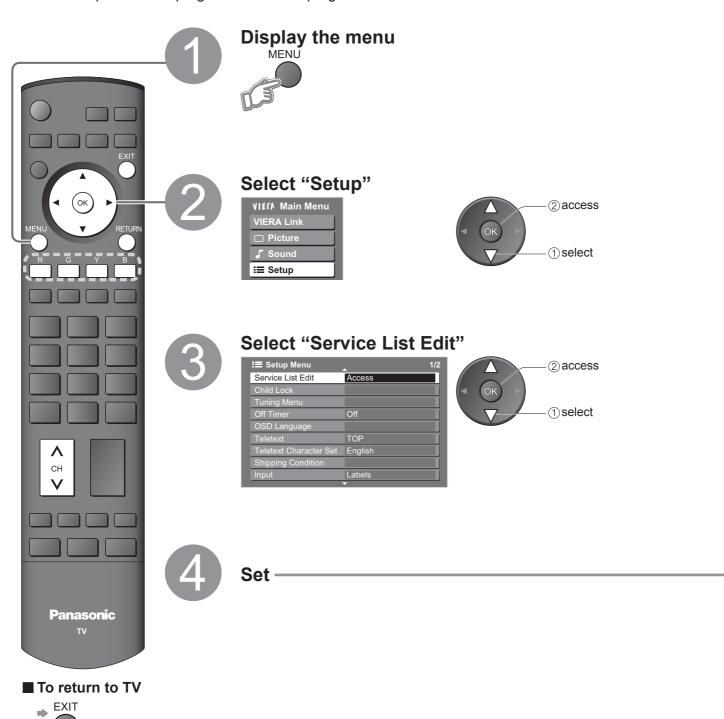

You can hide unwanted services. The deleted services cannot be displayed except in this function. Use this function to skip unwanted programmes.

Select a service and add / delete



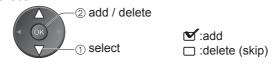

To retune each programme (Manual Tuning)→ R (p. 25)

Skip unwanted programmes


Edit programmes (Change name, Move)


Service List Edit You can change the programme name and programme position.

• If a VCR is connected only with the RF cable, edit "VCR".






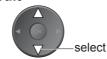

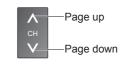



② Edit

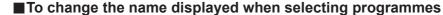







(maximum: five characters)


Store

■To move the programme position



Tuning Programmes

You can retune all the TV programmes when moving house or search for new services which may have recently started broadcasting.

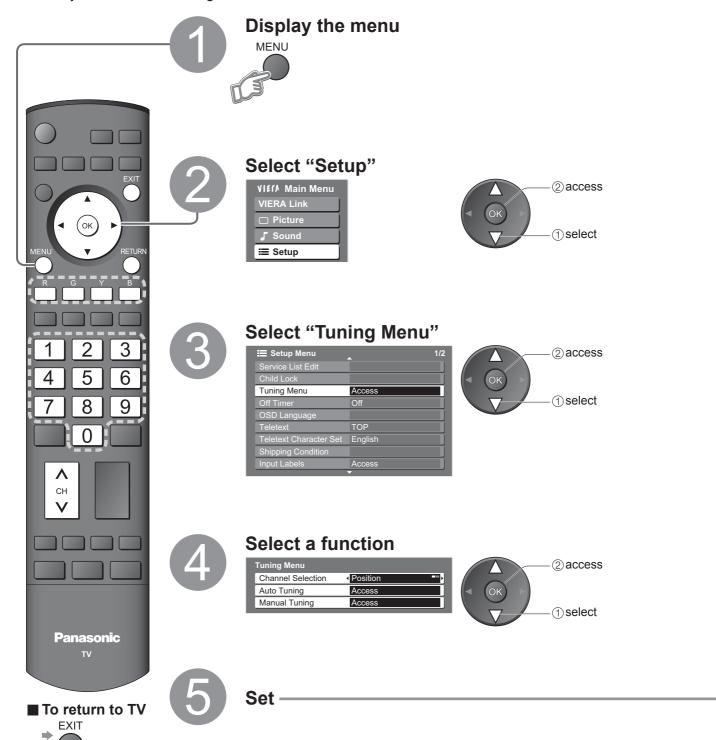

Automatically retune all programmes received in the area.

- If a Child Lock PIN number (p. 26) has been set, it must be entered.
- ① Select the Channel Selection method (Position / Direct)

■ Position

Example

Programme Number	Channel Display	Received Programme
1	2	2
2	4	4
3	6	6
4	8	8
5	10	10
6	12	12
7	14	14
8	16	16
9	18	18
10	20	20

When Channel Selection is on Position, and Auto Tuning is performed, the TV memorises the programmes tuned in order from Programme Number 1. During Position mode various reception programmes can be viewed.

■ Direct

Example

Programme Number	Channel Display	Received Programm
1	_	_
2	2	2
3	_	_
4	4	4
5	_	_
6	6	6
7	_	_
8	8	8
9	_	_
10	10	10

When Channel Selection is on Direct, and Auto Tuning is performed, the TV memorises the Programme Number which is the same as the programme tuned. The Channel Display numbers for the broadcast stations in each region are listed on p. 38.

Channel Selection

programmes

Set all

Auto Tuning

② Start Auto Tuning Access "Auto Tuning"









- All the previous tuning settings are erased.
- When the operation is completed, the programme at programme position "1" will be displayed.
- If tuning has not been done completely ⇒ "Manual Tuning"

■ For Auto Tuning, using the buttons on the side of the TV (p. 7)

- ① Press repeatedly until "Auto Tuning" appears
- ② Access "Auto Tuning"
- Start "Auto Tuning"

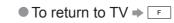

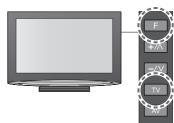

■ Fine Tunina

Use to make small adjustments to the tuning of an individual programme (affected by weather conditions, etc.)

■ Manual Tuning

Set programme manually after Auto Tuning.

- Set Sound System and Colour System, and then perform this function.
 Normally set Colour System "Auto".
- If a VCR is connected only with the RF cable, select programme position "0".

programme manually

Set

Manual Tuning



Select the programme position












Search and store

Control Programme Audience


You can lock specific programmes / AV input terminals and control who watches them. (When the locked programme / input is selected, a message appears; by entering the PIN number, you can watch it.)

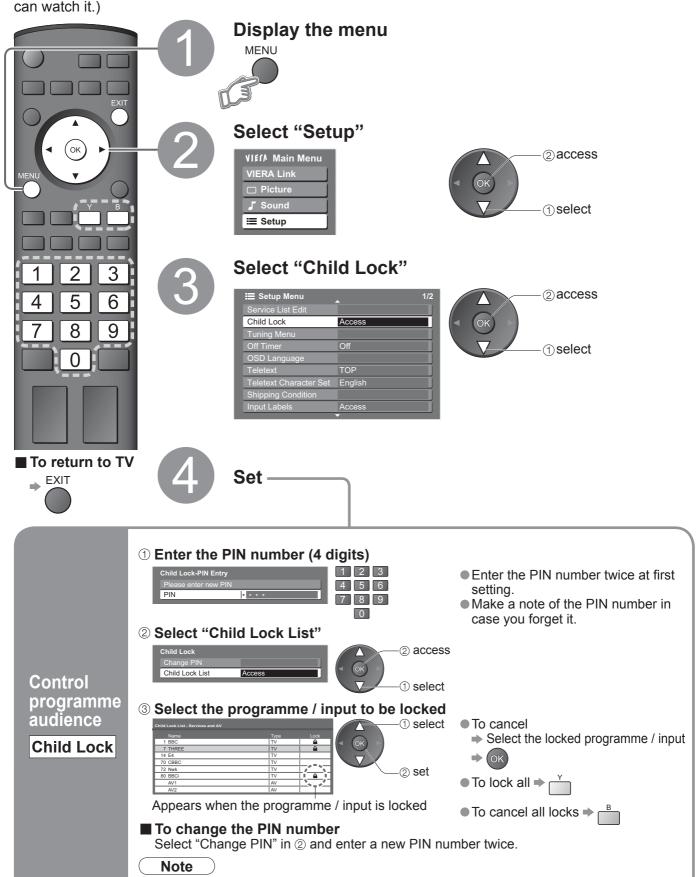

Setting "Shipping Condition" (p. 27) erases the PIN number and all settings.


Restore Settings

Resets the TV to its original condition, i.e. no programmes tuned in. All settings (programmes, picture, sound quality, etc.) are reset.

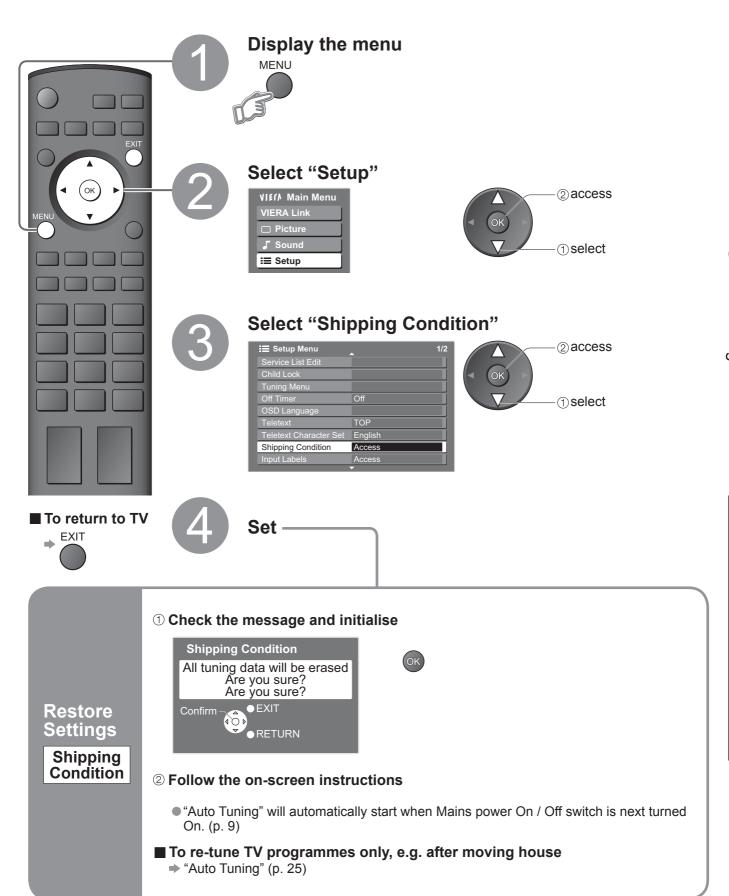


Input Labels

For easier identification and selection of the input mode, you can label each input terminals or skip terminal that is not connected to any equipment. (To select the input mode \Rightarrow p. 14)

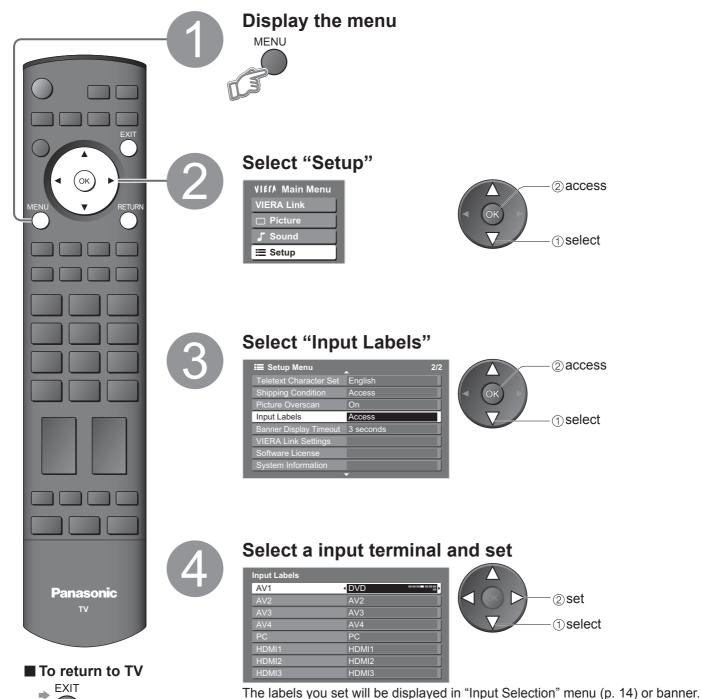



● If "Skip" is selected, you cannot select the mode.

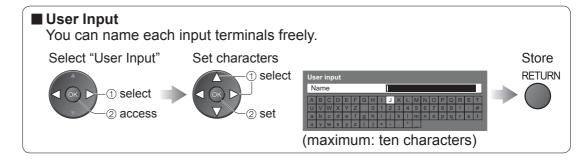

Displaying PC Screen on TV

The screen of the PC connected to the TV can be displayed on the TV. You can also listen to PC sound with the audio cable connected. To connect PC (p. 36)

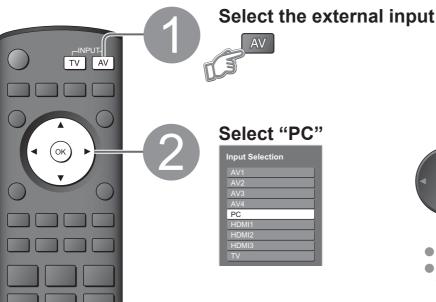

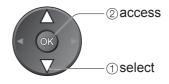

- Corresponding signals (p. 42)
- If "H-freq." or "V-freq." is shown in red, the signals may not be supported.

■ PC menu setting (changed as desired)

■ To return to TV


⇒ TV

To make settings → "How to Use Menu Functions" 1 to 4 (p. 18)

Menu	I	tem	Adjustments / Configurations (options)
		R-Gain	Adjusts the white balance for red areas
D	A d	G-Gain	Adjusts the white balance for green areas
Ct	Advanced PC	B-Gain	Adjusts the white balance for blue areas
Picture	Settings	Gamma	(2.0 / 2.2 / 2.5)
V		Reset to Default	Press the OK button to reset to the default settings
		Input Resolution	Switches to a wide view VGA (640 × 480 pixels), WVGA (852 × 480 pixels), XGA (1,024 × 768 pixels), WXGA (1,366 × 768 pixels) Options change depending on signals
		Clock	Set to the minimum level if noise occurs
Setup		H-pos	Adjusts horizontal position
	PC Setup	V-pos	Adjusts vertical position
		Clock Phase	Eliminates flicker and distortion • Adjust after Clock adjustment • Set to the minimum level if noise occurs
		Sync	PC sync signal type (H & V / On G) H & V : Horizontal and Vertical sync from your PC (Most common sync format) On G : Sync on Green sync from your PC
		Reset to Default	Press the OK button to reset to the default settings

Viewing from SD Card


The still images recorded by the digital camera will be displayed.

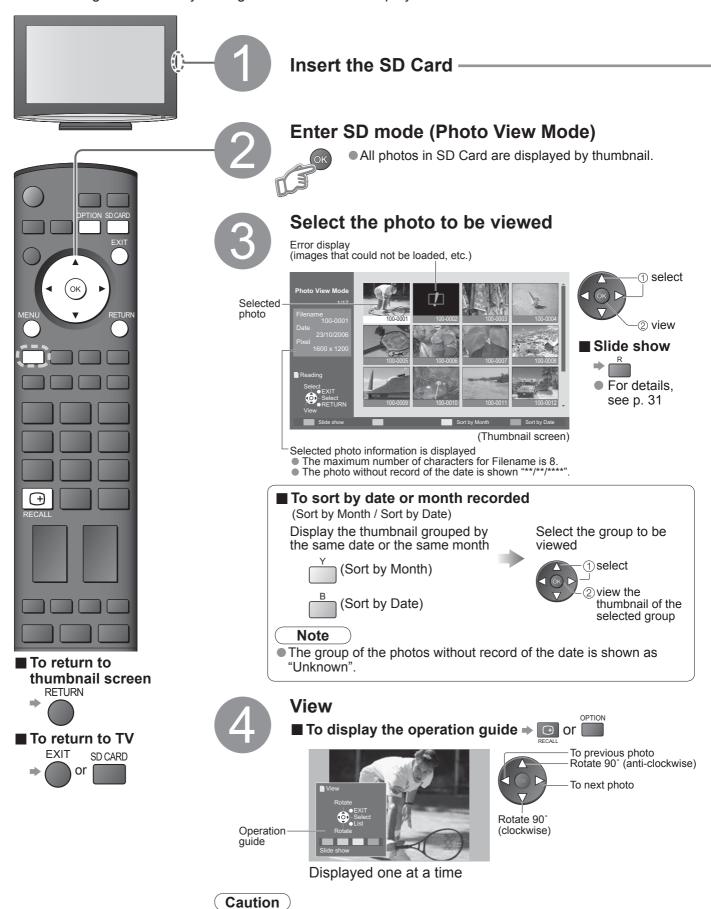

During the operation, no signals are output from the monitor output terminals.

3 0

(Photos)

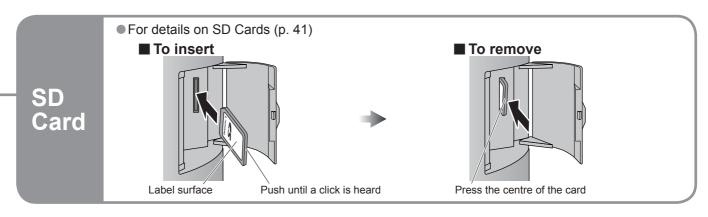

Slide show

- Start Slide show (operate in step ③ or ④)
 - ① Select the photo for the first view
- 2 Start Slide show







- To pause ⇒ OK
- To return to Single view ⇒ □

Note


- Slide show is done within the same group if started from the view of the group.
- Slide show settings (operate in step ③ or ④)




3 Select the functions and set





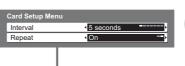

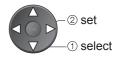

Menu	Item	Adjustments / Configurations (alternatives)	
Card : Me	Interval	Select slide show interval (5 / 10 / 15 / 30 / 60 / 90 / 120 seconds)	
ne Se	Repeat	Slide show repeat (Off / On)	

Cautions in handling SD Card

- Do not remove the card while the TV is accessing data (this can damage card or TV).
- Do not touch the pins on the back of the card.
- Do not subject the card to a high pressure or impact.
- Insert the card in the correct direction (otherwise, card may be damaged).
- Electrical interference, static electricity, or erroneous operation may damage the data or card.
- Back up the recorded data at regular intervals in case of deteriorated or damaged data or erratic operation of the TV. (Panasonic is not liable for any deterioration or damage of recorded data.)

On screen messages			
Message		Meaning / Action	
Cannot read file		 The file is broken or unreadable. The TV does not support the format. (For the applicable formats and data, see p. 41.) 	
Is SD Card in?		● Insert a SD Card.	
No valid file to play	 	The card has no data.	
Over 9999 pictures found		• Maximum valid number of photos is 9,999.	

VIERA Link "HDAVI Control™"∗

*Enjoy additional HDMI Inter-Operability with Panasonic products which have "HDAVI Control" function.

This TV supports "HDAVI Control 3" function.
Connections to the equipment (DIGA Recorder, HD Video Camera, Player theatre, Amplifier, etc.) with HDMI cable allow you to interface them automatically.

These features are limited to models incorporating "HDAVI Control" and "VIERA Link".


- Some functions are not available depending on the equipment's version of HDAVI Control. Please confirm the connected equipment's version of HDAVI Control.
- VIERA Link "HDAVI Control", based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers' equipment that supports HDMI CEC cannot be guaranteed.

Please refer to individual manuals for other manufacturers' equipment supporting VIERA Link function. About applicable Panasonic equipment, consult your local Panasonic dealer.

■ Summary of VIERA Link functions

- Power on link Power off link Easy playback Speaker control Control the menu of the connected equipment by VIERA remote control (Available with the equipment which has "HDAVI Control 2" or "HDAVI Control 3" function.) Pause Live TV programme Direct TV Recording (Available with the equipment which has "HDAVI Control 3" function.)
- Connections


Read the manual of the equipment, too.

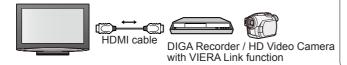

HDMI cable

Use fully wired HDMI compliant cable. Non-HDMI-compliant cables cannot be utilized. Recommended Panasonic's HDMI cable part number:

- RP-CDHG10 (1.0 m)
- RP-CDHG30 (3.0 m)
- RP-CDHG15 (1.5 m)
- RP-CDHG50 (5.0 m)
- RP-CDHG20 (2.0 m)
- Connect the equipment supporting VIERA Link to the TV's HDMI1, HDMI2 or HDMI3 terminals via fully wired HDMI cables.

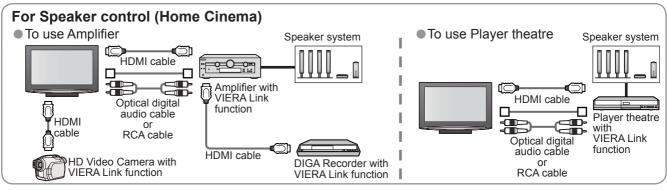

■ Preparations

- Connect the equipment supporting VIERA Link.
- Set up the connected equipment. Read the manual of the equipment.
- For optimal recording, the settings of the recorder might be required. For details, read the manual of the
- Set VIERA Link On in Setup Menu → "VIERA Link" (p. 21)
- Set up the TV → After connection, turn the equipment on and then switch the TV on. Select the input mode to HDMI1, HDMI2 or HDMI3 (p. 14), and make sure that an image is displayed correctly. This setup should be done each time when the following conditions occur:
 - for the first time / when adding or reconnecting equipment / when changing setup

■ Features available

Easy playback	Automatic Input switching - When the connected equipment is operated, input mode is switched automatically. When it is stopped operating, input mode is not returned.
Power on link	Set Power on Link "Set" in Setup Menu to use this function → "Power on Link" (p. 18-19, 21) When the connected equipment starts playback or direct navigator / function menu for the equipment are activated, the TV is automatically turned on. (Only when TV is in Standby mode.)
Power off link	Set Power off Link "Set" in Setup Menu to use this function → "Power off Link" (p. 18-19, 21) When TV is set to Standby mode, the connected equipment is also automatically set to Standby. • This function will work even if the TV enters standby mode automatically by Off Timer function or auto power standby function.

■ Features available (Using VIERA Link Menu)

You can pause the live TV programme and resume later.

- This function is available with DIGA Recorder which has HDD and "HDAVI Control 3" function.
- If you cannot operate, check the settings and the equipment ⇒ "Preparations" (p. 32)
- Available conditions:

TV

- when watching TV programme
- when watching the input from DIGA Recorder

Access and pause the live TV programme





Select "Pause Live TV" and pause





- Live TV programme is recorded on HDD from where it was paused.
- To resume (stop pause)
 Select "Pause Live TV"
 and access
 - About the operations after resuming, read the manual of the equipment.
- ② resume
 ① select

■ To return to Live TV

(cancel pause or resumed playback)

(change the input mode)



(change the programme)

 If you cancel pause or resumed playback, the recorded programme will be deleted from HDD.

Recording the current programme in DIGA Recorder immediately.

- This function is available with DIGA Recorder which has "HDAVI Control 3" function.
- If you cannot operate, check the settings and the equipment → "Preparations" (p. 32)
- Available conditions:

СН

when watching TV programme

6

9

• The recording is performed by using the tuner of DIGA Recorder. Changing programme, input mode or turning off the TV is available during the recording.



Pause

Live TV

programme
/ HDAVI Control 3


and

Recorder with HDD

Pause Live

TV

Direct TV Rec

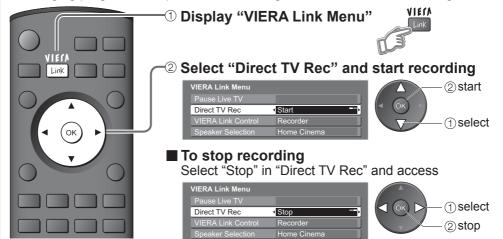

VIERA Link "HDAVI Control™"

■ Features available (Using VIERA Link Menu)

You can control some functions of the connected equipment with this TV remote control (point the remote control at the TV's signal receiver).

- This function is available with the equipment which has "HDAVI Control 2" or "HDAVI Control 3" function.
- If you cannot operate, check the settings and the equipment ⇒ "Preparations" (p. 32)

Access and operate the menu of the equipment



Display "VIERA Link Menu"



② Select "VIERA Link Control"





3 Select the equipment you want to access

 "Home Cinema" means Player theatre, Recorder theatre and Amplifier.



Recorder / Player / Home Cinema / Video Camera

The type of the connected equipment is displayed.

Select the type of the equipment and access.



The menu of the accessed equipment (Input mode will be changed automatically)

equipment
by VIERA
remote
■If you acc

(HDAVI Control 2) HDAVI Control 3

control

connected

Control the menu

of the

VIERA Link Control If you access the invalid equipment

When the equipment with "HDAVI Control" function is connected



Recorder / Player / Home Cinema / Video Camera

The type of the connected equipment is displayed. But you cannot access it. Use its own remote control to operate the equipment.

When the equipment of other types or manufacturers is connected



Others


"Others" is displayed. You cannot access it. Use its own remote control to operate the equipment.

4 Operate the menu of the equipment

 Available VIERA remote control buttons (depending on the connected equipment):

	Move the cursor / select the menu
	Move the cursor / access / adjust
OK	Store / set / access
RETURN	Return to the previous menu
EXIT	Exit the menu
OPTION	Display the operation guide for the equipment / The same functions with the OPTION button of the equipment
R G Y B	Access when the key words are displayed on colour bar


 About the operations for the equipment, read the manual of the equipment.

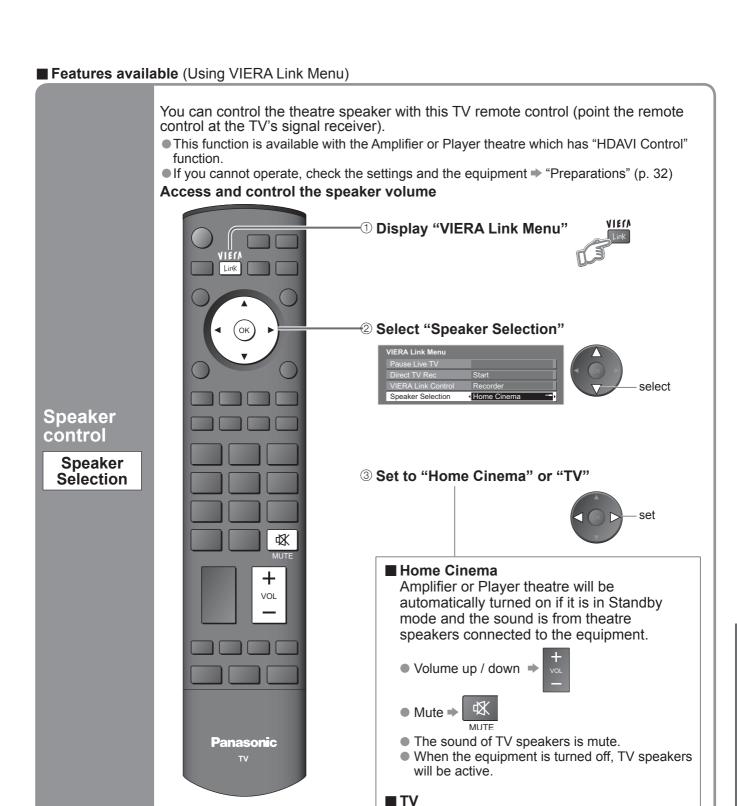

TV speakers are active.

External Equipment


These diagrams show our recommendations for how to connect the TV to your various equipment. For other connections, consult the instructions for each piece of equipment, the table below, and the specifications (p. 46).

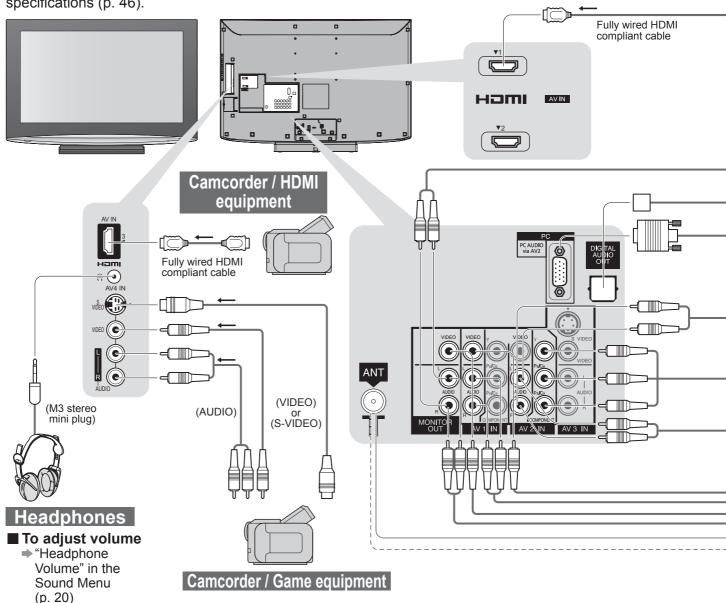


■Types of connectable equipment to each terminal

Terminal Recording / Playback (equipment)	AV1 IN	AV2 IN	AV3 IN O HORIO O HORI	AV4 IN (Side of TV)	
To record / playback videocassettes / DVDs (VCR / DVD recorder)	\circ	0	0	0	
To watch DVDs (DVD player)	\bigcirc	0	0	0	
To watch camcorder images (Video camera)	\bigcirc	0	0	0	
To watch satellite broadcasts (Set top box)	\bigcirc	0	0	0	
To play games (Game equipment)	\circ	0	0	0	
To use amplifier with speaker system					
VIERA Link					

O: Recommended Connection

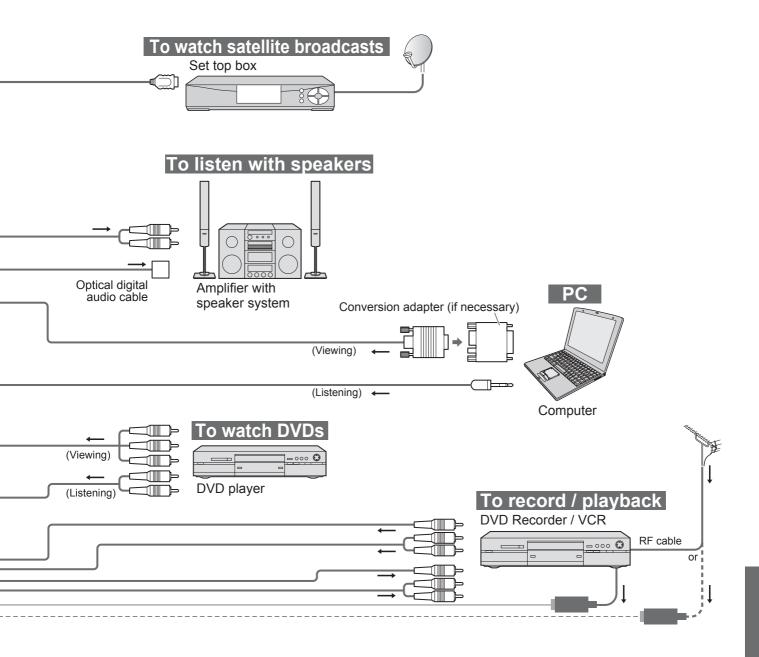

MONITOR OUT	DIGITAL AUDIO OUT	•		ı
AJENO AJENO R		1	2	3
0				
		0	0	0
		0	0	0
		0	0	0
0	\circ			
			0	0

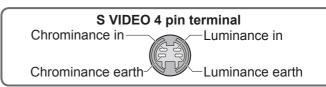

HDMI terminal							
Hot Plug Detect DDC/CEC Ground SCL CEC TMDS Clock Shield TMDS Data0+	19	+5V Power SDA Reserved (in cable but N.C. on device) TMDS Clock- TMDS Clock+ TMDS Data0 Shield					
TMDS Data1 Shield TMDS Data2- TMDS Data2+	3 4	TMDS Data1- TMDS Data1+ TMDS Data2 Shield					

- Connect the S VIDEO or VIDEO terminal when using AV3 / AV4 IN terminals.
- Connect the COMPONENT or VIDEO terminal when using AV1 / AV2 IN terminals.

Technical Information

			Р	rogran	nme Al	locatio	n			
Channel Plan	China	Hong Kong	Asia/M.East	NZ / Indonesia	Indian CATV	CIS / E.Europe	South Africa	American System	American CATV	Japan
CH DISPLAY					Receive p	rogramme				
0 1 2 3 4 5 6 7 11 12 13 14 15 16 19	1 2 3 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4	- - - - - - - - - - - - - - - - - - -	- 2 - 2 - 11 12 - - -	1 2 3 4 4 11 - - -	- 1 2 3 4 S'1 S'2 S'3 S1 S2 S3 S4 S1 S2 S3	1 2 - - - 11 12 - - - -	- 1 2 - - - - - - -	- - 2 - - 13 14 - -	1 2 3	1 2
20	}	_	_	_	5	_	_	\	\	}
21 22 23 24 28 57 58 59 62 63	57 - - - -	62 63	21 	21 	6 	21 	21 	62 63	62 63	62 C13
69 70		69	69	69	31 32	69	69	69	}	}
73 74 75 76 77 78 79	- - - - -	S'1 S'2 S'3 - -	S'1 S'2 S'3 - -	- S'1 S'2 S'3 - -	41	S'1 - - - - -	- S'1 S'2 S'3 - -	- - - - -		
80 81 } 89	_ Z1 } Z9	S1 S2 } S10	S1 S2 } S10	S1 S2 } S10	42 } 51	S1 S2 } S10	S1 S2 } S10	- - -		}
90 91 92 93 94 95 96 97 98 99	Z10 Z11 Z12 Z13 Z14 Z15 Z16 Z17 Z18 Z19	S11 S12 S13 S14 S15 S16 S17 S18 S19 S20	S11 S12 S13 S14 S15 S16 S17 S18 S19 S20	S11 S12 S13 S14 S15 S16 S17 S18 S19 S20	52	S11 S12 S13 S14 S15 S16 S17 S18 S19 S20	- S14 S15 S16 S17 S18 S19 S20	- - - - - - - -	99	C49
100	Z20	\$21 } } \$41 -	\$21 } } \$41 -	\$21 	62	\$21 	S21 	- - - - - - -	100	1111111

Aspect Ratio

The optimum size and aspect can be chosen, and you can enjoy finer images. (p. 13)

		Aspect modes						
Sig	nal name	16:9	Just	4:3	4:3 Full	Zoom1	Zoom2	Zoom3
TV/AV1/AV2/ AV3/AV4	PAL	0	0	0	_	0	0	0
\$ \alpha	PAL 525/60	0	0	0	_	0	0	0
A A	NTSC 4.43	0	0	0	_	0	0	0
4 22	NTSC 3.58	0	0	0	_	0	0	0
	525(480)/60i	0	0	0	_	0	0	0
	525(480)/60p	0	0	0	_	0	0	0
C	625(576)/50i	0	0	0	_	0	0	0
e e	625(576)/50p	0	0	0	_	0	0	0
Component/HDMI	750(720)/50p	0	0	0	0	Ο	0	О
ner	750(720)/60p	0	0	0	0	0	0	0
₹	1125(1080)/50i	0	0	0	0	0	0	0
ğ	1125(1080)/60i	0	0	0	0	0	0	0
=	1125(1080)/50p	0	0	0	0	Ο	0	0
	1125(1080)/60p	0	0	0	0	0	0	0
	1125(1080)/24p	0	0	0	0	0	0	0
PC i	nput	0	_	0	_	-	-	_

Note

- The ratio varies depending on the programme, etc. If the ratio is greater than the standard "16:9", black bands may appear at the top and bottom of the screen.
- If the screen size looks unusual when a widescreen-recorded programme is played back on a VCR, adjust the tracking of the VCR. (See the VCR manual.)
- To select the ratio manually: (Only "16:9" or "4:3" in PC mode)



Directly displays the image at "16:9" without distortion (anamorphic).



Displays a "4:3" image full-screen. Stretching is only noticeable at the left and right edges.




Displays the image at the standard "4:3" without distortion.



Displays a "4:3" image enlarged horizontally to fit the screen.

HD signal only

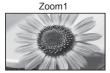

Displays a "16:9" letterbox or "4:3" image without distortion.



Displays a "16:9" letterbox (anamorphic) image full-screen without distortion.

Zoom3



Displays a "2.35:1" letterbox (anamorphic) image full-screen without distortion. At "16:9", displays the image at its maximum (with slight enlargement).

Technical Information

Multi Window

You can watch two images at once. (p. 13)

- The same input mode cannot be displayed at once.
- The sound is active for main screen only in multi window.
- You cannot change the aspect ratio in multi window.
- Multi window cannot be used with PC, SD card, HDMI (available for main screen only) or 1080p signal from Component (Y, PB/CB, PR/CR).
- Some signals are reformatted for suitable viewing on your display.
- The display timeout for the input mode or programme position can be adjusted by "Banner Display Timeout" in Setup Menu (p. 21).

VIERA Link "HDAVI Control™"

HDMI connections to some Panasonic equipment allow you to interface them automatically. (p. 32)

Note

- This function may not work properly depending on the connected equipment.
- Image or sound may not be available for the first few seconds when the playback starts.
- Image or sound may not be available for the first few seconds when Input mode is switched.
- Volume function will be displayed when adjusting the volume of the equipment.
- Easy playback is also available by using the remote control for Amplifier or Player theatre. Read the manual of the equipment.
- About HDMI cable for connecting Panasonic HD Video Camera, read the manual of the equipment.
- If more than one equipment of the same type are connected to the TV by HDMI cables, for example two DIGA Recorders to HDMI1 and HDMI2, VIERA Link will only be available for the lower terminal number, in this case HDMI1.
- "HDAVI Control 3" is the newest standard (current as of December, 2007) for HDAVI Control compatible equipment. This standard is compatible with conventional HDAVI equipment.
- To confirm this TV's version of HDAVI Control ⇒ "System Information" (p. 21)

Stereo / Bilingual Sound Selection

Audio Signal	STEREO	MAIN I	SUB I	MONO
Mode Indicator	0	I	п	∇

NICAMUsed in New Zealand, Singapore, Hong Kong etc.

Type of broadcast	Regular broadcast (Standard Audio)	Regular + NICAM MONO I (MAIN I)	NICAM STEREO	NICAM DUAL MONO (MAIN I / SUB II)
Mode Indicator	No Indicator $\longrightarrow \nabla$	I → ▽	\bigcirc \longrightarrow \vee	

A2(German)Used in Australia, Malaysia etc.

(/						
Type of broadcast	Regular broadcast (Standard Audio)	BILINGUAL or DUAL MONO: MAIN I / SUB II	STEREO			
Mode Indicator	No Indicator $\longrightarrow \nabla$	I ↔ Ⅱ	\bigcirc \longrightarrow \vee			

- If the stereo signal is poor or the receiving conditions are not optimum or if STEREO:MONO automatic switching occurs, it is recommended you switch from STEREO to MONO.
- Even when the contents of the receiving signal undergo changes, selection mode is kept intact.
- When the receiving conditions deteriorate, listening will be easier if the mode is set to the MONO position, using the stereo / bilingual sound selection button.
- DUAL, also known as DUAL MONO or as BILINGUAL is not currently transmitted in some countries.

Data format for Card browsing

Photo : Still images recorded with digital still cameras compatible with JPEG files of

DCF* and EXIF standards

: Baseline JPEG (Sub-sampling 4:4:4, 4:2:2 or 4:2:0) Data format

Max. number of files: 9,999

Image resolution : 160 × 120 to 10,000,000

- Compliant card type (maximum capacity): SDHC Card (16 GB), SD Card (2 GB), Multi Media Card (128 MB), miniSD Card (1 GB) (requiring miniSD adapter)
- If miniSD Card is used, insert / remove it together with the adapter.
- Check the latest information on the card type at the following website. (English only) http://panasonic.co.jp/pavc/global/cs/

*DCF (Design rule for camera file system): Unified standard established by Japan Electronics and Information Technology Industries Association (JEITA).

Note

- A JPEG image modified with a PC may not be displayed.
- Images imported from a PC must be compatible with EXIF (Exchangeable Image File) 2.0, 2.1, and 2.2.
- Partly degraded files might be displayed at a reduced resolution.
- Only ".JPG" extension can be read by this TV.
- The folder and file names may be different depending on the digital camera used.
- Do not use two-byte characters or other special codes.
- The card may become unusable with this TV if file or folder names are changed.

HDMI connection

HDMI (high-definition multimedia interface) allows you to enjoy high-definition digital images and highquality sound by connecting the TV and the equipment.

HDMI-compatible equipment (*1) with an HDMI or DVI output terminal, such as a set top box or a DVD player, can be connected to the HDMI terminal using an HDMI compliant (fully wired) cable. About connections, see "External Equipment" (p. 36).

- HDMI is the world's first complete digital consumer AV interface complying with a non-compression standard.
- If the external equipment has only a DVI output, connect to the HDMI1 / 3 terminal via a DVI to HDMI adapter cable (*2).
- When the DVI to HDMI adapter cable is used, connect the audio cable to the audio input terminal (HDMI1: use AV2 IN AUDIO terminals / HDMI3: use AV4 IN AUDIO terminals).
- Audio settings can be made on the "HDMI1 / 3 Input" menu screen. (p. 20)
- Applicable audio signal sampling frequencies (2ch L.PCM): 48 kHz, 44.1 kHz, 32 kHz
- HDMI2 terminal is for digital audio signal only.
- Use with a PC is not assumed.
- If the connected equipment has an aspect adjustment function, set the aspect ratio to "16:9".
- These HDMI connectors are "type A".
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- An equipment having no digital output terminal may be connected to the input terminal of either "COMPONENT", "S-VIDEO", or "VIDEO" to receive analogue signals.
- The HDMI input terminal can be used with only the following image signals: 480i, 480p, 576i, 576p, 720p, 1080i and 1080p. Match the output setting of the digital equipment.
- For details of the applicable HDMI signals, see p. 42.
- (*1): The HDMI logo is displayed on HDMI-compliant equipment.
- (*2): Enquire at your local digital equipment retailer shop.

Technical Information

PC connection

A PC may be connected to this TV so that the PC screen is displayed and sound is heard from the TV.


- PC signals that can be inputted: Horizontal scanning frequency 31 to 69 kHz; vertical scanning frequency 59 to 86 Hz (more than 1,024 signal lines could result in incorrect display of the image).
- A PC adapter is not necessary for the DOS/V-compliant D-sub 15-pin connector.

Note

- Some PC models cannot be connected to this TV.
- When using PC, set the colour display quality of PC to the highest position.
- For details of the applicable PC signals, see below.
- Max. display resolution

Aspect	4:3	1,440 × 1,080 pixels
	16:9	1,920 × 1,080 pixels

D-sub 15-pin connector signal

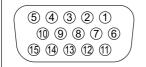

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1	R	6	GND (Ground)	11)	NC (not connected)
2	G	7	GND (Ground)	12	NC (not connected)
3	В	8	GND (Ground)	13	HD
4	NC (not connected)	9	NC (not connected)	14)	VD
5	GND (Ground)	10	GND (Ground)	15	NC (not connected)

Input signal that can be displayed

COMPONENT (Y, PB/CB, PR/CR), HDMI

* Mark: Applicable input signal

manti, Applicable in par eightai		
Signal name	COMPONENT	HDMI
525 (480) / 60i	*	*
525 (480) / 60p	*	*
<u>625 (576) / 50i</u>	*	*
625 (576) / 50p	*	*
750 (720) / 60p	*	*
750 (720) / 50p	*	*
<u>1,125 (1,080) / 60i</u>	*	*
1,125 (1,080) / 50i	*	*
1,125 (1,080) / 60p		*
1,125 (1,080) / 50p		*
1,125 (1,080) / 24p		*

PC (D-sub 15P)

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 × 400 @70 Hz	31.47	70.07
640 × 480 @60 Hz	31.47	59.94
640 × 480 @75 Hz	37.50	75.00
800 × 600 @60 Hz	37.88	60.32
800 × 600 @75 Hz	46.88	75.00
800 × 600 @85 Hz	53.67	85.06
852 × 480 @60 Hz	31.44	59.89
1,024 × 768 @60 Hz	48.36	60.00
1,024 × 768 @70 Hz	56.48	70.07
1,024 × 768 @75 Hz	60.02	75.03
1,024 × 768 @85 Hz	68.68	85.00
1,280 × 1,024 @60 Hz	63.98	60.02
1,366 × 768 @60 Hz	48.39	60.04
Macintosh13" (640 × 480)	35.00	66.67
Macintosh16" (832 × 624)	49.73	74.55
Macintosh21" (1,152 × 870)	68.68	75.06


- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.
- Applicable input signal for PC is basically compatible to VESA standard timing.
- PC signal is magnified or compressed for display, so that it may not be possible to show fine detail
 with sufficient clarity.

FAQs

Before requesting service or assistance, please follow these simple guides to resolve the problem. If problem still persists, please contact your local Panasonic dealer for assistance.

White spots or shadow images (noise)



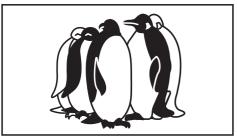

 Check the position, direction, and connection of the aerial.

Neither image nor sound is produced

- Is the TV in "AV mode"?
- Is the mains lead plugged into the socket outlet?
- Is the TV turned On?
- Check Picture Menu (p. 20) and volume.

There may be red spots, blue spots, green spots and black spots on the screen

This is a characteristic of liquid crystal panels and is not a problem. The liquid crystal panel is built with very high precision technology giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of red, green, blue or black. Please note this does not affect the performance of your LCD.


An error message appears

- Follow the message's instructions.
- If the problem persists, contact the authorized Service Centre.



• There are some looseness around the panel to prevent the damage to the panel.

The panel might move slightly when it is pushed with a finger, and clattered sound might be heard. This is not a malfunction.

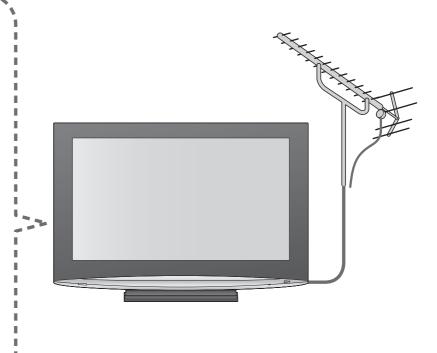

FAQs

	Problem	Actions
	Chaotic image, noisy	 Set "P-NR" in the Picture Menu (to remove noise). (p. 20) Check nearby electrical products (car, motorcycle, fluorescent lamp).
Screen	No image can be displayed	 Is "Colour" or "Contrast" in the Picture Menu set to the minimum? (p. 20) Check Colour System. (p. 25) Check AV Colour System. (p. 21)
en	Blurry or distorted image (no sound or low volume)	Reset programme. (p. 25)
	Unusual image is displayed	Turn off the TV with Mains power On / Off switch, then turn it on again.
Sound	No sound is produced	Is "Sound mute" active? (p. 7)Is the volume set to the minimum?
	Sound level is low or sound is distorted	 Sound signal reception may be deteriorated. Check Sound system. (p. 25)
돔	Sound is unusual	 Set the sound setting of the connected equipment to "2ch L.PCM". Check the "HDMI1 / 3 Input" setting in the Sound Menu. (p. 20) If digital sound connection has a problem, select analogue sound connection. (p. 41)
HDMI	Pictures from external equipment are unusual when the equipment is connected via HDMI	 Is the HDMI cable connected properly? (p. 36) Turn Off the TV and equipment, then turn them On again. Check an input signal from the equipment. (p. 42) Use an equipment compliant with EIA/CEA-861/861B.
Otl	TV goes into "Standby mode"	 Off Timer function is activated. The TV enters "Standby mode" about 30 min. after broadcasting ends.
Other	The remote control does not work	Are the batteries installed correctly? (p. 6)Has the TV been switched On?

Licence

Trademark Credits

- VGA is a trademark of International Business Machines Corporation.
- Macintosh is a registered trademark of Apple Computer, USA.
- S-VGA is a registered trademark of the Video Electronics Standard Association.
 Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.
- SDHC Logo is a trademark.
- HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- HDAVI Control™ is a trademark of Matsushita Electric Industrial Co., Ltd.
- TruSurround XT, SRS and (symbol are trademarks of SRS Labs, Inc.
 TruSurround XT technology is incorporated under license from SRS Labs, Inc.

WARRANTY - New Zealand only

WE WARRANT that the Panasonic Television that you have purchased is free from defects in material and workmanship under normal home use and service.

Accordingly, we undertake to repair, or at our option, replace without cost to the owner, either for material or labour, any part which within 12 months from the date of delivery is found to be defective, provided that the appliance has been used for domestic purposes only and in accordance with the instructions given in the Instruction Book and not been subjected to misuse, neglect or installed, dismantled, repaired or serviced by any other than an authorised Panasonic New Zealand Dealer or Panasonic New Zealand Authorised Service Centre.

NOTE

- Before reporting a fault, please ensure that you read the item "Troubleshooting" in the information section of your Panasonic Instruction Book.
- It is important to retain your proof of purchase as this will be required by the serviceman or retailer as proof of purchase date, should service be required.
- In the event of service being required, contact your Panasonic New Zealand retailer or Panasonic New Zealand Authorised Service Centre. IMPORTANT

Any request for warranty service must be through an Authorised Panasonic New Zealand Service Centre who during the period of the warranty, undertakes to make any necessary adjustment and fit any replacement part supplied by the manufacturer, during normal working hours, or alternatively will arrange for such service to be provided by some other Panasonic New Zealand Authorised Service Centre.

NEW ZEALAND

Distributed in New Zealand by Panasonic New Zealand Limited
350 Te Irirangi Drive East Tamaki, Private Bag 14911, Panmure Auckland
Tel. 09 272 0100

Customer Care Center
Email: Customerservice@panasonic.co.nz
www.panasonic.co.nz

Specifications

Power Source		е	AC 230 V, 50 Hz
Power Consumption	Average use		200 W
ption	Standby	condition	0.3 W
Display panel	Aspect Ratio		16:9
	Visible screen size Number of pixels		93.9 cm (diagonal) 819 mm (W) × 460 mm (H)
~			2,073,600 (1,920 (W) × 1,080 (H))
co	Speaker		160 mm × 42 mm × 2 pcs, 8 Ω
Sound	Audio Output		20 W (10 W + 10 W), 10% THD
bn	Headphones		M3 (3.5 mm) stereo mini Jack × 1
			VGA, SVGA, XGA, SXGA
PC signals			Horizontal scanning frequency 31 - 69 kHz Vertical scanning frequency 59 - 86 Hz
Receiving Systems / Band name		stems /	17 Systems
			16 PAL 60 Hz/6.0 MHz 17 PAL 60 Hz/6.5 MHz 17 PAL 60 Hz/6.5 MHz
Receiving Channels (Regular TV)		annels	VHF BAND UHF BAND CATV 2-12 (PAL/SECAM B, K1) 21-69 (PAL G, H, I/SECAM G, K, K1) S1-S20 (OSCAR) 0-12 (PAL B AUST.) 28-69 (PAL B AUST.) 1-125 (USA CATV) 1-9 (PAL B N.Z.) 13-57 (PAL D, K) C13-C49 (JAPAN) 1-12 (PAL/SECAM D) 13-62 (NTSC M Japan) S21-S41 (HYPER) 1-12 (NTSC M Japan) 14-69 (NTSC M USA) Z1-Z37 (CHINA) 2-13 (NTSC M USA) 5A, 9A (AUST.)
Aerial - Rear			VHF / UHF
Operating Conditions		nditions	Temperature: 0 °C - 40 °C Humidity: 20 % - 80 % RH (non-condensing)
Connection	AV1 Input	AUDIO L - R	RCA PIN Type × 2 0.5 V[rms]
		VIDEO	RCA PIN Type × 1 1.0 V[p-p] (75Ω)
		COMPONENT	Y 1.0 V[p-p] (including synchronization) PB/CB, PR/CR ±0.35 V[p-p]
	AV2 Input AV3 Input	AUDIO L - R	RCA PIN Type × 2 0.5 V[rms]
Te		VIDEO	RCA PIN Type × 1 1.0 V[p-p] (75Ω)
Terminals		COMPONENT	Y 1.0 V[p-p] (including synchronization) PB/CB, PR/CR ±0.35 V[p-p]
		AUDIO L - R	RCA PIN Type × 2 0.5 V[rms]
		VIDEO	RCA PIN Type × 1 1.0 V[p-p] (75 Ω)
		S VIDEO	Mini DIN 4-pin Y:1.0 V[p-p] (75Ω) C:0.286 V[p-p] (75Ω)
	A) ()	AUDIO L - R	RCA PIN Type × 2 0.5 V[rms]
	AV4 Input	VIDEO	RCA PIN Type × 1 1.0 V[p-p] (75 Ω)
		S VIDEO	Mini DIN 4-pin Y:1.0 V[p-p] (75Ω) C:0.286 V[p-p] (75Ω)
	Others	HDMI1 / 2 / 3 Input	TYPE A Connectors • This TV supports "HDAVI Control 3" function.
		PC Input	HIGH-DENSITY D-SUB 15PIN R, G, B/0.7 V[p-p] (75 Ω) HD, VD/TTL Level 2.0 - 5.0 V[p-p] (high impedance)
		DIGITAL AUDIO OUT	PCM, Fiber optic
		Card slot	SD CARD slot × 1
	Monitor	AUDIO L - R	RCA PIN Type × 2 0.5 V[rms] (high impedance)
	Output	VIDEO	RCA PIN Type × 1 1.0 V[p-p] (75 Ω)
Dimensions (w × n × D)			933 mm × 650 mm × 295 mm (With TV Stand) 933 mm × 608 mm × 105 mm (TV only)
Mas	s	23.0 kg Net	

[•] Design and Specifications are subject to change without notice. Weight and Dimensions shown are approximate.



Customer's Record The model number and serial number of this product may be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes. Model Number Serial Number

Matsushita Electric Industrial Co., Ltd.

© 2008 Matsushita Electric Industrial Co., Ltd. All Rights Reserved.

Web Site: http://panasonic.net/