

Panasonic

Operating Instruction

Colour Television

TX-51PS72Z


Please read the operating instructions completely before operating this set.

TQB4G2221


Dear Panasonic customer

Welcome to the Panasonic family of customers. We hope that you will have many years of enjoyment from your new colour television.


Safety Instructions

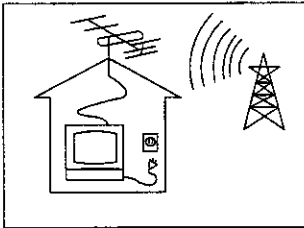


The TV set can be operated on AC AUTO 110-240V, 50/60Hz.

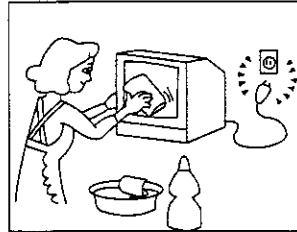


The cabinet and picture tube can be kept in good condition by simply wiping with a clean, soft cloth moistened with mild detergent and water. Do not use solutions containing benzol, petroleum or a chemical cloth. For safety, remove the plug from the wall outlet.

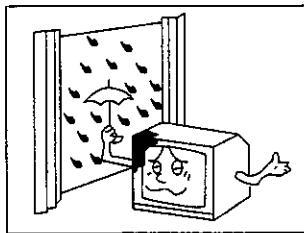


To prevent damage which may result in fire or electrical shock, do not expose the TV set to rain or excessive moisture.

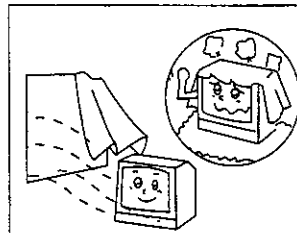


Adequate ventilation is essential to prevent failure of electrical components.

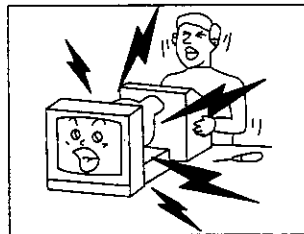


Do not remove the rear cover, as live parts are accessible when it is removed.

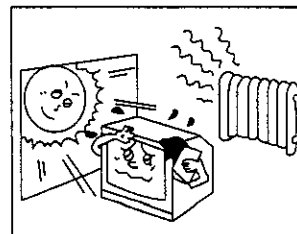

Avoid exposing the TV set to direct sunlight and other source of heat.

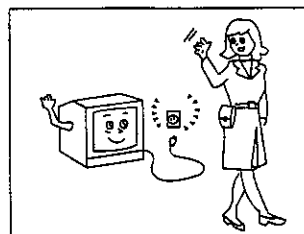


Remove the plug from the wall outlet (Powerpoint) when the TV set is not used for a prolonged period of time.

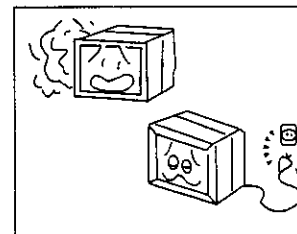

Do not use this set if abnormal operation occurs. EX: smoke, odd sounds or smells, turn the power switch off and disconnect the AC power if you notice any unusual operation.

Before Operating This Set

Connect the Aerial Cable to the RF In Terminal

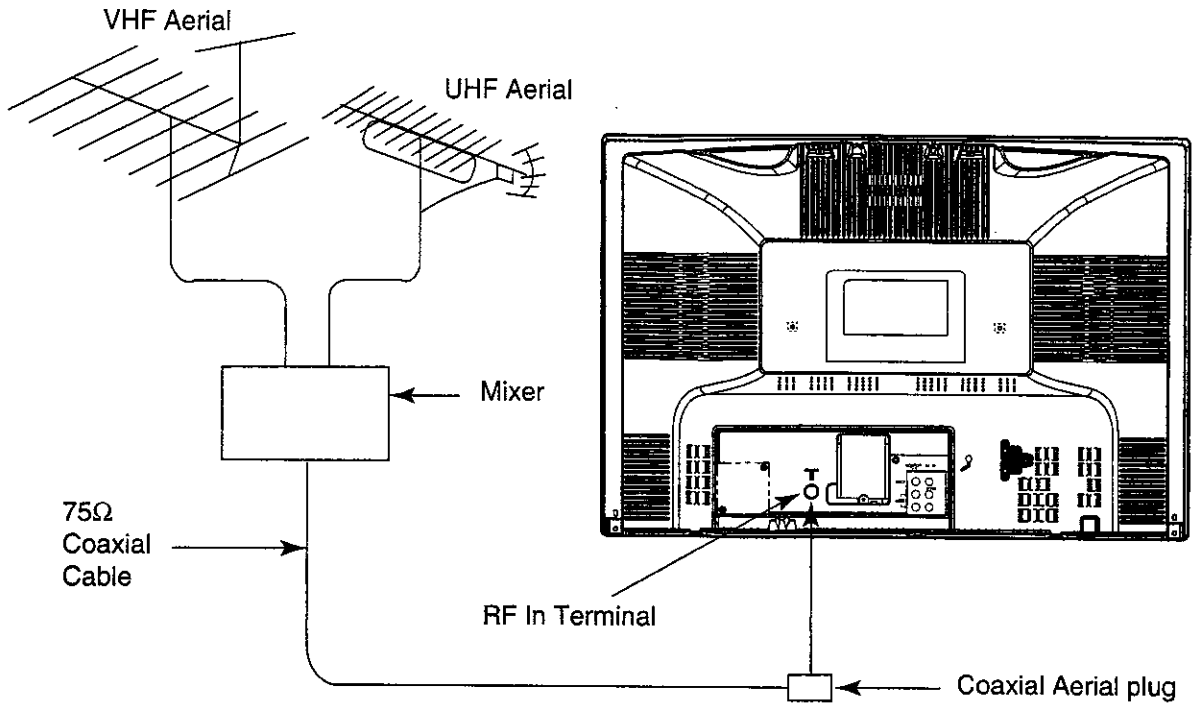

To obtain the best quality picture and sound, an external antenna, the correct cables (75 Ohm coaxial) and the correct terminating plug will be required.


If a communal antenna system is used, you may require the correct connection cable and plugs between the wall antenna socket and your television receiver.

Your local Television Service Dealer may be able to assist you in obtaining the correct antenna system for your particular area and accessories required.

Any matters about antenna installation, upgrading of existing systems or accessories required, and the cost incurred, are the responsibility of the customer.

Note:


If your existing antenna system uses 300 Ohm to 75 Ohm Balun, see Below.

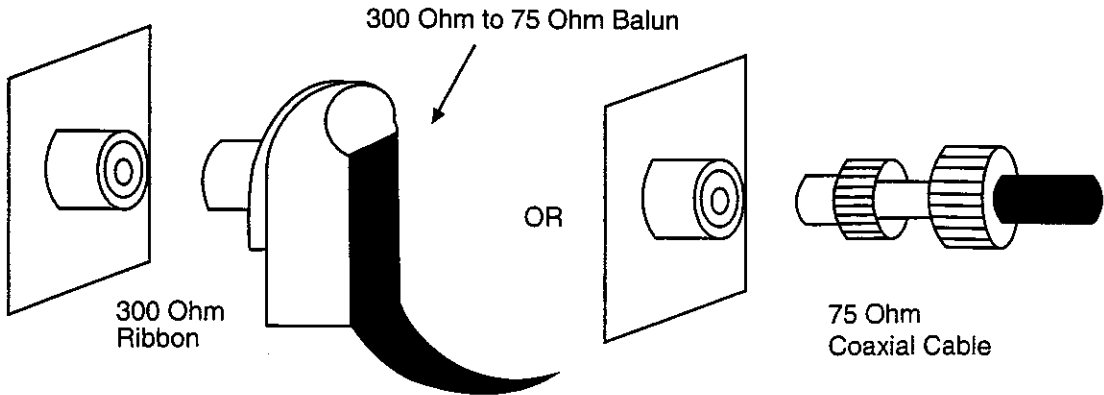

Before Operating This Set

Battery Installation


1

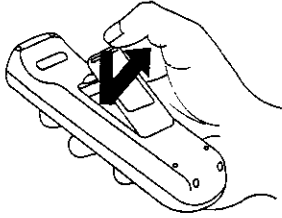

Open the cover.
Push bottom downward and pull out the cover.


2

Two "R6 (AA)" size

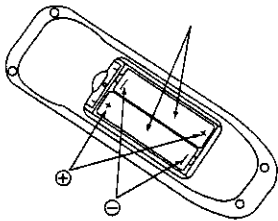

Batteries: Use two "R6 (AA)" size batteries.
Insert the batteries ensuring correct polarity.
This is identifiable by the "+" and "-" symbols on both the batteries and inside the battery compartment.

3

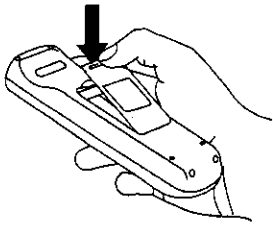


Replace the cover.

Do not use rechargeable (Ni-Cd) batteries.
They are different in shape and performance and may fail to ensure correct operation.



⚠ Battery Cautions

The incorrect use of batteries can cause electrolyte leakage which will corrode the Remote Control or cause the batteries to burst.

Old Batteries

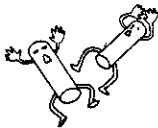

New Batteries

  

Replacement both batteries at the same time.

Don't mix battery types
(alkaline with carbon zinc, etc.)

Don't Recharge.

Connections (Audio Input and Video Input)


To watch the VCR picture:

Connect the VCR cable to the AUDIO INPUT and VIDEO INPUT terminals at the rear of TV.

Press the TV/AV selection button, set the VCR to the playback mode. To watch or to return to the TV programme, press the TV/AV selection button again.


Note:

If both AV IN terminals are connected at the same time, only front AV input terminal can operate.

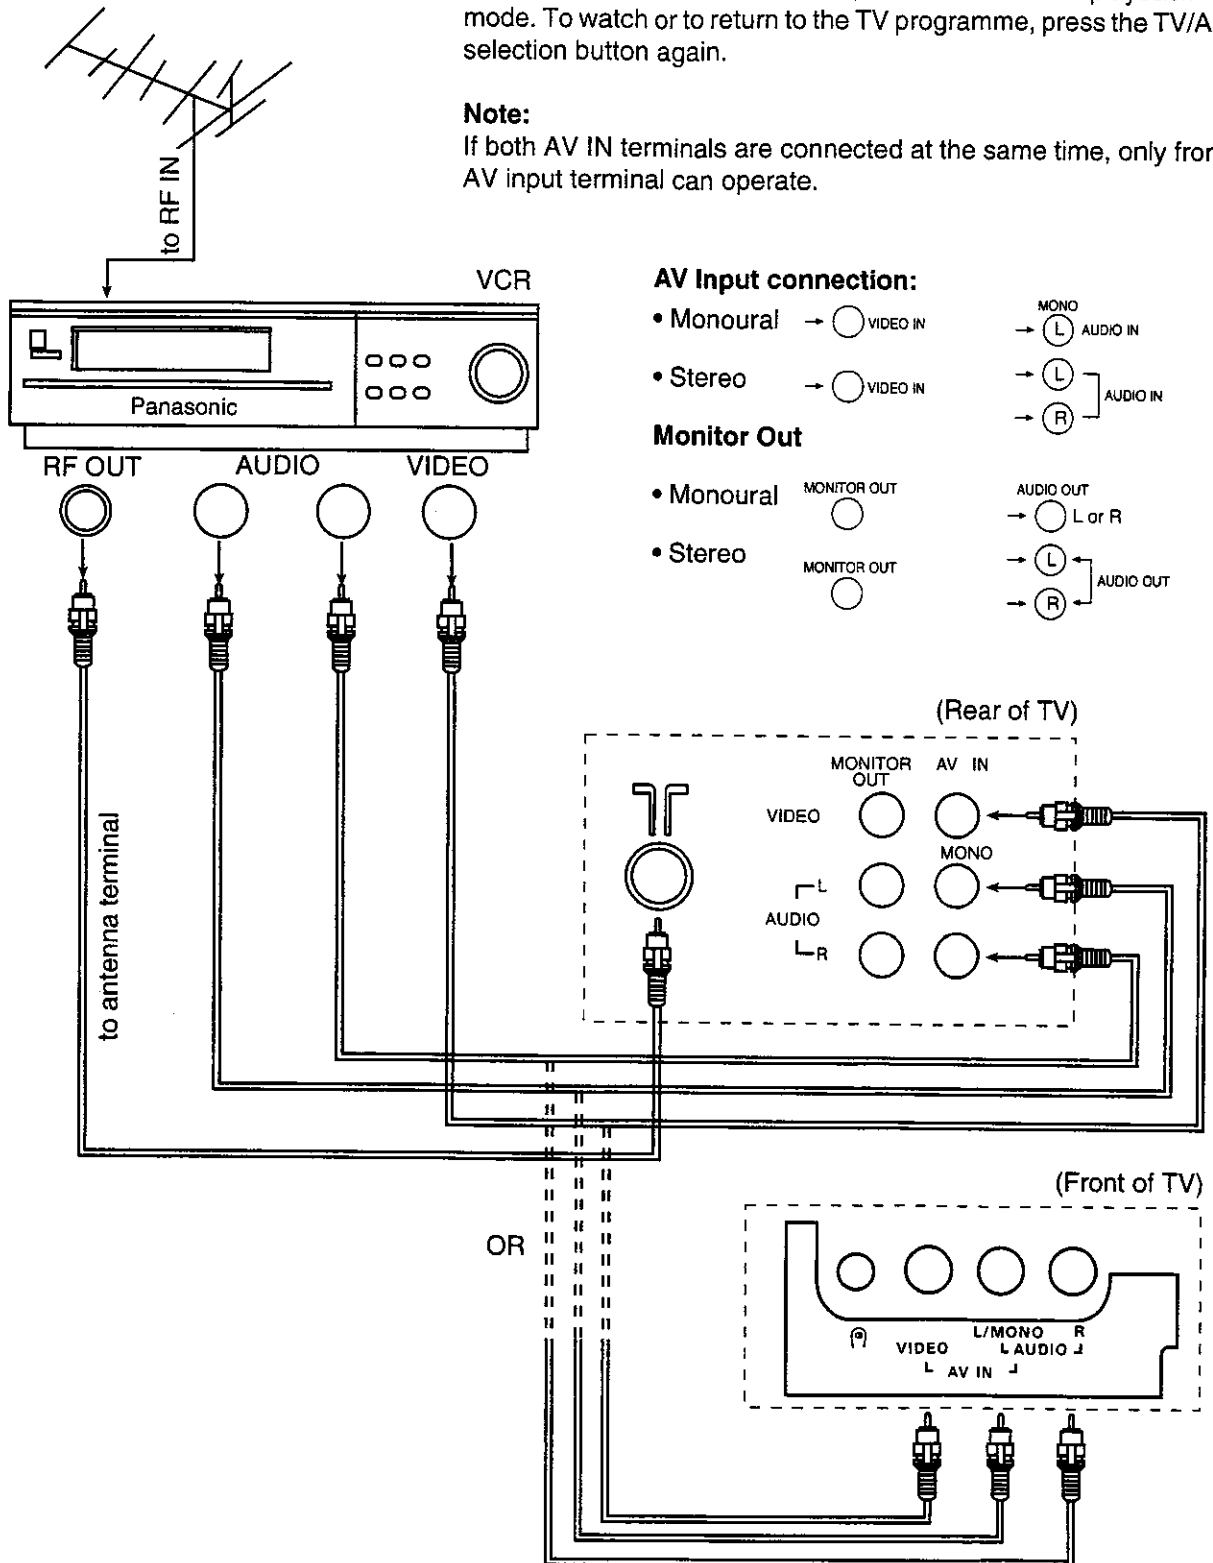


Recording

Follow the connection shown below when you want to copy a programme from another tape (VCR). You can either use the AV input at the back or the front of the TV.

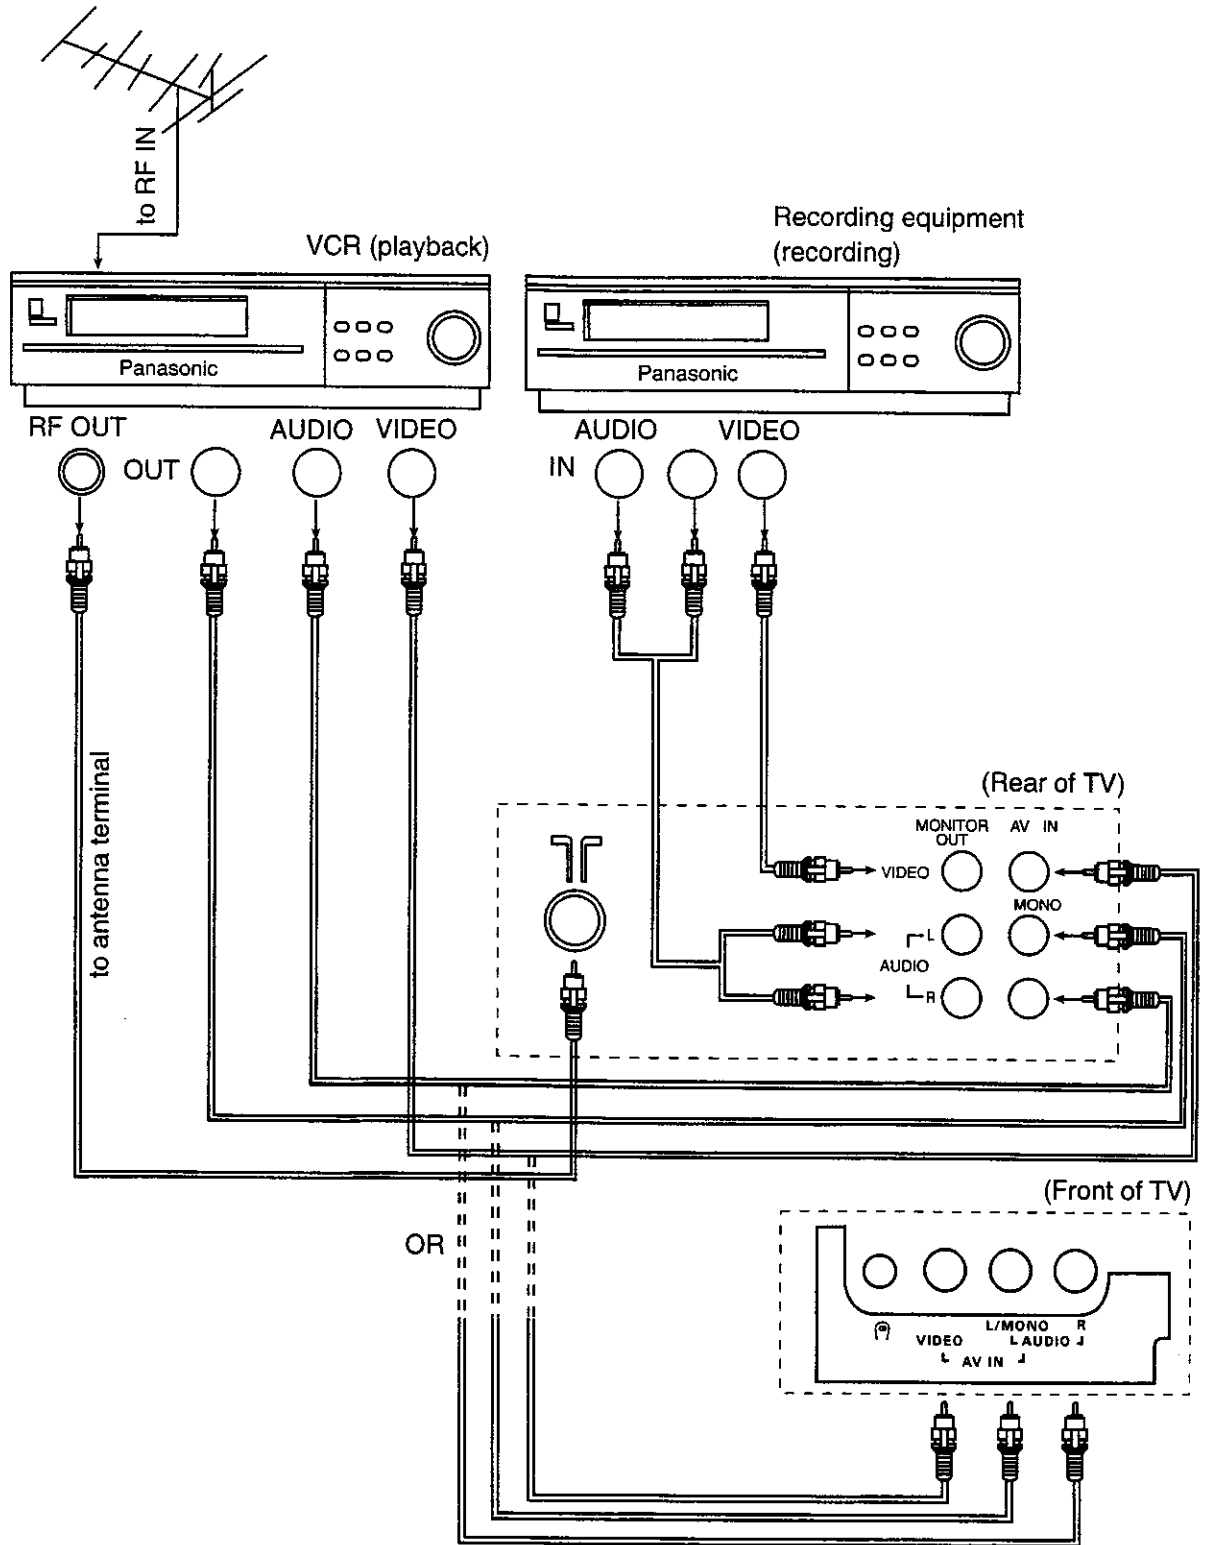


Location of Control (TV)

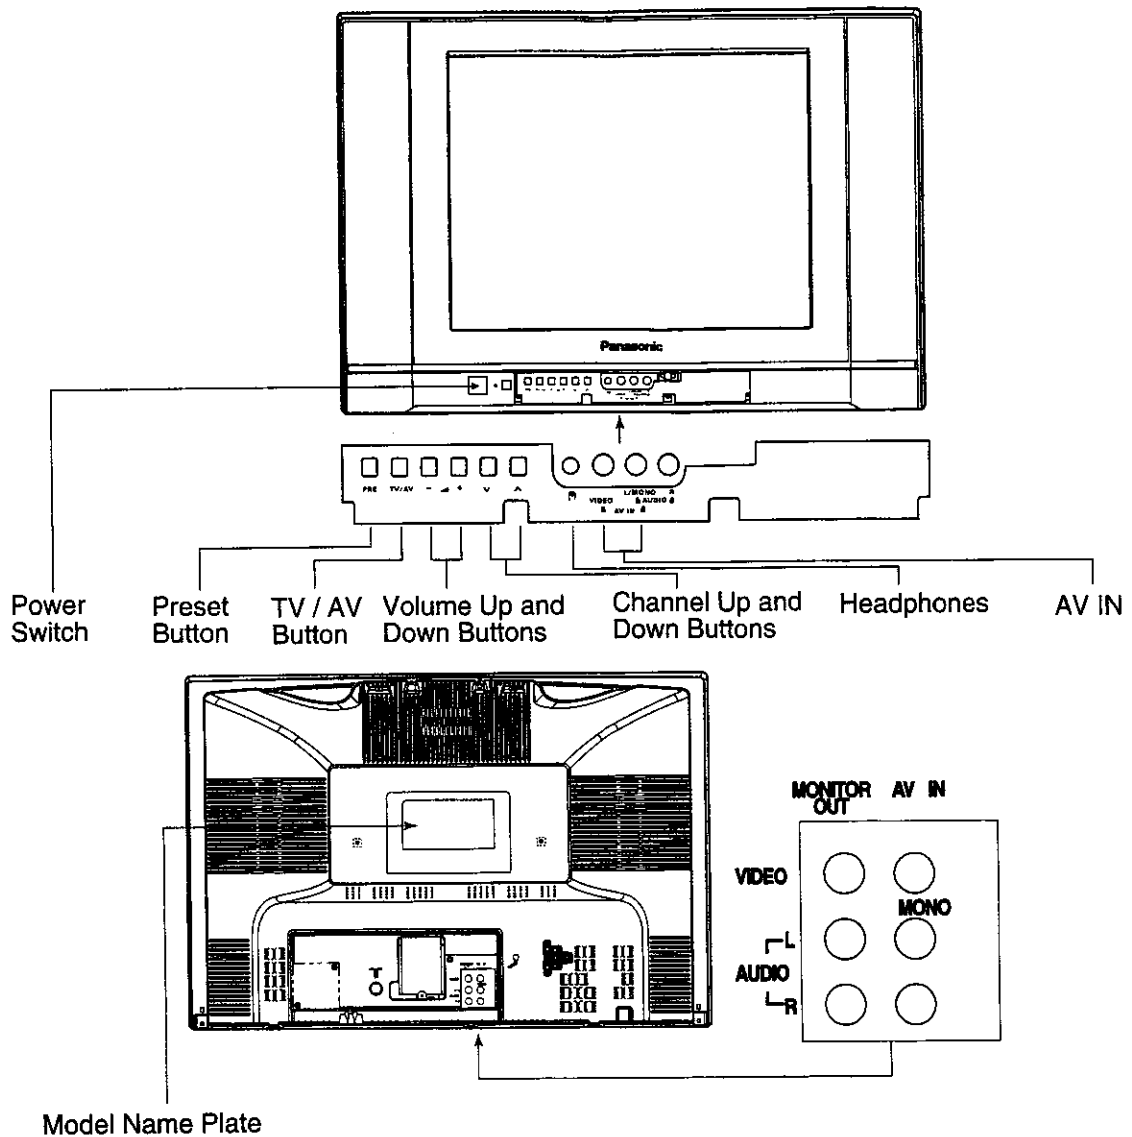





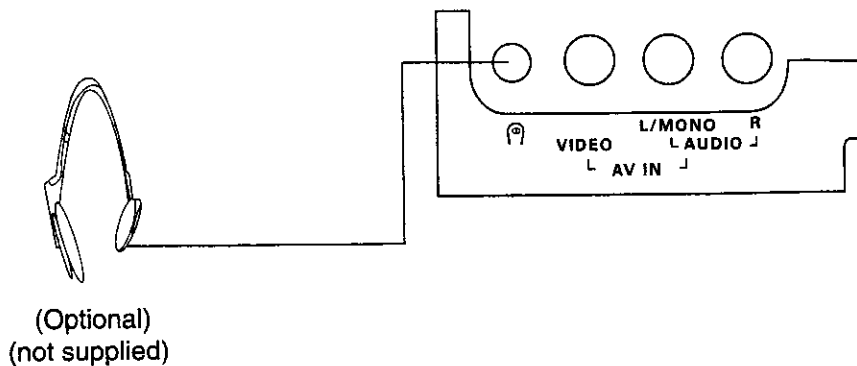





 
 




 







 



 
 




 



 
 


 
 
 


 


 





 






Connecting Headphones

When a headphones plug is inserted into the Headphones socket all speakers will be automatically disconnected; only the Headphones will function.




Flow Chart of Main Menu

  
When the "MAIN MENU" button is pressed at the main menu screen, the screen display will return to the normal viewing condition. When the "MAIN MENU" button is pressed at each MENU screen (Picture, Sound, Features, Language, Preset), the screen display will return to the Main Menu screen.

Press	MAIN MENU 				
Select					
Symbol Mark					
On-Screen Indication	PICTURE	SOUND	FEATURES	LANGUAGE ENGLISH #2 РУССКИЙ العربية	PRESET
Press	▽				
On-Screen Indication (example)	<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">PICTURE</p> <p>MENU DYNAMIC</p> <p> 32 COLOUR</p> <p> 32 NTSC-TINT</p> <p> 32 BRIGHT</p> <p> 63 CONTRAST</p> <p> 32 SHARPNESS</p> <p>COLOUR TEMP. STD</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">PICTURE</p> <p>MENU DYNAMIC</p> <p> 32 COLOUR</p> <p> 32 NTSC-TINT</p> <p> 32 BRIGHT</p> <p> 63 CONTRAST</p> <p> 32 SHARPNESS</p> <p>COLOUR TEMP. STD</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">PICTURE</p> <p>MENU DYNAMIC</p> <p> 32 COLOUR</p> <p> 32 NTSC-TINT</p> <p> 32 BRIGHT</p> <p> 63 CONTRAST</p> <p> 32 SHARPNESS</p> <p>COLOUR TEMP. STD</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">PICTURE</p> <p>MENU DYNAMIC</p> <p> 32 COLOUR</p> <p> 32 NTSC-TINT</p> <p> 32 BRIGHT</p> <p> 63 CONTRAST</p> <p> 32 SHARPNESS</p> <p>COLOUR TEMP. STD</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">PICTURE</p> <p>MENU DYNAMIC</p> <p> 32 COLOUR</p> <p> 32 NTSC-TINT</p> <p> 32 BRIGHT</p> <p> 63 CONTRAST</p> <p> 32 SHARPNESS</p> <p>COLOUR TEMP. STD</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">PICTURE</p> <p>MENU DYNAMIC</p> <p> 32 COLOUR</p> <p> 32 NTSC-TINT</p> <p> 32 BRIGHT</p> <p> 63 CONTRAST</p> <p> 32 SHARPNESS</p> <p>COLOUR TEMP. STD</p> </div> <div style="border: 1px solid black; padding: 2px;"> <p style="text-align: center;">PICTURE</p> <p>MENU DYNAMIC</p> <p> 32 COLOUR</p> <p> 32 NTSC-TINT</p> <p> 32 BRIGHT</p> <p> 63 CONTRAST</p> <p> 32 SHARPNESS</p> <p>COLOUR TEMP. STD</p> </div>	<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">SOUND</p> <p>MENU SPEECH</p> <p> 36 BASS</p> <p> 36 TREBLE</p> <p> 32 BALANCE</p> <p>V. HYPER BASS OFF</p> <p>LOUDNESS ON</p> <p>AVL OFF</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">SOUND</p> <p>MENU SPEECH</p> <p> 36 BASS</p> <p> 36 TREBLE</p> <p> 32 BALANCE</p> <p>V. HYPER BASS OFF</p> <p>LOUDNESS ON</p> <p>AVL OFF</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">SOUND</p> <p>MENU SPEECH</p> <p> 36 BASS</p> <p> 36 TREBLE</p> <p> 32 BALANCE</p> <p>V. HYPER BASS OFF</p> <p>LOUDNESS ON</p> <p>AVL OFF</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">SOUND</p> <p>MENU SPEECH</p> <p> 36 BASS</p> <p> 36 TREBLE</p> <p> 32 BALANCE</p> <p>V. HYPER BASS OFF</p> <p>LOUDNESS ON</p> <p>AVL OFF</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">SOUND</p> <p>MENU SPEECH</p> <p> 36 BASS</p> <p> 36 TREBLE</p> <p> 32 BALANCE</p> <p>V. HYPER BASS OFF</p> <p>LOUDNESS ON</p> <p>AVL OFF</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">SOUND</p> <p>MENU SPEECH</p> <p> 36 BASS</p> <p> 36 TREBLE</p> <p> 32 BALANCE</p> <p>V. HYPER BASS OFF</p> <p>LOUDNESS ON</p> <p>AVL OFF</p> </div> <div style="border: 1px solid black; padding: 2px;"> <p style="text-align: center;">SOUND</p> <p>MENU SPEECH</p> <p> 36 BASS</p> <p> 36 TREBLE</p> <p> 32 BALANCE</p> <p>V. HYPER BASS OFF</p> <p>LOUDNESS ON</p> <p>AVL OFF</p> </div>	<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">FEATURES</p> <p>BLUE BACK ON</p> <p>CH COLOUR SET STD</p> <p>CHILD LOCK OFF</p> <p>VCR/GAME OFF</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">FEATURES</p> <p>BLUE BACK ON</p> <p>CH COLOUR SET STD</p> <p>CHILD LOCK OFF</p> <p>VCR/GAME OFF</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">FEATURES</p> <p>BLUE BACK ON</p> <p>CH COLOUR SET STD</p> <p>CHILD LOCK OFF</p> <p>VCR/GAME OFF</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">FEATURES</p> <p>BLUE BACK ON</p> <p>CH COLOUR SET STD</p> <p>CHILD LOCK OFF</p> <p>VCR/GAME OFF</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">FEATURES</p> <p>BLUE BACK ON</p> <p>CH COLOUR SET STD</p> <p>CHILD LOCK OFF</p> <p>VCR/GAME OFF</p> </div> <div style="border: 1px solid black; padding: 2px;"> <p style="text-align: center;">FEATURES</p> <p>BLUE BACK ON</p> <p>CH COLOUR SET STD</p> <p>CHILD LOCK OFF</p> <p>VCR/GAME OFF</p> </div>	<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">LANGUAGE</p> <p>ENGLISH</p> <p>#2</p> <p>РУССКИЙ</p> <p>العربية</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">LANGUAGE</p> <p>ENGLISH</p> <p>#2</p> <p>РУССКИЙ</p> <p>العربية</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">LANGUAGE</p> <p>اللغة</p> <p>ENGLISH</p> <p>#2</p> <p>РУССКИЙ</p> <p>العربية</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">LANGUAGE</p> <p>اللغة</p> <p>ENGLISH</p> <p>#2</p> <p>РУССКИЙ</p> <p>العربية</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">LANGUAGE</p> <p>اللغة</p> <p>ENGLISH</p> <p>#2</p> <p>РУССКИЙ</p> <p>العربية</p> </div> <div style="border: 1px solid black; padding: 2px;"> <p style="text-align: center;">LANGUAGE</p> <p>اللغة</p> <p>ENGLISH</p> <p>#2</p> <p>РУССКИЙ</p> <p>العربية</p> </div>	<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">PRESET</p> <p>1</p> <p>AUTO TUNE</p> <p>MANUAL TUNE</p> <p>SOUND SYS 5.5MHz</p> <p>COLOUR SYS AUTO</p> <p>FINE TUNE</p> <p>SKIP OFF</p> <p>POS. CHANGE 1</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">PRESET</p> <p>1</p> <p>AUTO TUNE</p> <p>MANUAL TUNE</p> <p>SOUND SYS 5.5MHz</p> <p>COLOUR SYS AUTO</p> <p>FINE TUNE</p> <p>SKIP OFF</p> <p>POS. CHANGE 1</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">PRESET</p> <p>1</p> <p>AUTO TUNE</p> <p>MANUAL TUNE</p> <p>SOUND SYS 5.5MHz</p> <p>COLOUR SYS AUTO</p> <p>FINE TUNE</p> <p>SKIP OFF</p> <p>POS. CHANGE 1</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">PRESET</p> <p>1</p> <p>AUTO TUNE</p> <p>MANUAL TUNE</p> <p>SOUND SYS 5.5MHz</p> <p>COLOUR SYS AUTO</p> <p>FINE TUNE</p> <p>SKIP OFF</p> <p>POS. CHANGE 1</p> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <p style="text-align: center;">PRESET</p> <p>1</p> <p>AUTO TUNE</p> <p>MANUAL TUNE</p> <p>SOUND SYS 5.5MHz</p> <p>COLOUR SYS AUTO</p> <p>FINE TUNE</p> <p>SKIP OFF</p> <p>POS. CHANGE 1</p> </div> <div style="border: 1px solid black; padding: 2px;"> <p style="text-align: center;">PRESET</p> <p>1</p> <p>AUTO TUNE</p> <p>MANUAL TUNE</p> <p>SOUND SYS 5.5MHz</p> <p>COLOUR SYS AUTO</p> <p>FINE TUNE</p> <p>SKIP OFF</p> <p>POS. CHANGE 1</p> </div>
	<p>Note: The menu screen function of Bright, Contrast, Bass, Treble, Balance, V.Hyper Bass, Loudness, AVL, Blue Back, CH Colour Set, VCR/Game, Language and Fine Tune are applicable in teletext mode.</p>				

General Operation

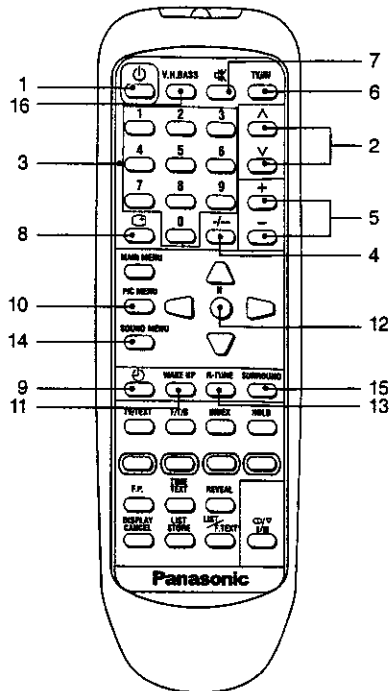

 1.




To Switch Power on/off

The TV set must be switched on at the wall outlet and at the Main power switch. Press this button to turn the TV set ON, from stand-by mode. Press it again to turn off.

Note:


When in the stand-by condition, it is possible to turn the TV set on by pressing the Direct Programme Number Selection button (0-9) or the Programme Number Up and Down button.

2.

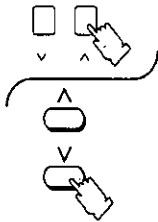


Programme Number Selection

Press the Programme Number Up "∧" or Down "∨" button to select the next higher or lower Programme Number.

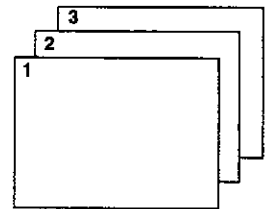

 3.




Direct Programme Number Selection (0 – 9)

e.g. To select Programme Number "1", press the "1" button.



 4.



Two Digit Programme Number Selection


e.g. To select Programme Number "24".

Press the button.













Press the button.

Press the button.

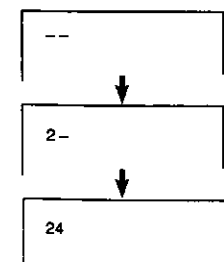Setting range 0 ~ 99

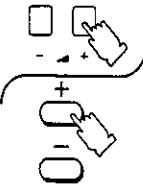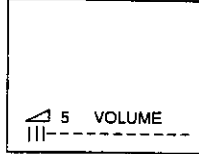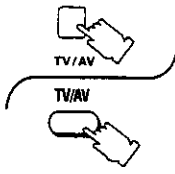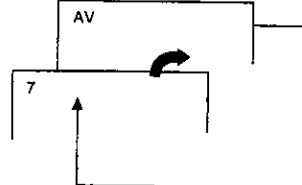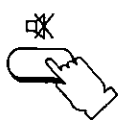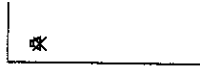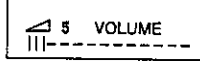

General Operation

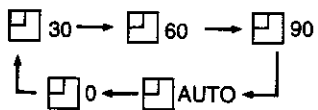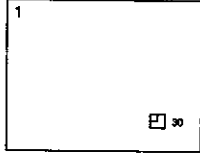- 5. Volume Adjustment**

 Press the Volume Up or Down button to increase or decrease the sound volume level.

- 6. TV / AV Selection**

 Press the "TV/AV" button to select TV and AV input signal modes sequentially.

- 7. Sound Mute Button**

 Press this button to mute the Sound completely.
 Press the button once again to restore the previous sound level, and cancel the mute.

 The "Mute" symbol will appear. (Colour changes to Red)

- 8. Recall Button**

 Press the RECALL button to display the current system status. Press this button until display is cancelled.
- 9. Off-Timer Button**

 The TV set may be preset to switch to stand-by after a fixed period.
 By pressing "Off-Timer" button, you can select the preset time either 30, 60, or 90 minutes.




Note:

 
Setting Off-timer to AUTO mode. If the set is not switched off, when the TV station ends broadcasting, it will automatically go to the stand-by condition after 5 minutes. This AUTO mode will not operate when the TV receiver is in AV mode.

How to cancel the Off-Timer setting:

1. Set the preset time condition to "0" mode by pressing the Off-Timer button.
2. Turning the TV set off.

General Operation

10. PIC MENU



Picture Menu Operation

By pressing the PICTURE MENU button, you can sequentially select the Picture menus as shown below:

On-screen	Function
MENU DYNAMIC	For watching in brighter environments. This menu selects a higher than normal level of contrast.
MENU STANDARD	For watching in normal (evening) environments. This menu selects normal level of contrast.
MENU SOFT	For watching in dark environments. This menu selects reduced level of contrast.

11. WAKE UP



Wake Up Timer Button

1. Press the "WAKE UP TIMER" button.
2. Press the position left or right button to select the Wake Up Timer. (Wake Up Timer will increase or decrease by 10 minutes when left or right button is pressed.)




Note:

Wake Up Timer can be set up to 12 hours.


3. After setting the Wake Up Timer, switch the TV set to stand-by mode. (LED light will blink ON and OFF during stand-by mode.)
4. When the time Wake Up Timer has elapsed in the set will automatically switch on. (Press any button to cancel the Wake Up Timer on screen display.)

Note:

- i) After the Wake Up Timer is set and the TV mode is still not switched off, the Wake Up Timer will continue to count down until the timer is off.
 - ii) When Wake Up Timer switch ON the TV set, the off-timer is set to 90 minutes mode automatically. Press any button to cancel the off-timer. If no button is pressed, the TV set will switch off automatically after 90 minutes.
5. To cancel the Wake Up Timer. You can choose any of the following:
 - i) Switch off the main power.
 - ii) Press the position left or right button, until OFF is reached.
 - iii) Press the Normalize button when Wake Up Timer OSD is displayed.

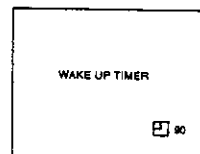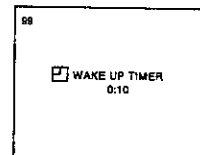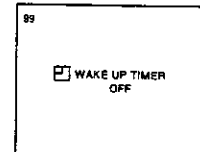

 12. N



Normal (N) Button

By pressing the Normal "N" button on the Remote Control while Picture or Sound Control Function is displayed, the selected function will be changed to the Normal Mode. Normalization will not occur if the function is not displayed when the "N" button is pressed. The Normal mode is the factory preset condition. Returning to this original condition is called "Normalization".

13. R-TUNE



Rapid Tune Button

Press the button to access previously viewed channel.

PRESENT CHANNEL
BEING VIEWED

 


LAST VIEWED
CHANNEL



General Operation

14. SOUND MENU




Sound Menu Operation

By pressing the SOUND MENU button, you can sequentially select the Sound menus as shown below:

On-screen	Function
MENU MUSIC	For music programme for example.
MENU SPEECH	For News programme for example.
MENU MOVIES	For movies programme for example.

 15. SURROUND




Surround Sound Operation

The benefit of surround sound are enormous. With additional speakers you can be completely enveloped in sound; just as if you were at a concert hall or cinema. The surround effect does operate without external surround speakers, but is enhanced when they are connected. Such near surround speakers should not be sited in direct proximity to the listeners.

On-screen display during surround mode.

	Type of broadcast	ON-Screen display
TV mode	MONO	MONO SURROUND ↕ SURROUND OFF
	STEREO	STEREO SURROUND ↕ SURROUND OFF
AV mode	Select AV mode	STEREO SURROUND ↕ MONO SURROUND ↕ SURROUND OFF

 16. V.H.BASS




V.H.BASS button.



Refer to page 23.

Tuning Procedure


Automatic Tune

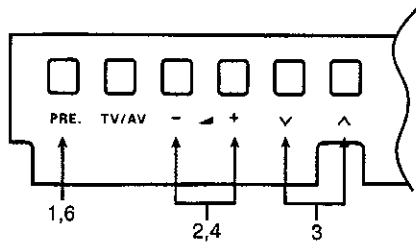


OR

 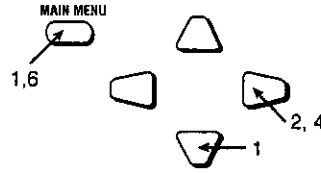

1. Press the "PRE." (PRESET) button, until "AUTO TUNE" function is selected.

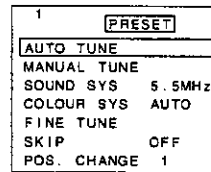


Channel Number Automatic Tune condition.

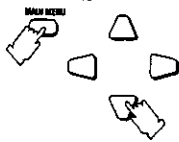

Press the "MAIN MENU" and "Position" buttons, until "AUTO TUNE" function is selected.



2. Press the Volume Up "+" or Down "-" button.

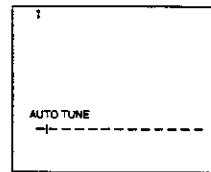


Search start.


The best tuning position is automatically memorized.



Press the Position Right button.

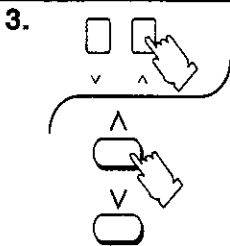


3. After all stations are tuned, the on-screen display will automatically change from "AUTO TUNE" to "SOUND SYS" Position. Confirm the sound condition of each Programme Number by using the Programme Number Up "^" Button.

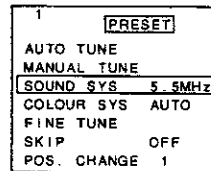


If the Sound is not clear or no sound is produced on a Programme Number, then follow the next Step 4.

 
Note:
When sound volume is too small to confirm, turn it up by using the sound volume button on the Remote Control.



4. If necessary, press the Volume Up "+" or Down "-" button to improve the Sound quality.

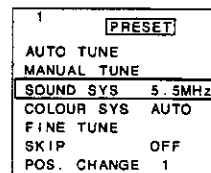

 The sound indicator will change as follows:



Press the Position Left or Right button to improve the sound quality.



5. Use the Programme Number Up "^" button to sequentially check each station. If necessary repeat step 3 to 4 for each Programme Number.



6. Press the "PRE." (PRESET) button 5 times.




This returns the set to the normal viewing condition.




After all stations are tuned, press the "MAIN MENU" button twice.


Tuning Procedure


Manual Tune

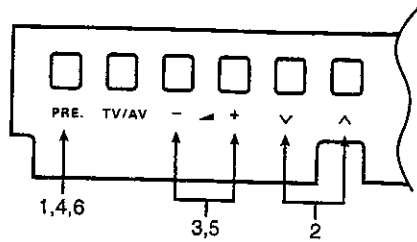


OR

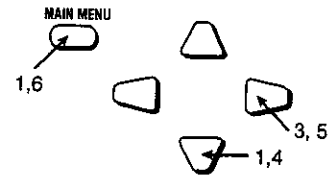


- 1.**  Press the "PRE." (PRESET) button twice, setting the Manual Tune mode.


 Press the "MAIN MENU" and "Position" buttons, until "MANUAL TUNE" function is selected.

1	PRESET
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF
POS. CHANGE	1

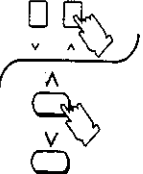Channel Number Manual Tune condition.
- 2.**  Press either the Channel Up or Down button.

2	PRESET
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF
POS. CHANGE	2


Select the desired Channel Number.
- 3.**  Press the Volume Up "+" or Down "-" button.
Volume "+": Next higher Channel
Volume "-": Next lower Channel


 Press the Position Left or Right button.
Position Left : Next lower Channel.
Position Right : Next higher Channel.

2	
MANUAL TUNE	


Search start.


2	PRESET
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF
POS. CHANGE	2

The best tuning position is automatically memorized.
- 4.**  Press the "PRE." (PRESET) button.

 Press the "Position" button until "SOUND SYS" function is selected.


2	PRESET
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF
POS. CHANGE	2


"SOUND SYS" condition.
- 5.**  If the sound is not clear or no sound is produced on a Programme Number Position, press the Volume Up "+" or Down "-" button.


 Press the Position Left or Right button, to improve the sound quality.

2	PRESET
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF
POS. CHANGE	2

You may improve the Sound quality. The sound indicator will change as follows.

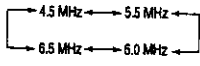

Note: When sound volume is too small to confirm, turn it up by using the sound volume button on the Remote Control.
- 6.**  Press the "PRE." (PRESET) button 5 times.


 Press the "MAIN MENU" button twice.

--	--


This returns the set to the normal viewing condition.

Tuning Procedure


Fine Tune

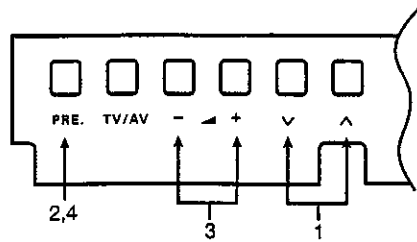


OR

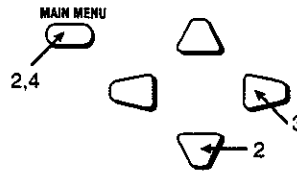


Under normal reception condition, this function is not used. However, in areas of poor reception or constant interference, a slight adjustment on the fine tuning can improve the picture and sound quality.

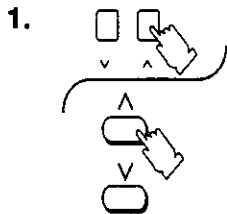


1. Select the channel which you want to try to improve, using the Channel Up or Down buttons.

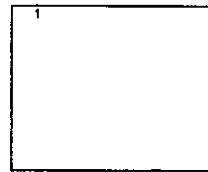


Select the desired Channel Number.

 


2. Press the "PRE." (PRESET) button 5 times, setting the Preset Menu to "FINE TUNE".

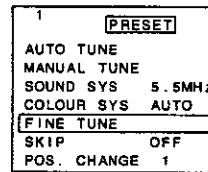

Fine Tune condition.

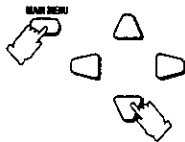

Press the "MAIN MENU" and "Position" buttons, until "FINE TUNE" is selected.

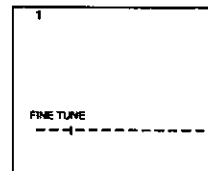


Fine Tune start.



3. Press the Volume Up "+" or Down "-" button until the clear picture is received.



Press the Position Left or Right button until the clear picture is received.

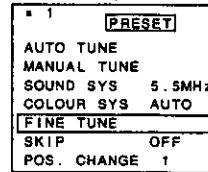

The AFC function is deactivated. The "m" symbol appears to the left of the Channel Number.



4. Press the "PRE." (PRESET) button 3 times.




This returns the set to the normal viewing condition.




After all stations are tuned, press the "MAIN MENU" button twice.

Tuning Procedure


How to Cancel the Fine Tuning

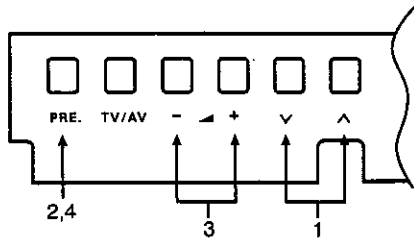


OR

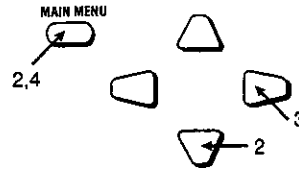


Canceling previously adjusted (manually) Fine Tuning, means reactivating the AFC (Automatic Frequency Control) Function, also known as AFT (Automatic Frequency Tuning). Reactivating the Automatic Fine Tuning means allowing the set to automatically tune optimum tuning position, for that Channel Number.

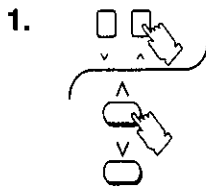


Select the "AFC OFF" Channel Number which you want to return to Automatic Frequency Control (Cancel the manual fine tuning).

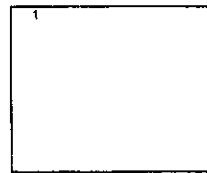

 
"AFC OFF" Channel Numbers are indicated to you by the "■" symbol to the left of the Channel Number.




Press the "PRE." (PRESET) button twice, setting the Preset Menu to set to "MANUAL TUNE" mode.

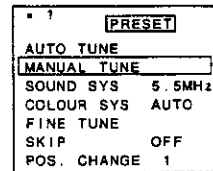


Manual Tune condition.

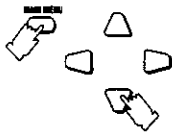

 Press the "MAIN MENU" and "Position" buttons, until "MANUAL TUNE" function is selected.




Press the Volume Up "+" or Down "-" button briefly.

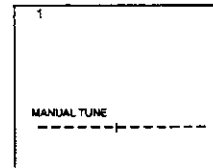

The best tuning position is automatically memorized.



Press the Position Left or Right button briefly.

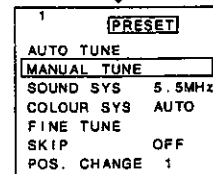

Press the "PRE." (PRESET) button 6 times.



This returns the set to the normal viewing condition.


MAIN MENU




Press the "MAIN MENU" button twice.

Tuning Procedure


How to Skip Programme Number

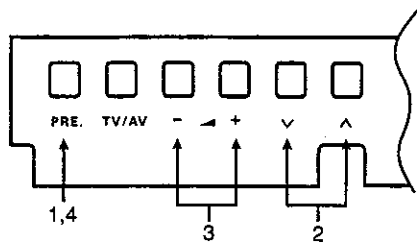

OR

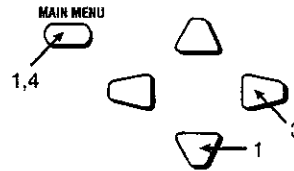


1. Press the "PRE." (PRESET) button 6 times, setting the Preset Menu to "SKIP".

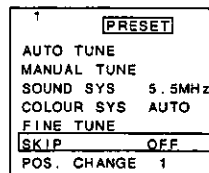



Channel Skip condition.




- Press the "MAIN MENU" and "Position" buttons, until the Preset Menu to "SKIP".

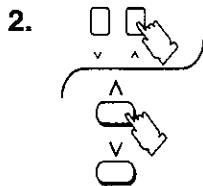

 2. Select a Programme Number you want to skip, by pressing the Channel Number Up or Down buttons.

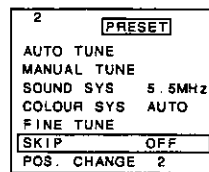

3. Press the Volume Up "+" or Down "-" button.

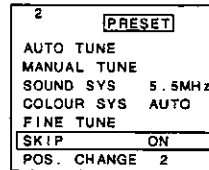


The displayed "OFF" condition changes to "ON".



- Press the Position Left or Right button.



4. Press the "PRE." button 2 times.

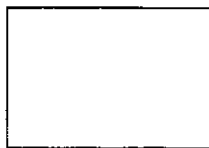


This returns the set to the normal viewing condition.




- Press the "MAIN MENU" button twice.

Tuning Procedure

How to Cancel the Skip Function

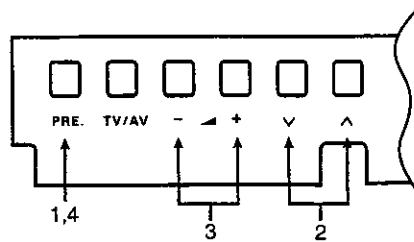

OR

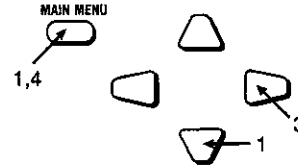


1.



Press the "PRE." (PRESET) button 6 times, setting the Preset Menu to "SKIP".


1	PRESET
AUTO TUNE	
MANUAL TUNE	
SOUND SYS 5.5MHz	
COLOUR SYS AUTO	
FINE TUNE	
SKIP OFF	
POS. CHANGE 1	

Channel Skip condition.

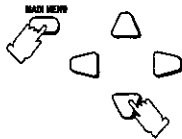

Press the "MAIN MENU" and "Position" buttons, until "SKIP" is selected.


2.

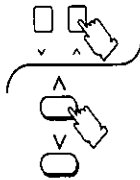

Select the skipped Programme Number, by pressing the Channel Number Up or Down buttons.

2	PRESET
AUTO TUNE	
MANUAL TUNE	
SOUND SYS 5.5MHz	
COLOUR SYS AUTO	
FINE TUNE	
SKIP ON	
POS. CHANGE 2	

 3.



Press the Volume Up "+" or Down "-" button.

2	PRESET
AUTO TUNE	
MANUAL TUNE	
SOUND SYS 5.5MHz	
COLOUR SYS AUTO	
FINE TUNE	
SKIP OFF	
POS. CHANGE 2	

The displayed "ON" condition changes to "OFF".



Press the Position Left or Right button.

Repeat step 2 and 3, if you wish to cancel the Skip function on any other Programme Number.

4.



After the Skip Cancel operation is completed, press the "PRE." (PRESET) button twice.



This returns the set to the normal viewing condition.

MAIN MENU




After the Skip Cancel Operation is completed, press the "MAIN MENU" button twice.


Tuning Procedure

Colour System Selection

Use this function if a clear picture with weak colour is obtained when a Broadcast or AV signal is received.

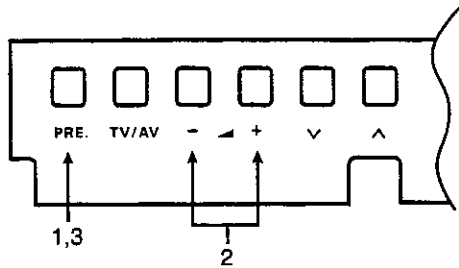

OR

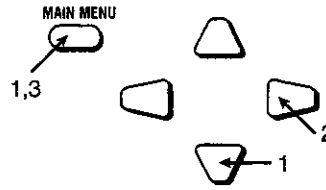


1. Press the "PRE." (PRESET) button 4 times.



1	PRESET
	AUTO TUNE
	MANUAL TUNE
	SOUND SYS 5.5MHz
	COLOUR SYS AUTO
	FINE TUNE
	SKIP OFF
	POS. CHANGE 1

Colour System condition.

Press the "MAIN MENU" and "Position" buttons, until "COLOUR SYS" is selected.

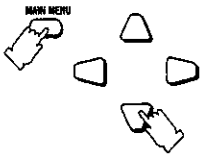

2. Press the Volume Up "+" or Down "-" button repeatedly until the optimum image is produced.



1	PRESET
	AUTO TUNE
	MANUAL TUNE
	SOUND SYS 5.5MHz
	COLOUR SYS AUTO
	FINE TUNE
	SKIP OFF
	POS. CHANGE 1

The Colour System will change as shown:

AUTO ↔ PAL ↔ SECAM
↓ ↓
NTSC 3.58 ↔ NTSC 4.43

Press the Position Left or Right button repeatedly until the optimum image is obtained.



3. Press the "PRE." (PRESET) button 4 times.



This returns the set to the normal viewing condition.

This selected Colour System is automatically memorized.

Press the "MAIN MENU" button twice.



Tuning Procedure

Pos. Change


This feature will enable the user to swap (Exchange) channel memory of 2 selected channels. The position change function allows one to shift from the present channel to any Programme Number without any tuning process.

1. Press the "PRE." (PRESET) button 7 times.




1	PRESET
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF
POS. CHANGE	1

Press the "MAIN MENU" and "Position" buttons, until "POS. CHANGE" is selected.

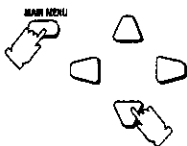


2. Select a Programme Number you want to change by pressing either Channel Up or Down button, two digit programme selection or Direct Programme number selection on the Remote Control. (Position change will only exist in preset mode).

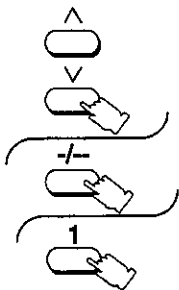

1	PRESET
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF
POS. CHANGE	12

Note: Position change also can operated using panel key. Use PRESET key to enter POSITION CHANGE, then, use Volume Up/Down to change the channel to be swapped to. Use TV/AV to confirm.

3. Press the "TV/AV" button to confirm.

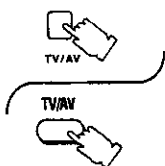


12	PRESET
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF
POS. CHANGE	12

This returns the set to the normal viewing condition.

Press the "PRE." (PRESET) button once.




 Press the "MAIN MENU" button twice.



Advanced Remote Control Transmitter Operation

Picture Menu Operation

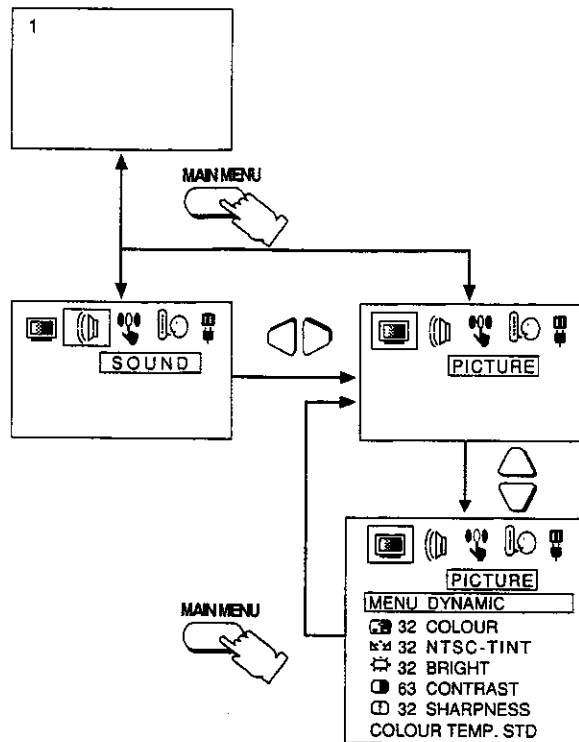

Picture Menu


Press	Item	Effect	Indicator
Select	MENU DYNAMIC		MENU DYNAMIC
Select	COLOUR		
Select	NTSC-TINT		
Select	BRIGHT		
Select	CONTRAST		
Select	SHARPNESS		
Select	COLOUR TEMP. STD		COLOUR TEMP. STD

Helpful Hint

- By pressing the normal "N" button on the Remote Control while the Picture menu is displayed, the setting of the selected function will be return to factory setting level.

Advanced Remote Control Transmitter Operation

Sound Menu Operation

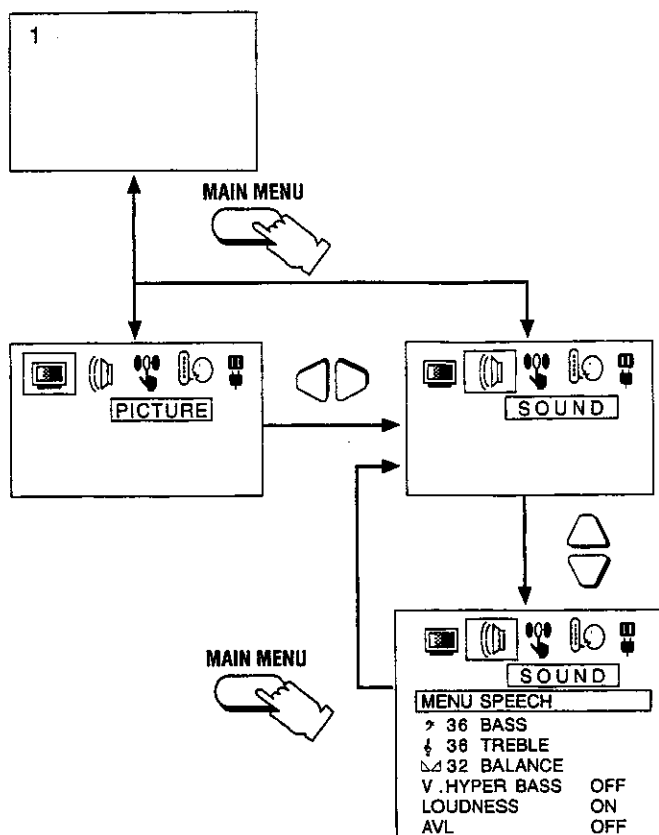

Sound Menu

Press	Item	Effect	Indicator
Select	BASS	Less More	36 BASS
Select	TREBLE	Less More	36 TREBLE
Select	BALANCE	Left SP. Right SP.	32 BALANCE
Select	V.HYPER BASS	ON ↔ OFF	V.HYPER BASS
Select	LOUDNESS	ON ↔ OFF	LOUDNESS
Select	AVL	ON ↔ OFF	AVL

V.HYPER BASS (VHB)

The Virtual Hyper Bass (VHB) create and reproduce lower and heavy bass sound by boosting up the low frequency. With VHB listener now can listen to the low and heavy bass which previously cannot. The V. HYPER BASS mode will change as shown:


ON ↔ OFF

AVL (Auto Volume Limiter)

The AVL function will limit the volume output for music, speech and movie at preset level when it is on.

Advanced Remote Control Transmitter Operation


Features Menu Operation

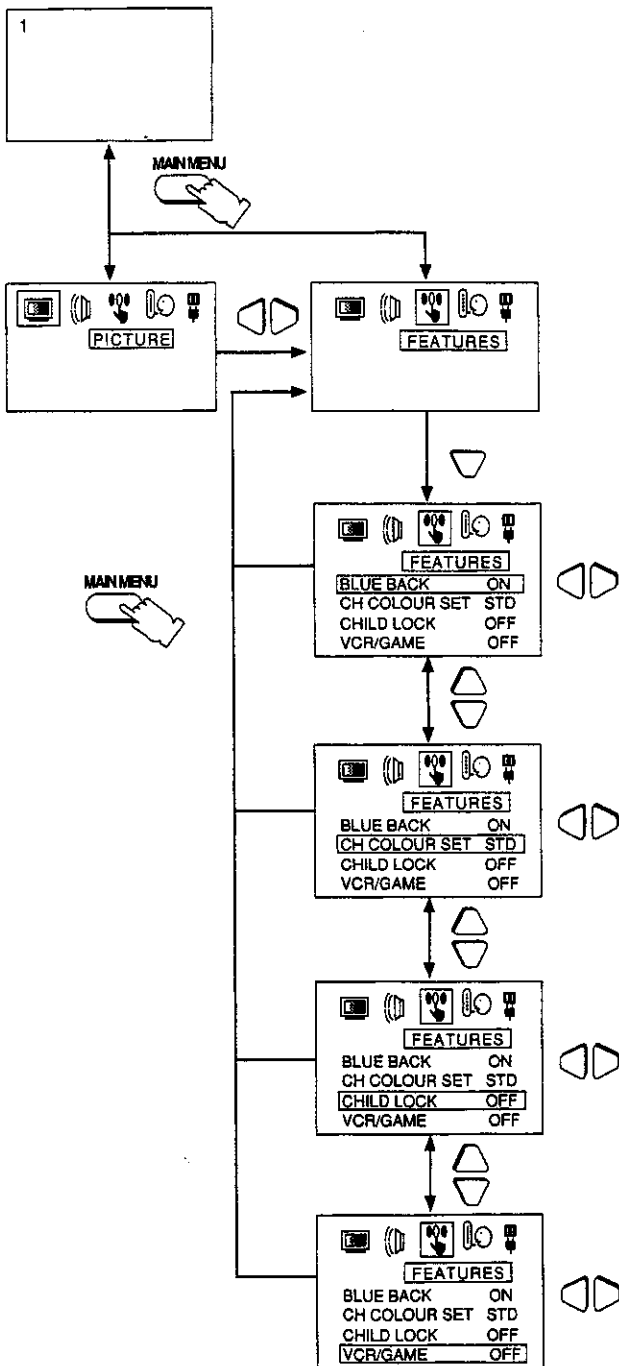

BLUE BACK Mode

When no picture signal is received, or the signal is weak, the screen reverts to a blue background colour and the sound is muted.

Disable this features to continue watching very weak signals.

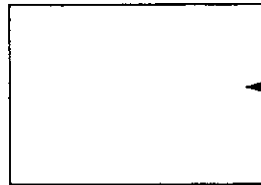

Blue background colour if no input picture signal or input signal is weak.

CH (Channel) COLOUR SET mode

Colour density varying between broadcast channels can be adjusted to three levels for each reception channel as follows :



CHILD LOCK mode

To child lock any channel, press the position left or right button.

- 1) When channel is "LOCK", sound is muted and screen becomes blue colour.
- 2) If any of the channels is CHILD LOCK, then preset key at any panel will not work. If preset key (Panel) is pressed, message "CHILD LOCK ON" will appear.
- 3) Main power ON in child locked channel will display "CHILD LOCK ON" on screen to remind user that the Child lock is On and is in Child locked channel.
- 4) Each channel has its own memory for channels to be child locked.

VCR/GAME mode

Reproduction of irregular signals, such as TV games and rental video tapes, may be improved. The VCR/GAME mode will change as shown.


ON ↔ OFF

Advanced Remote Control Transmitter Operation

Language Menu Operation

Language Menu

Press the "Position Up or Down" button. The on-screen language display will change as follows :

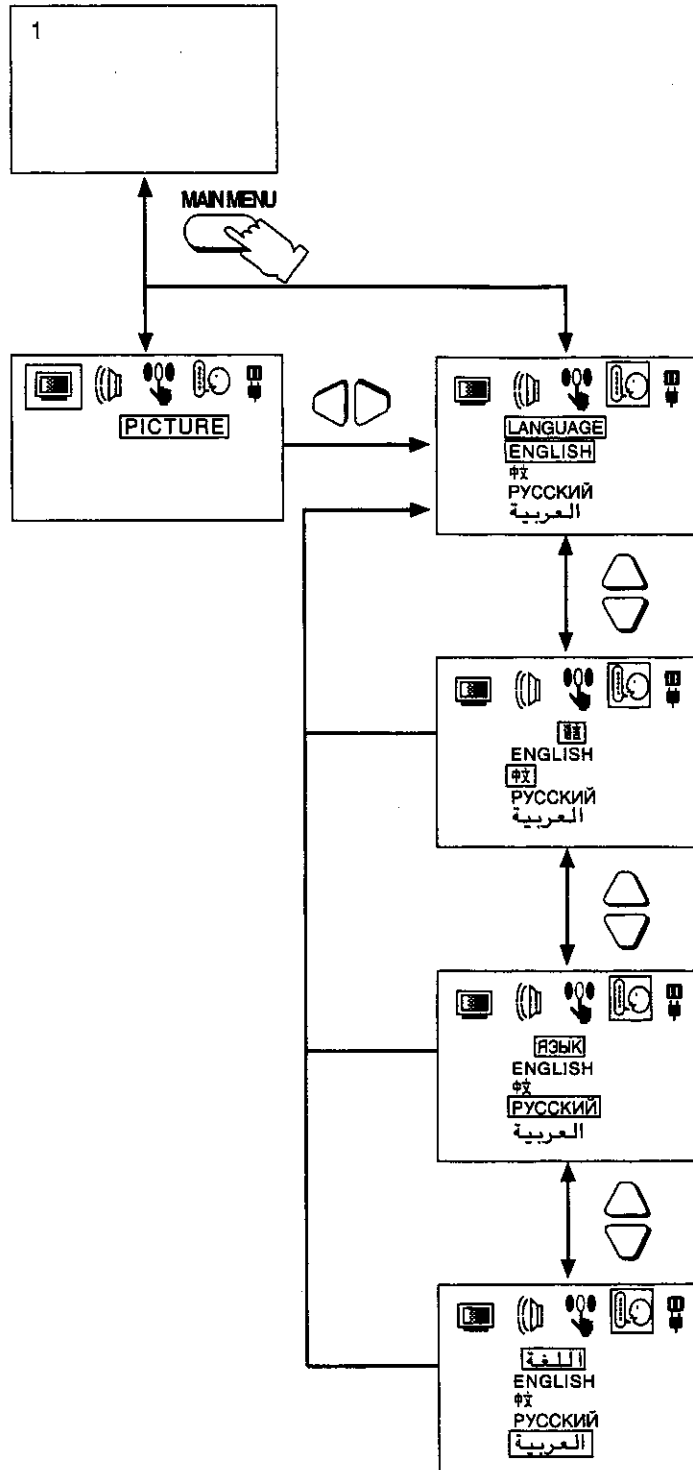

Advanced Remote Control Transmitter Operation

1. Stereo Reception



Stereo/Bilingual Sound Selection Button

Sound output modes can be selected by pressing the "Sound Selection" button. STEREO, BILINGUAL (if transmitted) and MONO modes can be selected using this button.

	Type of broadcast	ON-Screen Indication	Remarks
NICAM Digital Stereo	Regular Broadcast (Standard Audio)		Normal use.
	Regular + NICAM MONO I [MAIN <I>]		You can select either the "MAIN <I>" or "MONO" audio signal.
	NICAM STEREO		You can select either the "STEREO" or "MONO" mode.
	NICAM DUAL MONO MAIN <I> / SUB <II>		You can select either the "MAIN <I>", "SUB <II>" or "MONO".
A2 (German) Stereo	Regular Broadcast (Standard Audio)		Normal use.
	BILINGUAL or DUAL MONO MAIN <I> / SUB <II>		You can select either the "MAIN <I>" or "SUB <II>" audio signal.
	STEREO		You can select either the "STEREO" or "MONO" mode.

Teletext Operation

- Teletext features may vary depending on the Broadcasting Companies and is only available if the channel selected is transmitting Teletext.
- When in teletext mode, the volume may still be altered to the desired listening level.

What is LIST mode?


In LIST mode, four different coloured page numbers are situated at the bottom of the screen. Each of these numbers can be altered and stored in the TV's memory.

What is FASTEXT?

In FASTEXT mode, four differently coloured subjects are situated at the bottom of the display. To access more information about one of these subjects, press the appropriately coloured button. This facility enables fast access to information of the subjects shown.

What is the advantages?

- Page selection at the touch of a Colour-coded button.
- Easy to use step-by-step selection of the topics subject.
- Reduction of waiting time.
- Page status line at bottom of screen so you always know which button will take you to the desired information.

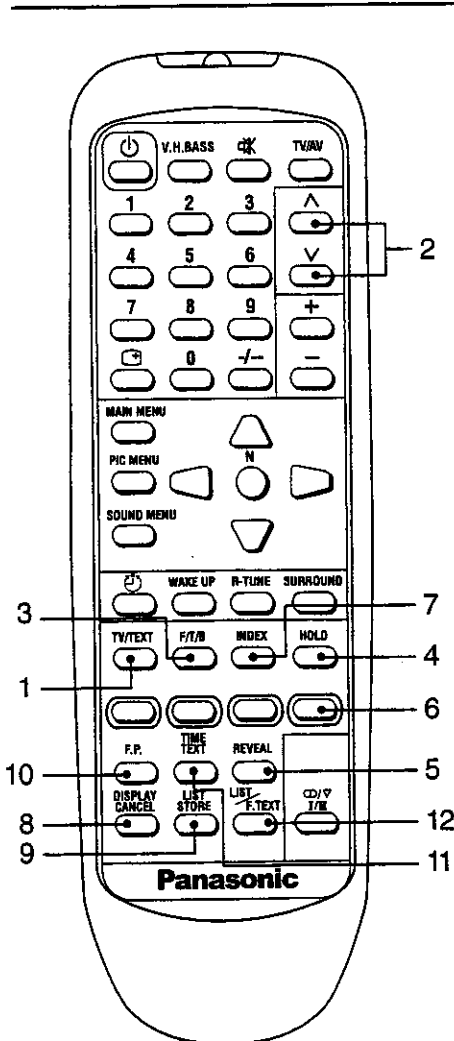


1. TV/TEXT




TV/Teletext mode

 By pressing the TV/TEXT button, to change the TV/Teletext mode as follows:



2.

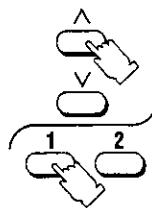


Page Selection

Page can be selected in two ways:

- Press the Up/Down buttons to increase or decrease the page number by one.
- By entering the page number, using 0 ~ 9 on the Remote Control.

 3.



Full/Top/Bottom

Press to expand the Top of the page.
Press again to expand the Bottom half.
Press again to return to normal (Full) size.

4.



Hold

Press to hold the current page.
Press again to cancel the hold.


5.



Reveal

Press to reveal hidden words.
e.g. quiz page answer.
Press again to hide.

6.

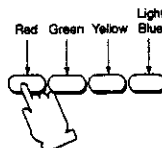

Colour-coded buttons

In Fastext mode these correspond to the differently coloured subjects.




7.



Index






Press INDEX to return to the main index page.

Teletext Operation

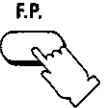8.  **Display Cancel**
Press the "DISPLAY CANCEL" button to view the normal TV programme. When the desired sub-page is received, the "TEXT" message appears at the top left of the screen.
-
9.  **List Store**
In LIST mode, the four page numbers can be altered for channel position. To do this, press one of the Colour-coded buttons and enter the new page number. Press and hold list store, the page number will change colour.
-
10.  **Favourite Page (F.P.)**
Stores a favourite page in memory for instant recall. To store such a page, the TV must be in LIST mode, press the Light Blue button, select the page number, then press List Store. The page number is now stored. Press F.P. button to recall this page.





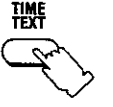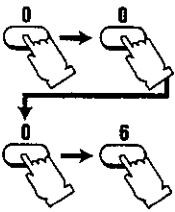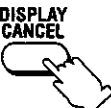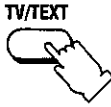













Sub Coded Page Access

The TEXT Menu will be displayed in TEXT mode. When teletext information exceeds more than one page, it may take some time for the automatic changing of the sub pages to reach the sub page you require. It is possible to enter your required sub page and continue watching the normal programme until the correct sub page is found. Select the required page number using buttons 0-9.

11.  Press the TIME TEXT button.
-
-  Enter desired sub page number.
To select page 6 enter 0,0,0 and 6.
-
-  Press the DISPLAY CANCEL button to view a normal TV programme.
-
-  When the page is available, press the TV/TEXT button twice to view the sub page.
-
12.  **List/F.Text**
Press to change from FASTEXT mode to LIST mode and vice versa. In FASTEXT mode four differently coloured subjects are displayed at the bottom of the page. Press the appropriate coloured button to access more information about one of these subjects.

Troubleshooting

Before calling for service, determine the symptoms and make a few simple checks as shown below.

Symptoms		Checks
Picture	Sound	
 Snowy Picture	 Noisy Sound	Aerial Location, direction Connection
 Multiple Image	 Normal Sound	Aerial Location, direction Connection
 Interference	 Noisy Sound	Electrical Appliances Cars / Motorcycles Fluorescent Lamps
 Normal Picture	 No Sound	Volume (Check whether the mute function has been activated on the Remote Control.)
 No Picture	 No Sound	Not plugged into AC outlet Not switched on Contrast and Brightness / Volume Setting (Check by pressing the Power Switch or Stand-by Button on the Remote Control.)
 No Colour	 Normal Sound	Colour Control
 Scrambled	 Weak Sound	Re-tune Channels
 Colour Patches	 Normal Sound	Magnetic interference from unshielded equipment. Receiver moved while "ON"
 No Colour	 Noisy Sound	Sound System Colour System

Specifications

Power Source : AC AUTO 110–240V, 50/60Hz

Power Consumption : 99 W

Receiving System : 17 SYSTEMS

	SYSTEMS	FUNCTION
1. 2. 3. 4. 5. 6. 7.	PAL B,G,H PAL I PAL D,K SECAM B,G SECAM D. K. SECAM K1 NTSC M (NTSC 3.58 / 4.5MHz)	Reception of broadcast transmissions and playback from video cassette tape recorders.
8. 9. 10. 11. 12. 13. 14.	NTSC 4.43 / 5.5MHz NTSC 4.43 / 6.0MHz NTSC 4.43 / 6.5MHz NTSC 3.58 / 5.5MHz NTSC 3.58 / 6.0MHz NTSC 3.58 / 6.5MHz SECAM I	Playback from special VCR only.
15. 16. 17.	PAL 60Hz / 5.5MHz PAL 60Hz / 6.0MHz PAL 60Hz / 6.5MHz	Playback from special Disc player and VCR only.

Receiving Channels :

VHF BAND		UHF BAND		CATV
2 – 12	PAL / SECAM B,K1	21 – 69	PAL G,H,I / SECAM G,K,K1	S1 – S20 (OSCAR)
0 – 12	PAL B (AUST.)	28 – 69	PAL B (AUST.)	1 – 125 (USA CATV)
1 – 9	PAL B (N.Z.)	13 – 57	PAL D,K	C13 – C49 (JAPAN)
1 – 12	PAL / SECAM D	13 – 62	NTSC M (JAPAN)	S21 – S41 (HYPER)
1 – 12	NTSC M (JAPAN)	14 – 69	NTSC M (U.S.A.)	Z1 – Z37 (CHINA)
2 – 13	NTSC M (U.S.A.)			5A, 9A (AUST.)

Tuning System : Frequency synthesizer Auto search tuning: 100 position.

Picture Tube : 51 cm, measured diagonally, 90° deflection.

Audio Output : 8 W × 2 (Speaker)

Aerial Impedance : 75 Ω Unbalanced coaxial.

Remote Control Transmitter : EUR646929.

Battery : R6 (AA) × 2

Dimension (W × D × H) : 682 × 484 × 464 mm

Weight (Net) : 24 kg

Note :

Design and Specifications are subject to change without notice.