

Panasonic®

Operating Instructions
High Definition Plasma Television
Manual de instrucciones
Televisor de plasma de alta definición

Model No. **TH-65PZ750U**
Número de modelo



Quick Start Guide

(See page 6)

Guía de inicio rápido

(vea la página 6)

- For assistance (U.S.A.), please call:
1-888-VIEW-PTV (843-9788)
or visit us at www.panasonic.com/contactinfo
- For assistance (Puerto Rico), please call:
787-750-4300
or visit us at www.panasonic.com
- For assistance (Canada), please call:
1-800-561-5505
or visit us at www.panasonic.ca
- Para solicitar ayuda (EE.UU.), llame al:
1-888-VIEW-PTV (843-9788)
ó visítenos en www.panasonic.com/contactinfo
- Para solicitar ayuda (Puerto Rico), llame al:
787-750-4300
ó visítenos en www.panasonic.com



HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

HDTV

BBE®
High Definition Sound

BBE.ViVA
HD3D Sound

SD
HD

AVCHD™

English

Please read these instructions before operating your set and retain them for future reference.
The images shown in this manual are for illustrative purposes only.

Español

Lea estas instrucciones antes de utilizar su televisor y guárdelas para consultarlas en el futuro.
Las imágenes mostradas en este manual tienen solamente fines ilustrativos.


TQB2AA0771

Turn your own living room into a movie theater!
 Experience an amazing level of multimedia excitement



 SDHC Logo is a trademark.	 GalleryPlayer and the GalleryPlayer Logo are trademarks of GalleryPlayer, Inc.	BBE.ViVA HD3D Sound Manufactured under license from BBE Sound, Inc.
 HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.	 "AVCHD" and "AVCHD" logo are trademarks of Matsushita Electric Industrial Co., Ltd and Sony Corporation.	BBE High Definition Sound Licensed by BBE Sound, Inc. under one or more of the following US patents: 5510752, 5736897. BBE and BBE symbol are registered trademarks of BBE Sound, Inc.

Enjoy rich multimedia

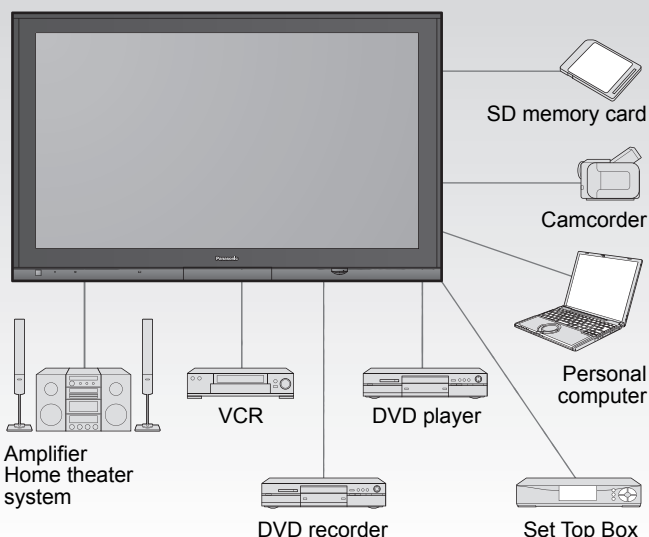

Contents

Please read before using the unit

- Safety Precautions 4
- Notes 5

Quick Start Guide

- Accessories/Optional Accessory ... 6
- Before Connection 8
- Basic Connection 9
- Identifying Controls 15
- First Time Setup 16

Enjoy your TV!

Basic Features

- Watching TV 18
- Viewing from SD Card 22
- Watching Videos and DVDs 26
- Displaying PC Screen on TV 28

Advanced Features

- How to Use Menu Functions (picture, sound quality, etc.) 30
- EZ Sync™ "HDAVI Control™" 34
- Lock 36
- Editing and Setting Channels 38
- Input Labels/Monitor Out/Closed Caption 40
- Using Timer 42
- Operating Peripheral Equipment 43
- Recommended AV Connections 44

FAQs, etc.

- Remote Control Operation/Code List 46
- Ratings List for Lock 50
- Maintenance 51
- Technical Information 52
- FAQ 56
- Specifications 58
- Limited Warranty (for U.S.A.) 59
- Customer Services Directory (for U. S. A.) 60
- Limited Warranty (for Canada) 61

EZ Sync™

EZ Sync™ is a trademark of Matsushita Electric Industrial Co., Ltd.



HDAVI Control™

HDAVI Control™ is a trademark of Matsushita Electric Industrial Co., Ltd.



Manufactured under license from Dolby Laboratories.
DOLBY and the double-D symbol are trademarks of Dolby Laboratories.

Safety Precautions



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



**WARNING: To reduce the risk of electric shock, do not remove cover or back.
No user-serviceable parts inside. Refer servicing to qualified service personnel.**



The lightning flash with arrowhead within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.



The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place liquid containers (flower vase, cups, cosmetics, etc.) above the set (including on shelves above, etc.).

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments / accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) To prevent electric shock, ensure the grounding pin on the AC cord power plug is securely connected.



FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

To assure continued compliance, use only shielded interface cables when connecting to computer or peripheral devices. Any changes or modifications not expressly approved by Panasonic Corporation of North America could cause harmful interference and would void the user's authority to operate this device.

FCC Declaration of Conformity Model No. TH-65PZ750U

Responsible Party: Panasonic Corporation of North America
One Panasonic Way, Secaucus, NJ 07094
Contact Source: Panasonic Consumer Electronics Company
1-888-VIEW-PTV (843-9788)
email: consumerproducts@panasonic.com

CANADIAN NOTICE:

For Model TH-65PZ750U
This Class B digital apparatus complies with Canadian ICES-003.



WARNING

SMALL PARTS CAN PRESENT CHOKING HAZARD IF ACCIDENTALLY SWALLOWED.
KEEP SMALL PARTS AWAY FROM YOUNG CHILDREN.
DISCARD UNNEEDED SMALL PARTS AND OTHER OBJECTS, INCLUDING PACKAGING MATERIALS AND PLASTIC BAGS/SHEETS TO PREVENT THEM FROM BEING PLAYED WITH BY YOUNG CHILDREN, CREATING THE POTENTIAL RISK OF SUFFOCATION.

■ Set up

Do not place the Plasma TV on sloped or unstable surfaces.

- The Plasma TV may fall off or tip over.

Do not place any objects on top of the Plasma TV.

- If water spills onto the Plasma TV or foreign objects get inside it, a short-circuit may occur which could result in fire or electric shock. If any foreign objects get inside the Plasma TV, please consult an Authorized Service Center.

This Plasma TV is for use only with the following optional accessories. Use with any other type of optional accessories may cause instability which could result in the possibility of injury.

(All of the following accessories are manufactured by Matsushita Electric Industrial Co., Ltd.)

- Wall-hanging bracket (Vertical) TY-WK65PV7
- Pedestal TY-ST65R2-WG

Always be sure to ask a qualified technician to carry out set-up.

- Two or more people are required to install and remove the television. If two people are not present, the television may be dropped, and personal injury may result.

Transport only in upright position!

- Transporting the unit with its display panel facing upright or downward may cause damage to the internal circuitry.

■ AC Power Supply Cord

The Plasma TV is designed to operate on 120 V AC, 60 Hz.

Securely insert the power cord plug as far as it will go.

- If the plug is not fully inserted, heat may be generated which could cause fire. If the plug is damaged or the wall socket plate is loose, they should not be used.

The included power cord is for use with this unit only.

Do not use any power cord other than that provided with this TV.

- Doing so may cause fire or electric shocks.

Do not handle the power cord plug with wet hands.

- Doing so may cause electric shocks.

Do not do anything that might damage the power cable. When disconnecting the power cable, hold the plug, not the cable.

- Do not make any modifications to, place heavy objects on, place near hot objects, heat, bend, twist or forcefully pull the power cable. Doing so may cause damage to the power cable which can cause fire or electric shock. If damage to the cable is suspected, have it repaired at an Authorized Service Center.

■ If problems occur during use

If a problem occurs (such as no picture or no sound), or if smoke or an abnormal odor is detected from the Plasma TV, unplug the power cord immediately.

- Continued use of the TV under these conditions might cause fire or permanent damage to the unit. Have the TV evaluated at an Authorized Service Center. Servicing of the TV by any unauthorized personnel is strongly discouraged due to its high voltage dangerous nature.

If water or foreign objects get inside the Plasma TV, if the Plasma TV is dropped, or if the cabinet becomes damaged, disconnect the power cord plug immediately.

- A short may occur, which could cause fire. Contact an Authorized Service Center for any repairs that need to be made.



CAUTION

Do not cover the ventilation holes.

- Doing so may cause the Plasma TV to overheat, which can cause fire or damage to the Plasma TV.

If using the pedestal, leave a space of 3 15/16 " (10 cm) or more at the top, left and right, 1 49/64 " (4.5 cm) or more at the bottom, and 2 3/4 " (7 cm) or more at the rear.

■ When using the Plasma TV

Be sure to disconnect all cables before moving the Plasma TV.

- Moving the TV with its cables attached might damage the cables which, in turn, can cause fire or electric shock.

Disconnect the power plug from the wall outlet as a safety precaution before carrying out any cleaning.

- Electric shocks can result if this is not done.

Clean the power cable regularly to prevent it from becoming dusty.

- Built-up dust on the power cord plug can increase humidity which might damage the insulation and cause fire. Unplug the cord from the wall outlet and clean it with a dry cloth.

This Plasma TV radiates infrared rays; therefore, it may affect other infrared communication equipment.

Install your infrared sensor in a place away from direct or reflected light from your Plasma TV.

Do not climb up onto the television or use it as a step.

(Young children should be made particularly aware of this caution.)

- If the unit falls over or becomes damaged through misuse, injury may result.

The TV will still consume some power as long as the power cord is inserted into the wall outlet.

Notes

■ Do not display a still picture for a long time

This causes the image to remain on the plasma screen ("Image retention"). This is not considered a malfunction and is not covered by the warranty.

Typical still images

- Channel number and other logos
- Image displayed in 4:3 mode
- SD Card photo
- Video game
- Computer image



To prevent "Image retention", the screen saver is automatically activated after a few minutes if no signals are sent or no operations are performed. (p. 57)

■ Setup

- Do not place the unit where it's exposed to sunlight or other bright light (including reflections).
- Use of some types of fluorescent lighting may reduce the remote control's transmission range.

Accessories/Optional Accessory

 
☒ Check you have all the items shown.

Accessories

- ☐ Remote Control Transmitter
● N2QAYB000099




- ☐ Batteries for the Remote Control Transmitter (2)
● AA Battery




- ☐ Antenna Adapter
● F-Type for 5C-2V



 - ☐ Cable clamber (2)



- ☐ AC cord

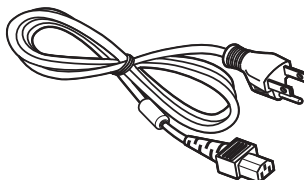

- ☐ Operating Instructions


- ☐ Product Registration Card (U.S.A.)

- ☐ Quick Setup Guide
(For viewing HD programming)


- ☐ Customer Care Plan Card (U.S.A.)

Installing the remote's batteries

1

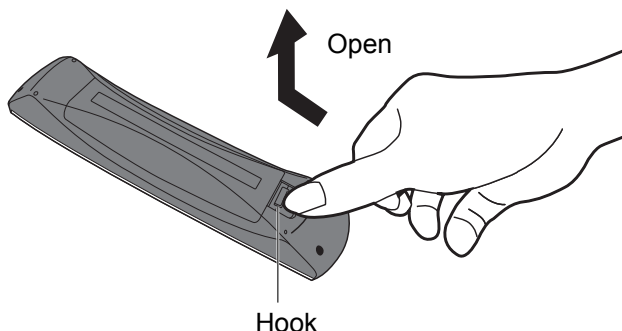


2

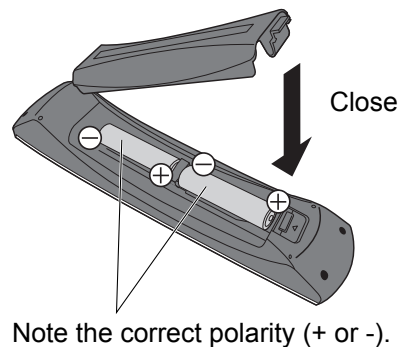


- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
 - Do not mix old and new batteries.
 - Do not mix different battery types (such as alkaline and manganese batteries).
 - Do not use rechargeable (Ni-Cd) batteries.
- Do not burn or break batteries.
- Make a note of the remote control codes before changing batteries in case the codes are reset. (p. 43)

Cable Binding Instructions

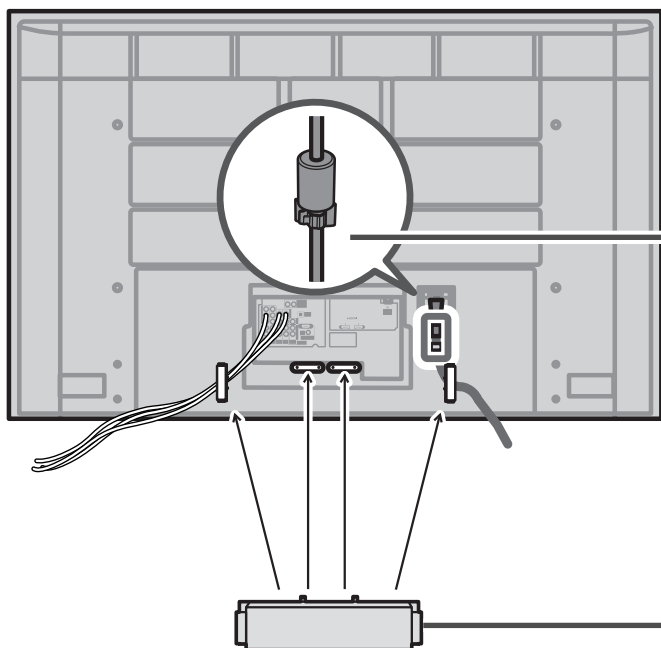


- Do not bundle the RF cable and AC cord together (could cause distorted image).
- Fix cables with Cable clumper as necessary.
- When using the options, follow the option's assembly manual to fix cables.

To fix

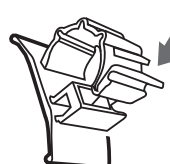


Push until it clicks

To release

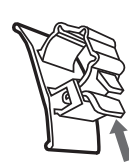


Press catch in and pull away

 
To open



To shut

 

To remove from the TV

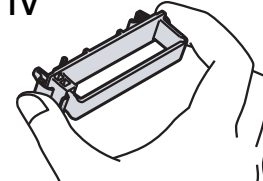


Push both side hooks

Optional Accessory

Wall-hanging bracket


(vertical)

- TY-WK65PV7

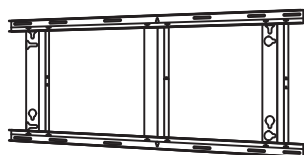

Pedestal

- TY-ST65R2-WG

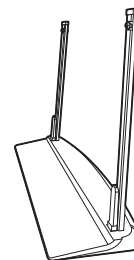

Note


- In order to maintain the TV's performance and safety, be absolutely sure to ask your dealer or a licensed contractor to secure the wall-hanging brackets.
- Carefully read the instructions accompanying the plasma TV stand or pedestal, and be absolutely sure to take steps to prevent the TV from tipping over.
- Handle the TV carefully during installation since subjecting it to impact or other forces may cause its paneling to crack.

Before Connection

Connected Equipment Introduction (Signal source)


■Watching TV

- VHF/UHF Antenna
 - NTSC (National Television System Committee):
Conventional broadcasting
 - ATSC (Advanced Television Systems Committee):
Digital TV Standards include digital high-definition television (HDTV), standard-definition television (SDTV), data broadcasting, multi-channel surround-sound audio and interactive television.
- Cable Box/Cable
 - You need to subscribe to a cable TV service to enjoy viewing their programming.
 - You can enjoy high-definition programming by subscribing to a high-definition cable box. The connection can be done with the use of HDMI or Component Video cable.

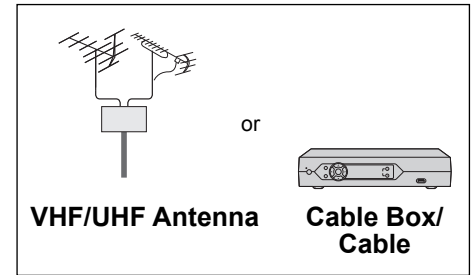


■Recording/playing back with DVD recorder or VCR

- DVD Recorder
This source has higher resolution through interlace or progressive signal. Connection can be done with the use of Component Video or HDMI cable.
- VCR
Connection can be done with the use of an RF cable and Composite Video/S Video cable.

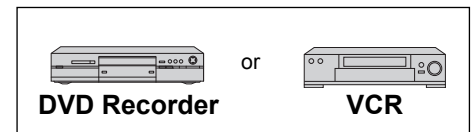


■Watching Satellite

- You can enjoy high-definition programming by subscribing to high-definition satellite source. Connection can be done with the use of HDMI or Component Video cable.

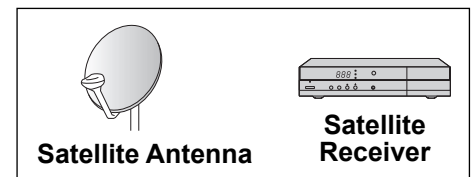

■Enjoying Home theater and DVD recorder with HDMI connection

- Home theater and DVD Recorder
HDMI connection enables you to enjoy higher quality audio and video with a single cable.

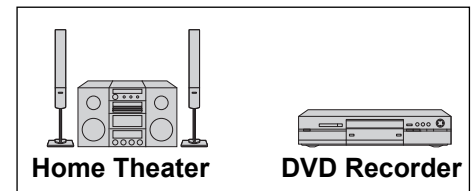


Note

- If your Panasonic DVD Recorder is compatible with EZ Sync (HDAVI control 2), you can operate your Panasonic DVD Recorder with this TV's remote control (p. 27 EZ Sync™).
- All cables and external equipment shown in this book are not supplied with the TV.
- For the details of the external equipment's connections, please refer to the operating manuals for the equipment.


Reference of connection

■Antenna terminal

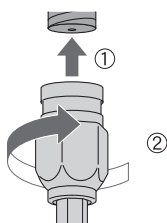


- Firmly tighten by hand.

■Pin terminals

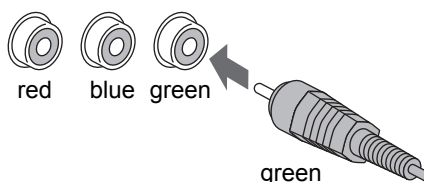

- Match colors of plugs and terminals.
- Insert firmly.

■HDMI terminal

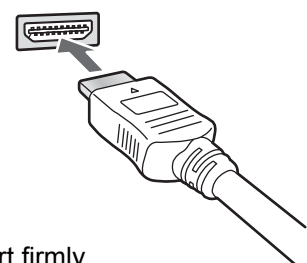


- Insert firmly.

Basic Connection


Example 1

Connecting Antenna (To watch TV)

TV

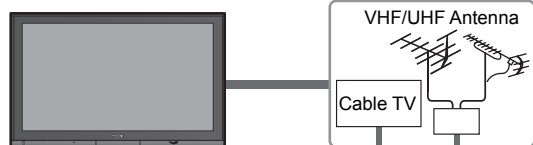

To connect antenna terminals

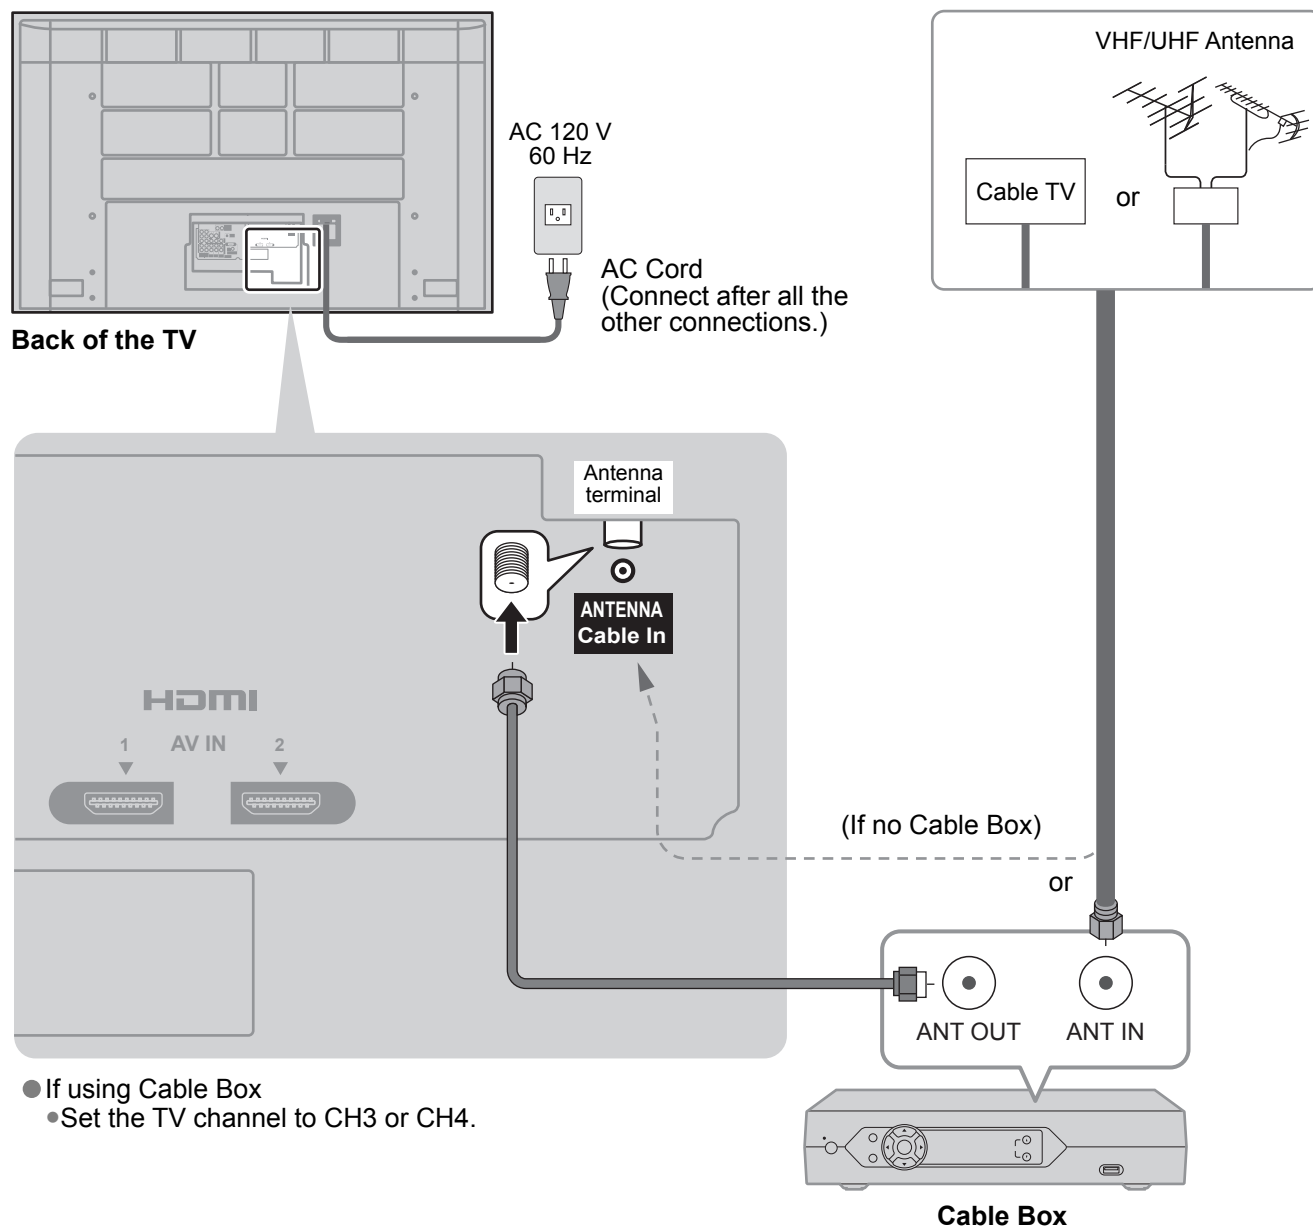

- If using Cable Box
- Set the TV channel to CH3 or CH4.

Note

- When disconnecting the power cord, be absolutely sure to disconnect the power cord plug from the wall outlet first.
- For additional assistance, visit us at: www.panasonic.com
www.panasonic.ca

Quick Start
Guide

- Basic Connection (Antenna + TV)
- Before Connection


Basic Connection (Continued)

Example 2 Connecting DVD recorder (VCR) (To record/playback)

TV




To connect antenna terminals

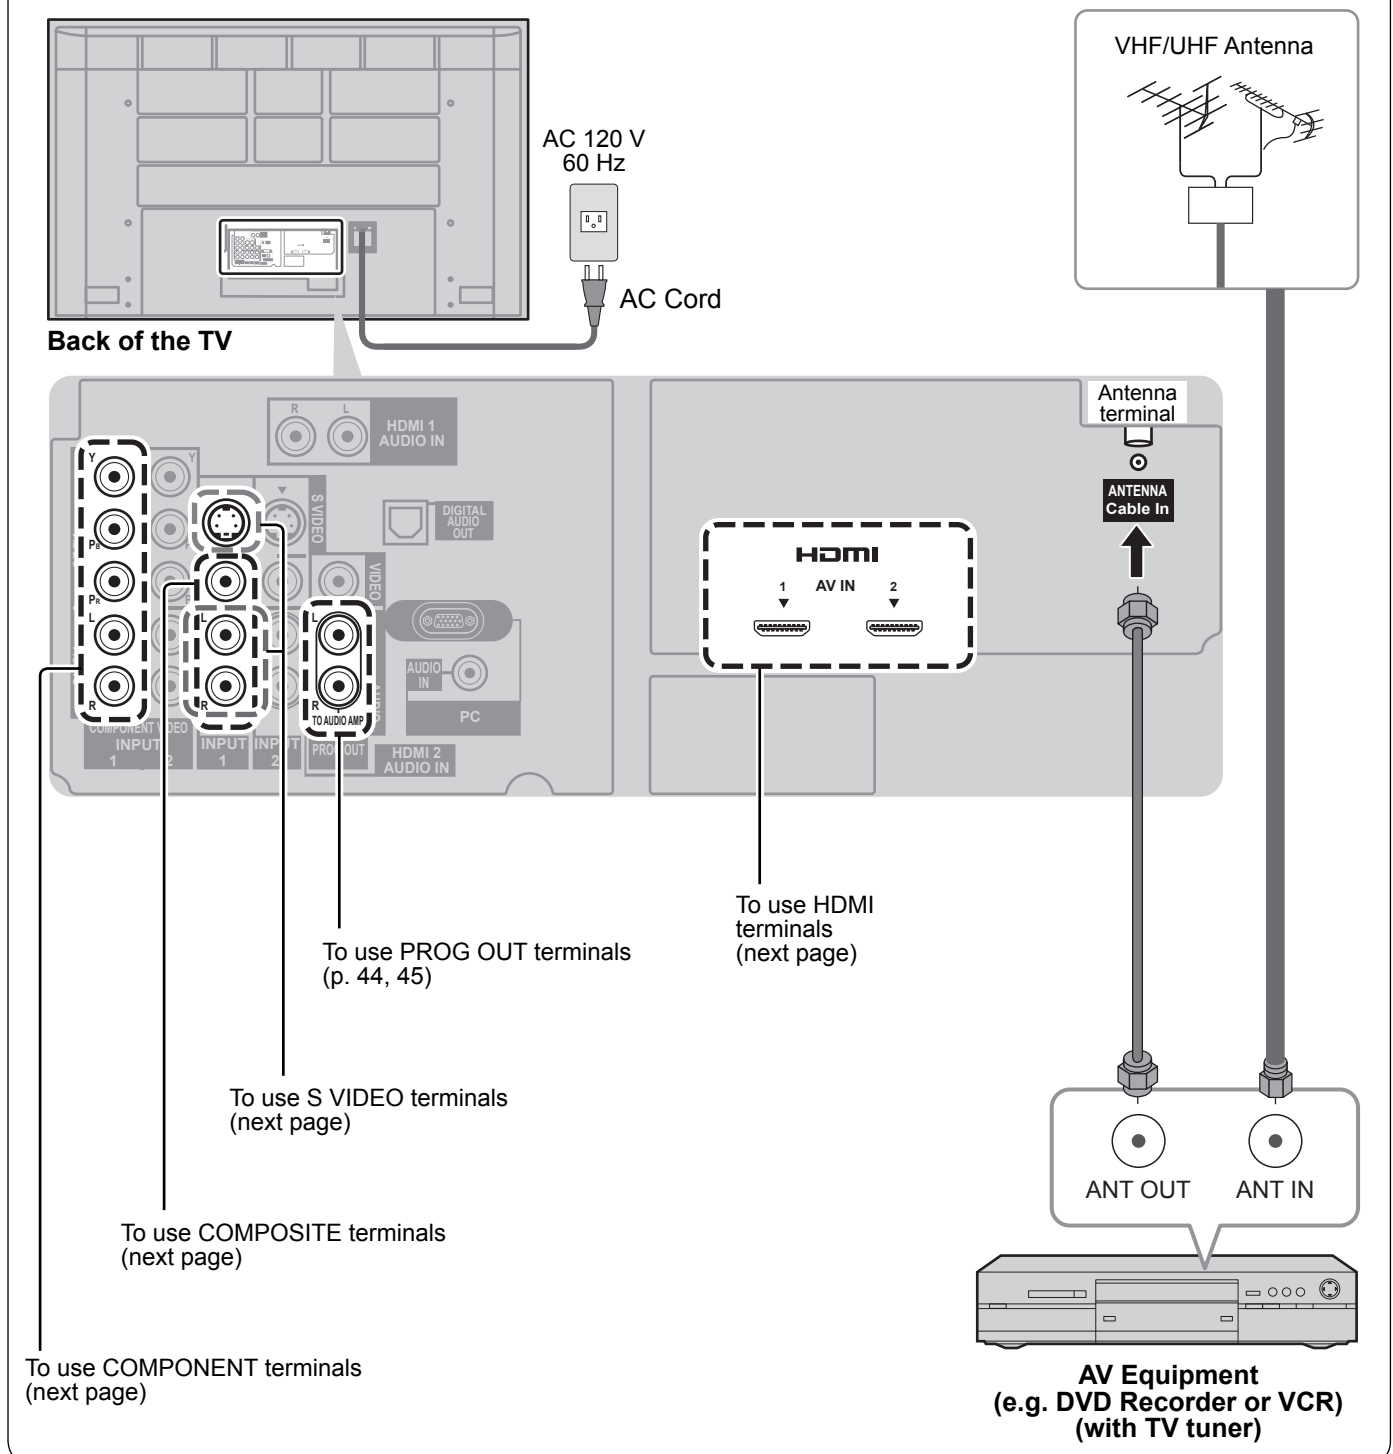


High-Definition

■ To use HDMI terminals

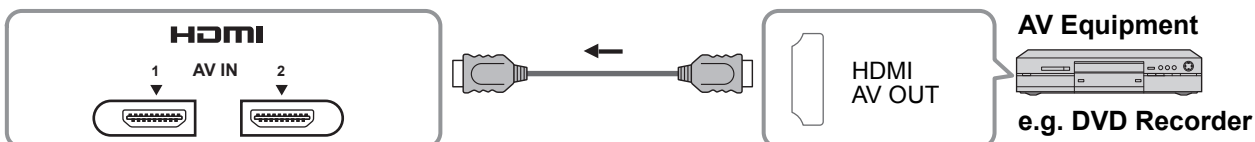

- Connecting to HDMI terminals will enable you to enjoy high-definition digital images and high-quality sound.


■ To use COMPONENT terminals

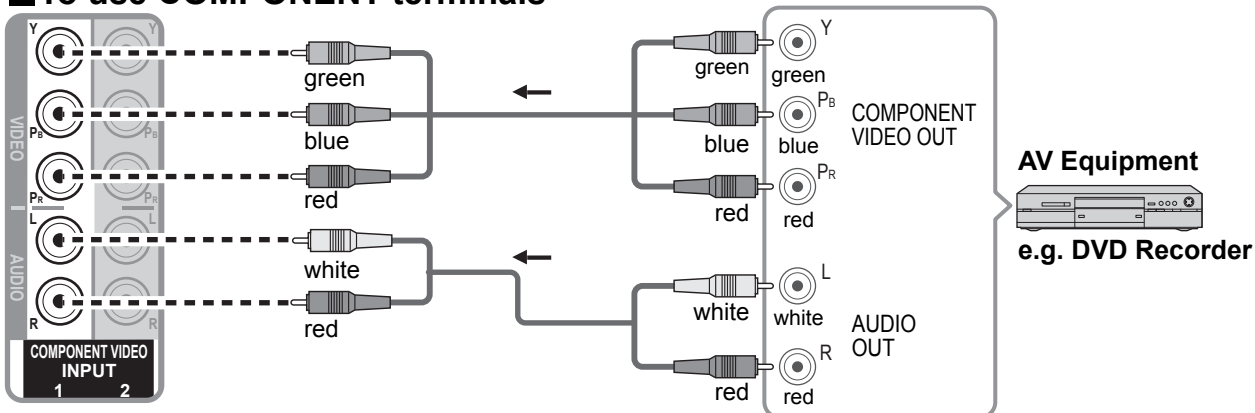


- Recorders may also be connected to COMPOSITE or S VIDEO terminals. (see below)

Standard-Definition

■ To use COMPOSITE terminals

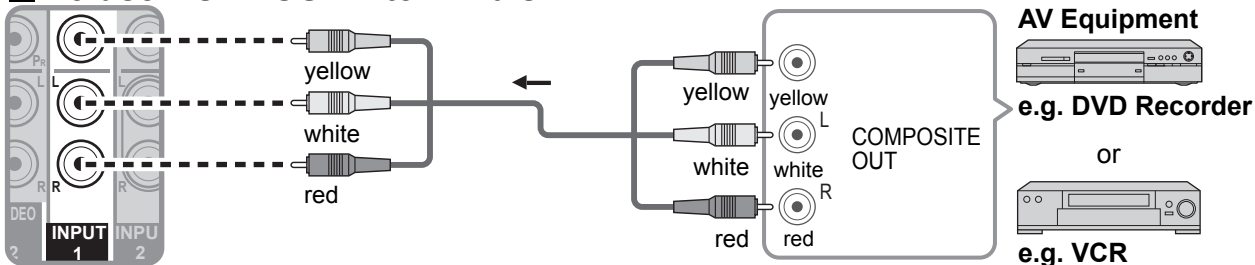

■ To use S VIDEO terminals

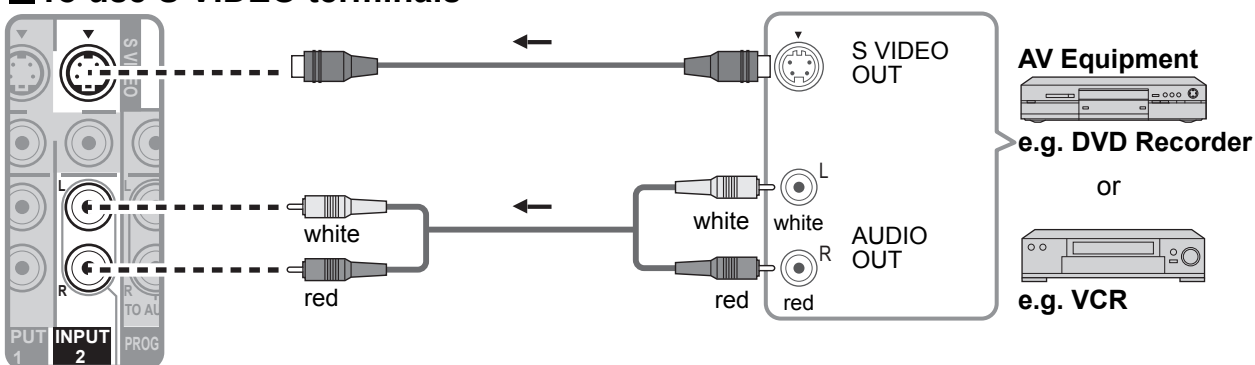

- The S Video input will override the composite video signal when S Video cable is connected. Connect either S Video or Video cable.


- Connecting to S VIDEO terminals will enable you to enjoy greater picture quality than using Composite terminals.

Note


- Some programs contain a copyright protection signal to prevent recording.
- When the copyright protection program is displayed, do not connect the other TV monitor through a VCR. Video signals fed through VCRs may be affected by copyright protection systems and the picture will be distorted on the other TV monitor.
- For the details of the external equipment's connections, please refer to the operating manuals for the equipment.

Basic Connection (Continued)

Example 3 Connecting DVD recorder (VCR) and satellite receiver

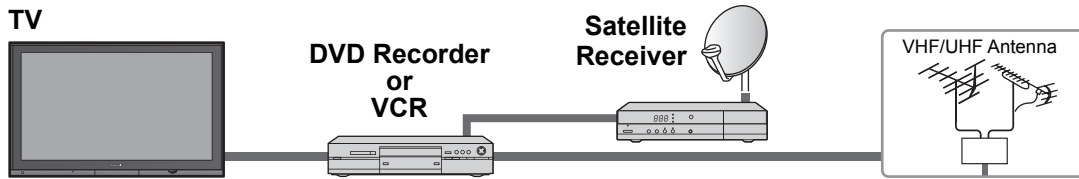


To connect antenna terminals

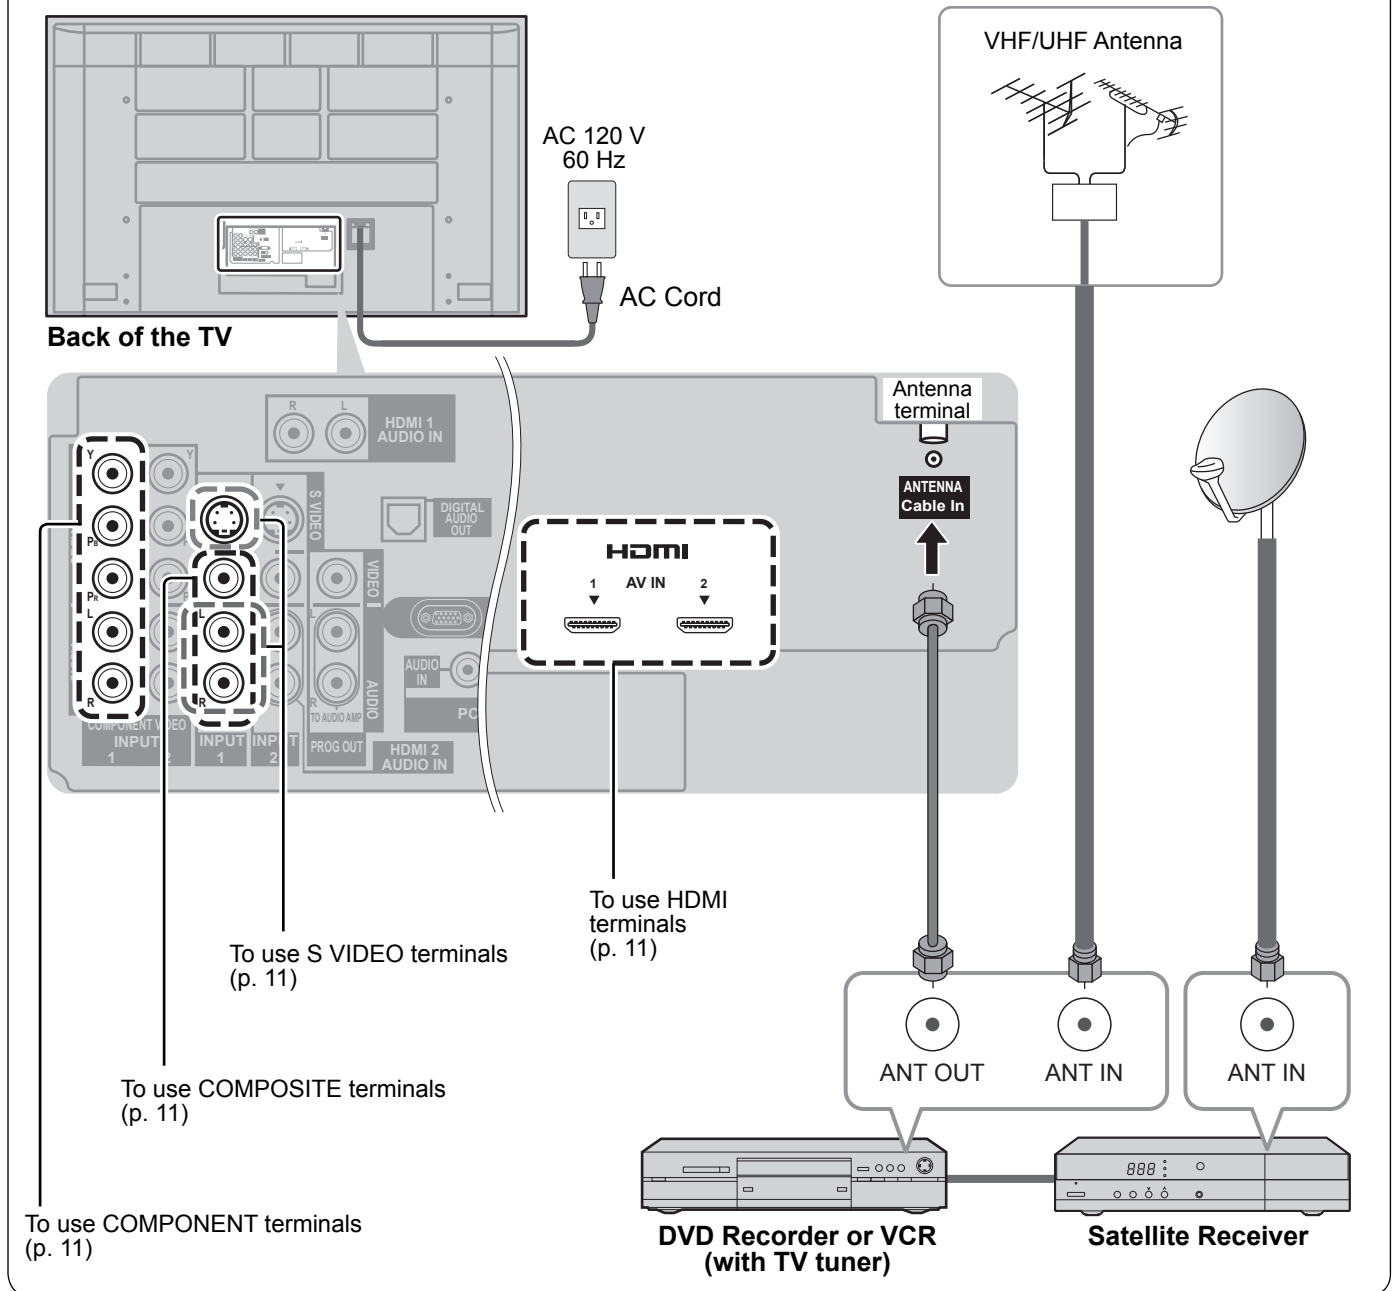


Connecting TV and DVD recorder (VCR)

Connect in the same way as on p. 11.

■ To use COMPOSITE terminals

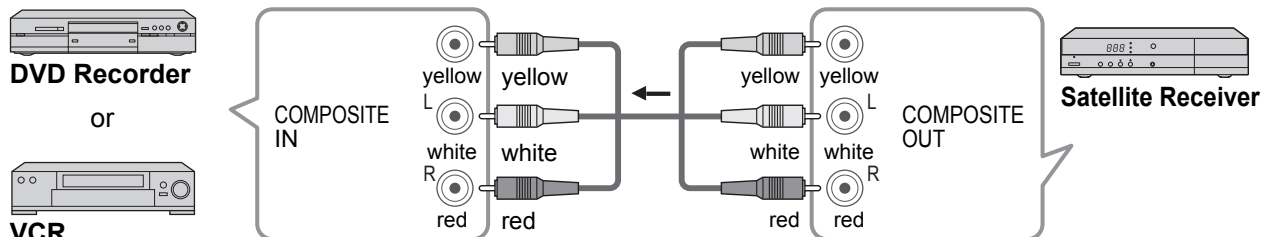

■ To use S VIDEO terminals

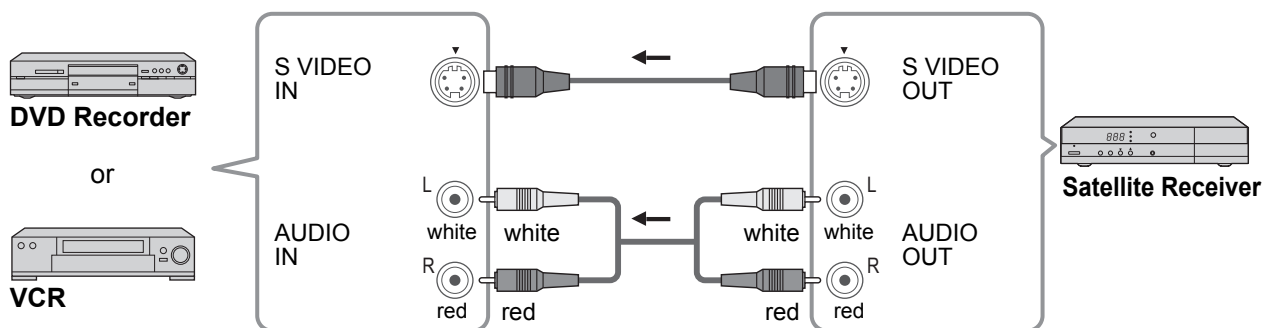


- The S Video input will override the composite video signal when S Video cable is connected. Connect either S Video or Video cable.
- Connecting to S VIDEO terminals will enable you to enjoy greater picture quality than using Composite terminals.

Note

- For the details of the external equipment's connections, please refer to the operating manuals for the equipment.


Basic Connection (Continued)

Example 4 Connecting Home Theater and DVD recorder

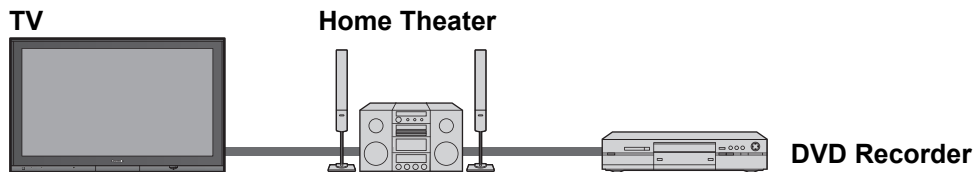

To connect HDMI terminals

Back of the TV

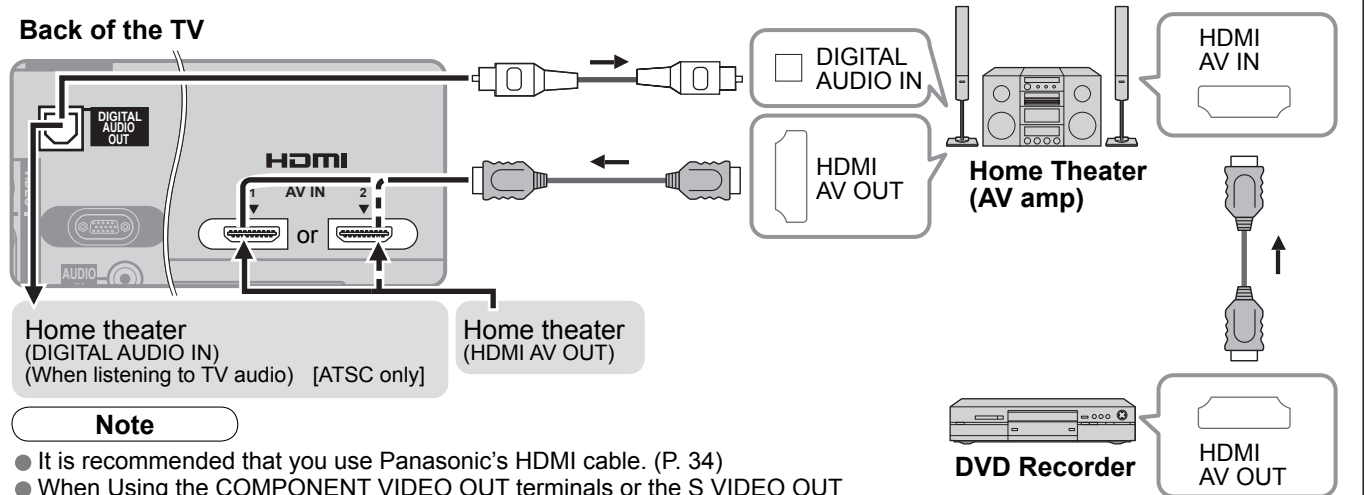


Home theater
(DIGITAL AUDIO IN)
(When listening to TV audio) [ATSC only]

Home theater
(HDMI AV OUT)

Note


- It is recommended that you use Panasonic's HDMI cable. (P. 34)
- When Using the COMPONENT VIDEO OUT terminals or the S VIDEO OUT terminal, refer to p. 11 "To use COMPONENT terminals" or "To use S VIDEO terminals".
- If you connect RAM theater or Player theater with HDMI cable, use audio cable instead of the optical digital audio cable. (p. 45)

Identifying Controls

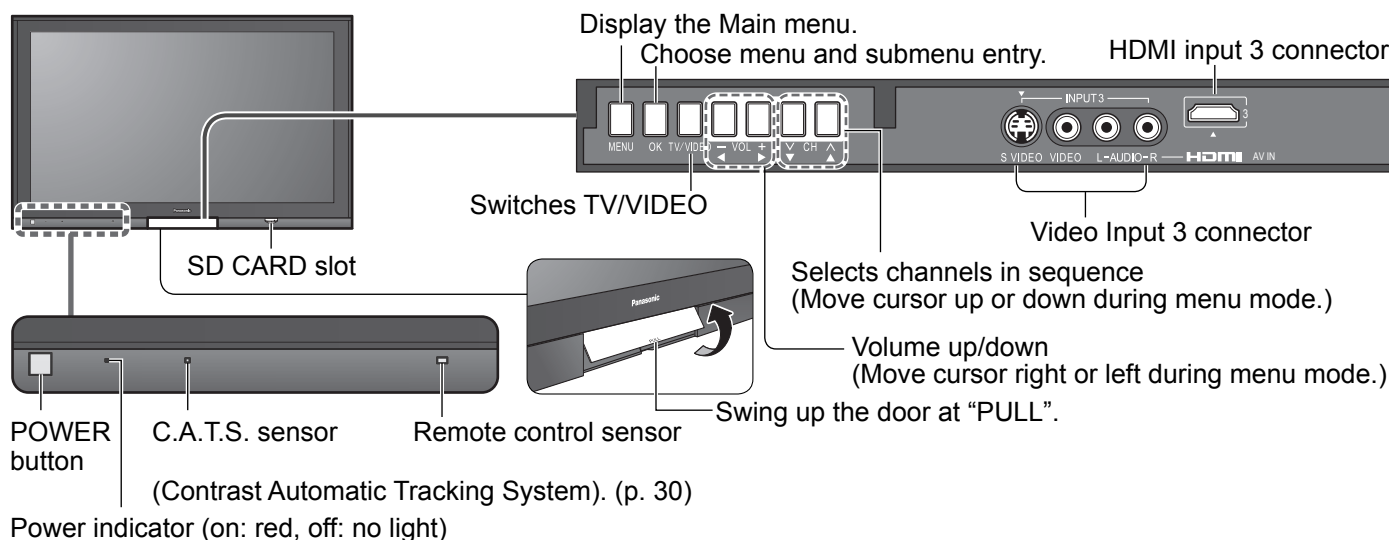



Note

- The TV consumes a limited amount of power as long as the power cord is inserted into the wall outlet.

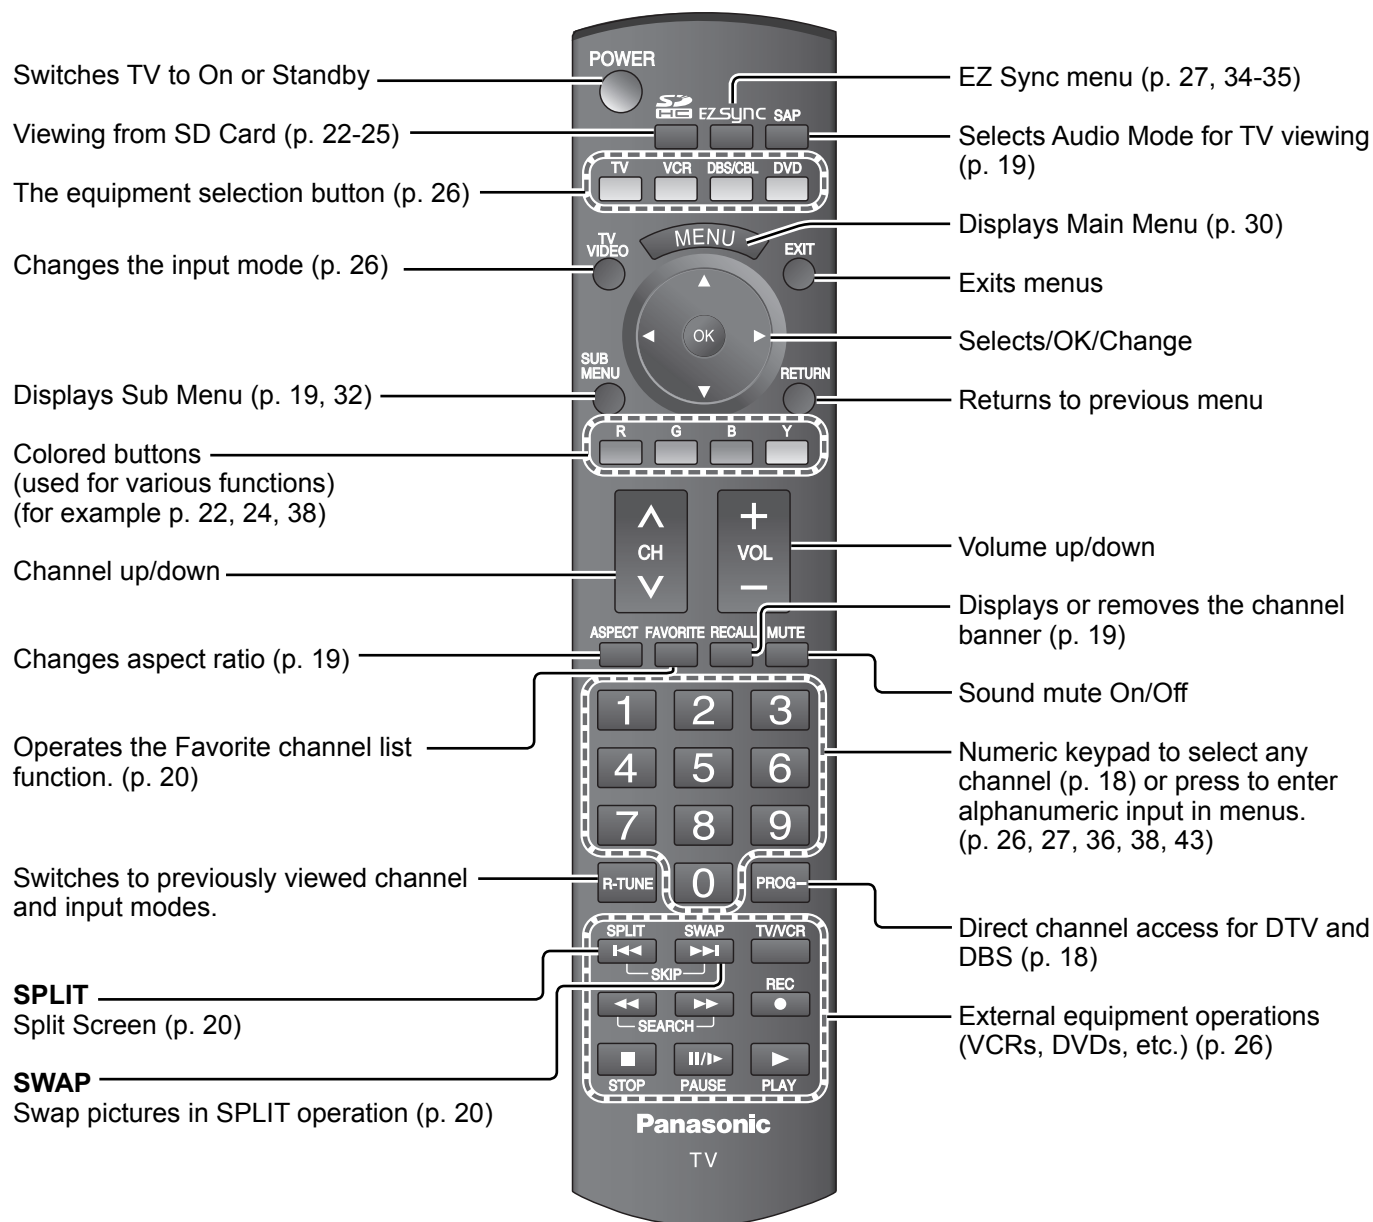

First Time Setup

“First time setup” is displayed only when the TV is turned on for the first time after the power cord is inserted into a wall outlet and when “Auto power on” (p. 32-33) is set to “No”.

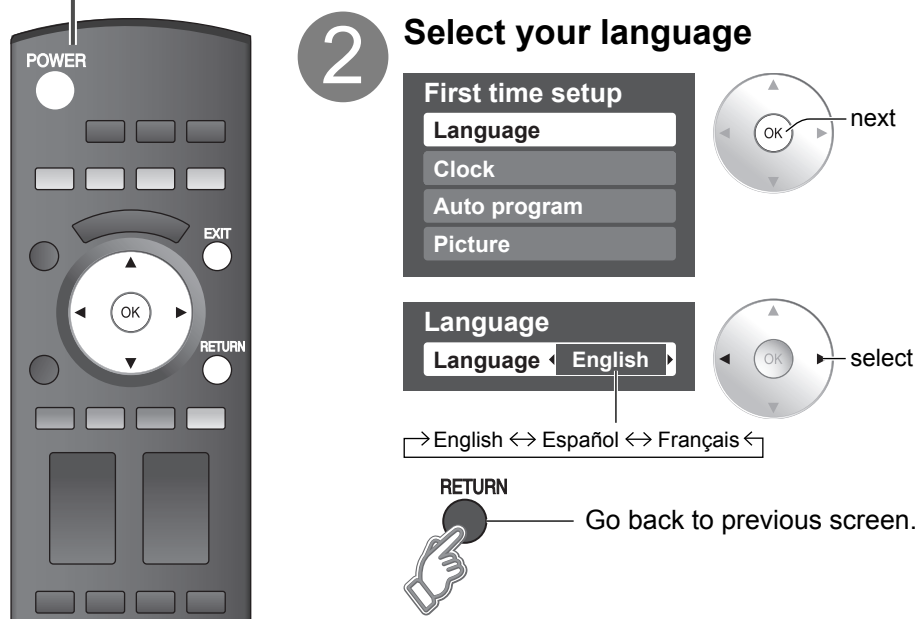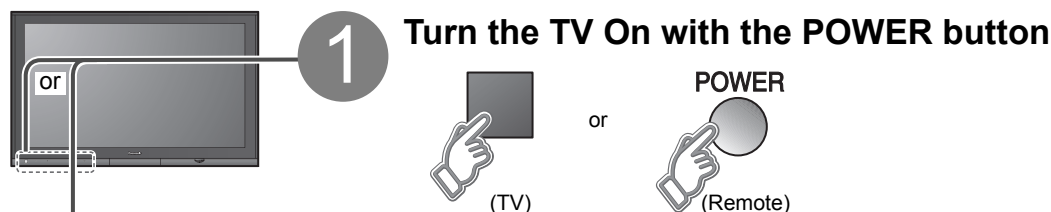

■ Press to exit from menu screen




■ Press to return to previous screen



Note

- To change setting (Language/Clock/Auto program/Picture) later, go to Menu screen (p. 30, 32)

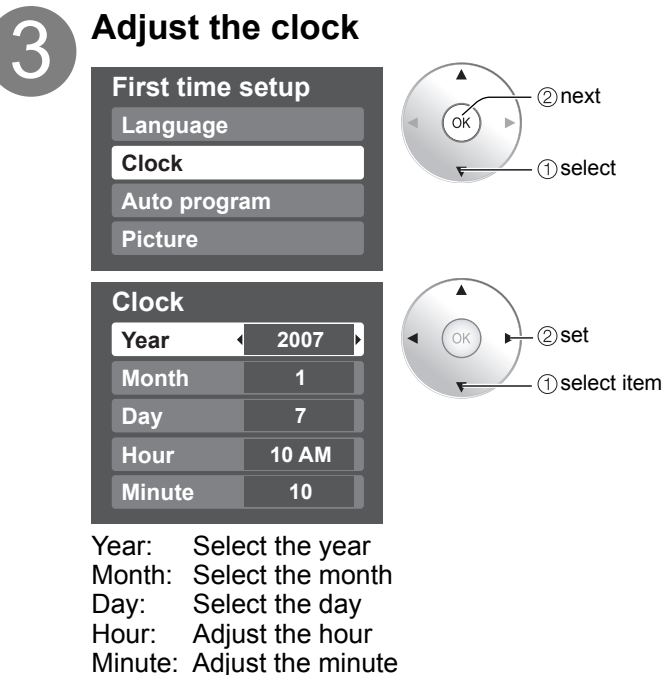



Year: Select the year
 Month: Select the month
 Day: Select the day
 Hour: Adjust the hour
 Minute: Adjust the minute





4

Auto channel setup

① Select "Auto program"

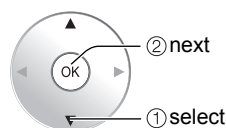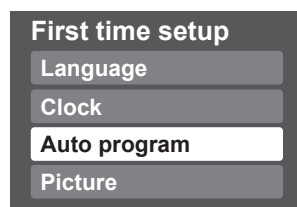



② Select "ANT in"

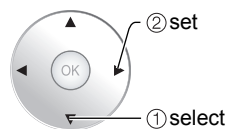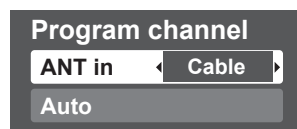




ANT in

Cable: Cable TV
Antenna: Antenna

③ Select "Auto"

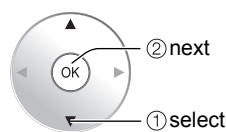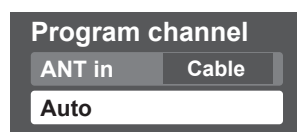

④ Select scanning mode (ALL channels/Analog only/Digital only)

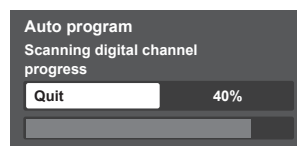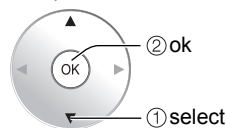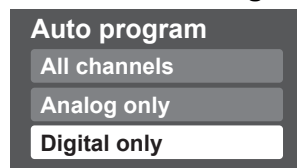

Start scanning the channels



- Available channels (analog/digital) are automatically set.

All channels: Scans digital and analog channels


Analog only: Scans Analog channels only

Digital only: Scans Digital channels only

⑤ Confirm registered channels

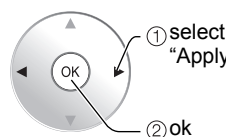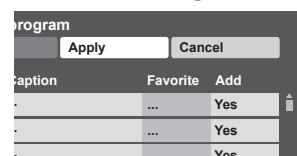

- If OK is not pressed after selecting "Apply", the channels will not be saved.
- If you perform scanning more than twice, previously saved channels are erased.

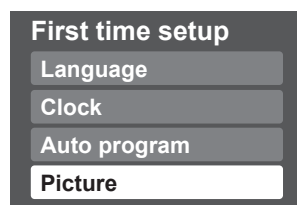

(Refer to p. 30)

■ Press to exit from menu screen

EXIT



Note

- About broadcasting systems

Analog (NTSC):


traditional TV programming

Digital (ATSC):

new programming that allows you to view more channels featuring high-quality video and sound

Watching TV

Connect the TV to a cable box/cable, set-top-box, satellite box, or antenna cable (p. 8-13)

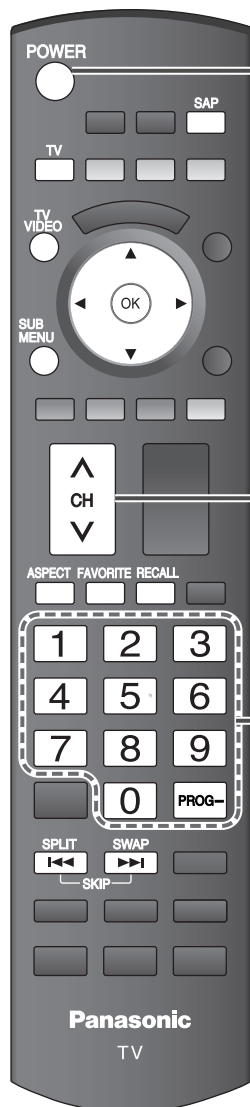

1

Turn power on

POWER




Note

- If the mode is not TV, press  and select TV. (p. 26)

2

Select a channel number

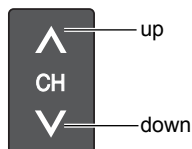

or



■ To directly input the digital channel number

PROG-

When tuning to a digital channel, press the button to enter the minor number in a compound channel number.

example: CH15-1:    

Note

- Reselect “Cable” or “Antenna” in “ANT in” of “Program channel” to switch the signal reception between cable TV and antenna. (p. 17, 39)
- The channel number and volume level remain the same even after the TV is turned off.

■ Other Useful Functions (Operate after ②)

Listen with SAP (Secondary Audio Program)

■ Selects Audio Mode for watching TV



● Digital mode

Press SAP to select the next audio track (if available) when receiving a digital channel.


Audio track 1 of 2
(English)

● Analog mode

Press SAP to select the desired audio mode.

- Each press of SAP will change the audio mode. (Stereo/SAP/Mono)


Display the SUB MENU

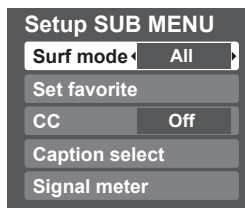

■ Press SUB MENU to show sub menu screen. (p. 32)


This menu consists of shortcuts to convenient functions.

Information Recall

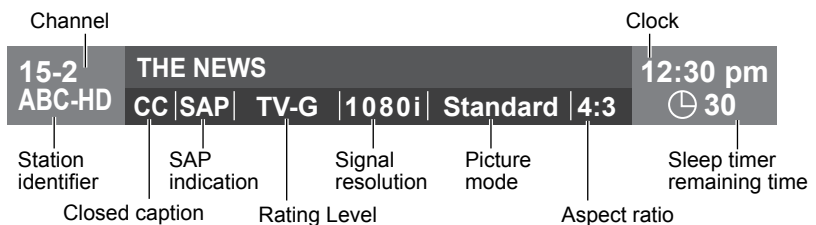

■ Displays or removes the channel banner.

Change aspect ratio

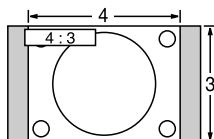

- 480i, 480p: FULL/JUST/4:3/ZOOM
- 1080p, 1080i, 720p: FULL/H-FILL/JUST/4:3/ZOOM

■ Press ASPECT to cycle through the aspect modes. (p. 52)

Watching TV (Continued)

■ Other Useful Functions (Operate after ② in p. 18)


Watch in multi window

(Audio is from Main picture only)

- The Split-screen feature is not available when using PC and SD Card viewing mode as a source.

- Left window (Main picture)
Screen enlargement and volume adjustment are available.
- Right window (SPLIT frame)
The previously selected screen appears.
TV channel or Video input signal can be changed on SPLIT frame.
HDMI input cannot be displayed in SPLIT frame.

Split - Screen

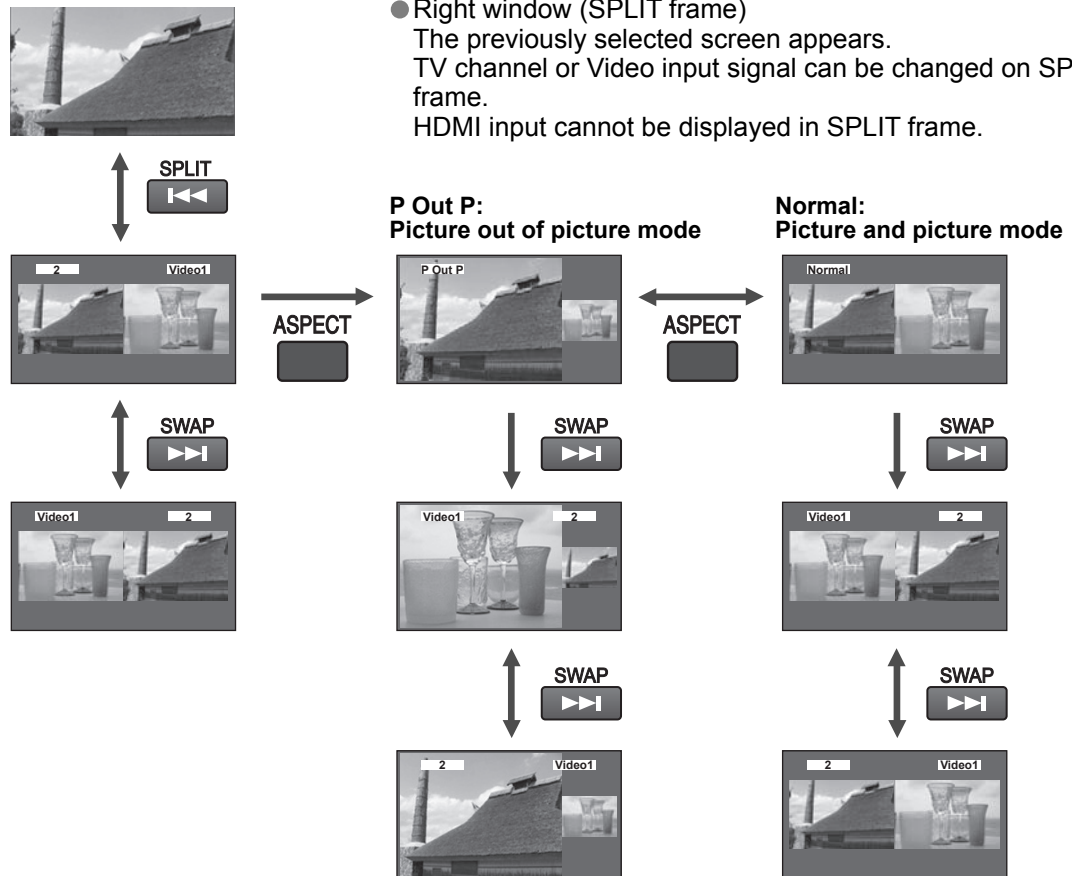

Call up a favorite channel






■ FAVORITE



Channel numbers registered in Favorite are displayed on the favorite tune screen. Select the desired broadcast station with the cursor or use number buttons. (see p. 21)

Set Favorite Feature


- 1 Display the SUB MENU.

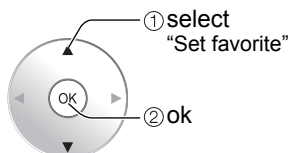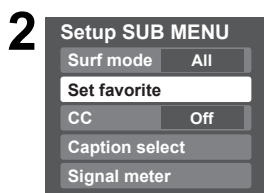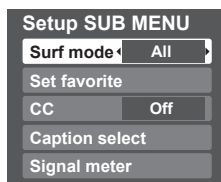

- Press FAVORITE repeatedly to change between pages (1/3, 2/3, 3/3, or exit).

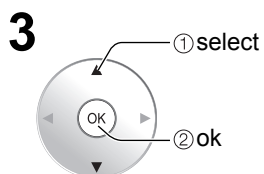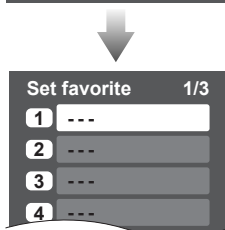

- Press ▲▼ to highlight a position on the list. Then, press OK to save the displayed channel in that position.
- You can also use the NUMBER buttons (1-9 and 0). By doing so, the displayed channel will be saved on that list number without pressing OK.

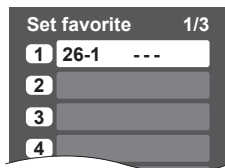

● To delete a favorite channel

A saved channel can be removed from the list by holding down OK while its position is highlighted.

● To change the page

Pressing ◀ changes the page backward.



Pressing ▶ changes the page forward.

Use Favorite Feature




Press FAVORITE.

- Press FAVORITE repeatedly to change between pages (1/3, 2/3, 3/3, or exit).

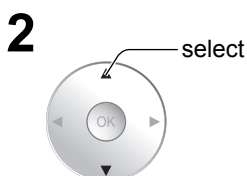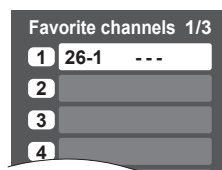

Press ▲▼ or a Numbered key (1-9 and 0) to highlight a channel on the list.

- Selecting a channel number from the list with the number button will display the channel directly.

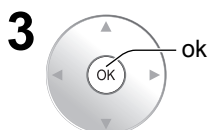


Press OK to display the highlighted channel.

Viewing from SD Card


You can view movies and photos taken with a digital camera or digital video camera and saved on an SD card. (Media other than SD Cards may not be reproduced properly.)

Movie player

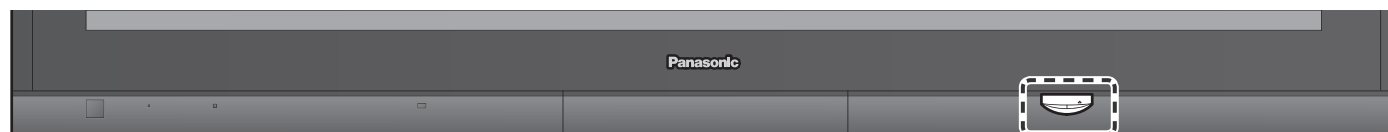

SD Card

- Open the cover

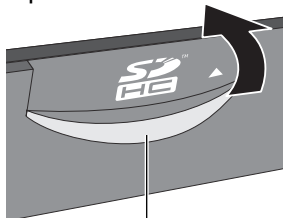

Blue LED


- Insert the card



Label surface

Push until a click is heard

- Remove the card

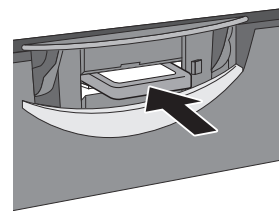

Press in lightly on SD Card, then release.

- Compliant card type (maximum capacity): SDHC Card (4 GB), SD Card (2 GB), miniSD Card (1 GB) (requiring miniSD Card adapter)
- Blue LED lights while SD Card is inserted if set "SD card LED" to "On" in Setup Menu (p. 32).



1 Insert the SD Card

- For cautions and details on SD Cards (p. 53)

2



Select the SD mode

or





Display menu

➔ Select "Memory card"

3

Select "Movie player"

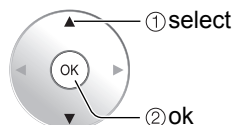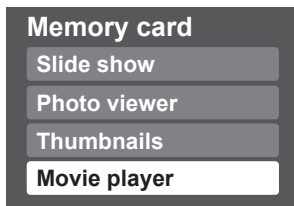

① select

② ok

- Press to return to TV



- Press to exit from menu screen



- Press to return to the previous screen





Note

- No video signals can be output from PROG OUT terminal when playing the movie.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.


4

Select the movie to be listed

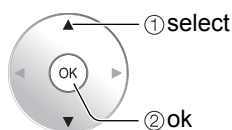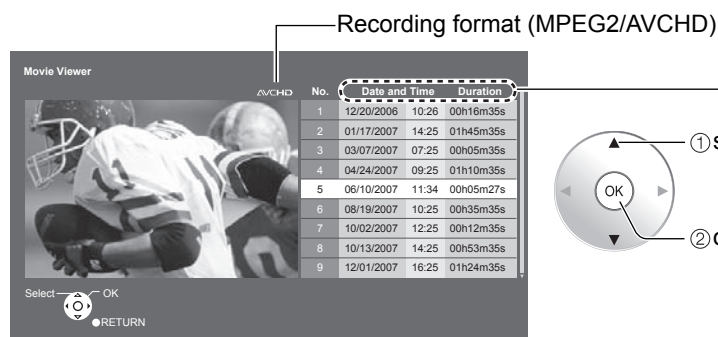

5



View

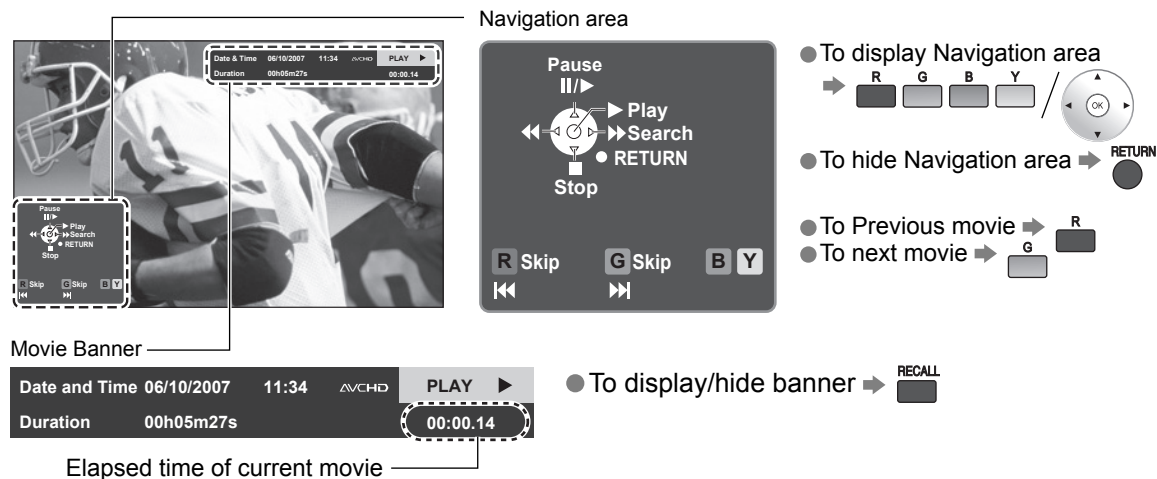

To adjust picture and audio

When MENU is pressed, the "MPEG menu" is displayed.

In 4 or 5

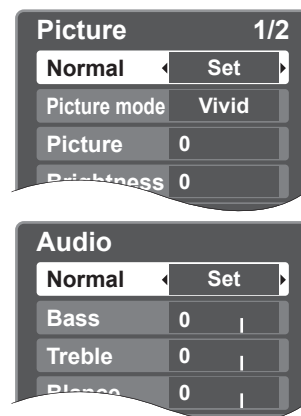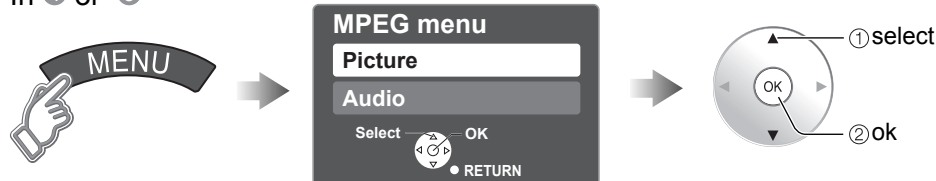


Picture and Audio menu (p. 30)

To confirm or change the current audio status

When SAP is pressed, the current audio status is displayed.

Each press of SAP will change the audio mode. (if the movie has multiple audio signals.)

In 5

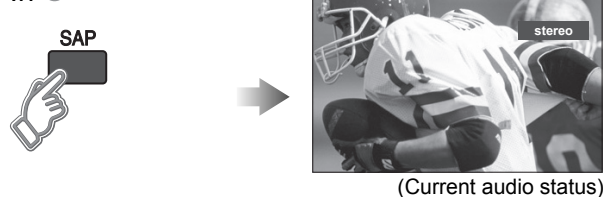

It may take several seconds to change the sound.

Viewing from SD Card (Continued)

Photo viewer

1 Follow direction ① - ② in Movie player (p. 22)

2 Select the menu

3 Select the photo to be viewed (Only when "Thumbnails" is selected)

■ When "Slide show" or "Photo viewer" is selected, ③ is skipped and photos are displayed directly. ➔ go to ④

■ Press to return to TV

■ Press to exit from menu screen

■ Press to return to the previous screen

Note

● Depending on the JPEG format, "Information" contents may not be displayed correctly. Refer to p. 53 (Data format for SD card browsing) for details.

The diagram illustrates the process of viewing photos from an SD card using a Panasonic remote control. It includes a remote control image with callouts for the SD card slot, MENU, OK, RETURN, and EXIT buttons. The 'Memory card' menu shows options: Slide show, Photo viewer, Thumbnails, and Movie player. A circular diagram shows the navigation sequence: ① select, ② ok. The 'Thumbnail view' shows a grid of 12 photos with file numbers (101-0365 to 101-0376). A circular diagram shows the navigation sequence: ① select, ② view. The 'Accessing' screens show 'Rotate' and 'Prev.' buttons for slide show, and 'Pause' and 'Next' buttons for single photo display. The 'Present status (While reading the data)' screen shows 'Prev.' and 'Next' buttons. The 'Navigation area' shows 'R Slide show' and 'G B Y' buttons. The 'Total number of images' is 12. The 'Selected picture information is displayed' section shows: No.: Image number or file name is displayed, Date: Date of recording is displayed, Pixel: Display resolution is displayed.


4

View



Navigation area

Displays one at a time

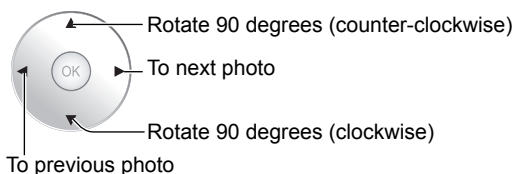


● To display/hide Navigation area →

To change the view (Slide show mode, adjusting images, etc.)

■ To watch photos in Slide show mode

In ③ or ④

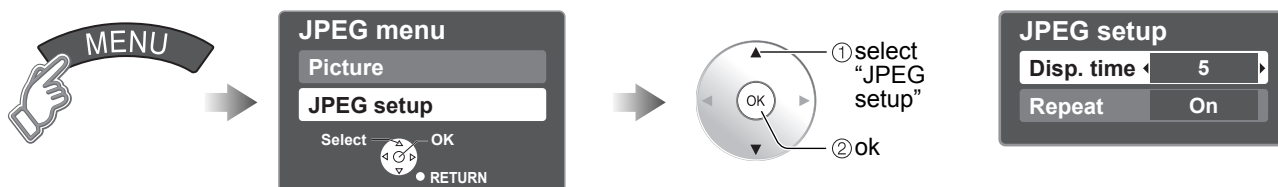

Disp. time	You can set how many seconds each image is displayed in Slide show mode. (1-10/15/20/30/45/60/120 sec)
Repeat	Turn the slide show Repeat function On or Off.


Note

- For large image sizes, the display time will be longer than the number of seconds set.
- To stop in mid-cycle → Press

■ To adjust picture

When MENU is pressed, the "JPEG menu" is displayed.

In ③ or ④

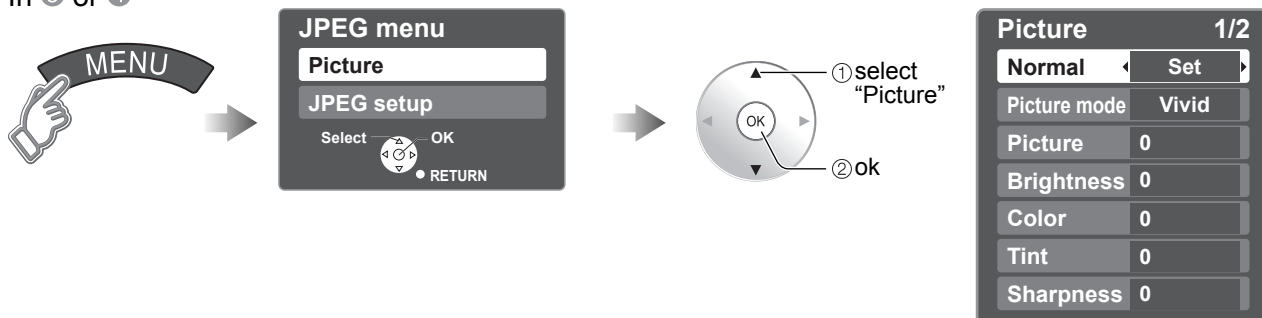

Picture menu (p. 30)

Viewing from a GalleryPlayer SD Card

You can view high-definition art and photography purchased on or downloaded to an SD card. GalleryPlayer provides pre-loaded SD cards with copy-protected imagery and images for download to your computer that can be saved on an SD card for display on your television.

Watching Videos and DVDs


If you have some equipment connected to the TV, you can easily watch videos and DVDs using the TV's remote control.

Input Select

You can select the external equipment to access.

To operate other manufacturers' equipment, you need to register the code of the equipment. (p. 43)

- 1 With the connected equipment turned On **Display the Input select menu**
- 2 **Select the input mode**
- 3 **Select the remote control mode**
- 4 **Operate the connected equipment, pointing remote control at the equipment.**

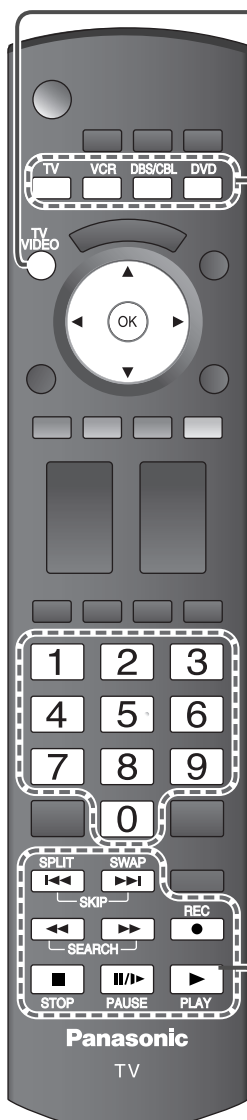




Input select

1	2	3
4	5	6
7	8	9
0		

or

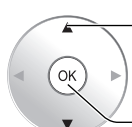

Press corresponding NUMBER button on the remote control to select the input of your choice.

Select the input of your choice, then press OK.

● During the selection, if no action is taken for several seconds, the "Input select" menu disappears.

● The terminal and label of the connected equipment is indicated.
To label each of the inputs please refer to p. 40-41.

Input select	
1	TV
2	Component 1
3	Component 2
4	HDMI 1
5	HDMI 2
6	HDMI 3
7	Video 1
8	Video 2
9	Video 3
0	PC

(example)



Terminal Label

(example)

■ To return to TV



Note

- For details, see the manual of the equipment.


(example)

	VCR MODE	DVD MODE
	VCR Record	Record
	—	Skip Reverse/Forward
	Rewind/Fast Forward	Reverse/Forward
	Stop	Stop
	Pause	Pause
	Play	Play

(For other operations, see p. 46)

EZ Sync™

If you connect equipment that has “HDAVI Control 2” function to a TV with HDMI cable, you can enjoy using more convenient functions. For details, refer to “EZ Sync Control” on p. 34-35.

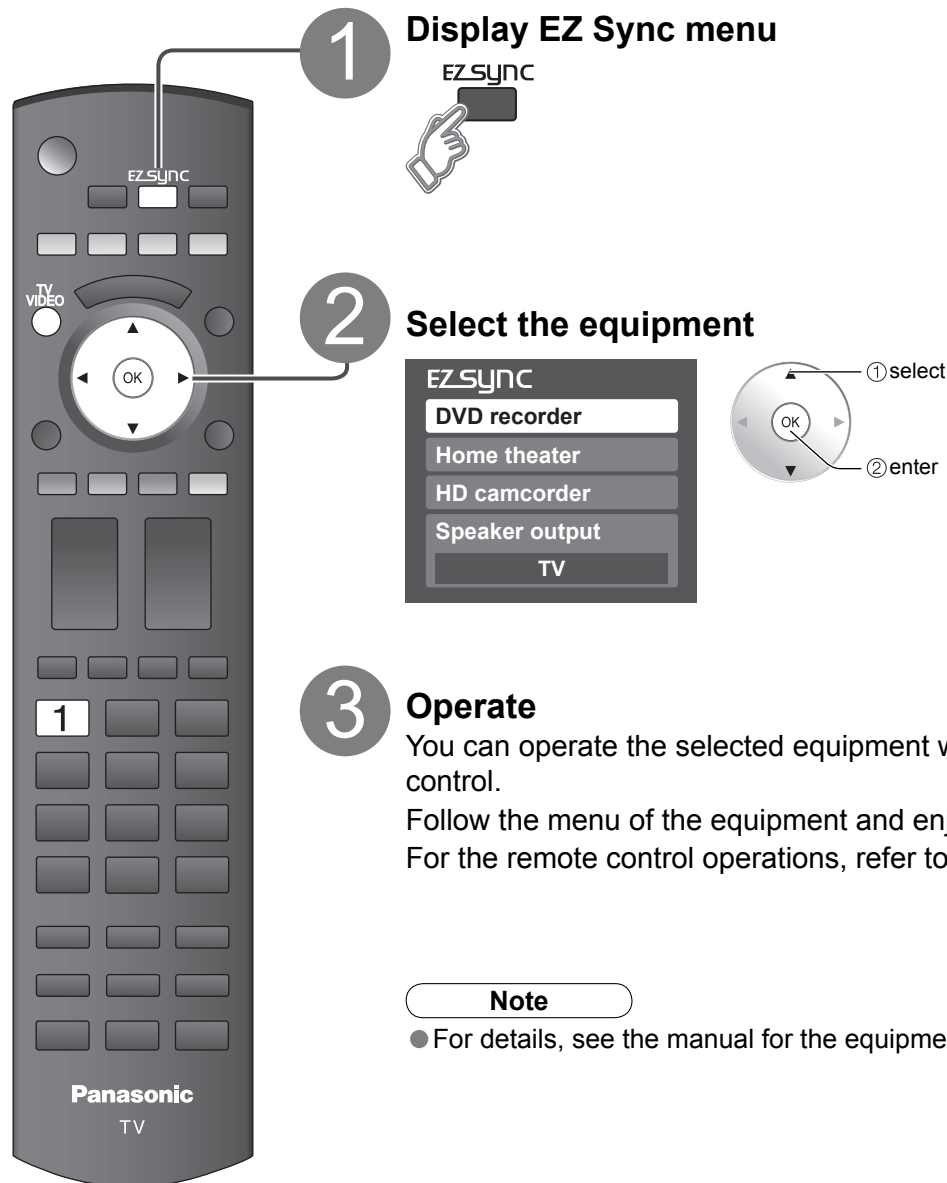

1 Display EZ Sync menu

2 Select the equipment

3 Operate

You can operate the selected equipment with the TV's remote control. Follow the menu of the equipment and enjoy watching. For the remote control operations, refer to p. 34.

Note

- For details, see the manual for the equipment or ask your local dealer.


■ To return to TV



Displaying PC Screen on TV



The screen of the PC connected to the unit can be displayed on the TV.

You can also listen to PC sound with the audio cable connected. To connect PC (p. 44)

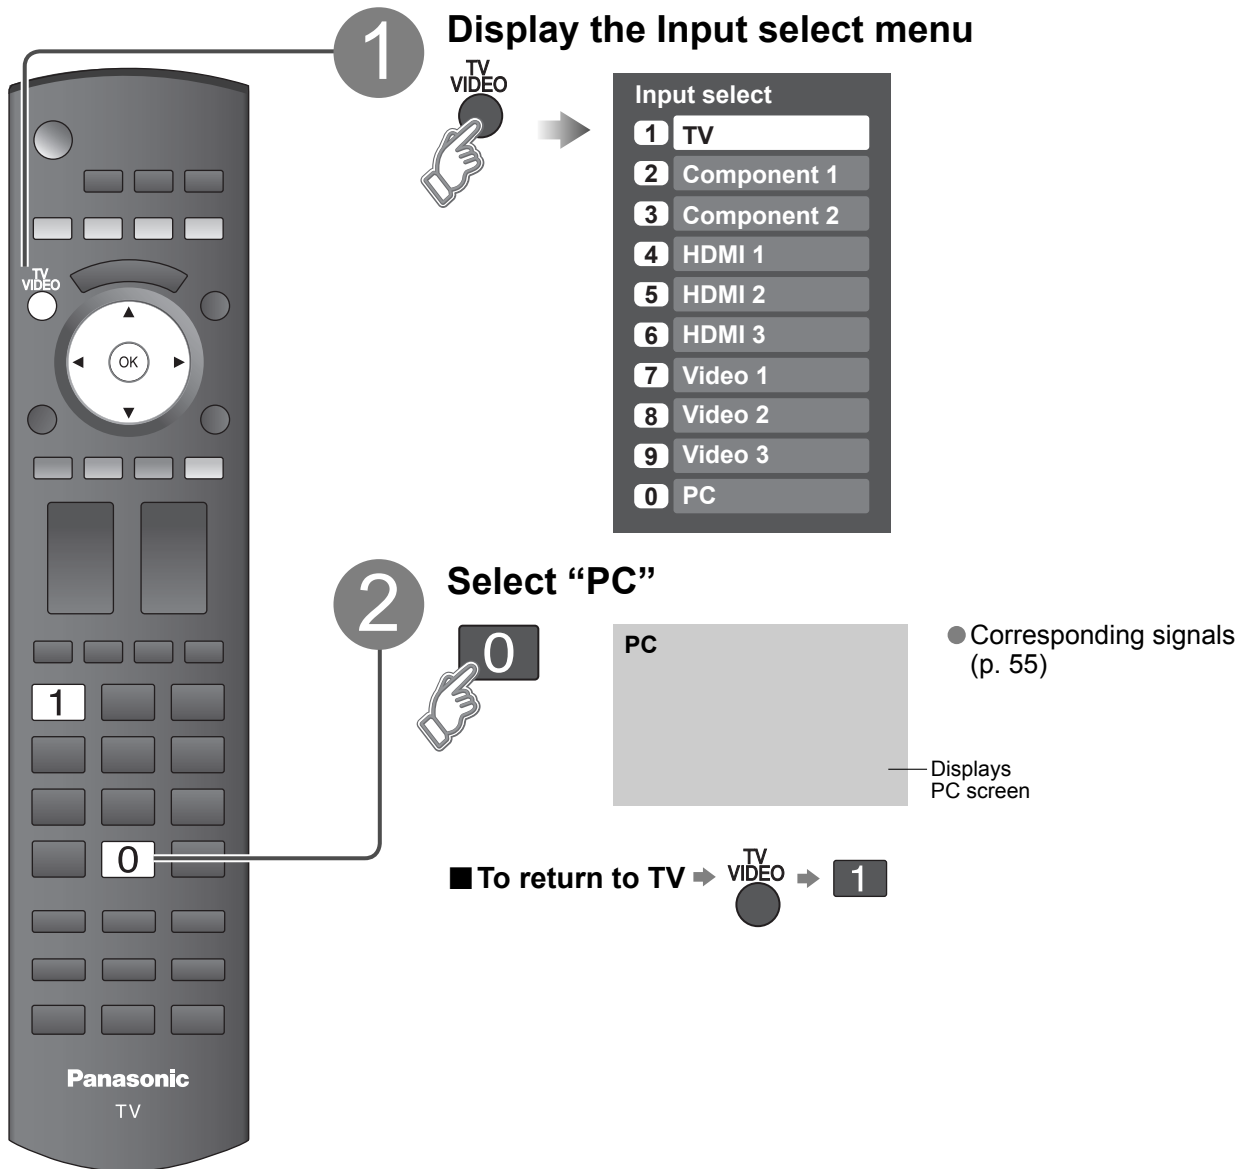

■ PC menu setting (changed as desired)

  ● Making settings → “How to Use Menu Functions” ① to ④ (p. 30)

Menu	Item	Adjustments/Configurations (options)
Picture	PC adjust	
	Normal	Resets PC adjust (Set/No)
	Sync	● H & V: The H and V sync signals are input from the HD/VD connector. (p. 55) ● On G: Uses a synchronized signal on the Video G signal, which is input from the G connector. (p. 55)
	Dot clock	Alleviates the problem if a picture appears to be vertically-striped, flickers partially or is blurred.
	H-position	Adjust the horizontal position. 
	V-position	Adjust the vertical position. 
	Clock phase	Alleviates the problem if the whole picture appears to flicker or is blurred. First adjust the Dot Clock to get the best possible picture, then adjust the Clock Phase so that a clear picture appears. Note It may not be possible to display a clear picture due to poor input signals.
	Input resolution	Switches to wide display. ● Input signal switched from VGA to WVGA ● Input signal switched from XGA to WXGA
	H-frequency V-frequency	Displays the H (Horizontal)/V (Vertical) frequencies. ● Display range Horizontal: 15 - 110 kHz Vertical: 48 - 120 Hz

● Audio menu (p. 30)

● For PC input, only audio signals can be output from PROG OUT terminals.

How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions so that you can enjoy watching TV in the way best suited for you.

1 Display menu

MENU

● Displays the functions that can be set (varies according to the input signal)

2 Select the menu

Menu

- EZ Sync
- ☒ Picture
- Audio
- Timer
- Lock
- Memory card
- Setup

① select
② next

3 Select the item

Picture 1/2

Normal	Set
Picture mode	Vivid
Picture	0
Brightness	0
Color	0
Tint	0
Sharpness	0

select

(example: Picture menu)

■ Press to exit from menu screen



■ Press to return to the previous screen



4 Adjust or select

Picture 1/2

Normal	Set
Picture mode	Vivid
Picture	0
Brightness	0
Color	0
Tint	0
Sharpness	0

adjust or select

(example: Picture menu)

Menu list

Menu	Item	
EZ Sync	DVD recorder, Home theater, HD camcorder, Speaker output	
	Normal	
	Picture mode	
	Picture, Brightness, Color, Tint, Sharpness	
	Color temp.	
	Color mgmt.	
	C.A.T. S.	
	Pro setting	
	Zoom adjust	
	PC adjust	
	Video NR	
	3D Y/C filter	
	Color matrix	
	Block NR	
	Mosquito NR	
	Black level	
	3:2 pulldown	
	HD Size	
Audio	Normal	
	Bass	
	Treble	
	Balance	
	AI sound	
	BBE VIVA 3D	
	BBE	
	Surround	
	Speaker output	
	HDMI 1 in HDMI 2 in HDMI 3 in	
	Audio leveler	
Timer	Sleep, Timer 1-5	
Lock		
Memory Card	Memory card	

Adjustments/Configurations (alternatives)	
[DVD recorder/Home theater/HD camcorder] Select equipment to access and operate. (p. 34)	
[Speaker output] Select audio output. (Home theater/TV) (p. 34)	
● EZ Sync menu is accessible directly by pressing the EZ Sync button on the remote control. ➡  (p. 27)	
Resets all picture adjustments to factory default settings except for "Other adjust" (Set/No)	Normal Set
Basic picture mode (Vivid/Standard/Studio ref/Custom) (p. 54)	Picture mode Vivid
Adjusts color, brightness, etc. for each picture mode to suit your taste	Picture +20
	Brightness 0
	Color 0
Selects level of warm colors (red) and cool colors (blue) (Cool/Normal/Warm)	Color temp. Cool
On: Enhances green and blue color reproduction, especially outdoor scenes. (On/Off)	Color mgmt. On
Adjusts the brightness and gradation accordingly, to optimize contrast. (Off/On)	C.A.T.S. Off
Adjust the "Picture mode" setting in more detail. (p. 54) (This setting can be adjusted only when "Custom" or "Photo" is selected.)	Pro setting
Adjusts vertical alignment and size when aspect setting is "ZOOM" (p. 52)	Zoom adjust
Sets PC display (p. 29)	PC adjust
Reduces noise, commonly called snow. Leave it off when receiving a strong signal. (Off/On)	Video NR Off
Minimizes noise and cross-color in the picture. (On/Off)	3D Y/C filter Off
Selects image resolution of component-connected devices (HD/SD) ● SD: Standard Definition HD: High Definition ● Only 480p signal accepted; regular TV (NTSC) is not available.	Color matrix SD
Reduces noise of specific digital signals of DVD, STB, etc. (On/Off)	Block NR Off
Reduces HDTV flicker noise in the contoured sections of an image (Off/On)	Mosquito NR Off
Selects Dark or Light. Valid only for external input signals. (Dark/Light)	Black level Light
Transfers film to video. (On/Off)	3:2 pulldown Off
Selects between 95 % (Size 1) or 100 % (Size 2) for the scanning area when HDTV. (Size 1/ Size 2) Select "Size 1" if noise is generated on the edges of the screen. ● Size 1: Selected item for "HD size". Scanning 95 % ● Size 2: Selected item for "HD size". Scanning 100 %	HD Size size1
Resets Bass, Treble and Balance adjustments to factory default settings. (Set/No)	Normal Set
Increases or decreases the bass response.	Bass + 4
Increases or decreases the treble response.	Treble 0
Emphasizes the left / right speaker volume.	Balance 0
Equalizes overall volume levels across all channels and external inputs. (On/Off)	AI sound On
BBE ViVA HD3D (High-Definition 3D) Sound provides musically accurate natural 3D image with Hi-Fi sound. The clarity of the sound is improved by BBE while the width, depth and height of sound image are expanded by BBE's proprietary 3D sound process. BBE ViVA HD3D Sound is compatible with all TV programs including news, music, dramas, movies, sports and electronic games. (On/Off) BBE High Definition Sound restores clarity and presence for better speech intelligibility and musical realism. (On/Off)	BBE VIVA 3D On
Enhances audio response when listening to stereo. (On/Off)	Surround Off
Switches to "Off" when using external speakers (On/Off) ● "AI sound", "Surround", and "Audio leveler" do not work if "Off" is selected	Speaker output On
Selects according to the signal when HDMI is connected (Auto/Digital/Analog) ● Auto: Automatically selects Analog / Digital signal	HDMI1 in Auto
	HDMI2 in Auto
	HDMI3 in Auto
Minimizes volume disparity after switching to external inputs	Audio leveler 0
The TV can automatically turn On/Off at the designated date and time (p. 42)	Sleep 60
Locks the channels and programs (p. 36)	
[Slide show/Photo viewer/Thumbnails] Select the still picture viewing mode. (p. 24)	
[Movie player] To view moving pictures recorded in MPEG 2 or AVCHD format. (p. 22)	
● In AV mode, the Audio menu and Setup menu give fewer options.	
	Memory card

How to Use Menu Functions

 
Various menus allow you to make settings for the picture, sound, and other functions so that you can enjoy watching TV in the way best suited for you.

1 Display menu




● Displays the functions that can be set (varies according to the input signal)

2 Select "Setup"



3 Select the item

 

■ Press to exit from menu screen



 
■ Press to return to the previous screen



1 Display Sub Menu



2 Select the item



■ Menu list

Menu	Item	
Setup	Surf mode	
	Language	
	Clock	
	Program channel	
	External devices	Input labels
		Monitor out
	CC	
	EZ Sync setting	EZ Sync
		Power off link
		Power on link
		Default speakers
	Other adjust	Auto power on
		Side bar
		No signal shut-off
		No action shut-off
		SD card LED
	About	
	Reset	

■ Sub menu list

Menu	Item	
Setup SUB MENU	Surf mode	
	Set favorite	
	CC	
	Caption select	
	Signal meter	

(Continued)

Adjustments/Configurations (alternatives)	
Sets the mode to select the channel with Channel up/down button (Favorite/All) ● Favorite: Only channels registered as FAVORITE (p. 39)	Surf mode All
Selects the screen menu language (p. 16)	Language
Adjusts the clock (p. 16)	Clock
Sets channels (p. 38)	Program channel
Selects the terminal and label of the external equipment (p. 40)	

[Comp. 1/Comp. 2/HDMI 1/HDMI 2/HDMI 3/Video 1/Video 2/Video 3]

To prevent howling and image oscillation, stops output of the pictures and audio specified in this menu.
(p. 40) **(On/Off)**

Displays subtitles (Closed Caption) (p. 40)	CC
Controls equipment connected to HDMI terminals (p. 34) (On/Off) ● "Power off link", "Power on link", and "Default speakers" cannot be selected if "Off" is set.	EZ Sync On
Sets "Power off link" of HDMI connection equipment (p. 34) (Set/No)	Power off link Set
Sets "Power on link" of HDMI connection equipment (p. 34) (Set/No)	Power on link Set
Selects the default speakers (p. 34) (TV/Theater)	Default speakers TV
Turns TV On automatically when the cable box or a connected device is turned On (No/Set) ● The "Sleep" timer, "On / Off timer", and "First time setup" will not function if "Auto power on" is set. (p. 42)	Auto power on No
Change the brightness of the side bar (4:3 mode) and the extra space in Split-Screen mode. (Bright/Off/Dark/Mid) ● The recommended setting is "Bright" to prevent panel "Image retention". (p. 55)	Side bar Bright
To conserve energy, the TV automatically turns off when NO SIGNAL continues more than 10 minutes. (Set/No) Note ● Not in use when setting "Auto power on", "On/Off Timer", "Lock", "SD mode", PC input display or Digital channel. ● "No signal shut-off was activated" will be displayed for about 10 seconds when the TV is turned on for the first time after turning the power off by "No signal shut-off". ● The on-screen display will flash 3, 2 and 1 to indicate the last three (3) remaining minutes prior to the shut-off.	No signal shut-off Set
To conserve energy, the TV automatically turns off when no operation of remote or front panel key continues more than 3 hours. (No/Set) Note ● Not in use when setting "Auto power on", "On/Off Timer" or PC input display. ● "No action shut-off was activated" will be displayed for about 10 seconds when the TV is turned on for the first time after turning the power off by "No action shut off". ● The on-screen display will flash 3, 2 and 1 to indicate the last three (3) remaining minutes prior to the shut-off.	No action shut-off No
Set to "On", if you light SD card LED while SD card is inserted. (On/Off)	SD card LED On
Displays TV version and software license.	About
Performing Reset will clear all items set with Setup, such as channel settings. (p. 38)	Reset

Adjustments/Configurations (alternatives)	
Sets the mode to select the channel with Channel up/down button (Favorite/All)	
Sets favorite channels. (p. 21)	
Displays Closed Caption. (p. 40) (Off/On)	
Changes the station identifier. (p. 39)	
Checks the signal strength if interference or freezing occurs on a digital image. (p.38)	

EZ Sync™ “HDAVI Control™”*

* Simultaneously control all Panasonic “HDAVI Control” equipped components using one button on one remote.

Enjoy additional HDMI Inter-Operability with Panasonic products which have “HDAVI Control” function. This TV supports “HDAVI Control 2” function.

Connections to some Panasonic equipment (DVD Recorder DIGA, HD Camcorder, RAM theater, Player theater, Amplifier, etc.) with HDMI cables allow you to interface automatically.

The equipment with “HDAVI Control” function enables the following operations:

Automatic Input Switching, Power on link, Power off link and Speaker control (p. 35).

In addition, the equipment with “HDAVI Control 2” function enables the following operation:

EZ Sync Control only with TV’s remote control (for “HDAVI Control 2”) (p. 35).

EZ Sync “HDAVI Control”, based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers’ equipment that supports HDMI CEC cannot be guaranteed.

■ **For the first time / When adding new equipment, reconnecting the equipment or changing the setup.**

After the connection turn the equipment on and then switch the TV on.

Select the input mode to HDMI 1, HDMI 2 or HDMI 3 (p. 26), and make sure that an image is displayed correctly.

● This function needs an HDMI compliant (fully wired) cable. Non-HDMI-compliant cables cannot be utilized.

It is recommended that you use Panasonic’s HDMI cable.

Recommended part number:

RP-CDHG15 (4.9 ft/1.5 m), RP-CDHG30 (9.8 ft/3.0 m), RP-CDHG50 (16.4 ft/5.0 m)

1 Display menu

2 Select “Setup”

3 Select “EZ Sync setting”

4 Select “EZ Sync”

5 Select “On”
(default is On)

● Press to exit from menu screen
EXIT

● Press to return to the previous screen
RETURN

Automatic
Input
Switching

Speaker
control

EZ Sync
Control
only with
TV’s remote
control
(for “HDAVI
Control 2”)

Power on
link

Power off
link

Default
speakers

One-touch
theater
playback

● If no HDMI equipment is connected or standard HDMI equipment (non- “EZ Sync”) is used, set to “Off”.

At the start of the DIGA, Player theater, or RAM theater playback, the TV's input automatically switches to the input based on the playback equipment.

- For the RAM theater, the speakers automatically switch to the theater system.

If using the DIGA operation, the TV's input automatically switches to the DIGA and DIGA menu is displayed.

You can select Home theater, or TV speakers for audio output.



Control theater speakers with the TV's remote control.

This function is available only when Panasonic Amplifier or Player theater is connected.

- ① Press 

- ② Select "Speaker output"

- ③ Select "Home theater" or "TV"

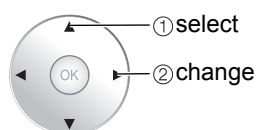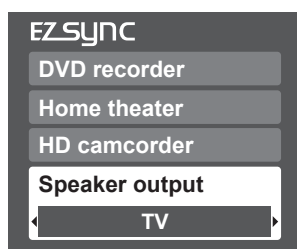

■ Home theater: Adjustment for equipment

Volume up / down →



Mute →




- The sound of the TV is muted.
- When the equipment is turned off, TV speakers become active.
- Selecting "Home theater" turns the equipment on automatically if it is in standby mode.

■ TV: The TV speakers are active.

In the EZ Sync menu, you can select HDMI connected Panasonic equipment and access it quickly. Continue using your TV's remote control to operate the equipment, pointing it at the TV.

- ① Press 

- ② Select the equipment you want to access.

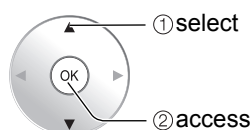

You can select available items only.

- ③ Operate the equipment with the TV's remote control, pointing it at the TV.

- To operate the equipment, read the manual of the equipment.

■ Available TV's remote control buttons

	Move the cursor/Select
	Set/Access
	Return to the previous menu
	Display the Functions menu on the equipment
	Available when the purpose of the keys is displayed on screen

When "Set" is selected (p. 33), TV is turned on automatically and switches to the appropriate HDMI input whenever EZ Sync compatible equipment is initially turned on and Play mode is selected.

When "Set" is selected (p. 33) and the TV is turned off, all connected EZ Sync compatible equipment is also automatically turned off.

- DIGA (Panasonic DVD Recorder) will not turn off if it is still in rec mode.

Caution: The TV remains on even if the EZ Sync compatible equipment is turned off.

"TV" is the default setting. To set the Home Theater system as default speakers, change the default speakers setting from "TV" to "Theater". Sound will be output from the Home Theater whenever the TV is powered on.

If the "ONE TOUCH PLAY" key is pressed on the remote control for Panasonic Home Theater system, the following sequence of operations is performed automatically.

- ① Home Theater power switches On, and playback begins.
- ② TV power switches On, and the playback screen is displayed.
- ③ Audio is muted on the TV and switches to the theater system.

Lock

You can lock specified channels or shows to prevent children from watching objectionable content.

 


1 Display menu



2 Select "Lock"

Menu
 EZ Sync
 Picture
 Audio
 Timer
Lock
 Memory card
 Setup



You will be asked to enter your password each time you display the Lock menu.

3 Input your 4-digit password

A 4-digit code must be entered to view a blocked program or change rating settings.


Create password
 Enter password.
 - - - -
 0 - 9

1	2	3
4	5	6
7	8	9
0		

- If it is your first time entering the password, enter the password twice in order to register it.

4 Select the Lock mode

 Lock
 Mode < Off >
 Channel Off
 Game Off
 Program Off
 Change password



- Off: Unlocks all the lock settings of "Channel", "Game" and "Program".
- All: Locks all the inputs regardless of the lock settings of "Channel", "Game" and "Program".
- Custom: Locks specified inputs of "Channel", "Game" and "Program".

 
5 Select the item

Lock
 Mode Custom
Channel Off
 Game Off
 Program Off
 Change password



- "Channel", "Game" and "Program" will grey out unless "Custom" is selected in "Mode".

6 Set



Press to exit from menu screen

EXIT



Caution

- Make a note of your password in case you forget it. (If you have forgotten your password, consult your local dealer.)

Note

- When you select a locked channel, a message will be displayed that allows you to view the channel if you input your password.



■ To select the channel or the rating of the program to be locked

Channel lock

Select up to 7 (1-7) channels to be blocked. These channels will be blocked regardless of the program rating.

① Select “Mode” and set to “Custom”

② Select channel to lock.

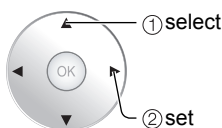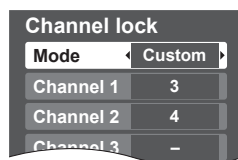


● To lock/unlock all channels:
Select “Mode” and set to “All” or “Off”.

All: Locks all channels
Off: Unlocks all channels

Game lock

Locks Channel 3, Channel 4 and external inputs.

Select “Game” in ⑤ and set to “On”.

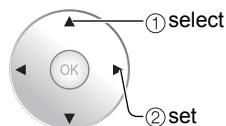



On: Locks
Off: Unlocks

Program lock



■ To set a rating level

“V-chip” technology enables restricted shows to be locked according to TV ratings.

① Select “Mode” and set to “On”.

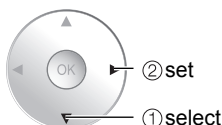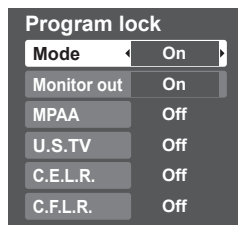


② Select the rating category you wish to follow

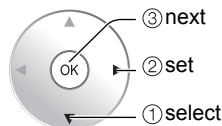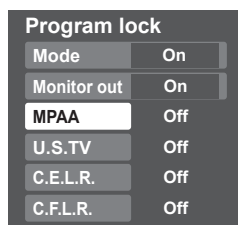

- MPAA: U.S movie ratings
- U.S.TV: U.S TV program ratings
- C.E.L.R.: Canadian English ratings
- C.F.L.R.: Canadian French ratings

③ Select the rating to be locked

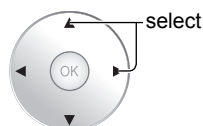


Example of “MPAA” (U.S movie ratings)

NR	No rating
G	General Audience: All ages admitted
PG	Parental Guidance Suggested
PG-13	Parents Strongly Cautioned: Inappropriate for children under 13
R	Restricted: Under 17 requires accompanying parent or adult guardian
NC-17	No one 17 and under admitted
X	Adults only

● To get more information (p. 50)

■ To disable recording of the locked program

➔ Select “Monitor out” and set to “On”.


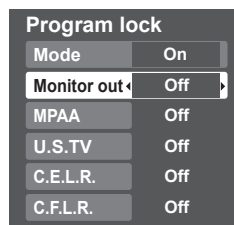


On: Turns on the monitor terminal output for programs that have been set to “Blocked.”
Off: Turns off the monitor terminal output for programs that have been set to “Blocked.”

Change password

■ To change the password

- ① In ④, select “Change password” and press OK
- ② Input the new 4-digit password twice

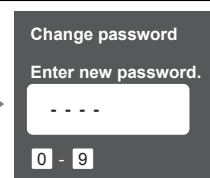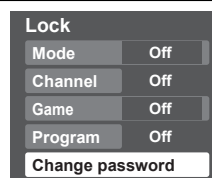

Note

- This television is designed to support the “Downloadable U.S. Region Rating System” when available. (Available only in U.S.A.)
- The Off rating is independent of other ratings.
- When placing a block on a specific-age-based-rating level, the Off rating and any other more restrictive ratings will also be blocked.

Editing and Setting Channels

The current channel settings can be changed according to your needs and reception conditions.

1 Display menu

2 Select "Setup"

3 Select "Program channel"

4 Select the function

5 Set

■ Press to exit from menu screen
EXIT

■ To reset the settings of setup menu

- ① Select "Reset" in Setup menu (3) and press OK
- ② Input your 4-digit password with number buttons
- ③ Select "YES" on the confirmation screen and press OK

Auto
Set automatically

Manual
Set manually



Signal meter

Check signal strength



Automatically searches and adds active channels to memory.

① **Select “ANT in”** → Select Cable or Antenna (p. 17)

② **Select “Auto”**

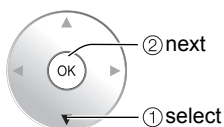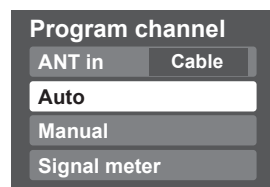

③ **Select scanning mode** (p. 17)

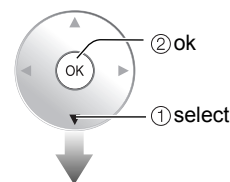
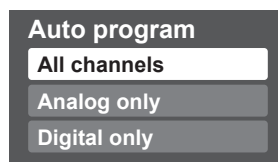


Settings are made automatically



- After completing the setting, select “Apply”. (see below ⑤).
- All previously saved channels are erased.

Use this procedure when changing setting of receiving channels or changing the channel display. Also, use to add or skip channels from channel list manually.


① **Select “Edit”**

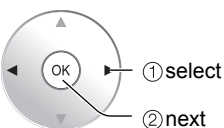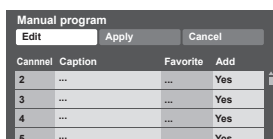

② **Select the item to be edited**

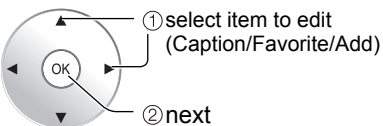
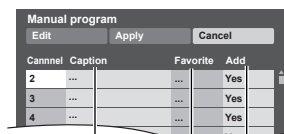


- **Caption:** Changes the station identifier
- **Favorite:** Registers channel to Favorite List
- **Add:** Adds or skips channels

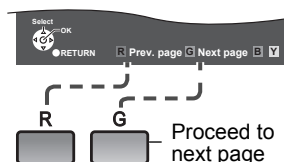

③ **Edit**

● **Caption**

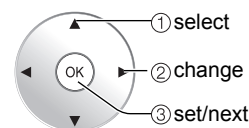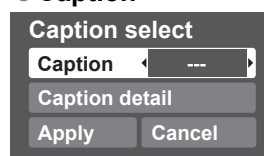


Caption

Select the station identifier

Caption detail

Rename (maximum 7 characters available)

● **Favorite**

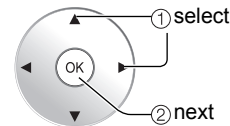

Set favorite


 
Select the number

● **Add**



Press OK to select “Yes (add)” or “No (skip)”







④ **Move cursor to channel number**

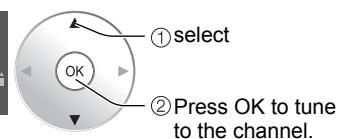



⑤ **Select “Apply”**

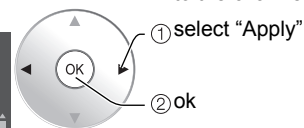 

To cancel the Edit

 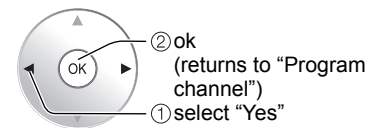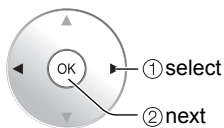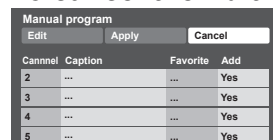

Check the signal strength if interference is found or freezing occurs on a digital image.

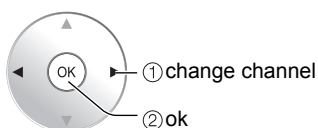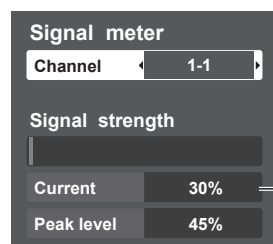

Signal intensity


- If the signal is weak, check the antenna. If no problem is found, consult your local dealer.

Note

- Not available if “Cable” is selected in “ANT in” (see above).
- Effective only for digital antenna channels.

- If “Lock” (p. 36) is activated and “Program channel” is selected, “Enter password.” will be displayed.

Input Labels/Monitor Out/

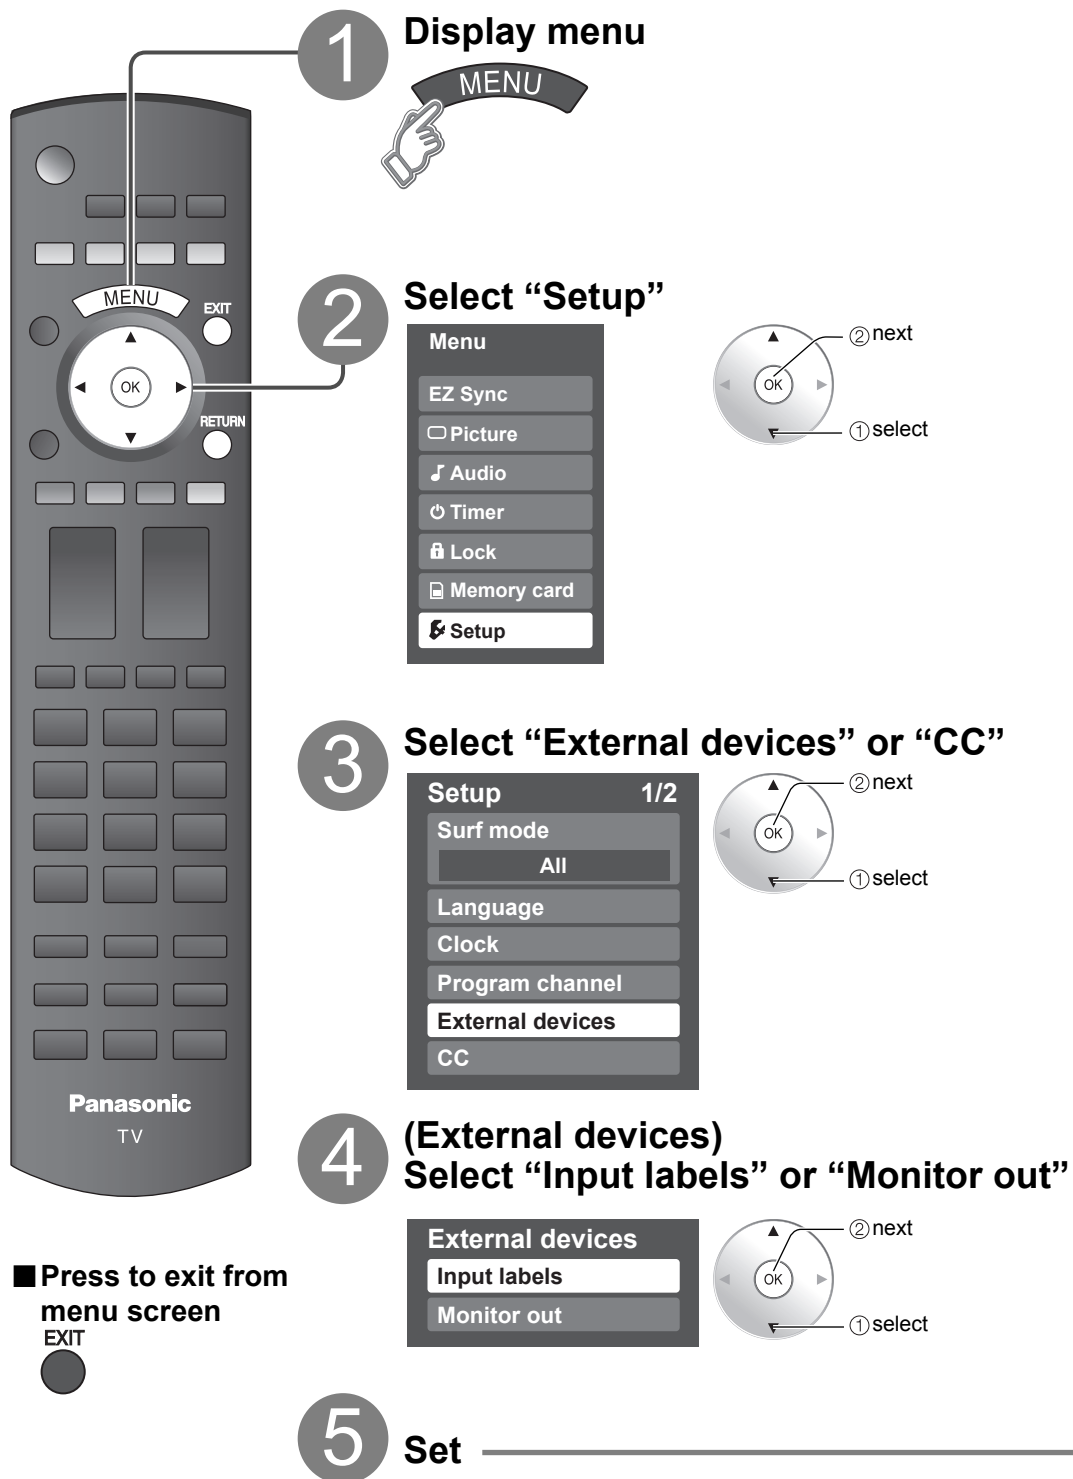

Input labels

Display labels of external devices

Monitor out

Stop output of the picture and audio



CC

Display Closed Caption


Closed Caption

Devices connected to external input terminals can be labeled for easier identification during input selection.
(In selecting input mode from p. 26 ②)

■ Select the terminal and label of the external equipment

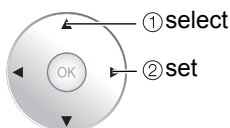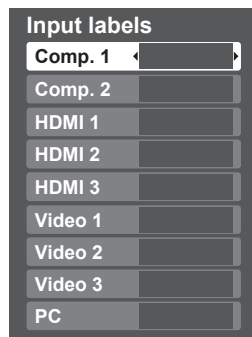



- Terminals: Comp. 1-2/HDMI 1-3/Video 1-3/PC
- Label: SKIP*/VCR/DVD/CABLE/DBS/PVR/GAME/AUX/[BLANK]
(for PC terminal, only SKIP and [BLANK] are available)

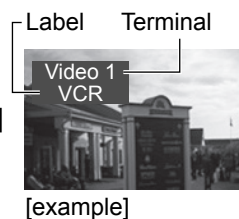

* If "SKIP" is selected, the TV/VIDEO button press will skip its input.

To prevent howling and image oscillation, stops output of the pictures and audio specified in this menu. (p. 32)



■ Select the terminal and set "Off"

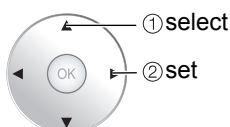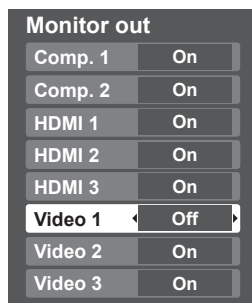

- Select "Off" to stop output of picture and audio. (Video 1/Video 2/Video 3)
- Comp. 1/Comp. 2/HDMI 1/HDMI 2/HDMI 3 cannot output video signals regardless of "Monitor out" setting. When equipment (STB, DVD, etc.) is connected to HDMI, COMPONENT or PC terminals, only audio signals can be obtained. From the output terminals, no video signals can be passed.

The television includes a built-in decoder that is capable of providing a text display of the audio. The program being viewed must be transmitting Closed Caption (CC) information. (p. 52)

■ Select the item and set

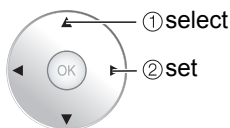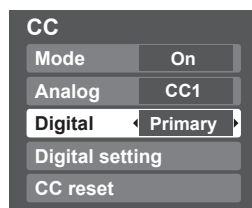

- | Mode | Select "On" (when not using, select "Off"). |
|---------|---|
| Analog | (Choose the Closed Caption service of Analog broadcasting.) |
| CC1-4: | Information related to pictures (Appears at bottom of screen) |
| T1-4: | Textual information (Appears over entire screen) |
| Digital | (The Digital Closed Caption menu lets you configure the way you choose to view the digital captioning.) |

- The settings in "Analog" or "Digital" depend on the broadcaster.



Select the setting.

- "Primary", "Second.", "Service 3", "Service 4", "Service 5", "Service 6"

■ To make more in-depth display settings in digital programs

① Select "Digital setting" and press OK

② Select the item and set

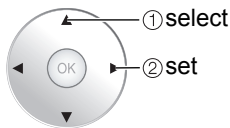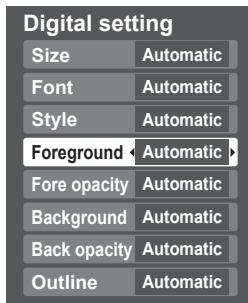

- Size: Text size
- Font: Text font
- Style: Text style (Raised, Depressed, etc.)
- Foreground: Color of text
- Fore opacity: Opacity of text
- Background: Color of text box
- Back opacity: Opacity of text box
- Outline: Outline color of text
(Identify the setting options on the screen.)

■ To reset the settings

Select "CC reset" and press OK

Using Timer



The TV can automatically turn On/Off at the designated date and time.

- The Clock must be set before On time/Off time settings. (p. 16)
- The "Sleep" timer and "On / Off timer" will not function if "Auto power on" (p. 32) is set.


1 Display menu



2 Select "Timer"

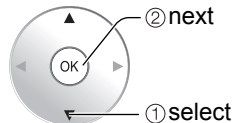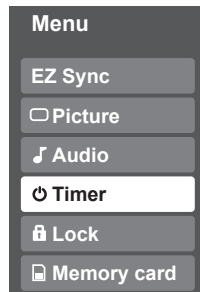

3 Select the timer to set

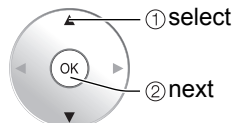

Sleep	Turns Off automatically
Timer 1	Turns On/Off automatically (5 timers can be set.)
Timer 5	

■ Press to exit from menu screen




■ Press to return to the previous screen



4 Set the timer

■ To set "Sleep" (Off Timer)



Set to shut the unit off after a pre-selected amount of time.

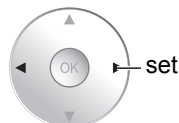

● 0/30/60/90 (minutes)

■ To set "Timer 1-5" (On/Off Timer)

Select the item and set

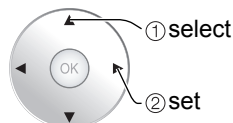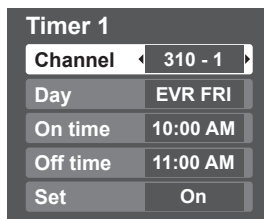


Channel	Select the channel
Day	Select the day SUN/MON/TUE/WED/THU/FRI/SAT (displays the nearest future date) MON-FRI/SAT-SUN/DAILY/EVR SUN/EVR MON/ EVR TUE/EVR WED/EVR THU/EVR FRI/ EVR SAT
On time	The time to turn On
Off time	The time to turn Off
Set	Timer setting (On/Off)

Note


- The TV automatically turns Off after 90 minutes when turned On by the Timer. This operation will be cancelled if the Off time is selected or if a key is pressed.

Operating Peripheral Equipment

You can operate other manufacturers' equipment using this TV's remote control.

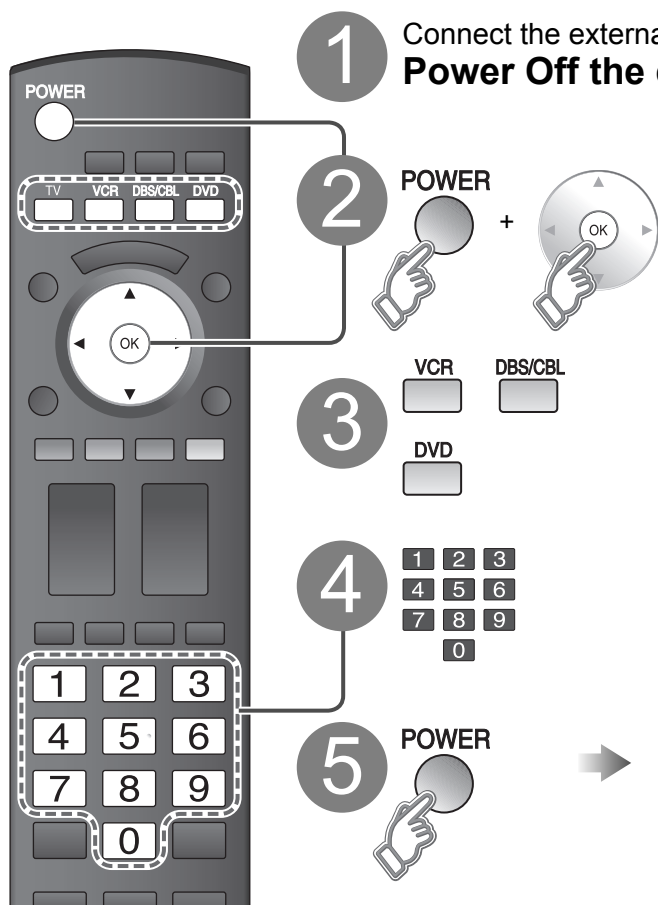


1 Connect the external equipment to the TV and **Power Off the external equipment**

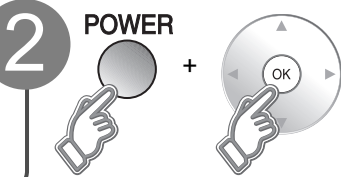

Press both buttons simultaneously for more than 3 seconds.

- Release the buttons when the equipment selection buttons start flashing.

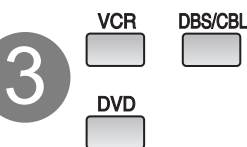

Select the equipment

with the equipment selection button

- The selected button remains lit (other buttons are not lit).



Input the equipment's 4-digit remote control code (p. 47-49)



Operate the equipment with the remote control (p. 46)

- The external equipment turns On.

■ **Press to return to the TV mode**




Caution

- Registration will fail if the wrong code is input or it takes more than 30 seconds to register.

To find a code not listed in the code list

This procedure searches all codes and is called the "sequence method."


① After step ③ above, change the code and test

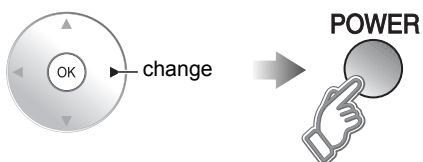

➔ **Operate the equipment with the remote control** (p. 46)


- Repeat until the code is found
- It may take many attempts before the correct code is found

② When the correct code is found

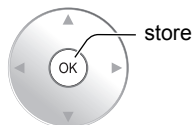

Recommended AV Connections

These diagrams show our recommendations for how to connect the TV unit to your various equipment. For other connections, consult the instructions for each piece of equipment and the specifications (p. 58). For additional assistance, please visit our website at: www.panasonic.com
www.panasonic.ca

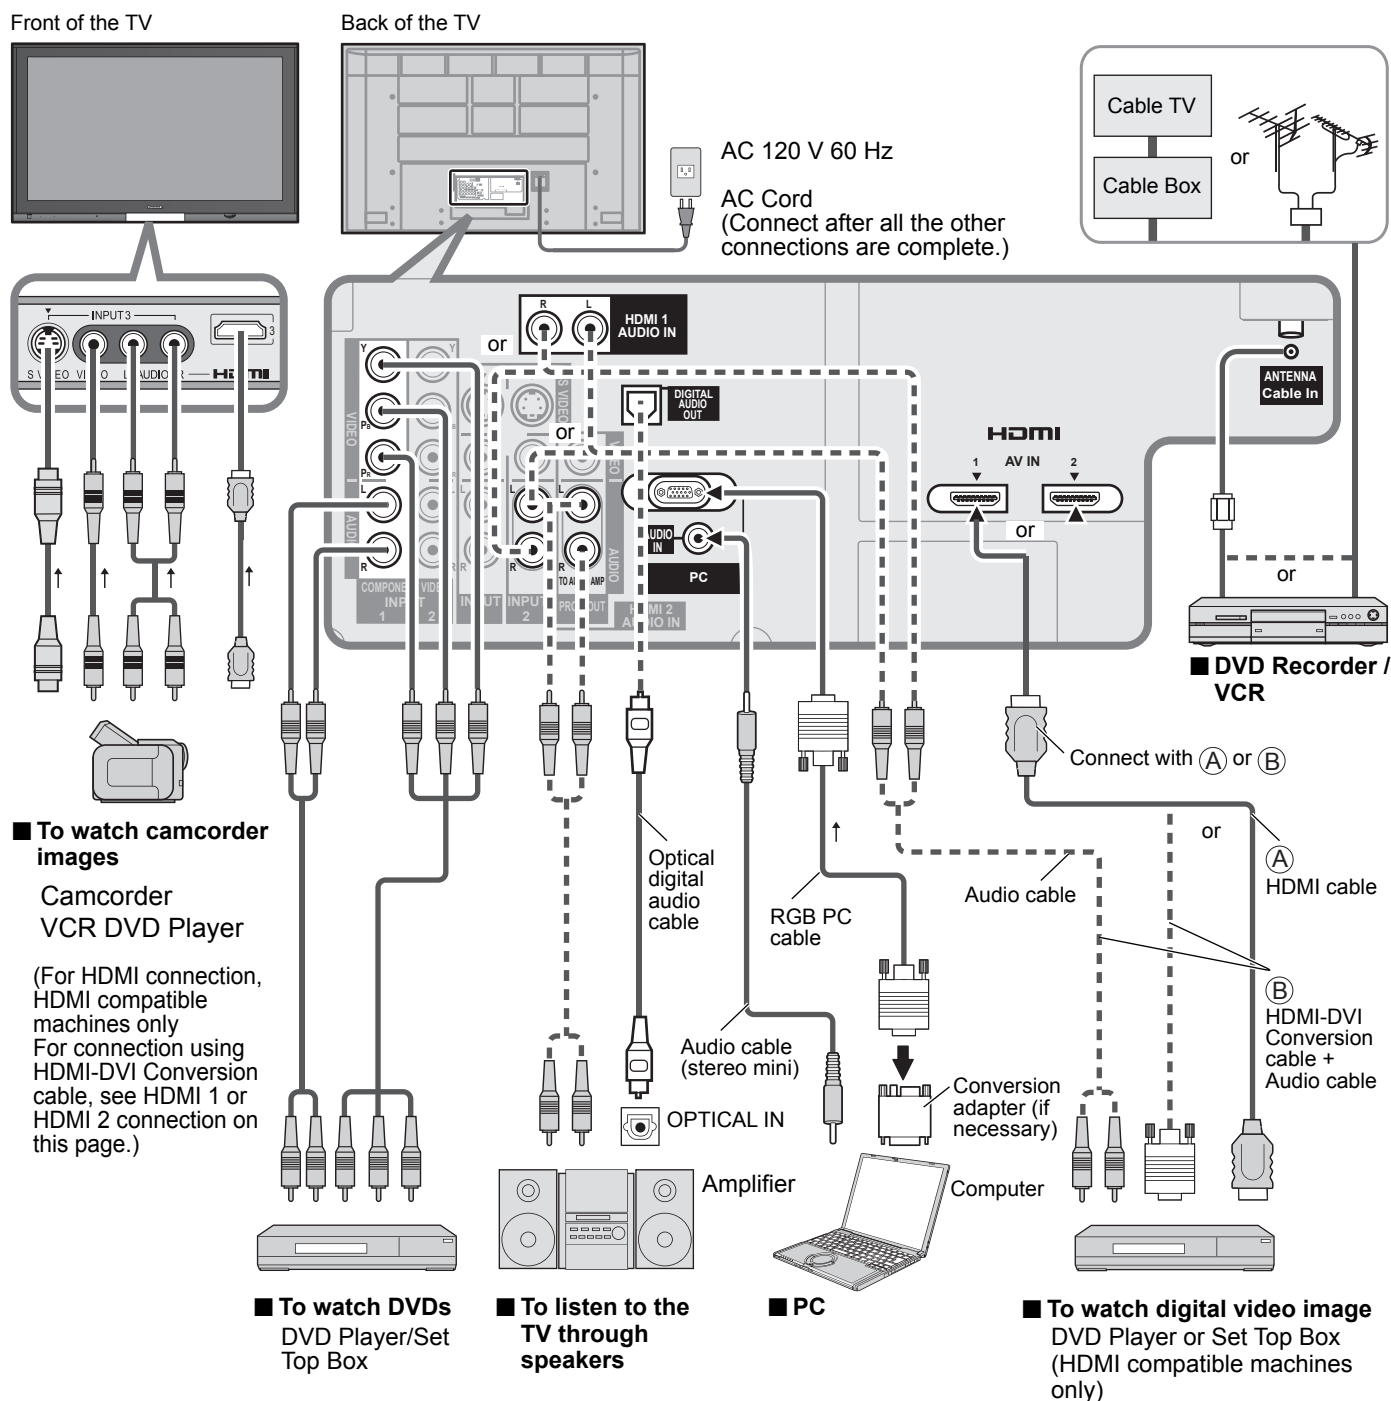

Note

- The picture and audio input signals connected to a terminal specified in "Monitor out" (p. 40) cannot be output from "PROG OUT" terminals. However, audio output can be obtained from "DIGITAL AUDIO OUT" terminal.
- To prevent howling and image oscillation, set the "Monitor out" setting when connecting the VCR with loop-connection. (p. 32, 40)
- When equipment (STB, DVD, etc.) is connected to HDMI, COMPONENT or PC terminals, only audio signals can be obtained. From the output terminals, no video signals can be passed.
- When receiving digital channel signals, all digital formats are down-converted to composite NTSC video to be output through the PROG OUT terminals.

45

- Optional HDMI and/or optical cables are not provided.

If connection (or setting) of equipment compatible with HDAVI control is changed, switch the power of this unit Off then On again while the power of all equipment is On (so that the unit can correctly recognize the connected equipment) and check that DIGA, RAM theater, and Player theater playback operate.

- HDMI 1 is recommended.

When connecting to HDMI 2, set the input mode to HDMI 2 (p. 26) initially before connecting to HDMI 2. After connection, confirm the HDMI control functions (p. 34-35).


- For DIGA: Connect with HDMI cable

- For RAM theater and Player theater:

Connect with the HDMI and audio cables.

If audio cable is not connected, you cannot listen to the TV program through the theater system.

When using an “EZ Sync” audio-video amplifier and a compatible DIGA recorder, use a daisy chain connection as shown below.

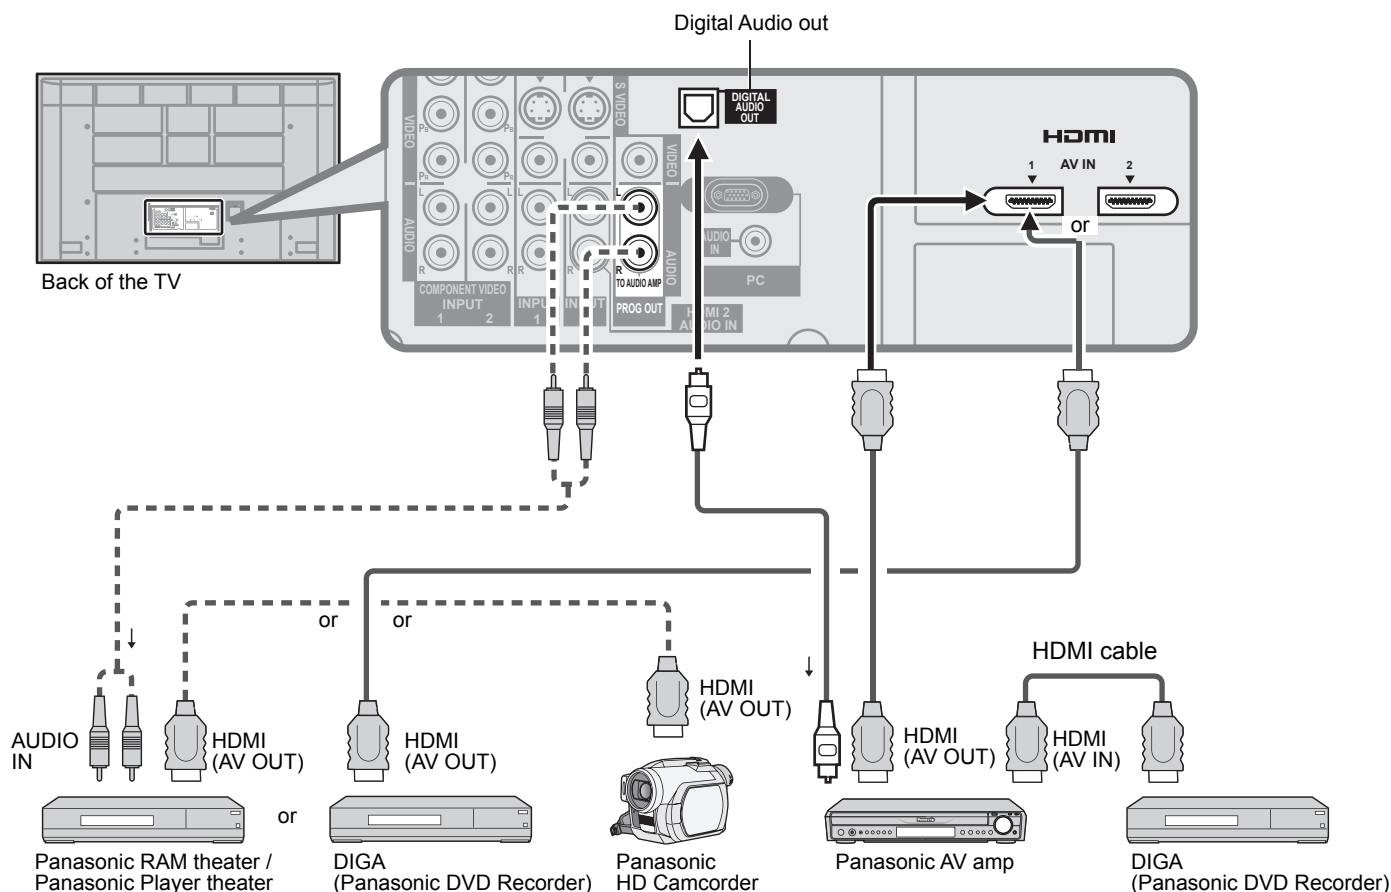

- One AV amp and one DIGA recorder can be operated with this unit.
- Be sure to connect the AV amp between this unit and the DIGA recorder.

■ Setting of this unit after connection

After making connections as shown above, set “EZ Sync” (under “EZ Sync setting”) to “On” using the Setup menu. (p. 34-35).

● Individual HDMI equipment may require additional menu settings specific to each model. Please refer to their respective operating instruction manuals.

- When audio from other equipment connected to this unit via HDMI is output using "DIGITAL AUDIO OUT" of this unit, the system switches to 2CH audio.

(When connecting to an AV amp via HDMI, you can enjoy higher sound quality.)

Remote Control Operation/Code List

The following explains how to operate external devices with the remote control.

- Register the remote control codes (p. 43) if you want to operate an external device from another manufacturer. (p. 47-49)

Note

- Operation may not be possible depending on the available memory size of the remote control.
This remote control is not designed to cover operation of all functions of all models.

■ Remote Control Operation List

This chart defines which keys are operational after programming (if needed) while in the selected remote control mode, CABLE, DBS, VCR, or DVD.

KEY NAME	VCR MODE	DBS/CBL MODE		DVD MODE
		(DBS)	(CBL)	
 POWER	Power	Power	Power	Power
 SAP	—	LIST	LIST	DVD AUDIO
 TV VIDEO	TV Input Switch	TV Input Switch	TV Input Switch	TV Input Switch
 MENU	—	Menu	Menu	Functions
 EXIT	—	Exit	Exit	—
	—	Up/Down/Left/Right	Up/Down/Right/Left	Up/Down/Right/Left
	—	Select	Select	Enter
 SUB MENU	—	Guide	Guide	Sub Menu
 RETURN	—	PPV/VOD	PPV/VOD	Return
 R	—	Red	A	Red
 G	—	Green	B	Green
 B	—	Blue	C	Blue
 Y	—	Yellow	D	Yellow
	Channel Up/Down	Channel Up/Down	Channel Up/Down	Channel Up/Down
	TV Volume Up/Down	TV Volume Up/Down	TV Volume Up/Down	TV Volume Up/Down
 ASPECT	—	Aspect	Aspect	—
 FAVORITE	—	Favorite	Favorite	Direct Navigator
 RECALL	Onscreen Display	Info	Info/Display/OSD	Onscreen Display
 MUTE	TV Mute	TV Mute	TV Mute	TV Mute
	0-9	0-9	0-9	0-9
 R-TUNE	—	Last Channel	Last Channel	Drive Select
 PROG-	—	Sub Channel	Music	PROG (Sub Channel)
	—	Page Down/Up	Page Down/Up	Skip Reverse/Forward
 TV/VCR	TV/VCR Switch	TV/DBS Switch	TV/CBL Switch	—
	Rewind/Fast Forward	Rewind/Fast Forward	Rewind/Fast Forward	Reverse/Forward
REC	VCR Record	PVR Record *1	PVR Record *1	Record
STOP	Stop	Stop	Stop	Stop
PAUSE	Pause	Pause	Pause	Pause
PLAY	Play	Play	Play	Play

*1: Combination type

Remote Control Code List

Cable Converter (DBS/CBL)							
Brand	Code	Brand	Code	Brand	Code	Brand	Code
A-Mark	0008, 0144	Gibraltar	0003	Penney	0000	Tocom	0012
ABC	0003, 0008, 0237	GMI	0883	Philips	0317, 1305	Torx	0003
Accuphase	0003	GoldStar	0144	Pioneer	0144, 0533, 0877, 1877	Toshiba	0000
Acorn	0237	Hamlin	0009, 0273	Prism	0012	Tristar	0883
Action	0237	Hitachi	0003, 0008, 0009	Pulsar	0000	United Cable	0003, 0276
Active	0237	Insight	0476, 0810	Quasar	0000	US Electronics	0003, 0008, 0276
Americast	0899	Jerrold	0003, 0012, 0276, 0476, 0810	RadioShack	0883	V2	0883
Archer	0237	Memorex	0000	RCA	1256	Videoway	0000
BCC	0276	Mitsubishi	0003	Regal	0273, 0276, 0279	Viewmaster	0883
Bell South	0899	Motorola	0276, 0476, 0810, 1254, 1376	Runco	0000	Vision	0883
British Telecom	0003	Multitech	0883	Samsung	0003, 0144	Vortex View	0883
Century	0008	Nova Vision	0008	Scientific Atlanta	0000, 0003, 0008, 0012, 0237, 0477, 0877, 1877	Zenith	0000, 0525, 0899
Clearmaster	0883	Novaplex	0008	Sony	1006		
ClearMax	0883	NSC	0012	Sprucer	0144		
Cool Box	0883	Pace	0008, 0237, 0877, 1877	Starcom	0003		
Coolmax	0883	Panasonic	0000, 0008, 0107, 0144	Supercable	0276		
Director	0476	Paragon	0000, 0008, 0525	Supermax	0883		
Fosgate	0276			Thomson	1256		
GE	0144						
General Instrument	0003, 0012, 0276, 0476, 0810						
Cable/PVR Combination (DBS/CBL)							
Americast	0899	Motorola	0810, 1376	Scientific Atlanta	0877, 1877	Zenith	0899
General Instrument	0810	Pace	0237, 1877	Sony	1006		
Jerrold	0810	Pioneer	0877, 1877	Supercable	0276		
		RCA	1256	Thomson	1256		
Satellite Receiver (DBS/CBL)							
Bell ExpressVu	0775	GE	0392, 0566	Motorola	0856, 0869	Samsung	1108, 1109, 1142, 1276, 1377, 1442, 1609
Chaparral	0216	General Instrument	0869	Netsat	0099	SKY	0856, 0099
Crossdigital	1109	GOI	0775, 1775	Next Level	0869	Sony	0639, 1639, 1640
DirecTV	0099, 0247, 0392, 0566, 0639, 0724, 0749, 0819, 1076, 1108, 1109, 1142, 1377, 1392, 1414, 1442, 1609, 1639, 1640, 1749, 1856	Hitachi	0749, 0819, 1250	Optimus	0724	Star Choice	0869
Dish Network System	0775, 1005, 1505, 1775	Houston	0775	Panasonic	0247, 0701, 1786	Star Trak	0869
Dishpro	0775, 1005, 1505, 1775	HTS	0775, 1775	Paysat	0724	Thomson	0392, 0566
Echostar	0775, 1005, 1505, 1775	Hughes Network Systems	0749, 1142, 1442, 1749	Philips	0099, 0722, 0724, 0749, 0775, 0819, 1076, 1142, 1442, 1749	Tivo	1142, 1442
Expressvu	0775, 1775	Innova	0099	Pioneer	1142, 1442	Toshiba	0749, 0790, 0819, 1285, 1749
Funai	1377	JVC	0775, 1775	Primostar	0869	UltimateTV	1392, 1640
		LG	1414	Proscan	0392, 0566	Uniden	0724, 0722
		Magnavox	0722, 0724	RadioShack	0566, 0775, 0869	Voom	0869
		McIntosh	0869	RCA	0392, 0566, 0775, 1142, 1392, 1442	Zenith	0856, 1856
		Memorex	0724				
		Mitsubishi	0749				
DBS/PVR Combination (S) (DBS/CBL)							
DirecTV	0099, 0392, 0639, 1076, 1142, 1377, 1392, 1442, 1640	Dishpro	0775, 1505	Motorola	0869	Sony	0639, 1640
Dish Network System	0775, 1505	Echostar	0775, 1505	Philips	1142, 1442	Star Choice	0869
		Expressvu	0775	Proscan	0392		
		Hughes Network Systems	1142, 1442	RCA	1392		
				Samsung	1442		
VCR (VCR)							
A-Mark	0000, 0037, 0240, 0278	Asha	0240	Carver	0035, 0081	Curtis Mathes	0000, 0035, 0060, 0162, 0240, 0278, 0432, 1035
ABS	1972	Astra	0035, 0240	CCE	0278	Cybernex	0240
Admiral	0039, 0047, 0048, 0060, 0209, 0479	Audiovox	0037, 0038, 0278	Cineral	0278	CyberPower	1972
Adventura	0000, 0037, 0240	Avis	0000	Citizen	0000, 0035, 0037, 0209, 0240, 0278, 0479, 1278	Daewoo	0037, 0045, 0278, 1278
Aiko	0278	Beaumarck	0240	Classic	0037	Daytron	0037, 0278
Aiwa	0000, 0037	Bell & Howell	0000, 0035, 0039, 0048, 0479	Colortyme	0035, 0045, 0060, 0278	Dell	1972
Alba	0209, 0278	Broksonic	0002, 0121, 0209, 0479, 1479	Colt	0000	Denon	0042, 0081
Alienware	1972	Calix	0037	Craig	0037, 0047, 0240	DirecTV	0739
Allegro	0039	Candle	0037, 0038	Criterion	0000	Dual	0000
America Action	0278	Canon	0035	Crosley	0000, 0035, 0081	Durabrand	0038, 0039
American High	0035, 0081	Capehart	0002	Crown	0278	Dynatech	0000, 0240
Amstrad	0000	Carrera	0240				

Remote Control Operation/Code List (Continued)

Remote Control Code List

VCR ()							
Brand	Code	Brand	Code	Brand	Code	Brand	Code
Electrohome	0000, 0037, 0043, 0060, 0209, 0240	Magnin	0240	Quasar	0002, 0035, 0162, 1035	Thomson	0060
Electrosonic	0037	Marantz	0035, 0038, 0081	RadioShack	0000, 0035, 0037, 0047, 0048, 0162, 0240	Tisonic	0278
Emerald	0121, 0184	Marta	0037	Radix	0037	Tivo	0618, 0636, 0739, 1996
Emerex	0032	Matsui	0037, 0209	Randex	0037	TMK	0000, 0240
Emerson	0000, 0002, 0037, 0043, 0121, 0184, 0209, 0240, 0278, 0479, 1278, 1479	Matsushita	0035, 0162, 0081	RCA	0000, 0035, 0042, 0045, 0048, 0060, 0240, 0807, 0880, 1035, 1060	TNIX	0037
Fisher	0000, 0039, 0047	Media Center PC	1972	Realistic	0000, 0035, 0037, 0047, 0048, 0121, 0162, 0240, 0278	Tocom	0240
Fuji	0033, 0035	MEI	0035	ReplayTV	0614, 0616	Toshiba	0000, 0043, 0045, 0209, 0240, 0845, 1008, 1145, 1972, 1996
Fujitsu	0000	Memorex	0000, 0035, 0037, 0039, 0162, 0047, 0048, 0209, 0240, 0278, 0479, 1237	Ricavision	1972	Tosonic	0278
Funai	0000, 0037, 0278	Metz	0037	Runco	0039	Totevision	0037, 0240
Garrard	0000	MGA	0043, 0060, 0240	Samsung	0000, 0038, 0045, 0060, 0240, 0432, 0739, 1014	Touch	1972
Gateway	1972	MGN Technology	0240	Samtron	0240	Trix	0037
GE	0000, 0035, 0048, 0060, 0240, 0807, 1035, 1060	Microsoft	1972	Sanky	0039, 0048	Ultra	0045, 0278
Gemini	0060	Midland	0240	Sansui	0000, 0002, 0067, 0209, 0240, 0479, 1479	Unitech	0240
Genexxa	0000, 0037, 0278	Mind	1972	Sanyo	0000, 0047, 0240, 0479	Vector	0045
Go Video	0240, 0432, 0614	Minolta	0042	Scott	0043, 0045, 0184, 0121	Vector Research	0038, 0184
GoldStar	0000, 0035, 0037, 0038, 0039, 0278, 1237	Mitsubishi	0000, 0042, 0043, 0047, 0048, 0060, 0067, 0807	Sears	0000, 0033, 0035, 0037, 0039, 0042, 0043, 0045, 0047, 0048, 0060, 0067, 0162, 0209, 1237	Victor	0067
Goodmans	0000, 0037, 0081, 0278	Motorola	0035, 0048	Sharp	0048, 0047, 0032, 0000, 0807	Video Concepts	0045
Gradiente	0000	MTC	0000, 0240	Shintom	0000, 0039, 0240	Videomagic	0037
Granada	0042, 0081	MTX	0000	Shogun	0240	Videosonic	0000, 0240
Grundig	0081	Multitech	0000, 0039	Siemens	0037	Viewsonic	1972
Harley Davidson	0000	NAD	0240	Signature	0000, 0035, 0037, 0048, 0060, 0479	Villain	0000
Harman/Kardon	0038, 0081	NEC	0038, 0067	Singer	0037, 0240	Voodoo	1972
Hewlett Packard	1972	Nikko	0037, 0278	Sonic Blue	0614, 0616	Wards	0000, 0060, 0033, 0035, 0037, 0038, 0042, 0043, 0045, 0047, 0048, 0081, 0240, 0479
HI-Q	0000, 0035, 0047	Nikkodo	0037, 0278	Sony	0000, 0032, 0033, 0035, 0047, 0067, 0636, 1232, 1972	White Westinghouse	0000, 0209, 0278, 0479
Hitachi	0000, 0035, 0037, 0042, 0045, 0089	Nishi	0240	Soundmaster	0000	World	0002, 0209, 0479
Howard Computers	1972	Niveus Media	1972	Stack 9	1972	XR-1000	0000, 0035, 0240
HP	1972	Noblex	0240	STS	0042	Yamaha	0038
Hughes Network Systems	0042, 0739	Northgate	1972	SV2000	0000	Zenith	0000, 0033, 0037, 0039, 0209, 0278, 0479, 1479
Humax	0739	Olympus	0035, 0162	SVA	0000	ZT Group	1972
Hush	1972	Optimus	0000, 0035, 0037, 0047, 0048, 0162, 0240, 0432, 1062	Sylvania	0000, 0035, 0043, 0081, 1781		
Hytek	0000, 0047	Orion	0000, 0002, 0121, 0184, 0209, 0240, 0278, 0479, 1479	Symphonic	0000, 0002, 0240		
iBUYPOWER	1972	Panama	0035	Systemax	1972		
ITT Nokia	0240	Panasonic	0000, 0035, 0162, 0225, 0614, 0616, 1035, 1062, 1244	Tagar Systems	1972		
Janeil	0240	Penney	0000, 0035, 0037, 0038, 0042, 0047, 0067, 0081, 0162, 0240, 1035, 1237	Tandy	0000		
Jensen	0067	Pentax	0042	Tatung	0000, 0048, 0067, 0081		
JVC	0067	Philco	0000, 0035, 0081, 0209, 0479	Teac	0000, 0067		
KEC	0037, 0278	Philips	0000, 0035, 0048, 0045, 0081, 0162, 0209, 0616, 0618, 0739	Technics	0000, 0035, 0037, 0162		
Kenwood	0038, 0067	Pilot	0037	Teknika	0000, 0035, 0037		
Kodak	0035, 0037	Pioneer	0042, 0067, 0081, 0162	Telecorder	0240		
KTV	0000	Polk Audio	0081	Tevion	0479		
LG	0037, 0038, 0240	Portland	0278	Thomas	0000, 0002		
Linksys	1972	Profitronic	0240				
Lloyd's	0000, 0038, 0240	Proscan	0060, 1060				
Loewe	0081	Protec	0000				
Logik	0000, 0240	Pulsar	0039, 0240, 0278				
Lumatron	0278	Pulser	0240				
LXI	0000, 0037, 0042, 0067	Quartz	0035, 0047				
M Electronic	0240						
Magnasonic	0000, 0037, 0240, 0278, 1278						
Magnavox	0000, 0035, 0037, 0039, 0048, 0081, 0240, 0618, 1781						

DBS/PVR Combination (V) ()

Brand	Code	Brand	Code	Brand	Code	Brand	Code
Hughes Network Systems	0739	Philips	0739				
		Samsung	0739				

PVR (V) ()

ABS	1972	Hughes Network Systems	0739	Northgate	1972	Tagar Systems	1972
Alienware	1972			Panasonic	0616	Tivo	0618, 0636, 0739
CyberPower	1972	Humax	0739	Philips	0618, 0739	Toshiba	1008, 1972, 1996
Dell	1972	Hush	1972	RCA	0880	Touch	1972
DirecTV	0739	iBUYPOWER	1972	ReplayTV	0614, 0616	Viewsonic	1972
Gateway	1972	Linksys	1972	Samsung	0739	Voodoo	1972
Hewlett Packard	1972	Media Center PC	1972	Sonic Blue	0614, 0616	ZT Group	1972
Howard Computers	1972	Microsoft	1972	Sony	0636, 1972		
HP	1972	Mind	1972	Stack 9	1972		
		Niveus Media	1972	Systemax	1972		

DVD ()

3D LAB	0503, 0539	Funai	0675, 1268	Minato	0752	Samsung	0490, 0573, 0744, 0820, 0899, 1044, 1075
Aiwa	0641	GE	0522, 0815	Mintek	0839		
Akai	0695, 0899	Go Video	0573, 0741, 0744, 0869, 1044, 1075	Mitsubishi	1521, 0521	Sansui	0695
Alba	0672			NAD	0591, 0741	Sanyo	0675, 0695
Alco	0790	GoldStar	0741, 0869	NEC	0785, 0869	Schwaiger	0752
Allegro	0869	Goodmans	0790	Onkyo	0503, 0627, 0792	Sharp	0630, 0675, 0752, 1256
Apex Digital	0533, 0672, 1020, 1056, 1061	Gradiente	0490, 0651	Optimus	0571		
		Grundig	0539	Oritron	0651	Shinsonic	0533, 0839
Arrgo	1023	Harman/Kardon	0582	Palsonic	0672	Slim Art	0784
Audiovox	0790	Hitachi	0573, 0664	Panasonic	0503, 0490, 0571, 0703, 1362, 1462, 1490, 1762, 2006, 2016, 2026, 1779	Sonic Blue	0573, 0869
Blue Parade	0571	Hiteker	0672			Sony	0533, 0864, 1033, 1431, 1533
Blue Sky	0695	Insignia	1268	Philips	0503, 0539, 0646, 0675, 1267, 1354	Sylvania	0675, 1268
Brandt	0651	Integra	0571, 0627	Pioneer	0525, 0571, 0631	Symphonic	0675, 1268
Broksonic	0695	JMB	0695	Polaroid	1020, 1061	Teac	0571, 0790
California Audio Labs	0490	JVC	0558, 0623, 0867, 1164	Polk Audio	0539	Technics	0490, 0703
		Kawasaki	0790	Presidian	0675	Tevion	0651
Celestial	1020	Kenwood	0490, 0534	Proceed	0672	Theta Digital	0571
Centrex	0672	KLH	0790, 1020	Proscan	0522	Thomson	0522
CineVision	0869	Kloss	0533	Qwestar	0651	Toshiba	0503, 0539, 0573, 0695, 1045, 1154
Clairtone	0571	Koss	0651, 1061	Radionette	0741	Universum	0591
Creative	0503, 0539	Lasonic	0627	RadioShack	0571	Urban Concepts	0503, 0539
CyberHome	0816, 0874, 1023, 1129	Lecson	1533	RCA	0522, 0571, 0790, 0822, 1022, 1132	US Logic	0839
		LG	0591, 0741, 0869	Realistic	0571	Venturer	0790
Daewoo	0784, 0869, 1172	LiteOn	1058	Reoc	0752	Xbox	0522
Denon	0490, 0634	Loewe	0741	Rio	0869	Yamaha	0490, 0539, 0545
Digitrex	0672	Magnasonic	0651, 0675	Rotel	0623	Zenith	0503, 0591, 0741, 0869
Disney	0675	Magnavox	0503, 0539, 0646, 0675, 1268	Saba	0651	Zeus	0784
Dual	0675	Marantz	0503, 0539, 0675	Sampo	0752		
DVD2000	0521	McIntosh	1533				
Emerson	0591, 0675, 1268	Medion	0651				
Enterprise	0591	Memorex	0695				
Entivo	0503, 0539	Microsoft	0522				
ESA	1268						
Firstline	0651						

DVD-Recorder (Y) ()

Apex Digital	1056	LG	0741	Pioneer	0631	Sylvania	0675
CyberHome	1129	Magnavox	0646, 0675	RCA	0522	Zenith	0741
Funai	0675	Panasonic	0490, 2006, 2016, 2026	Samsung	0490		
Go Video	0741			Sharp	0675		
JVC	1164	Philips	0646	Sony	1033, 1431		

Ratings List for Lock

“V-chip” technology enables you to lock channels or shows according to standard ratings set by the entertainment industry. (p. 37)

■ U.S. MOVIE RATINGS (MPAA)

NR	NO RATING (NOT RATED) AND NA (NOT APPLICABLE) PROGRAMS. Movie has not been rated or rating does not apply.
G	GENERAL AUDIENCES. All ages admitted.
PG	PARENTAL GUIDANCE SUGGESTED. Some material may not be suitable for children.
PG-13	PARENTS STRONGLY CAUTIONED. Some material may be inappropriate for children under 13.
R	RESTRICTED. Under 17 requires accompanying parent or adult guardian.
NC-17	NO ONE 17 AND UNDER ADMITTED.
X	ADULTS ONLY.

■ U.S. TV PROGRAMS RATINGS (U. S. TV)

Age-based Group	Age-based Ratings	Possible Content Selections	Description
NR (Not Rated)	TV-NR	- Viewable - Blocked	Not Rated.
Youth	TV-Y	- Viewable - Blocked	All children. The themes and elements in this program are specifically designed for a very young audience, including children from ages 2-6.
	TV-Y7	- FV Blocked - Viewable - Blocked	Directed to older children. Themes and elements in this program may include mild physical or comedic violence, or may frighten children under the age of 7.
Guidance	TV-G	- Viewable - Blocked	General audience. It contains little or no violence, no strong language, and little or no sexual dialogue or situations.
	TV-PG	- D,L,S,V (all selected) - Any combination of D, L, S, V	Parental guidance suggested. The program may contain infrequent coarse language, limited violence, some suggestive sexual dialogue and situations.
	TV-14	- D,L,S,V (all selected) - Any combination of D, L, S, V	Parents strongly cautioned. This program may contain sophisticated themes, sexual content, strong language and more intense violence.
	TV-MA	- L,S,V (all selected) - Any combination of L, S, V	Mature audiences only. This program may contain mature themes, profane language, graphic violence, and explicit sexual content.

FV: Fantasy/Cartoon Violence. V: Violence S: Sex L: Offensive Language D: Dialogue with sexual content.

■ CANADIAN ENGLISH RATINGS (C. E. L. R.)

E	Exempt - Exempt programming includes: news, sports, documentaries and other information programming, talk shows, music videos, and variety programming.
C	Programming intended for children under age 8. No offensive language, nudity or sexual content.
C8+	Programming generally considered acceptable for children 8 years and over. No profanity, nudity or sexual content.
G	General programming, suitable for all audiences.
PG	Parental Guidance suggested. Some material may not be suitable for children.
14+	Programming contains themes or content which may not be suitable for viewers under the age of 14. Parents are strongly cautioned to exercise discretion in permitting viewing by pre-teens and early teens.
18+	18+ years old. Programming restricted to adults. Contains constant violence or scenes of extreme violence.

■ CANADIAN FRENCH RATINGS (C. F. L. R.)

E	Exempt - Exempt programming.
G	General - Programming intended for audience of all ages. Contains no violence, or the violence content is minimal or is depicted appropriately.
8 ans+	8+ General - Not recommended for young children. Programming intended for a broad audience but contains light or occasional violence. Adult supervision recommended.
13 ans+	Programming may not be suitable for children under the age of 13 - Contains either a few violent scenes or one or more sufficiently violent scenes to affect them. Adult supervision strongly suggested.
16 ans+	Programming may not be suitable for children under the age of 16 - Contains frequent scenes of violence or intense violence.
18 ans+	Programming restricted to adults. Contains constant violence or scenes of extreme violence.

Caution

- The V-Chip system that is used in this set is capable of blocking “NR” programs (non rated, not applicable and none) as per FCC Rules Section 15.120(e)(2). If the option of blocking “NR” programs is chosen “unexpected and possibly confusing results may occur, and you may not receive emergency bulletins or any of the following types of programming:”

- Emergency Bulletins (Such as EAS messages, weather warnings and others)
- Locally originated programming • News • Political • Public Service Announcements • Religious • Sports • Weather

Maintenance

First, unplug the Power cord plug from the wall outlet.

Display panel

The front of the display panel has been specially treated. Wipe the panel surface gently using only a cleaning cloth or a soft, lint-free cloth.

- If the surface is particularly dirty, soak a soft, lint-free cloth in diluted neutral detergent (1 part detergent diluted by 100 times the amount of water) and then wring the cloth to remove excess liquid. Use this cloth to wipe the surface of the display panel, then wipe it evenly with a dry cloth of the same type until the surface is dry.
- Do not scratch or hit the surface of the panel with fingernails or other hard objects. Furthermore, avoid contact with volatile substances such as insect sprays, solvents, and thinner; otherwise, the quality of the surface may be adversely affected.

Cabinet

If the cabinet becomes dirty, wipe it with a soft, dry cloth.

- If the cabinet is particularly dirty, soak the cloth in a weak detergent solution and then wring the cloth dry. Use this cloth to wipe the cabinet and then wipe it dry with a dry cloth.
- Do not allow any detergent to come into direct contact with the surface of the Plasma TV. If water droplets get inside the unit, operating problems may result.
- Avoid contact with volatile substances such as insect sprays, solvents, and thinner; otherwise, the quality of the cabinet surface may be adversely affected or the coating may peel off. Furthermore, do not leave it for long periods in contact with articles made from rubber or PVC.

Pedestal

- **Cleaning**
Wipe the surfaces with a soft, dry cloth. If the unit is particularly dirty, clean it using a cloth soaked with water to which a small amount of neutral detergent has been added and then wipe with a dry cloth.
Do not use products such as solvents, thinner, or household wax for cleaning, as they can damage the surface coating. (If using a chemically-treated cloth, follow the instructions supplied with the cloth.)
- Do not attach sticky tape or labels, as they can make the surface of the pedestal dirty. Do not allow long-term contact with rubber, vinyl products, or the like. (Doing so will cause deterioration.)

Technical Information


Closed Caption (CC)

- For viewing Closed Caption of digital broadcasting, set the aspect ratio to FULL.
(If viewing with H-FILL, JUST, ZOOM or 4:3, characters will be cut off.)
- The Closed Caption is not displayed when you use HDMI connection.
- If analog connected equipment is used for displaying or recording, Closed Caption (CC) should be set On/Off on the connected equipment.
The CC mode setting of the TV will not affect the analog input.
If a digital program is being output in analog format, the CC data will also be output in analog format.
If digital connected equipment is used for input, CC should be set On on either the connected equipment or the TV.
If CC is set On on both the connected equipment and the TV, captions from each unit will overlap.

Aspect Ratio


Lets you choose the aspect depending on the format of the received signal and your preference. (p. 19)
(e.g.: in case of 4:3 image)

● FULL

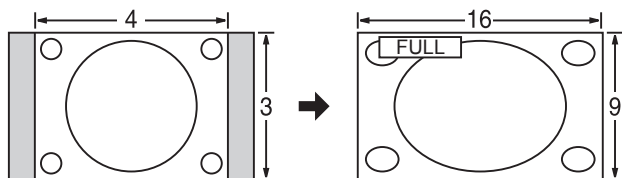


Enlarges the 4:3 image horizontally to the screen's side edges.
(Recommended for anamorphic picture)

● JUST

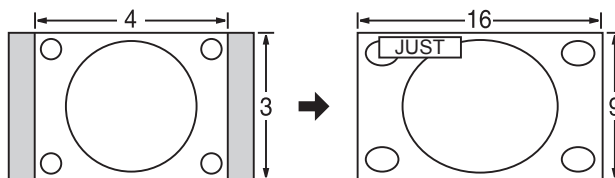


Stretches to justify the 4:3 image to the four corners of the screen.
(Recommended for normal TV broadcast)

● H-FILL

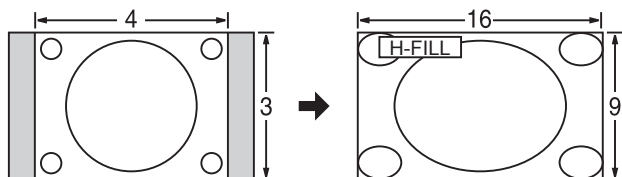


Enlarges the 4:3 image horizontally to the screen's side edges.
The side edges of the image are cut off.

● 4:3

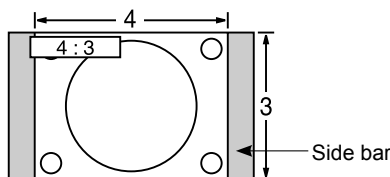

Standard
(Note that "Image retention" of the side bar may occur from displaying it for a long time.)

● ZOOM

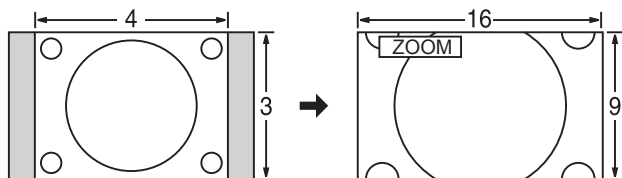

Enlarges the 4:3 image to the entire screen.
(Recommended for Letter Box)

Note


- 480i (4:3), 480i (16:9), 480p (4:3), 480p (16:9):
FULL, JUST, 4:3 or ZOOM
- 1080p / 1080i / 720p:
FULL, H-FILL, JUST, 4:3 or ZOOM
- When the signal is 720p/1080i/1080p, the aspect mode automatically defaults to Full after turning off the TV, after changing input mode, or after changed signal resolution other than 720p/1080i/1080p.

● Zoom adjust

Vertical image position and size can be adjusted in "ZOOM".

- ① Select "Zoom adjust" on the "Picture" menu. (p. 30-31)
- ② V-position: Vertical position adjustment

- ③ V-size: Vertical size adjustment

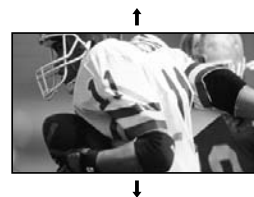

- To reset the aspect ratio → (OK)

Data format for SD Card browsing

Photo:	Still images recorded with digital still cameras compatible with JPEG files of DCF* and EXIF** standards Data format-Baseline JPEG (Sub-sampling: 4:4:4, 4:2:2 or 4:2:0) Max. number of files - 9,999 Image resolution - 160 x 120 to 10,000,000
Movie:	SD-Video Standard Ver. 1.2 [MPEG-2 (PS format)] and AVCHD Standard compatible files with an audio format that is either MPEG-1/Layer-2 format or Dolby Digital format (A modified data with a PC may not be displayed correctly.)

* DCF (Design rule for camera file system): A Japan Electronics and Information Technology Industries Association's standard

** EXIF (Exchangeable Image File Format)

Note

- Format the card with the recording equipment.
- The picture may not appear correctly on this TV depending on the recording equipment used.
- Display may take some time when there are many files and folders.
- This function cannot display Motion JPEG and still image not DCF formatted (i.e. TIFF, BMP).
- A data modified with a PC may not be displayed.
- Images imported from a PC must be compatible with EXIF 2.0, 2.1 and 2.2.
- Partly degraded files might be displayed at a reduced resolution.
- All ".JPG" extension datas in the card will be read in Photo View Mode.
- The folder and file names may be different depending on the digital camera used.
- Do not use two-byte characters or other special codes.
- The card may become unusable with this TV if file or folder names are changed.
- For the suitable SD Memory Cards, please confirm the latest information on the following website.
<http://panasonic.co.jp/pavc/global/cs> (This site is in English only)

SD Card warning messages

Message	Meaning
Is memory card in?	● The card is not inserted.
No file	● The card has no data or this type of data is not supported.
Cannot read file	● The file is broken or unreadable. ● The TV does not support the format.
Feature not available	● Your operation is not available.

GalleryPlayer warning messages

Cannot display image due to incorrect ID data.	● There is a problem with your TV decoder. ● If this message appears, please contact Panasonic Service Center for assistance. Refer to page 59, 61 (Limited Warranty), page 60 (Customer Services Directory)
Cannot display image on SD card.	● There is a problem with the data. Check the data inside the SD card.

Cautions in handling SD Card:

- Do not remove the card while the unit is accessing data (this can damage card or unit).
- Do not touch the terminals on the back of the card.
- Do not subject the card to a high pressure or impact.
- Insert the card in the correct direction (otherwise, card may be damaged).
- Electrical interference, static electricity, or erroneous operation may damage the data or card.
- Back up the recorded data at regular intervals in case of deteriorated or damaged data or erratic operation of the unit. (Panasonic is not liable for any deterioration or damage of recorded data.)

DIGITAL AUDIO OUT terminals

You can enjoy your home theater by connecting a Dolby Digital (5.1 channel) decoder and "Multi Channel" amplifier to the DIGITAL AUDIO OUT terminals.

Caution

- Depending on your DVD player and DVD-Audio software the copyright protection function may operate and disable optical output.
- External speakers cannot be connected directly to PROG OUT terminals.
- When an ATSC channel is selected, the output from the DIGITAL AUDIO OUT jack will be Dolby Digital. When an NTSC channel is selected, the output will be PCM.
- When playing movie on SD Card Movie player, when the sound has been recorded in Dolby Digital, the output from the DIGITAL AUDIO OUT terminal will be Dolby Digital. When the sound is recorded in the other formats, the output will be PCM.

Technical Information (Continued)

EZ Sync™ “HDAVI Control™”

HDMI connections to some Panasonic equipment allow you to interface automatically. (p. 34)

- This function may not work normally depending on the equipment condition.
- The equipment can be operated by other remote controls with this function on even if TV is in Standby mode.
- Image or sound may not be available for the first few seconds when the playback starts.
- Image or sound may not be available for the first few seconds when Input mode is switched.
- Volume function will be displayed when adjusting the volume of the equipment.
- If you connect the same kind of equipment at once (for example: one DIGA to HDMI 1 / another DIGA to HDMI 2), EZ Sync™ is available for the terminal with the smaller number.
- If you connect the equipment that has “HDAVI Control 2” function to the TV with HDMI cable, the sound from DIGITAL AUDIO OUT terminal can be output as multi channel surround.
- “HDAVI Control 2” is the newest standard (current as of February, 2007) for Panasonic’s HDAVI Control compatible equipment. This standard is compatible with Panasonic’s conventional HDAVI equipment.

HDMI connection

HDMI (high-definition multimedia interface) allows you to enjoy high-definition digital images and high-quality sound by connecting the TV unit and the devices.

HDMI-compatible equipment (*1) with an HDMI or DVI output terminal, such as a set-top box or a DVD player, can be connected to the HDMI connector using an HDMI compliant (fully wired) cable.

- HDMI is the world’s first complete digital consumer AV interface complying with a non-compression standard.
 - If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adapter cable (*2).
 - When the DVI to HDMI adapter cable is used, connect the audio cable to the audio input terminal.
 - Audio settings can be made on the “HDMI 1 in”, “HDMI 2 in” or “HDMI 3 in” menu screen. (p. 30)
- Applicable audio signal sampling frequencies (L.PCM): 48 kHz, 44.1 kHz, 32 kHz

(*1): The HDMI logo is displayed on an HDMI-compliant device.

(*2): Enquire at your local digital equipment retailer shop.

Caution

- Use with a PC is not assumed.
- All signals are reformatted before being displayed on the screen.
- If the connected device has an aspect adjustment function, set the aspect ratio to “16:9”.
- These HDMI connectors are “type A”.
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- A device having no digital output terminal may be connected to the input terminal of either “COMPONENT”, “S VIDEO”, or “VIDEO” to receive analog signals.
- The HDMI input terminal can be used with only the following image signals: 480i, 480p, 720p, 1080i and 1080p. Match the output setting of the digital device.
- For details of the applicable HDMI signals, see p. 55.

Picture mode

- Vivid (default): Provides enhanced picture contrast and sharpness for viewing in a well-lit room.
- Standard: Recommended for normal viewing conditions with subdued room lighting.
- Studio ref: Provides high-quality gradation and color tone picture for a cinema-like feel.
- Custom (Photo): Customizes each item according to your taste. Photo is displayed in JPEG menu.

Pro setting


- Normal: Resets all Pro setting adjustments to factory default settings. (Set/No)
- Panel brightness: Selects the display panel brightness. (High: Vivid, Mid: Standard, Low: Studio ref)
- Contour emphasis: Adjusts the contour emphasis of the image. (On/Off)
- Gamma adjust: Gamma correction. Adjusts the intermediate brightness of the image. (Normal/Mid/Full 1/Full 2)
- Black extension: Adjusts the dark shades of the image in gradation.
- W/B high R: Adjusts the white balance for light red areas.
- W/B high B: Adjusts the white balance for light blue areas.
- W/B low R: Adjusts the white balance for dark red areas.
- W/B low B: Adjusts the white balance for dark blue areas.
- AGC: Increases the brightness of dark signal automatically. (On/Off)

Side Bar

Do not display a picture in 4:3 mode for an extended period, as this can cause "Image retention" to remain on either or both sides of the display field.

To reduce the risk of such "Image retention", change the brightness of the side bars.

- The side bar may flash (alternate black/white) depending on the picture. Using Studio ref mode will reduce such flashing (See p. 54).

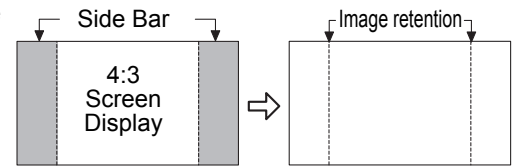

Split - Screen

- TV screen (RF input) cannot be displayed in both main and split frame simultaneously.
- The Split-screen feature is not available when using PC and SD Card viewing mode as a source. HDMI input cannot be displayed in Split frame.

Input signal that can be displayed

* Mark: Applicable input signal for Component (Y, P_B, P_R), HDMI and PC


	horizontal frequency (kHz)	vertical frequency (Hz)	COMPONENT	HDMI	PC
525 (480) / 60i	15.73	59.94	*	*	
525 (480) / 60p	31.47	59.94	*	*	
750 (720) / 60p	45.00	59.94	*	*	
1,125 (1,080) / 60i	33.75	59.94	*	*	
1,125 (1,080) / 60p	67.43	59.94		*	
1,125 (1,080) / 60p	67.50	60.00		*	
640 × 400 @70	31.47	70.08			*
640 × 480 @60	31.47	59.94			*
Macintosh13" (640 × 480)	35.00	66.67			*
640 × 480 @75	37.50	75.00			*
852 × 480 @60	31.47	59.94			*
800 × 600 @60	37.88	60.32			*
800 × 600 @75	46.88	75.00			*
800 × 600 @85	53.67	85.08			*
Macintosh16" (832 × 624)	49.73	74.55			*
1,024 × 768 @60	48.36	60.00			*
1,024 × 768 @70	56.48	70.07			*
1,024 × 768 @75	60.02	75.03			*
1,024 × 768 @85	68.68	85.00			*
Macintosh 21" (1,152 × 870)	68.68	75.06			*
1,280 × 1,024 @60	63.98	60.02			*
1,366 × 768 @60	48.36	60.00			*

Note

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

PC Input Terminals Connection

- Computer signals which can be input are those with a horizontal scanning frequency of 15 to 110 kHz and vertical scanning frequency of 48 to 120 Hz. (However, the image will not be displayed properly if the signals exceed 1,200 lines.)
- Some PC models cannot be connected to the set.
- There is no need to use an adapter for computers with IBM PC/AT compatible D-sub 15P terminal.
- The maximum resolution: 1,280 × 1,024
If the display resolution exceeds these maximums, it may not be possible to show fine detail with sufficient clarity.
- Signal Names for D-sub 15P Connector

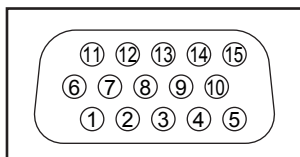


Pin Layout for PC Input Terminal

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
①	R	⑥	GND (Ground)	⑪	NC (not connected)
②	G	⑦	GND (Ground)	⑫	NC
③	B	⑧	GND (Ground)	⑬	HD/SYNC
④	NC (not connected)	⑨	NC (not connected)	⑭	VD
⑤	GND (Ground)	⑩	GND (Ground)	⑮	NC

FAQ


Before requesting service or assistance, please follow these simple guides to resolve the problem.
If the problem still persists, please contact your local Panasonic dealer or Panasonic Service Center for assistance.
For details (p. 60, 61)
For additional assistance, please contact us via the website at:
www.panasonic.com/contactinfo
www.panasonic.ca

White spots or shadow images (noise)


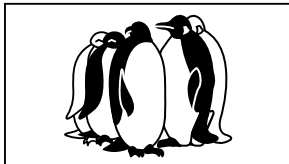


- Check the position, direction, and connection of the aerial.

Interference or frozen digital channels (intermittent sound)

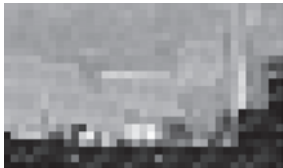

- Change the direction of antenna for digital channels.
- Check "Signal meter" (p. 39). If the signal is weak, check the antenna and consult your local dealer.

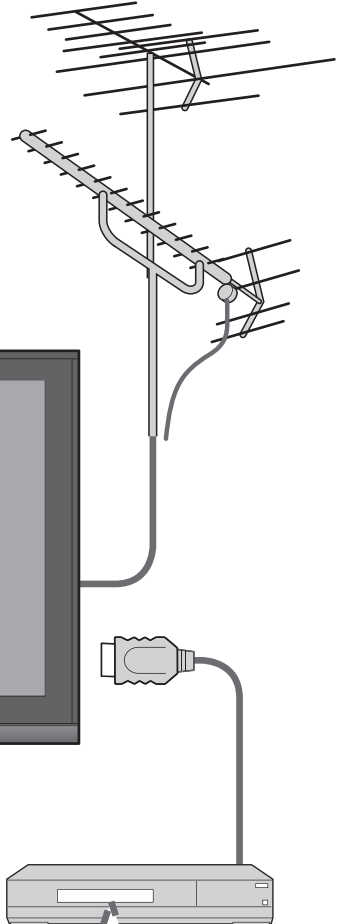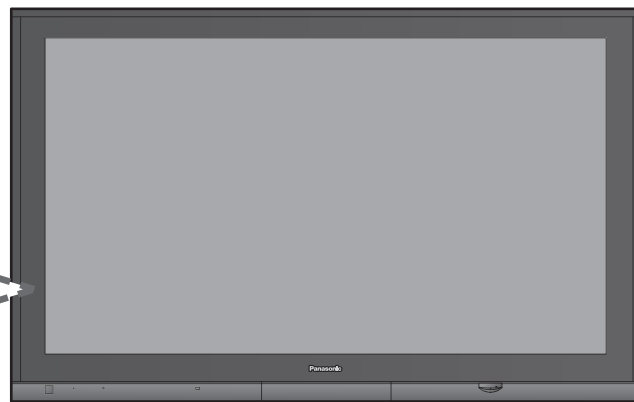

Pictures from external equipment are distorted when the unit is connected via HDMI

- Is the HDMI cable connected properly? (p. 44-45)
- Turn Off the TV unit and equipment, then turn them On again.
- Check an input signal from the equipment. (p. 55)
- Use equipment compliant with EIA/CEA-861/861B.

The remote control does not work

- Are the batteries installed correctly? (p. 6)
- Has the battery run down?
- To operate external equipment of other manufacturers, register the remote control codes. (p. 43)


If there is a problem with your TV, please refer to the table below to determine the symptoms, then carry out the suggested check. If this does not solve the problem, please contact your local Panasonic dealer, quoting the model number and serial number (both found on the rear of the TV).

		Problem	Actions
Screen		"Press any key to return" moves on the screen	● The function to prevent "Image retention" is activated. (Not a faulty symptom) ● The screen saver is activated if the TV unit is not operated for a certain time in SD mode. ● "Image retention" (p. 5)
		One spot remains dark	● A pixel or luminescent spot can occasionally be missing in plasma displays. (Not a faulty symptom)
		Chaotic image, noisy	● Check nearby electrical products (car, motorcycle, fluorescent lamp).
		No image can be displayed	● Check Picture menu (p. 30)
		Only spots are displayed instead of images	● Check the channel settings. (p. 38) ● Check the antenna cables.
		Neither image nor sound is produced	● Is the AC power cord plugged into the outlet? ● Is the TV unit turned On? ● Check Picture menu (p. 30) and volume. ● Are the remote control codes correct? (p. 47-49)
		Black Box appears	● Change settings of Closed Caption (CC). (p. 40)
Sound		No sound is produced	● Are the speakers' cables connected correctly? (p. 44) ● Is "Sound Mute" active? (p. 15) ● Is the volume set to the minimum? ● Is "Speaker output" set to "Off"? (p. 30) ● Change "SAP" settings. (p. 19) ● Check "HDMI 1 in", "HDMI 2 in" or "HDMI 3 in" settings. (p. 30)
		Sound is unusual	● Set "SAP" setting to "Stereo" or "Mono." ● Check the HDMI device connected to the unit. ● Set the audio setting of the HDMI device to "Linear PCM." ● If digital sound connection has a problem, select analog sound connection.
		Whirling sound is heard	● The sound is from built-in cooling fan (not a sign of faulty operation).

Specifications

TH-65PZ750U		
Power Source		AC 120 V, 60 Hz
Power Consumption	Maximum	795 W
	Standby condition	0.2 W
Plasma Display panel	Drive method	AC type
	Aspect Ratio	16:9
	Visible screen size (W × H × Diagonal)	65 " (Diagonal) 56.4 " × 31.7 " × 64.7 " (1,434 mm × 807 mm × 1,646 mm)
	(No. of pixels)	2,073,600 (1,920 (W) × 1,080 (H)) [5,760 × 1,080 dots]
Sound	Audio Output	Super Slim SP (2.5 W) × 2, Woofer (13 W) × 2
PC signals		VGA, SVGA, XGA, WXGA, SXGA Horizontal scanning frequency 31 - 69 kHz Vertical scanning frequency 59 - 86 Hz
Channel Capability (Digital/Analog)		VHF/ UHF: 2 - 69, CATV: 1 - 135
Operating Conditions		Temperature: 32 °F – 104 °F (0 °C – 40 °C) Humidity: 20 % – 80 % RH (non-condensing)
Connection Terminals	INPUT 1-3	VIDEO: RCA PIN Type × 1 1.0 V [p-p] (75 Ω) S-VIDEO: Mini DIN 4-pin Y: 1.0 V [p-p] (75 Ω) C: 0.286 V [p-p] (75 Ω) AUDIO L-R: RCA PIN Type × 2 0.5 V [rms]
	COMPONENT VIDEO INPUT 1-2	Y: 1.0 V [p-p] (including synchronization) PB, PR: ±0.35 V [p-p] AUDIO L-R: RCA PIN Type × 2 0.5 V [rms]
	HDMI 1-3	TYPE A Connector × 3 ● This TV supports "HDAVI Control 2" function.
	AUDIO IN	AUDIO L-R: RCA PIN Type × 2 0.5 V [rms]
	PC	D-SUB 15PIN: R,G,B / 0.7 V [p-p] (75 Ω) HD, VD / 1.0 - 5.0 V [p-p] (high impedance) AUDIO L-R: Stereo Mini Jack (Φ3.5 mm) × 1
	Card slot	SD CARD slot × 1
	AV PROG. OUT	VIDEO: RCA PIN Type × 1 1.0 V [p-p] (75 Ω) AUDIO L-R: RCA PIN Type × 2 0.5 V [rms]
	DIGITAL AUDIO OUT	PCM / Dolby Digital, Fiber Optic
FEATURES		3D Y/C FILTER CLOSED CAPTION V-Chip Split-Screen BBE VIVA 3D Photo viewer Movie player HDAVI Control 2
Dimensions (W × H × D)	TV Set only	63.4 " × 39.3 " × 5.6 " (1,609 mm × 998 mm × 142 mm)
Mass	TV Set only	180.8 lb. (82 kg)

[TH-65PZ750U]

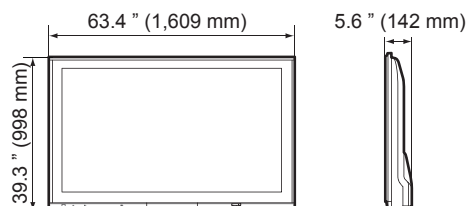

Note

- Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.

Limited Warranty (for U.S.A.)

PANASONIC CONSUMER ELECTRONICS COMPANY,
DIVISION OF
PANASONIC CORPORATION OF NORTH AMERICA
One Panasonic Way
Secaucus, New Jersey 07094

PANASONIC SALES COMPANY,
DIVISION OF
PANASONIC PUERTO RICO, INC.
Ave. 65 de Infanteria, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985

Panasonic Color Television Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Puerto Rico, Inc. (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

CATEGORIES	ALL PARTS EXCEPT GLASS PANEL OR CRT	LABOR	GLASS PANEL OR CRT	GLASS PANEL OR CRT LABOR	SERVICE
PLASMA DISPLAY	1 (ONE) YEAR	1 (ONE) YEAR	GLASS PANEL - 2 (TWO) YEARS	1 (ONE) YEAR	IN-HOME OR CARRY-IN

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" Limited Warranty period, there will be no charge for parts.

You must carry-in your product or arrange for in-home service during the Limited Warranty period. If non-rechargeable batteries are included, they are not warranted. This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers product purchased as new. A purchase receipt or other proof of the original purchase date is required for Limited Warranty service.

In-Home or Carry-in Service

For In-Home or Carry-In Service in the United States call 1-888-VIEW-PTV(1-888-843-9788).

For assistance in Puerto Rico call Panasonic Puerto Rico, Inc. (787)-750-4300 or fax (787)-768-2910.

In-Home service requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain in-home repairs will not be completed in-home, but will require that the product, or parts of the product, be removed for shop diagnosis and/or repair and then returned.

Limited Warranty Limits And Exclusions

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images on the picture tube resulting from viewing fixed images (including, among other things, letterbox pictures on standard 4:3 screen TV's, or non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, bug infestation, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE LIMITED WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied Limited Warranty lasts, so the exclusions may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have others rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE (INCLUDING COST OF AN IN-HOME SERVICE CALL, WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.

Customer Services Directory (for U.S.A.)

Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/consumersupport>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:

1-888-VIEW-PTV (843-9788)

Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

■ For hearing or speech impaired TTY users, TTY: 1-877-833-8855

Accessory Purchases

Purchase Parts, Accessories and Instruction Books on line for all Panasonic Products by visiting our Web Site at:

<http://www.pstc.panasonic.com>

or, send your request by E-mail to:

npcparts@us.panasonic.com

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday - Friday 9 am to 8 pm, EST.)

Panasonic Service and Technology Company

20421 84th Avenue South,

Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

■ For hearing or speech impaired TTY users, TTY: 1-866-605-1277

Service in Puerto Rico

Panasonic Puerto Rico, Inc.

Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park,

Carolina, Puerto Rico 00985

Phone (787)750-4300, Fax (787)768-2910

Limited Warranty (for Canada)

Panasonic Canada Inc.

PANASONIC PRODUCT - LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship and agrees to remedy any such defect for a period as stated below from the date of original purchase.

Plasma TV / Monitor	In-home service	One (1) year, parts (including Plasma Panel) and labour.
LCD TV (26 in & over)	In-home service	One (1) year, parts (including LCD Panel) and labour.
LCD TV (25 in & under)	Carry-in service only	One (1) year, parts (including LCD Panel) and labour.

In-home Service will be carried out only to locations accessible by roads and within 50 km of an authorized Panasonic service facility.

LIMITATIONS AND EXCLUSIONS

This warranty does not apply to products purchased outside Canada or to any product which has been improperly installed, subjected to usage for which the product was not designed, misused or abused, damaged during shipping, or which has been altered or repaired in any way that affects the reliability or detracts from the performance, nor does it cover any product which is used commercially. Dry cell batteries are also excluded from coverage under this warranty.

This warranty is extended to the original end user purchaser only. A purchase receipt or other proof of date of original purchase is required before warranty service is performed.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES.

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable.

In-home service requires clear, complete and easy access to the product by the Authorized Servicentre and does not include removal or re-installation of an installed product. If removal is required to service the product, it will be at the discretion of the Servicentre and in no event will Panasonic Canada Inc. or the Servicentre be liable for any special, indirect or consequential damages.

WARRANTY SERVICE

For product operation and information assistance, please contact:

Our Customer Care Centre:	Telephone #:	(905) 624-5505
	1-800 #:	1-800-561-5505
	Fax #:	(905) 238-2360
	Email link:	"Customer support" on www.panasonic.ca

FOR PRODUCT REPAIRS, please locate your nearest Authorized Servicentre at www.panasonic.ca:

Link: "Servicentres™ locator" under "Customer support"

IF YOU SHIP THE PRODUCT TO A SERVICENTRE

Carefully pack and send prepaid, adequately insured and preferably in the original carton.
Include details of the defect claimed, and proof of date of original purchase.

Customer's Record

The model number and serial number of this product can be found on its back cover. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number _____

Serial Number _____

Anotación del cliente

El modelo y el número de serie de este producto se encuentran en su panel posterior. Deberá anotarlos en el espacio provisto a continuación y guardar este manual, más el recibo de su compra, como prueba permanente de su adquisición, para que le sirva de ayuda al identificarlo en el caso de que le sea sustraído o lo pierda, y también para disponer de los servicios que le ofrece la garantía.

Modelo _____

Número de serie _____

**Panasonic Consumer Electronics
Company,
Division of Panasonic Corporation
of North America**
One Panasonic Way, Secaucus
New Jersey 07094 U.S.A.

Panasonic Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985

Panasonic Canada Inc.
5770 Ambler Drive
Mississauga, Ontario
L4W 2T3 CANADA

For viewing HD programming (Plasma TV) Para ver programas de HD (Televisor de plasma)

(For U.S.A.)
(Para los EE.UU.)

Do you have an HD signal?

¿Tiene usted una señal de HD?

This HDTV requires a High Definition (HD) signal to provide an optimum viewing experience.*

To view HD programming, make sure you have access to an HD signal. HD signals are available 3 different ways:

- (1) Cable - Contact your local cable service provider to subscribe to HD programming.*
- (2) Satellite - Contact your local satellite TV service provider to subscribe to HD programming.*
- (3) Over-the-Air Antenna (ATSC) - Optional over-the-air antenna is required for ATSC reception.

* Additional equipment and/or subscription fees may apply.

Este HDTV necesita una señal de alta definición (HD) para ofrecer una experiencia óptima al ver la TV.*

Para ver programas de HD, asegúrese de tener acceso a una señal de HD. Las señales de HD se encuentran disponibles de 3 formas diferentes:

- (1) Cable - Póngase en contacto con su proveedor local de servicios de cable para suscribirse a la programación de HD.*
- (2) Satélite - Póngase en contacto con su proveedor local de servicios de TV por satélite para suscribirse a la programación de HD.*
- (3) Antena de recepción digital (ATSC) - Para la recepción ATSC se necesita una antena de recepción digital opcional.


* Puede que sea necesario un equipo adicional y/o abonar una suscripción.

To View HD Programming Using Over-the-Air Antenna or Direct Cable / Para ver programas de HD utilizando antena de recepción digital ó cable directo

1 Antenna or Direct Cable Connection / Antena ó cable directo

With the TV power off

Con el televisor apagado

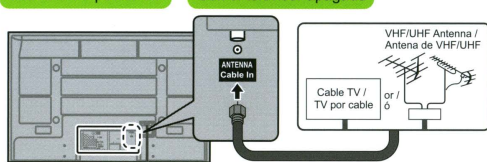

Note: With direct Cable connection, you will not be able to receive channels that require a Cable box or a CableCARD. Please contact your local Cable service provider for information about services available in your area.

Note: Con la conexión directo de cable no podrá recibir canales que requieran un receptor de cable o una tarjeta de cable. Póngase en contacto con su compañía de cable local para obtener información de los servicios disponibles en su área.

2 First Time Setup / Ajuste inicial

- 1 Turn the TV power ON
- 2 Program the channels following the instructions in the First Time Setup screen

- 1 Encienda el televisor.
- 2 Programe los canales siguiendo las instrucciones de la pantalla Ajuste inicial


(Refer to the "First Time Setup" in the Operating Instructions) (Consulte "Ajuste inicial" en el manual de instrucciones.)

Standard Definition Cable Box and/or Satellite Receiver connections / Conexiones de receptor de cable y/o receptor de satélite de definición estándar

(For viewing Standard Definition TV only) (Para ver TV de definición estándar solamente)

With all devices power off

Con todos los aparatos apagados

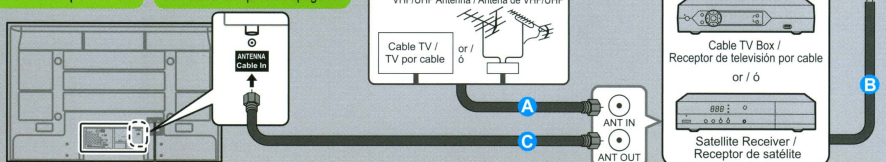

- 1 Turn the power to all devices ON.
- 2 Do not complete the First Time Setup. Instead, press EXIT to exit from the First Time Setup and manually program the TV to CH3 or CH4 (Refer to "Editing and Setting Channels" in the "Advanced Features" section of the Operating Instructions)

Note: As you are connecting a standard definition device, none of these connections will provide a high definition video signal to the TV.

- 1 Encienda todos los aparatos
- 2 No complete Ajuste inicial. En su lugar, pulse EXIT para salir de Ajuste inicial y programe manualmente el televisor para recibir el canal CH3 o CH4 (Consulte "Edición y configuración de canales" en la sección "Funciones avanzadas" de el manual de instrucciones.)


Note: Como está conectando un aparato de definición estándar, ninguna de estas conexiones proporcionará una señal de video de alta definición al televisor.

To View HD Programming Using External HD Equipment / Para ver programas de HD utilizando equipo de HD externo

1 High Definition Cable Box, Satellite Receiver, or DVD Player/Recorder / Receptor de cable, receptor de satélite ó reproductor/grabadora DVD de alta definición

With all devices power off

Con todos los aparatos apagados

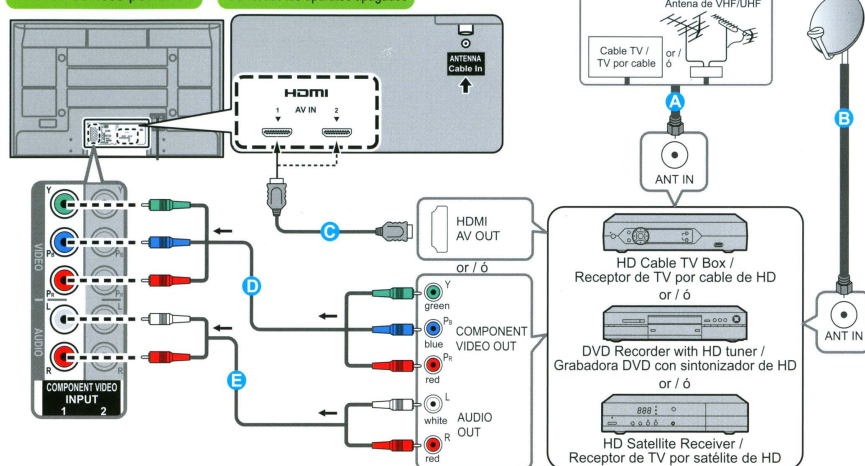

Note: • Other connections (Refer to "Basic Connection" section in the Operating Instructions.)
• If your device has a DVI connector, an HDMI-DVI conversion cable may be necessary.

Note: • Otras conexiones (Consulte la sección "Conexión básica" en el manual de instrucciones.)
• Si su aparato tiene un conector DVI, puede que sea necesario un cable de conversión HDMI-DVI.

2 Input Select / Seleccionar entrada


(Example / Ejemplo: TH-50PZ700U)

- 1 Turn the power to all devices ON.
- 2 Press EXIT to exit the First Time Setup screen.
- 3 Press TV/VIDEO to display Input Select menu.
- 4 Press ▲ or ▼ to highlight the input your device is connected to.
- 5 Press OK to select the Input.

Note: You may also press TV/VIDEO then the number corresponding to the Input, such as TV/VIDEO 4 to go to HDMI 1.




Example / Ejemplo:
(TH-50PZ700
(TH-58PZ700)

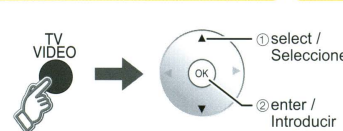


- For details, see the Operating Instruction ("Watching Videos and DVDs").
- Para conocer detalles, consulte el manual de instrucciones ("Para ver video y DVDs").

- 1 Encienda todos los aparatos.
- 2 Pulse EXIT para salir de la pantalla Ajuste inicial.
- 3 Pulse TV/VIDEO para mostrar el menú Seleccionar entrada.
- 4 Pulse ▲ ó ▼ para resaltar la entrada a la que está conectado su aparato.
- 5 Pulse OK para seleccionar la entrada.

 Note: También puede pulsar TV/VIDEO y luego el número correspondiente a la entrada como, por ejemplo, TV/VIDEO 4 para ir a HDMI 1.



• This menu screen may be different from the actual screen.

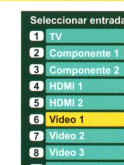

• Esta pantalla de menú puede ser diferente de la pantalla real.

If you have any questions contact
(U.S.A.) 1-888-972-6276

Si tiene alguna pregunta póngase en contacto con
(U.S.A.) 1-888-972-6276

For viewing HD programming (Plasma TV) Pour afficher la programmation HD (Téléviseur à plasma)

Do you have an HD signal? Y a-t-il un signal HD ?


This HDTV requires a High Definition (HD) signal to provide an optimum viewing experience.*
To view HD programming, make sure you have access to an HD signal. HD signals are available 3 different ways:
(1) Cable - Contact your local cable service provider to subscribe to HD programming.*
(2) Satellite - Contact your local satellite TV service provider to subscribe to HD programming.*
(3) Over-the-Air Antenna (ATSC) - Optional over-the-air antenna is required for ATSC reception.
* Additional equipment and/or subscription fees may apply.

Un signal haute définition (HD) est nécessaire pour que vous puissiez profiter d'un affichage optimal sur ce téléviseur haute définition (TVHD).*
Pour afficher la programmation HD, assurez-vous d'avoir accès à un signal HD. Il y a trois façons de capter un signal haute définition:
(1) Câble - Contactez votre fournisseur local de services de câblodistribution pour vous abonner à la programmation haute définition.*
(2) Satellite - Contactez votre fournisseur local de services de télévision par satellite pour vous abonner à la programmation haute définition.*
(3) Antenne extérieure (ATSC) - Une antenne extérieure en option est requise pour la réception ATSC.
* Des frais d'équipement supplémentaire et/ou d'abonnement peuvent s'appliquer.

To View HD Programming Using Over-the-Air Antenna or Direct Cable / Pour afficher la programmation HD à l'aide d'une antenne extérieure ou de la câblodistribution

1 Antenna or Direct Cable Connection / Antenne ou câblodistribution

With the TV power off Avec le téléviseur hors marche

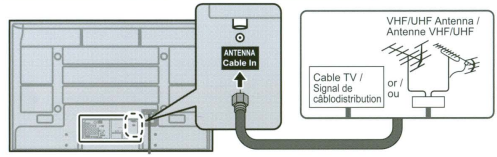

Note: With direct Cable connection, you will not be able to receive channels that require a Cable box or a CableCARD. Please contact your local Cable service provider for information about services available in your area.
Nota: Avec une connexion directe à la câblodistribution, il ne sera pas possible de sintoniser des canaux qui requièrent un câblesélecteur ou une carte CableCARD. Pour plus d'informations sur les services disponibles dans votre région, informez-vous auprès de votre câblodistributeur local.


2 First Time Setup / Réglage initial

- 1 Turn the TV power ON. 1 Mettez le téléviseur en marche.
 - 2 Program the channels following the instructions in the First Time Setup screen. 2 Programmez les canaux en suivant les instructions de l'écran Réglage initial.
- (Refer to the "First Time Setup" in the Operating Instructions) (Reportez-vous à la section "Réglage initial" dans le mode d'emploi.)

Standard Definition Cable Box and/or Satellite Receiver connections / Connexion à un câblesélecteur et/ou un récepteur de télévision par satellite à définition standard

(For viewing Standard Definition TV only) (Pour afficher uniquement la télévision à définition standard)

With all devices power off Avec tous les appareils hors marche

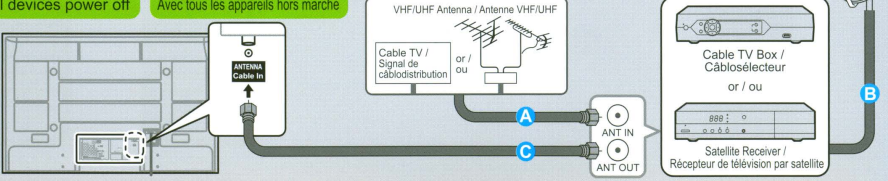


- 1 Turn the power to all devices ON. 1 Mettez tous les appareils en marche.
 - 2 Do not complete the First Time Setup. Instead, press EXIT to exit from the First Time Setup and manually program the TV to CH3 or CH4. (Refer to "Editing and Setting Channels" in the "Advanced Features" section of the Operating Instructions) 2 N'effectuez pas les réglages initiaux. Appuyez plutôt sur EXIT pour quitter l'écran Réglage initial et sintonisez manuellement le téléviseur sur le canal 3 ou le canal 4. (Reportez-vous à "Programmation et édition des canaux" dans la section "Fonctions avancées" du mode d'emploi.)
- Note:** As you are connecting a standard definition device, none of these connections will provide a high definition video signal to the TV.
Nota: comme vous connectez un appareil à définition standard, aucune de ces connexions ne fournira un signal vidéo haute définition au téléviseur.

To View HD Programming Using External HD Equipment / Pour afficher la programmation HD à l'aide d'un appareil HD externe

1 High Definition Cable Box, Satellite Receiver, or DVD Player/Recorder / Câblesélecteur, récepteur de télévision par satellite ou lecteur/enregistreur DVD haute définition

With all devices power off Avec tous les appareils hors marche

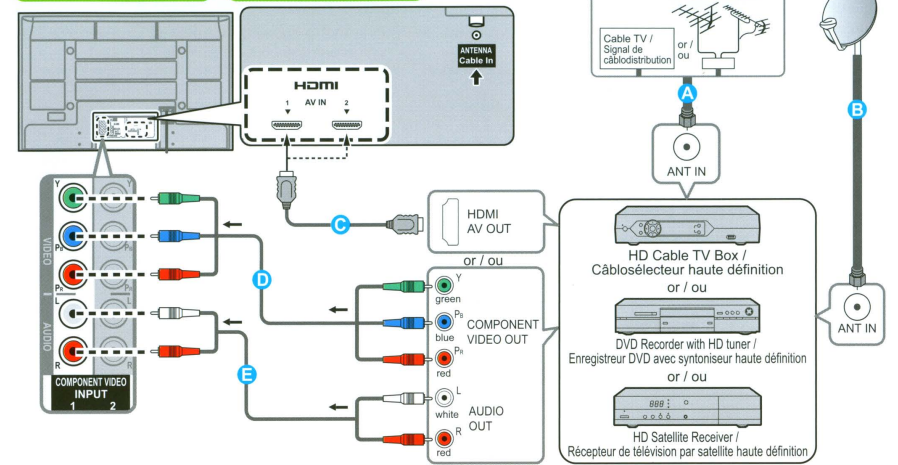

Note: • Other connections (Refer to "Basic Connection" section in the Operating Instructions.)
• If your device has a DVI connector, an HDMI-DVI conversion cable may be necessary.

 
Nota: • Autres connexions (Reportez-vous à la section "Connexion de base" dans le mode d'emploi.)
• Si votre appareil est doté d'un connecteur DVI, il se peut qu'un câble de conversion HDMI-DVI soit nécessaire.

2 Input Select / Sélection d'entrée

(Example / Exemple: TH-50PZ700U)

- 1 Turn the power to all devices ON.
 - 2 Press EXIT to exit the First Time Setup screen.
 - 3 Press TV/VIDEO to display Input Select menu.
 - 4 Press ▲ or ▼ to highlight the input your device is connected to.
 - 5 Press OK to select the Input.
- Note:** You may also press TV/VIDEO then the number corresponding to the Input, such as TV/VIDEO 4 to go to HDMI 1.

- 1 Mettez tous les appareils en marche.
 - 2 Appuyez sur EXIT pour quitter l'écran "Réglage initial".
 - 3 Appuyez sur TV/VIDEO pour afficher le menu "Sélection d'entrée".
 - 4 Appuyez sur ▲ ou ▼ pour mettre en surbrillance l'entrée à laquelle votre appareil est connecté.
 - 5 Appuyez sur OK pour sélectionner l'entrée.
- Nota:** Vous pouvez aussi appuyer sur TV/VIDEO puis sur le numéro correspondant à l'entrée, comme par exemple TV/VIDEO 4, pour passer à HDMI 1.



Example / Exemple: (TH-50PZ700) (TH-58PZ700)
• For details, see the Operating Instruction
• Pour de plus amples informations, consultez le mode d'emploi

Input select	Sélection d'entrée
1 TV	1 Télé
2 Component 1	2 Composant 1
3 Component 2	3 Composant 2
4 HDMI 1	4 HDMI 1
5 HDMI 2	5 HDMI 2
6 Video 1	6 Vidéo 1
7 Video 2	7 Vidéo 2
8 Video 3	8 Vidéo 3
9 PC	9 PC

• This menu screen may be different from the actual screen.
• Cet écran de menu peut être différent du véritable écran de menu.

If you have any questions contact (Canada) 1-866-330-0014

Pour toute question, veuillez contacter (Canada) 1-866-330-0014



Viera Concierge *Conciergerie Viera*



Panasonic



Plasma Concierge



Panasonic

Welcome!

As a Panasonic Plasma owner you are now entitled to a variety of free privileges that will make owning your new Plasma even more of a pleasure. It's our way to provide you the peace-of-mind you expect from Panasonic.

Panasonic Plasma Concierge adds value to your premium TV experience with services like:

- **EXCLUSIVE TOLL-FREE HOT LINE 1-800-973-4390** *(US only)*
A dedicated team of experts can answer any questions you might have regarding your new TV.
- **PRIORITY SERVICE SCHEDULING†**
A representative will call you within 24 hours of notification to schedule an in-home service visit that is convenient for you.
- **LIVE CHAT**
Communicate with Panasonic Plasma experts on-line for assistance and advice regarding your Plasma TV and related products.
- **PERSONALIZED PLASMA CONCIERGE IDENTIFICATION CARD**
Convenient reminder that identifies you as a Panasonic Plasma TV owner.

Call now to receive your personalized Panasonic Plasma Concierge Benefits Card and to learn more about these services: 1-800-973-4390

For more information visit:
PlasmaConcierge.com

Program details subject to change.
* Program not available in US territories.
† Not available in Alaska and Hawaii.



Panasonic ideas for life

Welcome!

As a Panasonic VIERA owner you are now entitled to a variety of privileges that will make owning your new VIERA even more of a pleasure. It's our way to provide you the peace-of-mind you expect from Panasonic.

Panasonic VIERA Concierge adds value to your premium TV experience with services like:

- **EXCLUSIVE TOLL-FREE VIERA HOT LINE 1-866-330-0014** *(Canada only)*
A dedicated team of experts can answer any questions you might have regarding your new TV.
- **48-HOUR PRIORITY SERVICE**
Expedited turnaround time for resolution of any product defects by a highly qualified and authorized Panasonic Service Partner in participating regions.
- **EXTENDED WARRANTY**
Purchase extended warranty coverage for your Panasonic VIERA TV.

Bienvenue!

À titre de propriétaire d'un téléviseur VIERA de Panasonic, vous avez droit à une gamme étendue de privilèges qui feront de votre achat d'un téléviseur VIERA une décision encore plus judicieuse et avisée. C'est notre façon à nous de vous offrir la tranquillité d'esprit à laquelle vous vous attendez de Panasonic.

Vous trouverez ci-dessous une brève description des privilèges à venir de la Conciergerie VIERA Panasonic qui ajouteront encore plus de valeur à votre expérience télévisuelle:

- **SERVICE D'ASSISTANCE TÉLÉPHONIQUE VIERA SANS FRAIS 1-866-330-0014** *(Pour le Canada seulement)*
Vous pouvez communiquer avec des spécialistes VIERA qui pourront répondre à toutes vos questions concernant votre nouveau téléviseur VIERA.
- **SERVICE PRIORITAIRE EN 48 HEURES**
C'est le temps de maintenance prévu pour le règlement de toute défectuosité par un centre de service Panasonic agréé dans les régions participantes.
- **GARANTIE PROLONGÉE**
Vous pouvez acheter une couverture de garantie prolongée pour votre téléviseur Panasonic VIERA.

Visit our web site to learn more
about the benefits of Panasonic
VIERA Concierge.

Visitez notre site web pour plus de
détails sur les privilèges offerts par
notre Conciergerie VIERA

VieraConcierge.ca



**Panasonic ideas for life
des idées pour la vie**

Panasonic

Important! Please complete and return within ten days.

You can also register online via the Internet at:

<http://www.panasonic.com/register>

It is not necessary to return this card in order to effectuate the limited warranty.

1. ☐ Mr. ☐ Mrs. ☐ Ms. ☐ Miss
First Name Initial Last Name

M V K 0 1 - 0 1
Plasma

Street

Apt. No.

City

State

ZIP Code

2. E-mail Address:

3. Telephone number:

() -

4. Date of purchase:

Month Day Year

5. A. Model #: (refer to operating manual or box)

B. Serial #: (refer to the product)

6. Name of store where purchased:

City

State

or website address if purchased via the internet:

7. Price paid (excluding service contract, shipping and taxes): \$.00

8. Did you purchase or receive an extended service contract with your product?

1. ☐ Yes 2. ☐ No

9. Is this product:

1. ☐ The first plasma you've ever purchased?
2. ☐ A replacement for another plasma?
3. ☐ An additional product, already own one other plasma?
4. ☐ An additional product, already own two or more other plasmas?

10. Where did you first learn about this product?

01. ☐ Received as a Gift 08. ☐ Magazine Article/Review
02. ☐ In-store Display 09. ☐ Catalog
03. ☐ Store Advertisement/
Store Flyer/Circular 11. ☐ Friend/Family Recommendation
04. ☐ Newspaper Ad 12. ☐ Salesperson Recommendation
05. ☐ Magazine Ad 13. ☐ Internet
06. ☐ TV Advertisement 14. ☐ Other
07. ☐ Radio Advertisement

11. What were the most important factors that influenced your selection of this product? (check up to 2 responses)

01. ☐ Trust in Panasonic 07. ☐ Ease of Operation
02. ☐ Quality 08. ☐ Salesperson's Recommendation
03. ☐ Features 09. ☐ Friend/Family Recommendation
04. ☐ Price 10. ☐ Online Research
05. ☐ Size 11. ☐ Warranty
06. ☐ Appearance/Design 12. ☐ Other

12. What were the most important features that influenced your selection of this product? (check up to 3 responses)

01. ☐ Picture Quality 06. ☐ Surround Sound
02. ☐ Plasma display is HD (high definition) 07. ☐ Input Jacks
03. ☐ Plasma display is ED (standard definition) 08. ☐ Picture-in-Picture
04. ☐ Comb Filter 09. ☐ Lighted Remote
05. ☐ Sound Quality 10. ☐ On-screen Menu
11. ☐ Parental Controls
12. ☐ Other

13. Which of the following brands did you seriously consider before selecting Panasonic? (check all that apply)

01. ☐ Did not consider any other brands 09. ☐ Sampo
02. ☐ Apex 10. ☐ Samsung
03. ☐ Hitachi 11. ☐ Sanyo
04. ☐ JVC 12. ☐ Sharp
05. ☐ Mitsubishi 13. ☐ Sony
06. ☐ Philips 14. ☐ Sylvania
07. ☐ Pioneer 15. ☐ Toshiba
08. ☐ RCA 16. ☐ Zenith
17. ☐ Other

14. In what room is this new product located?

1. ☐ Living Room 4. ☐ Master Bedroom
2. ☐ Family Room 5. ☐ Other Bedroom
3. ☐ Home Theater or Media Room 6. ☐ Other

15. Where is this product placed?

1. ☐ On pedestal stand included
2. ☐ On display stand
3. ☐ Wall-hanging bracket

16. What products did you connect to your Plasma TV?

1. ☐ VCR 5. ☐ 5.1 Channel Surround Amplifier
2. ☐ DVD Player
3. ☐ DVD Recorder 6. ☐ PC
4. ☐ Set-top Box 7. ☐ Blue Ray Disk

17. Which types of programs do you watch regularly?

1. ☐ HDTV Programming 4. ☐ News
2. ☐ Sports 5. ☐ Other
3. ☐ Movies

18. Your date of birth:

Month Year

19. Marital status: 1. ☐ Married 2. ☐ Single

20. Not including yourself, what is the GENDER and AGE (in years) of children and other adults living in your household?

- | 1. ☐ Male | 2. ☐ Female | Age | 1. ☐ Male | 2. ☐ Female | Age |
|----------------------------------|------------------------------------|------|----------------------------------|------------------------------------|------|
| 1. ☐ | 2. ☐ | yrs. | 1. ☐ | 2. ☐ | yrs. |
| 1. ☐ | 2. ☐ | yrs. | 1. ☐ | 2. ☐ | yrs. |

21. Occupation: (check all that apply)

- | You | Spouse |
|--|-----------------------------|
| Professional/Technical..... ☐ | 1. ☐ |
| Upper Management/Executive..... ☐ | 2. ☐ |
| Middle Management..... ☐ | 3. ☐ |
| Sales/Marketing..... ☐ | 4. ☐ |
| Clerical/Service Worker..... ☐ | 5. ☐ |
| Tradesman/Machine Operator/Laborer..... ☐ | 6. ☐ |

22. Are you or your spouse

- | You | Spouse |
|---|-----------------------------|
| A Homemaker?..... ☐ | 1. ☐ |
| Retired?..... ☐ | 2. ☐ |
| A Student?..... ☐ | 3. ☐ |
| Self Employed/Business Owner?..... ☐ | 4. ☐ |
| Working from a Home Office?..... ☐ | 5. ☐ |
| In the Military?..... ☐ | 6. ☐ |
| A Federal Employee?..... ☐ | 7. ☐ |

23. Which group describes your annual family income?

- | | |
|--|--|
| 01. ☐ Under \$15,000 | 08. ☐ \$75,000-\$99,999 |
| 02. ☐ \$15,000-\$19,999 | 09. ☐ \$100,000-\$124,999 |
| 03. ☐ \$20,000-\$29,999 | 10. ☐ \$125,000-\$149,999 |
| 04. ☐ \$30,000-\$39,999 | 11. ☐ \$150,000-\$174,999 |
| 05. ☐ \$40,000-\$49,999 | 12. ☐ \$175,000-\$199,999 |
| 06. ☐ \$50,000-\$59,999 | 13. ☐ \$200,000-\$249,999 |
| 07. ☐ \$60,000-\$74,999 | 14. ☐ \$250,000 & over |

24. Level of education: (check highest level completed)

1. ☐ Completed High School 3. ☐ Completed Graduate School
2. ☐ Completed College

25. Which credit cards do you use regularly?

1. ☐ American Express, Diners Club 3. ☐ Dept. Store, Oil Company, etc.
2. ☐ MasterCard, Visa, Discover 4. ☐ Do not use credit cards

26. For your primary residence, do you: 1. ☐ Own? 2. ☐ Rent?

27. Which of the following do you plan to do within the next 6 or 12 months?

- | | 1-6 Months | 7-12 Months |
|--|-----------------------------|-------------|
| Get Married..... ☐ | 1. ☐ | |
| Have a Baby..... ☐ | 2. ☐ | |
| Buy a House..... ☐ | 3. ☐ | |
| Remodel a Home..... ☐ | 4. ☐ | |
| Move to a New Residence..... ☐ | 5. ☐ | |
| Buy a Personal Computer..... ☐ | 6. ☐ | |
| Buy/Lease a New Vehicle..... ☐ | 7. ☐ | |
| Buy/Lease a Used Vehicle..... ☐ | 8. ☐ | |

28. Please check all that apply to your household.

01. ☐ Shop by Catalog/Mail
02. ☐ Member of Frequent Flyer Program
03. ☐ Donate to Charitable Causes
04. ☐ Own a Compact Disc Player
05. ☐ Have a Dog
06. ☐ Have a Cat
07. ☐ Own a Cellular Phone
08. ☐ Subscribe to an Online/Internet Service
09. ☐ Own an IBM or Compatible Computer
10. ☐ Own an Apple/Macintosh Computer
11. ☐ Own a CD-ROM

29. To help us understand our customers' lifestyles, please indicate the interests and activities in which *you or your spouse* enjoy participating on a *regular* basis.

- | | | | |
|--|---|---|--|
| 01. ☐ Bicycling | 14. ☐ Needlework/Knitting/Sewing | 27. ☐ Health/Natural Foods | 40. ☐ Real Estate Investments |
| 02. ☐ Golf | 15. ☐ Flower Gardening | 28. ☐ Photography | 41. ☐ Stocks/Bonds/Mutual Funds |
| 03. ☐ Physical Fitness/Exercise | 16. ☐ Vegetable Gardening | 29. ☐ Attending Cultural/Arts Events | 42. ☐ Entering Sweepstakes |
| 04. ☐ Running/Jogging | 17. ☐ Crafts | 30. ☐ Fashion Clothing | 43. ☐ Casino Gambling |
| 05. ☐ Snow Skiing | 18. ☐ Buy Prerecorded Videos | 31. ☐ Fine Art/Antiques | 44. ☐ Science Fiction |
| 06. ☐ Tennis | 19. ☐ Automotive Work | 32. ☐ Foreign Travel | 45. ☐ Wildlife/Environmental Issues |
| 07. ☐ Camping/Hiking | 20. ☐ Electronics | 33. ☐ Cruise Ship Vacations | 46. ☐ Dieting/Weight Control |
| 08. ☐ Fishing | 21. ☐ Home Workshop/Do-It-Yourself | 34. ☐ Travel in USA | 47. ☐ Science/New Technology |
| 09. ☐ Hunting/Shooting | 22. ☐ Recreation Vehicles | 35. ☐ Gourmet Cooking/Fine Foods | 48. ☐ Self-Improvement |
| 10. ☐ Horseback Riding | 23. ☐ Listen to Records/Tapes/CDs | 36. ☐ Wines | 49. ☐ Walking for Health |
| 11. ☐ Powerboating | 24. ☐ Surf the Internet | 37. ☐ Coin/Stamp Collecting | 50. ☐ Watching Sports on TV |
| 12. ☐ Sailing | 25. ☐ Avid Book Reading | 38. ☐ Collectibles/Collections | 51. ☐ Home Video Recording |
| 13. ☐ Grandchildren | 26. ☐ Bible/Devotional Reading | 39. ☐ Our Nation's Heritage | 52. ☐ Moneymaking Opportunities |

30. Using the numbers in the above list, please indicate your 3 most important activities:

Thanks for taking the time to fill out this questionnaire. Your answers will be used for market research studies and reports. They will also allow you to receive important mailings and special offers from a number of fine companies whose products and services relate directly to the specific interests, hobbies, and other information indicated above. Through this selective program, you will be able to obtain more information about activities in which you are involved and less about those in which you are not. Please check here if, for some reason, you would prefer *not* to participate in this opportunity. ☐

Please check here if you do not want to receive mailings and offers from Panasonic using your E-mail address. ☐

Failure to return this card will not diminish your warranty rights.

**Send any correspondence about our product to:
Panasonic Consumer Affairs / 2F-3, Panasonic Consumer Electronics Company,
One Panasonic Way, Secaucus, NJ 07094**



Panasonic Product Registration

THREE IMPORTANT REASONS

to register your new purchase immediately:

1. Protect Your New Investment

Register your new product for insurance purposes in case it is lost or stolen.

2. Product Safety Notification

Registering your product can help us to contact you in the unlikely event a safety notification is required under the Consumer Product Safety Act.

3. Improved Product Development

Help us continue to design products that meet your needs.

See details inside...

Send this card by mail or register via the Internet at:

<http://www.panasonic.com/register>

TQD2AA19104



**Please send products and other
correspondence to:**

Panasonic Consumer Affairs / 2F-3
Panasonic Consumer Electronics Company
One Panasonic Way
Secaucus, NJ 07094



First-Class
Postage
Required
Post Office will
not deliver
without proper
postage.

M V K 0 1 - 0 1

**PANASONIC CONSUMER
ELECTRONICS COMPANY
PO BOX 174287
DENVER CO 80217-4287**



Panasonic ideas for life

THE
Panasonic
CUSTOMER
CARE PLAN

USA ONLY

An extended service plan that assures continued top performance of your electronic product after the factory warranty has expired!

*USE THE CONVENIENCE OF OUR
TOLL-FREE CUSTOMER CARE PLAN HOTLINE:*

1-800-637-2007

**RESPOND PROMPTLY AND RECEIVE
AN "EARLY BIRD" DISCOUNT!
TOMORROW'S SERVICE AT TODAY'S PRICES!**



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 110 ELGIN IL

POSTAGE WILL BE PAID BY ADDRESSEE

Panasonic

CUSTOMER CARE PLAN ADMINISTRATION
PANASONIC SERVICES COMPANY
1707 N. RANDALL RD
ELGIN IL 60123-9876

