

# RECHARGEABLE/CORDLESS SHAVER

**Model 66342**

## INSTRUCTIONS AND PRECAUTIONS



Distributed exclusively by Harbor Freight Tools®.

3491 Mission Oaks Blvd., Camarillo, CA 93011

Visit our website at: <http://www.harborfreight.com>



**SAVE THESE INSTRUCTIONS. READ ALL  
PRECAUTIONS AND INSTRUCTIONS.**

Copyright© 2008 by Harbor Freight Tools®. All rights reserved. No portion of this document or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this document may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

**For technical questions or replacement parts, please call 1-800-444-3353.**

---

## SPECIFICATIONS

---

Charging Time	5-7 Hours
Speed	9000 OPM (Oscillations Per Minute)
Charger Input	3VDC
Internal Battery	Ni-Cd

---

## UNPACKING

---

When unpacking, make sure that the item is intact and undamaged. If any parts are missing or broken, please call Harbor Freight Tools at the number shown on the cover of this document as soon as possible.

---

## IMPORTANT SAFETY INFORMATION

---

1. Do not expose to moisture while charging.
2. Do not reach for a plugged in Shaver that has fallen into water. Unplug immediately and drain water.
3. Do not charge near heater or in direct sunlight.
4. Do not use if Charger (5) or Charger cord has been damaged.
5. Do not attempt to remove Foil covering with screwdriver or other tools.
6. Do not use without Foil (2) and Foil Holder (3) in place.
7. This product is not a toy. Do not allow children to play with this item.
8. Use as intended only.
9. Inspect before every use; do not use if parts are loose or damaged.
10. Turn off Shaver before charging.
11. Do not charge immediately after prolonged use. Allow it to cool before charging.
12. Rinse off Shaver after each use and keep stored in dry, cool environment out of children's reach.
13. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

---

## CHARGING INSTRUCTIONS

---

1. Attach the power cord of the Charger (5) into the bottom of the Shaver (1). Plug the Charger into an electrical outlet that is away from a sink or other source of water. **Note:** Make sure Shaver Switch (8) is turned to OFF.
2. Once plugged in, the LED Charger light on the front of Shaver housing will activate.
3. Charge for 5 to 7 hours. Do not charge for longer than required charge time.

---

## OPERATION INSTRUCTIONS

---

1. Once fully charged, remove Charger cord from housing, remove Cover (4) and turn Switch to ON.
2. Gently guide Shaver along face and chin to remove beard. Use short, back and forth strokes. **Note:** Do not apply too much pressure while shaving.
3. If you have not used an electric shaver before, your skin may become irritated after use. This is a natural reaction that may last for a few days until your skin adjusts to Shaver.
4. When finished shaving, turn Switch to OFF.
5. Slide the Cover onto Shaver head until ready to use again. For travelling purposes, slide the Shaver into the Carrying Sleeve (7).

---

## CLEANING THE SHAVER

---

1. After each use, beard and hair cuttings may collect in Foil. Clean Foil by rinsing Shaver head under cool running water.
2. **WARNING!** Only clean when Shaver is disconnected from Charger and switch is turned to OFF.
3. Hair trimmings may get under Foil and/or it may be necessary to replace Foil. First, press down on the tabs on either side of the Foil Holder (3).
4. Slide Foil Holder off of the top of Shaver housing, exposing the Shaver cutting heads.

5. If necessary, use Brush (6) to clean hair trimmings from exposed Shaver cutting heads.
6. If necessary, slide old Foil from out of Foil Holder and rinse trimmings off Foil.
7. If Foil must be replaced, slide the new Foil into Foil Holder so that small hole in the center of the Foil slides over small tab in the middle of the Foil Holder cross bar. This will hold Foil in place.
8. Slide the Shaver housing into the Foil Holder until it snaps into place.
9. Slide the Cover onto Shaver head until ready to use.
10. Recharge if necessary.

### **REMOVING THE BATTERY**

1. By law, the Ni-Cd battery must be removed from housing before Shaver disposal.
2. Use a screwdriver to unscrew the Shaver head from the top of the housing.
3. Pry off the label from the housing bottom and unscrew bottom from housing.
4. Pry front panel off Power Switch and remove screw from front panel.
5. Slide battery holder out of housing. Remove and properly dispose of Ni-Cd battery.

## **PARTS LIST & DIAGRAM**

Part	Description	Qty.
1	Shaver	1
2	Foils	2
3	Foil Holder	1
4	Cover	1
5	Charger	1
6	Brush	1
7	Carrying Sleeve	1
8	Power Switch	1


**Record Serial Number Here:** \_\_\_\_\_

**Note:** If product has no serial number, record month and year of purchase instead.

**Note:** Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts.

### **PLEASE READ THE FOLLOWING CAREFULLY**

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS DOCUMENT AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

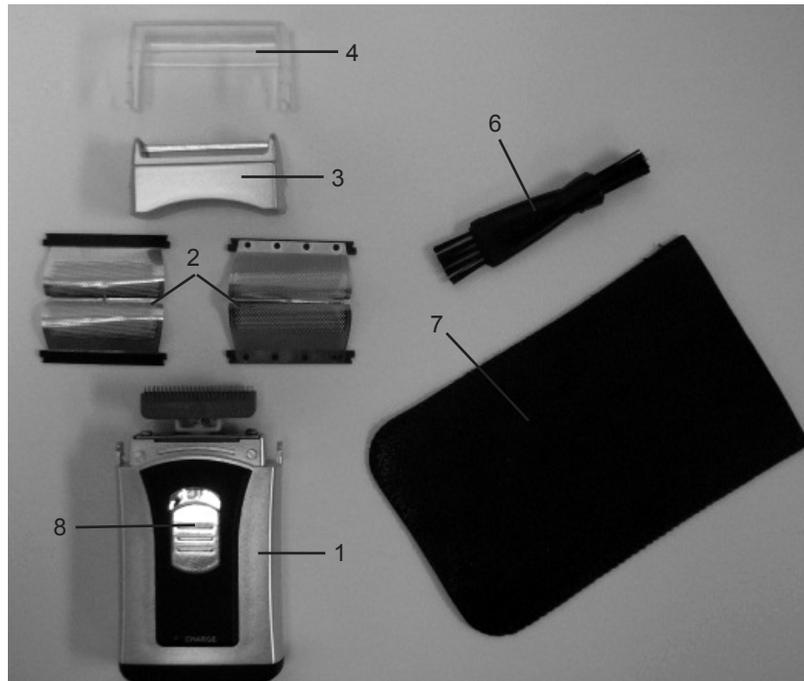

*Please note: Charger (5) is not shown.*