

PRIMA PDP TV Operating Manual



Before connecting, operating or adjusting this product, please read the manual



Table of Contents

Important Information.....	1
Important Safety Precautions.....	2
Preparations.....	5
Using the Remote Control	5
Batteries for the Remote Control	5
Power connection	6
Speaker connection	6
Antenna Connection	7
Identification of Controls	8
Main unit (front view)	8
Main unit (rear view).....	9
Remote Control	10
Connections.....	12
Cautions before connecting.....	12
Connect a VCR	12
Connect a Camcorder	13
Connect a DVD player.....	14
Connect a DTV receiver	15
Connect a PC.....	16
Connect a VCR (for recording) or external amplifier.....	17
Turning the Unit On and Off.....	18
Memorizing the Channels.....	19
Selecting the Signal Source	19
Storing Channels in Memory Automatically.....	19
Setting Auto Fine Tune (AFT)	20
Manual Fine Tuning	20
Adding and Erasing Channels	20
Basic Operations	21
Changing Channels	21
Adjusting the Volume.....	21

Table of Contents

Setting Sound	28
Using the Preset Audio Mode	28
Customizing the Sound	28
Adjusting the Headphone Volume	28
Choosing a Multi-Channel Sound (MTS) Soundtrack	29
Using the Auto Volume	29
Changing Screen Layout	30
Selecting Screen Layout	30
PIP	31
Split Screen	31
POP3	31
Grid	31
PIP Operations	32
Viewing the Picture-in-Picture	32
Adjusting the Size of PIP Frame	32
Changing the Position of the PIP Frame	33
Adjustment in PC (VGA) Mode	34
Adjusting Picture	34
Adjusting the Phase and Frequency	

  WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

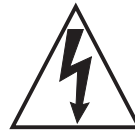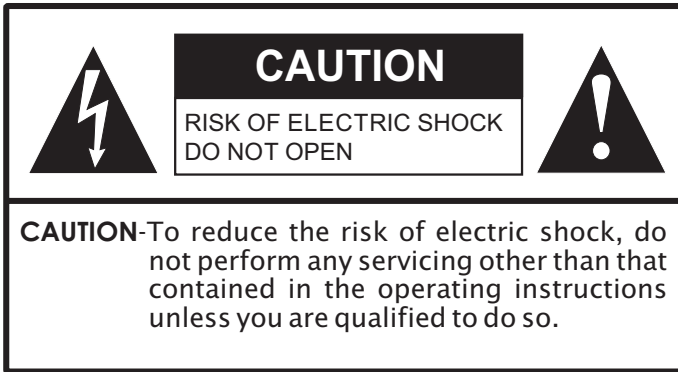

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and

"Note to CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electrical Code that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as

This product utilizes tin-lead solder, and fluorescent lamp containing a small amount of mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eia.org

FCC STATEMENT

FCC Notice

PDP TV: A CLASS B digital device

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC CAUTION:

 
Pursuant to 47CFR, Part 15.21 of the FCC rules, any changes or modifications to this monitor not expressly approved by the manufacturer could cause harmful interference and would void the user's authority to

WARNING: This is a CLASS B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate


Important Safety Precautions

Electrical energy can perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. But **IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARD**. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product. To ensure your safety and prolong the service life of your


5. Do not use this apparatus near water---for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like. Do not use immediately after moving from a low temperature to high temperature environment, as this causes condensation, which may result in fire, electric shock, or other hazards.

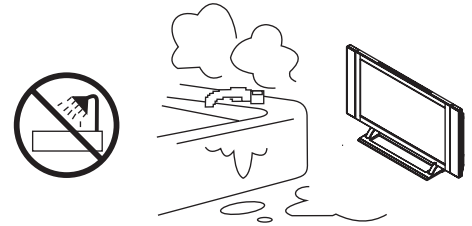

 
6. Clean only with dry cloth---Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

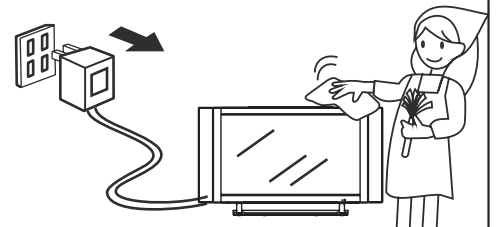

 7. Ventilation---Do not block any ventilation openings. Install in accordance with the manufacturer instructions. The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless

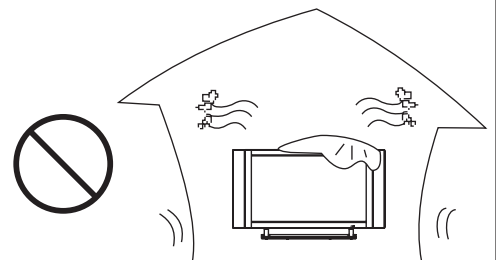

 8. Heat sources---Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including

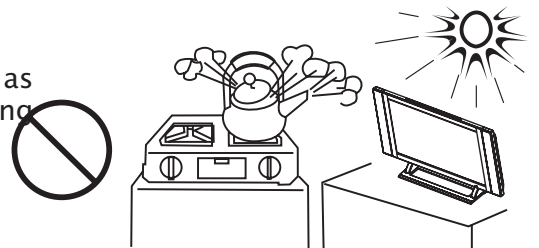


9. Grounding or Polarization---Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Power cord protection---Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Attachments---Only use attachments/accessories specified by the manufacturer. Do not use attachments not recommended by the manufacturer. Use of improper attachments can result in

Important Safety Precautions (continued)

 12. Stand---Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. Do not place the product on an unstable trolley, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the

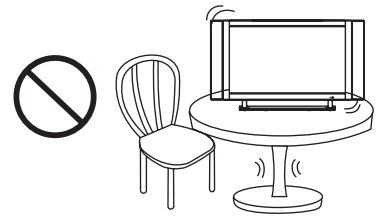


13. Move carefully---When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Sudden stops, excessive force and uneven floor surfaces can cause the product to fall



14. Lightning---Unplug this apparatus during lightning storms or when unused for long periods of time.

 For added protection for this television equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the equipment due to lightning and power-line surges.

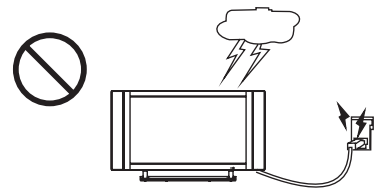

15. Servicing---Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or

16. Replacement parts---In case the product needs replacement parts, make sure that the service person uses replacement parts specified by the manufacturer, or those with the same characteristics and

17. Overloading---Do not overload wall outlets, extension cords, or convenience receptacles on other equipment as this can result in a risk of fire or electric shock.

18. Entering of objects and liquids---Never insert an object into the product through vents or openings. High voltage flows in the product, and inserting an object can cause electric shock and/or short internal parts. For the same reason, do not spill water or liquid on the product.

19. Damage requiring service---If any of the following conditions occurs, unplug the power cord from the AC outlet, and request a qualified service person to perform repairs.

- When the power cord or plug is damaged.
- When a liquid is spilled on the product or when objects have fallen into the product.
- When the product has been exposed to rain or water.
- When the product does not operate properly as described in the operating instructions.

Do not touch the controls other than those described in the operating instructions. Improper adjustment of controls not described in the instructions can cause damage, which often requires extensive adjustment work by a qualified technician.

- If the product has been dropped or the cabinet has been damaged in any way.
- When the product displays an abnormal condition or exhibits a distinct change in performance. Any

 
20. Safety checks---Upon completion of service or repair work, request the service technician to perform

21. Wall or ceiling mounting---When mounting the product on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer. This is a safety feature.

Important Safety Precautions (continued)

22. Power source---This product is intended to be supplied by a listed power supply indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the cable system. This will prevent damage to the product due to lightning and power line surges. When the unit has to be used with another power supply voltage, the power cable must be changed. Consult your product dealer. The socket outlet should be installed near the equipment and easily accessible. Use only the power cord designated by our dealer to ensure safety and EMC. When connecting other products


23. Panel protection---The PDP panel used in this product is made of glass. Therefore, it can break when the product is dropped or impacted upon by other objects. Be careful not to be injured by broken glass pieces in case

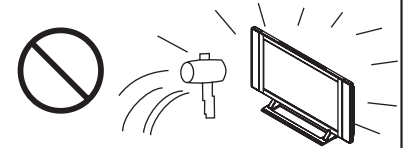


24. Pixel defect---The PDP panel is a very high technology product, giving you finely detailed pictures. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.

- If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and

 EXAMPLE OF ANTENNA GROUNDING AS PER

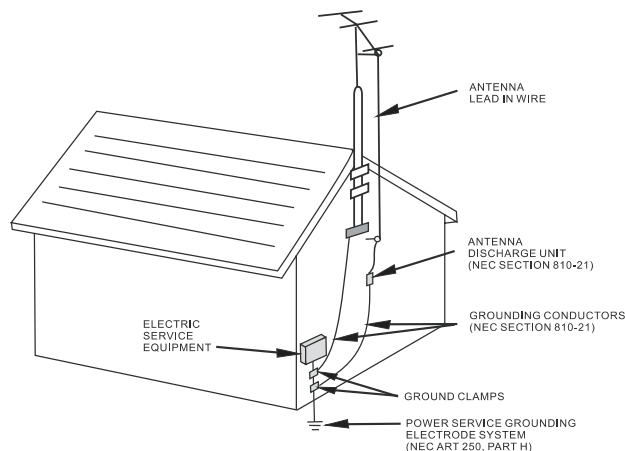

 
- An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can collide with such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be

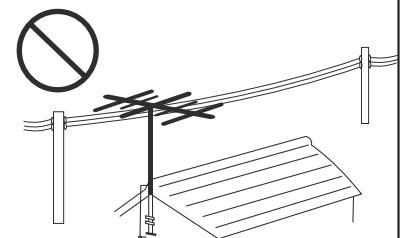

Using the Remote Control

- Use the remote control by pointing it towards the remote sensor window of the set. Objects between the remote control and sensor window may

 Note: This illustration is for reference only. The remote sensor may be in different locations on different models.

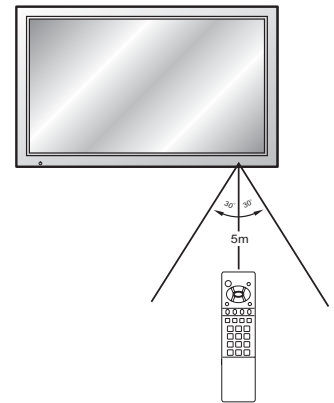


Cautions regarding use of remote control

- Do not expose the remote control to shock. In addition, do not expose the remote control to liquids, and do not place in an area with high humidity.
- Do not install or place the remote control under direct sunlight. The heat may cause deformation of
- The remote control may not work properly if the remote sensor window of the main unit is under direct sunlight or strong lighting. In such a case, change the angle of the lighting or PDP TV set, or operate the remote control closer to the remote sensor window.

Batteries for the Remote Control


If the remote control fails to operate the PDP TV functions, replace the batteries in the remote control.

 1 Open the battery

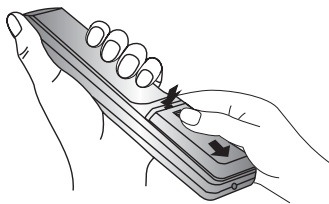


- (Slide the cover while pressing down.)

 2 Insert two size-AAA

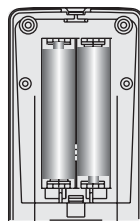

- (Place the batteries with their terminals corresponding to the (+) and (-) indications in the

 3 Replace the cover and slide in reverse until the

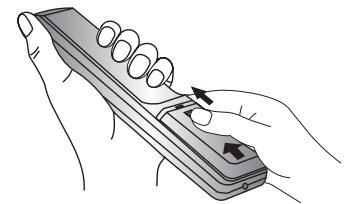


Improper use of batteries can result in a leakage of chemicals and/or explosion. Be sure to follow the

- Place batteries with their terminals corresponding to the (+) and (-) indications.
- Different types of batteries have different characteristics. Do not mix batteries of different types.
- Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries and/or cause old batteries to leak chemicals.
- Remove batteries as soon as they are non-operable. Chemicals that leak from batteries can cause a rash. If chemical leakage is found, wipe with a cloth.
- The batteries supplied with the product may have a shorter life expectancy due to storage conditions.
- If the remote control is not used for an extended period of time, remove the batteries from the remote

Preparations (continued)

 Power connection

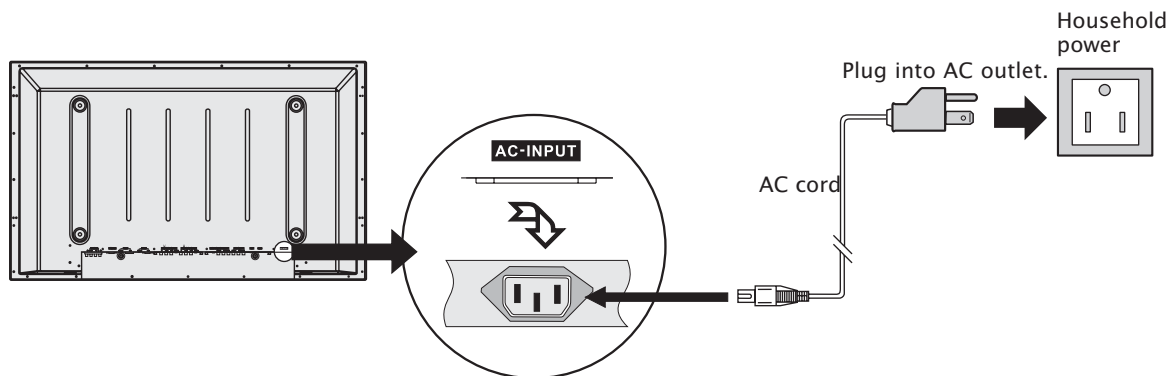


1. Connecting the female plug to the AC socket on the unit.
2. Connecting the male plug to the wall outlet as illustrated.

Note:

- This product should be operated only from the type of power source indicated on the marking label.
- Always unplug the AC cord from power outlet when not using for a long period of time.

 Speaker connection

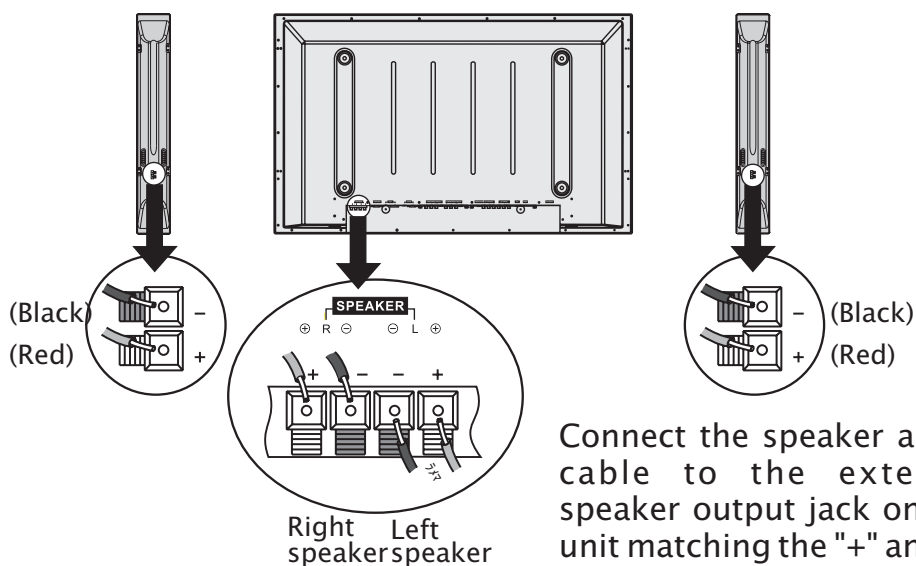

Connect the speaker audio cable to the external speaker output jack on the unit matching the "+" and "-" ends of the cable with color.

 
Antenna Connection

CABLE TV (CATV) CONNECTION

A 75-ohm coaxial cable connector is built into the set for easy hookup. When connecting the 75-ohm coaxial cable to the set, screw the 75-ohm cable to the ANT. Terminal.

Some cable TV companies offer "premium pay channels". Since the signals of these premium pay channels are scrambled, a cable TV converter/descrambler is generally provided to the subscriber by the cable TV company.

This converter/descrambler is necessary for normal viewing of the scrambled channels. For more specific instructions on installing cable TV, consult your cable TV company. One possible method of utilizing the converter/descrambler provided by your cable TV company is explained below. Please

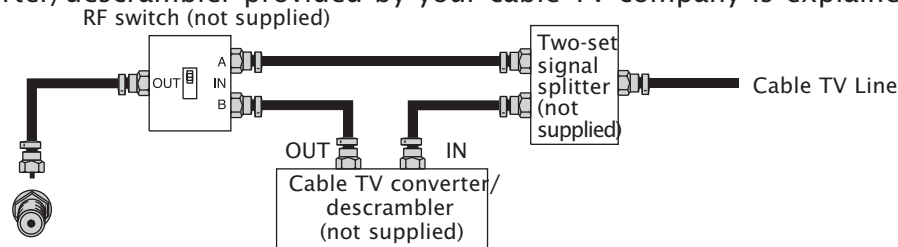

"A" position on the RF switch (not supplied) : You can view all unscrambled channels by using the TV's channel keys.

"B" position on the RF switch (not supplied) : You can view the scrambled channels via the

 
Consult your Dealer or Service Center for the type of splitter, RF switch or combiner that

Antenna connection (Continued)

ANTENNAS

The antenna requirements for good color television reception are more important than those for black & white television reception. For this reason, a good quality outdoor antenna is strongly recommended. The following is a brief explanation of the type of connections that are provided with the various

1. A 75-ohm system is generally a round cable with F-type connector that can easily be attached to a terminal without tools (not supplied).
2. A 300-ohm system is a flat "twin-lead" cable that can be

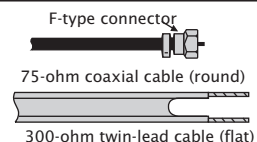


OUTDOOR ANTENNA CONNECTION

Use one of the following two diagrams if you connect an outdoor antenna.

A: Using a VHF/UHF combination outdoor antenna.


B: Using separate VHF and/or UHF outdoor antennas.

 Connect the outdoor antenna cable lead-in to the ANT.

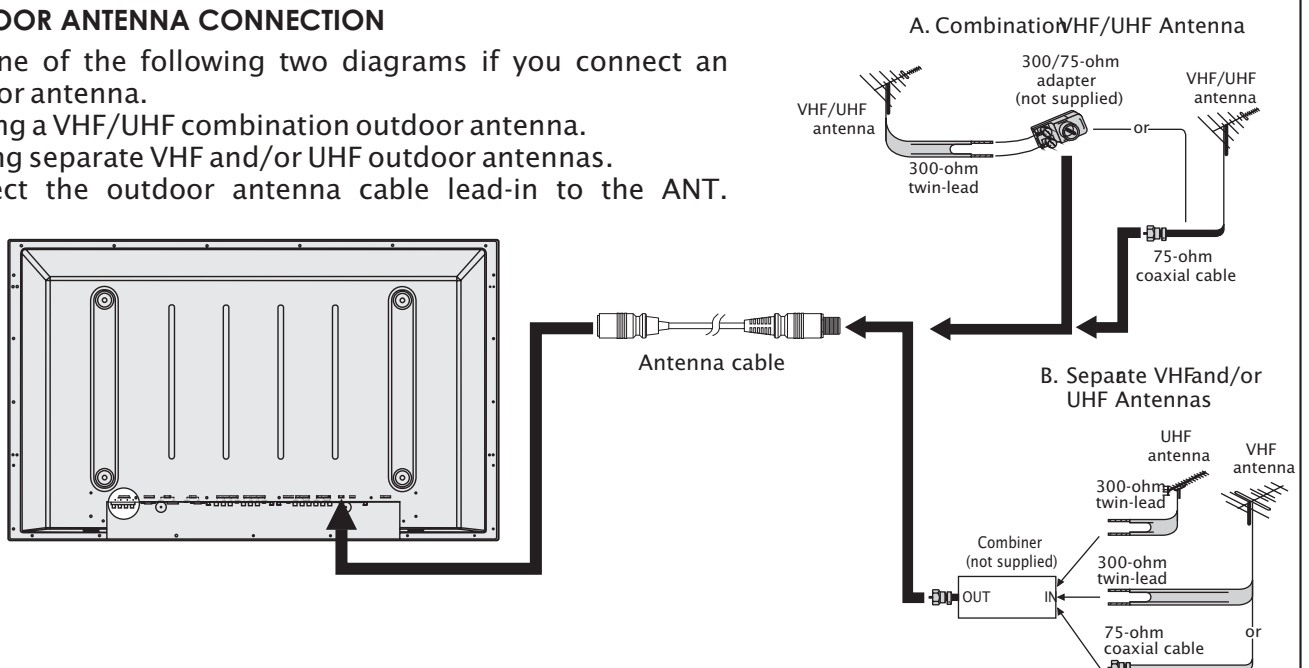

Identification of Controls

 Main unit (front view)

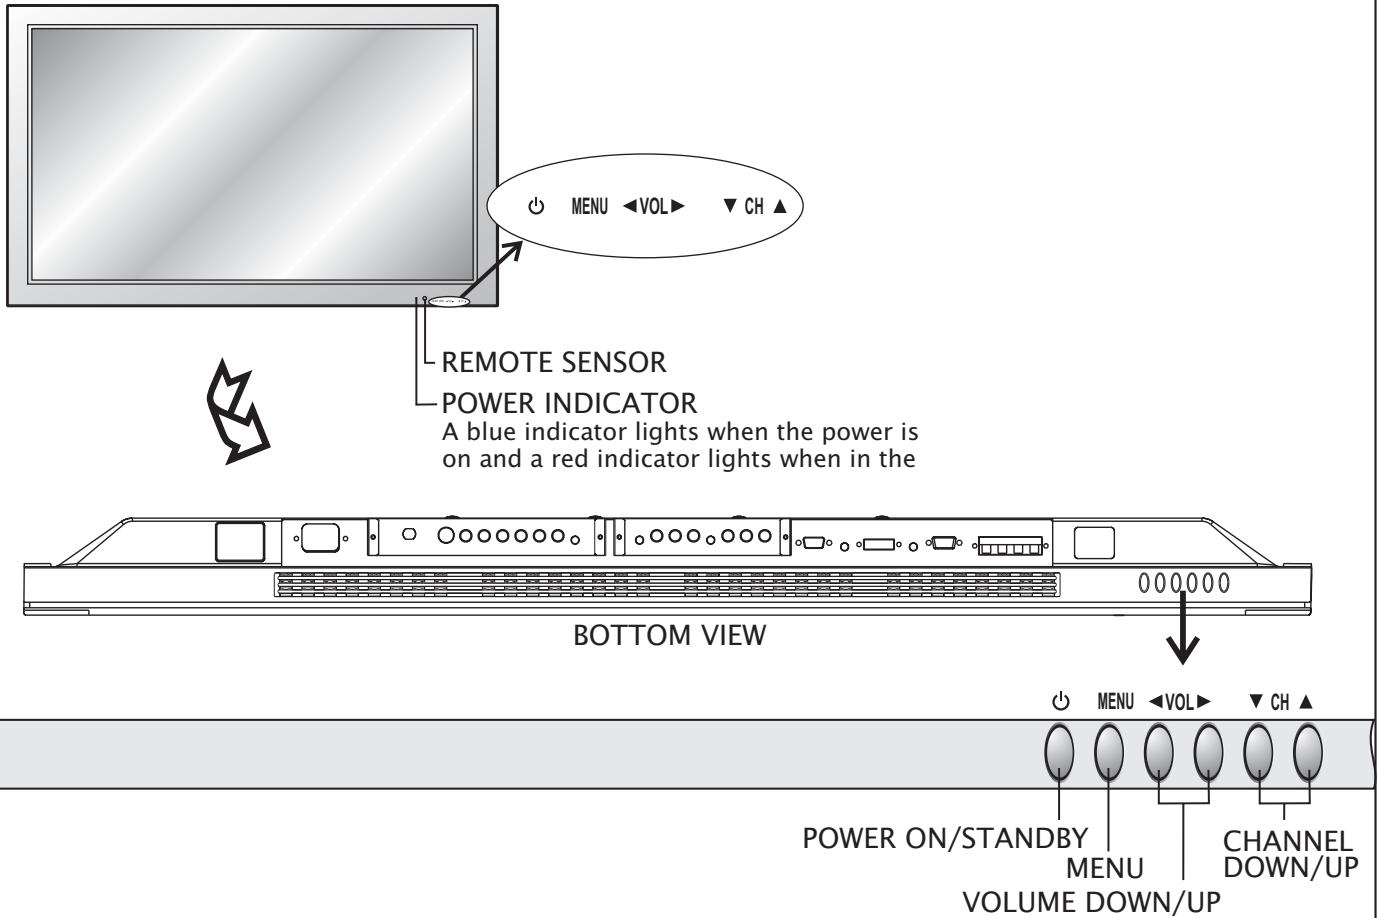



1. POWER

Press this button to turn the unit ON from STANDBY mode. Press it again to turn the set back to STANDBY.

2. MENU






Press this button to access the MENU main page.

3. Volume /

Press the VOL  or VOL  button to directly increase or decrease the sound volume level. In OSD Menu, press these buttons to adjust the value or setting of each item

 
4. Channel /

Press these two buttons to directly change the TV channel.

POWER  , **VOL**  /  , **CH**  /  and **MENU** on the main unit have the same functions as the corresponding buttons on the remote control.

This operation manual provides a description based on operating functions with the remote control.

Main unit (rear view)

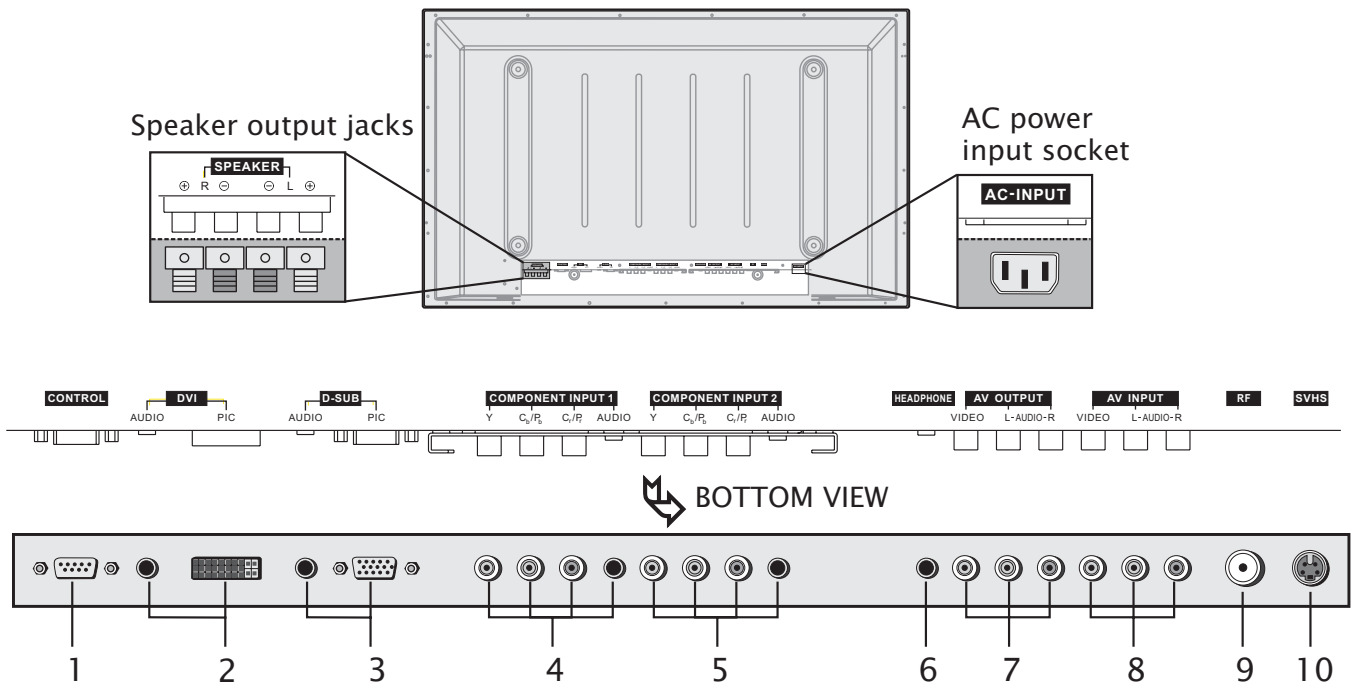

1. RS232 terminals

For service use only. The user cannot operate the unit through the RS232 terminals.

2. DVI input /Audio in

Receives the digital video/audio signals from a set top box or PC.

3. VGA input /Audio in

Connect to the VGA/audio output jacks on your PC.

4. Component inputs 1 (Y, Pb/Cb, Pr/Cr, Audio)

Connect to the audio and component output jacks of a DVD player or Set-Top Box.

5. Component inputs 2 (Y, Pb/Cb, Pr/Cr, Audio)

Connect to the audio and component output jacks of a DVD player or Set-Top Box.

6. Headphone jack

7. AV outputs (Video, Audio L, R)

Connect to the VCR input jacks to record programs.

8. AV inputs (Video, Audio L, R)

Receive video/audio signals from external sources such as VCR or DVD player.

9. Antenna input

 
Allows you to connect cable or outdoor antenna.

10. S-Video input


Receive a S-Video signal from external source such as VCR or DVD player.

Identification of Controls (continued)

Remote Control

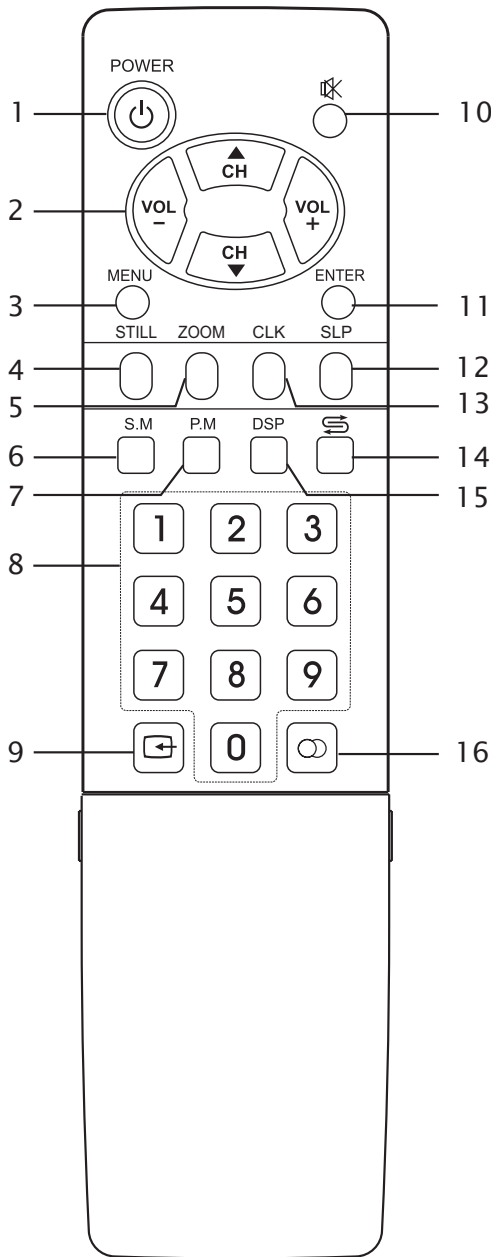


1. POWER
Turn the unit on or off
2. CH ▲/▼, VOL +/-
CH ▲/▼ ---Use to switch channels;
VOL +/- ---Use to adjust volume;
In MENU operation, use CH ▲/▼ to select menu item and
VOL +/- to adjust selected item
3. MENU
To access the MENU main page
4. STILL
To freeze current picture
5. ZOOM
To go into ZOOM or PAN mode
6. S.M
To access sound mode select menu
7. P.M
To access picture mode select menu
8. 0~9 digit buttons
Direct channel select
9. SOURCE
To access source select menu
10. MUTE
Sound mute
11. ENTER
To confirm your operation or setting or access the
submenu
12. SLP
To access Sleep timer setting menu
13. CLK
To access Current time setting menu
14. RETURN
To quickly jump between current channel and last
selected channel.
15. DSP
To display channel status or signal information
16. MTS

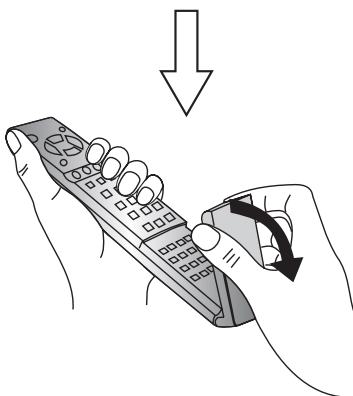 

Flip the cover, open in
the direction of the

 Remote Control

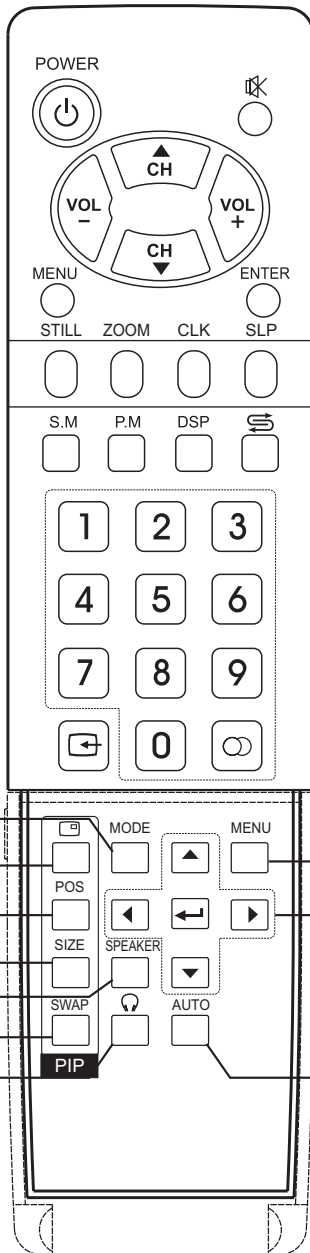


17. **MODE**
To access screen layout select menu
18. **PIP display**
To activate picture in picture
19. **POS**
To access PIP frame position select menu
20. **SIZE**
To access PIP frame size adjusting menu
21. **SPEAKER**
In multi-picture mode, press this button to output the sound of the selected picture frame from speaker
22. **SWAP**
The SWAP button does not work in this model.
23. **HEADPHONE**
In multi-picture mode, press this button to output the sound of the selected picture frame from headphone
24. **MENU**
To access the MENU main page
25. **▲ ▼ ◀ ▶**
 - ▲ ▼ : To move upward or downward in menu operation;
To adjust zoom rate in ZOOM mode and pan picture in PAN mode;
To select picture frame in multi-picture mode, the selected picture frame displays with a green border;
 - ◀ ▶ : To move left or right in menu operation;
To adjust selected menu item in menu operation;
To pan picture in PAN mode;
 - ◀ : To confirm your operation or setting or to access a submenu.
26. **AUTO**

Connections

Cautions before connecting

- Carefully check the terminals for position and type before making any connections.
- The illustration of the external equipment may be different depending on your model.
- Loose connectors can result in image or color problems. Make sure that all connectors are securely inserted into their terminals.
- Refer to the user manual of the external device as well.
- When connecting an external device, turn the power off on the panel to avoid any issues.

 Connect a VCR

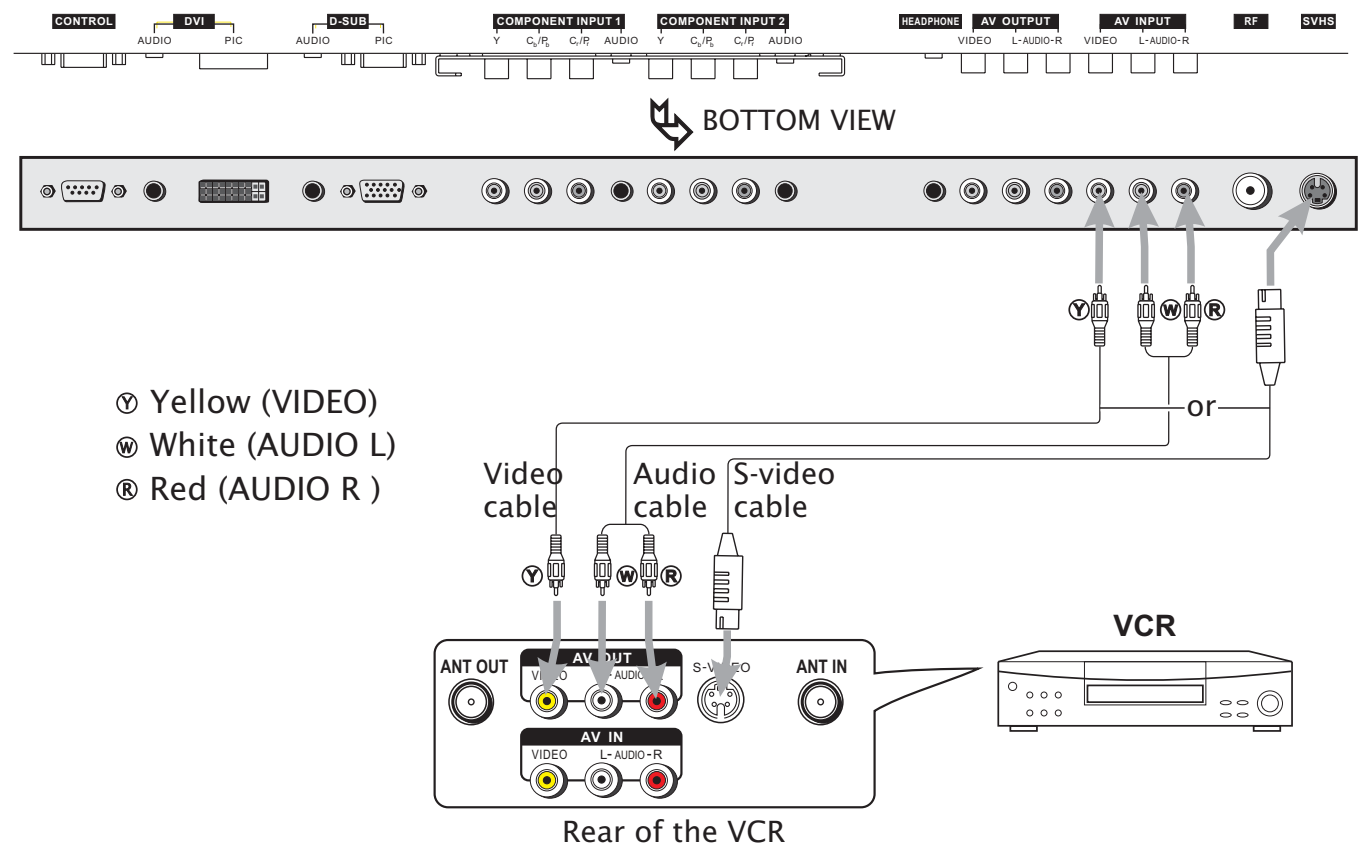

How to connect:

Connect the Audio/Video cables between the Audio (L/R)/Video jacks on the unit and VCR.

Note:

For better video, you can use the S-video terminal if your source supports it.
When you use S-video terminal, the source menu displays **SV** instead of **AV**.
The S-Video is prior to Video terminal when they are connected at the same time.


To play VCR

1. Turn on your PDP TV , press **SOURCE** button on the remote control.
2. Press **VOL+/-** to select **AV** (VIDEO) and press **ENTER** to confirm.

source

A	D	C1	C2	AV	TV
VIDEO					

 Connect a Camcorder

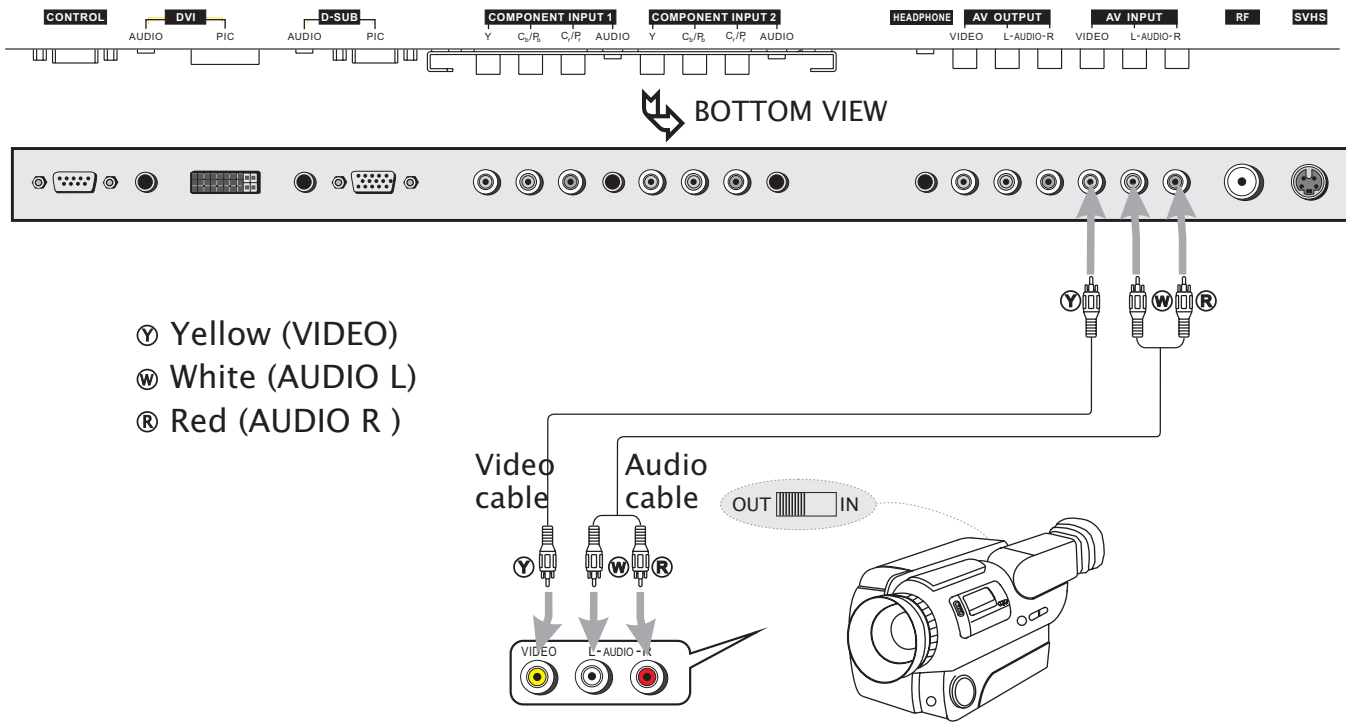

How to connect:

Connect the Audio/Video cables between the Audio (L/R)/Video jacks on the unit and camcorder.

To playback Camcorder

1. Turn on your PDP TV , press **SOURCE** button on the remote control.
2. Press **VOL+/-** to select **AV (VIDEO)** and press **ENTER** to confirm.
3. Turn on your camcorder and set it to output mode. (For details, refer to your camcorder user manual.)

 
Note:

The operations of the camcorder may be different and is dependant on your model. Please read the user manual of

source **A** **D** **C1** **C2** **AV** **TV**
VIDEO

Connections (continued)

Connect a DVD player

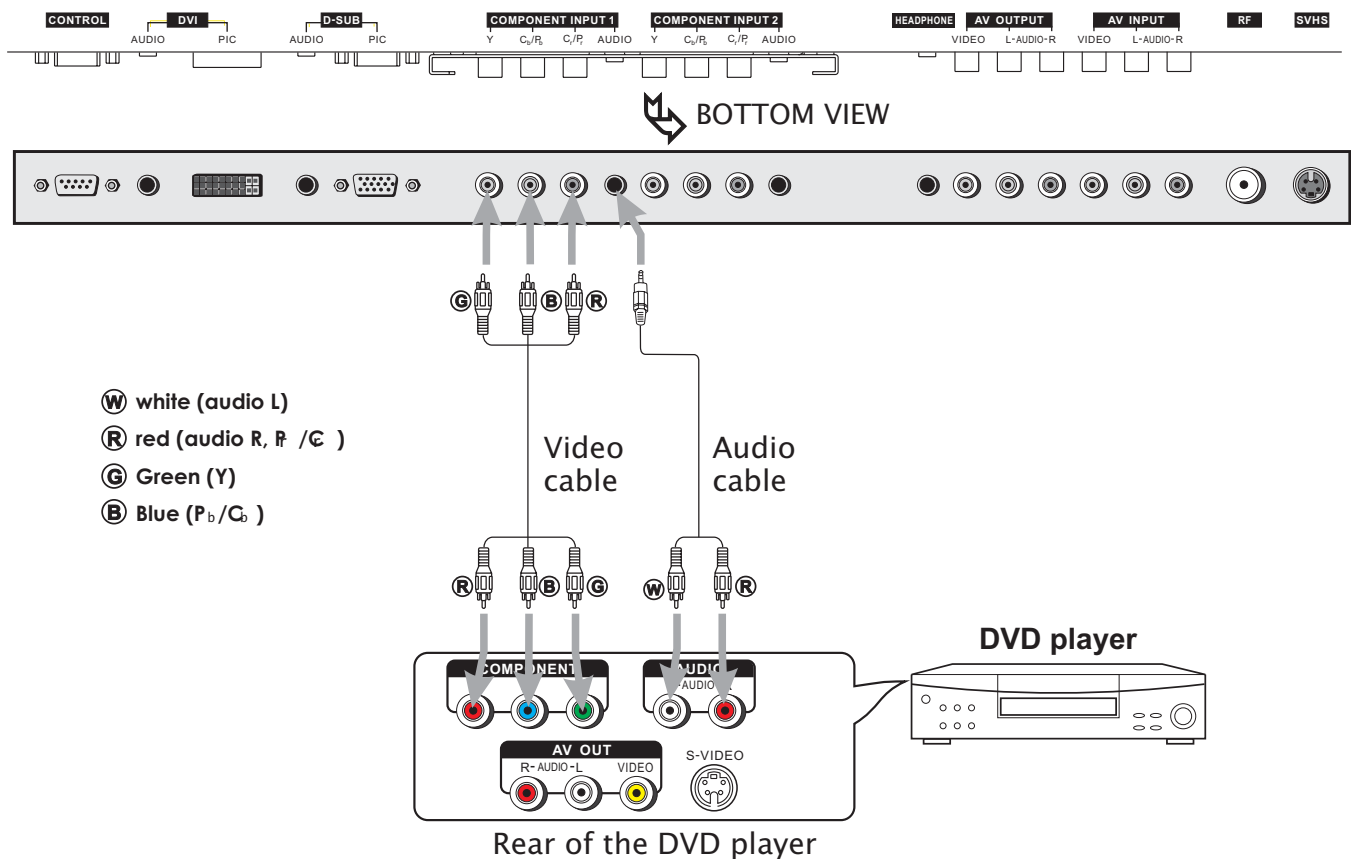


How to connect a DVD Player using Component Video Connections:

Connect the Video cable between the Y, Cb, Cr input jacks on the unit and Y, Cb, Cr output jacks on the DVD player.

To play DVD

 
1. Turn on your PDP TV , press **SOURCE** button on the remote control.
4. Turn on your DVD player, insert a DVD disc and press the

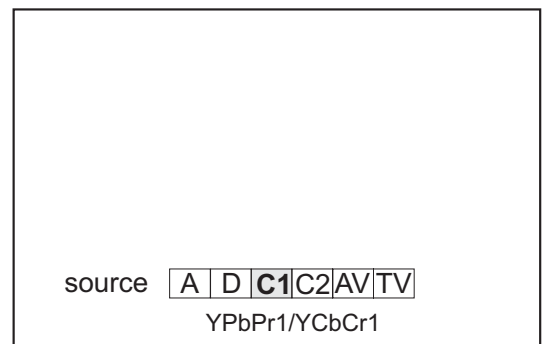

Note:

This unit identifies the type of component video terminals automatically. If you connect Y, Cb, Cr terminals, the screen displays **YCbCr detected** on the bottom-right corner. Similarly, if the component

 Connect a DTV receiver

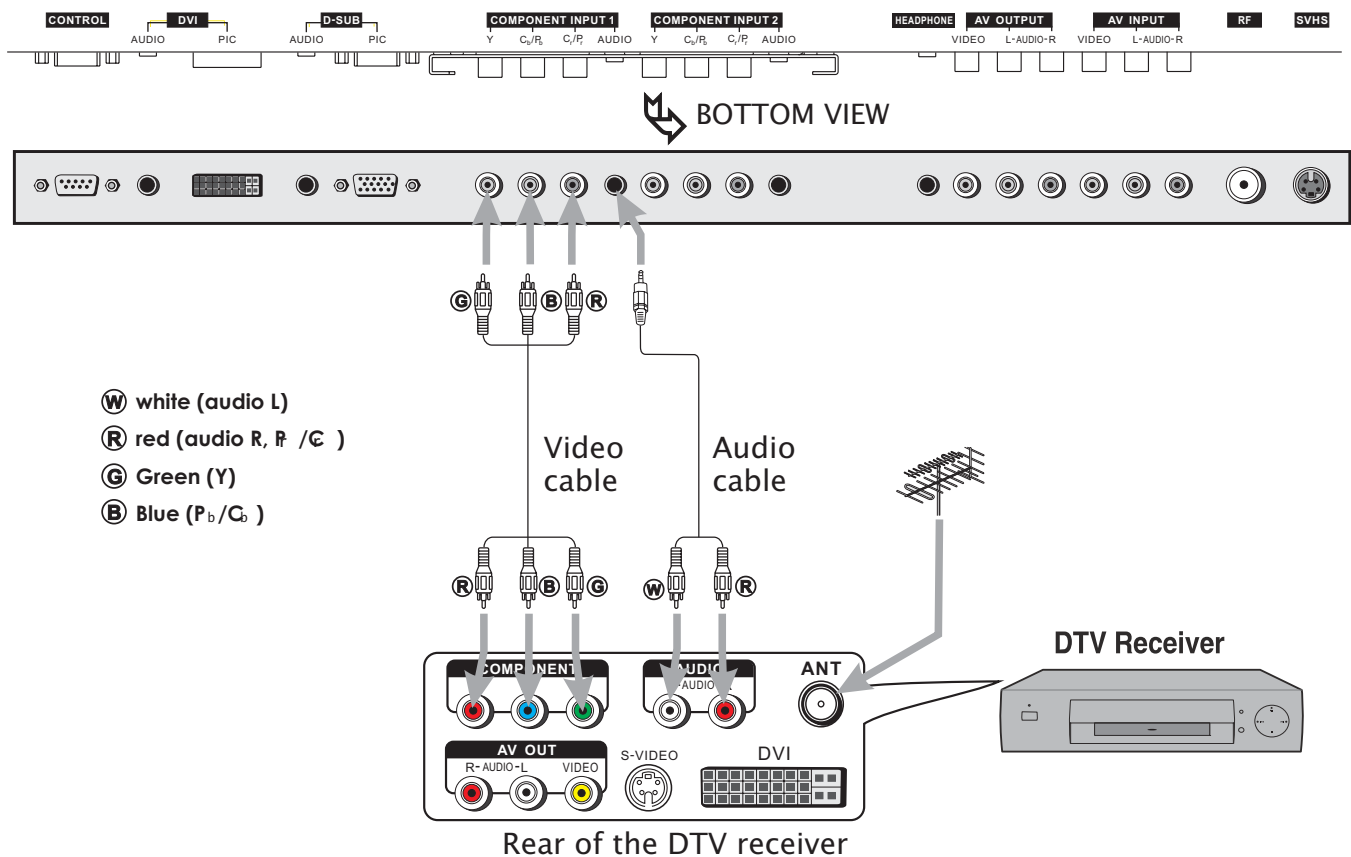

How to connect:

Connect the cable or antenna to the antenna input jack on the DTV receiver.

Connect the Video cable between the Y, Pb, Pr input jacks on the unit and Y, Pb, Pr output jacks on the DTV receiver .

 
To Watch DTV

1. Turn on your PDP TV , press **SOURCE** button on the remote control.
2. Press **VOL+/-** to select **C1**(YPbPr1/YCbCr1) or **C2**(YPbPr2/YCbCr2).

source **A D C1 C2 AV TV**
YPbPr1/YCbCr1

Connections (continued)

Connect a PC

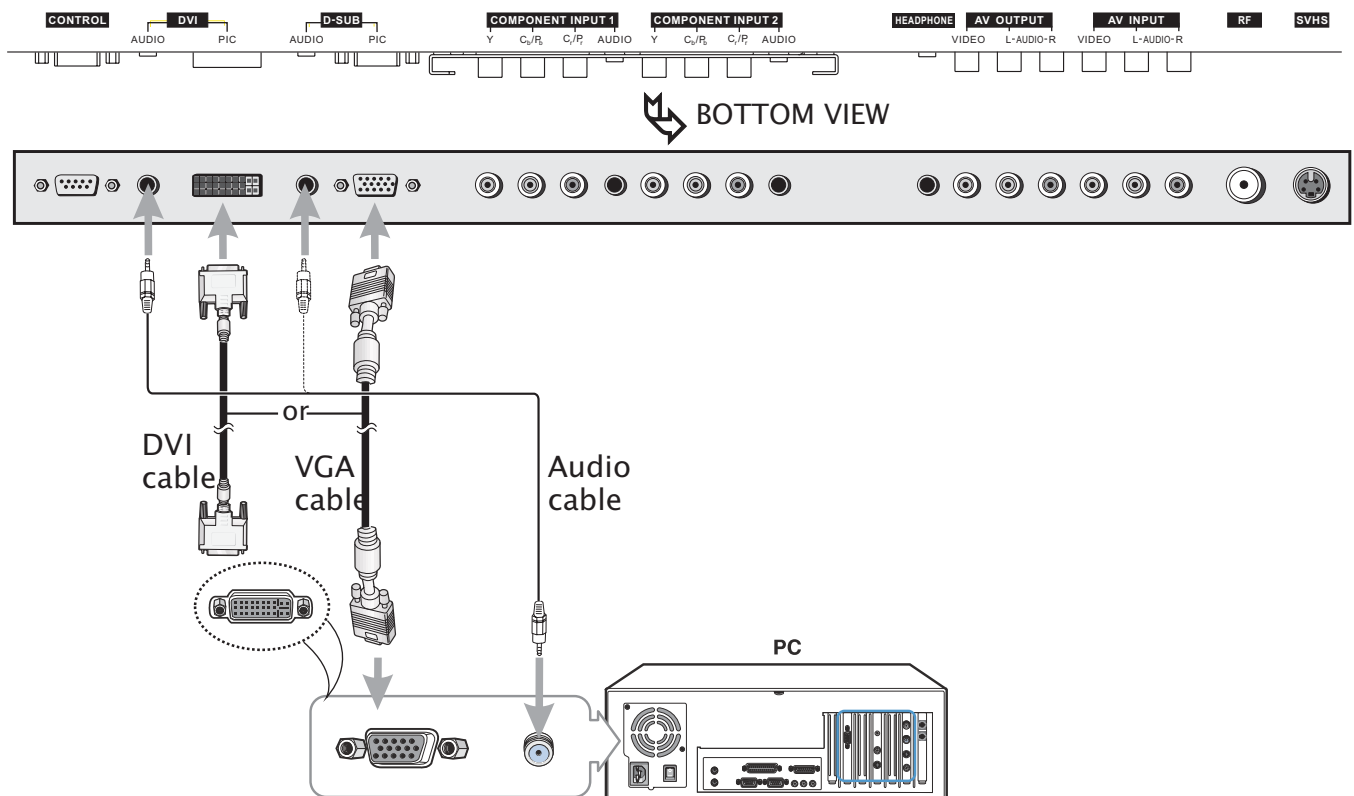


How to connect:

Connect a VGA (or DVI) cable between the VGA (or DVI) jack on the PC and the VGA (or DVI) input jack on the unit.

To Watch the PC screen

 
1. Turn on your PDP TV , press **SOURCE** button on the remote control.
2. Press **VOL+/-** to select **A** (VGA) or **D** (DVI).
3. Press **ENTER** to confirm.
4. Turn on your PC and check for PC system requirements.

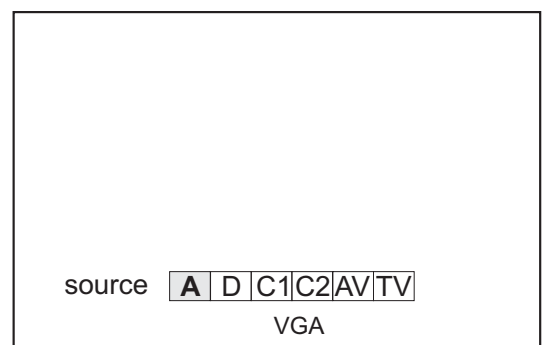

Note:

Some playback devices with DVI interface have different understandings to the HDCP protocols and which may lead to mistakes during transferring data stream. In this case, you may find a noisy picture while viewing programs from DVI interface. So if you encounter a noisy picture, please try to restore a

 Connect a VCR (for recording) or external amplifier

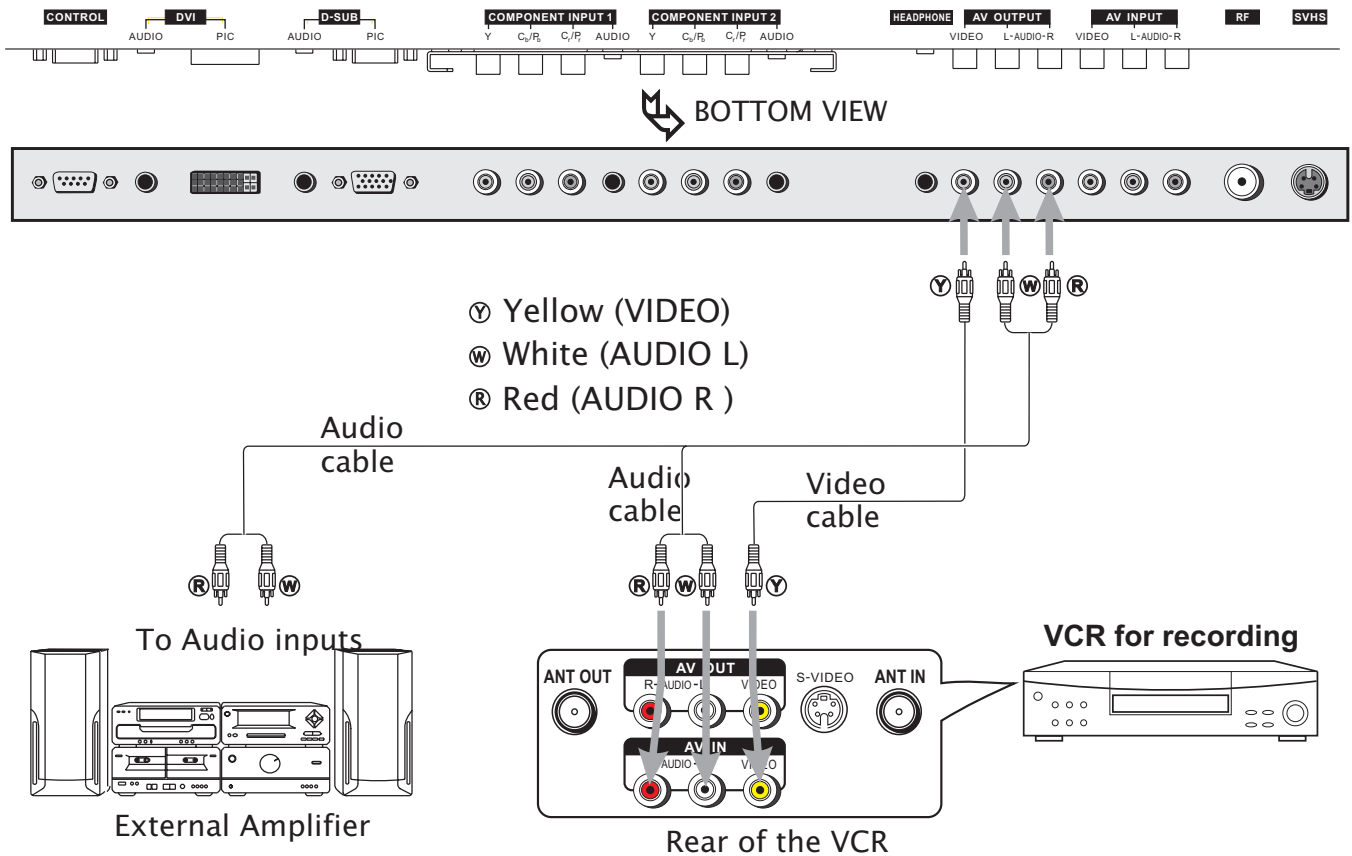

How to connect:

Connect the Audio/Video cables between the Audio (L/R)/Video jacks on the unit and VCR.



Connect the Audio cables between the Audio (L/R) jacks on the unit and external amplifier.

To record program

1. Turn on your PDP TV, select a program you wish to record.
2. Turn on your VCR, insert a videotape for recording.
3. Press the Record button to begin recording.

To enjoy high-quality sound through an external amplifier

1. Turn on your PDP TV, select a program.
2. Turn the main volume of the amplifier to minimum.
3. Turn on the amplifier and adjust for a proper volume.

Note:

The operations of the amplifier may be different depending on model. Please read the user manual of your amplifier to confirm proper operation.

The AV output terminals output audio/video signal inputted from Antenna input or AV inputs.

Turning the Unit On and Off

Turning the Unit On and Off

 
Turning On

Insert the power cord into the wall outlet.
Press the **Power** button on the remote control.
The unit will be turned on and you will be ready to use it's

Turning Off

With the power on, Press the **Power** button on the remote control to turn off.

Note:

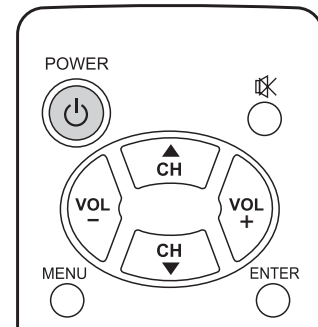

Viewing the Menus and Displays

Your PDP TV has a simple, easy-to-use menu system that appears on the screen. This system makes it convenient and fast to use features on the unit.

Viewing the Menus

1 With the power on, press the **MENU** button on the remote control. The main menu appears on the screen.

 
 
 
2 Use the **CH** \uparrow / \downarrow to select menu item. Use **VOL** \pm to adjust value or setting of each item. Use **ENTER** to confirm or access items of menu.

On-screen menu will disappear from the screen automatically after about 15 seconds, or you can press the **MENU** button repeatedly to exit the menu.

Note:

To clearly introduce the menu operations, this operation manual provides a description based on operation with the

3 In MENU operations, the \uparrow / \downarrow buttons have the same function with the **CH** \uparrow / \downarrow buttons, the \leftarrow / \rightarrow buttons have the same function with the **VOL** \pm buttons, the **ENTER** button

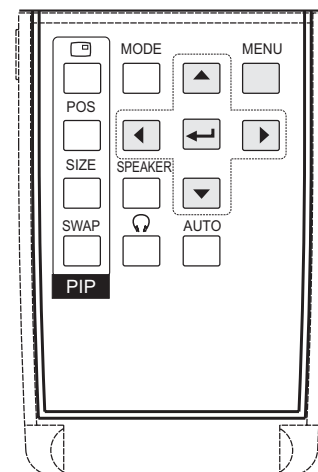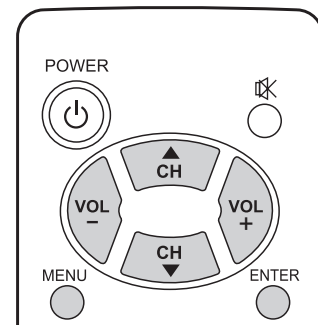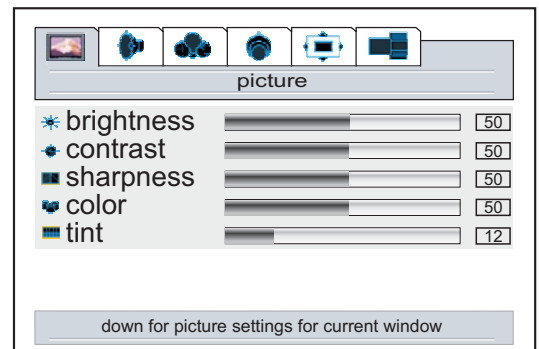

Displaying Status Information

Press the **DSP** button on the remote control, the unit will display current status information such as channel number, audio mode or signal source, etc.

 
Memorizing the Channels

Your PDP TV can memorize and store all of the available channels for both antenna and cable channels. After the available channels are memorized, use CH▲/▼ to scan through the available stations.

Selecting the Signal Source

Before your PDP TV can memorize the available channels, you must specify the type of signal source that is connected

1

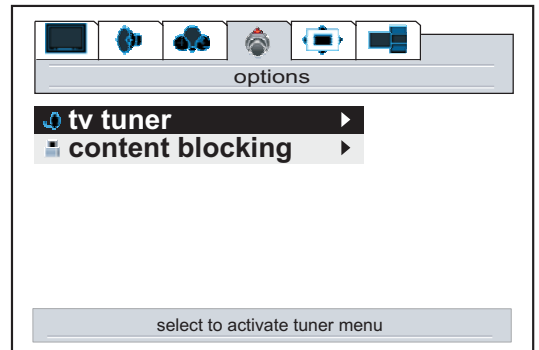


2

3

4

If the **search** menu does not display, press **VOL+/-**

 5

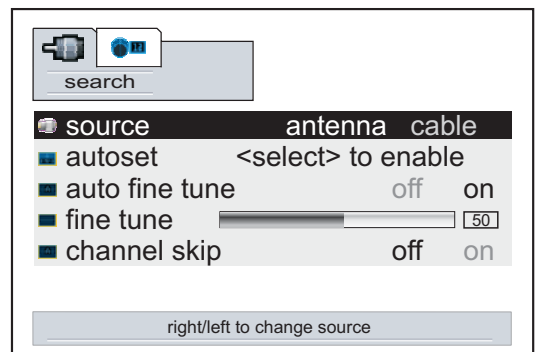


6

If you are connected to an antenna, please select antenna (the selected item displays in green). If you connect cable, please select cable.

Storing Channels in Memory Automatically

1 Repeat steps 1~4 in [**Selecting the Signal Source**] to

 2

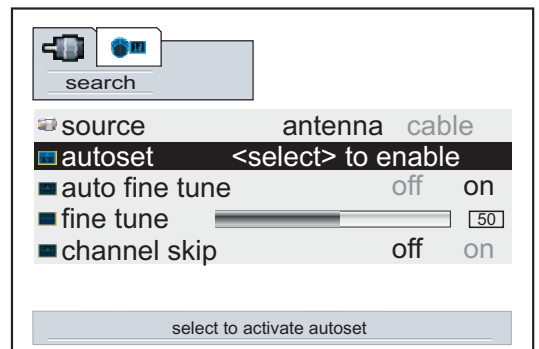


3

The unit will begin memorizing all of the available

Note:

 
*The process of auto memory will be stopped if you press the **MENU** button.*

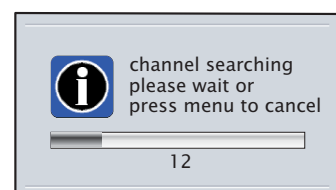

Memorizing the Channels (continued)


Setting Auto Fine Tune (AFT)

 - 1 Repeat steps 1~4 in [*Selecting the Signal Source*] to
- 2
- 3 When the AFT is set to On, the unit will automatically tune the program frequency to provide the best possible

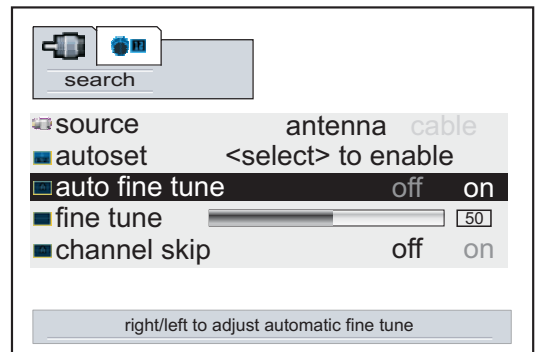


Manual Fine Tuning

 - 1 Repeat steps 1~4 in [*Selecting the Signal Source*] to
- 2
- 3 Press **VOL+/-** to fine tune till the best possible picture and sound are obtained.
If you fine tune a program manually, the **auto fine tune**

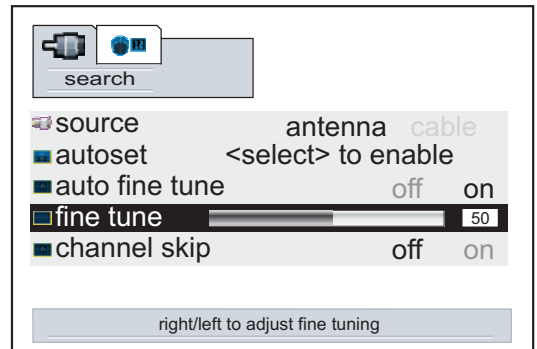

Adding and Erasing Channels

 - 1 Use **number buttons** to directly select a channel that will be added or erased.
- 2 Repeat steps 1~4 in [*Selecting the Signal Source*] to
- 3
- 4 When the item is set to on, the selected channel will be erased. When the item is set to off, the selected channel will be added.
The erased channels can not be selected by using the **CH▲/▼** buttons unless you use **number buttons** to

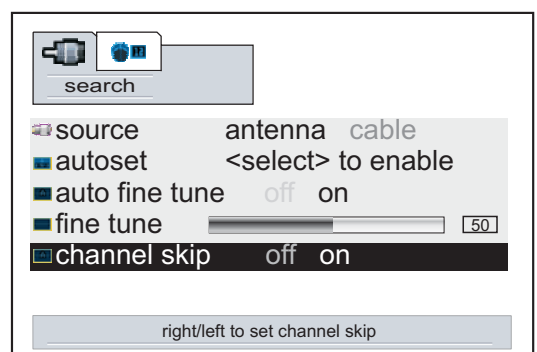

Changing Channels

Using the Channel Buttons (CH▲ or CH▼)

Press the CH▲ or CH▼ to change channels.

When you press the CH▲ or CH▼, the unit changes channels in sequence. You will see all the channels that the unit has memorized.

You will not see channels that were erased, not memorized or unavailable.

Direct Accessing Channels

Press the number buttons to go directly to a channel.

To select a one-digit channel:

Input the channel using the **0-9 number buttons** directly and then press **ENTER** or wait for 3 seconds.

To select a two-digit channel:

Input the channel using the **0-9 number buttons** directly and then press **ENTER** or wait for 3 seconds.

To select a three-digit channel:

Input the channel using the **0-9 number buttons** directly.

Note:

Be sure to enter the channel within 3 seconds.

When you use the number buttons, You may directly select channels that were erased.

Using the RETURN button

Press this button to switch between the current channel and the previous channel.

Adjusting the Volume

Using the volume buttons (VOL- and VOL+)

Using the Mute

Using the MUTE button

1 

2 

Basic Operations (continued)

Select input source signal

Using the SOURCE  button

1 

2

3 Press **ENTER** to confirm and the unit display signal from the selected input channel.

A -----VGA, select signal from VGA (15-pin D-sub) terminals.

D -----DVI, select signal from DVI terminals.

C1 -----YPbPr1/YCbCr1, select signal from YPbPr1/YCbCr1 terminals.

C2 -----YPbPr2/YCbCr2, select signal from YPbPr2/YCbCr2 terminals.

AV -----VIDEO (SVIDEO), select signal from S-Video or Video terminal.

The S-Video is prior to Video terminal when they are connected at the same time.

TV -----Select TV signal.



source **A** **D** **C1** **C2** **AV** **TV**
VGA

Note:

This unit identifies the type of component video terminals automatically. If you connect **Y, Cb, Cr** terminals, the screen displays **YCbCr detected** on the bottom-right corner. Similarly, if the component

Using source select menu

1

 
2

3

4

5

6 Press **ENTER** to confirm and the unit displays signal from the selected input channel.

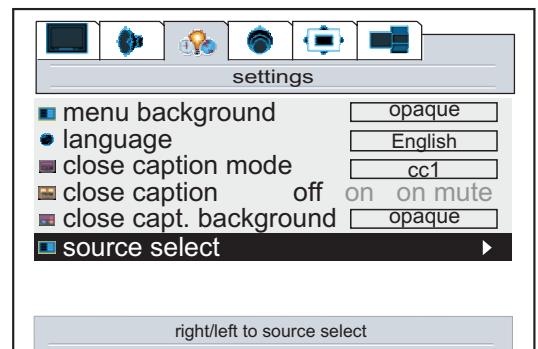

Selecting a MENU language

 
1

2

3

4 Press **VOL+/-** to select the appropriate language:

5

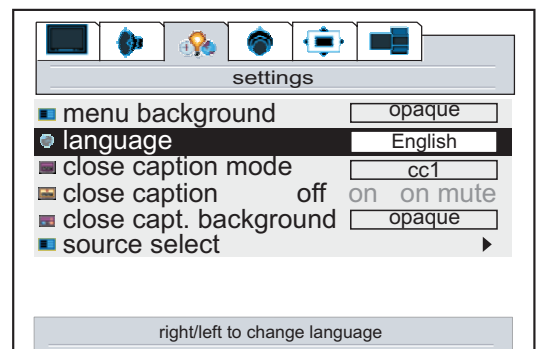

Editing Channel Label

1

2

3


4

 
 
 
5

6

7

8

- Use ▲/▼ to select character.
- Use ◀/▶ to move cursor left or right.
- Use **SOURCE**  to clear label text if you wish to reset.
- Use **MENU** to return.

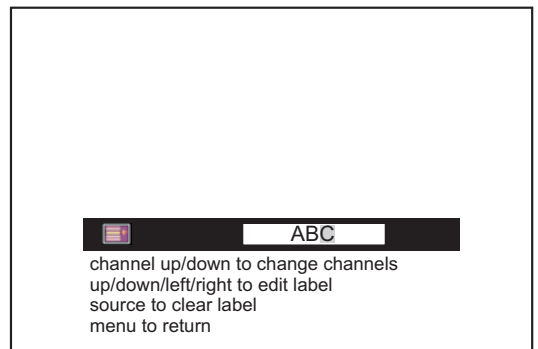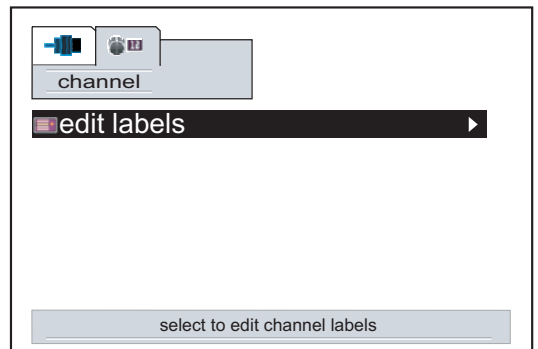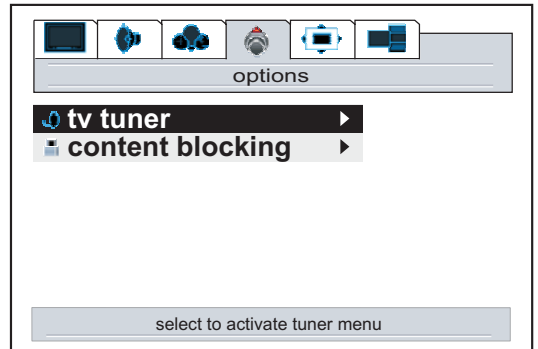

Setting Picture

Customizing the Picture

 
1

If the **picture** menu does not display, press **VOL+/-**

2

3

4

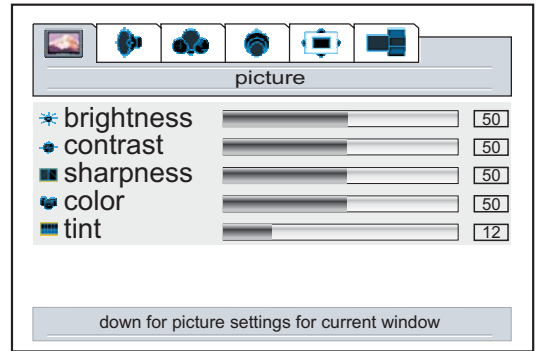

Using the Preset Picture Mode

1

2

 
3

There are three preset picture modes (**Normal**, **Bright** and **Soft**) and one user-set picture mode (**User**). Each preset mode has its own picture settings.

Normal: Select for a normal picture.


Bright: Select for a bright picture.

Adjusted settings are stored in User

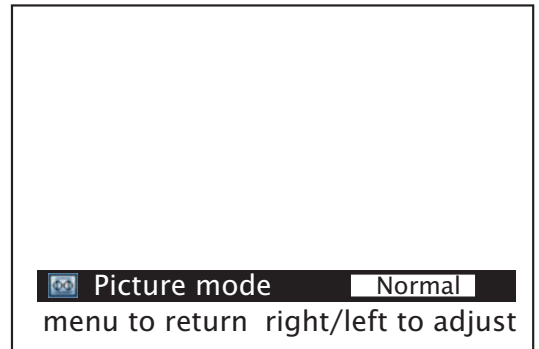


Setting the Menu Background

 - 1
- 2
- 3
- 4

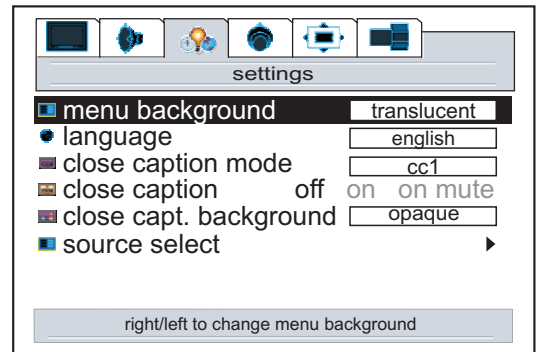


Setting Current Time

 - 1
- 2
- 3
- 4

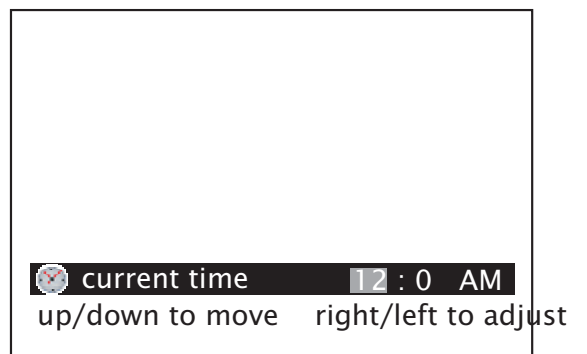

Setting Sleep Timer

 - 1
- 2
- 3

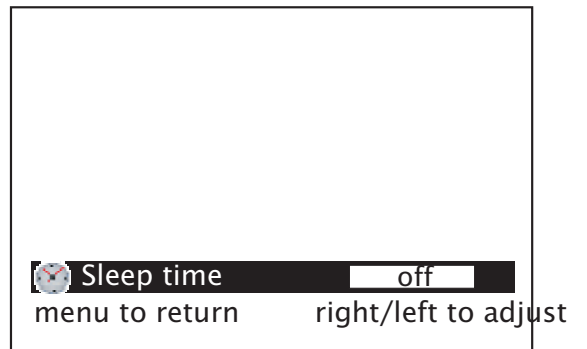

Changing Screen Options

Changing the Scaling mode of Image

- 1
- 2
- 3
- 4

The image size can be selected between: fill all, normal, wide and zoom .

Fill All

The Fill All mode stretches the input vertically and horizontally to fill the display from edge to edge. This mode is the default mode.

Normal

 
The Normal mode fills the display vertically with a 4:3 aspect picture, preserving the geometry of the input format. It performs the same as the Fill to Aspect Ratio mode..

Wide

The Wide mode only affects displays that are greater than 4:3 aspect. If the picture is less than or equal to 4:3, this mode acts as if it is in Normal mode. It is intended to display 4:3 images on a 16:9 panel with the least picture deformity. The center of the picture is left unstretched. The left and right sides of the picture are stretched in a non-linear fashion with the areas of greatest distortion on the extreme left and right edges of the picture. The top and bottom five percent of the picture are cropped.

Zoom


If the display aspect ratio is greater than 4:3, this mode fills the panel horizontally, cropping 10 percent off the top and bottom of the picture. If the display aspect ratio is less than 4:3, this mode

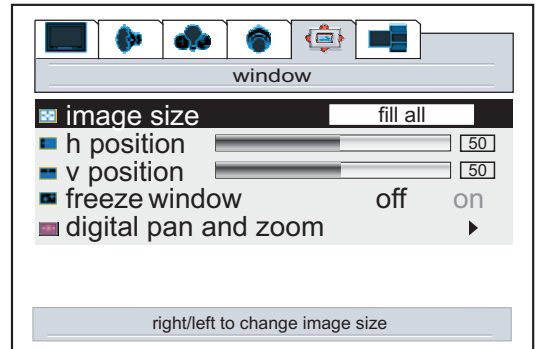

Freezing the Picture

- 1
- 2
- 3
- 4

 When you set this item to **on**, the current picture will be

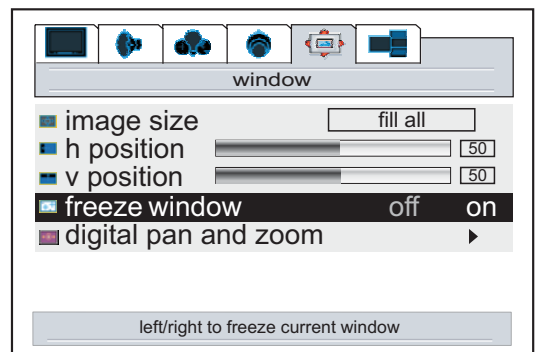


Note:

This menu item appears only when the current screen layout is full screen.

Changing the Position of the Image

The unit allows you to adjust the position of the image if it is not well-aligned.

 - 1
- 2
- 3
- 4


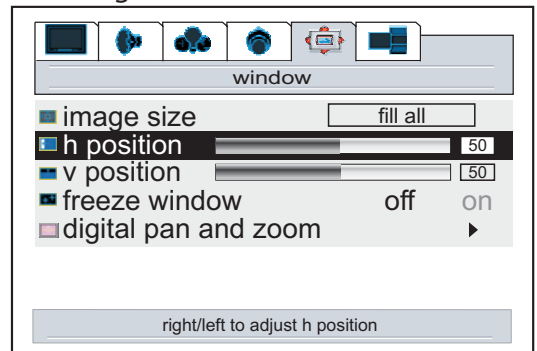


Using Digital Pan and Zoom

- 1
- 2
- 3
- 4
- 5


Note:

  You can quickly access Zoom menu by using the ZOOM button.

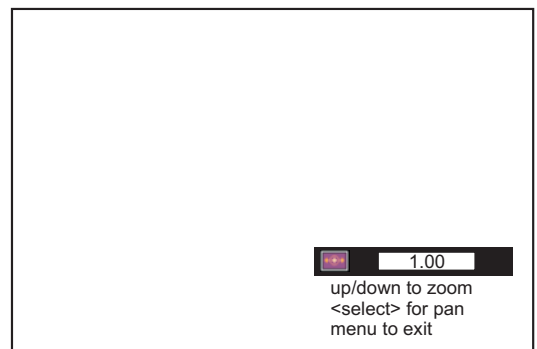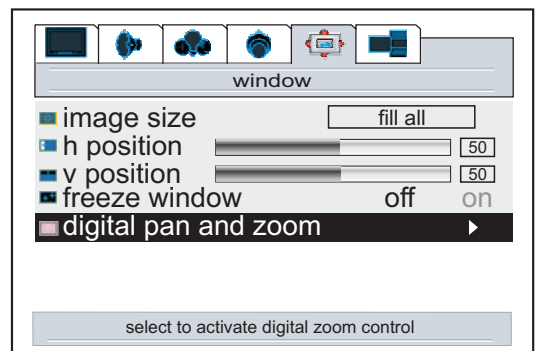

The unit allows you to pan the picture after you zoom in the

 - 1 Repeat steps 1~5 above to zoom in the picture.
- 2
- 3 Press **VOL+/-** or **CH▲/▼** to pan the current picture in the relevant direction.

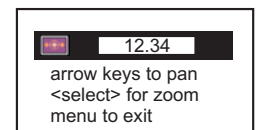

Setting Sound

Using the Preset Audio Mode

1

 
2

3

4

Note:

You can not access the **treble** and **bass** item unless the **Audio**

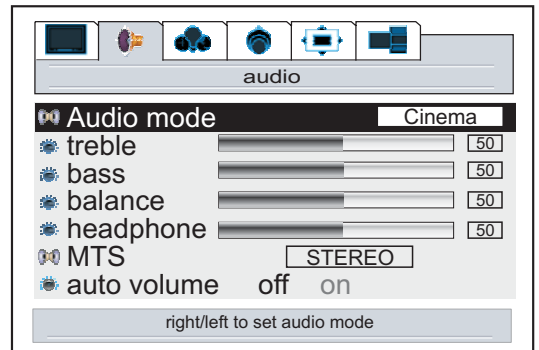


Customizing the Sound

1

2

3

 4

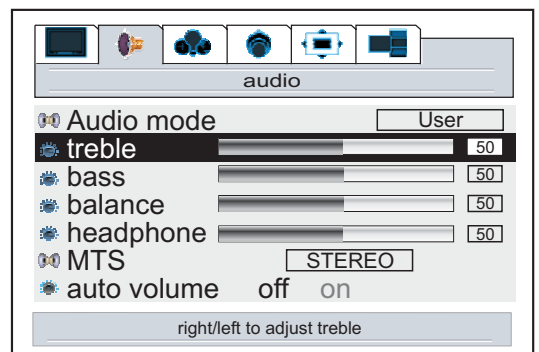

Using the S.M button

1

2

3

There are three preset Audio modes (**Cinema**, **Music** and **News**) and one user-set Audio mode (**User**).

 
Each preset mode has its own Audio settings.

Cinema: Select for a movie program picture.

Music: Select for a music program.

News: Select for a speech or conversation program.

Adjusted settings are stored in User mode.

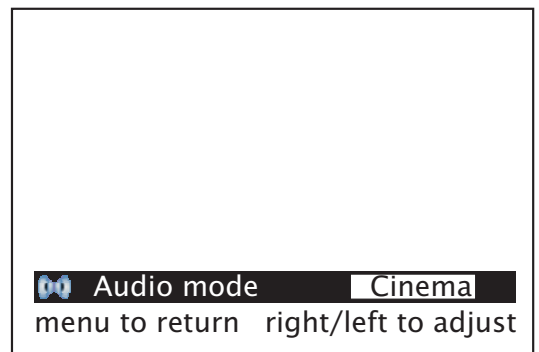

Adjusting the Headphone Volume

1

2

3

4



 
Choosing a Multi-Channel Sound (MTS) Soundtrack

1

2

3

4

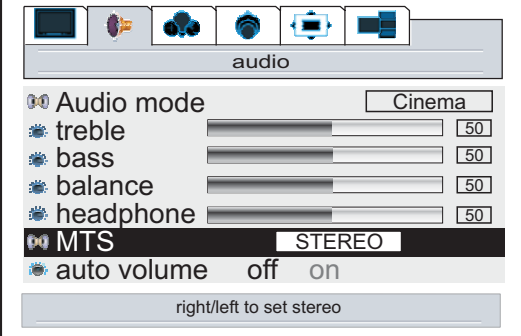

The screenshot shows the 'audio' settings menu. At the top, there are several icons for different audio modes. Below them, the 'audio' title is centered. The 'Audio mode' is set to 'Cinema'. There are four sliders for 'treble', 'bass', 'balance', and 'headphone', each with a value of 50. The 'MTS' menu is highlighted in black with 'STEREO' selected in white. Below it, 'auto volume' is set to 'off'. At the bottom, there is a bar with the text 'right/left to set stereo'.

Choose **STEREO** for channels that are broadcasting in stereo.

 
Choose **MONO** for channels that are broadcasting in mono, or if you are having difficulty receiving a stereo signal.

Using the MTS button

1

2

3

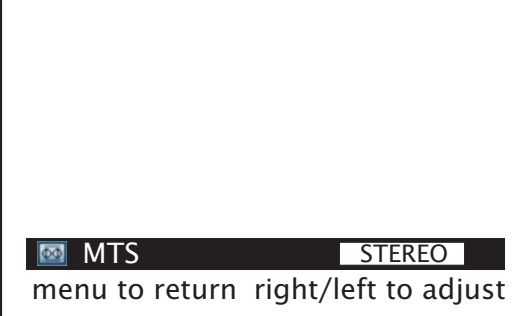

The screenshot shows the 'MTS' menu highlighted in black with 'STEREO' selected in white. Below it, there is a bar with the text 'menu to return right/left to adjust'.

Using the Auto Volume

Each broadcasting station has its own signal conditions, which can make it necessary to adjust the volume every time the channel is changed. "Auto volume" lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the

1

2

3

4



The screenshot shows the 'audio' settings menu. The 'auto volume' option is now set to 'on'. The rest of the settings are the same as in the previous screenshot.

Changing Screen Layout

Selecting Screen Layout

 
Using the Layout Menu

1

2

3

4

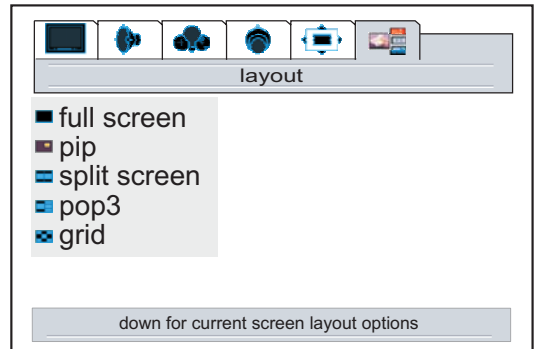


Using the MODE button

1

2


3

 4

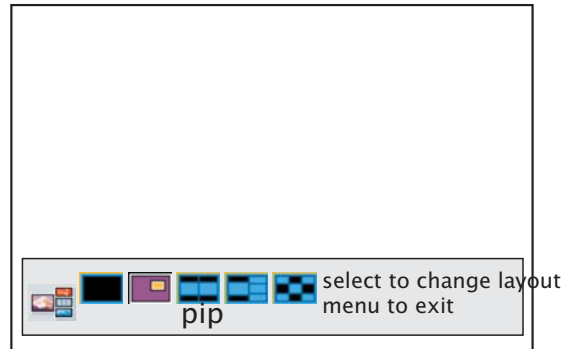

Full Screen

 
When this item is selected, only main frame displays on the

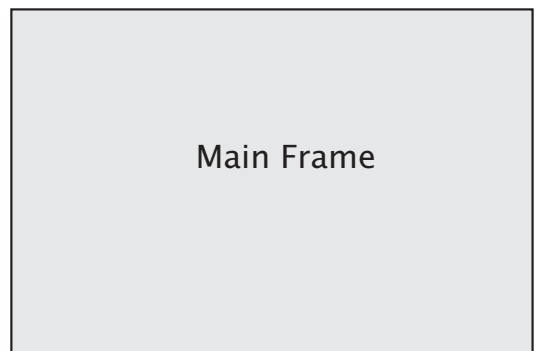

Changing Screen Layout (continued)


PIP

 When this item is selected, one main frame and one PIP frame display on

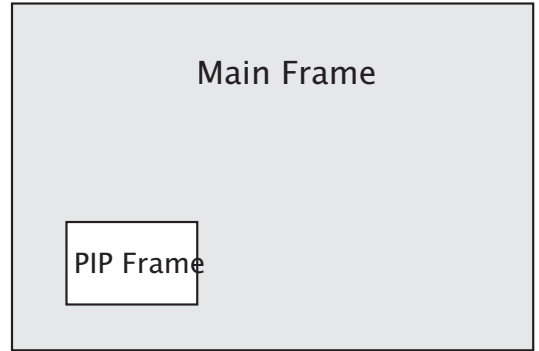


Split Screen

 When this item is selected, the screen will be split into two

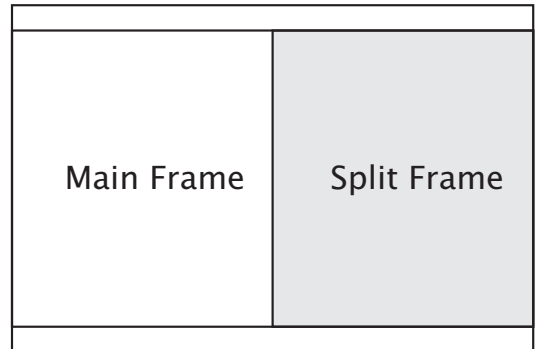


POP3

 When this item is selected, one main frame and three scanning frames display on the screen.

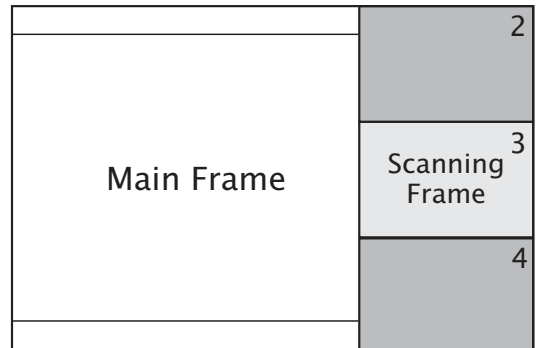

Grid

 When this item is selected, the screen displays 9 scanning

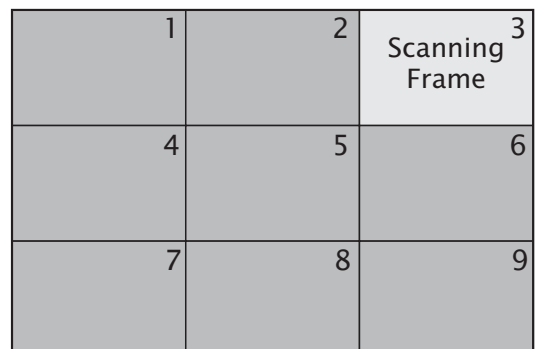

PIP Operations

Viewing the Picture-in-Picture

1

2

3

4

 
 
The screen displays one main frame and one PIP frame.

5 Press **▲** or **▼** to select main frame or PIP frame.

The selected frame displays with a green border.

Note:

- ▶ You can quickly open or close PIP frame by directly using the **PIP displaying** button.
- ▶ Many but not all adjustments and settings can be applied to the PIP picture when the PIP frame is selected.
- ▶ To cancel PIP frame, press the **PIP displaying** button or select the full screen item and confirm.
- ▶ The audio of the selected picture can be output from the speaker or headphone by using the **SPEAKER** or **headphone** button

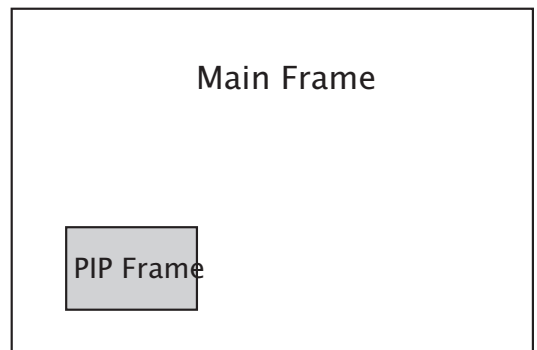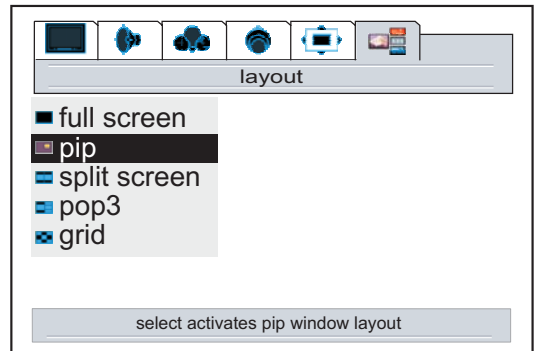

Adjusting the Size of PIP Frame

1 With the PIP frame displaying, press **MENU** to display the menu main page.

2

3

4

 
 
5

Using the **SIZE** button

1

2

3

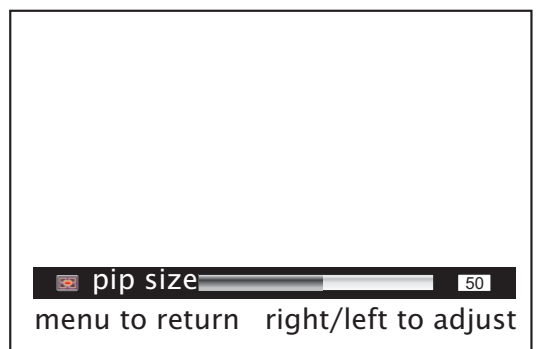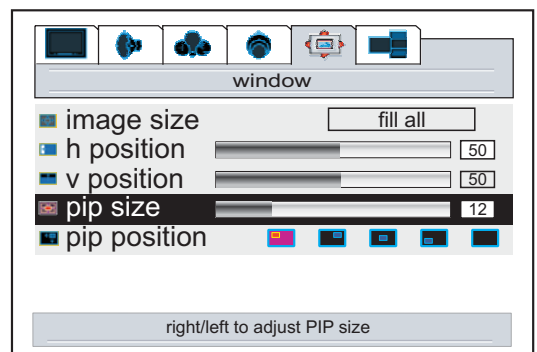


Changing the Position of the PIP Frame

1 With the PIP frame displaying, press **MENU** to display the menu main page.

2

3

 4

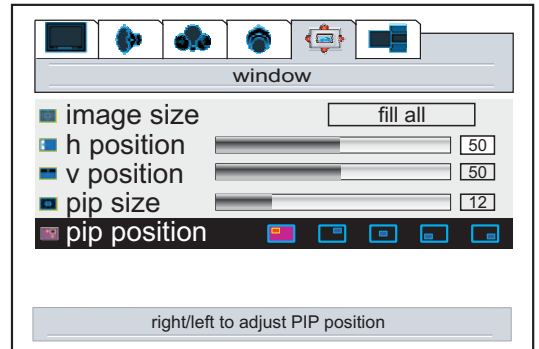


Using the POS button

1 Press the **POS** button to quickly access the **pip position** select menu.

2

 3

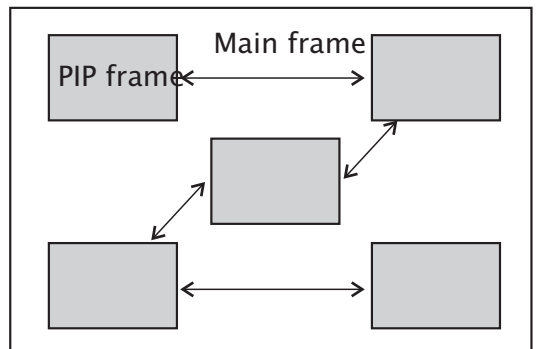

Adjustment in PC (VGA) Mode

With working in VGA mode, this unit allows you to perform several adjustments.

 
Adjusting Picture

1

If the **picture** menu does not display, press **VOL+/-**

2

3

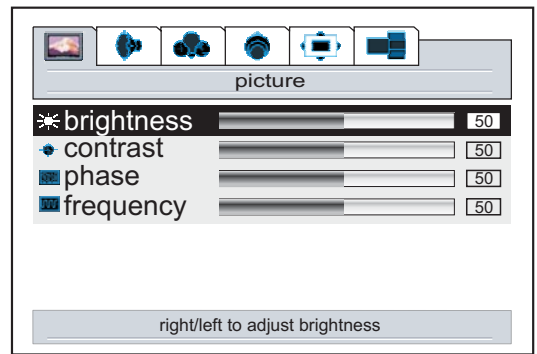

Adjusting the Phase and Frequency

 
1

If the **picture** menu does not display, press **VOL+/-**

2

3

4

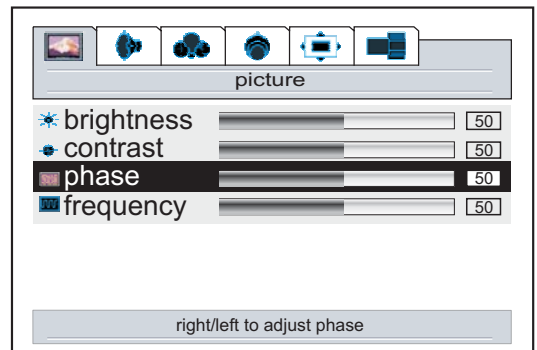


You may find that images blur, depending on the clock phase of your PC's Processor. If you experience blurring , you can obtain a clearer image by adjusting the phase setting. Adjust the clock frequency of the set's internal clock signal. If shimmering or rainbow-like

Adjusting the Picture Automatically

If you are not satisfied with the picture , you may quickly adjust the picture by using the **AUTO** button. After the **AUTO** button is pressed, the message "**Auto running**" appears on the screen and the picture adjustments are automatically activated.

Changing the Scaling mode of Image

 
- 1
- 2
- 3
- 4
- 5

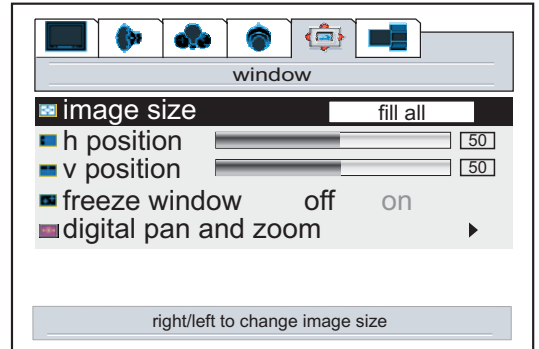

Changing the Position of Image

After connecting the unit to your PC, adjust the position of the screen if it is not well-aligned.

 - 1
- 2
- 3
- 4 Press **VOL+/-** to adjust the value of the item until the screen is well-aligned.
- 5

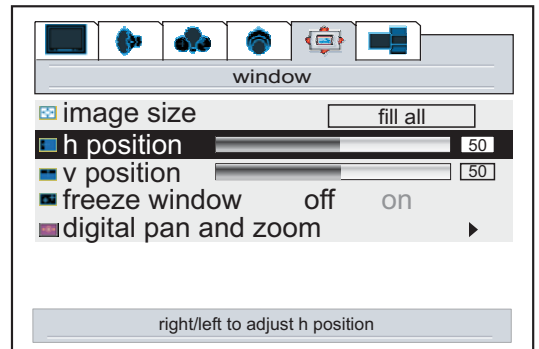

Displaying the Information

When the **DSP** button is pressed in PC (VGA) mode, the unit displays some information such as the vertical frequency and resolution.

Viewing Closed Captions

The unit decodes and displays the closed captions that are broadcast with certain TV shows. These captions are usually subtitles for the hearing impaired or foreign language translations. All VCRs record the closed caption signal from television programs, so home-recorded video tapes can also provide closed captions. Most prerecorded commercial video tapes provide closed captions as well. Check for the closed

Note:

The Caption feature works in TV mode only.

Not all the programs and videos will offer closed captioning. Please look for the symbol to ensure that

Setting Closed Caption

1

2

3

4

Off---Turn off the closed caption. If you select **off**, the **close caption mode** and **close capt. background** can not be accessed.

 
 
On---Turn on the closed caption.

On Mute---Turn on the closed caption when mute. If you select **on mute**, the **close caption mode** and

5

6

The Closed Caption broadcasts can be viewed in two modes: CAPTION and TEXT. For each mode, four The [CAPTION] mode shows subscripsts of dialogues and commentaries of TV dramas and news programs while allowing a clear view of the picture. The [TEXT] mode displays various information over the picture (such as TV program schedule, weather forecast, etc.) that is independent of the TV programs.

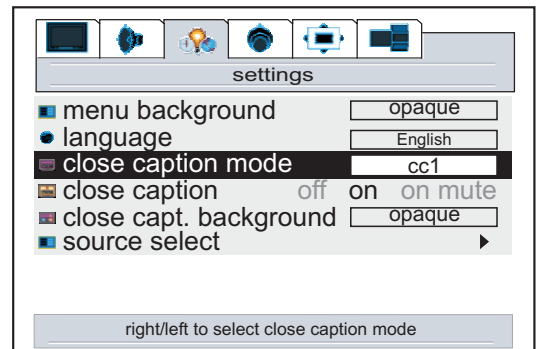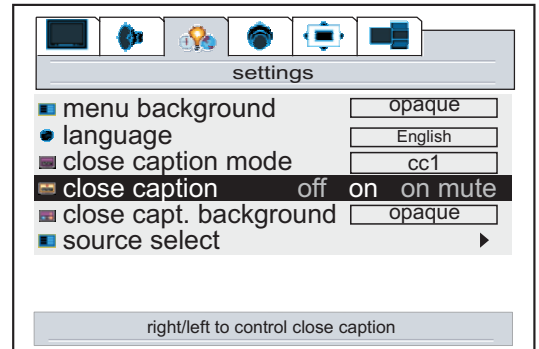


Setting the Background of Closed Caption

1

2

3

 4

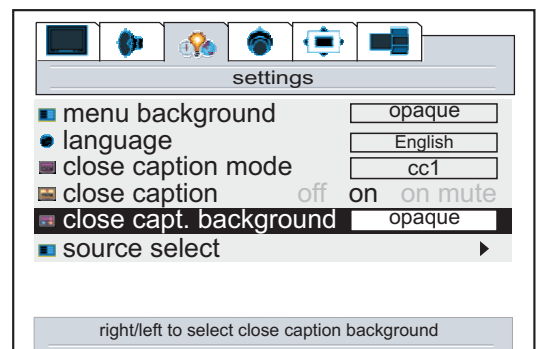

Adjusting Parental Control Settings

Parental Control

This function allows TV programs to be restricted and TV usage to be controlled based on FCC data. It prevents children from watching violent or sexual scenes that may be harmful.

Restriction of TV programs includes two ratings that contain information about the program: the MPAA rating and the TV Parental Guidelines. The MPAA rating is restricted by age. TV Parental Guidelines are restricted by age and content.

[1] Movie Rating (MPAA)


Rating		
age based	G	GENERAL AUDIENCES. All ages admitted.
	PG	PARENTAL GUIDANCE SUGGESTED. Some material may not be suitable for children.
	PG-13	PARENTAL STRONGLY CAUTIONED. Some material may be inappropriate for children under 13.
	R	RESTRICTED. Under 17 requires accompanying parent or adult guardian.
	NC-17	NO ONE 17 AND UNDER ADMITTED.
	X	X Rating is an older rating that is unified with NC-17 but may be encoded in the data of
	NR	

Note:

The Movie rating is only age-


Example 1:

 “PG-13” in the age based rating is blocked, this will automatically block the higher ratings “R”, “NC-17”, “X” also.

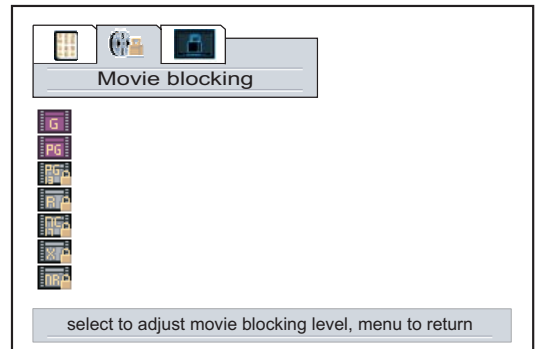

Example 2:

 “R” in the age based rating is blocked, this will automatically block the higher ratings “NC-17”, “X” also.

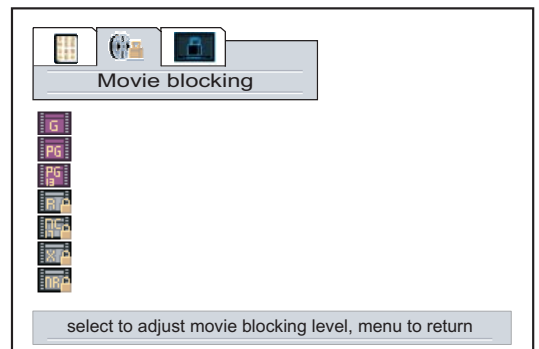

Adjusting Parental Control Settings (continued)

[2] TV Parental Guidelines

Rating		← content based →				
		D	L	S	V	FV
age based	TV-Y (All children)	×	×	×	×	×
	TV-Y7 (Direct to Older Children)	×	×	×	×	●
	TV-G (General Audience)	×	×	×	×	
	TV-PG (Parental Guidance Suggested)	●	●	●	●	
	TV-14 (Parents Strongly Cautioned)		●	●	●	
	TV-MA (Mature Audience Only)					

- × — Content Rating can be set but this Rating is not normally broadcast by TV Station.
- — Content Rating can be set.


D: Sexually Suggestive Dialog
 L: Adult Language
 S: Sexual Situation
 V: Violence
 FV: Fantasy Violence

Note:

Age-based ratings can be modified by the content-based ratings but only in the combinations indicated by an ● in the table above.


Example 1:

 When TV-Y7 in the age-based rating is set to BLOCK, this will automatically block the higher ratings: TV-G, TV-PG, TV-14

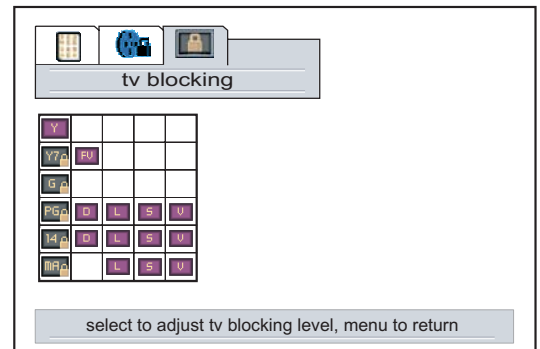

Example 2:


 
When TV-14 in the age-based rating is set to BLOCK, this will automatically block the higher ratings: TV-MA. In addition, if you block "L" sub-rating in TV-PG, then the "L" sub-ratings in TV-14 and TV-MA will automatically be

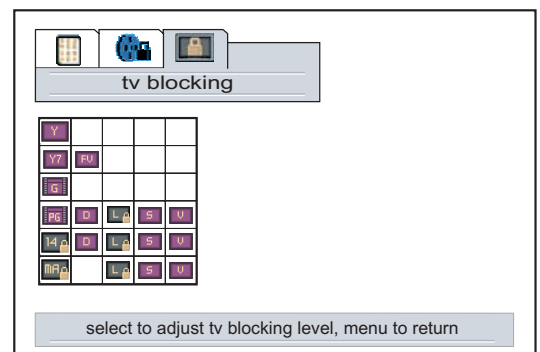

Adjusting Parental Control Settings (continued)


Accessing the Parental Control Menu

  - 1
 - 2
 - 3
 - 4
 - 5
 - 6
 - 7
- Use **VOL+/-** to move password digit leftward or rightward.
- The default password is **000000**, you may change the password yourself.
- The unit allows you to access the Parental Control menu if you input the right password, or you will be denied.

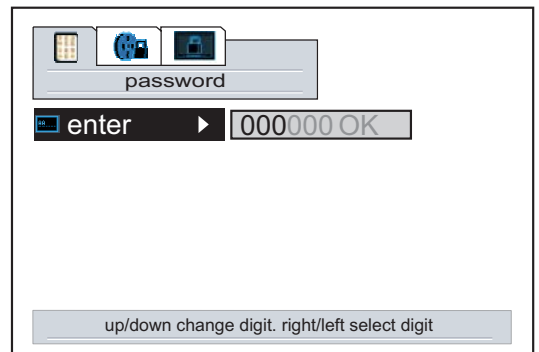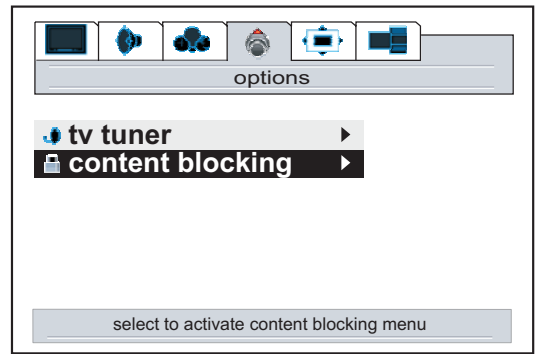

Changing the Password

 - 1
- 2
- 3

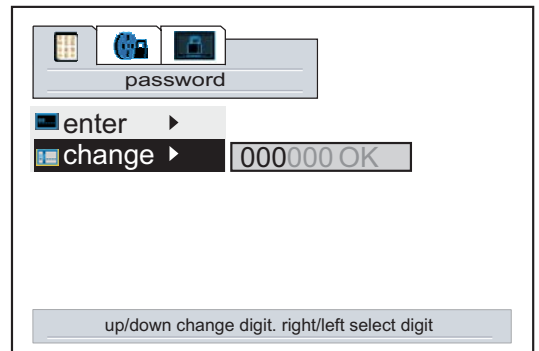

Be sure to write down your password and retain it for future use.

 
Note:

The unit provides a master password "666888". If you forget your password and can't access Parental Control menu, you may input the master password to access Parental Control menu. Please set a new password and make sure to remember your password.

Adjusting Parental Control Settings (continued)

Adjusting the Movie Rating

- 1
- 2
- 3
- 4
- 5

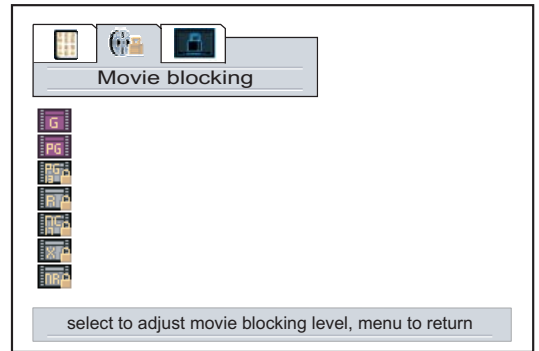


“PG-13” in the age-based rating is blocked, this will automatically block the higher ratings “R”, “NC-17”, “X”

How to unblock a Movie Rating

If you want to unblock a movie rating, please repeat steps 1~3 in [Adjusting the Movie Rating] and use

Adjusting the TV Rating

 - 1
- 2
- 3
- 4 Press **CH**▲/▼ or **VOL**+/- to select an age or content rating to be blocked.
- 5

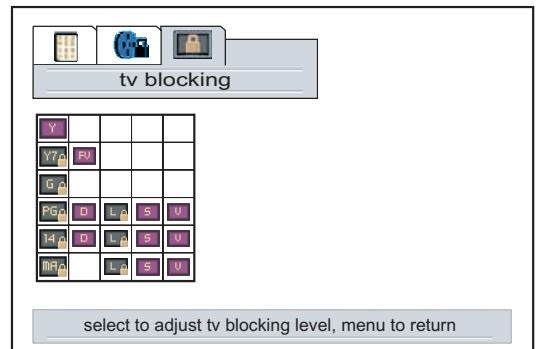

When TV-Y7 in the age-based rating is set to BLOCK, this will automatically block the higher ratings:
T V - G , T V - P G ,
TV-14 and TV-MA.

In addition, if you block “L” sub-rating in TV-PG, then the “L” sub-ratings in TV-14 and TV-MA will

Note:

Since a TV program may use either the MPAA rating or the TV Guidelines, both should be adjusted for

How to unblock a TV Rating

If you want to unblock a TV rating, please repeat steps 1~3 in [Adjusting the TV Rating] and use

Before calling for repair service, check the following items for possible remedies to an

Symptoms	Check item
"Ghost" or double images	<ul style="list-style-type: none"> ✍ This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may
No power	<ul style="list-style-type: none"> ✍ Check that the AC power cord is plugged into the mains socket. ✍ Unplug the power cord, wait for 60 seconds. Then re-insert
No picture	<ul style="list-style-type: none"> ✍ Check antenna connections at the rear of the unit to see if it is properly connected to the unit. ✍ Possible broadcast station trouble. Try another channel. ✍ Adjust the contrast and brightness settings. ✍ Check the Closed Captions control. Some TEXT modes could block the screen. ✍ Select a correct input. ✍ Is a non-compatible signal being input?
Good picture but no sound	<ul style="list-style-type: none"> ✍ Increase the VOLUME. ✍ Check that the unit is not muted. ✍ Check Whether the sound is output to headphone
Good sound but poor color	<ul style="list-style-type: none"> · Adjust the contrast, color and brightness
Poor picture	<ul style="list-style-type: none"> ✍ Sometimes, poor picture quality occurs when having activated an S-VHS camera or camcorder connected and having connected another peripheral at the same time. In this case, switch off one of the other peripherals.
Horizontal dotted line	<ul style="list-style-type: none"> ✍ This may be caused by electrical interference (e.g. hairdryer, nearby neon lights, etc.) ✍ Turn off the equipment.
Television not responding to remote control	<ul style="list-style-type: none"> ✍ Check whether the batteries are working. Replace if necessary. ✍ Clean the remote control sensor lens on the unit. ✍ Do not use the remote control under strong or fluorescent
Snowy picture and noise	<ul style="list-style-type: none"> ✍ Check the antenna connection.
No stable or not synchronized VGA picture	<ul style="list-style-type: none"> ✍ Check if you have selected the correct VGA mode in your
No output from one of the speakers	

Note:




If your problem is not solved, restart your TV by turning it off and then on again once.

Specifications

Type	PDP TV
Display Size diagonal	42" Wide
Geographical Version	US
Display Feature	
Resolution	852 X 480
Pixel Pitch	1.095 X 1.110 mm
Maximum Colors	16,777,000
Brightness	1000 nit
Contrast	3000:1
Viewing Angle	160°/160°
TV Tuner & Color System	
Tuner	FST x 1
TV System	NTSC
Channel Coverage	VHF 2-13, UHF 14-69, CATV (1-125)
Video Features	Progressive Scan
Audio Speaker System	
Speaker Type	Detachable
Maximum Audio Output	10Wx2
Stereo Sound System	BTSC
Mount Support	Wall Mount
Power Supply	AC110-240V 50/60Hz
Power Consumption	400W
Stand by Mode Power Consumption	5W
Unit Weight (lb)	86
Unit Weight (lb) with Stand	81.5 (without speakers)
Unit Weight (lb)	70.5 (without Stand and speakers)
Unit Dimensions (WxHxD) (inch)	49 x 28.8 x 11.3
Unit Dimensions (WxHxD) (inch) with Stand	41.3 x 28.8 x 11.3 (without speakers)
Unit Dimensions (WxHxD) (inch)	41.3 x 25.4 x 3.1 (without Stand and speakers)
Other Features	
	Double Screen
	Picture in Picture
	Sleep Timer
	Picture Freeze
Caption	Closed Caption
Security	Parental Control
Remote Control function support for full OSD features	OSD Support English, French, Spanish

Terminals		
Video In	RF : TV/CATV 75ohms coaxial x 1	
	AV : RCA 75ohms composite video x 1	
	S-Video : 4-pin DIN x 1	
	D-Sub 15 x 1	
	DVI x 1	
	YPbPr/YCbCr (Support HDTV): RCA 75 ohms x 2	
Video Out	RCA 75 ohms	
Audio In	L/R RCA for S-Video or AV x 1	
	Stereo mini phone Jack for PC x 1	
	Stereo mini phone Jack for DVI x 1	
	Stereo mini phone Jack for YPbPr/YCbCr x 2	
Audio Out	L/R RCA for Video Out x 1	
	Headphone Jack : Stereo mini phone Jack x 1	
	Speaker Out x 2	
Other Standard	RS232 x 1	
Accessories	Optional	1 User Manual, 1 Remote Control, 1 Power Cable,
	Optional	2 AAA Batteries, 1 PC D-Sub Signal Cable, 1 Component-Video Cable (YPbPr/YCbCr), 1 Audio/Video Cable 1 Audio Cable, 2 Speaker Cables
Display Format Supported by This Unit		
For VGA: 640X480 @ 60Hz,72Hz,75Hz,85Hz; 800X600 @ 60Hz,72Hz,75Hz,85Hz;		
1024X768 @ 60Hz; 1280X1024 @ 60Hz.		
For DVI: 640X480 @ 60Hz,72Hz,75Hz,85Hz; 800X600 @ 60Hz,72Hz,75Hz,85Hz;		
1024X768 @ 60Hz; 1280X1024 @ 60Hz.		
For YPbPr: 480P @ 50Hz, 59Hz, 60Hz;		
720P @ 50Hz, 59Hz, 60Hz;		
1080i @ 50Hz, 59Hz, 60Hz.		

   Dimensional Drawings

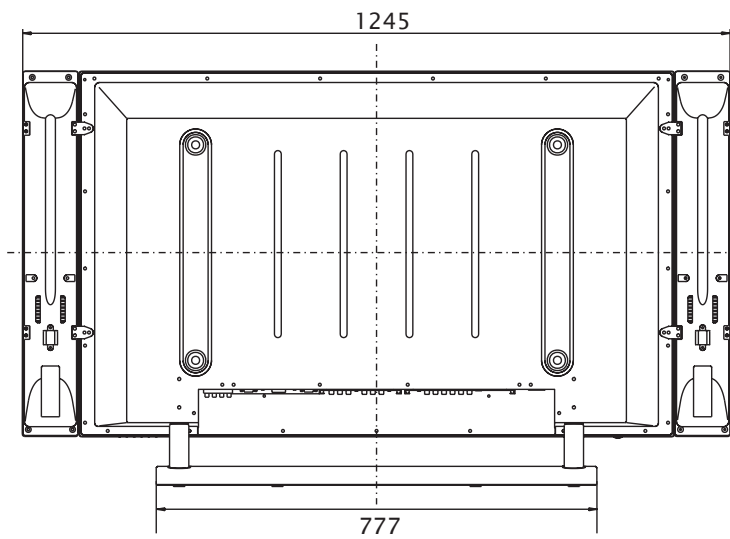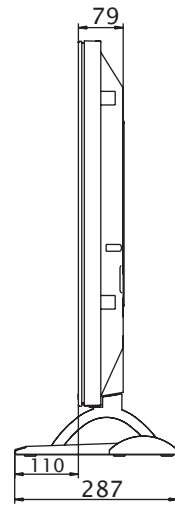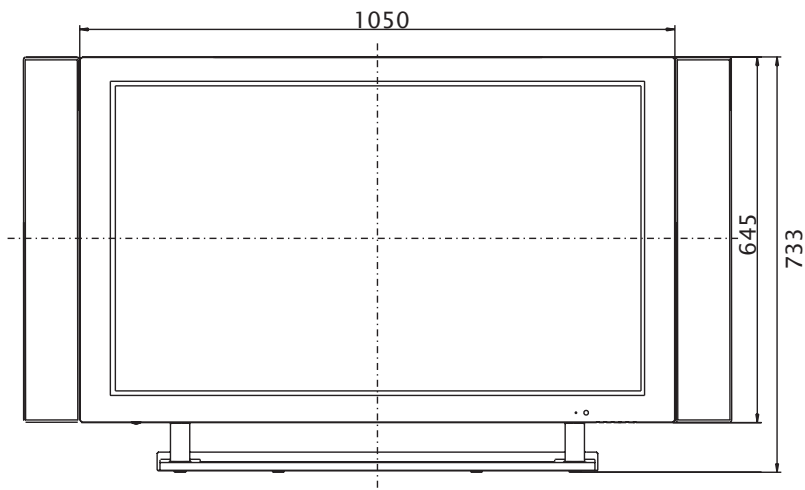

⚠ Design and specifications are subject to change without notice.