





# RCA

## LCD Television User's Guide

Changing Entertainment. Again.



# Important Information

 <div style="border: 1px solid black; padding: 5px; text-align: center;"><b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN</div> 	 <p>This symbol indicates important instructions accompanying the product.</p>
Caution: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.	 <p>This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.</p>

**WARNING**

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.



This symbol indicates that this product contains mercury. Special disposal of this product for environmental reasons may be required under the laws applicable to your jurisdiction. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).

Refer to the identification/rating label located on the back panel of your product for its proper operating voltage.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

**Cable TV Installer:** This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

**Important:** This television is a table model and is designed to sit on a firm, flat, surface. Don't place the TV on soft carpeting or similar surface because the ventilation slots on the bottom of the unit will be blocked resulting in reduced lifetime from overheating. To assure adequate ventilation for this product, maintain a spacing of 4 inches from the top and sides of the TV receiver and 2 inches from the rear of the TV receiver and other surfaces. Also, make sure the stand or base you use is of adequate size and strength to prevent the TV from being accidentally tipped over, pushed off, or pulled off. This could cause personal injury and/or damage the TV. Refer to the Important Safety Instructions on the next page.

## Product Registration

Please fill out the product registration card (packed separately) and return it immediately. For U.S. customers: Your RCA Consumer Electronics product may also be registered at [www.rca.com/productregistration](http://www.rca.com/productregistration). Registering this product allows us to contact you if needed.

## Product Information

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers. These numbers are located on the product.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_ Purchase Date: \_\_\_\_\_

Dealer/Address/Phone: \_\_\_\_\_

## Important Safety Instructions


### Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel.



Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984 (Section 54 of Canadian Electrical Code, Part 1) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See following example.

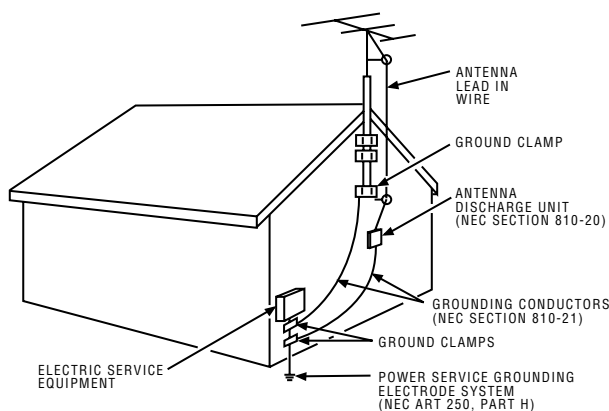

*This page intentionally left blank*

Important Safety Instructions .....	i
<b>Chapter 1: Connections &amp; Setup</b>	
<b>Things to Consider Before You Connect .....</b>	<b>3</b>
Protect Against Power Surges .....	3
Important Stand and Base Safety Information .....	3
Position Cables Properly to Avoid Audio Interference .....	3
Use Indirect Light .....	3
Connection Illustrations.....	3
Check Supplied Parts.....	3
<b>Explanation of Jacks .....</b>	<b>4</b>
<b>Connect Your Cable .....</b>	<b>6</b>
<b>Choose Your Connection .....</b>	<b>6</b>
How to Connect: TV + VCR + DVD Player .....	7
How to Connect: TV + Personal Computer.....	8
<b>Setting Up Your TV .....</b>	<b>9</b>
Plug in the TV.....	9
Put Batteries in the Remote .....	9
Turn on the TV .....	9
Adjust the TV Screen.....	9
Mounting the TV to the Wall.....	10
<b>Completing the On Screen Setup .....</b>	<b>10</b>
Choose the Menu Language .....	10
Complete Channel Search .....	11
<b>The Buttons on the Remote Control.....</b>	<b>12</b>
<b>Chapter 2: Using the TV's Features</b>	
<b>About the Channel Banner.....</b>	<b>13</b>
<b>Why You Should Use the Autotuning Feature .....</b>	<b>13</b>
How to Set Up the Autotuning Feature .....	13
<b>Parental Controls .....</b>	<b>14</b>
How V-Chip Works.....	14
US V-Chip Rating System .....	15
Canadian English V-Chip Rating System .....	15
Canadian French V-Chip Rating System.....	16
US TV Ratings .....	16
Blocking Specific Content Themes.....	18
Viewing Specific Content Themes.....	18
V-Chip Movie Rating Limit .....	18
Blocking Canadian V-Chip Ratings.....	19
Front Panel Block .....	20
V-Chip Unrated/Exempt Block .....	20
<b>Additional Features .....</b>	<b>20</b>
Format Control.....	20
MultiTask Audio™ .....	21
Calendar .....	21
<b>Chapter 3: Using the TV's Menu System</b>	
<b>Menus, On-screen Help, and Control Panels.....</b>	<b>22</b>
Controls .....	22
<b>Picture Menu .....</b>	<b>23</b>
<b>PC Picture Menu .....</b>	<b>23</b>
<b>Sound Menu .....</b>	<b>24</b>
<b>Geometry Menu.....</b>	<b>24</b>
<b>PC Geometry Menu.....</b>	<b>24</b>
<b>Preferences Menu .....</b>	<b>25</b>
<b>Setup Menu.....</b>	<b>25</b>

# Table of Contents

---

## Chapter 4: Other Information

Troubleshooting .....	27
Care and Cleaning .....	28
Limited Warranty .....	29

## Things to Consider Before You Connect

### Protect Against Power Surges

- Connect all components before you plug any of their power cords into the wall outlet or power strip. NEVER plug your TV into an outlet that is controlled by a wall switch.
- Turn off the TV and/or component(s) before you connect or disconnect any cables.
- Make sure all antennas and cables are properly grounded. Refer to the Important Safety Instructions at the beginning of the manual.

### Protect Components from Overheating

- Don't block ventilation holes on any of the components. Arrange the components so that air can circulate freely.
- Don't stack components.
- If you place components in a stand, make sure you allow adequate ventilation.
- If you connect an audio receiver or amplifier, place it on the top shelf so the heated air from it won't flow around other components.

### Important Stand and Base Safety Information

If a stand or base is used ensure that is of adequate size and strength to prevent the TV from being accidentally tipped over, pushed off, or pulled off. This could cause personal injury and/or damage the TV. Refer to the Important Safety Instructions at the beginning of the manual.

### Position Cables Properly to Avoid Audio Interference

Insert each cable firmly into the designated jack.

### Use Indirect Light


Don't place the TV where sunlight or room lighting will be directed toward the screen. Use soft or indirect lighting.

### Connection Illustrations


The components used in the connection illustrations are for representation only. The input jacks and the output jacks on the back of your components (VCR, DVD player, etc.,) might look different than those illustrated.

### Check Supplied Parts


Check that the following parts were packed with your product.

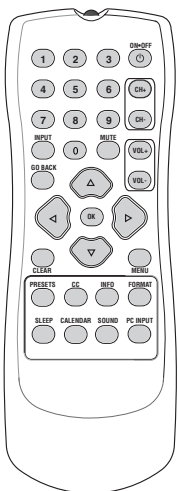


Remote control

 

2 AA batteries

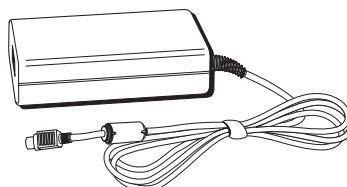

AC Power adapter

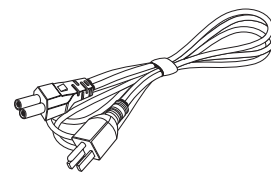


Power cord

## Explanation of Jacks

This section describes the jacks and cables you might use to make connections. There are several ways to connect components to your TV.

Different jacks and cables provide a different level of performance. It's important to remember the different degrees of picture improvement for comparison. The YPbPr (component) jacks are considered an excellent improvement; S-Video and Video (composite) jacks are considered very good; while the Antenna connection is good.

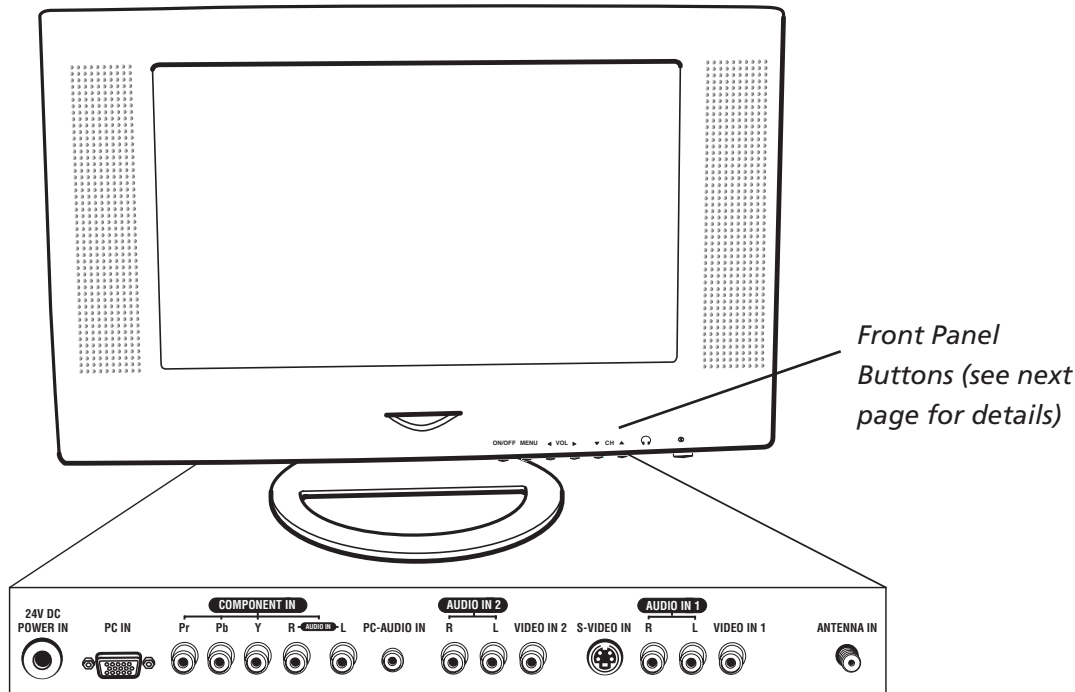

**Notes:** The AUDIO and VIDEO IN 2 jacks are only available for model L23W10.  
The DC POWER IN jack is 24V for model L23W10 and 12V for models L1510 and L2010.

### Bottom Panel

**24V or 12V DC POWER IN** (24V for model L23W10 and 12V for models L1510 and L2010) Connect the power adapter cord to this jack to give the TV power.

**PC IN** Connect your computer to this jack using a 15 pin D-sub cable.

### COMPONENT IN

- **Y Pb Pr (Component jacks)** For connection of components that have component output jacks (Y Pb Pr), such as an HD receiver, or DVD player.

The Y Pb Pr jacks provide excellent picture quality because the video is separated into three signals. If your component has Y Pb Pr jacks, use component video cables to connect to the TV.

- **AUDIO IN R and L** Use the right and left audio jacks when connecting to the Component video inputs. The right connector is usually red; the left connector is usually white.

**PC AUDIO IN (Stereo mini jack)** Use to obtain sound when a PC is connected to the PC IN jack. Use a 3.5 mm stereo mini pin cable (sometimes referred to as 1/8" stereo mini pin) to connect a PC to your TV. Go to page 8 for more information.



**AUDIO IN 2 R and L** (only available on model L23W10) Use the AUDIO IN 2 right and left audio jacks when connecting to the VIDEO IN 2 jack. The right connector is usually red; the left connector is usually white.

**VIDEO IN 2** (only available on model L23W10) Provides composite video connection. The video connector is usually yellow.

**S-VIDEO IN** The S-Video (super video) jack provides better picture quality than the regular video jack because the color (chrominance, also called chroma) part of the signal is separated from the black and white (luminance) part of the picture.

If a component you're connecting to your TV (like a DVD player) has an S-VIDEO and a VIDEO jack, connect the DVD player to the TV with an S-Video cable (not provided) for better picture quality.

***Note:** Remember to connect the left and right audio cables to the available Audio In jacks because the S-Video cable carries only the picture signal, not the sound.*

**AUDIO IN 1 R and L** for model L23W10 (AUDIO IN R and L for models L1510 and L2010) Use the AUDIO IN 1 right and left audio jacks when connecting to the VIDEO IN 1 jack. The right connector is usually red; the left connector is usually white.

**VIDEO IN 1** for model L23W10 (VIDEO IN for models L1510 and L2010) Provides composite video connection. The video connector is usually yellow.

**ANTENNA IN** Lets you connect a coaxial cable to receive the signal from the antenna, cable, or cable box.

## Front Panel Buttons

If you can't locate your remote, you can use the buttons located underneath the front panel of your TV to operate many of the TV's features.

**ON/OFF** Turns on or off the TV after you've turned on the main power by pressing the POWER button.

**MENU** Brings up the menu system.

**VOL ◀** Decreases the volume. In the menu system, it points left to items and adjusts menu controls.

**VOL ▶** Increases the volume. In the menu system, it points right to items and adjusts menu controls.

**CH ▼** Scans down through the channel list. In the menu system, it points down to items and adjusts menu controls.

**CH ▲** Scans up through the current channel list. In the menu system, it points up to items and adjusts menu controls.

**🎧 (Headphone)** Allows you to connect headphones to listen to the sound coming from the TV.

***Note:** When you plug in headphones, the TV's internal speakers are automatically turned off.*

**⏻ (Power)** Turns the main power to the TV on or off.


***Note:** If you use the Front Panel Block feature, the front panel buttons no longer provide access to the menus. Go to Chapter 2 for more information.*

# Connections & Setup

---

## Connect Your Cable


Connect your cable or antenna to the ANTENNA IN jack on the bottom panel of the TV using a coaxial cable.

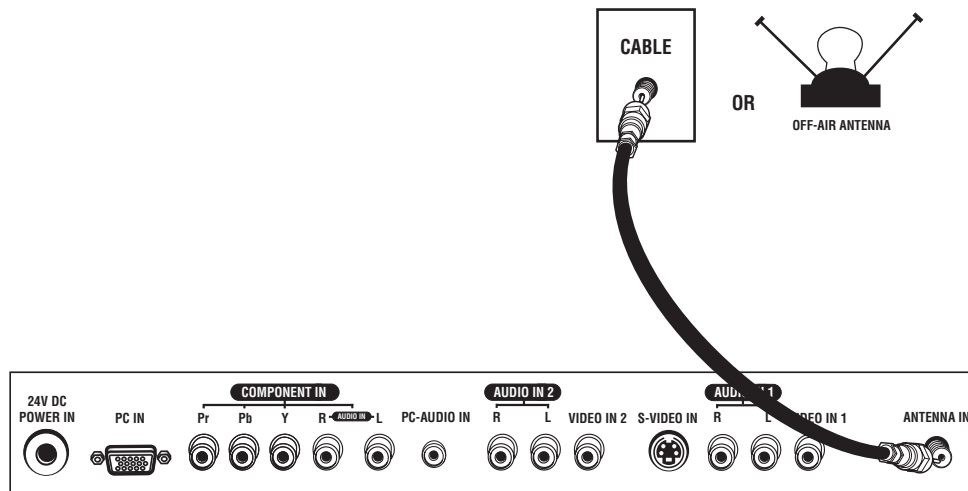

TV Bottom Panel

## Choose Your Connection

There are several ways to connect your television, depending on the components you want to connect and the quality of the signal you want to achieve. The following are examples of some ways to connect your TV. Choose the connection which is best for you.

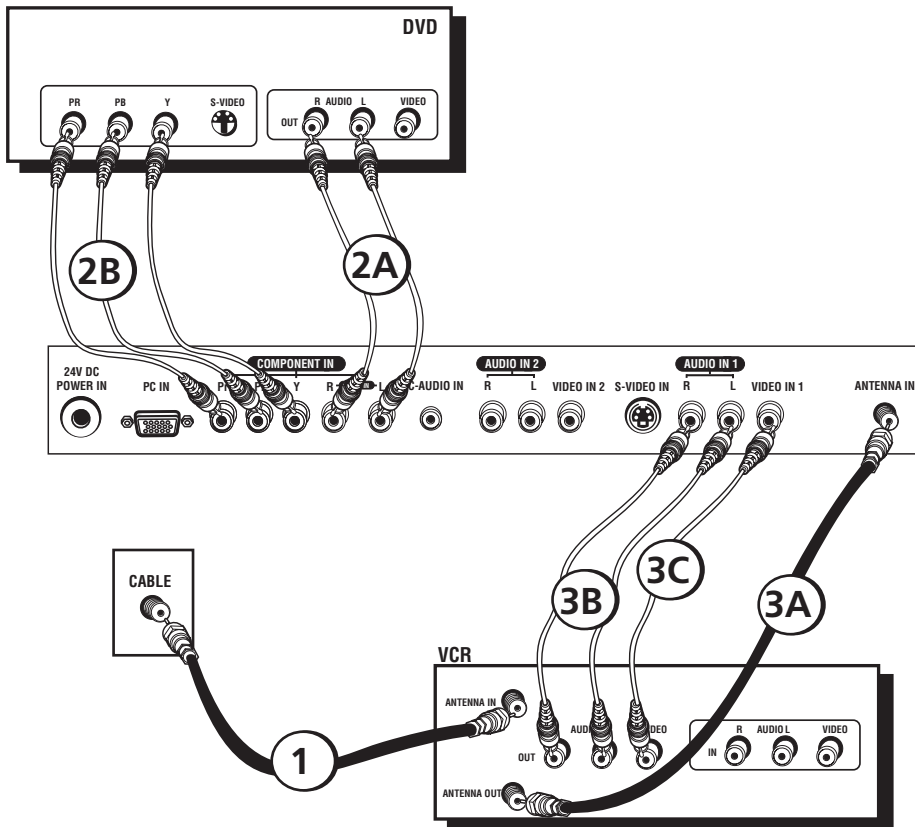

**Notes:** TV model L23W10 is shown here. The AUDIO and VIDEO IN 2 jacks are only available on this model.

The back of your DVD player and VCR may not look exactly like the ones shown here.

## How to Connect: TV + VCR + DVD Player

### 1. Connect your cable or off-air antenna.

If you have cable or an off-air antenna, connect the cable or antenna to the Antenna In jack on the VCR.

### 2. Connect your DVD Player to your TV.

A. Connect the audio (white and red) cables to the COMPONENT IN AUDIO R and L jacks on the back of the TV and to the Audio Output jacks on the DVD player.

B. Connect three video grade cables to the COMPONENT IN Y Pb Pr jacks on the back of the TV and to the Y Pb Pr outputs on the DVD player. If your DVD player doesn't have Y Pb Pr, but has an S-Video output, use the S-VIDEO jack.

**Notes:** If you are using an S-Video cable, you must also connect audio cables. The S-Video cable only transfers video information.

If your DVD player has a component video output, we recommend you use the component video input on the TV instead of the composite video or S-Video connection for better picture quality.

### 3. Connect your VCR to your TV.

A. Connect a coaxial cable to the Antenna Out jack on the VCR and to the ANTENNA IN jack on the TV.

B. Connect the audio cables to the AUDIO IN R and L jacks (AUDIO IN 1, as shown above for model L23W10) on the TV and to the Audio Output jacks on the VCR.


C. Connect the composite video cable to the VIDEO IN (VIDEO IN 1, as shown above for model L23W10) on the TV and to the Video Output jack on the VCR.

## Viewing the Components

1. Plug in the TV (see page 9 for details) and the components, if they aren't already plugged in. Turn on the TV and the component(s) you want to view.
2. Press the INPUT button on the remote control to scroll through the Video Input Channels.
  - View the VCR on the VID channel (for models L1510 and L2010) or VID1 channel (for model L23W10).
  - View the DVD player on the CMPT (component video) channel.

# Connections & Setup

---

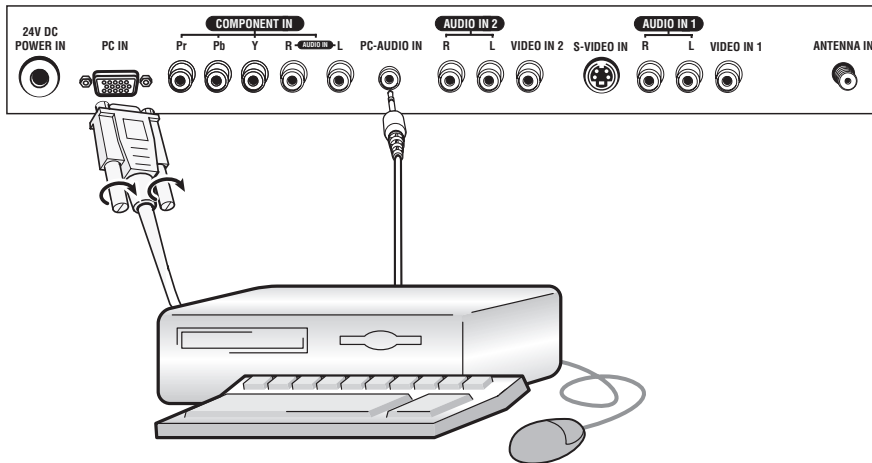

## How to Connect: TV + Personal Computer

- A. Use a 15-pin monitor cable to connect your TV to a PC. Connect one end of the 15-pin monitor cable to the PC IN jack on the TV and the other end to the PC's video output. Note, if your PC's video output is not 15 pin, you will need an adapter that can connect to a 15-pin monitor cable.
- B. Use a 3.5 mm stereo mini pin cable (sometimes referred to as 1/8" stereo mini pin) to connect the audio. Connect the 3.5 mm end of the audio cable to the PC-AUDIO IN jack on the back of the TV. Connect the other end to the Audio Output jack on the PC.

**Notes:** The maximum panel resolution is 1024 x 768 for model L1510; 640 x 480 for model L2010; and 1280 x 720 for model L23W10. Be sure to set your PC to the correct monitor output setting.


The MultiTask Audio™ feature allows you to listen to the sound from the TV while the PC is connected. Go to page 21 for more information.

## Viewing the PC

1. Plug in the TV (see the following section for details) and the PC, if they're not already plugged in. Turn on the TV and the PC.
2. Press the PC INPUT button on the remote control.

## Setting Up Your TV

There are several steps you need to follow before you can turn on the TV. Follow the instructions below to setup and turn on your TV.

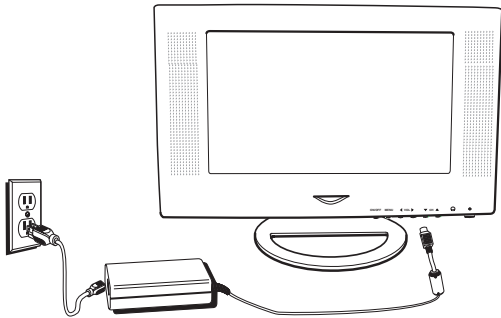

### Plug in the TV

Plug the end of the cord from the power adapter into the DC POWER IN jack on the bottom panel of the TV. Then connect the end of the power cord into the other end of the power adapter. Plug the end of the power cord into an appropriate wall outlet. Be sure to insert the plug completely. Do not plug into an outlet controlled by a light switch.

### Put Batteries in the Remote

- Remove the battery compartment cover from the back of the remote by pushing down on and sliding off the cover.
- Insert 2 fresh “AA” batteries. Make sure the polarities (+ and -) are aligned correctly.
- Replace the cover.

### Turn on the TV

The first time you turn on your TV you need to turn on the main power to the TV by pressing the Power button on the TV’s front panel. Then press the ON/OFF button on the TV or ON•OFF button on the remote to power on the TV.


### Adjust the TV Screen

The TV’s screen is adjustable simply by pushing on the top, front part of the screen, while your other hand holds the base of the TV.

# Connections & Setup

## Mounting the TV to the Wall


Your LCD TV can be mounted to the wall using a compatible VESA standard wall mount, which can be purchased at most electronic stores. To mount the LCD TV you must first remove the stand.

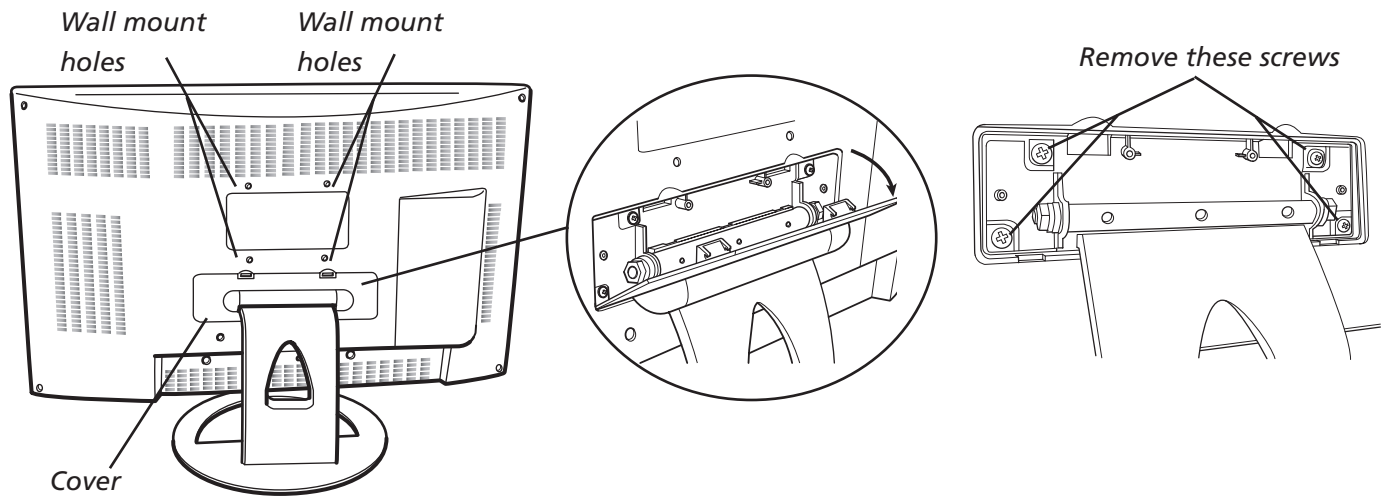

1. Remove the cover at the bottom of the back panel by pushing down on both tabs.
2. Remove the four screws as shown above, being sure that you or someone helping you holds the TV screen.
3. Attach the wall mount to the four holes on the back middle part of the TV.
4. Follow the directions that are packed with your wall mount.

## Completing the On Screen Setup


There are several options you might need to set up in order for your TV to work properly. The first time you turn on your TV, the **SETUP** screen appears with *Language* highlighted. Follow the instructions below to complete the setup for your TV.

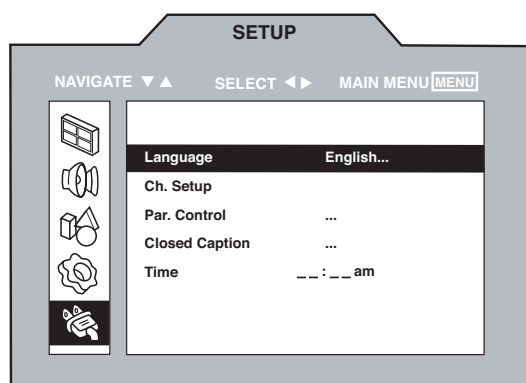

### Choose the Menu Language

Select your preferred language for the menu system.


1. The default language is *English*. To select *French* or *Spanish*, press the right arrow button.
2. Press the down arrow button on the remote to highlight *Ch. Setup*.

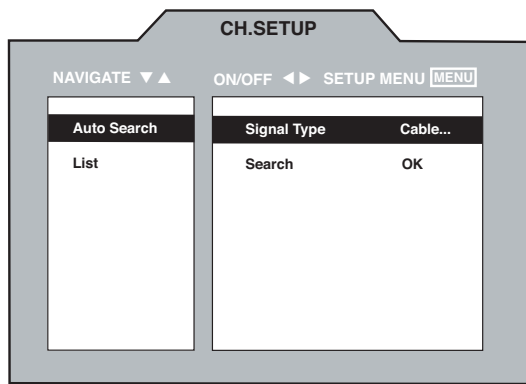

## Choose the Signal Type

In order for your TV to search for channels, you need to make sure your signal source is set correctly.

1. With *Ch. Setup* highlighted, press the right arrow button to display the *CH. SETUP* menu.
2. By default, the signal type is set to *Cable*. Press the right arrow button to highlight *Signal Type*. Leave the signal type set to *Cable* if your TV is receiving its signal from cable. If your TV is receiving its signal from an off-air antenna, press the right arrow button again to change the option to *Antenna*.
3. Press the down arrow button to highlight *Search*.

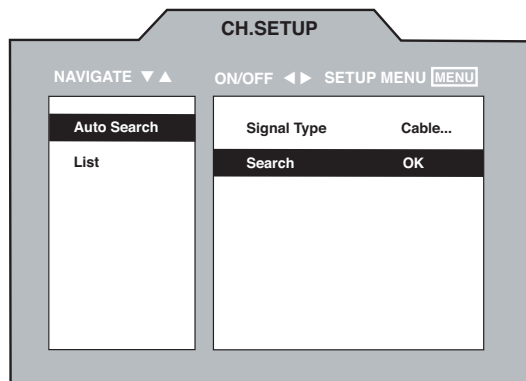


## Complete Channel Search

To search for all channels viewable through your antenna or cable TV system:

1. With *Search* highlighted, press the OK button.

**Note:** Depending on the number of channels you receive, it may take several minutes for the channel search to finish.

2. When the search is complete, you might want to change your channel list. Go to Chapter 3 for instructions. If you don't want to change your channel list, the initial setup is complete and you can press CLEAR to exit. The other setup options are explained in Chapter 3.

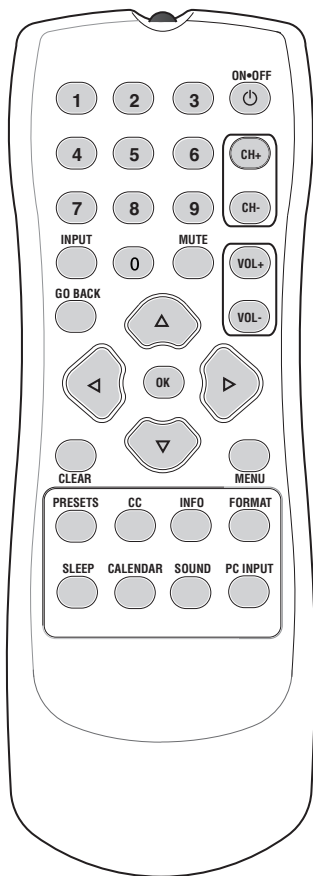

## The Buttons on the Remote Control

**Arrows** Highlights different items in the TV menu and adjusts the menu controls.

**(0-9) Number Buttons** Enter channel numbers and password settings directly through the remote control.

**CALENDAR** Displays the calendar of the current month and year.

**CC** Brings up the Closed Caption menu.

**CH + or CH -** Scans up or down through the current channel list.

**CLEAR** Removes any menu or display from the screen and returns you to normal viewing.

**GO BACK** Returns you to the previous channel.

**FORMAT** Changes the aspect ratio. Go to page 19 for an explanation of the choices that apply to your model.

**INFO** Brings up the channel banner; press again to clear the screen.

**INPUT** Toggles through the available input sources- *VID/S-VID* or *VID1/S-VID* (depending on model), *VID2* (only available on model L23W10), *CMPT*, *VGA*, and current channel.

**MENU** Brings up the menu system.

**MUTE** Reduces the TV's volume to its minimum level. Press again to restore the volume.

**OK** When in the menu system, selects highlighted items.

**ON•OFF** Turns the TV on and off.

**PC INPUT** Switches to the PC Input (*VGA*).

**PRESETS** Toggles through the brightness settings of the picture: *Soft*, *Standard*, *Personal*, and *Bright*.

**SLEEP** Sets the TV to turn off. Each time you press SLEEP the clock adds 5 minutes (up to 120 minutes). To cancel, press CLEAR.

**SOUND** Toggles through the sound modes: *Concert*, *Stereo*, *Cinema*, *News*, *Surround*, and *Custom*. In PC mode, switches to the TV's audio.

**VOL – or VOL +** Decreases or increases the TV's volume.





## About the Channel Banner

The Channel Banner appears when you press the INFO button on the remote or the button corresponding to the function. The following list describes the items on the Channel Banner screen (left to right and top to bottom). Other displays that are not shown are self-explanatory.

The icons change appearance to show the item's status or availability.

**VGA** Displays the current input you're viewing. Displays the current channel when you're watching TV.

**Mute Icon** Displays when you mute the sound.

**Sleep Timer: 20 minutes** Corresponds to the SLEEP button. Shows how much time is set before the TV turns off.

**Volume** Displays the level of the volume when you press the VOL + or - button. The volume level has 100 steps.

## Why You Should Use the Autotuning Feature

The autotuning feature tunes the TV to the correct channel for different components you have connected to your TV (like a VCR or DVD Player). When you set up autotuning in the menu system, you don't have to remember to change your TV to channel 3, for example, when you want to watch the tape in your VCR.

**Note:** Auto Tuning is not available with your remote. You must have a universal remote (sold separately) to use the auto tuning feature.


## How to Set Up the Autotuning Feature

The way you set up the autotuning feature in the TV's menu corresponds to the component buttons on the remote and the way you have each component connected to your TV. When you set up autotuning, you're telling the TV what channel to tune to when you press the VCR or DVD button on the remote control.

1. Press MENU (the *MAIN MENU* appears).
2. Highlight *Setup* and press OK on your remote control.
3. Highlight *Autotuning* and press OK.
4. Choose which channel you want to set:
  - Set VCR Ch/Input** Lets you set up the channel the TV tunes to when you press the VCR button.
  - Set DVD Ch/Input** Lets you set up the channel the TV tunes to when you press the DVD button.
  - Set SAT/CAB Ch/Input** Lets you set up the channel the TV tunes to when you press the SAT/CAB button.
  - Set AUX/HD Ch/Input** Lets you set up the channel the TV tunes to when you press the AUX/HD button.
5. Press the right arrow button to select the choice that matches the way you have the component connected to this TV.

The choices and a brief explanation follow:

# Using the TV's Features

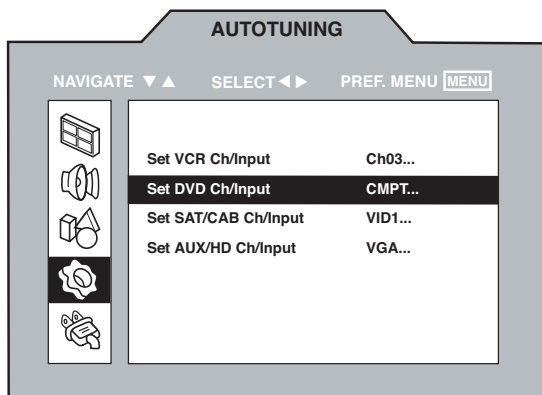

**N/A** Choose this if you don't have this particular component connected to the TV, or if you don't want the TV to automatically tune to the correct channel when you're using this component.


**Ch03** Component is connected to the ANTENNA IN jack on the bottom panel of the TV, and you want the TV to tune to channel 3 when you press the corresponding button on the remote. Reminder: make sure the component's Channel 3/4 switch is set to channel 3.

**Ch04** Component is connected to the ANTENNA IN jack on the bottom panel of the TV, and you want the TV to tune to channel 4 when you press the corresponding button on the remote. Reminder: make sure the component's Channel 3/4 switch is set to channel 4.

**VID1** Component is connected to the VIDEO IN (VIDEO IN 1 for model L23W10) or S-VIDEO IN jack on the bottom panel of the TV and you want the TV to tune to the video input channel when you press the corresponding button.

**CMPT** Component is connected to the COMPONENT IN, Y Pb Pr, jacks on the bottom panel of the TV and you want the TV to tune to the component video input channel when you press the corresponding button.

**VGA** Component is connected to the PC IN jack on the bottom panel of the TV and you want the TV to tune to the PC input channel when you press the corresponding button.

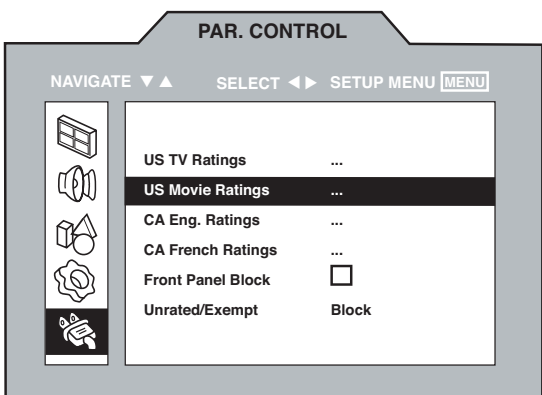

## Parental Controls

The choices in the *Parental Control* menu involve software inside your TV (referred to as V-Chip) which lets you block TV programs and movies based on violence, sex, or other content you may believe children should not view. Once you block programs, you or other adults can unblock programs by entering a password.

By default, the software inside your TV is turned "off," so if you don't want to use this feature, you can just ignore it.

The first time you enter the Parental Control menu, a password screen appears. Enter the default password, 1111, and press OK to continue. If you want to change your password highlight *Change Pwd.* and press OK. Then use the number buttons to enter the on-screen information and press OK when it's complete.

## How V-Chip Works

The V-Chip software reads a code that most broadcasters send with programs. That code tells the software the program's age-based rating (TV-MA, TV-14, etc.) and content themes [(Violence (V), Adult Language (L), etc.)]. If you have blocked the rating and/or content themes that the program contains and you tune to a program whose rating exceeds the rating limit you set, you will receive a message telling you that the program is not approved for viewing.

Broadcasters are not required to provide content themes, so programs received with no content themes will only be blocked if you block their age-based rating. You can also block out programs that have been given a rating of Not Rated, and programs that are considered unrated. The TV age-based ratings and content themes you can block follow:

## US V-Chip Rating System

**TV-MA (Mature Audience Only)** Specifically designed to be viewed by adults and may be unsuitable for children under 17. It contains one or more of the following content themes: crude indecent language (L), explicit sexual activity (S), or graphic violence (V).

**TV-14 (Parents Strongly Cautioned)** Contains some material that many parents would find unsuitable for children under 14. Parents are strongly urged to exercise greater care in monitoring this program and are cautioned against letting children under the age of 14 watch unattended. This program contains one or more of the following content themes: intensely suggestive dialogue (D), strong coarse language (L), intense sexual situations (S), or intense violence (V).

**TV-PG (Parental Guidance Suggested)** Contains material that parents may find unsuitable for younger children. Many parents may want to watch it with their younger children. The program contains one or more of the following content themes: some suggestive dialogue (D), infrequent coarse language (L), some sexual situations (S), or moderate violence (V).

**TV-G (General Audience)** Most parents would find this program suitable for all ages. It contains little or no sexual dialogue (D) or situations (S), no strong language (L), and little or no violence (V).

**TV-Y7 (Directed to Children 7 years and older)** Designed for children ages 7 and above. It may be more appropriate for children who have acquired the developmental skills needed to distinguish between make-believe and reality. Themes and elements in this program may include mild fantasy violence (FV) or comedic violence, or may frighten children under the age of 7.

**TV-Y (All Children)** Themes and elements in this program are designed for a young audience, including children from ages 2-6. It is not expected to frighten younger children.

## Canadian English V-Chip Rating System

**18+ (Adults)** Programming intended for adults 18 and older. It may contain elements of violence, language, and sexual content which could make it unsuitable for viewers under 18. Violence Guidelines: May contain violence integral to the development of the plot, character or theme, intended for adult audiences. Other Content Guidelines: May contain graphic language and explicit portrayals of nudity and/or sex.

**14+ (Viewers 14 and over)** Programming contains themes or content which may not be suitable for viewers under the age of 14. Parents are strongly cautioned to exercise discretion in permitting viewing by pre-teens and early teens. Violence Guidelines: May contain intense scenes of violence. Could deal with mature themes and societal issues in a realistic fashion. Other Content Guidelines: May contain scenes of nudity and/or sexual activity. There could be frequent use of profanity.

**PG (Parental Guidance)** Programming intended for a general audience but which may not be suitable for younger children (under the age of 8). Parents may consider some content inappropriate for unsupervised viewing by children aged 8-13. Violence Guidelines: Depictions of conflict and/or aggression will be limited and moderate; may include physical, fantasy, or supernatural violence. Other Content Guidelines: May contain infrequent mild profanity, or mildly suggestive language. Could also contain brief scenes of nudity.

**G (General Audience)** Programming considered acceptable for all ages groups. While not designed specifically for children, it is understood younger viewers may be part of the audience. Violence Guidelines: Will contain very little violence, either physical or verbal or emotional. Will be sensitive to themes which could frighten a younger child, will not depict realistic scenes of violence which minimize or gloss over the effects of violent acts. Other Content Guidelines: There may be some inoffensive slang, no profanity and no nudity.

# Using the TV's Features

**C8+ (Children 8 and Older)** Programming generally considered acceptable for children 8 years and over to watch on their own. Violence Guidelines: Violence will not be portrayed as the preferred, acceptable, or only way to resolve conflict or encourage children to imitate dangerous acts which they may see on television. Any realistic depictions of violence will be infrequent, discreet, of low intensity and will show the consequences of the acts. Other Content Guidelines: There will be no profanity, nudity or sexual content.

**C (Children)** Programming intended for children under age 8. Violence Guidelines: Careful attention is paid to themes which could threaten children's sense of security and well being. There will be no realistic scenes of violence. Depictions of aggressive behaviour will be infrequent and limited to portrayals that are clearly imaginary, comedic or unrealistic in nature. Other Content Guidelines: There will be no offensive language, nudity or sexual content.

## Canadian French V-Chip Rating System


**18+ (Adults)** Programming is for adults only. This program contains sustained violence or extremely violent scenes.

**16+ (Viewers 16 and over)** Programming is not suitable for those under age 16. This program contains frequent scenes of violence or intensely violent scenes.

**13+ (Viewers 13 and over)** Programming may not be suitable for children under the age of 13. This program either contains several violent scenes or one or more scenes that are violent enough to affect them. Viewing in the company of an adult is therefore strongly recommended for children under the age of 13.

**8+ (Viewers 8 and over)** Not recommended for young children. This program is suitable for most audiences, but it contains mild or occasional violence that could upset young children. Viewing in the company of an adult is therefore recommended for young children (under the age of 8) who do not distinguish between reality and imagination.

**G (General Audience)** This program is suitable for audiences of all ages. It contains no violence, or any violence that it does contain is either minimal or is presented in a humorous manner, as a caricature, or in an unrealistic way.

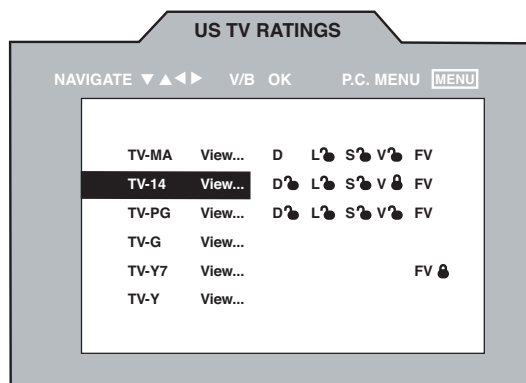

## US TV Ratings


The US TV Ratings lets you decide which TV programs can and cannot be viewed. To set TV programming limits:

1. Press MENU to bring up the menu system.
2. Choose the Parental Control icon. Enter the 1111 default password or the password you chose.
2. Highlight and select *US TV Rating*.
3. Once you get to the *US TV Ratings* screen, use the up and down arrow buttons to highlight a rating.

Proceed to the next sections for more details about how to change the status of TV program ratings.

## The US Rating Limit Screen

The following is an example of where items are located within the V-Chip TV Ratings screen.

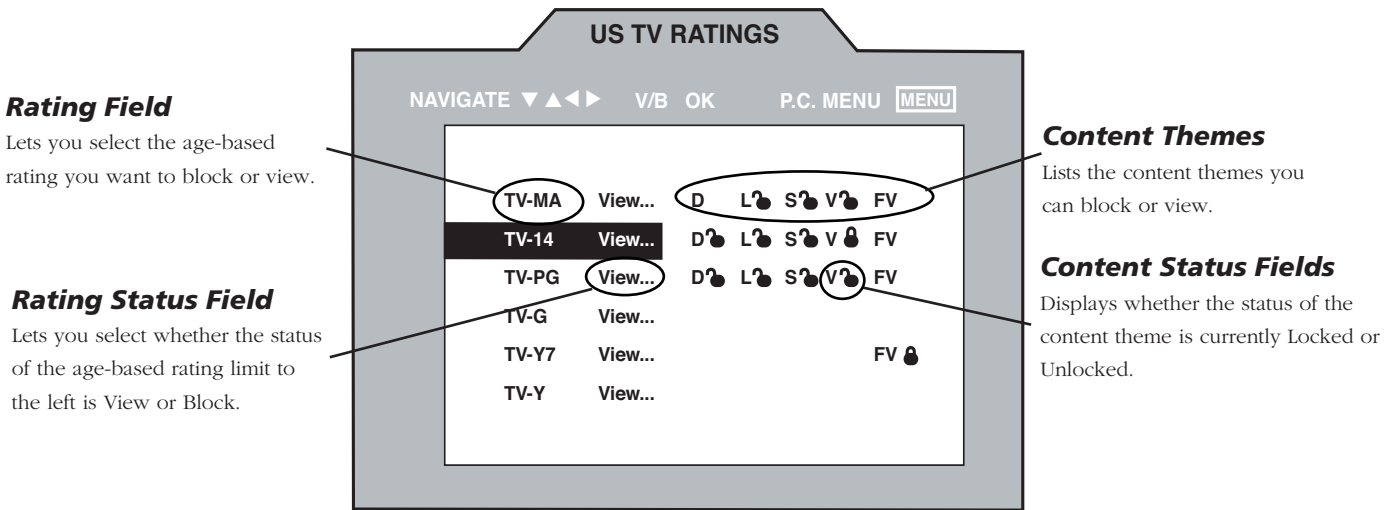

Hierarchy of Age-Based Ratings	
TV-MA	Mature Audience Only
TV-14	Parents Strongly Cautioned
TV-PG	Parental Guidance Suggested
TV-G	General Audience
TV-Y7	Directed to Children 7 years and older
TV-Y	All Children

## Blocking Age-Based Ratings

You can automatically block all program ratings above a specified age-based rating level. For example, if you only want your child to watch programs that have a TV-G rating and lower (in other words, you want the child to watch TV-G, TV-Y7, and TV-Y), then you need to block out higher ratings.


To block programs with higher ratings:

1. First, determine the lowest level rating you don't want the child to watch.
2. Highlight the lowest rating you do not want the child to watch. In the example discussed above, you would highlight TV-PG, since the highest rating you want the child to watch is TV-G.
3. Press the OK button to toggle between *View* and *Block*. The status for the rating you chose and all higher ratings automatically change to *Block*.
4. To lock the settings, exit the Parental Control menu or menu system and the password screen appears. Enter your password and press OK. If you exit the menu system without entering your password, the settings you changed won't take effect.

## Viewing Age-Based Ratings

After you block age-based ratings, you have the option of changing some of the ratings back to *View*.

1. Determine which blocked rating you want to view.
2. Use the up and down arrow buttons to highlight the rating with a status of *Block*.
3. Press the OK button to select *View*.
4. Lock the settings as described above or the changes won't take effect.

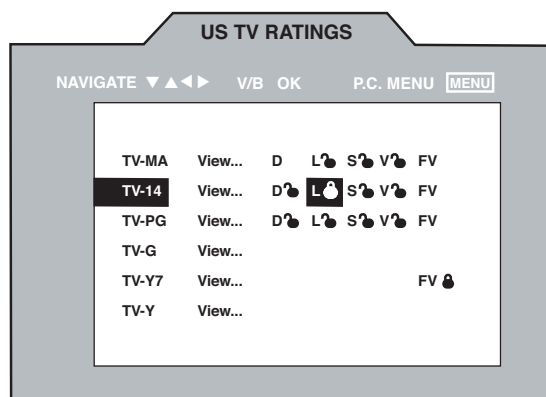

Content Themes	
D	Sexually explicit dialogue
L	Adult language
S	Sexual situations
V	Violence
FV	Fantasy Violence

## Blocking Specific Content Themes

You can block programs based on their content. (Content is represented by the D, L, S, V and FV on your screen.) When you block a content theme for a particular rating, you automatically block that content theme for higher rated programs as well.

To block program content:

1. Determine the content themes you want to block.
2. Press the down arrow button to select the age-based rating you want to change.
3. Press the right arrow button to highlight a particular content theme.
4. Press the OK button to change its status to the lock icon, or block. (In the example to the left, you block the language (L) corresponding with TV-14. The language for TV-MA is blocked as well).

**Notes:** Broadcasters are not required to provide content themes or age-based ratings.

5. To lock the settings, exit the Parental Control menu or menu system and the password screen appears. Enter your password and press OK. If you exit the menu system without entering your password, the settings you changed won't take effect.

## Viewing Specific Content Themes

1. Determine the content themes you want to unlock, or view.
2. Press the down arrow button to select the rating whose content theme you want to change, such as language (L) corresponding with TV-14.
3. Press the right arrow button to move the highlight to a particular content theme.
4. Press the OK button to change the status back to unlock, or view. Your child would then be able to watch programs with the TV-14 adult language content, but not programs with TV-MA language content.

**Note:** Only the content theme status corresponding to TV-14 (L) language changes to (V) View. Higher rated content themes, such as that for TV-MA language, do not change.

5. Lock the settings as described above or the changes won't take effect.

## V-Chip Movie Rating Limit

You set movie rating limits by blocking movies rated above a specified rating. How to block movie ratings and view movie ratings is explained in the next two sections.

To access the V-Chip Movie Rating menu:

1. Press MENU on the remote control.
2. Press the down arrow button to select the Parental Control icon.
3. Select *US Movie Ratings*.
4. Lock the settings as described above or the changes won't take effect.

## Blocking Movie Ratings

If you only want your child to watch movies that have a PG rating and lower (in other words, movies rated PG and G), then you could automatically block out all other movies with higher ratings.

To block movies:

1. Highlight the rating that is the lowest rating you don't want the child to watch. (In the example above, you would highlight the rating status button corresponding to PG-13, since the highest rating you want the child to watch is PG.)
2. Press the OK button to change from *View* to *Block*. All higher ratings automatically change to *Block*.
3. To lock the settings, exit the Parental Control menu or menu system and the password screen appears. Enter your password and press OK. If you exit the menu system without entering your password, the settings you changed won't take effect.

**Note:** Some movies may be given a Not Rated (NR) rating. After blocking movie ratings, you must unlock NR separately in order to view movies with an NR rating.



## Viewing Movie Ratings

After you block movie ratings, you have the option of changing some of the rating status buttons back to *View*:

1. Highlight the rating you want to view.
2. Press the OK button to change the button from *Block* to *View*.

For example, if movies with a rating of PG-13 and higher are blocked, you can change the rating status corresponding with NC-17. Your child would then be able to watch all movies with a G, PG, and NC-17 Rating.

3. Lock the settings as described above or the changes won't take effect.

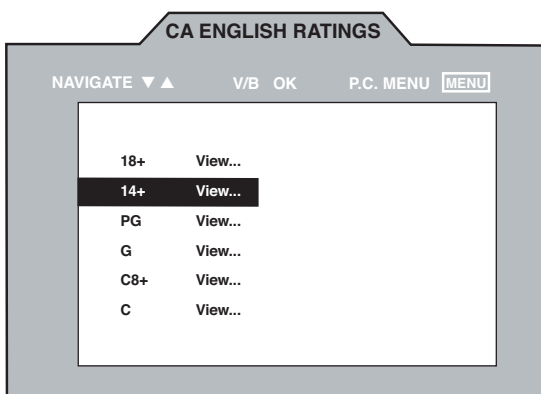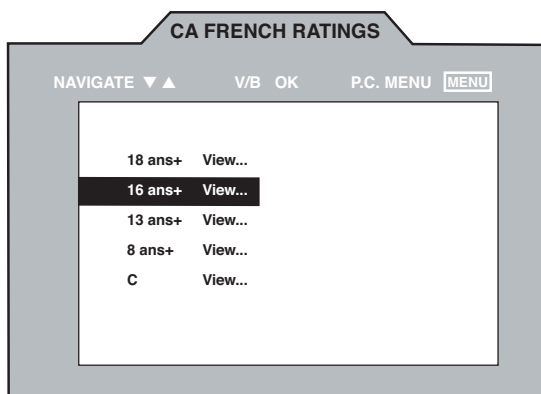

## Blocking Canadian V-Chip Ratings

If you receive Canadian programs you can block Canadian English and French V-Chip by ratings only. When you block a particular rating, you automatically block the higher rated programs as well.

To block Canadian English and French program ratings:

1. Press the MENU button and select the Parental Control icon.
2. Highlight *CA Eng Ratings* or *CA French Ratings* and press OK.
3. Determine the rating you want to block.
4. Press the down arrow button to scroll to the rating you want to change.
5. Press the OK button to change its status to *Block*. All ratings above the one you selected change to *Block*.
6. Lock the settings as described above or the changes won't take effect.

# Using the TV's Features

---

## Front Panel Block

Selecting this option lets you block (disable) or unblock (enable) the TV's front panel buttons. The remote still tunes to any channel. *Front Panel Block* can:

- Keep children from watching TV when the parent is not present.
- Keep young children from playing with the buttons on the TV.

(When using this as a Parental Control method, you should remove access to any remote that is capable of operating the television while you have the front panel blocked.)

Don't forget to lock the TV after you disable *Front Panel Block* (box has check mark). If you do not, the front panel block will not take effect.

**Notes:** *If power to the TV is lost for more than an hour, the buttons become unblocked.*

*To temporarily override front panel block, make sure no menus are displayed on-screen. Simultaneously press and hold the MENU button on the TV's front panel and CLEAR on the remote for approximately 10 seconds.*

## V-Chip Unrated/Exempt Block

The V-Chip *Unrated/Exempt* option lets you decide if programs that the V-Chip recognizes as unrated can be viewed. Unrated TV programs may include news, sports, political, religious, local and weather programs, emergency bulletins, public announcements, and programs without ratings. The V-Chip *Unrated/Exempt* option applies to both US and Canadian unrated programs and Canadian programs rated *E*.

**View** All unrated programs are available.

**Block** All unrated programs are not available.

**Note:** *You must remember to lock Parental Controls for rating limits to take effect.*

Press the down arrow to highlight *Unrated/Exempt*. Then press the right arrow to toggle between *View* and *Block*.

## Additional Features

There are additional features available by using the remote control.

### Format Control

Listed below are the different formats available for your model. These can be adjusted using the FORMAT button on your remote.

	4:3	14:9 Zoom	16:9 Zoom	Cinerama	16:9 Widescreen	16:9 Subtitles
L1510	•			•		
L2010	•			•		
L23W10	•	•	•	•	•	•



## MultiTask Audio

The MultiTask Audio feature allows you to listen to the sound from the TV while the PC is connected. Tune to the program on the TV you want to listen to. Switch to the PC input by pressing the PC INPUT button on the remote. Press the SOUND button to hear the program's audio. Press SOUND again to turn off the program's audio. To listen to a different program, press the GO BACK button to return to the TV input. Then change the channel until you find the new program you want to listen to and go back to the PC input as previously described.

## Calendar

Use the CALENDAR button on the remote to display the current month and year page. To display a different month use the up and down arrow buttons; to display a different year use the left and right arrow buttons.


There are also more features available through the menu system, such as:

- Picture adjustments
- Sound adjustments
- Backlight adjustment
- Auto Volume Level

Go to the next chapter for more details.

## Menus, On-screen Help, and Control Panels

This section explores the menus of your TV, beginning with some information on using menus and control panels. Each menu is outlined and detailed to help you get the most from your TV. The *Parental Control* menu is discussed in the Features chapter.

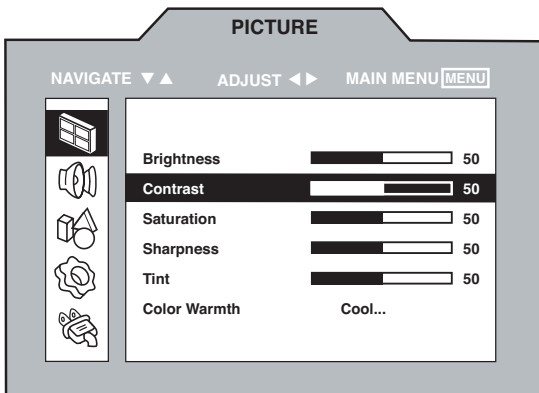

To access the menu system:

1. Press the MENU button.
2. Use the up and down arrow buttons to highlight the icons on the left. The corresponding menu options with the icon you've highlighted are displayed on the right. The name of the menu is displayed at the top of the menu screen.
3. Press the OK button or right arrow button to select, or highlight an option in the menu. Then use the up and down arrow buttons to move to a different option. Also, use the text at the top of each screen for help.
4. To highlight a different icon on the left, press the MENU button on the remote, then use the up or down arrow button to select a different icon.

Descriptions of each menu are discussed in the order the icons appear.

If a PC is connected to the TV, press the PC INPUT button on the remote to display the PC Input. Then press the MENU button to display the specific PC menus. Options that aren't available for the PC Input will be grayed out on the menu system.

### Exiting a menu

There are two ways to exit a menu:

- Press MENU until on-screen menus disappear.
- Press CLEAR. The on-screen displays are cleared from the screen and you return to TV viewing.

## Controls

Controls let you adjust the default settings of your TV. You can choose a setting, enter a number, or adjust a level such as tint or brightness. There are four types of controls: sliders, choice lists, numeric entries, and option lists.



### Sliders

Sliders are used to select a specific point of a control that has continuous levels. To make adjustments:

1. Press the up or down arrow button to select the slider control for the feature you want to adjust.
2. Press the left or right arrow button to adjust the indicator on the slider.



### Choice Lists

Check boxes allow you to turn on or off an option. Press the left or right arrow button or press OK to turn on or off an option.

 
# Using the TV's Menu System



## Numeric Entries


Numeric entry fields are used to enter numbers and passwords. Use the number buttons on the remote to enter the information.

1. Use the up or down arrow button to highlight the field.
2. Use the number buttons to enter information and the left and right arrow buttons to move to the next entry, if necessary.



## Option Lists

An option list cycles through at least two or more choices. Press OK to select the next entry in the choice field.

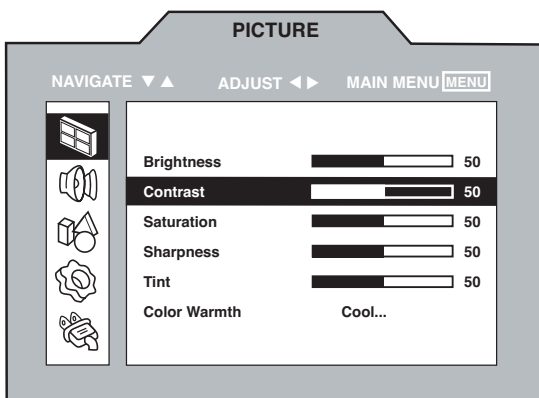

## Picture Menu

The *Picture* menu options apply to the video for the main TV and video input selections. The *Picture* menu displays five slider controls for adjusting the way the picture looks.

To access the Picture menu press the MENU button on the remote control. The Picture icon is highlighted and the following menu options appear.

*Brightness* Adjusts the brightness of the picture.


*Contrast* Adjusts the difference between the light and dark areas of the picture.

*Saturation* Adjusts the richness of color.

*Sharpness* Adjusts the crispness of the edges in the picture.

*Tint* Adjusts the balance between the red and green levels.

*Color Warmth* Automatically adjusts the color temperature of the picture. Press the right arrow button to scroll through the color adjustments: *Cool* for a more blue palette of picture colors; *Normal*; and *Warm* for a more red palette of picture colors.

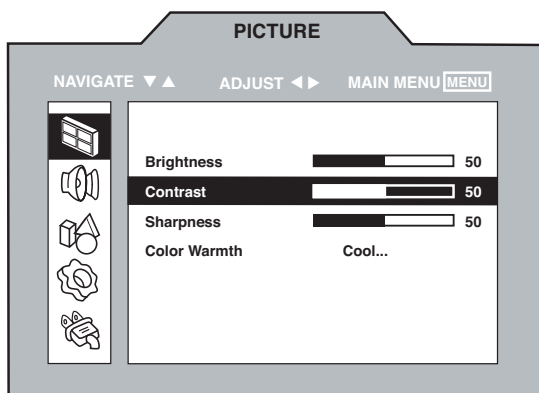

## PC Picture Menu

These adjustments apply to the PC Input when a PC is connected to your TV. To access the PC Picture menu:


1. Press the PC INPUT button on the remote control.
2. Press MENU on the remote control. The following menu options appear.

*Brightness* Adjusts the brightness of the picture.

*Contrast* Adjusts the difference between the light and dark areas of the picture.

*Sharpness* Adjusts the crispness of the edges in the picture.

*Color Warmth* Automatically adjusts the color temperature of the picture. Press the right arrow button to scroll through the color adjustments: *Cool* for a more blue palette of picture colors; *Normal*; and *Warm* for a more red palette of picture colors.

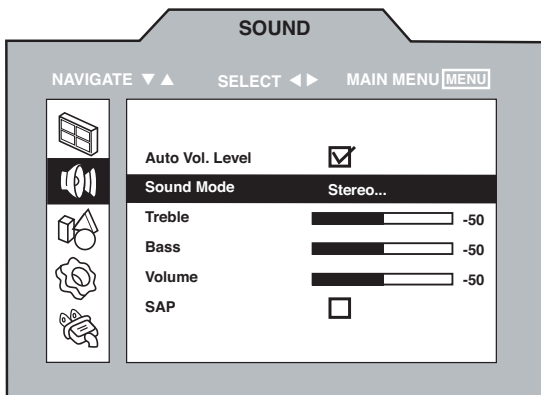

## Sound Menu

The *Sound* menu lets you adjust audio output. To access the *Sound* menu, press MENU on the remote, and then select the Sound icon.

*Auto Vol. Level (Auto Volume Level)* Turn on this feature to reduce blasts in volume during commercial breaks to create more consistent audio output.

*Sound Mode* Press the right arrow button to scroll through the available audio types, which control the way the sound comes through your speakers: *Stereo*, *Cinema*, *News*, *Surround*, *Custom*, and *Concert*. The custom setting allows you to adjust the treble and bass.


*Treble* Increases or decreases the treble.

*Bass* Increases or decreases the bass.

*Volume* Increases or decreases the volume coming from the TV's speakers.

*SAP* Plays the program's audio in a second language, if one is available. SAP audio is broadcast in mono. SAP is also used to broadcast a program's audio with descriptions of the video for the visually impaired.

**Note:** *SAP is not available for input channels.*

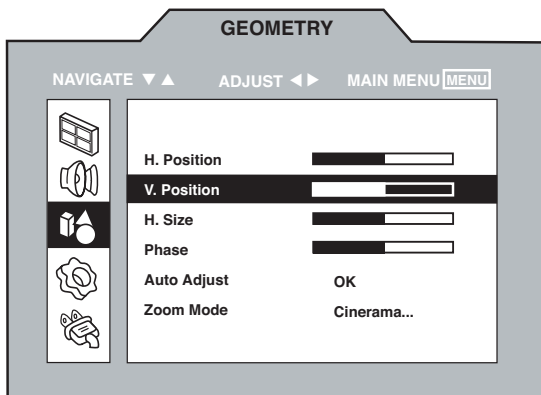

## Geometry Menu

*H. Position (Horizontal Position- only available for component inputs)* Adjusts the picture's position left or right.


*V. Position (Vertical Position- only available for component inputs)* Adjusts the picture's position upward or downward.

*H. Size (Horizontal Size- only available for component inputs)* Adjusts the horizontal size of the picture.

*Phase (only available for component inputs)* Adjusts the picture if there is flicker of screen letters, color misalignment, or blurring.

*Auto Adjust (only available for component inputs)* Adjusts the position of the picture automatically.

*Zoom Mode (only available for models L1510 and L2010)* Adjusts the aspect ratio of the picture: *4:3* and *Cinerama*.

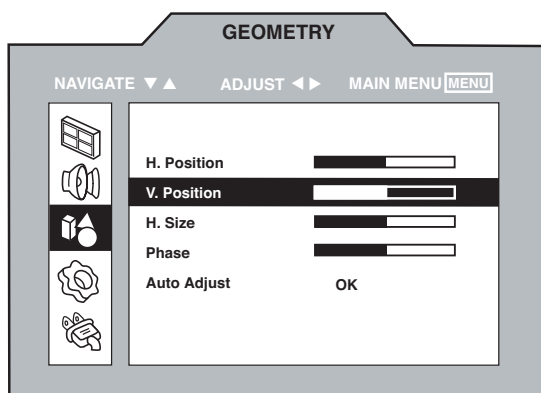

## PC Geometry Menu


*H. Position (Horizontal Position)* Adjusts the picture's position left or right.

*V. Position (Vertical Position)* Adjusts the picture's position upward or downward.

*H. Size (Horizontal Size)* Adjusts the horizontal size of the picture.

*Phase* Adjusts the picture if there is flicker of screen letters, color misalignment, or blurring.

*Auto Adjust* Adjusts the position of the picture automatically.

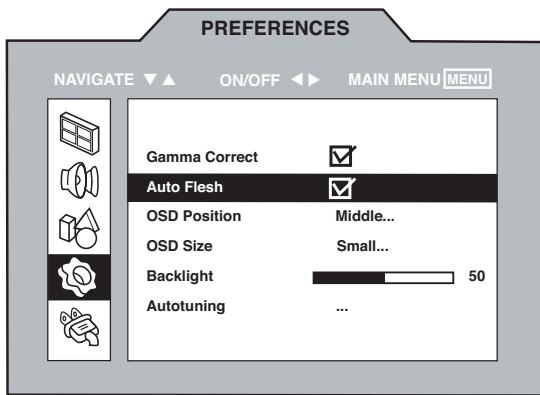

## Preferences Menu

**Gamma Correct** Corrects the overall color and brightness of your picture when tuned on.


**Auto Flesh** Minimizes the flesh tone variations when turned on.

**OSD Position** (only available for models L1510 and L23W10) Selects where you want the menu to appear on the TV.

**OSD Size** (only available for models L1510 and L23W10) Selects what size you want the menu to appear: *Small* or *Large*.

**Backlight** Press the right arrow button to adjust the level of light, depending on room lighting.

**Autotuning** Not available with your remote. Go to Chapter 2 for details about the autotuning feature if you have a universal remote.

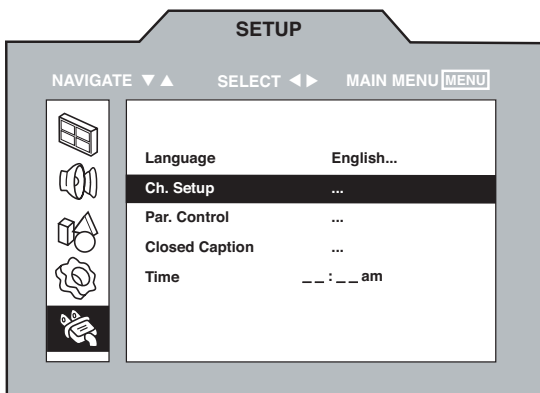

## Setup Menu

**Language** Select your preferred language for the menus.

**Ch. Setup** (Channel Setup) Displays options *Auto Search* and *List*.


**Auto Search** Allows the TV to search for channels the signal is receiving and stores them in the TV's channel list. Go to page 11 for more information.

**List** Allows you to enter channels you want to delete or add to your channel list.

**Ch. No. (Channel number)** Use the number buttons to enter the channel number. To enter a one-digit channel, enter two zeros first. To enter a two-digit channel, enter one zero first. For example, if you want to add channel 7 to your list, press the number 0, 0, then press 7.

**In List** If you've entered a channel you want to add to the channel list, highlight *In List* and press the right arrow button to place a check in the checkbox. If you've entered a channel you want to delete from the channel list, press the right arrow button to uncheck the checkbox.

**Ch. Label** Allows you to add a six character label, which is displayed on-screen when you tune to the channel entered in the Ch. No. Press the 1 or 2 number button on the remote to scroll through the available characters. Continue to press the right arrow button to highlight the next space to add another character.

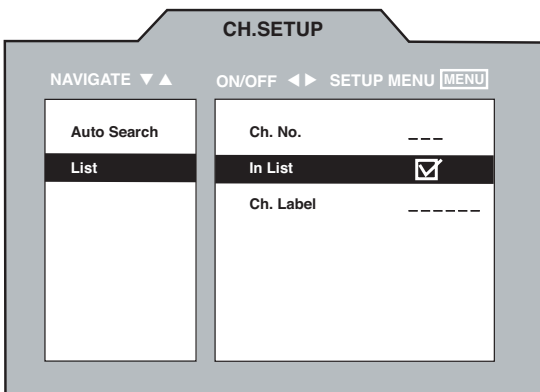

The **Parental Control** menu was explained in Chapter 2. Go to page 14 for more information.

**Closed Caption** (only available for TV video input channel) Many programs are encoded with closed-captioning information, which lets you display the audio portion of a program as text on the TV screen.

Closed captioning is not available on all channels at all times. Only specific programs encoded with closed-captioning information are applicable. The closed caption options are:

# Using the TV's Menu System

---

*CC Setting* Choose the way closed captioning information is shown on the screen.

*On* Captioning information always appears, when available.

*Off* No captioning information displayed.

*On When Mute* Displays captioning information, when available, whenever the TV's sound is muted by pressing the MUTE button. The captioning information is not displayed when the sound is not muted.

*CC Mode* Choose which captioning mode is used for displaying captioning information. If you are unsure of the differences among the modes, you may prefer to leave the closed captioned mode set to CC1, which displays complete text of the program in the primary language in your area.

*CC* Displays information at any position on the screen. It overlays the text on top of the picture as it is received.

You can choose between these closed caption modes:

- *CC1* is the primary caption and text services. The captioning is displayed in the same language as the program's dialog.
- *CC2* is rarely available and broadcasters use them only in special conditions, such as when *CC1* is not available.

*Time* Lets you set the time. If it is 8:25, for example, you must first press the number 0 on the remote, then number 8, then 2 and then 5. Press the OK button to choose between am and pm. To reset the time, press the left or right arrow.

## Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

**Note for U.S. customers:** *If you prefer, we can provide you with the name of an Authorized Service Representative who will visit your home for a fee to install your electronic entertainment system and to instruct you in its operation. For details about this service, call 1-888-206-3359. For additional assistance while using your RCA product, please visit [www.rca.com](http://www.rca.com).*

### TV Problems

---

#### TV won't turn on

- Make sure the power has first been turned on by pressing the **⏻** (Power) button on the TV's front panel. Then press the ON/OFF button.
- Make sure the TV is plugged in.
- Check the wall receptacle (or extension cord) to make sure it is "live" by plugging in something else.
- Something might be wrong with your remote control. Press the ON/OFF button on the TV's front panel. If the TV turns on, check the remote control solutions on page 28.
- The front panel controls may be locked (disabled). Use the remote control to unlock the front panel controls by selecting the *Front Panel Block* in the *Parental Control* menu and press OK (box won't have check mark).

#### Buttons don't work

- The front panel controls may be locked (disabled). Use the remote control to unlock the front panel controls by selecting the *Front Panel Block* in the *Parental Control* menu and press OK (box won't have check mark).
- Unplug the TV for two minutes and then plug it back in. Turn the TV on and try again.

#### TV turns off unexpectedly

- Sleep timer might have been activated. Go to page 12 for instructions.
- Electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn on again. If this happens frequently, the voltage in your house may be abnormally high or low.
- Unplug TV. Wait five minutes. Plug it in again.

#### Blank screen

- Make sure the component connected to the TV is turned on.
- Try another channel.
- You might be tuned to another video input channel. Press INPUT until you tune to the TV input.

#### Sound problems, picture okay

- Maybe the sound is muted. Try pressing the volume up button to restore sound.
- If using S-Video or Y Pb Pr, remember to also connect the component's left and right audio output jacks to the TV's AUDIO jacks.
- Make sure the *Volume* option in the *Sound* menu is turned up.
- Make sure headphones aren't connected to the headphones jack.

#### Can't select certain channel

- Channel may be blocked or not approved through the V-Chip.
- If using a VCR, check to make sure the TV/VCR button on the VCR is in the correct mode (press the TV/VCR button on your VCR).

#### No picture, no sound but TV is on

- Maybe the signal type is set wrong. Go to page 11 for detailed instructions.
- The channel might be blank — change channels.
- If you're watching your VCR and it's connected with coaxial cable to the ANTENNA IN jack, tune the TV to channel 3 or 4 (whichever channel is selected on the 3/4 switch on the back of your VCR). Also check to make sure the TV/VCR button on the VCR is in the correct mode (press the TV/VCR button on your VCR).
- You might be tuned to another video input channel. Press INPUT until you tune to the TV input.

# Other Information

---

## Sound okay, picture poor

- Check antenna connections. Make sure all of the cables are firmly connected to the jacks.
- Try using the picture settings to improve the picture. Go to page 23 for more instructions.

## Black box appears on the screen

- Closed caption might be on. Check *Closed Caption* in the *SETUP* menu. Go to page 25 for more instructions.

## The Remote Control Doesn't Work

- Something might be between the remote and the remote sensor on the component. Make sure there is a clear path.
- Maybe batteries in remote are weak, dead, or installed incorrectly. Put new batteries in the remote.

## Problems with V-Chip/Parental Controls

### The rating limits don't work

- You must activate the settings. Press MENU on your remote, select the Parental Control icon. Make the changes you'd like to the ratings and enter your password when you exit the menu.

### I don't remember my password and I want to unlock the TV

- If you forget your password you can reset it. Make sure no menus are displayed on-screen. Simultaneously press and hold VOL < on the TV's front panel and the OK button on the remote for approximately 10 seconds. Enter a new password next time you access the *Parental Controls* menu.

### The V-Chip won't let me watch a program even though it's not rated as violent.

- Maybe the movie was given an NR (Not Rated) status. After you block movie ratings, you must unlock *NR* separately in order to view movies with an NR rating.

## Care and Cleaning

CAUTION: Turn OFF your TV before cleaning.

You can clean the TV as required, using a soft lint-free cloth. Be sure to occasionally dust the ventilation slots in the cabinet to help assure adequate ventilation.

**IMPORTANT: Never use strong cleaning agents, such as ammonia-based cleaners, or abrasive powder. These types of cleaners will damage the TV.**

**The TV's screen may be cleaned with a soft, lint-free cloth as well. Take care not to scratch or mar the screen. If necessary, you may use a cloth dampened with warm water.** While cleaning do not spray liquid directly on the screen, or allow liquid to run down the screen and inside the TV. Also, never place drinks or vases with water on top of the TV. This could increase the risk of fire or shock hazard or damage to the TV.



## Limited Warranty

### What your warranty covers:

- Defects in materials or workmanship.

### For how long after your purchase:

- 1 year from date of purchase- Unit exchange, which includes parts and labor.
- The warranty for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

### What we will do within one year:

- At our option, either (a) pay any Authorized RCA Television Service Center the labor charges, plus replacements parts, to repair your television, or (b) replace your television.
- At our option, the replacement parts or replacement television provided under the warranty may be new or refurbished.

### How you get service:

- Take your RCA television to any Authorized RCA Television Service Center and pick up when repairs are complete.
- To identify your nearest Authorized RCA Television Service Center, ask your dealer, visit [www.rca.com](http://www.rca.com), look in the Yellow Pages, or call 1-800-951-9582.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

### What your warranty *does not* cover:

- Acts of nature, such as but not limited to lightning damage.
- Adjustment of customer controls.
- Damage from misuse or neglect.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- Batteries.
- Units purchased or serviced outside the U.S.A.
- Shipping damage if the unit was not packed and shipped in the manner prescribed by TTE Technology, Inc..
- Customer Instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your dealer.)

### Product Registration:

- Please complete and mail the Product Registration Card packed with your TV or register on-line at [www.rca.com](http://www.rca.com). It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

### Limitation of Warranty:

- **THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY TTE TECHNOLOGY, INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.**

## Other Information

---

- **REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. TTE TECHNOLOGY, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.**

### **How state law relates to warranty:**

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

### **If you purchased your product outside the United States:**

- This warranty does not apply. See your dealer for warranty information.

**Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.**

*This page intentionally left blank*

## FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name: RCA  
Model(s): L1510, L2010, L23W10  
Equipment Classification: Computer Peripheral Device  
Responsible Party: TTE Technology, Inc.  
10330 N. Meridian St.  
Indianapolis, IN 46290  
Telephone (580) 634-0151

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

**Visit the RCA web site at [www.rca.com](http://www.rca.com)**

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

**TTE Technology, Inc.**  
**10330 North Meridian Street**  
**Indianapolis, IN 46290**

©2005 TTE Technology, Inc.  
RCA and associated marks are trademarks of  
THOMSON S.A. used under license to TTE Corporation.

Printed in China

**TOCOM 1652879A**