

user manua

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

Important Warranty Information Regarding

Television Format Viewing

See the warranty card for more information on warranty

Wide screen format LED Displays (16:9, the aspect ratio of the screen width to height) are primarily designed to view wide screen format full-motion video. The images displayed on them should rimarily be in the wide screen 16:9 ratio format, or expanded to fill the screen if your model offers this feature and the images are constantly moving. Displaying stationary graphics and images on creen, such as the dark sidebars on non- expanded standard format television video and programming, should be limited to no more than 5% of the total television viewing per week. Additionally, ewing other stationary images and text such as stock market reports, video game displays, station logos, web sites or computer graphics and patterns, should be limited as described above for Ill televisions. Displaying stationary images that exceed the above guidelines can cause uneven aging of LED Displays that leave subtle, but permanent burned-in ghost images in the LED picture. To avoid this, vary the programming and images, and primarily display full screen moving images, not stationary patterns or dark bars. On LED models that offer picture sizing features, use these controls to view different formats as a full screen picture. Be careful in the selection and duration of television formats you use for viewing. Uneven LED aging as a result of format selection and use, as well as burned-in images, are not covered by your Samsung limited warranty.

• SAMSUNG ELECTRONICS NORTH AMERICAN LIMITED

WARRANTY STATEMENT Subject to the requirements, conditions, exclusions and limitations of the original Limited Warranty supplied with Samsung Electronics (SAMSUNG) products, and the requirements, conditions, exclusions and limitations contained herein. SAMSUNG will additionally provide Warranty Repair Service in the United States on SAMSUNG products purchased in Canada, and in Canada on SAMSUNG products purchased in the United States, for the warranty period originally specified, and to the Original Purchaser only. The above described warranty repairs must be performed by a SAMSUNG Authorized Service Center. Along with this Statement, the Original Limited Warranty Statement and a dated Bill of Sale

as Proof of Purchase must be presented to the Service Center

- Add to Favorite/Delete from Favorite TOOLSE: Lets you add channels to and delete channels from your **Favorites** list
- To add channels to the **Favorites** list, follow these steps:
- 1. Select one or more channels in the All Channels list using the $\blacktriangle/ \blacksquare$ buttons and the Yellow Select button on your remote.
- 2. Press the TOOLS button on your remote. The Tools menu appears.
- 3. Select Add to Favorite in the Tools menu, and then press the ENTER 🕑 button.
- To delete channels from the **Favorites** list, follow these steps: 1. Select one or more channels in the Favorite Channels list using the ▲/▼ buttons and the Yellow Select button on your
- remote. 2. Press the TOOLS button on your remote. The Tools menu
- appears.
- 3. Select Delete from Favorite in the Tools menu, and then press the ENTER 🚭 button.
- **Timer Viewing:** You can schedule a channel to be displayed automatically at a set time, even when you are watching another channel. You must set the current time first in the Time > Clock function to use Time Viewing.

To schedule a channel, follow these steps: 1. Select a channel in the Added Channels list using the $\blacktriangle/ \blacksquare$

- buttons and the Yellow Select button on your remo 2. Press the TOOLS button on your remote. The Tools menu
- appears. 3. Select **Time Viewing** in the Tools menu, and then press the
- ENTER 🕑 button. The Time Viewing screen appears.



[UFH6003-ZA]BN68-05495A-00ENG.indd 1

4. Use the **◄/**► buttons to move from entry field to entry field and the \blacktriangle/∇ buttons to change the entries. Where numbers are displayed, you can also enter numbers directly using the number keypad on your remote.

Transportation to and from the Service Center is the responsibility o the purchaser. Conditions covered are limited only to manufacturing defects in material or workmanship, and only those encountered in normal use of the product. Excluded, but not limited to, are any originally specified provisions for, in-home or on-site services, minimum or maximum repair times exchanges or replacements accessories, options, upgrades, or consumables.

SERIES 6

6001

6003

For the location of a SAMSUNG Authorized Service Center, please call toll-free --- In the United States : 1-800-SAMSUNG (1-800-726-7864)

- In Canada : 1-800-SAMSUNG

Still image warning

Avoid displaying still images (such as jpeg picture files) or still mage elements (such as TV channel logos, TV shows or movies in panorama or 4:3 format, stock or news scroll bars, etc.) on the screen. The constant display of still pictures can cause ghosting or mage burn-in (image retention) on the LED screen, which will affect image quality. To reduce the risk of this effect, please follow the recommendations below:

- Avoid displaying the same TV channel for long periods. • Always try to display any image in full screen mode. Use the TV's
- Picture Options menu to select the optimal screen size. Reduce brightness and contrast values to the minimum required to achieve the desired picture quality. Values that exceed the minimum may speed up the burn-in process.
- Frequently use all TV features designed to reduce image retention and screen burn-in. Refer to proper user manual section for details.

Contact SAMSUNG WORLDWIDE

Country	CANADA	U.S.A.
Address	Samsung Electronics Canada Inc., Customer Service 55 Standish Court Mississauga, Ontario L5R 4B2 Canada	Samsung Electronics America, Inc. 85 Challenger Road Ridgefield Park, NJ 0766
Customer Care Center 🖀	1-800-SAMSUNG(726-7864)
Web Site	www.samsung.com/ca (English) www.samsung.com/ca_fr (French)	www.samsung.com/us

© 2013 Samsung Electronics Co., Ltd. All rights reserved.

- Solution If you select Everyday or Every Week, the date you select in the Date field becomes the start date for your scheduled viewing. For Everyday, the TV will turn on every day, at the time you selected, starting from that date. For Everyweek, the TV will turn on every week, on the same day of the week as the start date you selected, at the time you selected, from that day on. I you select Once, the TV will turn on once, on the date and time you selected.
- 5. Press the ENTER 🖼 button on your remote when done.
- Sonly Added Channels can be scheduled.
- Scheduled programs and channels are displayed in the Programmed List. $^{\odot}$ When you select a digital channel, press the \blacktriangleright button to
- view the digital program list. If you highlight a program in the list, and then press the ENTER (Schedule) button, you set **Timer Viewing** for that program directly. Select All: Select all the channels in the displayed channel list.
- Deselect All: Deselect all the selected displayed channels. Sou can only select **Deselect All** when one or more channels are selected.

Channel Name Edit: Analog channels only. Lets you assign a name of up to five characters to an analog channel. For example, Hist, Food, Golf, etc. This makes it easier to find and select a

channel Auto Program: See Auto Program under Memorizing Channels

Programmed List (on the Channel List Screen) The **Programmed** list displays the channels and programs you have scheduled for viewing using the Time Viewing function. You or delete a show you have scheduled using the functions on the Programmed List screen Tools menu.

Programmed List Screen Tools Menu TOOLS

Change Info: Change the scheduling information for a show or channel you have scheduled

- To change the information, follow these steps:
- 1. Select the Programmed List icon on the left side of the Channel List screen, and then press the ENTER 🖼 button. 2. On the **Programmed** List screen, select the show or channel
- entry you want to change, and then press the TOOLS button. The Tools Menu appears. 3. Select **Change Info**, and then press the **ENTER** I button.
- The **Time Viewing** screen appears. 4. Use the **◄/**► buttons to move from entry field to entry field
- and the \blacktriangle/∇ buttons to change the entries. Where numbers are displayed, you can also enter numbers directly using the number keypad on your remote.
- 5. Press the ENTER 🕑 button when done. **Cancel Schedules**: Cancel a show or channel you have
- scheduled. To cancel a scheduled show or channel, follow these steps:
- 1. Select the **Programmed** List icon on the left side of the Channel List screen, and then press the ENTER - button.
- 2. On the **Programmed** List screen, select the show or channel entry you want to cancel, and then press the TOOLS button. The Tools Menu appears.
- 3. Select Cancel Schedules, and then press the ENTER
- button. The Cancel Schedule screen appears. 4. Select **OK**, and then press the ENTER + button.

The On Screen Menus

Your TV has two kinds of menus, the Main menu and the various. Tools menus. The Main menu gives you access to most or all of he menu options available on your TV. The Tools menus display a selected number of frequently used menu options that change depending on the screen you are viewing. A Tools menu symbol]) in the lower right side of the screen indicates that a Tools menu is available

Advanced Settings

ailable in Standard and Movie mode only

changes to Gamma and White Balance.

precise picture with more precise controls

color range of the video source

green, blue) darkness

Gamma: Adjusts the primary color intensity

blue) brightness.

dim light, the screen dims.

Picture Options

redder (warmer).

Available in Standard mode only

mode is set to Dynamic.

the TVs 16:9 mode most of the time.

borders on the right and left of the picture.

is not covered by the warranty.

by Input Source are listed below:

To set the clock, follow these steps:

1. Select Setup >Time > Clock.

ENTER 🕑 again

digital channel

If you selected Auto:

press ENTER 🛃.

If you selected Manual:

60, 90, 120, 150 and 180 minutes).

Timer 1 / Timer 2 / Timer 3

Sou must set the clock first.

■ Volume: Set the desired loudness.

Activate.

the USB device:

device lower than USB 2.0.

and the type or name of the device.

Solution To cancel the Sleep Timer, select Off.

Sleep Timer TOOLS

(1920x1080) or 720p (1280x720) resolution.

(1080i / 1080p) HD signals.

top, and bottom are cut off.

and bottom are cut off.

fits the entire screen.

screen contrast

look darker.

Compared to previous models, new Samsung TVs offer a more

When your TV is connected to a PC, you can only make

Color Space (Auto / Native): Auto automatically matches the

range of colors available to create pictures to the color range of

the video source. Native provides a color range wider than the

White Balance: Adjusts the color temperature of the picture so

that white objects look white (instead of for example slightly

pink or slightly yellow) and the overall color of the picture looks

R-Offset / G-Offset / B-Offset: Adjusts each color's (red,

R-Gain / G-Gain / B-Gain: Adjusts each color's (red, green,

Reset: Resets the White Balance to it's default settings

Dynamic Contrast (Off / Low / Medium / High): Adjusts the

Black Tone (Off / Dark / Darker / Darkest): Selects the black

Motion Lighting (Off / On): When on, the TV automatically

adjusts the brightness of the screen in response to the

When the TV is connected to a PC, you can only make

changes to the Color Tone, Size and HDMI Black Level.

Color Tone (Cool / Standard / Warm1 / Warm2): Cool makes

S Warm1 and Warm2 are deactivated when the picture

Size: Set the size and aspect ratio of the picture on the screen

screen sizes as well. However, we highly recommend you use

Zoom1: Provides moderate magnification of the picture. Sides,

 $\textbf{Zoom2}: \mbox{ Provides larger magnification of the picture. Sides, top,}$

Wide Fit: Enlarges the aspect ratio of the picture so the picture

4:3: Sets the picture to the old, 4:3 format and puts black or gray

Traces of borders displayed on the left, right and center of

the screen may cause image retention (screen burn) which

So not watch your TV in the 4:3 format for a long time.

Screen Fit: Displays the full image without any cut-off when

your TV is inputting HDMI (720p / 1080i / 1080p) or Component

Solution State State

Nou can adjust and store settings for each external device you have connected to an input on the TV. Picture Sizes available

2. Press ENTER I and select Auto or Manual, and then press

The TV will automatically download the correct time from a

Select Time Zone, and then press the ENTER I button.

• Select DST (Daylight Savings Time), and then press

ENTER . Select On if you want to turn the DST

to DST automatically. Press ENTER I when done.

The **Clock Set** screen appears. Use the \blacktriangle/\lor buttons to

change the values in each field or use the number buttons to

enter the values directly. Use the $\triangleleft/\triangleright$ buttons to move from

field to field. When done with all the fields, press ENTER

S Available only when Clock Mode is set to Manual.

Automatically shuts off the TV after a preset period of time. (30,

Activate/Inactivate fields for the **On Time** and **Off Time**. Use the

It is to move from field to field. Use the ▲/▼ buttons

change the values in each field. To activate the timer with

the setting you have chosen, set the Activate/Inactivate field to

Turns the TV on and off automatically at times and days you

select. You can set three different on/off timer settings

■ On Time / Off Time: Set the hour, minute, am/pm, and

Contents: To select what will be turned on when the timer

the $\blacktriangle/\blacksquare$ buttons to change the values in each field.

connected to your TV before you can select USB.

- TV/USB: Select TV or USB. The USB device must be

setting is activated. You can set the TV to turn on a specific

channel or play back contents such as photo or audio files.

Use the \triangleleft buttons to move to move to the Contents field,

and then press the ENTER 🕞 button. The Contents screen

appears. Use the $\triangleleft/\triangleright$ buttons to move from field to field. Use

- Antenna: Displays the current antenna source, Air or Cable.

- Channel: If you have selected TV select the desired channel

The maximum displayed number of files, including sub

folders, in one folder of USB storage device is 2000.

Note that the second se

1. Use the **◄/**► buttons to move to the field under **Music**

r the field under Photo, and then press the ENTER 🚭

button. The TV displays a single folder (the Root folder)

- Music/Photo: If you have selected USB, follow these steps to

select a folder containing MP3 (Music) or JPEG (Photo) files on

the Clock Mode is set to Auto.

Use the \blacktriangle/ \lor buttons to select your **Time Zone**, and then

adjustment on and off manually. Select Off to turn off the

DST adjustment. Select Auto if you want the TV to adjust

S DST and Time Zone function are only available when

Your cable box or satellite receiver may have its own set of

16:9: Sets the picture to the 16:9 wide screen format.

the picture bluer (cooler). Warm 1 and Warm 2 make the picture

Flesh Tone: Adjusts the amount of red in skin tones.

level to adjust the screen depth. Darker settings make blacks

brightness of the room. In bright light, the screen brightens. In

The Main menu has seven primary categories:

 Picture 	 Input
Sound	 Application
Channel	 Support

Setup

To view the Main menu, press the MENU button on your remote. To view a Tools menu, press the TOOLS button on your remote.

Solution The menu options that appear in the Main menu depend on the Source you have selected. For example, if you have selected the HDMI source, the Channel category will not appear. To see the Channel category, you must first select TV n the Source List.

The Menu options are presented below, arranged by Main menu categories. A Tools button symbol (TOOLS) next to an option name indicates the option is also available in one of the Tools

Picture Menu

Mode TOOLS

- Select your preferred picture mode. Nhen your TV is connected to a PC, you can only select
- Entertain and Standard. **Dynamic**: Brightens the screen. Suitable for a bright room.
- **Standard**: Suitable for a normal.
- Movie: Darkens the screen, making it less glary. Suitable for watching movies in a darkened room
- Entertain: Sharpens the picture. Suitable for games. Solution Only available when the **TV** is connected to a **PC**. Backlight / Contrast / Brightness / Sharpness /

Color / Tint (G/R)

- **Backlight**: Adjusts the brightness of the screen by adjusting the brightness of the individual pixels.
- Contrast: Increases or decreases the contrast between dark and light areas of the picture
- Brightness: Adjusts the brightness of the screen. Not as effective as Backlight
- Sharpness: Sharpens or dulls the edges of objects Color: Adjusts the color saturation. The higher the Color setting, the more intense the color. Low settings remove color and the
- picture becomes black, white and gray. Tint (G/B). Adjusts the amount of green and red in the picture As you increase the amount of green, the amount of red
- lecreases and vice versa. Note: When the TV is connected to a PC, you can only make changes to Backlight, Contrast, Brightness, and Sharpness.
- Information: Display the information for a show or channel you have scheduled. You can also change the schedule Information 1. Select the **Programmed** List icon on the left side of the
- **Channel List** screen, and then press the ENTER 2. On the **Programmed** List screen, select the show or channel entry you want information for, and then press the TOOLS
- button. The Tools Menu appears. 3. Select Information, and then press the ENTER 🚽 button. The Time Viewing Information screen appears.
- 4. Select Change Info and press the ENTER 🕞 button change information, or select Close and press the
- ENTER 🕑 button to close the Information screen. Select All / Deselect All: You can select or deselect all channels in the channel list

Other Channel Menu Functions

Channel Mode (Added Channels/Favorite

Channels) Lets you select the channel list displayed when you press the ∧CH∨ (Channel) button on your remote. For example, if you elect Favorite Channels, you will only see Favorite channels wher vou press the $\wedge CH \vee$ button.

Fine Tune

Analog channels only

as this is done automatically during the search and store operation. If the signal is weak or distorted, fine tune the channel Select the channel, and then select Fine Tune.

Sine tuned channels that have been saved are marked with an asterisk "*" on the right-hand side of the channel number in the channel banner.

If the reception is clear, you do not have to fine tune the channel,

So To reset fine-tuning, select the channel, select Fine Tune, and then select Reset on the Fine Tune screen

Setup Menu

Plug & Play

Lets you re-run the Plug & Play initial setup procedure. For instructions, see your Quick Start Guide.

Language

Time

button

of the TV.

Set the menu language 🔊 Choose between English, Español, and Français.

Solution The time you set will appear when you press the INFO

Clock: Set the clock so you can use the various timer features

 ${}^{\circledast}$ If you disconnect the power cord, you have to set the

Setting the Time

clock again.

Input Source Picture Size 16:9, Zoom1, Zoom2, ATV. AV. Component (480i, 480p) 4.3 DTV (1080i, 1080p), Component (1080i, 16:9. Wide Fit. 4:3. 1080p), HDMI (720p, 1080i, 1080p) Screen Fit

Digital Noise Filter (Off / Low / Medium / High / Auto) : If the broadcast signal received by your TV is weak, you can activate he Digital Noise Filter feature to reduce any static and ghosti that may appear on the screen

S When the signal is weak, try all the Digital Noise Filter options until the TV displays the best picture. HDMI Black Level (Normal / Low) : For HDMI signals, select

the black level to adjust the screen depth. Low make blacks look **SAP**: Select to listen to the Separate Audio Program, which is Available only in **HDMI** mode (RGB signals).

Film Mode (Off / Auto) : Sets the TV to automatically sense and

process film signals from all sources and adjusts the picture for optimum quality Auto Volume 🔊 Available in ATV, DTV (interlace), AV, COMPONENT (480i / Because each station has its own broadcasting conditions, the

1080i) and HDMI (480i / 1080i). Auto Motion Plus (Off / Clear / Standard / Smooth / Custom

Demo): Enhances motion in fast moving scenes. Solution and The info screen on your TV displays the resolution and

frequency of the incoming video signal (60Hz). This displayed frequency is not what the TV is displaying by using the Auto Motion Plus function.

■ LED Motion Plus (Off / On): Removes drag from fast scenes with a lot of movement to provide a clear picture.

Picture Reset

■ Picture Reset (Reset Picture Mode / Cancel): Resets the picture settings to their factory defaults

Sound Menu

Standard: Selects the normal sound mode

■ Music: Emphasizes music over voices. Movie: Provides the best sound for movies.

Clear Voice: Emphasizes voices over other sounds.

Amplify: Increase the intensity of high-frequency sounds to allow a better listening experience for the hearing impaired.

Equalizer

Available in Standard sound mode only.

Balance L/R: Adjusts the balance between the right and left speaker

■ 100Hz / 300Hz / 1KHz / 3KHz / 10KHz (Bandwidth Adjustment): Adjusts the loudness of specific bandwidth

frequencies Beset: Besets the equalizer to its default settings

SRS TruSurround HD

Available in Standard sound mode only.

SRS TruSurround HD is a patented SRS technology that solves the problem of plaving 5.1 multichannel content through two speakers. TruSurround delivers a compelling, virtual surround sound experience through any two-speaker playback system including internal television speakers. It is fully compatible with all multichannel formats.

2. Press the ENTER I button. A list of folders on the device Locking/Blocking Programs or Movies

If there are no folders on your device, press the Yellow select button to select the Root folder, and then press the RETURN button. The Timer screen

re-appears. 3. Use the \blacktriangle/ \lor buttons to highlight a folder that contains music or photos, and then press the Yellow select button to select the folder.

4. Press the RETURN button. The Timer screen re-appears. ■ Repeat: Select Once, Everyday, Mon~Fri, Mon~Sat, Sat~Sun or Manual. If you select Manual, you can select the days you vant to activate the timer by using the $\triangleleft/\triangleright$ buttons to highlight the day, and then pressing the ENTER 🚭 button. To unselect a day, highlight it, and then press the ENTER 🗗 button.

When you finished making all your selections on the Timer screen, press either the ENTER I or RETURN button.

Other Features

Program Rating Lock

The Program Rating Lock feature lets you block programs you've determined are inappropriate for your children based on the program's ratings. To access the **Program Rating Lock** ature and make any changes, you must enter a PIN (personal identification number). To watch a blocked program, you must also

enter the same PIN. Sector Program Rating Lock is not available in HDMI or

Component mode. S The default PIN number of a new TV set is "0-0-0-0". You can

set your own PIN using the Change PIN function How It Works

When you access the Program Rating Lock Menu functions for the first time, the PIN input screen appears. Enter 0-0-0-0. The PIN screen closes and the **Program Rating Lock** Menu appears. Every time you access the **Program Rating Lock** functions, the PIN screen will appear and you must enter a PIN.

When the Rating Lock screen appears, select Program Rating Lock, and then press ENTER . Select On, and then press the ENTER 🖼 key again. Depending on what type of programs or movies you want to block select one of the options on the screen and then press the ENTER I button. The options are listed below TV Parental Guidelines: You can block TV programs based

on their ratings. This function allows you to control what your children are watching. ■ MPAA Rating: You can block movies based on their MPAA

ratings. The Motion Picture Association of America (MPAA) has implemented a rating system that provides parents or quardians. with advanced information on which films are appropriate for

Canadian English: You can block TV programs based on their Anglophone Canadian ratings. Canadian French: You can block TV programs based on their

French Canadian ratings. Downloadable U.S. Rating: Parental restriction information car

be used while watching DTV channels.

Preferred Language

Multi-Track Sound (MTS)

broadcast

Analog channels only

Sound Reset

Channel Menu

the Plug & Play procedure.

function.

- 3 -

picture.

□ Memorizing Channels

Antenna (Air / Cable) TOOLS

Digital channels only Digital-TV broadcasts can transmit many audio tracks

Itaneously (for example, simultaneous translations of a program into foreign languages).

Mono: Select for channels that are broadcasting in mono or if

🖄 Depending on the program being broadcast, you can listen to

volume may fluctuate each time you change the channel. This

Reset All: Resets all sound settings to the factory defaults.

When you first set up your TV using Plug & Play, the TV

nemorized the channels that were available over the air or through

our cable system and added them to the Channel List. The

Antenna and Auto program functions described below let you

Before your television can memorize the available channels, you

must select your TV's signal source, Air (using an antenna) or

Cable. Select Menu > Channel > Antenna > Air or Cable. After

you have selected the signal source, go on to the Auto Program

Selecting the signal source using the Antenna function also

if you receive your TV signal over the air, and you select

Cable, you will see only snow. You must select Air to see a

determines the signal source the TV is tuned to. For example,

re-run the channel memorization function without having to re-run

the sound output when the modulation signal is low

feature automatically adjusts the volume of a channel by lowering

the sound output when the modulation signal is high or by raising

Stereo: Select for channels that are broadcasting in stereo

you are having difficulty receiving a stereo signal

usually a foreign-language translation.

Mono. Stereo or SAP.

To start Auto Program, follow these steps: Sou can only select a language from among the ones being

1. Push MENU $\square \rightarrow$ Channel \rightarrow Auto Program \rightarrow ENTER \square on your remote. The Antenna Source screen appears.

Channel List.

- 2 On the Antenna Source screen, select the source of your TV
- signal. Air

If your TV is connected to an antenna choose Air, and then press ENTER . The TV will automatically start memorizing channels. Cable

over the air or through your cable system and adds them to the

If your TV is connected to a cable outlet, choose Cable, and then press ENTER 4. Go to Step 3.

Auto

- If you choose Auto, and then press ENTER I, the TV will automatically select the correct Antenna source. Go to Step 3.
- 3. On the Cable Type screen, use the $\langle / \rangle / \langle / \rangle$ buttons to select the type of digital and analog cable systems you have: STD, HRC, or IRC. Most systems are STD (Standard), When done, select Start, and then press ENTER . The TV will start memorizing channels.
- Schannel memorization can take up to 45 minutes, depending on your cable system. Memorized channels are added to the Added Channels
- ist. These are the channels you will see when you use the Channel buttons on your remote.


Clear Scrambled Channel

- This function filters out scrambled channels after Auto Program completed. This process may take up to 20~30 minutes
- Sector Press the ENTER I button to stop the Clear Scrambled
- Solution This function is only available in **Cable** mode.

Managing Channels

Channel List

See your list of Added channels. Favorite channels, or channels you've scheduled for viewing. Add or delete Favorite channels, add r delete channels from the Added Channels list, schedule channels or programs for viewing. Watch a channel by selecting the channel in the All Channels, Added Channels, or Favorite screen, pressing the \blacktriangle / \blacktriangledown buttons, and then pressing the ENTER \square button.

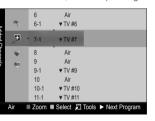

Channel List Screens icons are listed on the left side. Select an icon using the ▲/▼ buttons to view each list

Green, Blue, Yellow, Magenta and Cyan. You can change the

Foreground Opacity: This adjusts the opacity of text. Options

include Default, Transparent, Translucent, Solid and Flashing.

Background Opacity: This adjusts the opacity of the caption

Return to Default: This option sets each Size. Font Style

background. Options include Default, Transparent, Translucent,

Foreground Color, Background Color, Foreground Opacity and

Digital Caption Options are available only when you can

🛸 The Foreground and Background cannot be set to the

Lets you control whether a melody plays when the TV is turned on

• When no sound is output from the TV because the MUTE

has been reduced to minimum with the VOL - button

When the TV is turned off by the Sleep Timer function.

Auto Protection Time (Off / 2 hours / 4 hours / 8 hours / 10

Energy Saving (Off / Low / Medium / High / Picture Off) :

This adjust the brightness of the TV in order to reduce powe

consumption. If you select Picture Off, the screen is turned

No Signal Power Off (Off / 15 min. / 30 min. / 60 min.): Sets

Disabled when the PC is in power saving mode.

off when no user operation is received for 4 hours.

how quickly the TV switches to standby mode, if no picture is

Auto Power Off (Off / On): The TV will be automatically turned

■ Picture Test: Use to check for picture problems. If the problem

Sound Test: Use the built-in melody sound to check for sound

Signal Strength: (Digital channels only) An HD channel's

Adjust your antenna to increase signal strength.

appears in the test picture, select Yes and follow the directions

problems. If the problem occurs during the test, select Yes and

eception quality is either perfect or the channels are unavailable.

off, but the sound remains on. Press any button except volume

the formation of ghost images on the screen

hours): If the screen remains idle with a still image for a certain

select Default and Service1 ~ Service6 in Caption Mode

background color of the captions. The default is Black.

Solid and Flashing.

same color.

lacktriangleta Melody does not play:

Auto Protection Time

button to turn on the screen.

Support Menu

follow the directions on the screen.

Eco Solution

being received.

Self Diagnosis

on the screen.

button has been pressed.

Melody

or off

Background Opacity to its default.

You lock or block programs and/or movies in essentially the same way for each option. Each option displays a grid or table. All the tables have ratings listed on the left. The TV Parental Guidelines option also has kinds of content listed across the top: ALL: Lock all TV ratings. / FV: Fantasy violence / V: Violence / S: Sexual situation / L: Adult Language / D: Sexually Suggestive Dialog.

To lock/block movies or shows with certain ratings and/or kinds of content, click the square next to the rating and/or under the kind of content. A lock appears. To unlock/unblock, click the square again When you click a low rating, all the ratings above it will also display locks. You can also Allow All or Lock All. When done, press the RETURN button on your remote.

Change PIN: The Change PIN screen will appear. Choose any 4 digits for your PIN and enter them in Enter New PIN fields. Re-enter the same 4 digits in **Confirm New PIN** fields. When the Change PIN screen disappears, press the OK button. The TV has memorized your new PIN.

If you forget the PIN, press the remote-control buttons in the following sequence, which resets the pin to "0-0-0-0"

POWER (off) \rightarrow MUTE \rightarrow 8 \rightarrow 2 \rightarrow 4 \rightarrow POWER (on) Game Mode (On/Off)

When you connect a game console such as a PlayStation™ or Xbox™ to your TV, you can enjoy a more realistic gaming experience by turning on the Game Mode function.

- Precautions and limitations for game mode: · Before you disconnect the game console and connect another external device, set Game Mode to Off in the setup menu
- If you display the TV menu in **Game Mode**, the screen shakes
- Game Mode TV. After connecting the game console, set Game Mode to On.
- You may notice slightly reduced picture quality.

Captior

- (On-Screen Text Dialogue)
- **Caption**: You can switch the caption function on or off. If captions are not available, they will not be displayed on the
- Solution The Caption feature does not work in Component or HDMI mode
- **Caption Mode**: You can select the desired caption mode.
- Default / CC1~CC4 / Text1~Text4: (analog channels only) The Analog Caption function operates in either analog TV channel mode or when a signal is supplied from an external device to the TV. (Depending on the broadcasting signal, the Analog Caption function may or may not work with digital channels.)
- Default / Service1~Service6 / CC1~CC4 / Text1~Text4: (Digital channels only) The Digital Captions function works with digital channels
- Service1~6 may not be available in digital caption mode depending on the broadcast.
- Digital Caption Options: (Digital channels only) Size: Options include Default, Small, Standard and Large. The default is Standard.
- Font Style: Options include Default and Styles 0 to 7. The default is Style 0.

Foreground Color: Options include Default, White, Black, Red, Green, Blue, Yellow, Magenta and Cyan. You can change the color of the letters. The default is White.

Auto Program

■ S All Channels: Shows all currently available channels including those you deleted from the Added Channels The Auto Program function memorizes all channels that are available

- Added Channels: Shows all Added Channels. These are the channels that appear when you press the CH button.
- Favorite: Shows all favorite channels
- **Programmed**: Shows all channels and programs currently scheduled using Timer Viewing.
- Nemote control buttons active on the Channel List screen. · Green (Zoom): Enlarges or shrinks a channel numbe
- Yellow (Select): Move the cursor to a channel. Press the Yellow button to select the channel. A 🗸 mark appears. Repeat to select additional channels. Then, open the Tools menu and apply a ction to the channels you selected. • 🞜 (Tools): Displays the Channel List Tools menu. (The Tools
- nenus may differ depending on the situation **Display Icons Used in the Channel List Screens**

Meaning Icons ✓ A selected channel. A Favorite channel • Θ A reserved program. A program currently being broadcast. ď

□ The Channel List Tools Menu TOOLS 7 The Channel List Tools menu contains most of the functions you

can use on the All Channel, Added Channels, and Favorite List

screens. To view, select a list screen, select a channel, and then

To delete channels from the **Added Channels** list, follow these steps:

2. Press the TOOLS button on your remote. The Tools menu

To add channels to the Added Channels list, follow these steps:

2. Press the TOOLS button on your remote. The Tools menu

3. Select Add in the Tools menu, and then press the ENTER

All deleted channels will be shown on the All Channels list.

A gray-colored channel indicates the channel has been

S The Add menu option only appears for deleted channels

 ∞ The PIN input screen appears before the setup screen.

Software Upgrade can be performed by downloading the latest

Refer to this information when connecting external devices to the

View this information when your TV does not work properly or

regarding our call centers and how to download products and

Enjoy photos, music and/or movie files saved on a

□ Connecting a USB Device

□ Using the Media Play Menu

To open Media Play in the Menu, follow these steps

press the ENTER 🚭 button.

compatible with this TV.

multimedia files.

1. Press the MENU button. Then, press the \blacktriangle or \blacktriangledown button to

3. Press the ◀ or ► button to select an icon (Videos, Music,

S Media Play might not work properly with unlicensed

Need-to-Know List before using Media Play (USB)

• The file system supports FAT16, FAT32 and NTFS.

Photos, Settings), and then press the ENTER I button.

· Certain types of USB Digital camera and audio devices may not

Readers. Devices should be connected directly to the TV's USB port. USB HDD is not supported.

Media Play only supports USB Mass Storage Class (MSC) devices. MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives and Flash Card

select Application on the left, and then press the ENTER

2. Press the ▲ or ▼ button to select Media Play (USB), and then

when you want to upgrade the software. You can find information

files to the USB jack on the back of the TV. A pop up window

3. Press the MEDIA.P button on your remote. The Media Play

irmware from samsung.com to a USB memory device.

Senter your 4-digit PIN. Change the PIN using the Change

deleted from the Added Channels list.

You add channels back to the Added Channels list on the

1. Select one or more channels in the All Channels list using the

▲/▼ buttons and the Yellow Select button on your remote.

1. Select one or more channels in the Added Channels list using

the ▲/▼ buttons and the Yellow Select button on your remote

3. Select Delete in the Tools menu, and then press the ENTER

Add / Delete: Delete a channel from or add a channel to the

press the TOOLS button.

Added Channels list.

appears.

button

appears.

Background Color: Options include Default, White, Black, Red, Beset: Reset all settings to the factory defaults.

When no sound is output from the TV because the volume USB Mass Storage Class (MSC) device.

All Channels list.

PIN option

Software Upgrade

HD Connection Guide

Contact Samsung

edia Play

1. Turn on vour TV.

menu appears.

appears.

button

period of time you define, the screen saver is activated to prevent 2. Connect a USB device containing photo, music, and/or movie

TV

- Before connecting your device to the TV, please back up your
 Supported Subtitle Formats
- A USB device that requires high power (more than 0.5A) may not
- Do not disconnect the USB device while it is loading.
- The higher the resolution of the image, the longer it takes to
- "Not Supported File Format" message appears.
- The TV cannot play MP3 files with DRM that have been downloaded from a for-pay site. Digital Rights Management (DRM) is a technology that supports the creation, distribution, and management of digital content in an integrated and
- comprehensive way, including protecting the rights and interests of content providers, preventing illegal copying of contents, and managing billing and settlements
- PTP devices are not supported.
- If an over-power warning message is displayed while you are connecting or using a USB device, the device may not be recognized or may malfunction.
- Protection Time, the Screensaver will run.
- The power-saving mode of some external hard disk drives may be released automatically when your connect them to the TV. If you use a USB extension cable, the TV may not recognize the
- If a USB device connected to the TV is not recognized, the list of files on the device is corrupted, or a file in the list is not played, connect the USB device to a PC, format the device, and check
- If a file you deleted from the PC is still found when you run Media **Play**, use the "Empty the Red permanently delete the file.
- The Videos option does no thumbnail functions.
- over approximately 4000, t
- The maximum displayed nu
- lower than USB 2.0.



- Videos, and then press the ENTER + button
- 3. Press the ENTER button or ► (Play) button
- If video time information is unknown, playing time and the
- During video playback, you can search using the < and
- 🔊 In this mode, you can play movie clips contained in a game,

files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss. External

be supported.

- display on the screen.

- If the TV has no input during the time period set in Auto

- JSB device or may not be able to read the files on the device.
- the connection.

- Photos only supports the s
- If the number of files and fo
- some folders may not oper
- one folder of USB storage
- The media may not be play

Videos



1. In the Media Play menu, press the ◄ or ► button to select

- **2.** Press the $\triangleleft/ \triangleright / \blacktriangle / \lor$ buttons to select a video in the file list.
- The file name is displayed on the top of the screen with the
- plaving time.
- progress bar are not displayed.
- ▶ buttons.
- but you cannot play the game itself.

Stand Assembly

Poor Picture

it did in the store

The picture is distorted: macroblock

error, small block, dots, pixelization

There is poor color or brightness

There is a dotted line on the edge of

When changing channels, the picture freezes or is distorted or delayed.

There is no sound or the sound is too

The picture is good, but there is no

The picture is black and white.

Sound Problems

sound.

low at maximum volume.

The speakers are making an

inappropriate noise

No Picture, No Video

The TV will not turn on

The TV turns off automatically.

There is no picture/video

RF (Cable/Antenna) Connection

The TV is not receiving all channels

[UFH6003-ZA]BN68-05495A-00ENG.indd 2

Color is wrong or missing.

Cannot find a channe

Recycle Bin" function on the PC to sequential jpeg format.			DivX 3.11/4.x/5.1 /6.0	1920x1080	6~30	30Mbps
ot support the scene search and	*.avi *.mkv	AVI, MKV	MPEG4 SP / ASP	1920x1080	6~30	30Mbps
olders saved on a USB storage device is the files and folders may not appear and n. umber of files, including sub folders, in device is 2000.			H264	1920x1080	6~30	30Mbps
			MJPEG	640x480	6~30	10Mbps
	*.asf	ASF	DivX 3.11 / 4.x /5.1 / 6.0	1920x1080	6~30	30Mbps
ving smoothly when using the device	*.wmv		MPEG4 SP / ASP	1920x1080	6~30	30Mbps

Name

SubBip

Micro DVD

SubStation Alph

Advanced Sub

Name

Xsub

SubRip

MPEG-4 Timed text

Supported Video Formats

Internal

File extensior

.sub or .txt

Text Format

Text Format

10Mbps

30Mbps

30Mbps

MKV

MKV

MP4

		NOT LO	040,400	0.00	Tomopa		
*.avi AVI, *.mkv MKV		DivX 3.11/4.x/5.1 /6.0	1920x1080	6~30	30Mbps	MP3 / AC3 /	
	MPEG4 SP / ASP	1920x1080	6~30	30Mbps	LPCM / ADPCM		
		H264	1920x1080	6~30	30Mbps	/ DTS Core	
		MJPEG	640x480	6~30	10Mbps		
*.asf ASF *.wmv ASF	acf	DivX 3.11 / 4.x /5.1 / 6.0	1920x1080	6~30	30Mbps	MP3 / AC3 / LPCM /	
	MPEG4 SP / ASP	1920x1080	6~30	30Mbps	ADPCM / WMA / WMA		
	H.264	1920x1080	6~30	30Mbps	Pro		
*.ts		MPEG2	1920x1080	6~30	30Mbps	AC3 /	
*.trp TS *.tp *.m2ts	H. 264 BP / MP / HP	1920x1080	6~30	30Mbps	AAC / MP3 / DD+ / HE-AAC		
*.dat		MPEG1	1920x1080	24/25/30	30Mbps	AC3 /	
rerere							

H.264 1920x1080

H.264

orenson H.263

• If you have any trouble assembling the stand, refer to "Install the Stand" in the Start Up or Stand Installation Guide.

Nany HD channels broadcast up scaled SD (Standard Definition) content. The picture quality of up

· Compression of video contents may cause picture distortion, especially on fast moving pictures such as those in

Mobile phones used close to the TV (within 3.3ft) may cause noise in the picture on analog and digital channels

• If you're using a component connection, make sure the component cables are connected to the correct jacks

Adjust the Energy Saving option in the TV menu. (go to MENU - Setup - Eco Solution - Energy Saving)

• If you are using an AV composite input, connect the video cable (yellow) to the Green jack of Component Input 1

If connected to a cable box, please try to reset it. (Reconnect the AC cord and wait until the cable box reboots. It may take up to 20 minutes)

If you are using an external device, check the device's audio output option Ex. you may need to change your cable box's audio option to HDMI if the box is connected to your TV using an HDMI cable.

For Antenna or Cable connections, check the signal information. A weak signal may cause sound distortion.

• When you are watching TV connected to an antenna or cable connection, the TV will turn off after 10 - 15 minutes

Set your external device's (Cable/Sat Box, DVD, Blu-ray etc) video outputs to match the connections to the TV

input. For example, if an external device's output is HDML it should be connected to an HDML input on the TV

Run Auto Program to add available channels to the channel list. go to MENU - Channel - Auto program then select Auto and make sure the correct Cable TV signal type is set

• Check the cable connections. (Remove and reconnect all cables connected to the TV and external devices).

Be sure to select the correct input source by pressing the SOURCE button on the remote contro

Adjust the Picture options in the TV menu. (go to Picture Mode / Color / Brightness / Sharpness)

• Try resetting the picture to the default picture settings. (go to MENU - Picture - Picture Reset)

• Re-run Plug & Play or run Auto Program. (go to MENU - Channel - Auto Program)

First, perform the **Picture Test** and to see if your TV is displaying the test image properly

If the test image is properly displayed, the poor picture may be caused by the source or signal.

Go to MENU - Support - Self Diagnosis - Picture Test

deliver HD (high definition) picture quality.

scaled SD content is low.

sports and action movies.

The TV image does not look as good as • If you have an analog cable/satellite box, upgrade to a digital set top box. Use HDMI or Component cables to

Cable/Satellite subscribers: Try HD channels from the channel line up

Adjust the Cable/Set top box video output resolution to 1080i or 720p.

A weak signal can cause picture distortion. This is not a TV problem.

If the picture size is set to Screen Fit, change it to 16:9

• Set the output resolution of the cable box to 1080i or 720p.

(go to MENU - Support - Self Diagnosis - Sound Test)

• Perform the **Sound Test** as explained above.

• Make sure the wall outlet is working.

if there is no signal.

Perform the **Sound Test** to confirm that your TV audio is properly operating.

• Reboot the connected device by reconnecting the device's power cable.

Make sure the AC power cord is securely plugged into the wall outlet and the TV.

• Make sure the AC power cord is plugged securely into the wall outlet and the TV.

• Reboot the connected device by reconnecting the device's power cable.

If the TV turns on, refer to 'Remote control does not work' below.

If your PC is connected to the TV, check your PC power settings

• Ensure the Sleep Timer is set to Off in the Time menu.

Make sure your connected devices are powered on.

Make sure the coaxial cable is connected securely

· Verify the antenna is positioned correctly.

in the menu. There are 3 options. (STD, HRC and IRC)

· Check the volume of the device (Cable/Sat Box, DVD, Blu-ray, etc.) connected to your TV

Check the cable connections. Make sure a video cable is not connected to an audio input.

Try pressing the POWER button on the TV to make sure the problem is not the remote.

· Change the cable/satellite box resolution

on the TV

Incorrect or loose connections may cause color problems or a blank screen.

Air/Cable Antenna connection: Try HD channels after running Auto Program.

640x480

• Video content will not play, or not play correctly, if there is an error in the content or the container

Other Restrictions

- Sound or video may not work if the contents have a standard bit rate/ frame rate above the compatible Frame/sec listed in the Supported Video Formats table.
- If the Index Table erroneous, the Seek (Jump) function is not supported.
- The menu may take longer to appear if the video's bit rate exceeds 10Mbps
- Video content can not be played if there are many contents in one file

Video Decoder

Supports up to H.264, Level 4.1
H.264 FMO / ASO / RS, VC1 SP / MP / AP L4 and AVCHD are not supported.
MPEG4 SP, ASP :
– Below 1280 x 720: 60 frame max
– Above 1280 x 720: 30 frame max

H.263 is not supported.

GMC is not support. Audio Decoder

Supports up to WMA7, 8, 9 STD, 9 PRO, 10 PRO WMA 9 PRO and WMA 10 PRO support 5.1 channel. (LBR mode of WMA Pro is not supported)

WMA Lossless is not supported.



🖼 Pause 📣 Jump 🞜 Tools ゔ Re

No Caption on digital channels

Component cable connection

The picture will not display in full screen.

The remote control does not work.

The cable/set top box remote contro

A "Mode Not Supported" message

Caption on the TV menu is greyed out

There is a plastic smell from the TV.

TV is tilted to the right or left side.

You have intermittent loss of audio or

You see small particles when you look

POP (TV's internal banner ad) appears

Natch these troubleshooting on video at www.samsung.com/spsn.

Some functions and pictures shown in this manual are available on specific models only.

closely at the edge of the frame of

The **Channel** menu is grey out

Self Diagnosis Test menu.

TV Signal Strength is unavailable in the

does not turn the TV on or off, or adjust

Others

the volume.

appears.

the TV

on the screer

The picture is distorted: macroblock

error, small block, dots, pixelization.

- 1. In the Media Play menu, press the ◄ or ► button to select Music, and then press the ENTER 🚭 button
- 2. Press the $\langle \rangle / \rangle / \langle \rangle$ buttons to select the desired Music in the file list
- 3. Press the ENTER I button or 🕨 (Play) button. 🗞 During music playback, you can search using the ٵ and
- buttor Section 4 (REW) and ► (FF) buttons do not function during
- Solution Market State Stat
- extension. Other file extensions are not displayed, even if they are saved on the same USB device. If the sound is abnormal when playing MP3 files, adjust the
- Equalizer in the Sound menu. (An over-modulated MP3 file may cause a sound problem.)

Photos



- 1. In the Media Play menu, press the ◄ or ► button to select Photos, then press the ENTER 🕒 button. Press the $\langle / \rangle / \langle / \rangle$ buttons to select a photo in the file list.
- 3. Press the ENTER button or (Play) button. NOTE
- While a photo list is displayed, press the
 (Play) / ENTER
 button on the remote control to start a slide show.
- All files in the file list section will be displayed in the slide show. • During the slide show, files are displayed in order. During the slide show, you can adjust the slide show speed using (
 (REW) or (
 (FF) button.
- You can move to other files using ◄ or ► button.
- Media Play can play Music files automatically during a Slide Show if Background Music is set to On. Sou cannot change the Mode in Background Music until the
- Background Music file has finished loading. • Supported Photo Formats

1. On the File List screen, highlight a file, and then press the Yellow

• To deselect all selected files, press the TOOLS button, select

3. Press the TOOLS button, select Play Selected Contents, and

2. Press the TOOLS button, select Play Folder, and then press the

• A \checkmark mark appears to the left of the selected files.

Deselect All, and then the ENTER 🖼 button.

1. With the folders on your USB device displayed use the

· To cancel a selection, press the Yellow button again

Resolution

15360 x 8704

1024 x 768

Photo Image Base-line

Playing Multiple Files

button on your remote.

ENTER 🗗 button.

- 10

• A weak signal can cause picture distortion. This is not a TV problem

Purple/green rolling horizontal bars and buzzing noise from the TV speakers with buzzing source the left and right audio connections from the set-top-box. If the buzzing stops, this indicates that the set-top-box has a grounding issue. Replace the Component video cables with an HDMI connection.

• Clean the transmission window located on the top of the remote control.

- Try pointing the remote directly at the TV from 5~6 feet away.

Some channels may not have caption data.

sports and action movies.

the SAMSUNG TV code

Component.

resolution settings in this manual.

• Caption must be activated on the external device.

This smell is normal and will dissipate in a few days

• Remove the stand base from the TV and reassemble it.

· Check the cable connections and reconnect them.

This is part of the product's design and is not a defect.

• The Channel menu is only available when you select the TV source

Your settings are lost after 30 minutes or every time the TV is turned off. • If TV is in the Store Demo mode, it will reset audio and picture settings every 30 minutes. Please change from Store Demo mode to Home Use mode using the Plug & Play procedure. Press the SOURCE button to select

TV mode, go to MENU \rightarrow Setup \rightarrow Plug & Play \rightarrow ENTER

This TFT LED panel uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

🗞 You can keep your TV in optimum condition by upgrading it with the latest firmware from the Samsung web site (samsung.com

insert the USB memory stick into the TV's USB slot, and then select Support > Software Upgrade in the TV's menu.

 \rightarrow Support \rightarrow Downloads). To upgrade, download the firmware to your computer, copy the firmware file to a USB memory stick,

• Check the Caption Setup menu. Try changing Caption Mode Service 1 to CC1.

• Adjust the picture size option on your external device or change the TV to full screen.

• Replace the remote control's batteries. Make sure you insert them with the polarity (+/-) correct

Compression of video contents may cause picture distortion, especially on fast moving pictures such as those in

• HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3) contents.

· Black bars on the top and bottom appear when movies that have aspect ratios different from your TV play on the

Program the Cable/Set top box remote control to operate the TV. Refer to the Cable/Set top box user manual for

Check the supported resolution of the TV and adjust the external device's output resolution accordingly. Refer to

Store Demo mode to Home Use mode using the Plug & Play procedure. Press the SOURCE button to select

enough for long term use. If mounting the TV to the wall, we recommend using cables with 90 degree connectors.

• Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible

• Select Home Use under Plug & Play mode. For details, refer to Plug & Play (Initial Setup).

• You cannot select Caption in the TV menu when watching content from a device connected via HDMI or

• This function is only available for digital channels received through an Antenna / RF/Coax connection

JPEG Progressive **Other Restrictions** • CMYK, YCCK Color space JPEG are not supported.

Playing selected video/music/photo files

2. Repeat Step 1 to select multiple files.

then press the ENTER 🚭 button.

Playing a video/music/photo folder

 $\langle / \rangle / A / \nabla$ buttons to highlight a folder

Media Play - Additional Functions Videos/Music/Photos Play Option menus

Category	Operation	Videos	Music	Photos
Title	You can select another video file to play directly.	\checkmark		
Repeat Mode	lode You can play movie and music files repeatedly.		\checkmark	
Picture Size You can adjust the picture size to your preference.		~		
Picture Mode	You can adjust the picture setting.	\checkmark		\checkmark
Auto Motion Plus	You can enhance motion in fast moving scenes.	\checkmark		
Sound Mode	You can adjust the sound setting.	\checkmark	\checkmark	\checkmark
Subtitle Setting	You can play the video with Subtitles. This function only works if the subtitles have the same file name as the video.	~		
Audio Format	Audio Format You can select the digital audio output format.			
Audio Language				
Stop Slide Show / Start Slide Show	You can start or stop a Slide Show.			~
Slide Show Speed	You can select the slide show speed during the slide show.			\checkmark
Background Music You can set and select background music when watching a Slide Show.				~
Zoom	You can zoom into images in full screen mode.			\checkmark
Rotate	You can rotate images in full screen mode.			\checkmark
Information	You can see detailed information about the played file.	\checkmark	\checkmark	\checkmark

Settings

Using the Setup Menu

DivX® Video On Demand : Shows the registration code authorized for the TV. If you connect to the DivX web site and register with the 10-digit registration code, you can download the VOD activation file. Once you play it using Media Play, the egistration is completed.

S For more information on DivX® VOD, visit "http://vod.divx.

■ Information: Select to view information about the connected USB device.

Other Information

Installing the Wall Mount Kit

The wall mount kit (sold separately) allows you to mount the TV on the wall. For detailed information about installing the wall mount, see

the instructions provided with the wall mount items. Contact a technician for assistance when installing the wall mount bracket Samsung Electronics is not responsible for any damage to the product or injury to yourself or others if you elect to install the wall mount on your own

Wall Mount Kit Specifications (VESA)

Solution The wall mount kit is not supplied, but sold separately. Install your wall mount on a solid wall perpendicular to the floor. When attaching to other building materials, please contact your nearest dealer. If you install the TV on a ceiling or slanted wall, it may fall and result in severe personal injury.

Storage and Maintenance

License

👒 If a sticker was attached to the TV screen, some debris can remain after you remove the sticker. Please clean it before watching the TV.

🔊 NOTE

Family

LED-T

of the TV.

tightly to the brackets

fessional installer.

screw specifications.

inches

19~22

32~40

46~60

Securing the TV to the Wall

as follows

To prevent the TV from falling

When purchasing our wall mount kit, a detailed installation

manual and all parts necessary for assembly are provided.

• Do not use screws that do not comply with the VESA standard

Do not use screws that are longer than the standard dimension

or do not comply with the VESA standard screw specifications

· For wall mounts that do not comply with the VESA standard

screw specifications, the length of the screws may differ

Do not fasten the screws too firmly. This may damage the

product or cause the product to fall, leading to personal injury Samsung is not liable for these kinds of accidents.

when a non-VESA or non-specified wall mount is used or the

consumer fails to follow the product installation instructions

· Samsung is not liable for product damage or personal injury

Product TV size in VESA screw hole specs Standard Quantity

(A * B) in millimeters

75 X 75

100 X 100

200 X 200

400 X 400

Screw

M6

M8

Do not install your Wall Mount Kit while

ersonal injury due to electric shock.

your TV is turned on. It may result in

Caution: Pulling, pushing, or climbing onto the TV may cause the TV to fall. In particular, ensure that your children do not hang over or destabilize the TV; doing so may cause the TV

to tip over, resulting in serious injuries or death. Follow all safety precautions provided on the included Safety Flyer. For added stability, install the anti-fall device for safety purposes,

Since the necessary brackets, screws, and string or cable are

1. Insert the screws into the wall brackets and firmly fasten them to

We strongly recommend you drive the screws into a stud.

. Using screws, insert the screws through the TV brackets, and

3. Connect the brackets on the TV and the brackets on the wall

with a strong string or cable, and then tie the string or cable

Solution Verify all connections are properly secured. Periodically check

the connections for any sign of fatigue or failure. If you have any doubt about the security of your connections, contact a

are at the same height or lower than the brackets on the TV.

Clean the product with a soft cloth

dampened with in a small amount of

water. Do not use a flammable liquid

(e.g. benzene, thinners) or a cleaning

Solution State State

Untie the string or cable before moving the TV.

Connect the string or cable so that the brackets on the wall

To purcase a TV Holder kit, contact Samsung customer care.

agent.

hen fasten the screws to the top VESA screw holes on the back

the wall. Make sure the screws are firmly fixed to the wall.

not supplied, please purchase these separately


• Do not mount the TV at more than a 15 degree tilt.

Always have two people mount the TV on a wall.

depending on the wall mount specifications.

Screws that are too long may cause damage to the inside of the

🦠 The exterior and screen of the product can get scratched during cleaning. Be sure to wipe the exterior and screen carefully using a soft cloth to prevent scratches

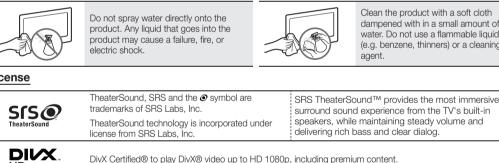

DivX Certified® to play DivX® video up to HD 1080p, including premium content.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx. com for more information and software tools to convert your files into DivX videos. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod. divx com for more information on how to complete your registration. Covered by one or more of the following U.S. patents : 7,295,673; 7,460,668; 7,515,710; 7,519,274 DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries

and are used under lie	cense.
DIGITAL PLUS PULSE	Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
edts 2.0 Channel	Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0 Channel is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.
ноті	The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
Open Source License	Notice
Open Source used in the Notice is written only Er	nis product can be found on the following webpage. (http://opensource.samsung.com) Open Source License nglish.
To send inquiries and request	ts for questions regarding open sources, contact Samsung via Email (oss.request@samsung.com).
	ne software programs which are distributed under the Independent JPEG Group.
ICU License - ICU 1.8.1 and	later

COPYRIGHT AND PERMISSION NOTICE

Copyright (c) 1995-2008 International Business Machines Corporation and others All rights reserved.

emission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Softw thout restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, provided that the above copyright notice(s) and this permission notice appear in all copies of the Software and that both the pove copyright notice(s) and this permission notice appear in supporting documentation.

HE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LABLE FOR ANY CLAMM, OR ANY SPECIAL INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Softwar without prior written authorization of the copyright holder.

All trademarks and registered trademarks mentioned herein are the property of their respective owners.

Kensington Lock Standard dimensions for wall mount kits are shown in the table

The Kensington Lock is not supplied by Samsung. It is a device used to physically fix the system when using it in a public place. Refer to the manual provided with the Kensington Lock for additional information on proper use.

Section Se slot is beside the "
"
"
icon.

S The position and color may differ depending on the model.

Mode	Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Pixel Clock Frequency (MHz)	Sync Polarity (H / V)
IDM	640 x 350	31.469	70.086	25.175	+/-
IBM	720 x 400	31.469	70.087	28.322	-/+
	640 x 480	35.000	66.667	30.240	-/-
MAC	832 x 624	49.726	74.551	57.284	-/-
	1152 x 870	68.681	75.062	100.000	-/-
	640 x 480	31.469	59.940	25.175	-/-
	640 x 480	37.861	72.809	31.500	-/-
	640 x 480	37.500	75.000	31.500	-/-
	800 x 600	37.879	60.317	40.000	+/+
	800 x 600	48.077	72.188	50.000	+/+
	800 x 600	46.875	75.000	49.500	+/+
	1024 x 768	48.363	60.004	65.000	-/-
	1024 x 768	56.476	70.069	75.000	-/-
	1024 x 768	60.023	75.029	78.750	+/+
ESA DMT	1152 x 864	67.500	75.000	108.000	+/+
	1280 x 720	45.000	60.000	74.250	+/+
	1280 x 800	49.702	59.810	83.500	-/+
	1280 x 1024	63.981	60.020	108.000	+/+
	1280 x 1024	79.976	75.025	135.000	+/+
	1366 x 768	47.712	59.790	85.500	+/+
	1440 x 900	55.935	59.887	106.500	-/+
	1600 x 900RB	60.000	60.000	108.000	+/+
	1680 x 1050	65.290	59.954	146.250	-/+
	1920 x 1080	67.500	60.000	148.500	+/+

Display Modes (HDMI/DVI Input)

Optimal resolution is 1920 x 1080@60Hz

Troubleshooting

If the TV seems to have a problem, first review this list of possible problems and solution. If none of these troubleshooting tips apply, visit samsung.com, then click on Support, or call Samsung customer service at 1-800-SAMSUNG.

Problem	Possible Solution				
Flickering and Dimming	If your Samsung Television is flickering or dimming sporadically, you may need to disable some of its energy efficier features like the Energy Saving feature. Follow the steps below with your remote to turn these features off or on.				
	• Energy saving : Menu → Setup → Eco Solution → Energy Saving →Select Settings				
Component Connections / Screen Color	If you find that the color on your Samsung television's screen is not correct or black and white, first run a Self Diagnosis Test on the TV to make sure there are no device issues. ● Self Diagnosis : User Menu → Support → Self Diagnosis → Picture Test				
	 If the test is ok, try making sure ; 				
	 Your connections are all consistent. For example, if you've used the AV In jack on your TV, make sure you have used the AV Out jack on your video source. 				
	 Try making sure you have connected to the correct jacks. For example, if you use the Component jacks, labeled Pb, Pr, and Y, to connect your TV and video source, make sure you have connected the blue Pb jack on the video source to the blue Pb jack on the TV, the red Pr jack on the source to the red Pr jack on the TV. 				
Screen Brightness	If you find that the colors on your Samsung TV are correct but just a little too dark or bright, there are some settings you should check before calling for a repair.				
	 Backlight, Contrast, Brightness, Sharpness, Color, Tint and so on. Go to "Picture" in the Menu, and then try adjusting these options. 				
Unwanted Powering off	If your Samsung TV appears to turn off by itself, there may be an issue with either your Timer settings or your Ecc friendly No Signal Power Off feature.				
	First make sure the Sleep Timer is not accidentally set. The Sleep Timer lets you fall asleep with the TV still on knowing that it will turn off after a certain period of time and not waste energy.				
	• Sleep Timer : User Menu \rightarrow Setup \rightarrow Time \rightarrow Sleep Timer				
	If the Sleep Timer is not activated, you may have engaged the No Signal Power Off or Auto Power Off feature.				
	• No Signal Power Off : User Menu \rightarrow Setup \rightarrow Eco Solution \rightarrow No Signal Power				
	• Auto Power Off : User Menu \rightarrow Setup \rightarrow Eco Solution \rightarrow Auto Power Off				
Trouble Powering On	Before you turn the TV on, find the red light on the right or left bottom of your TV. Press the power on butto on the TV or remote and the light should blink about 5 times before the TV turns on.				
	If you find that you are having trouble powering on your Samsung television, there are a number of things to check before making a call to the service department.				
	 If you happen to be using the TV as a monitor and the stand-by light only blinks for a few seconds when you press the power button, your PC is in sleep mode. To take your PC out of sleep mode, press a key on your keyboard or move the mouse. Then try turning your TV on. 				
	If you're sure your power cord, remote control, and PC are functioning properly, you may be having a cable issue. I you have a cable or satellite box, your TV may appear to be off because the cable or satellite box is not outputting signal. To test the signal output of your cable or satellite box, press the guide or info button on the cable or satellite box remote control. If the screen displays the guide or info data, the problem is caused by the box.				

Environmental Considerations Operating Temperature Operating Humidity Storage Temperature Storage Humidity	50°F to 104°F (10°C to 40°C) 10% to 80%, non-condensing -4°F to 113°F (-20°C to 45°C) 5% to 95%, non-condensing					
Model Name	UN55FH6003	UN60FH6003	UN65FH6001			
Display Resolution		1920 x 1080				
Screen Size (Diagonal)	55" Class (54.6" measured diagonally)	60" Class (60.0" measured diagonally)	65" Class (64.5" measured diagonally)			
Sound Output		10W x 2				
Dimensions(W x H x D) Body With stand	49.2 X 28.9 X 3.7 inches (1250.6 X 735.7 X 94.3 (mm)) 49.2 X 31.0 X 8.9 inches (1250.6 X 789.2 X 227.6 (mm))	54.1 X 22.2 X 3.7 inches (1375.6 X 565.1 X 94.4 ((mm)) 54.1 X 33.9 X 12.9 inches (1375.6 X 862.5 X 329.7 ((mm))	58.4 X 34.4 X 3.7 inches (1484.5 X 873.8 X 96.3 (mm)) 58.4 X 36.4 X 12.9 inches (1484.5 X 926.5 X 329.8 (mm))			
Weight Without Stand With Stand	38.8 lbs (17.6 kg) 44.7 lbs (20.3 kg)	49.8 lbs (22.6 kg) 59.0 lbs (26.8 kg)	63.0 lbs (28.6 kg) 72.3 lbs (32.8 kg)			


This device is a Class B digital apparatus.

Sor information about power supply, and more about power consumption, refer to the label attached to the product.

Typical power consumption is measured according to Energy Star Program requirements for Televisions. 🛸 Dispose unwanted electronics through an approved recycler. To find the nearest recycling location, go to our website: www.samsung.com/recyclingdirect or call, (877) 278-0799.

■ JACK PANEL DETAIL / REAR VIEW

Specification

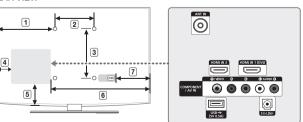

							(Unit: Inches)
Model name	1	2	3	4	5	6	7
UN55FH6003	16.7	15.7	15.7	6.1	7.5	36.4	12.6
UN60FH6003	19.1	15.7	15.7	8.6	9.2	38.8	14.9
UN65FH6001	21.3	15.7	15.7	10.7	9.5	41.0	17.2

NOTE: All drawings are not necessarily to scale. Some dimensions are subject to change without prior notice. Refer to the dimensions prior to performing installation of your TV. Not responsible for typographical or printed errors. © 2013 Samsung Electronics America, Inc