


Viewing the Connection Panel

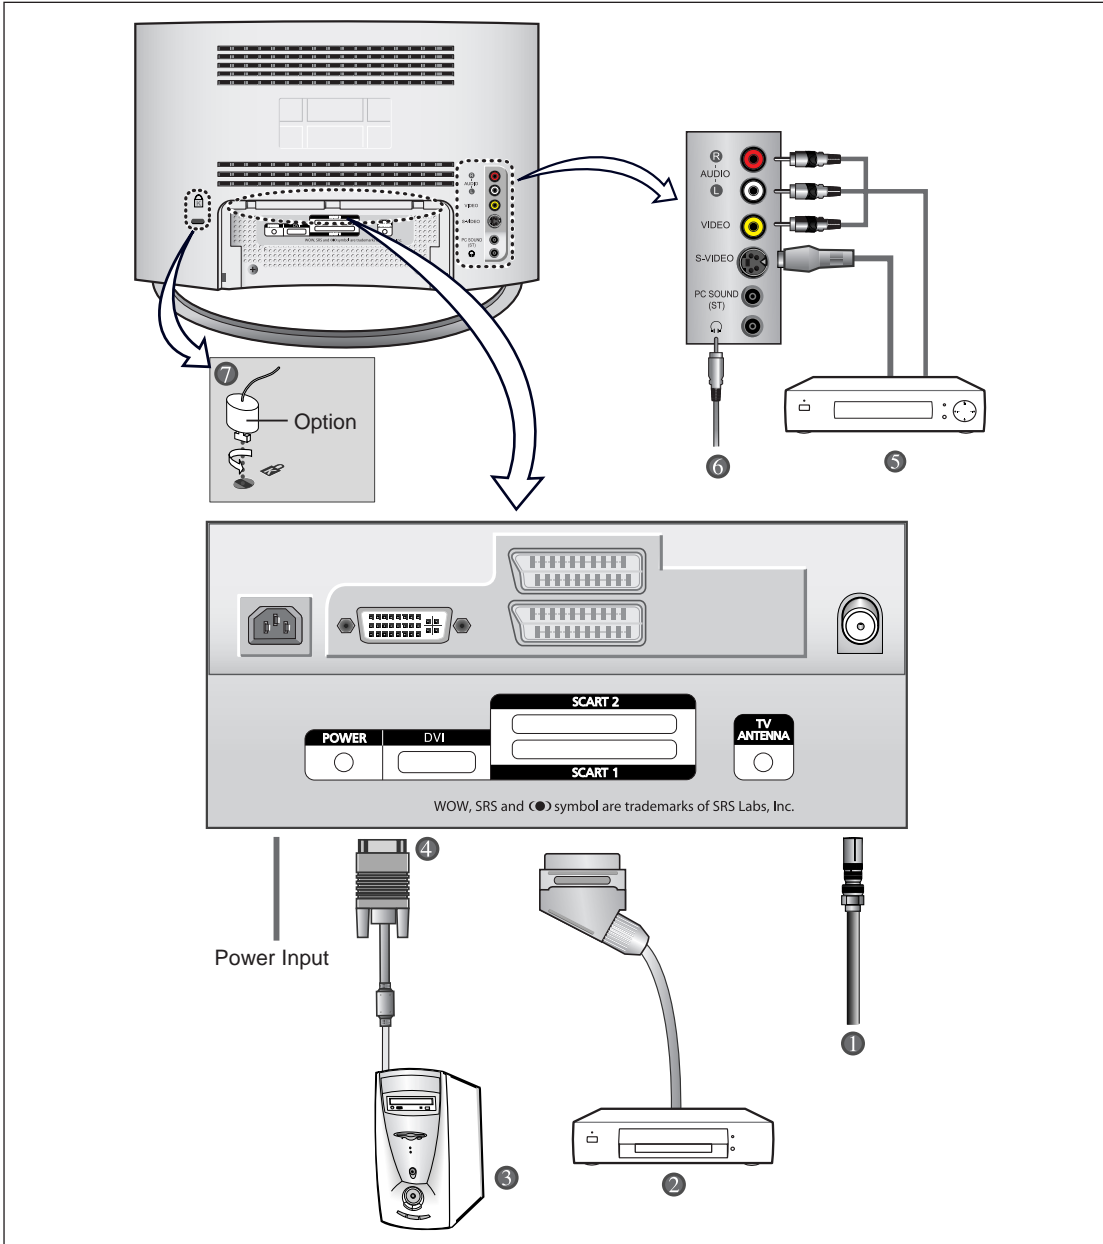

⚠ Whenever you connect an audio or video system to your set, ensure that all elements are switched off. Refer to the documentation supplied with your equipment for detailed connection instructions and associated safety precautions.

Viewing the Connection Panel

❶ **Connecting an Aerial or Cable Television Network (depending on the model)**

To view television channels correctly, a signal must be received by the set from one of the following sources:

- An outdoor aerial
- A cable television network
- A satellite network

 
❷ **Connecting a Set-Top Box, VCR, or DVD**

- Connect the VCR, or DVD SCART cable to the SCART connector of the VCR, or DVD.
- If you wish to connect both the Set-Top Box and VCR (or DVD), you should connect the Set-Top Box to the VCR (or DVD) and connect the VCR (or DVD) to your set.

❸ **Connecting a Computer**

- Connect the 24 Pin DVI connector to the PC video connector.
- Connect the stereo audio cable to the "Audio (ST)" jack on the rear of your set and the other end to the "Audio Out" jack of the sound card on your computer.

➤ 24 Pin DVI connector



Pin	Descrizione	Pin	Descrizione
1	Rx 2-	16	Output Signal Connection
2	Rx 2+	17	Rx 0-
3	Grounding	18	Rx 0+
4	No connection	19	Grounding
5	No connection	20	No connection
6	DDC Clock (SCL)	21	No connection
7	DDC Data (SDA)	22	Grounding
8	Analog Vertical Sync	23	Rx C-
9	Rx 1-	24	Rx C+
10	Rx 1+	25(C3)	Analog (Blue)
11	Grounding	26(C5)	Analog Grounding
12	No connection	27(C4)	Analog Horizontal sync.
13	No connection	28(C2)	Analog (Green)
14	DDC Input Power (+5V)	29(C5)	Analog Grounding
15	Self-Raster	30(C1)	Analog (Red)

Viewing the Connection Panel

4 Connecting a DVD Player or Set-Top Box to the TV with a DVI-D Cable

- Connect a DVI-D cable between the DVI-I INPUT connector on the TV and the DVI connector on the DVD player/Set-Top BOX.
- Connect a set of audio cables between the PC AUDIO INPUT jack on the TV and the AUDIO OUTPUT jacks on the DVD player/ Set-Top BOX.

➤ If you are using a DVI-D cable to connect

- ◆ Be sure to connect the audio cable (sold separately) as shown above to get normal TV sound.
- ◆ See Appendix "Display Modes" for supported resolutions.
- ◆ The screen may have shifted to the right or to the left after connecting the cable.
Don't adjust the screen position in a Digital Signal.
- ◆ Each external input Source device has a different back panel configuration.

5 Connecting External A/V Devices

- Connect RCA or S-VIDEO cables to an appropriate external A/V device such as a VCR, DVD, or Camcorder.
- Connect RCA audio cables to "AUDIO (L)" and "AUDIO (R)" on the rear of your set and the other ends to corresponding audio out connectors on the A/V device.
- Headphones may be connected to the headphone output (6) on the rear of your set.
While the headphones are connected, the sound from the built-in speakers will be disabled.

6 Connecting Headphones


- Plug a set of headphones into the 3.5mm mini-jack socket on the rear of the set.

7 Kensington Slot


- This television has been designed to apply a burglarproof lock.

➤ Retractable Stand


Tilt the screen until you feel comfortable.
The maximum tilt angle is 7 degrees in the backward direction.
Please do not tilt the television beyond the specified range.
Using excessive force to tilt the television beyond the specified range may cause permanent damage to the mechanical part of the stand.

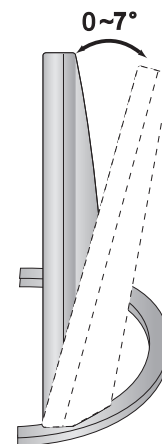


How to connect the cables and stand base

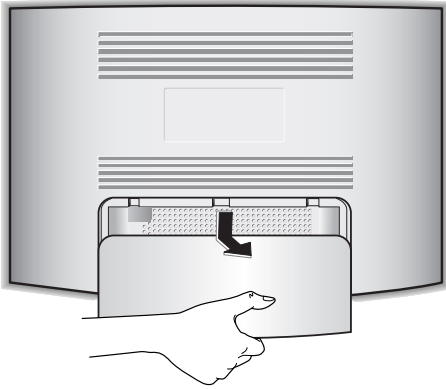


- 1** Remove the cover as shown in the picture.

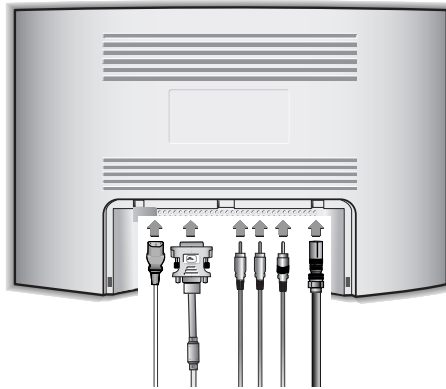

- 2** Connect the cables as shown in the picture.

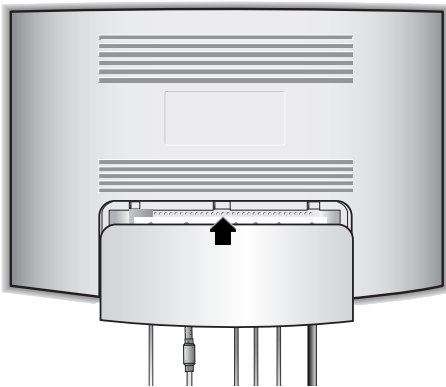


- 3** Replace the cover.

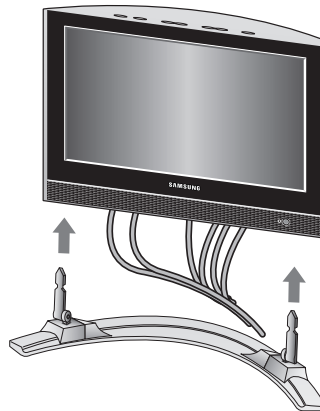

- 4** Attach the stand to the TV set as shown in the picture.

Note : The curved side of the stand base should be placed at the back of the TV set as shown in the above figure.

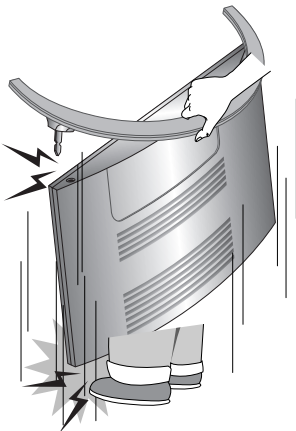

Do NOT lift the TV set by the stand.
The stand is not screwed to the TV set and lifting the set by the stand may cause injury.