



LN-R238W//LN-R268W//LN-R328W

Quick Setup Guide



 
List of Parts

Accessories

Please make sure the following items are included with your LCD TV.
If any items are missing, contact your dealer.




Remote Control
(BN59-00455A)
& Batteries (AAA x 2)




RF Cable
(AA39-00039A)



 
Power Cord
(3903-000085)




Anynet Cable
(BN39-00518B)

 


Cleaning Cloth

 

Owner's
Instructions

 

Anynet AV
Owner's
Instructions

 

Cover-Bottom
(BN68-01674A)



Stand
(23", 26" BN96-01727A)
(32" BN96-01733A)




M4 X L16
Stand Screw
(6002-001294) x 4

Installing the stand



- 1** Lower the TV set in the direction of the arrow and fix the stand.
- 2** Use the four screws to tightly fix the stand.

Connecting Antenna/Cable TV

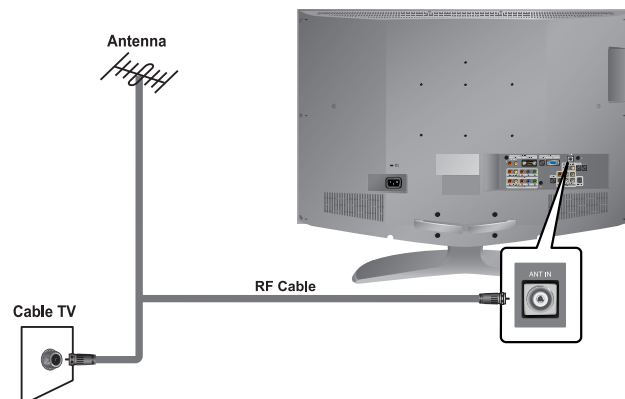


- 1** Plug the antenna/cable TV lead into the ANT IN terminal on the back of the TV.


! When connecting the RF cable to the antenna input terminal, keep the copper wire portion of the RF cable straight to avoid bending it.

✎ For more detailed antenna/cable TV connections, refer to the owner's Instructions.


Connecting a VCR

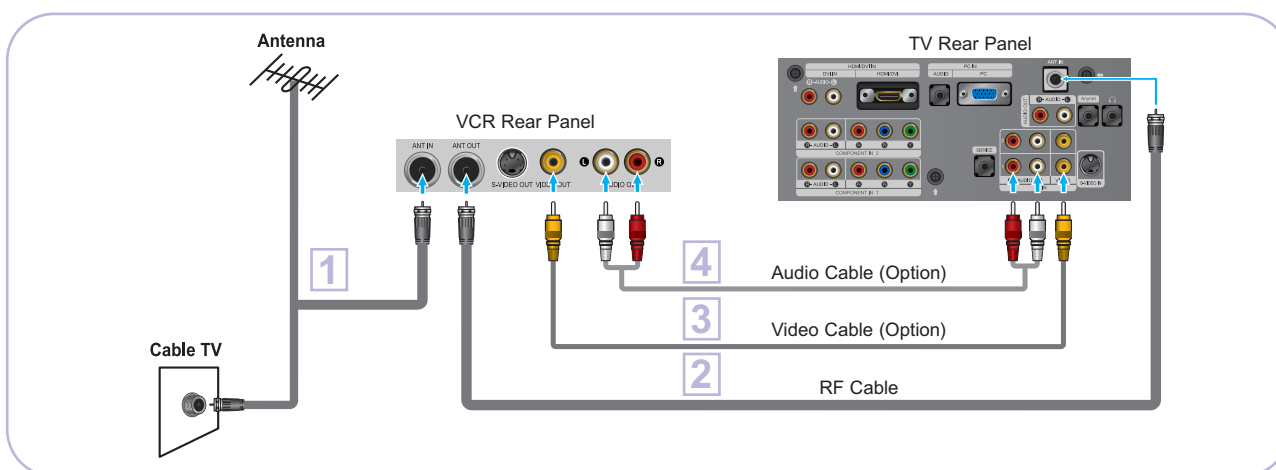


- 1** Connect the cable TV or antenna to the ANT IN terminal on the back of the VCR.
- 2** Connect an RF cable between the ANT OUT terminal on the VCR and the ANT IN terminal on the TV.
- 3** Connect a video cable between the VIDEO OUT jack on the VCR and the AV IN [VIDEO] jack on the TV.
- 4** Connect an audio cable between the AUDIO OUT jacks on the VCR and the AV IN [R-AUDIO-L] jacks on the TV.

 If you have a “mono” (non-stereo) VCR, use a Y-connector (not supplied) to hook up to the R-AUDIO-L jacks on the TV


Connecting an S-VHS VCR

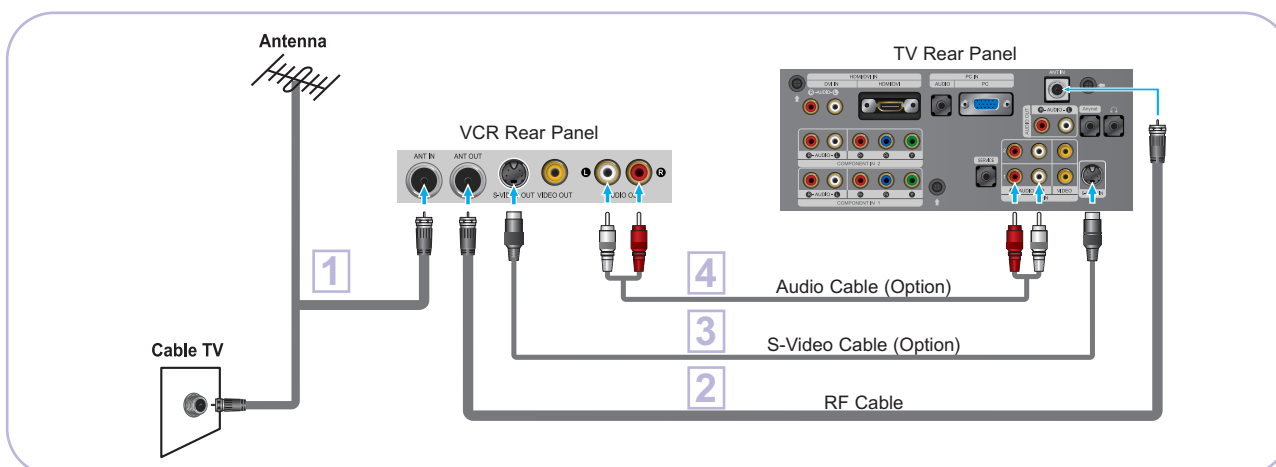

- 1** Connect the cable TV or antenna to the ANT IN terminal on the back of the VCR.
- 2** Connect an RF cable between the ANT OUT terminal on the VCR and the ANT IN terminal on the TV.
- 3** Connect an S-Video cable between the S-VIDEO OUT jack on the VCR and the S-VIDEO IN jack on the TV.
- 4** Connect an audio cable between the AUDIO OUT jacks on the VCR and the AV IN [R-AUDIO-L] jacks on the TV.

 An S-Video cable is usually included with an S-VHS VCR.


Connecting a DVD Player

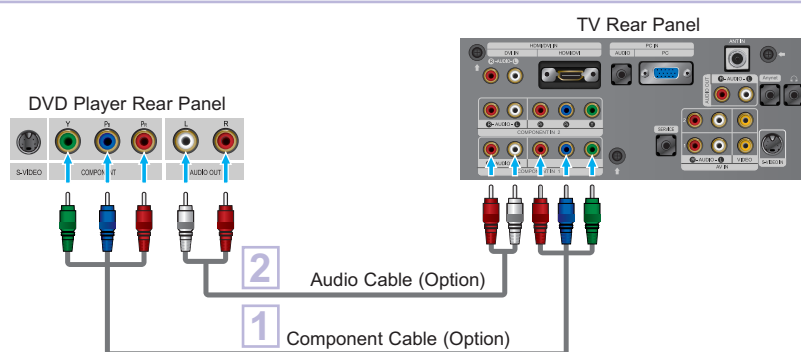

- 1 Connect a component cable between the COMPONENT IN 1 or COMPONENT IN 2 [Pr, Pb, Y] jacks on the TV and the COMPONENT [Y, Pb, Pr] jacks on the DVD player.
- 2 Connect an audio cable between the COMPONENT IN 1 or COMPONENT IN 2 [R-AUDIO-L] jacks on the TV and the AUDIO OUT jacks on the DVD player.


For an explanation of Component video, see your DVD player owner's manual.

Connecting a Digital TV Set-top box

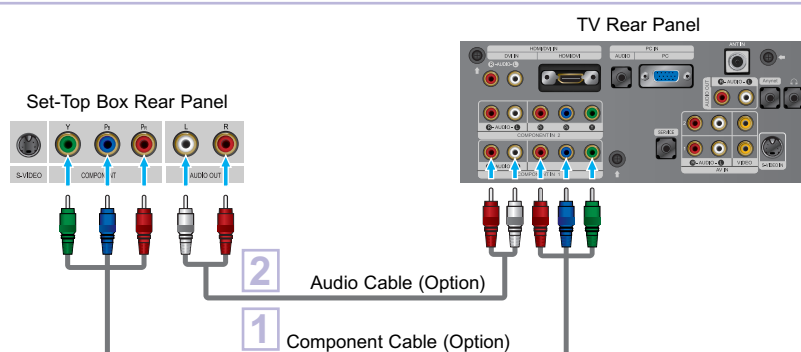


- 1 Connect a component cable between the COMPONENT IN 1 or COMPONENT IN 2 [Pr, Pb, Y] jacks on the TV and the COMPONENT [Y, Pb, Pr] jacks on the Set-top box.
- 2 Connect an audio cable between the COMPONENT IN 1 or COMPONENT IN 2 [R-AUDIO-L] jacks on the TV and the AUDIO OUT jacks on the Set-top box.

Connecting an Amplifier/DVD Home Theater

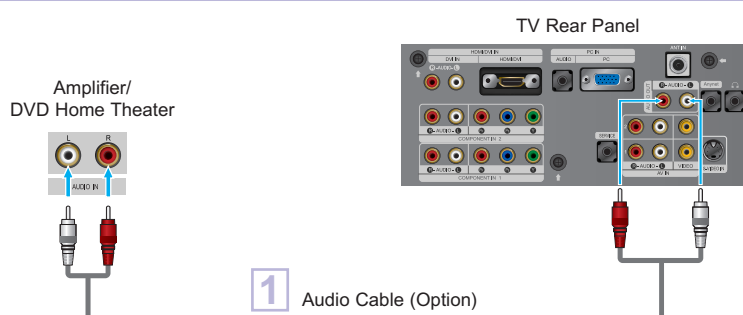


- 1 Connect an audio cable between the AUDIO OUT [R-AUDIO-L] jacks on the TV and the AUDIO IN jacks on the Amplifier/DVD Home Theater.

Connecting a DVD/Set-top box via DVI

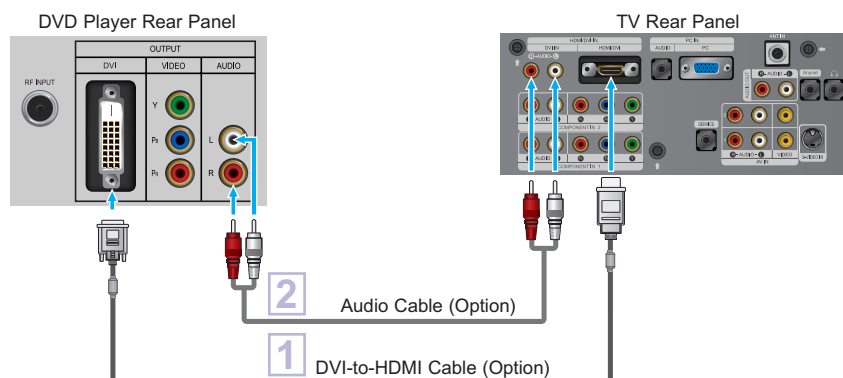


- 1 Connect a DVI-to-HDMI cable or DVI-HDMI Adapter between the HDMI/DVI connector on the TV and the DVI connector on the DVD player/Set-top box.
- 2 Connect an audio cable between the DVI IN [R-AUDIO-L] jacks on the TV and the AUDIO OUT jacks on the DVD player/Set-top box.

Connecting a DVD/Set-top box via HDMI

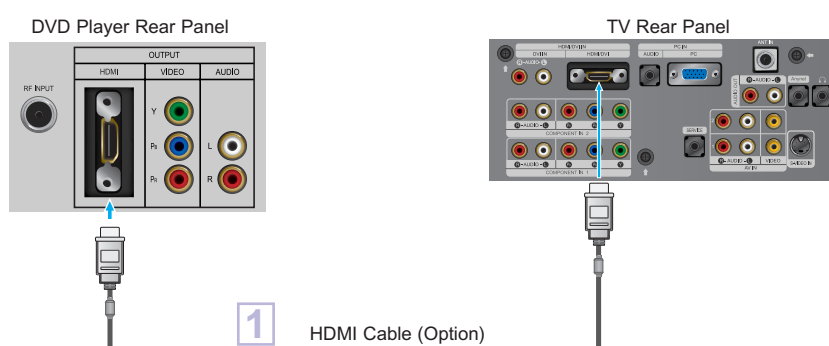

- 1 Connect an HDMI cable between the HDMI/DVI connector on the TV and the HDMI connector on the DVD player/Set-top box.


Connecting a PC

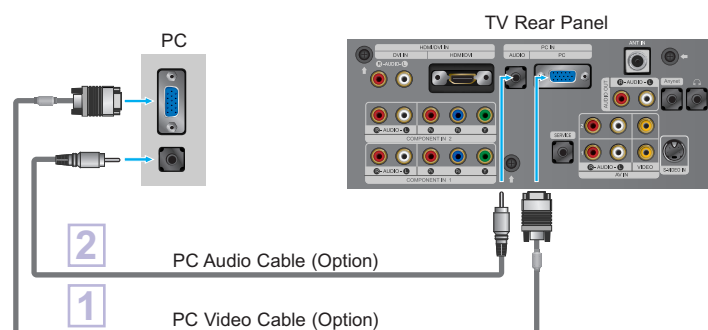

- 1 Connect a PC video cable (D-Sub) between PC IN [PC] connector on the TV and the PC output connector on your computer.
- 2 Connect a PC audio cable between PC IN [AUDIO] on the TV and the Audio Out of the sound card on your computer.

Plug & Play

When the TV is initially powered on, several basic customer settings proceed automatically and subsequently.

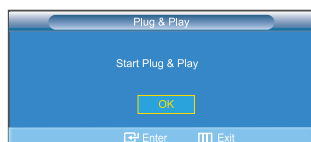

- 1** Press the **POWER** button on the remote control. The message "Start Plug & Play" is displayed with "OK" selected.




- 2** Select the appropriate language by pressing the **UP/DOWN** buttons. Press the **ENTER** button to confirm your choice.





- 3** The message "Check Antenna Input" is displayed with "OK" selected. Press the **ENTER** button.




- 4** Press the **UP/DOWN** buttons to select "Air", "STD", "HRC", or "IRC", then press the **ENTER** button.

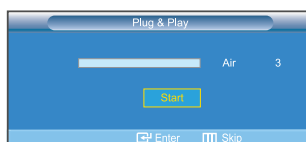

- 5** Press the **ENTER** button to select "Start". The TV will begin memorizing all of the available channels.


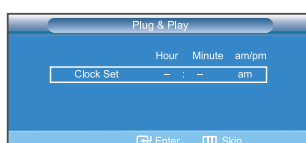
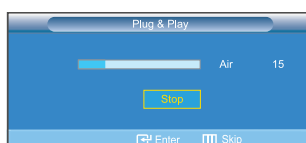


- 6** Press the **ENTER** button. Press the **LEFT/RIGHT** buttons to move to the "Hour", "Minute" or "am/pm". Set the "Hour", "Minute" or "am/pm" by pressing the **UP/DOWN** buttons. Press the **ENTER** button.

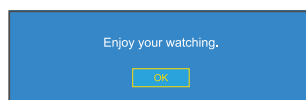

- 7** The message "Enjoy your watching." is displayed.

To Select the Source

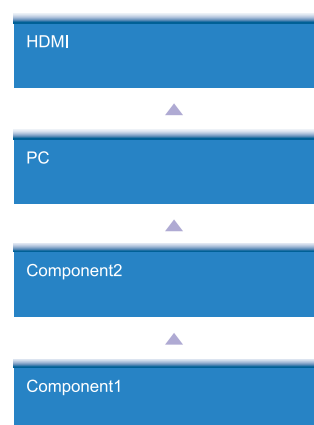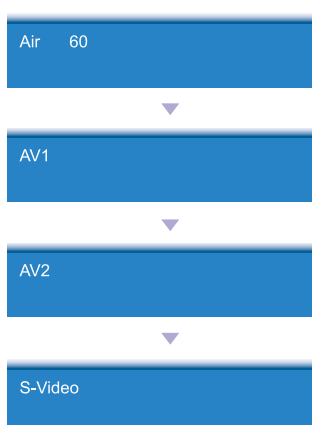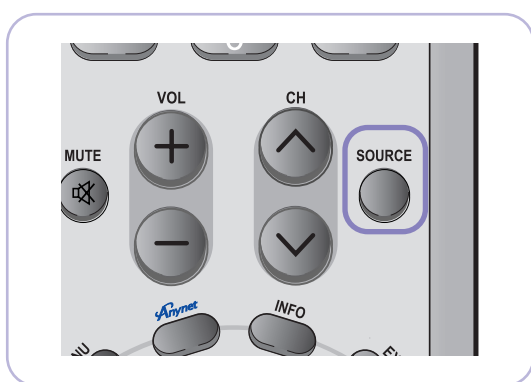


Press the **SOURCE** button on the remote control


You can select the TV mode or an input source connected to the TV set. Use this button to choose an input source that you would like to watch.



You can only select a source if it is connected to your TV.

Remote control Functions Chart

- 1 POWER** 
Turns the TV on and off.
- 2 STILL**
Press to stop the action during a particular scene. Press again to resume normal video.
- 3 NUMBER BUTTONS**
Press to change the channel.
- 4 +100**
Press to select channels over 100. For example, to select channel 121, press "+100", then press "2" and "1".
- 5 MUTE**
Press to temporarily cut off the sound.
- 6 Anynet**
Press the Anynet button to bring up the Anynet menu. (Refer to "Anynet AV Owner's Instructions".)
- 7 MENU**
Displays the main on-screen menu.
- 8 S.MODE**
Adjusts the TV sound by selecting one of the preset factory settings (or selects your personal, customized sound settings).
- 9 MTS (Multi channel Television Stereo)**
Press to choose stereo, mono or Separate Audio Program (SAP broadcast).
- 10 AUTO PROG.**
Press to automatically store selected TV/Cable channels.
ADD/DEL
Use to store and delete channels to/from memory.
- 11 DNle**
DNle Demo On/Off.
Off : DNle Demo mode is deactivated.
On : The right-hand side of the screen shows the improved DNle image. The left-hand side of the screen shows the original image.
- 12 VCR/DVD Functions (Only Anynet mode)**
 - Rewind
 - Stop
 - Play/Pause
 - Fast Forward
- 13 CAPTION**
Controls the caption decoder.

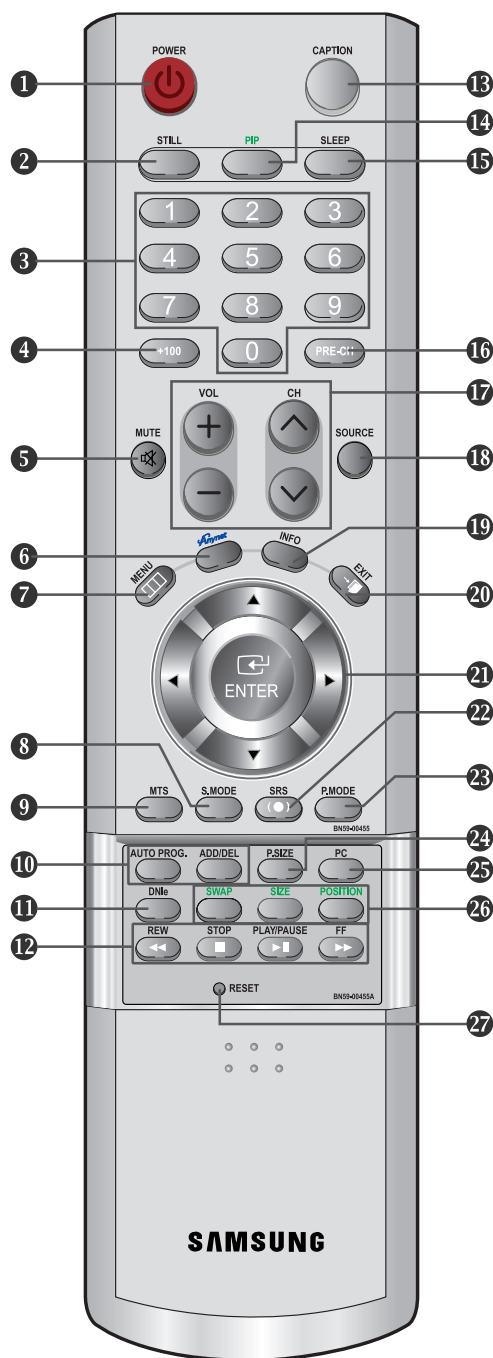

- 14 PIP**
Picture-in-Picture ON/OFF.
- 15 SLEEP**
Press to select a time for the TV to turn off automatically.
- 16 PRE-CH**
Tunes to the previous channel.
- 17 CH ^ and CH v (Channel UP/Down)**
Press CH ^ or CH v to change channels.
VOL + and VOL -
Press to increase or decrease the volume.
- 18 SOURCE**
Press to display all of the available video sources.
- 19 INFO**
Use to see information on the current broadcast.
- 20 EXIT**
Press to exit the menu.
- 21 UP / DOWN / LEFT / RIGHT / ENTER**
Use to select on-screen menu items and change menu values.
- 22 SRS**
Selects TruSurround XT mode.
- 23 P.MODE**
Adjusts the TV picture by selecting one of the preset factory settings.
- 24 P.SIZE**
Press to change the screen size.
- 25 PC**
Press to switch to the PC mode.
- 26 SWAP**
Press to interchange the main picture and the sub (PIP) picture.
SIZE
Press to make the PIP window small, double1, double2.
POSITION
Press to select the position of sub (PIP) picture.
- 27 RESET**
When your remote does not work, change the batteries and press the RESET button for 2-3 seconds before use.

FAQ


Note

Check the following items before calling a Samsung authorized service center.



If a still image is displayed for an extended period of time, residual images or blurring may appear.

When you need to leave the TV unused for an extended period of time, adjust the settings so that the TV automatically goes into energy saving mode or activates the screen saver to display moving images.

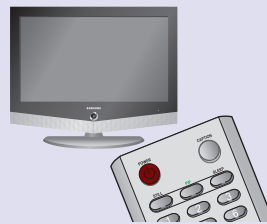

Remote control malfunctions

Replace the remote control batteries. Clean the upper edge of the remote control (transmission window). Check the battery terminals.



Image is not centered on the screen.

Adjust the horizontal and vertical position. The screen position must be adjusted on the output source (i.e. STB) with a digital signal.



No picture or sound.

Try another channel. Press the SOURCE button. Make sure the TV is plugged in. Check the antenna connections.



No sound or sound is too low at maximum volume.

First, check the volume of units connected to your TV (digital broadcasting receiver, DTV, DVD, cable broadcasting receiver, VCR, etc.). Then, adjust the TV volume accordingly.



Poor picture

Try another channel. Adjust the antenna. Check all wire connections.



"Not Supported Mode" message.

Check the maximum resolution and the frequency of the Video Adapter. Compare these values with the data in the Display Modes.



Image is not stable and may appear to vibrate.

If the setting is not correct, use your computer utility program to change the display settings.