



Instrucciones PDF

Usted puede leer las recomendaciones de la guía del usuario, la guía técnica o la guía de instalación para SAMSUNG LN40C530. Encontrarás las respuestas a todas sus preguntas sobre la SAMSUNG LN40C530 en el manual del usuario (información, especificaciones, consejos de seguridad, tamaño, accesorios, etc). Las instrucciones detalladas para la utilización aparecen en la Guía del usuario.

Manual de instrucciones SAMSUNG LN40C530
Instrucciones de uso SAMSUNG LN40C530
Manual de usuario SAMSUNG LN40C530
Guía del usuario SAMSUNG LN40C530
Modo de empleo SAMSUNG LN40C530



Contact **SAMSUNG WORLDWIDE**
If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Contacte con **SAMSUNG WORLDWIDE**
Si tiene alguna pregunta o comentario referente a nuestros productos, por favor contacte con nuestro Servicio de Atención al Cliente.

Country	Customer Care Center ☎	Web Site
ARGENTINE	0800-333-3733	www.samsung.com/ar
BRAZIL	0800-124-421 4004-0000	www.samsung.com
CHILE	800-SAMSUNG(726-7864)	www.samsung.com/cl
COLOMBIA	01-8000112112	www.samsung.com.co
COSTA RICA	0-800-507-7267	www.samsung.com/latin
ECUADOR	1-800-10-7267	www.samsung.com/latin
EL SALVADOR	800-6225	www.samsung.com/latin
GUATEMALA	1-800-299-0013	www.samsung.com/latin
HONDURAS	800-7919267	-
JAMAICA	1-800-234-7267	www.samsung.com/latin
PANAMA	800-7267	www.samsung.com/latin
PUERTO RICO	1-800-682-3180	www.samsung.com/latin
REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
NICARAGUA	00-1800-5077267	-
MEXICO	01-800-SAMSUNG(726-7864)	www.samsung.com
TRINIDAD & TOBAGO	1-800-SAMSUNG(726-7864)	www.samsung.com/latin
VENEZUELA	0-800-100-5303	www.samsung.com/latin

IMPORTADO POR:
AV. PRESIDENTE MASARIK #111 INT701
COL. CHAPULTEPEC MORALES C.P.11570
DELEGACION MIGUEL HIDALGO MEXICO. DISTRITO FEDERAL
Tel: 01-55-5747-5100 / 01-800-726-7864



BN68-61392C-00



[Tus instrucciones](#)
[SAMSUNG LN40C530](#)

Manual de resumen:

Use the HDMI IN 2 jack for DVI connection to an external device. Use a DVI to HDMI cable or DVI-HDMI adapter ! KEnSInGton loCK(depending on the model) (DVI to HDMI) for video connection and the The Kensington lock (optional) is a device used to DVI IN (HDMI2) [R-AUDIO-L] jacks for audio. physically fix the system when used in a public place. If you - When using an HDMI/DVI cable connection, you must use want to use a locking device, contact the dealer where you the HDMI IN 2 jack. purchased the TV. 4 ant In Connects to an antenna or cable TV system. 5 SErVICE - Connector for SERVICE only. - Connect this to the jack on the optional wall mount bracket. This will allow you to adjust the TV viewing angle using your remote control. The location of the kensington lock may be different depending on its model.

English - Remote Control You can use the remote control up to a distance of about 23 feet from the TV. 1POWER Turns the TV on and off. 2TV Selects the TV mode directly. 3NUMERIC BUTTONS Press to change the channel. 4 Use to select a channel over 100.

For example, for channel 122, press " ", then "2", then "2". 5 (MUTE) Press to temporarily cut off the sound. 6VOL / VOL Press to increase or decrease the volume. 7CH LIST Used to display Channel Lists on the screen. 8 TOOLS Use to quickly select frequently used functions.

9 INFO Press to display information on the TV screen. 0COLOR BUTTONS Use these buttons in the Channel list and WISELINK, etc. !CC Controls the caption decoder. @E.MODE Press to select the optional display and sound modes for sports, cinema and games. # se these buttons in the U WISELINK and Anynet+ modes. : This remote can be used (to control recording on Samsung recorders with the Anynet+ feature) \$SOURCE Press to display and select the available video sources. %PRE-CH Tunes to the previous channel. ^ CH / CH Press to change channels. & MENU Displays the main on-screen menu.

*W.LINK This function enables you to view and play photo and music files from an external device. (Refer to pages 46 (Photo) and 49 (Music)) (RETURN Returns to the previous menu.) UP / DOWN / LEFT / RIGHT / ENTER Use to select on-screen menu items and change menu values. a EXIT Press to exit the menu. b P.MODE Picture effect selection. c MTS Press to choose stereo, mono or Separate Audio Program (SAP broadcast). dFAV.CH Not available. e P.SIZE Picture size selection. The performance of the remote control may be affected by bright light. English - Installing batteries in the remote Control 1. Lift the cover at the back of the remote control upward as shown in the figure.

2. Install two AAA size batteries. Make sure to match the "+" and "" ends of the batteries with the diagram inside the compartment. 3. Replace the cover. Remove the batteries and store them in a cool, dry place if you won't be using the remote control for a long time. If the remote control doesn't work, check the following: 1. Is the TV power on? 2. Are the plus and minus ends of the batteries reversed? 3. Are the batteries drained? 4. Is there a power outage or is the power cord unplugged? 5. Is there a special fluorescent light or neon sign nearby? Connections Connecting Vhf and uhf antennas If your antenna has a set of leads that look like the diagram to the right, see "Antennas with 300 Flat Twin Leads" below. If your antenna has one lead that looks like the diagram to the right, see "Antennas with 75 Round Leads". If you have two antennas, see "Separate VHF and UHF Antennas". Antennas with 300 Flat Twin Leads If you are using an off-air antenna (such as a roof antenna or "rabbit ears") that has 300 twin flat leads, follow the directions below.

1. Place the wires from the twin leads under the screws on a 300-75 adapter (not supplied). Use a screwdriver to tighten the screws. 2. Plug the adaptor into the ANT IN terminal on the back of the TV. ANT IN Antennas with 75 Round Leads 1. Plug the antenna lead into the ANT IN terminal on the back of the TV. ANT IN Separate Vhf and uhf antennas If you have two separate antennas for your TV (one VHF and one UHF), you must combine the two antenna signals before connecting the antennas to the TV. This procedure requires an optional combiner-adaptor (available at most electronics shops). 1. Connect both antenna leads to the combiner. uhf Vhf 2. Plug the combiner into the ANT IN terminal on the bottom of the rear panel..



[Tus instrucciones](#)
[SAMSUNG LN40C530](#)