

Easy-Bake

REALMEALTM OVEN

Blender

For maximum enjoyment of this product, be sure to follow all instructions carefully.

Requires 2 x 1.5V "C" batteries (not included). Alkaline batteries recommended. Phillips screwdriver required (not included) for battery installation.

Parents Please Note:

Wash all parts by hand thoroughly before use.
Do not wash in dishwasher.



AGES 8+

30082

Visit www.easybake.com
to learn about upcoming
EASY-BAKE
contests!


© 2004 Hasbro. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.
P/N 6385630200

EASYBAKE.COM 
FOR NEW PRODUCTS AND OFFERS

Questions? Call: 1-800-327-8264

To Install Batteries

Use a Phillips screwdriver to loosen screw in battery compartment door (screws remain attached to door). Remove door. Insert 2 x 1.5V “C” batteries as indicated. Alkaline batteries recommended. Replace door and tighten screw.

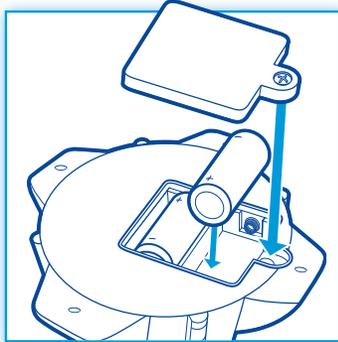


CAUTION: TO AVOID BATTERY LEAKAGE

1. **Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;**
2. **Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;**
3. **Always remove weak or dead batteries from the product.**

To Assemble

1. Insert posts on paddle into 2 holes in impeller.
2. Fit pitcher into base.

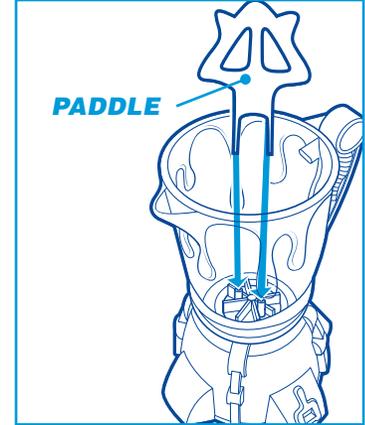

Recipe

1. Pour 1 cup of milk into pitcher.
2. Add flavored syrup of your choice (vanilla, chocolate, strawberry, etc.).
3. Fit cover onto pitcher. Press button for about 10 seconds to blend mixture.

Enjoy your delicious milkshake!